



13.3.4.8 Roof Lining (Headlining), Description

The roof lining is a one piece construction of 6mm thick polyurethane foam, covered with brush finish, suede effect, knitted polyester.

13.3.4.9 Roof Lining, Renew

SRO 76.64.15

- Position front seats fully rearwards and recline the passenger seat squab.
- Disconnect vehicle battery ground lead.
- Remove:
 - Sliding roof flange (where fitted).
 - Front passenger door.
 - Rear console (where fitted).
 - Center console.
 - Sunblind and bezel.
 - Combined grab handle and coat hook.
 - Rear quarter upper trim pad LH & RH.
 - Cantrail crash roll.
 - Illuminated sun visor.
 - Roof console.
- Release multi-plug connectors from clips at roof console aperture.
- Remove roof console retaining clip from headlining.
- Remove security sensors (where fitted) and disconnect multi-plugs.
- Release roof lining to body tags and lower roof lining.
- Remove the roof lining:
 - Position the roof lining with the rear corner through the passenger side rear door and the opposite corner through the driver side rear door.
 - Position the roof lining across the car with the roof console cut-out straddling 'B'-'C' post.
 - Tip the roof lining forward against bottom of fascia with rear edge of roof lining diagonally across door aperture.
 - Carefully feed the roof lining out of the passenger side front door, easing the edge cut-outs over the door aperture and any other obstruction.

Refit in the reverse order of the removal procedure.

