JAGUAR

Parts Catalogue
JAGUAR XJ6 SALOON

Up to (V) 667828

www.JagDocs.com

Whilst every effort is made to ensure the accuracy of the particulars contained in this Manual the Manufacturing Companies will not, in any circumstances, be held liable for any inaccuracies or the consequences thereof.

© Jaguar Cars Ltd 1992

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, whether by electronic, mechanical, photocopying, recording or other means without the permission of Jaguar Cars Limited.

Replacement parts that are not of genuine Jaguar supply cannot be relied upon to be of correct specification, material, and workmanship and therefore Jaguar cannot be expected to extend warranty to vehicles which have been fitted with parts not supplied by them.

Jaguar reserves the right to make changes or improvements in the construction or specification of their products at any time.

IN ORDER TO ENSURE PROMPT AND CORRECT EXECUTION OF YOUR ORDERS,IT IS ESSENTIAL TO QUOTE:

1. The relative Unit Number, together with prefixes, suffixes and specification references where applicable.
   e.g. Axle, Body, Vehicle Identification, Engine, Gearbox Numbers etc.
2. The Part Number and description (prefix and suffix letters to Part Numbers must always be quoted).
3. Always state the colour of carpets, painted items, trim items etc., using the colour code from the Vehicle Identification Number (VIN) plate and the colour combination key to identify the colour name.
4. The quantity required bearing in mind that the quantities shown are those used in the application actually illustrated. Sometimes only minimum package quantities are available. These packs may well contain more parts than are required for a single job; for details of packaged quantities, see the Service Parts List.

THE LISTING OR ILLUSTRATING OF AN ITEM DOES NOT GUARANTEE ITS AVAILABILITY.

INDEX TO INTRODUCTION SECTION

MICROFICHE PAGE REFERENCE	PAGE TITLE	REMARKS
B03	GEOGRAPHICAL GROUPINGS	Country groupings used in the parts list are referenced on this page.
B04	STANDARD ABBREVIATIONS	Standard abbreviations used in the microfiche text are referenced on this page.
B05	VEHICLE IDENTIFICATION NUMBERING SYSTEM (UP TO 2000 MODEL YEAR)	VIN Serial letters and numbers explained. VIN plate location.
B06	VEHICLE IDENTIFICATION NUMBERING SYSTEM (GLOBAL) FROM 2000 MODEL YEAR	VIN Serial letters and numbers explained. VIN plate location.
B07	Model Year VIN NUMBERS	Details of Model Year Commencing VIN Numbers
B08	MAJOR UNIT IDENTIFICATION NUMBERING SYSTEM	Location of Engine & Gearbox Serial Numbers.
B09	CONTROL MODULE LOCATIONS	Location of Control Modules.
B10	COLOUR CROSS REFERENCE	Body colour/coachline
B11	TRIM COLOUR COMBINATION CHART	Denotes trim colour ranges applicable to specific areas of the vehicle interior.
B12	TRIM COLOUR COMBINATION CHART	Denotes trim colour ranges applicable to specific areas of the vehicle interior.
B13	TRIM COLOUR COMBINATION CODES	Denotes trim colour code
B14-18	HOW TO USE THE PARTS MICROFICHE	Details of microfiche layout and content. Methods of use explained

STANDARD ABBREVIATIONS

ABBREVIATIONS: Standard abbreviations are used in this parts list, as shown below:

AR	As required
cm	Centimetre
dia	Diameter
(G)	Gearbox number
i/d	Inside diameter
LC	Low compression
LHD	Left-hand drive
LWB	Long wheel base (Majestic)
mm	millimetres
NLA	No longer available from Jaguar Cars Limited
NSS	Not supplied separately
o/d	Outside diameter
pr	Pair
RH	Right-hand
ST	Self tapping
STD	Standard
U/S	Undersize
(V)	Vehicles Identification number (VIN)
(B)	Body number
COB	Clear over base paint technology
(E)	Engine number
HC	High compression
kph	Kilometres per hour
LH	Left-hand
LP	Low pressure
m	metres
mph	Miles per hour
No.	Number
NSP	Non-serviceable part
O/S	Oversize
psi	Pounds square/inch
RHD	Right-hand drive

PART NUMBER SUFFIX LETTERS

E	Exchange scheme/remanufactured units
N	New condition (i.e. not exchange)
R	Remanufactured unit

GEOGRAPHICAL GROUPINGS

Where appropriate, applications for individual Markets are detailed as "Remarks" adjacent to specific Part Numbers. For convenience, Markets are sometimes categorised into geographical groups. "Exceptions/exclusions" from these geographical groups are detailed as footnotes on the appropriate page. Where the vehicle specification clearly excludes a feature from application to your market, the exclusion note may be omitted.

Definitions of the geographical groups used in this catalogue are as follows:

AUSTRALASIA:	Australia, New Zealand.
CARIBBEAN:	Bahamas, Panama.
EASTERN EUROPE:	Bulgaria, Czechoslovakia, Hungary, Poland, Russia.
EEC:	Austria, Belgium, Denmark, Eire, Finland, France, Germany, Greece, Italy, Luxembourg, Netherlands, Portugal, Spain, Sweden.
EUROPE:	Austria, Belgium, Canary Islands, Denmark, Eire, Finland, France, Germany, Gibraltar, Greece, Italy, Luxembourg, Malta, Netherlands, Norway, Portugal, Slovenia, Spain, Sweden, Switzerland, UK.
FAR EAST:	China, Hong Kong, Indonesia, Korea, Malaysia, Philippines, Singapore, Sri Lanka, Thailand, Vietnam.
MEDITERRANEAN:	Cyprus, Egypt, Israel, Jordan, Lebanon, Morocco, Syria, Turkey.
MIDDLE EAST:	Abu Dhabi, Bahrain, Dubai, Kuwait, Oman, Qatar, Saudi Arabia.
RUSSIA:	Belarus, Estonia, Kazakhstan, Latvia, Lithuania, Moscow, Ukraine, Uzbekistan.
SOUTH AMERICA:	Argentina, Chile, Paraguay.

VEHICLE IDENTIFICATION NUMBERING SYSTEM

The Vehicle Identification Number comprises of a series of letters and numbers representing, in code such information as Marque, Model Range, Class, Engine type etc. The code for the Jaguar 2.9, 3.2, 3.6 and 4.0 litre range is as follows.

Prefix 1 to 4
World Manufacturing Identifier
SAJJ = Jaguar
SAJD = Daimler

Prefix 5
Model Range Trim
F = XJ6
H = Sovereign
K = VDP
M = Special Edition

Prefix 6
Class
A = Base Line
C = Sovereign
F = Japanese Sovereign
G = Japanese VDP
J = Japanese Spec.
L = Canadian Spec.
N = Canadian VDP
R = VDP/Daimler
V = USA Spec.
Y = USA VDP


Prefix 7
Body Type
L = 4 Door Saloon

A/B2 = Full drivers passenger and side airbags

Prefix 8
Engine Variant
D = 4.0 Litre
G = 3.2 Litre
H = 3.6 Litre
J = 2.9 Litre

Prefix 9
Transmission Steering
3 = Auto RHS
4 = Auto LHS
7 = Manual RHS
8 = Manual LHS

Prefix 10
Model or Year Change
A = Series 1

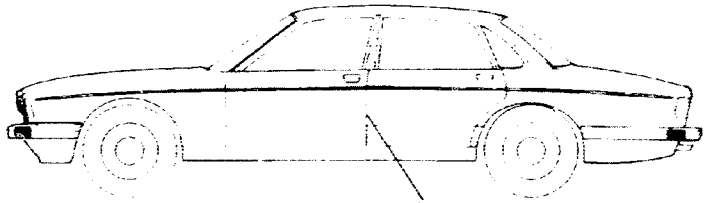

Prefix 11
Emission Control System
A = UK, Europe, ROW High CR Non Catalyst - 2.9/3.6/4.0
B = UK, ROW, Std. CR - 2.9/3.6
C = Middle East - 2.9/3.6/4.0, Taiwan - 4.0
D = UK, Europe - Catalyst without Evap. Loss - 2.9
E = Canada - 3.6 - Up to 1988
F = Australia - 3.6
G = Australia, Germany, Switzerland - 3.6 - Up to 1988
H = Canada, Japan, Sweden, USA - 3.6 - Up to 1988
J = Europe, ROW - Catalyst with Evap. Loss - 4.0
Korea - Catalyst with Evap. Loss - 4.0
Japan - 3.2/3.6/4.0
Canada - 3.6/4.0
Australia - 3.2
USA - 3.6 - 1989
K = UK, Europe, ROW - Non Evap. Loss - 3.2
UK, Europe - Catalyst without Evap. Loss - 3.6/4.0
Japan, Sweden - 2.9
S = USA - Passive Belts - 4.0
T = Australia - 4.0

Prefix 12 to 17
Serial Number
500001 on


IP1637

Model Year VIN Numbers

1987 MY	From (V) 500515 to 524374
1988 MY	From (V) 524375 to 556850
1989 MY	From (V) 556851 to 594575
1990 MY	From (V) 594576 to 629285
1991 MY	From (V) 629286 to 649174
1992 MY	From (V) 649175 to 667828

ENGINE IDENTIFICATION

An engine numbering system comprising 12 characters will be applied to the XJ6 variants. Detailed below is a sample number with all the applicable codes that are to be used.

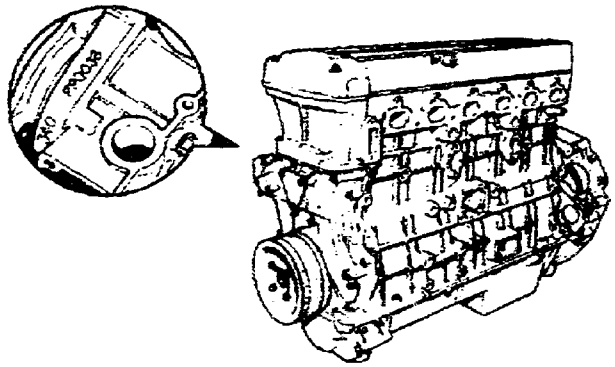

9	D	P	A	M	A	1	0	0	0	0	1

SERIAL NUMBER

Marque
9=Jaguar

ENGINE TYPE
A=2.9L 2v
D=3.6L 4v
E=4.0L 4v
B=3.2L 4v


FUEL
P=Petrol

COMPRESSION RATIO
A=3.6L 4v HC
B=3.6L 4v SC
C=4.0L
T=2.9L 2v HC
V=2.9L 2v SC
M=3.2L

SPEC RANGE
E=1987 MY


EMISSION SPEC
L=USA/Japan/Sweden/Austria/Germany/ Switzerland
M=European
N=
P=Australia/Middle East
R=Canadian
S=ROW

GEARBOX SERIAL No. LOCATIONS

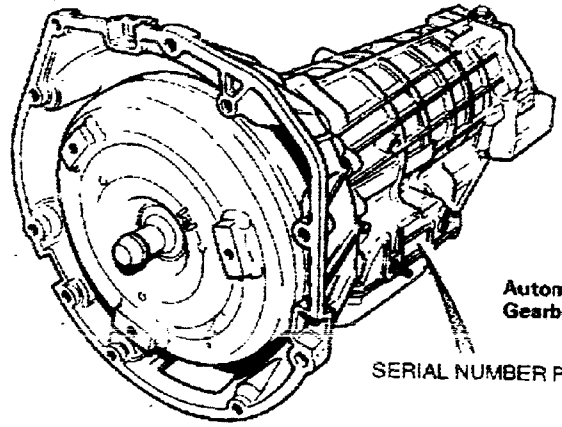

Automatic Gearbox

SERIAL NUMBER PLATE

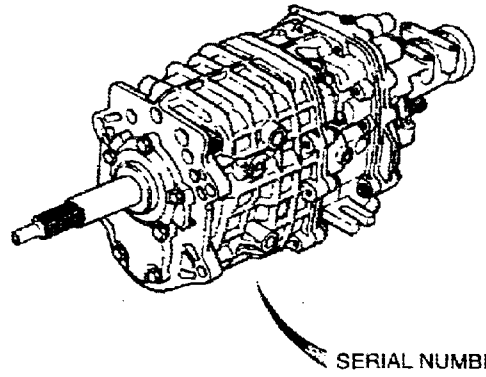

Manual Gearbox

SERIAL NUMBER STAMPING

IP1639

COLOUR CROSS REFERENCE - BODY / TRIM / COACHLINE
UP TO (V) 594575

PAINT COLOUR CODE	TRIM COLOUR / BODY COLOUR	BARLEY	BUCKSKIN	CHEVIOT TWEED	CHILTERN TWEED	COTSWOLD TWEED	DOESKIN	ISIS BLUE	MAGNOLIA	MULBERRY	PENNINE TWEED	SAVILE GREY	WARM CHARCOAL
HES	ALPINE GREEN (M)	OYSTER	OYSTER	GUNMETAL	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	----------	GUNMETAL	GUNMETAL	GUNMETAL
JFE	ARTIC BLUE (M)	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	DARK RED	OYSTER	OYSTER	OYSTER
CEK	BORDEAUX RED (M)	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	OYSTER	OYSTER	----------	GUNMETAL	GUNMETAL	GUNMETAL
CEV	CRIMSON (M)	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	OYSTER	OYSTER	----------	GUNMETAL	GUNMETAL	GUNMETAL
LDP	DORCHESTER GREY (M)	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	DARK RED	GUNMETAL	GUNMETAL	GUNMETAL
NDK	GLACIER WHITE	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	DARK RED	GUNMETAL	GUNMETAL	GUNMETAL
CEH	GRENADIER RED	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	----------	GUNMETAL	GUNMETAL	GUNMETAL
HEN	JAGUAR RACING GREEN	GOLDLEAF	OYSTER	OYSTER	GUNMETAL	GOLDLEAF	OYSTER	OYSTER	OYSTER	----------	GUNMETAL	GUNMETAL	GUNMETAL
PDH	JET BLACK	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	DARK RED	GUNMETAL	GUNMETAL	GUNMETAL
HET	MOORLAND GREEN (M)	OYSTER	OYSTER	GUNMETAL	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	----------	GUNMETAL	GUNMETAL	OYSTER
AFV	SATIN BEIGE (M)	GOLDLEAF	GOLDLEAF	----------	GOLDLEAF	GOLDLEAF	GOLDLEAF	GOLDLEAF	GOLDLEAF	DARK RED	OYSTER	----------	OYSTER
MDJ	SILVER BIRCH (M)	GOLDLEAF	GOLDLEAF	----------	GOLDLEAF	GOLDLEAF	GOLDLEAF	GOLDLEAF	GOLDLEAF	DARK RED	GUNMETAL	----------	GUNMETAL
JFJ	SOLENT BLUE (M)	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	DARK RED	GUNMETAL	GUNMETAL	GUNMETAL
MDF	TALISMAN SILVER (M)	GUNMETAL	GUNMETAL	GUNMETAL	GUNMETAL	GUNMETAL	GUNMETAL	GUNMETAL	GUNMETAL	DARK RED	GUNMETAL	GUNMETAL	GUNMETAL
JEX	TUNGSTEN (M)	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	OYSTER	DARK RED	OYSTER	OYSTER	OYSTER
JFG	WESTMINSTER BLUE (M)	GOLDLEAF	OYSTER	OYSTER	OYSTER	GOLDLEAF	OYSTER	GUNMETAL	OYSTER	DARK RED	GUNMETAL	GUNMETAL	GUNMETAL

BODY COLOUR AND COACHLINE RANGE
FROM (V) 594576

BODY COLOUR	PAINT CODE	JBC	VIN NUMBER	COACHLINE COLOUR
ARTIC BLUE (M)	JFE	337	UP TO (V) 649174	GUNMETAL
BLACK	PDH	333		GOLDLEAF
BLACK CHERRY	PDP	737	FROM (V) 629286	GOLD
BORDEAUX RED (M)	CEK	---	UP TO (V) 649174	OYSTER
BROOKLANDS GREEN	HFB	753	FROM (V) 629286	GOLD
CATKIN	HFD	777	FROM (V) 649175	GOLD
DIAMOND BLUE (M)	JFN	743		GUNMETAL
FLAMENCO	CFH	765	FROM (V) 649175	GOLD
GLACIER WHITE	NDP	742		GUNMETAL
GRENADIER RED	CEH	---	UP TO (V) 629285	GOLDLEAF
GUNMETAL	LEH	740		OYSTER
JADE GREEN	HEV	---	UP TO (V) 649174	OYSTER
JAGUAR RACING GREEN	HEN	---	UP TO (V) 629285	GOLDLEAF
KINGFISHER BLUE	HFE	779	FROM (V) 649175	SILVER
METEOR RED	CFJ	736	FROM (V) 649175	GOLD
OYSTER (M)	SDE	751	UP TO (V) 629285	DARK BLUE
PLATINUM (M)	LFP	775	FROM (V) 649175	DARK BLUE
REGENCY RED	TDD	734		GOLDLEAF
SATIN BEIGE	AGA	747	UP TO (V) 629285	GOLDLEAF
SAVOY GREY (M)	LEK	---	UP TO (V) 649174	GOLDLEAF
SIGNAL RED	CFC	748		GOLD
SILVER (M)	MDF	---	FROM (V) 629286	GUNMETAL
SOLENT BLUE (M)	JFJ	715		OYSTER
TUNGSTEN (M)	JEX	718	UP TO (V) 649174	OYSTER
TUSCANY BRONZE	SDD	---	FROM (V) 629286	GOLD
WESTMINSTER BLUE	JFG	712		OYSTER

Up to VIN 594575 – End of 1991 MY
1990 MY INFORMATION SEE PAGE B11

TRIM COLOUR COMBINATION CHART ALL MARKETS

DIRECTIONS FOR USE

1 Establish the basic trim colour of the car. These are colours which appear in the Jaguar sales and advertising literature.
2 Select the basic trim colour in the left hand column of the chart.
3 Select the trim required from the description across the top of the chart.
4 By reading across and down the colour, the colour for the part can be obtained.

BASIC COLOUR LEATHER OR AMBLA	SEATS	CARPETS	BOOT TRIM	UPPER AREA	LOWER AREA	HEADLINING
BARLEY	AW	XF	XF	XE	AW	ND
BISCUIT	AE	AP	XF	XE	AE	ND
CHARCOAL	LZ	LE	XF	XE	LZ	ND
ISIS BLUE	JF	LE	XF	XE	JF	ND
DOESKIN	XE	XF	XF	XE	XE	ND
MAGNOLIA	ZM	AP	XF	XE	ZM	ND
MULBERRY	CM	CN	XF	XE	CM	ND
SAVILE GREY	LY	XA	XF	XE	LY	ND
CLOTH						
CHEVIOT TWEED	YF	XA	XF	XE	LY	ND
CHILTERN TWEED	AY	XF	XF	XE	XE	ND
COTSWOLD TWEED	AX	XF	XF	XE	AW	ND
PENNINE TWEED	YE	LE	XF	XE	LZ	ND

TRIM DEFINITION LIST

UPPER AREA (DOESKIN ONLY)

Bezel–'A' post finisher
Bezel–Seatbelt (B/C post upper)
Cover–'A' post
Cover–B/C post upper
Cover–Cantrail
Cover–D/E post
Cover–Rear header rail
Furflex–Sunroof aperture
Grab handle
Housing–sunvisor mirror
Pivot arm & clip–sunvisor
Reading lamps–E post
Sunvisor–Leather
Surround–Interior lamp
Switch & surround–Sunroof

LOWER AREA (COLOUR KEYED)

Armrest
'B/C' post lower
'B/C post lower fixing
Casing–side–Lower 'A' post
Casing–Underscuttle
Casing–Lower door
Centre console
Console extension (rear compartment)
Cover–High mounted stoplamp
Cover plugs–seatback
Door pockets
Door pull inserts
Fuse box cover
Fuse box cover fixings
Handbrake gaiter
Lid–Console cubby box
Parcel shelf
Seatbelt bezel–Rear parcel shelf
Seating, including head restraints

FOR TRIM CODE REFER TO TRIM COMBINATION CHARTS

NOTE: For 3 digit Suffix Equivalents SEE PAGE B09

TRIM COLOUR COMBINATION CHART (USA:ONLY)

From (V) 594576 - 1990 MY & up to (V)629285
From (V) 628286 - See Page D11

Basic
Trim Colour

OVERALL INTERIOR COLOUR DESCRIPTION	SEATS, DOOR CASINGS, CENTRE CONSOLE, UNDERSCUTTLE	SEAT BELT WEBBING	FACIA & DOOR TOP ROLLS	UPPER AREA TRIM/HEADLINING ETC SUNROOF APERTURE FURFLEX	CARPET INTERIOR	DOOR APERTURE FURFLEX (DOOR WELL)
DOESKIN	DOESKIN	DOESKIN	WARM CHARCOAL	DOESKIN LIMESTONE	RATTAN	DOESKIN
MAGNOLIA	MAGNOLIA	MAGNOLIA			CHAMPAGNE	WARM CHARCOAL

USA VDP

Basic
Trim Colour

OVERALL INTERIOR COLOUR DESCRIPTION	SEATS, DOOR CASINGS, CENTRE CONSOLE, UNDERSCUTTLE	SEAT BELT WEBBING	FACIA & DOOR TOP ROLLS	UPPER AREA TRIM/HEADLINING ETC SUNROOF APERTURE FURFLEX	CARPET INTERIOR	DOOR APERTURE FURFLEX (DOOR WELL)
BARLEY	BARLEY	BARLEY	WARM CHARCOAL	DOESKIN/LIMESTONE	RATTAN	DOESKIN
SAVILE GREY	SAVILE GREY	SAVILE GREY		SAVILE GREY	SMOKE GREY	SAVILE GREY
ISIS BLUE	ISIS BLUE	WARM CHARCOAL				SAVILE GREY
MULBERRY	MULBERRY	WARM CHARCOAL		DOESKIN/LIMESTONE	WINE RED	WARM CHARCOAL
WARM CHARCOAL	WARM CHARCOAL	WARM CHARCOAL		SAVILE GREY	SLATE GREY	WARM CHARCOAL

NOTE: All US take Warm Charcoal Facias & Top Rolls
Colour keyed Facias wil be used by Limited edition 'Specials' only, commencing at 1990 MY

TRIM COLOUR / PART NUMBER SUFFIX CROSS REFERENCE

SEATS

COLOUR	LEATHER OR AMBLA	3 LETTER SUFFIX	2 LETTER SUFFIX	VIN NUMBER
BARLEY	BOTH	AFW	AW	
BISCUIT	BOTH		AE	
BUCKSKIN	BOTH	AFR	AR	(1)
DOESKIN	BOTH	AEE	XE	
ISIS BLUE	BOTH	JEF	JF	
MAGNOLIA	BOTH	AEM	ZM	
MULBERRY	BOTH	CEM	CM	
PARCHMENT	LEATHER	HEZ		(2)
SAVILE GREY	BOTH	LDY	LY	
WARM CHARCOAL	BOTH	LEG	LZ	

CLOTH

COLOUR	3 LETTER SUFFIX	2 LETTER SUFFIX
CHEVIOT TWEED	LEF	YF
CHILTERN TWEED	AFY	AY
COTSWOLD TWEED	AFX	AX
PENNINE TWEED	LEE	YE

(1) UP TO (V) 594575 - UP TO END 1989 MY
(2) FROM (V) 594576 - 1990 MY
(3) UP TO (V) 629285
(4) FROM (V) 629286

CARPET

COLOUR	3 LETTER SUFFIX	2 LETTER SUFFIX	VIN NUMBER
CHAMPAGNE	SDB		(2)
MINK	ADP	AP	(1)
RATTAN	AEF	XF	
SLATE GREY	LDE	LE	(3)
SMOKE GREY	LEA	XA	(4)
WINE RED	CEN	CN	

FACIA / CRASH ROLL

COLOUR	3 LETTER SUFFIX	VIN NUMBER
BARLEY	AFW	(4)
MID GREY	LEM	(2)
SAGE GREEN	HFA	(2)
WARM CHARCOAL	LEG	(2)

HEADLINING

COLOUR	3 LETTER SUFFIX	2 LETTER SUFFIX	VIN NUMBER
LIMESTONE	NDD	ND	
SAVILE GREY	LDY		(2)

CONTRAST PIPING / PART NUMBER SUFFIX CROSS REFERENCE

LEATHER OR AMBLA

COLOUR	3 LETTER SUFFIX
DOESKIN / BUCKSKIN	WXE
DOESKIN / ISIS BLUE	ZXE
DOESKIN / MULBERRY	YXE
MAGNOLIA / BARLEY	MZM
MAGNOLIA / ISIS BLUE	ZZM
MAGNOLIA / MULBERRY	YZM
PARCHMENT / SAGE GREEN	UHZ
SAVILE GREY / ISIS BLUE	ZLY
SAVILE GREY / MID GREY	VLY
SAVILE GREY / MULBERRY	YLY

CARPET

COLOUR	3 LETTER SUFFIX
CHAMPAGNE / BARLEY	MSB
CHAMPAGNE / MAGNOLIA	NSB
SAGE GREEN / PARCHMENT	THA

COLOUR SUFFIX IDENTIFICATION TABLE

TRIM	'A'	'B'	'C'	'D'	'E'	'G'	'H'	'J'	'1'	'2'	'3'	'4'	'5'	'6'	'7'	'8'	'9'
BARLEY			AW	AFW	AFW	AFW		AFW	AW	AFW	AW	AW	AW		AFW	AFW	AFW
BISCUIT			AE						AE		AE	AE	AE				
BUCKSKIN			AR [2]	AFR [2]	AFR [2]				AR [2]	AFR [2]	AR [2]	AR	AR [2]				
CHEVIOT	YF	LEF															
CHILTERN	AY	AFY															
COTSWOLD	AX	AFX															
SAGE GREEN														HFA	HFA		
DOESKIN			XE	AEE	AEE	AEE	AEE	AEE	XE	AEE	XE	XE	XE		AEE	AEE	AEE
ISIS BLUE			JF	JEF	JEF	JEF		JEF	JF	JEF	JF	JF	JF				JEF
MAGNOLIA			AEM [3]	AEM [3]	AEM	AEM	AEM	AEM	ZM	AEM		ZM	ZM			AEM	AEM
MID GREY														LEM	LEM		
MULBERRY			CM [6]	CEM [6]	CEM [6]	CEM [6]			CM [6]	CEM [5]	CM [6]	CM [6]	CM [5]				CEM [4]
PARCHMENT			HEZ [1]	HEZ [1]	HEZ [3]	HEZ		HEZ	HEZ [3]	HEZ	HEZ [3]		HEZ [3]			HEZ	HEZ
PENNINE	YE	LEE															
SAVILE GREY			LY	LDY	LDY	LDY	LDY	LDY	LY	LDY	LY	LY	LY			LDY	LDY
WARM CHARCOAL			LZ	LEG	LEG	LEG		LEG	LZ	LEG	LZ	LZ	LZ	LEG	LEG	LEG	LEG

CONTRAST PIPING	'A'	'B'	'C'	'D'	'E'	'G'	'H'	'J'
DOESKIN/BUCKSKIN						WXE [5]	WXE [5]	
DOESKIN/ISIS BLUE					ZXE	ZXE	ZXE	
DOESKIN/MULBERRY					YXE [6]	YXE [6]	YXE [6]	
DOESKIN/CHERRY RED						XXE [7]		
MAGNOLIA/BARLEY						MZM [5]	MZM	
MAGNOLIA/ISIS BLUE					ZZM	ZZM	ZZM	
MAGNOLIA/MULBERRY					YZM [6]	YZM [6]	YZM [6]	
MAGNOLIA/CHERRY RED						XZM [7]		
PARCHMENT/SAGEGREEN						UHZ [5]		
SAVILE GREY/ISIS BLUE					ZLY	ZLY	ZLY	
SAVILE GREY/MID GREY						VLY [5]	VLY	
SAVILE GREY/MULBERRY					YLY [6]	YLY [6]	YLY [6]	
SAVILE GREY/CHERRY RED						XLY [7]		

CARPETS	'R'	'S'	'T	'U'	'V'	'W'
CHAMPAGNE	SDB [3]	SDB [3]	SDB	SDB [3]	SDB [3]	
MINK	AP [2]	AP		ADP		
RATTAN	AEF	XF	AFF	AEF	AEF	AEF
SAGE GREEN	HFA [5]		HFA [5]	HFA [5]	HFA [5]	HFA
SLATE	LE [4]	LE [4]	LDE [4]	LDE [4]	LDE [4]	
SMOKE GREY	LEA [6]	XA	LEA	LEA	LEA	LEA
WINE RED	CEN [6]	CN	CEN [6]	CEN	CEN [6]	
CHAMPAGNE/BARLEY	MSB [5]			MSB [5]		MSB [5]
CHAMPAGNE/MAGNOLIA	NSB [5]			NSB [5]		NSB [5]
SAGEGREEN/PARCHMENT	THA [5]			THA [5]		THA [5]
RUBY			CFN [7]			CFN [7]
SMOKE GREY/SAVILE GREY						LAJ [7]

Colour Suffix Identification Table
This table contains the Part No. suffixes for colour keyed parts. In some cases the microfiche text provides a core Part No. together with a "Dummy" suffix.

Using this table, the "Dummy" suffix can be converted into an acceptable Part Number Suffix appropriate to the colour range available. Where there are limitations of use for a specific colour, then VIN change points are denoted by the numbers after the individual suffix codes. These are referenced at the foot of the page

Method: A) Determine the Part No. required, together with the "Dummy" suffix, from the appropriate text page in the microfiche.

B) Select the column headed by the "Dummy" suffix number/letter given with the core Part No.

C) Choose the colour suffix required in in this column against the descriptions available.

D) Check with any change point information indicated.

E) Replace the "Dummy" suffix with the chosen 2 or 3 character code.

Example

a) Part No. from text = BEC 3942 '6'
b) Trim colour required = Mid Grey
c) Align Mid Grey with the code in column '6'
d) Read suffix LEM
e) Check for VIN change points
f) Order/select Part No. BEC 3942 LEM

CHANGE POINTS
1) From (V) 575489
2) Up to (V) 594575
3) From (V) 594576
4) Up to (v) 629285
5) From (V) 629286
6) Up to (V) 657335
7) From (V) 657336

NOTE: CONTRAST PIPING COLOURS – The piping colour is the second colour described eg: Champagne/Barley–where Barley is the colour of the contrast piping.

TRIM COLOUR COMBINATION CHART – FROM (V) 594576 & USA / CDN – FROM (V) 629286

OVERALL INTERIOR COLOUR DESCRIPTION	SEATS, DOOR CASINGS, CENTRE CONSOLE UNDERSCUTTLE	SEAT BELT WEBBING & FURNITURE	FACIA INCLUDES DOOR TOP ROLLS	UPPER AREA TRIM/HEADLINING ETC SUNROOF APERTURE FURFLEX	CARPET INTERIOR	DOOR APERTURE FURFLEX (DOOR WELT)	BOOT CARPET
BARLEY COTSWOLD TWEED	BARLEY COTSWOLD TWEED	BARLEY	BARLEY WARM CHARCOAL ①	DOESKIN/LIMESTONE	CHAMPAGNE RATTAN ①	DOESKIN	RATTAN ②
DOESKIN CHILTERN TWEED	DOESKIN CHILTERN TWEED	DOESKIN	DOESKIN WARM CHARCOAL ①	DOESKIN/LIMESTONE	RATTAN	DOESKIN	RATTAN ②
ISIS BLUE	ISIS BLUE	WARM CHARCOAL	WARM CHARCOAL	SAVILE GREY	SMOKE GREY	SAVILE GREY	SMOKE GREY ②
MAGNOLIA	MAGNOLIA	MAGNOLIA	DOESKIN WARM CHARCOAL ①	DOESKIN/LIMESTONE	CHAMPAGNE	DOESKIN WARM CHARCOAL	RATTAN ②
MULBERRY	MULBERRY	WARM CHARCOAL	WARM CHARCOAL	DOESKIN/LIMESTONE	WINE RED	WARM CHARCOAL	RATTAN ②
PARCHMENT	PARCHMENT	PARCHMENT	SAGE DARK STONE ① WARM CHARCOAL ①	DOESKIN/LIMESTONE	RATTAN	DOESKIN	RATTAN ②
SAVILE GREY CHEVIOT TWEED	SAVILE GREY CHEVIOT TWEED	SAVILE GREY	MED GREY WARM CHARCOAL ①	SAVILE GREY	SMOKE GREY	SAVILE GREY	SMOKE GREY ②
WARM CHARCOAL PENNINE TWEED	WARM CHARCOAL PENNINE TWEED	WARM CHARCOAL	WARM CHARCOAL	SAVILE GREY	SMOKE GREY	WARM CHARCOAL	SMOKE GREY ②

NOTES: Some model derivatives may not take all the colour combinations shown
1) Sovereign and Daimler and XJ6/Sovereign from (V) 594576 up to (V) 629285
2) From (V) 629286

!! NO DICTIONARY ENTRY FOR PART !! 4. E 03
1st and 2nd gear switch 2. F 17
3 way connector 2. J 15
A-post and cantrail finisher-RH 4. G 07
A-post and cantrail finisher-RH-Doeskin 4. G 13

A-post angle attachment 5. C 11
A-post closing panel-RH upper 5. C 11
A-post finisher and cantrail -RH-Coffee 4. G 09
A-post harness shield 3. F 03
A-post harness shield -RH 3. F 02

A-post panel-RH 5. C 08
A-post reinforcement-RH 5. C 09
Accelerator bearing 1. L 11
Accelerator cable 1. L 12
Accelerator cable-RH 1. L 11

Accelerator cam 2. F 11
Accelerator mounting bracket -RH 1. L 11
Accelerator pedal -RH 1. L 11
Accelerator pedal -assembly 1. L 12
Accelerator pedal pad 1. L 11

Accelerator pedal pad 1. L 12
Accelerator pedal stop 1. L 11
Accelerator pedal stop 1. L 13
Accessory fusebox bracket 3. F 18
Accessory fusebox kit-10 way 3. F 18

Accessory fusebox-6 way 3. F 18
Accumulator and seal -assembly 2. K 02
Accumulator kit 2. N 07
Actuation kit 2. M 12
Adaptor pin 1. E 05

Adaptor pin 1. E 06
Adaptor pin 1. E 07
Adhesive pad 3. 03
Adhesive pad-non vented battery 3. 02
Adhesive pad-non vented battery 3. L 12

Adhesive pad-non vented battery 5. E 10
Adhesive pad-non vented battery 5. E 11
Adjustable anchor-B/C-post 4. F 05
Adjustable anchor-B/C-post 4. F 07
Adjustable anchorage fastener 4. F 05

Adjustable anchorage fastener 4. F 07
Adjustable bush 1. N 04
Adjustable bush 1. N 05
Adjustable spacer-2.22mm 2. J 11
Adjustable spacer-2.42mm 2. J 09

Adjustable spacer-3.905mm 2. J 10
Adjustable spacer-3.905mm 2. J 12
Adjustable spanner 5. E 14
Adjustment block 3. I 09
Adjustment block 3. I 10

Adjustment block 3. C 13
Adjustment block 3. C 18
Adjustment bolt 1. J 06
Adjustment bolt 3. D 02
Adjustment bolt 3. D 03

Adjustment bolt 3. D 04
Adjustment bolt 3. D 05
Adjustment bolt 3. D 06
Adjustment bolt 3. I 09
Adjustment bolt 3. I 10

Adjustment bolt 3. C 13
Adjustment bolt 3. C 18
Adjustment bolt bracket 3. C 13
Adjustment bolt bracket 3. C 18
Adjustment bolt spacer 3. I 09

Adjustment bolt spacer 3. I 10
Adjustment screw 1. J 18
Adjustment sleeve 1. J 06
Adjustment sleeve 3. D 02
Adjustment sleeve 3. D 03

Adjustment sleeve 3. D 04
Adjustment sleeve 3. D 05
Adjustment sleeve 3. D 06
Aerial cleaner 5. F 09
Aerial drain tube -500mm 3. J 05

Aerial extension lead 3. J 05
Aerial mast 3. J 05
Aerial mounting bracket 3. J 05
Aerial screw 3. J 05
Aerial sealing grommet 3. J 05

Aerial support bracket 3. J 05
Air box mounting bracket 5. C 05
Air conditioning blower motor-assembly-RH 3. C 06
Air conditioning control panel 3. D 09
Air conditioning harness 3. D 11

Air conditioning muffler-assembly 3. D 14
Air conditioning recirculation switch 3. D 11
Air conditioning relay 3. C 06
Air conditioning relay 3. C 07
Air conditioning retrofit kit-CFC free 3. D 07

Air conditioning unit 3. C 02
Air delivery pipe-primary 1. J 07
Air delivery pipe-primary 1. J 08
Air distribution box 3. C 08
Air distribution box vent 3. C 08

Air duct clip 3. D 12
Air duct foot outlet -RH 3. C 02
Air duct seal-duct to facia 3. C 02
Air duct seal-duct to facia 3. C 03
Air duct-RH 3. D 12

Air duct-RH 4. G 05
Air duct/control module cover 4. G 05
Air duct/cover support bracket-passenger 4. G 05
Air extraction grille 4. J 15
Air extractor-assembly-rear parcel shelf 5. C 14

Air filter 1. L 08
Air filter 1. L 09
Air flow meter 1. L 03
Air hose 1. J 07
Air hose 1. J 08

Air intake grommet 1. L 08
Air pipe 1. K 02
Air pipe 1. J 18
Air pump adjustment bracket 1. J 06
Air pump and clutch-assembly 1. J 05

Air pump drive belt 1. G 14
Air pump-assembly 1. J 05
Air switching valve 1. J 07
Air switching valve 1. J 08
Air temperature sensor 1. L 03

Air temperature sensor 3. C 06
Air temperature sensor 3. C 07
Air tube 1. J 07
Air tube 1. J 08
Air valve and vacuum motor-centre vent -2 4. I 04

Aircleaner O-ring 1. H 02
Aircleaner O-ring 1. H 03
Aircleaner O-ring 1. H 04
Aircleaner O-ring 1. L 08
Aircleaner O-ring 1. L 09

Aircleaner cover clip 1. L 08
Aircleaner cover clip 1. L 09
Aircleaner mounting bracket-front 1. L 08
Aircleaner-assembly 1. L 08
Aircleaner-assembly 1. L 09

Allen key-hub cap removal 2. L 02
Allen key-hub cap removal 2. L 03
Allen key-hub cap removal 2. K 10
Allen key-hub cap removal 2. K 13
Alloy hub cap 2. L 02

Alloy hub cap 2. K 12
Alloy road wheel 2. K 08
Alloy road wheel 5. E 08
Alloy road wheel fitting kit 5. E 08
Alloy road wheel-forged 2. K 17

Alloy road wheel-roulette 2. K 12
Alloy road wheel-tear drop 2. L 02
Alloy road wheel-tear drop 2. K 09
Alloy road wheel-tear drop 2. K 14
Alloy road wheel-tear drop 2. K 15

Alloy wheel and tyre-assembly 2. K 17
Alloy wheel cleaner kit 5. F 09
Alternator brush set 3. I 08
Alternator brush set-75 amp 3. I 09
Alternator cable 3. F 04

Alternator cooling fan 3. I 08
Alternator cooling fan 3. I 09
Alternator drive belt-80 amp alternator 1. G 13
Alternator drive belt-80 amp alternator 1. G 14
Alternator link lead-90 amp alternator 3. F 04

Alternator pivot bracket 3. I 09
Alternator pivot bracket-90 amp alternator 3. I 10
Alternator rectifier 3. I 09
Alternator rectifier-90 amp 3. I 08
Alternator regulator 3. I 08

Alternator suppressor-75 amp alternator 3. I 09
Alternator suppressor-90 amp alternator 3. I 08
Alternator-assembly-90 amp-new 3. I 08
Alternator-new 3. I 09
Aluminium spacer 2. G 14

Aluminium spacer 2. G 17
Anchor bracket 1. M 06
Anchor bracket 1. M 09
Angle disc 2. F 15
Angle disc 2. E 16

Angle disc 2. E 17
Anti freeze label 1. N 05
Anti mist wipe 5. F 09
Anti rattle clip 4. N 03
Anti rattle clip 4. N 04

Anti rattle pad 4. J 15
Anti roll bar 2. I 15
Anti roll bar 2. I 16
Anti roll bar bush 2. I 16
Anti roll bar link-assembly 2. I 15

Anti roll bar link-assembly 2. I 16
Anti roll bar mounting bracket -RH 2. I 15
Anti roll bar mounting bracket -RH 2. I 16
Anti twist bracket 2. G 14
Anti twist bracket 2. G 17

Ape clip 2. E 09
Aperture blanking cover-RH front 4. O 04
Aperture edge finisher-RH front/LH rear door- 4. G 15
Aperture edge finisher-front/rear door- 4. G 14
Armature and rotor 3. C 10

Armature and rotor 3. C 11
Armoured hose 2. M 02
Armoured hose 2. M 04
Armoured hose 2. M 06
Armoured hose -front 2. M 03

Armrest base-assembly-autolux leather- 4. D 13
Armrest lid cubby box 4. H 05
Armrest lid stay 4. H 05
Armrest lid stay screw 4. H 05
Armrest lid stay washer 4. H 05

Armrest lid-Cream 4. H 03
Armrest lid-ambla 4. H 04
Armrest mounting bracket-top 4. H 10
Ashtray-assembly 4. H 05
Aspirator motor sensor 3. D 10

Aspirator motor sensor 3. D 12
Aspirator mounting bracket 3. D 10
Atmospheric recovery bottle 1. N 02
Automatic gearbox -assembly-new 2. E 02
Automatic gearbox -assembly-new 2. E 03

Automatic gearbox oil-Dextron 2D-500ml 5. F 10
Auxiliary shaft and sprocket-3mm pin holes 1. G 04
Auxiliary shaft bearing gasket 1. H 02
Auxiliary shaft bearing gasket 1. H 05
Auxiliary shaft bearing gasket 1. H 06

Auxiliary shaft bearing gasket 1. G 04
Auxiliary shaft cover plate 1. G 05
Auxiliary shaft cover plate 1. G 06
Auxiliary shaft cover plate 1. G 07
Auxiliary shaft cover plate 1. G 08

Auxiliary shaft driving dog-3mm pin holes 1. G 04
Axle harness grommet 3. F 03
B-post trim mounting bracket -RH 4. F 04
B/C-post and sill panel-RH 5. C 08
B/C-post bezel-RH upper-Doeskin 4. G 07

B/C-post bezel-lower -chrome 4. G 08
B/C-post finisher-RH lower-Biscuit 4. G 08
B/C post finisher-RH outer 4. L 04
B/C-post finisher-RH upper 4. G 07
B/C-post finisher-RH upper-Coffee 4. G 09

B/C-post finisher-RH upper-Doeskin 4. G 13
B/C-post harness shield-RH 3. F 02
B/C-post inner panel-RH 5. C 11
B/C-post inner panel-RH low 5. C 07
B/C-post reinforcement 5. C 09

B/C-post seatbelt guide 4. F 05
B/C-post seatbelt guide 4. F 07
B/C-post stud-lower 4. G 13
Baby seat 5. E 03
Backcover attachment cap 4. C 07

Backcover attachment cap 4. D 03
Backcover attachment cap 4. C 13
Backcover attachment cap 4. D 02
Backcover spacer 4. D 03
Backcover spacer 4. D 02

Backlight glass sunblind-RH-Warm charcoal 4. J 16
Backlight glass-SIV 4. M 04
Backlight glazing rubber 4. M 05
Badge 4. H 07
Badge retainer-Jaguar 2. K 08

Badge retainer-Jaguar 2. K 09
Badge retainer-Jaguar 2. K 11
Badge retainer-Jaguar 2. K 15
Badge retainer-aluminium 2. K 16
Badge-Jaguar 2. I 11

Badge-Jaguar 2. I 12
Badge-Jaguar 2. I 14
Baffle plate 1. F 02
Baffle plate 1. F 03
Baffle tray 1. E 13

Baffle tray 1. E 14
Balance weight 2. K 11
Balance weight strip -stick on 2. K 08
Balance weight strip -stick on 2. K 11
Balance weight strip -stick on 2. K 16

Balance weight-10g 2. K 18
Balance weight-5g-knock on fixing 2. K 10
Balance weight-5g-knock on fixing 2. K 13
Balance weight-5g-knock on fixing 2. K 17
Balance weight self adhesive fixing 2. L 02

Balance weight-self adhesive fixing 2. K 08
Balance weight-self adhesive fixing 2. K 09
Balance weight-self adhesive fixing 2. K 14
Balance weight-self adhesive fixing 2. K 15
Balance weight-self adhesive fixing 2. K 16

Balancing bolt 1. H 14
Ball bearing 2. H 12
Ball bearing 2. E 15
Ball bearing 2. H 14
Balljoint kit-assembly-outer 2. I 02

Balljoint kit-assembly-outer 2. I 03
Balljoint-assembly 2. I 04
Balljoint-assembly-lower 2. J 04
Balljoint-assembly-lower 2. J 06
Balljoint-assembly-upper 2. J 03

Balljoint-assembly-upper 2. J 05
Ballpin 4. J 04
Banjo bolt 1. L 15
Banjo bolt 1. E 18
Banjo bolt 2. E 09

Bare cylinder head-assembly-less camshaft 1. G 02
Bare cylinder head-assembly-less camshaft 1. F 16
Base joint gasket 2. M 08
Base plate 4. I 02
Battery acid warning label 3. I 03

Battery cable grommet 3. I 06
Battery cable-assembly-positive 3. I 05
Battery cover 3. M 02
Battery heatshield 3. I 02
Battery heatshield 3. I 03

Battery hose kit 3. I 06
Battery isolation switch 3. I 04
Battery isolation switch kit 3. I 04
Battery pack 3. M 02
Battery spacer 3. I 02

Battery spacer 3. I 03
Battery tray drain tube 3. I 02
Battery tray pillar nut 3. I 02
Battery tray pillar nut-long 1. I 13
Battery tray pillar nut-long 1. I 14

Battery tray pillar nut-long 1. I 16
Battery tray pillar nut-short 3. I 03
Battery tray-assembly 3. I 03
Battery tray-non vented battery 3. I 02
Battery vent elbow 3. I 06

Battery vent tube 3. I 06
Battery vent tube edge clip 3. I 06
Battery-dry 3. I 05
Battery/fuel gauge-assembly 3. H 03
Battery/fuel gauge-assembly 3. H 04

Beam converter 5. E 07
Bearing and sleeve-assembly 2. G 07
Bearing cap bolt 1. E 09
Bearing cap bolt 1. E 10
Bearing retaining collar 2. H 12

Bearing retaining collar 2. H 14
Bearing spacer 2. J 09
Bearing spacer 2. J 11
Bearing strip 4. J 06
Betaseal cartridge -150mm 4. M 03

Betaseal cartridge -300mm 4. L 17
Betaseal sealant kit 4. M 03
Betaseal sealant kit 4. M 04
Betaseal sealant kit 4. L 17
Big end bearing shell kit-standard 1. F 10

Big end bearing shell kit-standard 1. F 12
Blank key -doors/steering-non illuminated 4. N 16
Blank key -service 4. N 13
Blank key -standard -spindle type 4. N 04
Blanking panel 3. C 08

Blanking patch -50mm diameter 4. N 02
Blanking patch -50mm diameter 5. C 03
Blanking patch -50mm diameter 5. C 15
Blanking patch -50mm square 2. I 08
Blanking patch -50mm square 2. I 09

Blanking plate 1. H 08
Blanking plate 1. H 10
Blanking plate gasket-adaptor to inlet 1. H 02
Blanking plate gasket-adaptor to inlet 1. H 05
Blanking plate gasket-adaptor to inlet 1. H 06

Blanking plate gasket-adaptor to inlet 1. H 08
Blanking plate gasket-adaptor to inlet 1. K 08
Blanking plate gasket-adaptor to inlet 1. H 10
Blanking plate-oil filler housing 1. E 09
Blanking plug 1. I 09

Blanking plug 1. K 10
Blanking plug 1. L 11
Blanking plug 1. N 11
Blanking plug 1. I 12
Blanking plug 1. L 12

Blanking plug 1. N 12
Blanking plug 1. N 14
Blanking plug 2. J 10
Blanking plug 4. O 03
Blanking plug 4. F 04

Blanking plug 5. C 06
Blanking plug 5. E 12
Blanking plug 5. C 15
Blanking plug-6.35mm 2. I 08
Blanking plug-6.35mm 2. I 09

Blanking plug-6.35mm 5. C 03
Blanking plug-LH side harness 3. F 06
Blanking plug-alternative 3. K 18
Blanking plug-finisher 4. L 03
Blanking plug-surround to trunk lid 5. D 02

Blanking screw 1. E 10
Blanking socket 3. F 06
Bleed hose 1. N 03
Bleed hose 1. N 04
Bleed hose 1. N 05

Bleed hose 1. N 11
Bleed screw 2. N 02
Bleed screw 2. N 03
Bleed screw 2. N 04
Bleed screw 2. N 06

Bleed screw 2. J 15
Blind rivet 4. D 13
Blind rivet nut 4. K 02
Blind rivet nut-M6 4. K 06
Blind rivet nut-M6 4. K 09

Blind rivet-0.125" diameter 4. N 09
Bodyshell -fixed roof 5. C 02
Bodyside-RH 5. C 08
Bolt 1. I 02
Bolt 1. K 02

Bolt 1. L 02
Bolt 1. G 05
Bolt 1. I 05
Bolt 1. G 06
Bolt 1. J 06

Bolt 1. G 07
Bolt 1. H 07
Bolt 1. G 08
Bolt 1. N 09
Bolt 1. F 10

Bolt 1. H 10
Bolt 1. N 10
Bolt 1. E 11
Bolt 1. F 12
Bolt 1. N 12

Bolt 2. G 02
Bolt 2. K 02
Bolt 2. N 02
Bolt 2. G 03
Bolt 2. H 04

Bolt 2. G 04
Bolt 2. N 04
Bolt 2. E 05
Bolt 2. H 08
Bolt 2. E 06

Bolt 2. J 08
Bolt 2. J 09
Bolt 2. M 09
Bolt 2. M 11
Bolt 2. H 11

Bolt 2. J 12
Bolt 2. J 13
Bolt 2. M 15
Bolt 2. J 16
Bolt 2. M 16

Bolt 2. F 17
Bolt 3. D 02
Bolt 3. D 03
Bolt 3. D 04
Bolt 3. D 05

Bolt ..... 3. C 06
Bolt ..... 3. D 06
Bolt ..... 3. H 06
Bolt ..... 3. C 07
Bolt ..... 3. C 12

Bolt ..... 3. C 14
Bolt ..... 3. C 15
Bolt ..... 3. C 16
Bolt ..... 3. C 17
Bolt ..... 4. K 06

Bolt ..... 4. K 10
Bolt ..... 4. I 12
Bolt ..... 4. K 12
Bolt ..... 4. I 13
Bolt ..... 4. K 14

Bolt ..... 5. C 04
Bolt -0.25" unf ..... 2. C 02
Bolt -0.25" unf ..... 2. C 04
Bolt -0.25" unf ..... 2. C 05
Bolt -0.25" unf ..... 2. C 06

Bolt -0.25" unf ..... 2. C 07
Bolt -0.25" unf ..... 2. C 08
Bolt -0.25" unf ..... 2. C 10
Bolt -0.25" unf ..... 2. C 11
Bolt -0.25" unf ..... 2. C 12

Bolt -0.25" unf ..... 2. C 13
Bolt -0.25" unf ..... 2. C 15
Bolt -0.25" unf ..... 2. C 16
Bolt -0.25" unf ..... 2. C 17
Bolt -0.25" unf ..... 2. C 18

Bolt -0.4375" x 3.75" ..... 2. J 04
Bolt -7/16" x 2 3/16" ..... 2. J 06
Bolt -7/16" x 2 3/16" ..... 2. I 15
Bolt -7/16" x 2 3/16" ..... 2. I 16
Bolt -M10 x 85mm-upper ..... 2. G 07

Bolt -M10 x 85mm-upper ..... 3. I 07
Bolt -M8 x 100mm ..... 2. J 07
Bolt -adaptor to inlet manifold ..... 1. K 08
Bolt -beam to strut ..... 4. K 07
Bolt -cylinder head to block ..... 1. G 03

Bolt -cylinder head to block ..... 1. F 18
Bolt -damper to crankshaft ..... 1. F 05
Bolt -damper to crankshaft ..... 1. F 08
Bolt -link to actuator ..... 1. L 10
Bolt -propshaft to gearbox ..... 2. G 11

Bolt -propshaft to gearbox ..... 2. G 12
Bolt -propshaft to gearbox ..... 2. G 14
Bolt -propshaft to gearbox ..... 2. G 15
Bolt -pump to engine ..... 1. N 15
Bolt -pump to engine ..... 1. N 16

Bolt -pump to engine ..... 1. N 17
Bolt -timing ring to damper ..... 1. F 06
Bolt -timing ring to damper ..... 1. F 07
Bolt -valve to manifold ..... 1. K 03
Bolt and washer ..... 2. N 04

Bolt and washer ..... 2. J 09
Bonded seal ..... 1. M 05
Bonded seal ..... 1. L 15
Bonded seal ..... 2. E 09
Bonnet centre moulding ..... 4. K 17

Bonnet flange finisher ..... 4. O 05
Bonnet gas strut ..... 4. J 04
Bonnet hinge ..... 5. D 02
Bonnet hinge platform panel ..... 5. C 07
Bonnet hinge shim ..... 5. C 18

Bonnet lamp link harness ..... 3. F 04
Bonnet latch -RH ..... 4. N 02
Bonnet liner ..... 4. J 04
Bonnet lock striker-assembly ..... 4. N 02
Bonnet panel-assembly-less hinges ..... 5. C 18

Bonnet plug -50.8mm diameter hole ..... 5. C 03
Bonnet plug -50.8mm diameter hole ..... 5. D 02
Bonnet release cable hole grommet ..... 1. I 03
Bonnet release cable hole grommet ..... 1. M 04
Bonnet release cable hole grommet ..... 5. C 03

Bonnet release cable-driver's side ..... 4. N 02
Bonnet release lever ..... 4. N 02
Bonnet seal-front ..... 4. O 05
Booster cushion ..... 5. E 03
Bottom hose ..... 1. N 11

Bracket ..... 1. J 14
Bracket cover ..... 1. M 07
Bracket kit ..... 2. M 12
Brake caliper seal kit ..... 2. N 03
Brake caliper seal kit ..... 2. N 06

Brake caliper-RH front ..... 2. N 03
Brake caliper-assembly-RH rear ..... 2. N 06
Brake cooling duct-RH ..... 4. K 04
Brake cooling duct-RH ..... 5. C 17
Brake disc ..... 2. N 04

Brake disc cover -RH ..... 2. N 04
Brake disc kit-axle set ..... 2. N 02
Brake disc kit-axle set ..... 2. N 03
Brake disc kit-axle set ..... 2. N 05
Brake disc kit-rear ..... 2. N 04

Brake dust shield ..... 2. K 16
Brake fluid -500ml ..... 5. F 10
Brake fluid reservoir-assembly ..... 2. M 07
Brake hose-rear ..... 2. M 05
Brake hose-rear ..... 2. N 06

Brake kit ..... 2. N 04
Brake lever pin ..... 2. N 06
Brake pad -axle set ..... 2. N 06
Brake pad kit-axle set-Ferodo ..... 2. N 02
Brake pad kit-front-Jurid ..... 2. N 03

Brake pad sensor connector clip ..... 2. J 06
Brake pad sensor connector clip-Ferodo ..... 2. J 04
Brake pad sensor harness-RH rear axle ..... 2. M 18
Brake pad sensor harness-RH rear axle ..... 3. F 14
Brake pad sensor harness-front axle ..... 3. F 04

Brake pad set ..... 2. N 02
Brake pad set-rear axle ..... 2. N 04
Brake pad wear sensor ..... 2. N 06
Brake pad wear sensor-LH rear ..... 2. N 03
Brake pad wear sensor-LH rear ..... 3. F 14

Brake pedal ..... 2. M 09
Brake pedal ..... 2. M 10
Brake pedal microswitch ..... 2. M 08
Brake pedal pad-rubber ..... 2. M 08
Brake pedal pad-rubber ..... 2. M 09

Brake pedal pivot pin ..... 2. M 08
Brake pedal pivot pin ..... 2. M 09
Brake pedal pivot pin ..... 2. M 10
Brake pedal switch ..... 2. M 09
Brake pedal switch ..... 2. M 11

Brake pedal-assembly ..... 2. M 08
Brake pipe clip-3/way ..... 2. M 02
Brake pipe clip-3/way ..... 2. M 06
Brake pipe-anti lock brake unit to bracket ..... 2. M 03
Brake servo and pedal housing ..... 2. M 08

Brake shoe kit-axle set ..... 2. N 04
Brake shoe kit-axle set ..... 2. N 06
Brake shoe return spring kit-axle set ..... 2. N 04
Brass nut ..... 3. I 06
Breather cap ..... 1. E 18

Breather cover ..... 2. E 04
Breather drain pipe ..... 1. K 04
Breather drain pipe ..... 1. K 05
Breather elbow ..... 1. E 18
Breather hose ..... 1. M 08

Breather hose ..... 1. E 18
Breather hose-63" ..... 1. I 04
Breather hose-63" ..... 1. L 04
Breather hose-63" ..... 1. I 05
Breather hose-63" ..... 1. L 05

Breather hose-63" ..... 1. I 09
Breather hose-63" ..... 1. L 06
Breather hose-63" ..... 1. J 07
Breather hose-63" ..... 1. K 07
Breather hose-63" ..... 1. L 07

Breather hose-63" ..... 1. J 08
Breather hose-63" ..... 1. I 13
Breather hose-63" ..... 1. M 13
Breather hose-63" ..... 1. M 14
Breather hose-63" ..... 1. M 15

Breather hose-filler pipe to cam cover ..... 1. K 06
Breather restrictor ..... 1. K 04
Breather restrictor ..... 1. K 05
Breather restrictor ..... 1. K 06
Breather separator ..... 1. K 04

Breather separator ..... 1. K 05
Breather tube ..... 1. E 18
Bright finisher ..... 4. K 16
Bright finisher-RH ..... 4. M 05
Bright finisher-rear -lower -centre ..... 4. K 15

Bright finisher-spoiler ..... 4. K 04
Bright finisher-spoiler ..... 4. L 15
Brush and spring-assembly ..... 1. J 02
Brush set ..... 3. I 07
Buffer ..... 1. L 02

Buffer ..... 1. E 05
Buffer ..... 1. E 06
Buffer ..... 1. E 08
Buffer ..... 1. L 11
Buffer ..... 2. I 18

Buffer ..... 4. J 06
Buffer cup and gaiter -assembly ..... 2. I 18
Buffer cup-assembly ..... 2. I 18
Buffer ring ..... 1. E 06
Buffer ring-assembly ..... 1. E 05

Buffer ring-assembly ..... 1. E 07
Buffer-1/4" ..... 4. N 02
Buffer-bonnet and trunk-hazard warning ..... 4. J 04
Bulb ..... 2. E 14
Bulb ..... 3. H 02

Bulb ..... 3. L 03
Bulb ..... 3. E 15
Bulb and holder-orange ..... 3. H 03
Bulb and holder-orange ..... 3. H 05
Bulb cover ..... 3. K 03

Bulb cover ..... 3. K 08
Bulb failure module ..... 3. L 08
Bulb failure module-quad headlamp ..... 3. L 10
Bulb failure module-styled headlamp ..... 3. L 07
Bulb holder ..... 3. H 02

Bulb holder-fog lamp ..... 3. K 17
Bulb-10w ..... 3. L 06
Bulb-5/21w-stop lamp ..... 5. E 14
Bulb-bayonet-12v 4w ..... 3. L 05
Bulb-bayonet-12v 4w ..... 3. K 10

Bulb-bayonet-12v 4w ..... 3. K 12
Bulb-bayonet-21w ..... 3. K 14
Bulb-bayonet-21w ..... 3. K 16
Bulb-bayonet-21w ..... 3. K 18
Bulb-bayonet-5w ..... 3. K 11

Bulb-clear-bayonet ..... 3. H 11
Bulb-clear-bayonet ..... 3. L 11
Bulb-clear-bayonet ..... 3. H 12
Bulb-festoon -5w ..... 3. L 02
Bulb-festoon -5w ..... 3. L 04

Bulb-switchpack ..... 4. E 02
Bulb-wedge base ..... 3. H 07
Bulb-wedge base ..... 4. J 14
Bulb-wedge base -5w ..... 3. K 13
Bulkhead harness ..... 3. F 05

Bulkhead insulation pad -rear ..... 4. J 02
Bumper beam ..... 4. K 05
Bumper beam ..... 4. K 08
Bumper beam ..... 4. K 11
Bumper beam ..... 4. K 13

Bumper beam and cover-RH rear-side- 4. K 11
Bumper beam and cover-RH rear-side- 4. K 13
Bumper beam and cover-RH side 4. K 06
Bumper beam and cover-RH side 4. K 09
Bumper beam cover 4. K 11

Bumper beam cover 4. K 13
Bumper beam mounting bracket 4. K 14
Bumper blade cover 4. K 05
Bumper blade cover 4. K 08
Bumper blade-RH rear 4. K 13

Bumper blade-front 4. K 05
Bumper blade-front 4. K 08
Bumper blade-rear 4. K 11
Bumper channel 5. C 15
Bumper mounting bracket 4. K 07

Bumper mounting bracket 4. K 10
Bumper strut-energy absorbing 4. K 12
Bumper strut-front-energy absorbing 4. K 07
Bumpstop bolt 2. J 17
Bush 1. F 02

Bush 1. F 03
Bush 1. G 04
Bush 1. L 04
Bush 1. G 05
Bush 1. L 05

Bush 1. G 06
Bush 1. L 06
Bush 1. G 07
Bush 1. L 07
Bush 1. G 08

Bush 1. E 09
Bush 1. E 10
Bush 2. G 03
Bush 2. G 04
Bush 2. C 06

Bush 2. C 11
Bush 2. C 12
Bush 2. C 14
Bush 2. C 15
Bush 2. C 16

Bush 2. C 17
Bush 2. C 18
Bush-front lower 2. J 04
Bush-front lower 2. J 05
Bush-stud 4. G 13

Bushed differential strut-assembly 2. J 17
Bushing kit 2. J 04
Bushing kit 2. N 03
Bushing kit 2. N 06
Bypass elbow 1. N 12

Bypass elbow 1. N 13
Bypass elbow 1. N 14
Bypass pipe 1. E 17
Bypass valve 1. E 16
Bypass valve 1. E 17

C-channel -RH front-upper 5. C 09
Cable abutment bracket 1. L 10
Cable armouring-positive/negative cable 3. F 02
Cable armouring-positive/negative cable 3. I 02
Cable armouring-positive/negative cable 3. I 03

Cable armouring-positive/negative cable 3. I 06
Cable clip 1. J 04
Cable clip 1. J 12
Cable clip 3. H 08
Cable clip 4. N 02

Cable clip 5. F 08
Cable clip attachment bracket 3. H 08
Cable protection cover 2. M 07
Cable relief tube-plastic 4. K 03
Cable steady bracket 2. E 04

Cable tie 2. K 04
Cable tie 2. K 05
Cable-RH-assembly 4. K 03
Caged nut 4. C 07
Caged nut 4. K 02

Caged nut 4. C 13
Caged nut 4. D 17
Caliper carrier-assembly 2. N 02
Caliper carrier-assembly 2. N 04
Caliper housing-RH 2. N 02

Caliper housing-assembly-LH 2. N 04
Caliper piston 2. N 02
Caliper piston 2. N 04
Caliper repair kit 2. N 02
Cam plate 4. H 06

Camshaft coupling 1. G 09
Camshaft coupling 1. G 11
Camshaft cover 1. G 02
Camshaft cover 1. G 15
Camshaft cover 1. F 16

Camshaft cover gasket-RH-A-bank 1. H 02
Camshaft cover gasket-RH-A-bank 1. G 15
Camshaft cover seal 1. G 02
Camshaft cover seal 1. H 03
Camshaft cover seal 1. H 04

Camshaft cover seal 1. F 16
Camshaft sprocket 1. G 09
Camshaft sprocket 1. G 11
Camshaft-assembly-RH-A-bank 1. G 15
Camshaft-inlet-assembly 1. G 16

Cancellation module-direction indicator 3. H 13
Cancellation ring 3. H 13
Cancellation ring 3. H 14
Cancellation switch-steering wheel 2. I 11
Cancellation switch-steering wheel 2. I 12

Cancellation switch-steering wheel 2. I 13
Cancellation switch-steering wheel 2. I 14
Cantrail bracket 4. J 09
Cantrail closing panel-RH 5. C 11
Cantrail finisher-RH rear 4. G 13

Cantrail finisher-RH rear-Coffee 4. G 09
Cantrail-RH 5. C 08
Cap 2. G 06
Cap screw 1. G 04
Cap screw 2. J 02

Cap screw 2. F 10
Cap screw 2. F 11
Cap screw 2. F 12
Cap screw-63mm 2. E 07
Captive nut 4. J 07

Captive nut 4. J 15
Captive nut 4. G 18
Captive nut 5. C 17
Captive nut-console to underscuttle 4. H 06
Captive nut-no.8 3. D 10

Captive nut-no.8 4. G 05
Captive spring nut -no.10 4. G 05
Car lifting jack 5. E 12
Car wax 5. F 09
Caravan and trailer electrics kit 3. L 12

Caravan and trailer electrics kit 5. E 10
Caravan and trailer electrics kit 5. E 11
Caravan/trailer module 3. L 12
Caravan/trailer module 5. E 10
Caravan/trailer module 5. E 11

Carbon canister 1. I 02
Carbon canister 1. I 03
Carbon canister 1. I 05
Carpet fastener 4. C 07
Carpet fastener 4. D 03

Carpet fastener 4. C 13
Carpet fastener 4. I 14
Carpet retainer 4. I 14
Carpet retaining bracket 4. I 12
Carpet retaining bracket 4. I 14

Carpet retaining bracket-Coffee 4. I 13
Carpet set-Grey 5. E 05
Carpet support strap 4. I 16
Carrier cover bolt 2. H 04
Carrier cover bolt 2. H 08

Carrier cover bolt 2. H 11
Cartridge-battery and bulb 4. N 04
Cartridge-battery and bulb 4. N 13
Casing clip 4. H 10
Cassette case-spring loaded 4. H 09

Cassette cleaner 5. F 09
Cassette rack 4. H 09
Catalyst grass shield 2. C 10
Catalyst grass shield 2. C 11
Catalyst grass shield 2. D 02

Catalyst heatshield 2. C 02
Catalyst heatshield 2. C 04
Catalyst heatshield 2. C 05
Catalyst heatshield 2. C 09
Catalyst heatshield-under floor 2. C 06

Catalyst heatsnield-under floor 2. C 11
Catalyst link harness 3. F 08
Catalyst switching module 1. J 13
Catalyst warning light link harness 3. F 10
Catch strap washer 2. I 08

Catch strap washer 2. I 09
Centering plate 2. F 03
Centering plate 2. F 04
Central locking microswitch-RH 4. N 18
Centre bearing 2. G 13

Centre bearing mounting bracket 2. G 14
Centre bearing mounting bracket 2. G 17
Centre bearing washer 2. G 14
Centre bearing washer 2. G 17
Centre bearing-5/16" unf 2. G 11

Centre bearing-5/16" unf 2. G 12
Centre bearing-5/16" unf 2. G 15
Centre bearing-5/16" unf 2. G 16
Centre bearing-5/16" unf 2. G 18
Centre bumper insert kit 4. K 07

Centre console extension-assembly-rear 4. H 08
Centre console extension-rear -Cream 4. H 03
Centre console veneer kit-burr walnut 4. H 06
Centre console veneer kit-figured walnut 4. H 05
Centre console-Cream 4. H 03

Centre floor panel-RH 4. I 18
Centre insert 4. K 07
Centre insert 4. K 10
Centre propshaft U-spacer 2. G 11
Centre propshaft U-spacer 2. G 12

Centre propshaft U-spacer 2. G 15
Centre propshaft U-spacer 2. G 16
Centre propshaft U-spacer 2. G 18
Centre propshaft bolt 2. G 11
Centre propshaft bolt 2. G 12

Centre propshaft bolt 2. G 15
Centre propshaft bolt 2. G 16
Centre propshaft bolt 2. G 18
Centre vent and flap-assembly-1 stage 4. I 04
Chain tensioner 1. G 10

Chain tensioner blade 1. G 09
Chain tensioner blade 1. E 12
Chain tensioner blade-secondary 1. G 12
Chain tensioner piston 1. G 10
Chain tensioner piston 1. G 12

Chain tensioner reaction shoe 1. G 09
Chain tensioner-assembly 1. G 12
Chamois leather 5. F 09
Change over plate 2. E 14
Change speed lever housing-assembly 2. G 03

Change speed lever-assembly 2. G 03
Change speed lever-assembly 2. G 04
Charging switch 2. K 02
Cheater finisher -RH inner 4. N 10
Cheater plate-RH inner 4. N 05

Cheater plate-assembly-RH outer 4. N 09
Check arm finisher -RH 4. J 05
Check arm grommet 4. J 06
Check cable 1. E 08
Check valve 1. J 07
Check valve 1. J 08
Child restraint tether bracket kit 5. E 03
Child seat 5. E 03
Chrome lock cover 4. J 06
Chrome lock cover 4. J 07
Chrome polish -300ml 5. F 09
Cigar-lighter element 3. H 07
Cigar-lighter link lead -rear 3. H 07
Cigar-lighter-assembly 3. H 07
Circlip 1. G 04
Circlip 1. G 09
Circlip 1. F 10
Circlip 1. L 10
Circlip 1. F 11
Circlip 1. G 11
Circlip 2. L 02
Circlip 2. K 10
Circlip 2. K 12
Circlip stem 2. I 18
Circlip-inner 1. J 05
Clamp bracket 3. D 11
Clamp bracket-assembly 3. I 02
Clamp bracket-assembly 3. I 03
Clamp bracket-assembly 3. H 07
Clamp handle 2. I 09
Clamp nut 5. E 04
Clamp plate 3. D 14
Clamp screw-standard wheel 2. L 03
Clamp shield 2. I 10
Clamp washer 1. J 06
Clamp washer-pivot bracket to mounting 3. D 02
Clamp washer-pivot bracket to mounting 3. D 04
Clamp washer-pivot bracket to mounting 3. C 13
Clamp washer-pivot bracket to mounting 3. C 14
Clamp washer-pivot bracket to mounting 3. C 16
Clamp washer-pivot bracket to mounting 3. C 18
Clamping bracket spacer 3. I 03
Clamping strip 4. N 05
Cleveloc nut 2. H 12
Cleveloc nut 2. H 14
Clevis pin 1. L 11
Clevis pin 2. M 14
Clevis pin 2. M 16
Clip 1. I 02
Clip 1. K 04
Clip 1. K 05
Clip 1. M 05
Clip 1. K 10
Clip 1. M 10
Clip 1. L 12
Clip 1. E 13
Clip 1. M 13
Clip 1. E 15
Clip 1. M 14
Clip 1. M 15
Clip 1. E 18
Clip 1. I 18
Clip 2. L 03
Clip 2. G 05
Clip 2. N 05
Clip 2. I 06
Clip 2. M 15
Clip 2. M 16
Clip 3. I 06
Clip 3. H 08
Clip 4. N 02
Clip 4. I 07
Clip 4. N 04
Clip 4. H 06
Clip 4. K 05
Clip 4. K 08
Clip 4. K 11
Clip 4. K 13
Clip 4. N 14
Clip 4. G 17
Clip 4. L 17
Clip 4. N 17
Clip 4. D 18
Clip bracket 1. M 03
Clip bracket 1. J 04
Clip bracket 1. L 16
Clip bracket 1. M 02
Clip bracket 2. M 04
Clip bracket 2. M 05
Clip-console to underscuttle 4. G 05
Clip-large 2. I 02
Clip-large 2. I 03
Clip-lock barrel to link 4. O 03
Clip-roof lining trim to aperture 4. J 09
Clock module bulb 3. H 09
Closing panel 5. C 07
Closing panel-RH upper 4. L 15
Closing panel-adjustable anchorage 4. F 05
Closing panel-adjustable anchorage 4. F 07
Closing panel-lid squab 4. D 13
Clutch 1. J 05
Clutch accessory kit 3. C 11
Clutch coupling 2. F 02
Clutch coupling 2. E 16
Clutch coupling 2. E 17
Clutch cover 2. G 02
Clutch cover 2. F 18
Clutch damper-assembly 2. G 05
Clutch damper-assembly 2. G 06
Clutch disc 2. F 07
Clutch disc 2. F 09
Clutch disc 2. F 10
Clutch disc-1.2mm 2. F 06
Clutch disc-1.5mm 2. F 03
Clutch disc-1.8mm 2. F 04
Clutch disc-1.8mm 2. F 05
Clutch disc-2.1mm 2. E 18
Clutch disc-lined 2. F 08
Clutch friction plate 2. E 16
Clutch housing 2. G 07
Clutch housing 3. C 09
Clutch lever 2. G 07
Clutch lever 2. G 08
Clutch master cylinder 2. G 05
Clutch master cylinder 2. G 06
Clutch microswitch mounting plate 2. M 11
Clutch pedal 2. G 09
Clutch pedal 2. M 10
Clutch pedal housing gasket 2. G 05
Clutch pedal housing gasket 2. G 06
Clutch pedal pivot pin 2. G 09
Clutch pedal pivot pin 2. M 10
Clutch pipe -assembly 2. G 05
Clutch pipe -assembly 2. G 06
Clutch pipe support bracket 2. G 06
Clutch plate 2. G 02
Clutch plate 2. E 18
Clutch plate 2. F 18
Clutch release bearing 2. G 07
Clutch release bearing-assembly 2. G 08
Clutch service kit 3. C 10
Clutch service kit 3. C 11
Clutch slave cylinder 2. G 06
Clutch slave cylinder 2. G 07
Clutch slave cylinder 2. G 08
Clutch slave cylinder flexible hose 2. G 05
Clutch slave cylinder flexible hose 2. G 06
Clutch slave cylinder repair kit 2. G 07
Clutch slave cylinder repair kit 2. G 08
Clutch switch 2. G 09
Clutch switch-assembly 2. M 08
Clutch switch-assembly 2. M 11
Clutch-assembly 3. C 11
Coachline tape-Gunmetal-10m roll 4. L 08
Coachline tape-RH front wing-Dark red 4. L 10
Coachline tape-RH rear tonneau -Gunmetal 4. L 09
Coachline tape-RH rear wing-Dark red 4. L 12
Coachline tape-door-Dark red 4. L 11
Coat hook finisher-Doeskin 4. J 11
Coat hook-Doeskin 4. J 11
Coil 3. C 11
Coil cover 1. J 04
Coil mounting bracket 1. J 03
Coil spring 2. G 03
Coil spring 2. G 04
Coil spring-lower -white/green 1. E 05
Coil spring-outer-white/green 1. E 06
Coil spring-outer-white/green 1. E 07
Collapsible spacer 2. H 12
Collapsible spacer 2. H 14
Collar 2. C 06
Collar 2. C 11
Collar 2. C 12
Collar 2. C 13
Collar 2. C 15
Collar 2. C 16
Collar 2. C 17
Collar 2. C 18
Collar nut 2. F 09
Collar nut 2. F 10
Collar-flexible 3. C 02
Collet 2. J 14
Column switch harness-assembly 3. H 13
Column switch harness-assembly 3. H 14
Compact disc autochanger fitting kit 3. J 06
Compact disc autochanger magazine-6 disc 3. J 06
Compact disc autochanger-less magazine 3. J 06
Compact disc player link lead 3. J 06
Companion flange 2. H 12
Companion flange 2. H 14
Compliance buffer-front 2. J 16
Compression spring 1. L 11
Compression spring 1. L 13
Compression spring 2. E 05
Compression spring 2. N 05
Compression spring 2. E 06
Compression spring 2. E 15
Compressor and clutch 3. C 10
Compressor and clutch 3. C 11
Compressor clutch bearing 3. C 09
Compressor clutch bearing 3. C 10
Compressor clutch bearing 3. C 11
Compressor clutch-assembly 3. C 10
Compressor clutch-assembly 3. C 11
Compressor drive belt 1. G 13
Compressor drive belt 1. G 14
Compressor oil-1 quart bottle 3. C 09
Compressor oil-250ml bottle 3. C 10
Compressor oil-250ml bottle 3. C 11
Compressor relief valve 3. C 11
Compressor-assembly 3. C 09
Condenser 3. D 07
Cone 2. E 14
Connecting bar 2. F 11
Connecting bar 2. F 12
Connecting rod-assembly 1. F 12
Connecting rod-assembly-new 1. F 10
Connector 1. E 17
Connector 2. M 04
Connector 2. M 05

Connector 3 L 12
Connector 5 E 10
Connector 5 E 11
Connector bracket 2 N 09
Connector clip 2 M 07

Connector clip 5 F 08
Connector retention clip 3 H 13
Connector retention clip 3 H 14
Connector tray 3 F 02
Connector-block connector A 3 F 18

Connector-instrument pack 3 F 12
Console air duct-RH rear 3 C 08
Console cable cover -RH 3 H 08
Console edge finisher 4 H 06
Console finisher fixing cup 4 H 06

Console lid -assembly-rear 4 D 13
Console panel moulding 3 H 09
Console stud 4 H 06
Console stud-Black 4 G 17
Console stud-Doeskin 3 L 06

Console switch module 3 H 09
Console-less armrest lid-amble-not stitched 4 H 04
Console-sub assembly-Limestone 4 G 16
Contact grease 3 L 07
Contact grease 3 L 09

Contact grease 3 L 10
Control cable -assembly 2 E 12
Control knob -fan select 3 D 09
Control module-anti lock brake system 2 N 09
Contrc: module-anti lock brake system-new 2 N 08

Control unit mounting plate 1 J 14
Control valve 2 I 07
Control valve-assembly 2 E 07
Control valve-assembly 2 E 08
Convoluted sleeve -front door 3 F 02

Coolant filler label 1 N 03
Coolant label 1 N 05
Coolant probe moulded cap 1 N 03
Cooling fan motor and cowl-assembly 1 N 08
Cooling fan-assembly 1 N 06

Copper washer 1 M 05
Core plug 1 F 13
Corner clip-LH 4 M 05
Corner clip-RH 4 M 04
Corner fillet -LH 4 J 02

Corrosion inhibitor 5 F 09
Countersunk screw 3 I 03
Countersunk screw 4 I 02
Countersunk screw 4 J 09
Countersunk self tapping screw 1 M 07

Countersunk self tapping screw 3 E 02
Countersunk self tapping screw 3 H 08
Countersunk self tapping screw 4 J 07
Countersunk self tapping screw 4 D 13
Countersunk woodscrew-no 4 4 H 02

Counting disc 2 F 10
Coupling bolt-M12 x 70mm 2 G 13
Coupling bolt-M12 x 70mm 2 G 14
Coupling bolt-M12 x 70mm 2 G 17
Coupling bolt-M12 x 70mm 2 H 02

Coupling bolt-propshaft to drive unit 2 G 12
Coupling bolt-propshaft to drive unit 2 G 16
Coupling bolt-propshaft to drive unit 2 G 18
Coupling washer 2 G 12
Coupling washer 2 G 13

Coupling washer 2 G 14
Coupling washer 2 G 16
Coupling washer 2 G 17
Coupling washer 2 G 18
Cover 2 K 03

Cover 3 I 09
Cover 3 D 10
Cover gasket -rear 1 G 02
Cover gasket -rear 1 G 03
Cover gasket -rear 1 H 03

Cover gasket -rear 1 H 04
Cover gasket -rear 1 F 17
Cover plate 2 M 08
Cover plate 2 G 09
Cover plate 2 M 11

Cover-A-post to facia-Doeskin 4 G 08
Cover-RH 4 G 04
Cowl and lens-instrument display module 3 H 03
Cowl and lens-instrument display module 3 H 04
Crankshaft 1 F 05

Crankshaft 1 F 08
Crankshaft balance weight -4 9g 1 F 09
Crankshaft damper 1 F 05
Crankshaft damper 1 F 08
Crankshaft damper-assembly 1 F 06

Crankshaft damper-assembly 1 F 07
Crankshaft oil seal 1 G 05
Crankshaft oil seal 1 G 06
Crankshaft oil seal 1 G 07
Crankshaft oil seal 1 G 08

Crankshaft oil seal housing-rear 1 E 09
Crankshaft oil seal housing-rear 1 E 10
Crankshaft oil seal-rear 1 H 02
Crankshaft oil seal-rear 1 H 05
Crankshaft oil seal-rear 1 H 06

Crankshaft oil seal-rear 1 E 09
Crankshaft oil seal-rear 1 E 10
Crankshaft pulley 1 F 05
Crankshaft pulley 1 F 08
Crankshaft speed sensor 1 G 05

Crankshaft speed sensor 1 G 06
Crankshaft speed sensor 1 G 07
Crankshaft speed sensor 1 G 08
Crankshaft sprocket 1 F 05
Crankshaft sprocket 1 F 06

Crankshaft sprocket 1 F 07
Crankshaft sprocket 1 F 08
Crankshaft-83mm stroke-standard 1 F 07
Crankshaft-new 1 F 06
Crossbeam-assembly-front 2 J 07

Crossmember 5 C 07
Crossmember carpet-RH 4 I 11
Crossmember carpet-RH-Coffee 4 I 13
Crush tube closing plate 5 C 06
Crushtube mounting-RH 5 C 06

Crushtube-RH 5 C 05
Cubby box 4 D 13
Cubby box carpet 4 H 05
Cubby box console carpet 4 D 13
Cubby box fuse label 3 H 08

Cubby box fuse label 3 F 18
Cubby box fusebox-assembly 3 H 08
Cubby box lamp harness 3 F 15
Cubby box lamp switch 3 L 04
Cubby box lamp-assembly 3 L 04

Cup spring 2 F 03
Cup spring 2 F 04
Cup spring 2 F 05
Cup spring 2 F 06
Cup spring 2 F 07

Cup spring 2 F 08
Cup spring 2 F 09
Cup spring 2 F 10
Cup spring 2 E 16
Cup spring 2 E 17

Cup spring 2 E 18
Cup tray 4 J 06
Cup tray finisher 4 H 08
Cup tray finisher badge -gold 4 H 03
Cup tray finisher badge -silver-Jaguar 4 H 08

Cup tray finisher-autolux leather-Cream 4 H 03
Cup washer 2 I 18
Cup washer 4 G 04
Cushion cover-RH 4 D 03
Cushion cover-RH 4 D 15

Cushion cover-cloth-RH rear 4 D 10
Cushion cover-cloth-RH/LH 4 C 02
Cushion cover-cloth-RH/LH 4 C 08
Cushion cover-cloth-inner piping-LH 4 C 03
Cushion cover-cloth-inner piping-LH 4 C 09

Cushion cover-cloth-inner piping-RH/LH 4 C 15
Cushion cover-cloth-rear 4 D 04
Cushion cover-cloth-rear 4 D 07
Cushion cover-leather-LH rear 4 D 11
Cushion cover-leather-inner piping-RH/LH 4 C 16

Cushion well pad 4 J 02
Cut out switch 3 C 10
Cut out switch 3 C 11
Cycle holder -roof rack 5 E 09
Cylinder 2 F 05

Cylinder 2 F 07
Cylinder 2 F 08
Cylinder 2 F 09
Cylinder 2 F 10
Cylinder 2 E 16

Cylinder 2 E 18
Cylinder block 1 E 10
Cylinder block core plug 1 G 02
Cylinder block core plug 1 G 03
Cylinder block core plug 1 H 08

Cylinder block core plug 1 H 10
Cylinder block core plug 1 F 17
Cylinder block-assembly 1 E 09
Cylinder head gasket 1 G 03
Cylinder head gasket 1 H 02

Cylinder head gasket 1 H 03
Cylinder head gasket 1 H 04
Cylinder head gasket 1 F 15
Cylinder head gasket 1 F 16
Cylinder head gasket set 1 H 02

Cylinder head gasket set 1 H 03
Cylinder head nut 1 F 16
Cylinder head stud -long 1 E 09
Cylinder head valve-inlet 1 F 13
Cylinder head valve-inlet 1 G 18

Cylinder head-assembly-less camshaft and 1 F 17
Cylinder head-assembly-with camshaft and 1 G 02
Cylinder head-assembly-with camshaft and 1 F 13
Cylinder head-assembly-with camshaft and 1 F 16
Cylindrical pin 2 E 04

Cylindrical pin 2 F 13
Cylindrical pin 2 F 14
D-clip 2 E 04
D-clutch plate pack 2 F 06
D-post finisher -LH-with lamp-Doeskin 4 G 11

D-post finisher -RH-Coffee 4 G 09
D-post finisher -RH-without lamp-Doeskin 4 G 10
D-post panel-RH 5 C 08
D-post plug -19 1mm diameter hole 5 C 03
D-post plug -19 1mm diameter hole 5 D 02

D-washer 2 J 02
Daimler badge-assembly 2 I 11
Daimler badge-assembly 2 I 13
Damper and universal joint 2 I 10
Damper bolt 2 J 15

Damper bush 2 J 04
Damper bush 2 J 05
Damper gaiter 2 J 14
Damper mounting bracket 2 G 05
Damper mounting bracket 2 G 06

Damper saddle -upper 1 G 11
De-icer 5 F 09
Deceleration valve 1 K 02
Decking panel 5 C 12
Deflector plate lid -RH 4 K 02

Deflector shield 3. C 02
Delay valve 1. L 04
Delay valve 1. J 07
Delay valve 1. J 08
Demist duct and flap-RH 4. I 05

Detachable towbar 5. E 10
Detent disc 2. F 11
Detent disc 2. F 12
Diagnostic system dust cover 5. E 15
Diagnostics sytem user guide-English 5. F 06

Differential bearing shim -0.028" 2. H 13
Differential bearing shim -0.028" 2. H 15
Differential carrier cover 2. H 04
Differential carrier cover 2. H 08
Differential carrier cover 2. H 11

Differential case breather-assembly 2. H 04
Differential case breather-assembly 2. H 08
Differential case breather-assembly 2. H 11
Differential speed sensor grommet 3. F 03
Differential-assembly-2.88:1-Jurid-new 2. H 05

Differential-assembly-2.88:1-new 2. H 11
Differential-assembly-3.58:1 -Jurid-new 2. H 09
Differential-assembly-3.77:1-Jurid-new 2. H 06
Differential-assembly-3.77:1-new 2. H 03
Differential-assembly-4.09:1 -Jurid-new 2. H 08

Differential-assembly-Powr-Lok-3.58:1 - 2. H 07
Differential-assembly-Powr-Lok-3.58:1 - 2. H 10
Differential-assembly-Powr-Lok-3.58:1 -new 2. H 04
Dimmer control knob-assembly 3. H 13
Dimmer control knob-assembly 3. H 14

Dimmer switch-assembly 3. H 13
Dimmer switch-assembly 3. H 14
Diode pack -black 3. F 13
Diode pack -black 3. F 14
Dipstick 1. E 13

Dipstick 1. E 14
Dipstick seal 2. E 09
Dipstick tube 1. E 13
Dipstick tube 1. E 14
Dipstick tube 2. E 09

Dipstick tube sleeve 1. E 13
Dipstick tube sleeve 1. E 15
Dipstick, label and seal -assembly 2. E 09
Direction indicator lamp-RH front 3. K 11
Direction indicator side lamp 3. K 12

Direction indicator speaker-assembly-64 ohm 3. H 14
Direction indicator switch-assembly 3. H 13
Direction indicator switch-assembly 3. H 14
Disc carrier 2. F 07
Disc carrier 2. F 08

Disc carrier 2. E 16
Disc carrier 2. E 17
Disc cleaning kit 5. E 15
Disc gate seal 2. E 15
Disc shield -RH 2. J 02

Disc shield -RH 2. N 02
Disc shield -RH 2. N 03
Dished tray -cloth 4. H 02
Dished tray cup holder 4. H 02
Dished washer 2. J 15

Dished washer 3. L 06
Dished washer 4. G 17
Distance piece 1. F 05
Distance piece 1. F 06
Distance piece 1. J 06

Distance piece 1. F 07
Distance piece 1. F 08
Distance piece 1. G 09
Distance piece 1. G 10
Distance piece 1. G 11

Distance piece 2. M 12
Distance tube 1. N 08
Distance tube 2. J 16
Distance tube-0.56" long 2. K 02
Distance tube-0.56" long 2. I 06

Distance tube-0.56" long 2. J 18
Distance tube-pivot bracket to mounting 3. D 02
Distance tube-pivot bracket to mounting 3. D 04
Distance tube-pivot bracket to mounting 3. C 13
Distance tube-pivot bracket to mounting 3. C 14

Distance tube-pivot bracket to mounting 3. C 16
Distance tube-pivot bracket to mounting 3. C 18
Distance tube-top 5. C 04
Distributor cap 1. J 02
Distributor cap 1 I 18

Distributor rotor arm 1. J 02
Distributor rotor arm 1. I 18
Distributor-assembly 1. J 02
Distributor-assembly 1. I 18
Domed wheel nut-black 2. K 08

Domed wheel nut-black 2. K 14
Domed wheel nut-black 2. K 15
Door ajar microswitch-RH front 4. O 04
Door aperture seal-RH front 4. O 05
Door armrest assembly -RH-bottom-Cream 4. H 16

Door armrest-RH front/rear 4. H 13
Door armrest-assembly-RH top 4. H 10
Door armrest-assembly-RH top- 4. H 16
Door armrest-cloth-rear 4. D 06
Door armrest-cloth-rear 4. D 09

Door casing ashtray 4. H 11
Door casing ashtray 4. H 13
Door casing-RH front-Cream 4. H 16
Door casing-assembly-RH front 4. H 14
Door casing-assembly-RH rear 4. H 17

Door coachline tape-Flame red/Pewter 4. L 11
Door crash roll-RH front-Coffee 4. H 16
Door crash roll-assembly-top -RH front 4. H 14
Door crash roll-assembly-top -RH rear 4. H 17
Door glass and carrier-RH rear door 4. N 08

Door glass and carrier-assembly-RH front 4. N 05
Door glass frame-RH front door-black finish 4. N 05
Door handle locking barrel repair kit -RH 4. N 13
Door handle microswitch 4. N 15
Door handle microswitch-RH 4. N 18

Door handle-RH front-outer-less key and 4. N 13
Door handle-RH front-with key 4. N 16
Door handle/remote control-assembly-RH 4. N 14
Door handle/remote control-assembly-RH 4. N 16
Door harness retaining clip 3. F 15

Door harness-front passenger 3. F 15
Door hazard and courtesy lamp switch -RH 3. L 04
Door hazard/courtesy lamp -RH 3. L 04
Door hinge-RH front-upper 4. O 06
Door insert veneer kit-figured walnut 4. H 14

Door insert veneer kit-figured walnut 4. H 17
Door latch-assembly-RH front 4. O 02
Door link -handle to latch-RH front 4. O 03
Door lock actuator-RH front 4. O 02
Door lock block-front 4. N 18

Door lock control module 1. J 14
Door lock heater 4. N 18
Door lock heater thermostat 4. N 18
Door lockset-doors/steering 4. N 16
Door mirror glass-assembly-convex-1400mm 4. M 09

Door mirror glass-assembly-convex-1400mm 4. M 10
Door mirror glass-assembly-convex-1400mm 4. M 11
Door mirror-LH 4. M 10
Door mirror-RH 4. M 06
Door mirror-RH 4. M 07

Door mirror-RH 4. M 09
Door mirror-RH 4. M 11
Door panel-RH front 5. C 18
Door pocket -RH front 4. H 12
Door pocket -assembly-RH front 4. H 11

Door pocket -assembly-RH-Cream/Coffee 4. H 16
Door side moulding-RH front 4. K 17
Door skin panel-RH front 5. C 18
Door support bracket -RH 4. H 13
Door trim panel -assembly-RH 4. H 11

Door waist seal-inner-front 4. H 14
Door waist seal-rear -inner 4. H 17
Double clip 1. M 03
Double clip 1. M 02
Double clip 2. M 02

Double clip 2. M 06
Double clip 3. D 14
Double clip-double 2. E 09
Dowager strap finisher-LH-Doeskin 4. J 10
Dowager strap finisher-RH-Doeskin 4. J 09

Dowager strap spacer 4. J 09
Dowager strap-assembly-RH 4. J 09
Dowel 1. H 13
Dowel 2. F 18
Downpipe 2. C 02

Downpipe 2. C 05
Downpipe and catalyst heatshield 2. C 09
Downpipe heatshield 2. C 03
Downpipe-assembly-front 2. C 07
Drain channel -RH 5. C 16

Drain channel extension -RH 5. C 16
Drain hose grommet 3. J 05
Drain plug 1. E 09
Drain plug 1. E 10
Drain plug 1. N 11

Drain plug 1. E 13
Drain plug 1. E 14
Drain plug O-ring 1. N 11
Drain plug washer 1. M 10
Drain plug washer 2. E 10

Drain tube 1. M 06
Drain tube 1. M 08
Drain tube grommet 4. K 03
Drier bottle-assembly 3. D 07
Drip moulding finisher clip -RH 4. L 05

Drip moulding finisher seal 4. L 04
Drip moulding finisher-RH 4. L 04
Drip moulding-RH 5. C 11
Drive cable-assembly-RH 4. K 03
Drive clutch 3. C 09

Drive coupling-3mm pin holes 1. G 09
Drive coupling-4mm pin holes 1. G 11
Drive mechanism gear-sunroof 4. K 03
Drive plate adaptor 1. H 14
Drive plate adaptor 1. H 15

Drive plate-assembly 1. H 14
Drive plate-assembly 1. H 15
Drive ring 1. E 11
Driver's door harness 3. F 15
Driver's handbook-English 5. F 02

Driver's oddment box 4. G 06
Driver's seat entry switch 4. E 03
Driving gear 1. J 02
Driving gear 1. I 18
Driving gear-steering pump 2. I 07

Dump valve 1. M 16
Durlock bolt 2. J 03
Durlock bolt 2. J 05
Durlock nut 1. E 04
Durlock nut 3. K 14

Durlock nut 3. K 16
Durlock nut-M10 2. J 07
Dust cap 2. N 03
Dust cap 2. N 06
Dust cover 1. I 18

Dust cover 2. J 15
Dust cover kit 2. N 02
Dust cover kit-guide pin 2. N 04
E-post finisher gasket -RH 4. L 05
E-post finisher insert-RH 4. I

E-post finisher plinth-RH 4. L 05
ECM mounting plate 1. I 09
Earth braid-LH bonnet hinge 3. F 07
Earth strap 3. J 04
Edge clip 1. J 12
Edge clip 3. F 06
Edge clip 3. I 06
Edge clip 3. J 05
Edge clip 4. N 02
Edge clip 4. O 03
Edge clip 4. E 03
Edge clip 4. K 07
Edge clip 4. J 09
Edge clip 4. K 08
Edge clip 4. H 13
Edge clip 4. K 13
Edge clip 4. N 14
Edge clip 4. I 16
Edge clip 4. N 17
Edge clip 4. J 02
Edge clip 4. M 02
Edge clip 5. F 08
Edge clip-A-post-facia 4. G 08
Edge clip-A-post-facia 4. I 14
Edge finisher-lower 4. M 03
Edge nut-M6 1. N 02
Edge protection strip-241mm 1. I 11
Edge protection strip-241mm 1. I 12
Edge protection strip-241mm 1. I 14
Edge protection strip-241mm 1. I 16
Edge protection strip-241mm 2. I 09
Edge protection strip-241mm 3. F 03
Edge protection strip-241mm 4. N 02
Edge protection strip-241mm 4. G 12
Edge seal -340mm 5. C 13
Edge strip-35 75" 1. J 14
Edge strip-35 75" 3. H 07
Edge strip 35 75" 3. H 08
Edge strip-35 75" 4. I 16
Elbow 1. I 02
Elbow 1. I 05
Elbow 1. K 07
Elbow 1. J 08
Elbow 3. D 08
Elbow hose 4. I 04
Elbow setscrew 1. H 07
Elbow setscrew 1. H 08
Elbow setscrew 1. H 09
Elbow setscrew 1. H 10
Elbow-air meter to throttle body-with sensor 1. L 02
Elbow aluminium with mounting boss 1. H 07
Elbow aluminium with mounting boss 1. H 09
Elbow-aluminium with mounting boss 1. H 10
Elbow plastic with mounting boss 1. H 08
Electric aerial assembly 3. J 05
Electrolube grease-2 CX-200ml aerosol 3. L 07
Electrolube grease-2 GX-200ml aerosol 3. L 09
Electrolube grease-2 GX-200ml aerosol 3. L 10
Electronic control module 1. I 14
Electronic control module 3. C 04
Electronic control module 3. D 11
Electronic timer-black-15 minute 1. I 11
Electronic timer-black-15 minute 1. I 13
Emblem-Jaguar 1. G 03
Emblem-Jaguar 1. G 15
Emblem-Jaguar 3.2 1. F 18
Emergency tongue kit 4. F 04
End clutch disc 2. F 04
End cover 3. I 08
End disc 2. F 03
End disc 2. F 07
End disc 2. F 08
End disc 2. F 09
End disc 2. F 10
End disc 2. E 18
End plate 1. G 12
Engine and body earth lead 3. F 04
Engine earth lead 3. F 04
Engine mounting bracket-RH 1. E 04
Engine oil -5 litre 5. F 10
Entry switch escutcheon-chrome 4. E 03
Entry switch link lead 4. E 03
Escutcheon gasket 4. N 14
Escutcheon gasket 4. N 17
Escutcheon ring 3. I 11
Escutcheon ring 3. I 12
Ester oil-500ml-RL100 3. D 07
Evaporative loss flange 1. M 10
Evaporator and seal-assembly 3. D 13
Evaporator drain tube -RH 3. C 02
Evaporator sensor 3. D 11
Exhaust downpipe and catalyst-assembly 2. C 03
Exhaust downpipe and catalyst-assembly 2. C 11
Exhaust downpipe and catalyst-assembly- 2. C 09
Exhaust downpipe and catalyst-spherical 2. C 06
Exhaust downpipe stay 2. C 02
Exhaust downpipe stay 2. C 03
Exhaust downpipe stay 2. C 07
Exhaust downpipe stay 2. C 09
Exhaust downpipe-assembly-front spherical 2. C 08
Exhaust gas recirculation pipe-assembly 1. K 08
Exhaust gas recirculation valve gasket 1. H 03
Exhaust gas recirculation valve gasket 1. H 04
Exhaust gas recirculation valve gasket 1. K 08
Exhaust gas recirculation valve-assembly 1. K 08
Exhaust hanger-assembly 2. C 12
Exhaust hanger-assembly 2. C 14
Exhaust hanger-assembly 2. C 15
Exhaust hanger-assembly 2. C 16
Exhaust hanger-assembly 2. C 17
Exhaust hanger-assembly 2. D 02
Exhaust manifold gasket 1. H 02
Exhaust manifold gasket 1. H 11
Exhaust manifold-front 1. H 11
Exhaust manifold-front 1. H 12
Exhaust mounting 2. C 06
Exhaust mounting 2. C 11
Exhaust mounting cradle-assembly 2. C 12
Exhaust mounting cradle-assembly 2. C 14
Exhaust mounting cradle-assembly 2. C 15
Exhaust mounting cradle-assembly 2. C 16
Exhaust mounting cradle-assembly 2. C 17
Exhaust mounting cradle-assembly 2. C 18
Exhaust mounting rubber 2. C 12
Exhaust mounting rubber 2. C 14
Exhaust mounting rubber 2. C 15
Exhaust mounting rubber 2. C 16
Exhaust mounting rubber 2. C 17
Exhaust mounting rubber 2. D 02
Exhaust pipe clamp 2. C 02
Exhaust pipe clamp 2. C 04
Exhaust pipe clamp 2. C 05
Exhaust pipe clamp 2. C 06
Exhaust pipe clamp 2. C 07
Exhaust pipe clamp 2. C 08
Exhaust pipe clamp 2. C 10
Exhaust pipe clamp 2. C 11
Exhaust pipe clamp 2. C 12
Exhaust pipe clamp 2. C 13
Exhaust pipe clamp 2. C 15
Exhaust pipe clamp 2. C 16
Exhaust pipe clamp 2. C 17
Exhaust pipe clamp 2. C 18
Exhaust silencer-assembly-RH rear 2. C 12
Exhaust silencer-assembly-RH rear 2. C 13
Exhaust silencer-assembly-RH rear 2. C 15
Exhaust silencer-assembly-RH rear 2. C 16
Exhaust silencer-assembly-RH rear 2. C 17
Exhaust silencer-assembly-RH rear 2. C 18
Exhaust tailpipe 2. C 12
Exhaust tailpipe 2. C 13
Exhaust tailpipe 2. C 15
Exhaust tailpipe 2. C 16
Exhaust tailpipe 2. C 17
Exhaust tailpipe 2. C 18
Exhaust tie cable 2. C 02
Exhaust tie cable 2. C 03
Exhaust tie cable 2. C 05
Exhaust tie cable 2. C 09
Exhaust tie stud 2. C 02
Exhaust tie stud 2. C 04
Exhaust tie stud 2. C 05
Exhaust tie stud 2. C 07
Exhaust valve collar 1. G 18
Exhaust valve seat insert 1. G 02
Exhaust valve seat insert 1. G 03
Exhaust valve seat insert 1. F 17
Expander kit 2. N 04
Expanding nut 2. I 05
Expanding nut 2. I 06
Expansion nut 4. H 10
Expansion tank 1. N 03
Expansion valve 3. D 14
Extension case gasket 2. E 04
Facia bracket 2. I 08
Facia bracket 2. I 09
Facia centre and relay bracket strut -RH 4. I 06
Facia end panel -RH-Coffee 4. I 08
Facia end panel -RH-Warm charcoal 4. I 05
Facia end strut 4. I 06
Facia moulding 3. H 10
Facia moulding 3. H 12
Facia panel veneer kit-figured walnut 4. I 09
Facia screw 4. I 06
Facia side panel-assembly-RH 5. C 07
Facia support bracket-RH 4. I 06
Facia switch panel-assembly 3. H 10
Facia switch panel-assembly-speed control 3. H 12
Facia vent -RH facia end vent 4. I 05
Facia vent -centre 4. I 04
Facia-assembly-Coffee 4. I 08
Facia-sub assembly 4. I 03
Facia-sub assembly 4. I 04
Facing plate-assembly-non veneer 3. H 02
Fan cowl-assembly 1. N 07
Fastener 4. G 05
Fastener stud 4. G 06
Fastener-fir tree 4. H 15
Fastener-fir tree 4. H 18
Fastner stud 4. G 06
Fastner stud 4. G 12
Feed hose O-ring 1. L 16
Female connector-0.5mm white cable-AMP 3. F 11
Female connector-Bosch -0.5mm white 3. F 12
Female lucar connector-0.5mm white cable 3. F 11
Female lucar connector-brass finish-0.5mm 3. F 12
Female plug -0.75" bsp 2. H 04
Female plug -0.75" bsp 2. H 08
Female plug -0.75" bsp 2. H 10
Female plug -0.75" bsp 2. H 11
Fender panel -RH rear 5. C 16
Fender side moulding-RH front 4. K 17
Field coil 3. C 10
Field coil 3. C 11
Fill level indicator gauge 1. N 04
Fill level indicator gauge 1. N 05
Filler cap 1. M 08
Filler cap 2. I 05
Filler cap 2. I 06
Filler cap 2. J 18

Filler cap retaining magnet 5. C 12
Filler latch box bolt 1. M 06
Filler latch box bolt 1. M 08
Filler neck O-ring-assembly 3. E 04
Filler plug 2. F 16
Filler plug 2. F 17
Filler tube housing 1. F 02
Filler tube housing 1. F 03
Filter head 1. E 16
Filter head 1. E 17
Filter kit 5. E 15
Final drive oil 5. F 09
Final drive oil-500ml 5. F 10
Finger pull backplate -trimmed 4. H 13
Finger pull base plate 4. H 13
Finisher 4. K 05
Finisher 4. K 08
Finisher 4. K 11
Finisher 4. K 13
Finisher cap 4. F 07
Finisher retainer-lower 4. L 17
Finisher stud 4. G 08
Finisher stud 4. J 10
Finisher stud 4. G 13
Finisher-166mm 3. L 05
Finisher-A-post to facia-RH-Coffee 4. G 09
Finisher-RH 4. L 17
Finisher-RH front door-rear -inner 4. N 06
Finisher-RH-Doeskin 4. G 13
Finisher-RH:LH-lower 4. M 05
Finisher-lower 4. M 04
Fire extinguisher 5. E 02
Firing order chart 1. L 08
Firing order chart 1. L 09
First aid kit 5. E 02
Fixation knob 4. K 02
Fixing bush-stud 4. G 08
Fixing button-Coffee 4. H 16
Fixing button-for colour codes see front of 4. H 15
Fixing clamp -RH front-handle to door 4. N 13
Fixing knob 3. K 14
Fixing knob 3. K 16
Fixing knob 4. I 16
Fixing plate 2. E 10
Fixing strap 4. N 16
Flag connector-non Kiekert-0.5mm white 3. F 12
Flange finisher 3. F 03
Flange finisher-roof aperture-Savile grey 4. K 02
Flange head bolt 1. M 03
Flange head bolt 1. M 08
Flange head bolt 1. M 02
Flange head screw 1. J 02
Flange head screw 1. E 06
Flange head screw 1. G 06
Flange head screw 1. E 08
Flange head screw 1. H 07
Flange head screw 1. K 08
Flange head screw 1. H 09
Flange head screw 1. L 10
Flange head screw 1. E 12
Flange head screw 1. N 12
Flange head screw 2. M 07
Flange head screw 2. J 10
Flange head screw 2. E 11
Flange head screw 2. J 12
Flange head screw 2. G 17
Flange head screw 3. E 04
Flange head screw 3. E 05
Flange head screw 4. N 02
Flange head screw 4. K 07
Flange head screw 4. K 08
Flange head screw-M6 1. N 03
Flange head screw-M6 1. G 05
Flange head screw-M6 1. G 07
Flange head screw-M6 1. G 08
Flange head screw-M6 1. H 08
Flange head screw-M6 1. H 10
Flange head screw-M6 1. E 13
Flange head screw-M6 1. E 15
Flange head screw-M6 1. L 15
Flange head screw-M6 2. I 05
Flange head screw-M6 2. C 06
Flange head screw-M6 2. C 11
Flange head screw-M6 3. L 09
Flange nut-M6 1. N 04
Flange nut-M6 1. N 05
Flange nut-M6 1. L 11
Flange nut-M6 1. L 16
Flange nut-M6 2. C 02
Flange nut-M6 2. C 03
Flange nut-M6 2. K 03
Flange nut-M6 2. C 07
Flange nut-M6 2. C 09
Flange nut-M6 2. C 11
Flange nut-M6 3. I 03
Flange nut-M6 4. N 12
Flange screw 1. I 13
Flange screw 1. I 14
Flange screw 1. G 15
Flange screw 1. I 16
Flange screw 2. M 07
Flange screw 2. C 14
Flange screw 2. C 15
Flange screw 2. C 16
Flange screw 2. C 17
Flange screw 2. C 18
Flange screw 3. C 13
Flange screw 3. C 18
Flange screw-M5 3. I 08
Flange screw-M5 3. I 09
Flange screw-M5 3. D 14
Flange screw-M5 4. N 04
Flange screw-M8 1. L 04
Flange screw-M8 1. N 09
Flange screw-M8 1. G 11
Flange screw-M8 1. H 11
Flange screw-M8 1. E 13
Flange screw-M8 1. E 14
Flange screw-M8 2. J 08
Flange screw-M8 2. C 12
Flange screw-M8 3. I 03
Flange screw-M8 4. K 02
Flange sealer-50ml tube 5. F 10
Flange sealing ring 2. C 03
Flange sealing ring 2. C 07
Flange sealing ring 2. C 09
Flanged bush 1. L 13
Flanged head screw 1. I 02
Flanged head screw 1. K 02
Flanged head screw 1. J 03
Flanged head screw 1. M 07
Flanged head screw 1. L 09
Flanged head screw 1. L 10
Flanged head screw 1. J 14
Flanged head screw 1. M 14
Flanged head screw 1. M 15
Flanged head screw 1. J 18
Flanged head screw 4. K 02
Flanged head screw 4. G 05
Flanged head screw 4. K 06
Flanged head screw 4. K 09
Flanged head screw 4. D 11
Flanged head screw 4. K 13
Flanged head screw 4. D 15
Flanged head screw 4. K 16
Flanged head screw 4. G 18
Flanged head screw 4. L 02
Flanged head screw-M5 3. I 02
Flanged head screw-M5 3. I 03
Flanged head screw-M5 4. N 03
Flanged head screw-M5 4. K 11
Flanged head screw-M8 2. G 14
Flanged head screw-M8 2. H 02
Flanged head screw-no.10 x 0.625" 3. F 02
Flanged head screw-no.10 x 0.625" 3. F 18
Flanged nut -8mm 1. E 05
Flanged nut -8mm 2. I 04
Flanged nut -8mm 3. I 02
Flanged nut -8mm 3. K 03
Flanged nut -8mm 3. K 08
Flanged nut -M8 1. N 06
Flanged nut -M8 1. H 08
Flanged nut -M8 1. H 10
Flanged nut -M8 1. I 14
Flanged nut -M8 1. G 15
Flanged nut -M8 1. I 16
Flanged nut -M8 1. M 16
Flanged nut -M8 1. E 17
Flanged nut -M8 2. G 05
Flanged nut -M8 2. G 06
Flanged nut -M8 2. G 07
Flanged nut -M8 2. G 08
Flanged nut -M8 2. I 08
Flanged nut -M8 2. I 09
Flanged nut -M8 2. M 13
Flanged nut -M8 3. I 03
Flanged nut -M8 3. M 03
Flanged nut -M8 3. M 04
Flanged nut -M8 3. M 05
Flanged nut -M8 3. I 09
Flanged nut -M8 4. K 12
Flanged nut -M8 4. K 14
Flap handle kit -RH 4. N 17
Flat head rivet 4. I 07
Flat speed nut 2. E 09
Flat washer 4. I 07
Flat washer 4. J 16
Flat washer 4. D 18
Flexible hose washer 2. G 05
Flexible hose washer 2. G 06
Flexible jurid coupling 2. G 12
Flexible jurid coupling 2. G 13
Flexible jurid coupling 2. G 16
Flexible jurid coupling 2. G 18
Flexible printed circuit 3. H 03
Flexible printed circuit 3. H 05
Floor carpet-RH front 4. I 10
Floor carpet-RH front-Coffee/Cream 4. I 13
Floor carpet-RH rear 4. I 11
Floor insulation -RH rear 4. J 02
Floor jacking bracket 5. C 06
Floor panel-RH front 4. I 18
Floor panel-RH rear 4. J 02
Floor/tunnel heatshield 2. D 03
Fluid level warning indicator 2. M 13
Flywheel 2. F 18
Flywheel-assembly 2. G 02
Foam block 3. J 07
Foam block-side harness packing-PVC 3. F 03
Foam buffer 1. E 05
Foam buffer 1. E 06
Foam buffer 1. E 07
Foam disc 2. G 03
Foam disc 2. G 04
Foam insert 3. F 03
Foam insert 4. H 09
Foam pad 3. F 18
Foam pad 5. C 14
Foam strip 4. E 02
Foam washer 4. K 02

Fog guard lamp grommet ... 3. K 18
Fog guard lamp lens-assembly-plain lens ... 3. K 18
Fog lamp bracket ... 4. K 08
Fog lamp bulb-H2 12v-55w-halogen ... 3. K 17
Fog lamp fitting kit-front ... 3. K 17

Fog lamp fitting kit-front ... 4. K 05
Fog lamp fitting kit-front ... 4. K 08
Fog lamp kit-clear lens ... 3. K 17
Fog lamp lens/reflector -clear lens ... 3. K 17
Fog lamp-clear lens ... 3. K 17

Fog lamp-yellow lens ... 5. E 07
Fog/reflex lamp-assembly-rear -plain lens ... 3. K 18
Footrest rubber pad ... 4. I 12
Footrest rubber pad ... 4. I 13
Footrest-assembly-less rubber ... 4. I 12

Footrest-assembly-less rubber ... 4. I 13
Footwell rug-front-LH ... 4. I 17
Fore and aft motor ... 4. D 18
Forecourt data card-English ... 5. F 04
Fork end-assembly ... 2. M 14

Fork end-assembly ... 2. M 16
Free wheel ... 2. F 03
Free wheel ... 2. F 04
Free wheel ... 2. F 08
Free wheel assembly kit ... 2. F 07

Free wheel cage ... 2. F 07
Free wheel ring ... 2. F 07
Free wheel ring ... 2. F 08
Friction bush ... 4. I 09
Friction bush ... 4. K 15

Friction bush ... 4. K 16
Friction bush cup ... 4. L 05
Friction bush stay ... 4. H 05
Friction bush-clear ... 4. J 10
Friction bush-short ... 3. K 03

Friction bush-short ... 4. I 07
Friction bush-short ... 4. G 06
Friction bush-short ... 4. G 08
Friction bush-short ... 4. G 12
Friction bush-short ... 4. G 13

Friction disc ... 2. F 03
Friction disc ... 2. E 18
Friction plate ... 2. F 07
Friction plate ... 2. F 09
Friction plate ... 2. F 10

Front pump assembly ... 2. F 13
Front pump assembly ... 2. F 14
Fuel and brake pipe assembly ... 1. M 04
Fuel and brake pipe assembly ... 1. L 18
Fuel feed hose assembly ... 1. L 16

Fuel feed hose assembly ... 1. M 02
Fuel feed hose assembly under floor pipe to ... 1. M 03
Fuel feed pipe ... 1. M 03
Fuel feed pipe ... 1. L 16
Fuel feed pipe ... 1. L 18

Fuel filler cap ... 1. M 06
Fuel filler flap link harness ... 3. F 08
Fuel filler latch box ... 1. M 06
Fuel filler latch box-electrical release ... 1. M 08
Fuel filler lid ... 5. C 12

Fuel filler lid hinge ... 5. C 12
Fuel filler neck/cap-assembly ... 1. M 08
Fuel filler reinforcement panel ... 5. C 12
Fuel filler release arm-assembly ... 1. M 08
Fuel filter ... 1. L 15

Fuel filter ... 1. L 16
Fuel filter adaptor ... 1. M 05
Fuel filter clamp ... 1. L 16
Fuel hose ... 1. M 06
Fuel hose ... 1. L 17

Fuel hose bracket ... 1. M 14
Fuel hose guide ... 1. M 13
Fuel hose guide ... 1. M 15
Fuel hose-1295mm ... 1. I 02
Fuel hose-1295mm ... 1. I 05

Fuel hose-1400mm ... 1. I 04
Fuel hose-1400mm ... 1. M 04
Fuel hose-assembly ... 1. L 15
Fuel hose-assembly-pump to filter ... 1. M 05
Fuel hose-assembly-service only ... 1. M 03

Fuel hose-feed/return-in tank ... 1. M 10
Fuel injector ... 1. M 13
Fuel injector ... 1. M 14
Fuel injector ... 1. M 15
Fuel pressure regulator ... 1. M 13

Fuel pressure regulator ... 1. M 15
Fuel pressure regulator-inlet ... 1. M 14
Fuel pump ... 1. M 05
Fuel pump link harness ... 3. F 17
Fuel pump module ... 1. M 10

Fuel pump protection module ... 1. M 10
Fuel rail ... 1. M 13
Fuel rail ... 1. M 14
Fuel rail ... 1. M 15
Fuel return hose-assembly ... 1. L 16

Fuel return hose-assembly ... 1. M 02
Fuel return hose-assembly-regulator to ... 1. M 03
Fuel return hose-in tank ... 1. M 10
Fuel return pipe ... 1. M 03
Fuel return pipe ... 1. L 16

Fuel return pipe ... 1. L 18
Fuel tank ... 1. M 09
Fuel tank insulation pad ... 4. J 03
Fuel tank insulation pad-anti rattle ... 3. L 12
Fuel tank seal ... 1. M 09

Fuel tank seal ... 1. M 10
Fuel tank sender unit ... 1. M 10
Fuel tank sender unit-steel ... 1. M 09
Fuel tank side pad-RH ... 4. J 03
Fuel tank-assembly-unleaded fuel ... 1. M 10

Fuel tank-assembly-unleaded fuel ... 1. M 11
Fuel tank-assembly-unleaded fuel ... 1. M 12
Fulcrum bolt nut ... 2. J 16
Fulcrum bolt washer-steel and nylon ... 2. J 16
Fulcrum bush-lower ... 2. J 04

Fulcrum bush-lower ... 2. J 05
Fulcrum shaft and nut-assembly-lower ... 2. J 04
Fulcrum shaft and nut-assembly-lower ... 2. J 05
Fulcrum shaft and nut-assembly-lower ... 2. I 15
Fulcrum shaft and nut-assembly-lower ... 2. I 16

Fulcrum tie-lower ... 2. I 15
Fulcrum tie-lower ... 2. I 16
Fume baffle panel -sub assembly-RH rear ... 5. C 13
Fume baffle sealing strip -203mm ... 5. C 13
Fuse ... 1. M 08

Fuse extractor ... 1. J 11
Fuse extractor ... 5. E 14
Fuse holder ... 1. J 15
Fuse label-RH side ... 1. J 11
Fuse-10 amp -red ... 1. J 15

Fuse-3 amp-violet ... 1. J 10
Fuse-3 amp-violet ... 3. H 08
Fuse-3 amp-violet ... 3. F 18
Fuse-30 amp-light green ... 1. J 09
Fusebox cover-Warm charcoal ... 4. H 05

Fusebox module-RH-14 fuse ... 1. J 10
Fusebox mounting bracket ... 1. J 10
Fused link lead ... 3. L 12
Fused link lead ... 5. E 10
Fused link lead ... 5. E 11

Gaiter ... 1. M 08
Gaiter ... 2. I 18
Gaiter clip ... 2. G 11
Gaiter clip ... 2. G 12
Gaiter clip rubber ... 2. G 11

Gaiter clip rubber ... 2. G 12
Gaiter sealing ring ... 2. I 10
Gaiter sleeve ... 2. I 10
Gasket ... 1. H 02
Gasket ... 1. K 03

Gasket ... 1. H 07
Gasket ... 1. N 09
Gasket ... 2. E 05
Gasket ... 2. E 06
Gasket ... 2. M 08

Gasket ... 2. G 09
Gasket ... 2. M 11
Gasket ... 3. L 02
Gasket ... 3. C 05
Gasket ... 3. D 13

Gasket ... 4. N 04
Gasket ... 4. K 07
Gasket ... 4. K 10
Gasket ... 4. K 12
Gasket ... 4. K 14

Gasket ... 4. N 16
Gasket ... 4. G 18
Gasket ... 5. C 14
Gasket kit ... 3. C 10
Gasket kit ... 3. C 11

Gasket-LH ... 2. M 15
Gasket-LH ... 2. M 16
Gasket-RH ... 4. M 08
Gasket-RH-front handle to door ... 4. N 13
Gear change housing -assembly ... 2. G 04

Gear change knob ... 2. E 14
Gear change knob-assembly ... 2. G 03
Gear change knob-assembly ... 2. G 04
Gear change mounting pedestal-LH non ... 2. G 03
Gear control cable-assembly ... 2. E 12

Gear lever gaiter-manual ... 4. H 07
Gear lever grommet ... 4. G 18
Gear selector illumination module-assembly ... 2. E 14
Gear selector illumination module-assembly ... 3. L 11
Gearbox control module ... 1. I 17

Gearbox cover plate ... 4. G 18
Gearbox decoder module ... 1. J 15
Gearbox decoder module ... 1. I 17
Gearbox extension case breather ... 2. E 04
Gearbox extension housing-rear ... 2. E 04

Gearbox insulation pad ... 4. G 18
Gearbox insulation pad ... 4. J 02
Gearbox internal harness ... 2. E 08
Gearbox mounting bracket ... 1. E 05
Gearbox mounting bracket ... 1. E 06

Gearbox side carpet-RH-Coffee ... 4. I 13
Gearbox tunnel carpet -RH ... 4. I 10
Gearbox tunnel pad-front ... 4. I 18
Gearshift aperture finisher ... 4. H 07
Gearshift hand lever ... 2. E 14

Gearshift surround-Coffee ... 4. H 03
Gearshift surround-leather-Warm charcoal ... 4. H 07
Glass bonding adhesive ... 4. M 04
Glass bonding adhesive ... 4. L 17
Glass cleaner -300ml ... 5. F 09

Glass frame seal -RH ... 4. N 10
Glass frame seal -RH front door ... 4. N 06
Glass frame/outer cheater plate-LH rear door- ... 4. N 09
Glass frame/outer cheater plate-RH rear door- ... 4. N 08
Glazing clip ... 4. M 04

Glovebox ... 4. J 06
Glovebox access cover ... 4. I 05
Glovebox access cover ... 4. J 07
Glovebox lid checkarm ... 4. J 05
Glovebox lid lock striker ... 4. J 06

Glovebox lid-assembly-Warm charcoal ... 4. J 05
Glovebox lid-formed-Coffee ... 4. I 08
Glovebox lock bezel -chrome ring ... 4. J 06
Glovebox lock knob ... 4. J 06
Glovebox lock-assembly ... 4. J 07

Glovebox mounting plate 1. J 14
Glovebox vanity tray 4. J 06
Governor-assembly 2. F 09
Grass shield-intermediate silencer 2. D 02
Grass shield-outlet pipe 2. C 17

Grease cap 2. J 02
Grille duct -RH 4. K 04
Grille duct -RH 4. L 13
Grip nut 4. L 13
Grip nut -M6 2. M 09

Grip nut -M6 2. M 11
Grip nut -M6 4. G 12
Grip nut -frame to door 4. I 06
Grip nut -frame to door 4. N 05
Grip nut -frame to door 4. N 09

Grommet 1. N 03
Grommet 1. M 06
Grommet 1. M 07
Grommet 1. N 07
Grommet 1. L 08

Grommet 1. M 08
Grommet 1. L 12
Grommet 2. M 02
Grommet 2. M 06
Grommet 2. M 07

Grommet 3. E 02
Grommet 3. K 12
Grommet 3. K 18
Grommet 4. N 02
Grommet 5. C 03

Grommet strip -197mm 4. J 04
Grommet-0.125" bsp 3. L 09
Grommet-0.125" bsp 3. L 12
Grommet-front mounting 1. N 04
Grommet-front mounting 1. N 05

Grommet-lower 1. N 08
Grommet-lower 3. D 07
Grommet-lower 5. C 04
Grommet-rubber 2. K 02
Grommet-rubber 2. I 06

Grommet-rubber 2. J 18
Grommet-side harness to body side -RH 3. F 02
Gudgeon pin 1. F 10
Gudgeon pin 1. F 11
Guide block 4. K 06

Guide block 4. K 09
Guide block mounting bracket 4. K 12
Guide block mounting bracket 4. K 14
Guide block mounting bracket -RH 4. K 07
Guide block mounting bracket -RH 4. K 10

Guide block-rear 4. K 12
Guide block-rear 4. K 14
Guide bush 2. J 14
Guide piece 2. F 11
Guide piece 2. F 12

Guide pin kit 2. N 02
Guide pin kit-axle set 2. N 04
Guide sheet 2. F 11
Guide sheet 2. F 12
Guiding pin 2. N 03

Guiding pin 2. N 06
Halfshaft spacer-3.5mm 2. G 10
Halfshaft-assembly 2. G 10
Hand wheel-recline mechanism 4. C 06
Hand wheel-recline mechanism 4. C 12

Handbrake blanking plate 2. M 15
Handbrake blanking plate 2. M 16
Handbrake cable circlip 2. M 15
Handbrake cable circlip 2. M 16
Handbrake cable equaliser 2. M 14

Handbrake cable equaliser 2. M 16
Handbrake cable-RH rear 2. N 05
Handbrake cable-RH rear 2. M 14
Handbrake cable-RH rear 2. M 16
Handbrake gaiter-Cream 4. H 03

Handbrake gaiter-for colour codes see front 4. H 08
Handbrake lever-sub assembly 2. M 14
Handbrake lever-sub assembly 2. M 16
Handbrake switch -assembly-RH 2. M 17
Handbrake switch/harness-assembly-RH 2. M 17

Handle aperture reinforcement 5. C 18
Handwheel escutcheon -lumbar support 4. C 07
Handwheel escutcheon -lumbar support 4. D 03
Handwheel escutcheon -lumbar support 4. C 13
Handwheel escutcheon -lumbar support 4. D 02

Harness 2. M 17
Harness bracket 1. G 03
Harness bracket 1. F 18
Harness clip 1. N 04
Harness clip 1. N 05

Harness clip-power seat 5. F 08
Harness grommet 2. N 08
Harness grommet 3. F 02
Harness grommet 3. F 03
Harness kit 3. J 04

Harness link 3. F 06
Harness resistive plug 3. K 17
Harness shield 3. H 15
Harness shield clip 3. H 15
Hazard warning label-bonnet liner 4. J 04

Header panel-assembly-rear -Savile grey 4. J 10
Header panel-rear 5. C 10
Header tank 1. N 03
Header tank 1. N 04
Header tank-assembly 1. N 05

Headlamp 3. K 06
Headlamp bezel finisher 4. L 14
Headlamp bezel-LH 3. K 08
Headlamp bezel-RH 4. L 14
Headlamp bulb-65 amp-halogen-low beam 3. K 09

Headlamp cover panel -RH 4. L 15
Headlamp fusebox bracket 3. I 09
Headlamp powerwash pump 3. E 07
Headlamp retainer 3. K 03
Headlamp rim seat-RH-inner 3. K 02

Headlamp rim seat-RH-inner 3. K 03
Headlamp shield 3. K 03
Headlamp surround -RH 3. K 09
Headlamp trimmer screw kit 3. K 02
Headlamp trimmer screw kit 3. K 03

Headlamp-assembly-LH 3. K 05
Headlamp-assembly-LH-less bulb 3. K 07
Headlamp-assembly-LH-styled lamp 3. K 04
Headlamp-assembly-RH-styled 3. K 09
Headlamp-inner-quad lamp 3. K 02

Headlamp-inner-quad lamp 3. K 03
Headrest 4. D 03
Headrest 4. D 15
Headrest escutcheon/fixing bracket-cloth trim 4. C 06
Headrest escutcheon/fixing bracket-cloth trim 4. C 12

Headrest escutcheon/fixing bracket-leather 4. D 02
Headrest lamp harness 3. F 17
Headrest lamp link harness 3. F 17
Headrest lamp-assembly 3. L 05
Headrest retaining clip 4. D 02

Headrest-cloth-front 4. C 06
Headrest-cloth-front 4. C 12
Headrest-cloth-front 4. C 18
Headrest-cloth-rear 4. D 05
Headrest-cloth-rear 4. D 09

Headrest-cloth-rear 4. D 12
Headrest-leather-rear 4. D 06
Heated jet sensor 3. E 03
Heated oxygen sensor 1. J 12
Heated powerwash jet -assembly-RH-quad 3. E 07

Heated screenwash jet 3. E 02
Heated seat and interior light harness 3. F 16
Heater blower motor-assembly-RH 3. C 07
Heater cable -110v-assembly 1. N 11
Heater control panel 3. D 09

Heater element 1. K 04
Heater element 1. K 06
Heater feed adaptor 1. G 03
Heater feed adaptor 1. F 18
Heater feed nose 3. D 15

Heater feed pipe 1. N 09
Heater harness 3. C 03
Heater matrix 3. C 05
Heater matrix 3. D 13
Heater return hose 1. N 09

Heater return hose 1. N 10
Heater valve 3. D 15
Heater-assembly 3. C 03
Heatshield 1. H 11
Heatshield 1. H 12

Heatshield edge strip 3. I 02
Heatshield edge strip 3. I 03
Heatshield spherical clamp joint 2. C 10
Heatshield spherical clamp joint 2. C 11
Heatshield-assembly-outlet pipe-RH 2. C 14

Heatshield-assembly-outlet pipe-RH 2. C 16
Heatshield-assembly-outlet pipe-RH 2. D 02
Heelboard carpet-RH 4. I 12
Heelboard carpet-RH-Coffee/Cream 4. I 13
Heelboard harness tube 3. F 02

Heelboard pad -RH 4. J 02
Height sensor bracket 2. K 06
Helicoil nut 2. C 10
Helicoil nut 2. C 11
Hermetite paste -140g tube 1. K 08

Hexagon head paint clearing screw 5. C 04
Hexagon head screw 2. F 13
Hexagon head screw 2. F 14
Hexagon head screw 5. D 02
Hexagon head setscrew 2. C 07

Hexagon head setscrew 2. J 08
Hexagon head setscrew 2. J 13
Hexagon head setscrew-M6 2. M 07
Hexagon head setscrew-M6 5. C 13
Hexagon head setscrew-coarse 2. M 14

Hexagon head setscrew-coarse 2. M 16
Hexagon socket cap screw 2. N 06
Hexagonal head bolt 2. J 07
Hexagonal head bolt 2. J 13
Hexagonal nut 3. D 02

Hexagonal nut 3. D 03
Hexagonal nut 3. D 04
Hexagonal nut 3. D 05
Hexagonal nut 3. D 06
Hexagonal nut 3. I 09

Hexagonal nut 3. I 10
Hexagonal nut 3. C 13
Hexagonal nut 3. C 18
Hexagonal nut-0.375" unf 1. J 06
Hexagonal nut-M12 2. I 02

Hexagonal nut-M12 2. I 03
Hexagonal nut-M6 2. E 11
Hide care-11oz jar 5. F 09
High mounted stop lamp-assembly-Warm 3. K 13
High pressure hose 2. M 07

High pressure hose-assembly-pump to 2. I 06
High pressure hose-pump to block 2. J 18
High pressure hose-pump to steering rack 2. I 05
High pressure relief valve 3. C 10
High pressure relief valve 3. C 11

High side low pressure switch 3. C 09
Hinge 4. J 05
Hinge and plunger kit 5. C 12
Hinge stop clip 4. H 02
Horn kit 3. M 05

Horn link harness 3. M 03
Horn link harness 3. M 04
Horn link harness 3. M 05
Horn mounting bracket 3. M 04
Horn mounting bracket-assembly 3. M 03
Horn mounting bracket-assembly 3. M 05
Horn-assembly-high tone 3. M 05
Horn-assembly-low tone 3. M 04
Horn-high tone 3. M 03
Hose 1. I 02
Hose 1. K 02
Hose 1. F 03
Hose 1. K 04
Hose 1. N 04
Hose 1. K 05
Hose 1. N 05
Hose 1. N 09
Hose 1. M 10
Hose 1. N 10
Hose 1. N 11
Hose 1. N 12
Hose 1. N 13
Hose 1. N 14
Hose 1. L 17
Hose 1. J 18
Hose 2. K 02
Hose 2. M 07
Hose 3. I 02
Hose 3. D 14
Hose 3. D 15
Hose band 1. J 07
Hose band 1. K 07
Hose band 1. J 08
Hose clip 1. I 02
Hose clip 1. K 02
Hose clip 1. L 02
Hose clip 1. N 02
Hose clip 1. I 03
Hose clip 1. N 03
Hose clip 1. I 04
Hose clip 1. K 04
Hose clip 1. M 04
Hose clip 1. N 04
Hose clip 1. I 05
Hose clip 1. K 05
Hose clip 1. N 05
Hose clip 1. K 06
Hose clip 1. M 08
Hose clip 1. N 09
Hose clip 1. N 10
Hose clip 1. N 11
Hose clip 1. N 12
Hose clip 1. N 13
Hose clip 1. N 14
Hose clip 1. L 17
Hose clip 2. K 02
Hose clip 2. I 05
Hose clip 2. I 06
Hose clip 2. M 07
Hose clip 2. J 18
Hose clip 3. E 08
Hose clip 3. D 15
Hose clip 4. K 03
Hose mounting bracket 1. G 03
Hose mounting bracket 1. F 18
Hose mounting bracket 2. M 07
Hose mounting bracket 2. J 18
Hose sleeve 1. J 12
Hose support clip 1. N 09
Hose support clip 1. N 10
Hose-1220mm 1. I 04
Hose-140" 3. D 12
Hose-1500mm 1. I 09
Hose-1500mm 1. I 13
Hose-1500mm 1. J 15
Hose-40mm 1. I 05
Hose-75mm 1. I 03
Hose-filler pipe to restrictor 1. K 06
Hose-pump to aircleaner 1. J 05
Hose-return 2. I 05
Hose-return 2. I 06
Hose-trumpet to air box 1. L 02
Housing 1. G 04
Housing clip 2. N 03
Housing clip 2. N 06
Housing gasket 1. H 02
Housing gasket 1. H 03
Housing gasket 1. H 04
Housing gasket 1. H 05
Housing gasket 1. H 06
Housing gasket 1. G 12
Housing gasket 1. E 18
Hub bearing kit 2. J 02
Hub bearing kit 2. J 10
Hub bearing kit 2. J 12
Hub bearing-assembly 2. J 02
Hub bearing-inner 2. J 12
Hub bearing-rear -outer 2. J 09
Hub bearing-rear -outer 2. J 11
Hub cap 2. K 10
Hub cap screw 2. L 02
Hub cap screw 2. K 12
Hub cap wrench 5. E 12
Hub cap-flush nave-plastic 2. K 09
Hub cap-flush nave-plastic 2. K 14
Hub cap-flush nave-plastic 5. E 08
Hub cap-holed 2. K 08
Hub cap-holed 2. K 15
Hub carrier shield -RH 2. J 10
Hub carrier shield -RH 2. J 12
Hub carrier-RH 2. J 12
Hub carrier-RH rear 2. J 09
Hub nut 2. J 09
Hub nut 2. J 11
Hub oil seal -front 2. J 02
Hub-assembly-rear 2. J 09
Hub-assembly-rear 2. J 11
Hub-sub assembly 2. J 02
Hydraulic System Mineral Oil 5. F 10
Hydraulic clutch pipe 2. G 06
Hydraulic pipe 2. M 04
Hydraulic pipe 2. M 05
Hydraulic pipe 2. M 06
Hydraulic pipe-RH 2. G 05
Hydraulic pipe-RH 2. G 06
Hydraulic pipe-accumulator to solenoid 2. K 02
Hydraulic pipe-assembly 2. M 03
Hydraulic pipe-assembly-RH 2. J 15
Hydraulic pipe-primary master cylinder to 2. M 02
Hydraulic pipe-pump unit to anti skid unit 2. M 12
Hydraulic pump 1. E 11
Hylomar sealant -110g tube 5. F 10
Hylosil sealant-RTV-110g tube 5. F 10
Ice scraper 5. F 09
Idle air adaptor 1. H 07
Idle air adaptor 1. H 09
Idle air valve 1. K 02
Idle air valve gasket 1. H 02
Idle air valve gasket 1. K 02
Idle air valve gasket 1. H 05
Idle air valve gasket 1. H 06
Idle air valve hose-intake elbow to valve 1. K 03
Idle air valve-speed control 1. K 03
Idle speed actuator 1. J 18
Idle speed valve gasket-valve to manifold 1. H 02
Idle speed valve gasket-valve to manifold 1. H 05
Idle speed valve gasket-valve to manifold 1. H 06
Idle speed valve gasket-valve to manifold 1. K 03
Ignition amplifier module-assembly 1. J 03
Ignition coil 1. J 03
Ignition coil suppressor 1. J 03
Ignition column lock switch 3. I 12
Ignition control module 1. I 06
Ignition control module 1. I 13
Ignition lock slave barrel 3. I 11
Ignition sensor mounting bracket 1. G 05
Ignition sensor mounting bracket 1. G 06
Ignition sensor mounting bracket 1. G 07
Ignition switch-assembly 3. I 11
Ignition timing kit-unleaded fuel conversion 1. G 08
In car sensor 3. D 12
In line filter 2. J 18
In line fuse 1. J 15
In-line connector 2. M 15
In-line connector 2. M 16
Induction manifold 1. H 07
Induction manifold adaptor 1. H 08
Induction manifold adaptor 1. H 10
Induction manifold-with decal valve 1. H 08
Induction manifold-with decal valve 1. H 09
Induction manifold-with decal valve 1. H 10
Inertia reel kick shield -RH 4. F 02
Inertia switch 1. J 09
Inertia switch mounting bracket 1. J 09
Infant carrier 5. E 03
Infra red locking system kit 3. M 02
Injector O-ring kit 1. M 13
Injector O-ring kit 1. M 14
Injector O-ring kit 1. M 15
Inlet manifold gasket 1. H 03
Inlet manifold gasket 1. H 04
Inlet manifold gasket 1. H 08
Inlet manifold gasket 1. H 09
Inlet manifold gasket 1. H 10
Inlet pipe-gasket sealing 3. C 05
Inlet pipe-gasket sealing 3. D 13
Inlet valve collar 1. G 18
Inlet valve seal 1. H 02
Inlet valve seal 1. H 03
Inlet valve seal 1. H 04
Inlet valve seal 1. F 13
Inlet valve seal 1. G 18
Inlet valve seat insert 1. G 02
Inlet valve seat insert 1. G 03
Inlet valve seat insert 1. F 17
Inner seal 2. J 09
Inner seal 2. J 12
Inner sealing strip 4. M 04
Inner sealing strip 4. L 17
Input shaft 2. E 16
Input shaft 2. E 17
Insert-recline mechanism hand wheel 4. C 06
Insert-recline mechanism hand wheel 4. C 12
Installation kit 5. E 08
Installation kit-high mounted stop lamp 3. K 13
Installation kit-high mounted stop lamp 4. M 04
Instruction tape 3. J 02
Instruction tape 3. J 04
Instrument cowl pad 4. I 05
Instrument cowl pad-Coffee 4. I 08
Instrument display mask -figured walnut 3. H 03
Instrument display mask -figured walnut 3. H 04
Instrument display module 3. H 05
Instrument display module-Mph 3. H 03
Instrument display module-Mph 3. H 04
Instrument pack-Mph-remanufactured unit 3. H 02
Instrumount 1. L 02
Instrumount 1. F 04
Instrumount 1. L 08
Instrumount 1. L 09

Instrumount 1. J 18
Instrumount 3. D 07
Instrumount-2 bolt 1. L 16
Insulating bush 1. F 04
Insulation pad-rear 4. J 03

Insulation sleeve 3. F 02
Insulation sleeve 3. L 03
Insulation sleeve-38" 1. M 05
Insulator 1. E 04
Insulator kit 2. N 07

Intake tube valance seal 1. L 09
Interface connector kit 3. J 04
Interface unit mounting bracket 1. J 15
Interface unit-trip computer 1. J 15
Interior reading lamp link harness 3. F 17

Interior rear view mirror 4. I 02
Intermediate air duct -RH 4. G 05
Intermediate exhaust pipe-assembly- 2. C 06
Intermediate exhaust pipe-assembly- 2. C 11
Intermediate exhaust pipe/catalyst 2. C 02

Intermediate exhaust pipe/catalyst 2. C 03
Intermediate exhaust pipe/catalyst 2. C 05
Intermediate exhaust pipe/catalyst 2. C 09
Intermediate exhaust pipe/silencer 2. C 07
Intermediate exhaust pipe/silencer 2. C 08

Intermediate exhaust silencer-RH 2. C 17
Intermediate exhaust silencer-assembly-RH 2. C 12
Intermediate exhaust silencer-assembly-RH 2. C 13
Intermediate exhaust silencer-assembly-RH 2. C 15
Intermediate exhaust silencer-assembly-RH 2. C 16

Intermediate exhaust silencer-assembly-RH 2. C 18
Intermediate handbrake cable 2. M 14
Intermediate handbrake cable 2. M 16
Intermediate plate 2. F 14
Intermediate plate-assembly 2. F 13

Intermediate shaft 1. G 09
Intermediate shaft 2. F 15
Intermediate shaft and sprocket 1. G 11
Intermediate shaft cover plate 1. G 06
Intermediate shaft cover plate 1. G 07

Intermediate shaft oil seal 1. H 02
Intermediate shaft oil seal 1. H 05
Intermediate shaft oil seal 1. H 06
Intermediate shaft oil seal 1. G 05
Intermediate shaft oil seal 1. G 06

Intermediate shaft oil seal 1. G 07
Intermediate shaft oil seal 1. G 08
Isolator-lower 2. J 15
Isolator-upper 2. J 14
J-connector 3. E 08

J-gate finisher -rubber 4. H 07
J-gate seal spacer 2. E 15
J-plate side mounting plate 3. H 15
JDS adaptor -no 1 5. E 15
JDS adaptor -no 1 5. E 16

JDS adaptor kit-black 5. E 16
JDS adaptor kit-red 5. E 15
Jack handle-ratchet 5. E 12
Jacking bracket-RH rear 5. C 15
Jaguar AC 90-200ml aerosol 5. F 10

Jet cover 3. E 08
Joint clip 4. M 04
Joint clip 4. L 17
Joint clip-upper 4. M 05
Joint pin 2. G 05

Joint pin 2. G 06
Joint pin 2. M 09
Joint pin 2. M 10
Joint pin 2. M 13
Jubilee clip 1. I 03

Keeper plate 1. M 02
Key 3. C 09
Key blank -illuminated spindle type 4. N 13
Key blank -no.1 precut-blade type 4. N 04
Key blank -no.1 precut-blade type 4. N 16

Kickdown cable 2. F 11
Kickdown cable O-ring seal 2. E 02
Kickdown switch 1. L 11
Kickdown switch 1. L 13
Kit 3. J 06

Kit-front spoiler 4. K 04
Label-24 way 4. G 04
Lamp cluster-assembly-RH 3. K 14
Lamp cluster-assembly-RH rear 3. K 15
Lamp cluster-assembly-RH rear 3. K 16

Lamp cover -RH rear 4. I 16
Lamp gasket -rear 3. K 14
Lamp gasket -rear 3. K 16
Lamp lens-assembly-headrest 3. L 05
Lamp lens-under bonnet 3. L 03

Lamp panel-RH 5. C 16
Lamp switch-under bonnet 3. L 03
Lamp-assembly-RH front 3. K 10
Lap belt/buckle-assembly-rear 4. F 09
Lapbelt-RH 4. F 02

Leather cleaner -300ml 5. F 09
Leg spring 2. F 11
Leg spring 2. F 12
Lens 3. K 11
Lens and base-assembly-RH rear 3. K 14

Lens cover 3. K 17
Lens-RH outer 3. L 04
Lens-assembly-front 3. H 02
Lens-exhaust temperature indicator 3. H 11
Lever bracket 1. M 07

Lever sleeve 2. G 03
Lever sleeve 2. G 04
Licence holder -Jaguar 5. E 05
Lifter block -RH front 4. K 02
Lifter block mechanism -RH 4. K 02

Lighter adaptor plug 3. H 07
Lighting logic module-facia switch panel 3. H 11
Lighting logic module-facia switch panel 3. H 12
Lights on warning module 3. H 13
Lights on warning module 3. H 14

Linear switch 2. E 15
Linear switch 3. H 15
Link 4. N 04
Link harness 3. K 13
Link harness 3. F 15

Link harness-door lamp to panel 4. E 02
Link lead 1. L 03
Link lead 3. L 12
Link lead 3. H 13
Link lead kit 2. M 18

Link lead-power seat 3. F 16
Link-assembly-RH upper 2. J 13
Link-assembly-sensor to wishbone 2. K 06
Linkage clip 4. N 14
Linkage clip 4. N 17

Linkage clip-handle link rod to latch 4. O 03
Load dump/resistor module 3. I 08
Load dump/resistor module 3. I 09
Load solenoid-assembly 2. K 04
Load solenoid-assembly 2. K 05

Locating collar 2. J 09
Locating collar 2. J 11
Locating weight-centre 1. E 05
Locating weight-centre 1. E 07
Locating weight-gearbox mounting 1. E 06

Location plate 4. K 12
Location plate 4. K 14
Location spacer I 08
Location tube 1. E 13
Location tube 1. E 14

Locator 1. N 07
Lock barrel 4. N 16
Lock barrel repair kit-trunk lid lock 4. N 04
Lock barrel-assembly 3. I 12
Lock button surround 4. O 03

Lock button surround 4. H 14
Lock button surround 4. H 17
Lock ring 1. M 09
Lock ring 1. M 10
Lock washer 1. M 16

Lock washer 2. E 04
Lock washer 2. E 17
Lock washer 2. E 18
Lock washer 5. E 06
Lock washer-0.375" i/d 3. C 13

Lock washer-0.375" i/d -imperial 3. C 18
Lock washer-0.4375" i/d 4. F 04
Lock washer-M4 1. L 10
Lock washer-M4 3. I 07
Lock washer-M6 2. E 12

Lock washer-metric 1. H 12
Lock washer-metric 2. J 08
Locking cone 2. G 03
Locking cone 2. G 04
Locking nut 2. C 02

Locking nut 2. C 03
Locking nut 2. H 03
Locking nut 2. H 04
Locking nut 2. C 05
Locking nut 2. H 05

Locking nut 2. H 06
Locking nut 2. H 07
Locking nut 2. H 08
Locking nut 2. C 06
Locking nut 2. C 07

Locking nut 2. C 08
Locking nut 2. C 09
Locking nut 2. H 09
Locking nut 2. H 10
Locking nut 2. C 11

Locking nut 2. G 11
Locking nut 2. G 12
Locking nut 2. G 14
Locking nut 2. J 13
Locking nut 2. G 15

Locking nut 5. C 12
Locking nut-3/8" unf 2. I 18
Locking nut-M8 1. F 04
Locking nut-M8 1. J 06
Locking nut-M8 1. M 06

Locking nut-M8 1. M 09
Locking nut-M8 2. K 02
Locking nut-M8 2. G 03
Locking nut-M8 2. G 04
Locking nut-M8 2. G 07

Locking nut-M8 2. G 08
Locking nut-M8 2. I 08
Locking nut-M8 2. M 08
Locking nut-M8 2. I 09
Locking nut-M8 2. M 09

Locking nut-M8 2. I 10
Locking nut-M8 2. C 12
Locking nut-M8 2. C 14
Locking nut-M8 2. M 15
Locking nut-M8 2. C 15

Locking nut-M8 2. I 15
Locking nut-M8 2. C 16
Locking nut-M8 2. I 16
Locking nut-M8 2. M 16
Locking nut-M8 2. C 17

Locking nut-M8 2. D 02
Locking nut-M8 3. I 10
Locking pin 2. G 09
Locking pin 2. M 10
Locking pin-with flats 5. C 12

Locking screw-rack to crossmember 2. I 04
Locking wheel nut kit 2. K 08
Locking wheel nut kit 2. K 09
Locknut 2. M 02
Locknut 2. M 03
Locknut 2. M 04
Locknut 2. M 05
Locknut 2. M 06
Locknut 2. M 08
Locknut 2. J 10
Locknut 2. M 09
Locknut 2. C 11
Locknut 2. J 12
Locknut 2. G 12
Locknut 2. G 13
Locknut 2. G 14
Locknut 2. J 15
Locknut 2. G 16
Locknut 2. G 17
Locknut 2. G 18
Locknut 2. H 02
Locknut 3. D 02
Locknut 3. D 03
Locknut 3. D 04
Locknut 3. D 05
Locknut 3. D 06
Locknut 3. C 12
Locknut 3. C 14
Locknut 3. C 15
Locknut 3. C 16
Locknut 3. C 17
Locknut 4. I 16
Locknut-0.25" unf 2. C 02
Locknut-0.25" unf 2. C 04
Locknut-0.25" unf 2. C 05
Locknut-0.25" unf 2. C 06
Locknut-0.25" unf 2. C 07
Locknut-0.25" unf 2. C 08
Locknut-0.25" unf 2. C 10
Locknut-0.25" unf 2. C 12
Locknut-0.25" unf 2. C 13
Locknut-0.25" unf 2. C 15
Locknut-0.25" unf 2. C 16
Locknut-0.25" unf 2. C 17
Locknut-0.25" unf 2. C 18
Locknut-imperial 1. L 04
Locknut-imperial 1. L 05
Locknut-imperial 1. L 06
Locknut-imperial 1. L 07
Locknut-imperial 1. L 10
Locknut-plain 2. J 02
Locknut-slotted 2. J 04
Locknut-slotted 2. J 06
Locknut-slotted 2. I 15
Locknut-slotted 2. I 16
Lockset-assembly- 4. N 04
Lockset-assembly- 4. J 07
Lockset-assembly- 4. N 13
Loctite 510 -50ml tube 5. F 10
Loctite 542 -50ml tube 5. F 10
Loctite 574 -50ml tube 5. F 10
Loctite 638 -50ml tube 5. F 10
Loctite studlock 270 -50ml tube 5. F 10
Lokut nut 2. K 02
Lokut nut 2. K 07
Lokut nut 4. J 04
Lokut nut 4. K 04
Lokut nut 4. L 04
Lokut nut 4. G 06
Lokut nut 4. K 06
Lokut nut 4. K 07
Lokut nut 4. O 05
Lokut nut 4. K 09
Lokut nut 4. K 10
Lokut nut 4. H 10
Lokut nut 4. K 11
Lokut nut 4. H 13
Lokut nut 4. K 13
Lokut nut 4. L 13
Lokut nut 4. L 14
Lokut nut 4. K 16
Lokut nut 4. L 02
Lokut nut 4. L 03
Lokut nut 4. L 18
Lokut nut-RH/LH 1. I 02
Lokut nut-RH/LH 1. J 10
Lokut nut-RH/LH 3. F 18
Lokut nut-RH/LH 4. N 15
Lokut nut-RH/LH 4. H 15
Lokut nut-RH/LH 4. N 17
Lokut nut-RH/LH 4. H 18
Lokut nut-RH/LH 5. F 07
Long life bulb-H4 60/55w-halogen-yellow 3. K 02
Long life bulb-H4 60/55w-halogen-yellow 3. K 03
Long life bulb-H4 60/55w-halogen-yellow 3. K 08
Longitudinal stay 2. I 08
Longitudinal stay 2. I 09
Longitudinal-RH 5. C 15
Loudspeaker bezel 3. J 07
Loudspeaker coaxial cable-100mm 3. J 07
Loudspeaker grille 3. J 07
Loudspeaker-heelboard 3. J 07
Low beam bulb-white cap 3. K 09
Low coolant probe 1. N 03
Low level sensor 1. N 04
Low level sensor 1. N 05
Low pressure hose 2. I 05
Low pressure hose 2. I 06
Low pressure hose kit-low 2. N 07
Low pressure hose-oil cooler to reservoir 2. J 18
Low pressure warning switch 2. K 02
Lower feed potentiometer 3. C 04
Lower feed potentiometer 3. D 11
Lower panel 5. C 15
Lower wishbone-RH front 2. J 03
Lower wishbone-RH front 2. J 05
Lubrication chart 1. L 08
Lubrication chart 1. L 09
Luggage floor extension-RH 5. C 15
Luggage holder -roof rack 5. E 09
Luggage net -roof rack 5. E 09
Lumbar adjust hand wheel 4. C 06
Lumbar adjust hand wheel 4. D 03
Lumbar adjust hand wheel 4. C 12
Lumbar adjust hand wheel 4. D 02
Magnetic catch plate 4. D 13
Magnetic catch-assembly 4. H 06
Magnetic catch-assembly 4. D 13
Magnetic drain plug 1. M 10
Magnetic drain plug 2. F 16
Magnetic drain plug-0.75" bsp 2. H 08
Magnetic drain plug-0.75" bsp 2. H 11
Magnetic strip-front 4. G 03
Main bearing kit-standard -blue 1. F 06
Main bearing kit-standard -blue 1. F 07
Main bearing kit-standard -red 1. F 05
Main bearing kit-standard -red 1. F 08
Main bracket-assembly 3. H 13
Main bracket-assembly 3. H 14
Main relay-rear seat pan-white 2. N 09
Maintenance guide -English 5. F 02
Maintenance handbook-North America 5. F 06
Male connector-4 way-0.5mm white cable- 3. F 12
Manifold gasket 1. H 03
Manifold gasket 2. C 03
Manifold gasket 2. C 07
Manifold gasket 2. C 09
Manifold gasket-front 1. H 04
Manifold gasket-front 1. H 12
Manifold gasket-manifold to downpipe 1. H 02
Manifold gasket-manifold to downpipe 2. C 02
Manifold gasket-manifold to downpipe 2. C 05
Manifold gasket-manifold to downpipe 2. C 06
Manifold gasket-manifold to downpipe 2. C 08
Manifold gasket-manifold to downpipe 2. C 11
Manual gearbox oil-EP80-500ml 5. F 10
Manual gearbox-assembly-new 2. F 17
Manual gearbox-assembly-non speed 2. F 16
Manual override key 4. K 03
Map light bulb 3. L 06
Map/courtesy lamp-assembly-Doeskin 3. L 06
Master cylinder 2. G 06
Master cylinder reservoir filter 2. M 13
Master cylinder service kit 2. M 13
Master cylinder/reservoir-assembly 2. M 13
Mastic dam retention 4. M 04
Mastic dam retention 4. M 05
Mastic dam retention 4. L 17
Mechanical fix fitting kit-front 4. C 05
Mechanical fix fitting kit-front 4. C 11
Mechanism shield-trunk lid lock 4. N 03
Medallion-Daimler 4. L 14
Metal sealing plug -16mm diameter 5. C 02
Metal sealing plug -25mm diameter 5. C 15
Microprocessor 1. I 12
Microprocessor mounting plate 1. I 10
Microprocessor mounting plate -LH 1. I 11
Microprocessor mounting plate -LH 1. I 12
Microprocessor-assembly 1. I 10
Mini valve relay 2. K 03
Mirror 4. J 06
Mirror capping-bright finish 4. M 08
Mirror capping-bright finish 4. M 09
Mirror capping-bright finish 4. M 10
Mirror capping-bright finish 4. M 11
Mirror glass -1400mm radius 4. M 09
Mirror glass -1400mm radius 4. M 10
Mirror glass -1400mm radius 4. M 11
Mirror glass -flat 4. M 08
Mirror tray and catch 4. J 06
Modulator-new 2. K 03
Module contact-0.5mm white cable-Bosch - 3. F 11
Module cover and sensor-assembly 3. D 12
Module cover-LH 3. D 12
Module cover-RH 3. D 10
Module earth lead 2. N 08
Module grommet 3. L 12
Module grommet 5. E 10
Module grommet 5. E 11
Module inspection cover-RH-Cream 4. G 09
Module mounting bracket-LH 1. I 13
Module mounting bracket-LH 1. I 14
Module mounting bracket-LH 1. I 16
Module mounting bracket-LH 5. E 10
Module mounting bracket-LH 5. E 11
Module mounting bracket-RH 3. L 12
Mono clamp 3. E 05
Motor and pump-assembly 2. N 07
Motor, cable and anchorage -RH 4. F 04
Motorized seatbelt-RH 4. F 02
Mounting bar-assembly-rear 2. C 12
Mounting bar-assembly-rear 2. C 13
Mounting bar-assembly-rear 2. C 15
Mounting bar-assembly-rear 2. C 16
Mounting bar-assembly-rear 2. C 17
Mounting bar-assembly-rear 2. C 18
Mounting block 4. K 06
Mounting block 4. K 09
Mounting block 4. K 11
Mounting block 4. K 13

Mounting bolt finisher cap 4. F 08
Mounting bolt finisher cap 4. F 09
Mounting bolt finisher cap-Warm charcoal 4. F 05
Mounting bolt finisher cap-Warm charcoal 4. F 07
Mounting bracket 1. K 02
Mounting bracket 1. L 02
Mounting bracket 1. N 03
Mounting bracket 1. F 04
Mounting bracket 1. L 04
Mounting bracket 1. M 05
Mounting bracket 1. E 06
Mounting bracket 1. J 06
Mounting bracket 1. E 07
Mounting bracket 1. M 14
Mounting bracket 1. L 15
Mounting bracket 1. M 16
Mounting bracket 1. J 18
Mounting bracket 2. C 02
Mounting bracket 2. K 02
Mounting bracket 2. C 04
Mounting bracket 2. K 03
Mounting bracket 2. C 05
Mounting bracket 2. C 07
Mounting bracket 2. I 08
Mounting bracket 2. I 09
Mounting bracket 2. G 11
Mounting bracket 2. G 12
Mounting bracket 2. M 12
Mounting bracket 2. G 15
Mounting bracket 2. H 02
Mounting bracket 2. J 18
Mounting bracket 3. D 02
Mounting bracket 3. D 03
Mounting bracket 3. D 04
Mounting bracket 3. D 05
Mounting bracket 3. D 06
Mounting bracket 3. J 06
Mounting bracket 3. C 12
Mounting bracket 3. C 13
Mounting bracket 3. C 14
Mounting bracket 3. C 15
Mounting bracket 3. C 16
Mounting bracket 3. C 17
Mounting bracket 3. C 18
Mounting bracket 4. I 12
Mounting bracket 4. I 13
Mounting bracket bolt -top 2. J 17
Mounting bracket setscrew 2. I 15
Mounting bracket setscrew 2. I 16
Mounting bracket setscrew-lower 2. J 13
Mounting bracket-RH 1. E 04
Mounting bracket-RH 1. J 13
Mounting bracket-RH 2. J 05
Mounting bracket-RH 2. J 07
Mounting bracket-RH 4. K 10
Mounting bracket-RH 5. C 06
Mounting bracket-RH lower 2. J 13
Mounting bracket-assembly 4. N 04
Mounting bracket-assembly 5. C 04
Mounting bracket-assembly-RH 4. L 14
Mounting bracket-assembly-RH rear 3. L 09
Mounting bracket-assembly-RH upper 2. J 17
Mounting bracket-assembly-rear 2. J 16
Mounting bracket-instrument cover-RH 4. I 05
Mounting bracket-spare wheel 2. L 03
Mounting bracket-underscuttle pad to tunnel 4. G 12
Mounting bracket-upper 4. F 04
Mounting bracket/anchorage bolt 4. F 04
Mounting bush-rear 2. J 07
Mounting cradle 2. J 10
Mounting cradle 2. J 12
Mounting cradle 4. G 18
Mounting cradle-exhaust 2. C 12
Mounting cradle-exhaust 2. C 14
Mounting cradle-exhaust 2. C 15
Mounting cradle-exhaust 2. C 16
Mounting cradle-exhaust 2. C 17
Mounting cradle-exhaust 2. C 18
Mounting frame bush 2. J 13
Mounting frame-assembly 2. J 13
Mounting isolator -lower 2. J 14
Mounting panel -RH 5. C 06
Mounting plate 1. K 08
Mounting plate bolt-upper 4. F 04
Mounting plate rubber 2. C 17
Mounting plate rubber 2. D 02
Mounting plate spacer -top 2. J 14
Mounting plate switch 2. E 11
Mounting rubber 1. M 10
Mounting rubber 1. L 15
Mounting rubber 2. K 03
Mounting rubber 2. C 06
Mounting rubber 2. C 11
Mounting rubber 2. C 12
Mounting rubber 2. C 14
Mounting rubber 2. C 15
Mounting rubber 2. C 16
Mounting rubber 2. C 17
Mounting rubber 2. C 18
Mounting rubber-RH 1. E 04
Mounting rubber-anti roll bar 2. I 15
Mounting rubber-anti roll bar 2. I 16
Mounting rubber-fuel pump 1. M 05
Mounting rubber-upper 5. C 04
Mounting-inner 1. J 18
Mudflap kit-front 5. E 06
Multi loudspeaker 3. J 07
Multi plug contact-type one -0.5mm white 3. F 11
Needle bearing 2. I 02
Needle bearing 2. I 03
Needle bearing 2. F 09
Needle bearing 2. F 10
Needle bearing 2. F 15
Needle bearing and piston ring kit 2. F 02
Needle bearing and piston ring kit 2. F 04
Needle bearing and piston ring kit 2. E 16
Needle bearing and piston ring kit 2. E 17
Needle bearing and piston ring kit 2. E 18
Needle cage 2. F 15
Needle cage 2. E 16
Needle cage 2. E 17
Needle sleeve 2. F 09
Needle sleeve 2. F 10
Non return valve 1. G 10
Non return valve 1. G 12
Non return valve 3. E 02
Non return valve 3. D 08
Non return valve O-ring-timing chai 1. H 02
Non return valve O-ring-timing chain 1. H 03
Non return valve O-ring-timing chain 1. H 04
Non return valve O-ring-timing chain 1. H 05
Non return valve O-ring-timing chain 1. H 06
Non return valve O-ring-timing chain 1. G 10
Non return valve O-ring-timing chain 1. G 12
Non return valve kit 1. M 05
Non return valve-assembly 2. K 04
Non return valve-assembly 2. K 05
Number plate lamp-assembly 3. L 02
Number plate surround finisher-rear 4. L 03
Number plate-front 5. E 07
Nut 1. N 03
Nut 1. J 05
Nut 1. J 07
Nut 1. J 08
Nut 1. K 08
Nut 1. F 10
Nut 1. F 12
Nut 1. H 11
Nut 1. H 12
Nut 1. M 13
Nut 1. M 14
Nut 1. M 15
Nut 1. I 17
Nut 2. G 05
Nut 2. G 06
Nut 2. E 09
Nut 2. M 09
Nut 2. G 10
Nut 2. M 11
Nut 2. J 14
Nut 2. J 15
Nut 2. F 16
Nut 3. H 02
Nut 3. D 07
Nut 3. C 09
Nut 4. I 06
Nut 4. N 05
Nut 4. K 10
Nut 4. N 10
Nut 4. I 12
Nut 4. I 13
Nut 4. K 14
Nut 4. N 13
Nut and washer -assembly 2. I 12
Nut and washer -assembly 2. I 13
Nut and washer -assembly 2. I 14
Nut and washer -assembly-metric 2. E 04
Nut retainer-console extension 4. H 08
Nut-M10 3. D 02
Nut-M10 3. D 03
Nut-M10 3. D 04
Nut-M10 3. D 05
Nut-M10 3. D 06
Nut-M10 3. E 06
Nut-M10 3. C 12
Nut-M10 3. C 14
Nut-M10 3. C 15
Nut-M10 3. C 16
Nut-M10 3. C 17
Nut-M4 1. L 10
Nut-M4 2. M 08
Nut-M4 2. G 09
Nut-M4 3. J 07
Nut-M4 4. K 02
Nut-M4 4. I 07
Nut-M4 4. G 08
Nut-M4 4. J 16
Nut-M5 3. I 02
Nut-M5 3. I 03
Nut-M5 4. K 06
Nut-M5 4. K 09
Nut-M5 4. K 11
Nut-M5 4. K 13
Nut-M5 4. N 16
Nut-M5 5. C 12
Nut-M6 1. L 02
Nut-M6 1. M 03
Nut-M6 1. L 08
Nut-M6 1. L 09
Nut-M6 1. M 02
Nut-M6 3. J 05
Nut-M6 4. N 02
Nut-M6-upper 2. C 02
Nut-M6-upper 2. C 04
Nut-M6-upper 2. C 05
Nut-M6-upper 2. C 10
Nut-M8 1. I 09
Nut-M8 1. H 07
Nut-M8 1. H 09
Nut-M8 1. J 12

Nut-M8 ..... 1. I 13
Nut-M8 ..... 1. I 14
Nut-M8 ..... 1. G 15
Nut-M8 ..... 2. C 14
Nut-M8 ..... 2. C 16

Nut-M8 ..... 2. C 18
Nut-M8 ..... 3. M 03
Nut-M8 ..... 3. I 08
Nut-M8 ..... 3. K 09
Nut-M8 ..... 3. I 10

Nut-no.6 unc ..... 4. L 03
Nut-nyloc-M14 ..... 2. J 04
Nut-nyloc-M14 ..... 2. J 05
Nut-pipe to sump adaptor ..... 1. F 03
Nut-pipe to sump adaptor ..... 1. K 04

Nut-pipe to sump adaptor ..... 1. K 05
Nut-selector lever ..... 2. E 02
Nut-selector lever ..... 2. E 03
Nut-selector lever ..... 2. E 12
Nyloc nut ..... 1. F 04

Nyloc nut ..... 1. M 05
Nyloc nut ..... 1. J 18
Nyloc nut ..... 2. K 06
Nyloc nut ..... 2. J 07
Nyloc nut ..... 2. M 07

Nyloc nut ..... 2. M 10
Nyloc nut ..... 2. E 12
Nyloc nut ..... 2. E 15
Nyloc nut-M10 ..... 2. I 18
Nyloc nut-M5 ..... 1. M 04

Nyloc nut-M5 ..... 1. K 10
Nyloc nut-M5 ..... 1. J 16
Nyloc nut-M5 ..... 1. L 17
Nyloc nut-M5 ..... 2. I 06
Nyloc nut-M5 ..... 2. J 18

Nyloc nut-M5 ..... 3. J 04
Nyloc nut-M5 ..... 3. J 05
Nyloc nut-M5 ..... 3. I 08
Nyloc nut-M5 ..... 3. L 12
Nyloc nut-M5 ..... 4. D 13

Nyloc nut-M5 ..... 4. K 18
Nyloc nut-M5 ..... 5. E 10
Nylon bush ..... 4. O 03
Nylon bush ..... 4. H 14
Nylon bush ..... 4. H 17

Nylon tube ..... 1. I 02
Nylon washer ..... 4. N 11
Nylon washer-wheel nut ..... 2. K 11
O-ring ..... 1. F 02
O-ring ..... 1. H 02

O-ring ..... 1. F 03
O-ring ..... 1. H 05
O-ring ..... 1. H 06
O-ring ..... 1. F 04
O-ring ..... 1. M 05

O-ring ..... 1. M 08
O-ring ..... 1. M 09
O-ring ..... 1. G 15
O-ring ..... 1. L 16
O-ring ..... 1. E 17

O-ring ..... 2. F 02
O-ring ..... 2. L 02
O-ring ..... 2. F 03
O-ring ..... 2. E 04
O-ring ..... 2. F 04

O-ring ..... 2. F 05
O-ring ..... 2. I 05
O-ring ..... 2. F 06
O-ring ..... 2. I 06
O-ring ..... 2. F 07

O-ring ..... 2. F 08
O-ring ..... 2. E 09
O-ring ..... 2. F 09
O-ring ..... 2. E 10
O-ring ..... 2. F 10

O-ring ..... 2. K 10
O-ring ..... 2. H 12
O-ring ..... 2. K 12
O-ring ..... 2. F 13
O-ring ..... 2. F 14

O-ring ..... 2. H 14
O-ring ..... 2. E 16
O-ring ..... 2. E 17
O-ring ..... 2. E 18
O-ring ..... 3. C 05

O-ring ..... 3. H 06
O-ring ..... 3. C 09
O-ring ..... 3. C 10
O-ring ..... 3. C 11
O-ring ..... 3. D 13

O-ring ..... 3. D 14
O-ring ..... 4. L 14
O-ring and seal kit ..... 2. F 02
O-ring and seal kit ..... 2. F 04
O-ring and seal kit ..... 2. F 05

O-ring and seal kit ..... 2. N 07
O-ring and seal kit ..... 2. M 12
O-ring and seal kit ..... 2. E 16
O-ring and seal kit ..... 2. E 17
O-ring and seal kit ..... 2. E 18

O-ring-0.25" diameter ..... 4. K 07
O-ring-0.375" diameter ..... 3. D 07
Oil cooler ..... 1. F 04
Oil cooler adaptor ..... 1. E 16
Oil cooler adaptor ..... 1. E 17

Oil cooler adaptor gasket ..... 1. H 02
Oil cooler adaptor gasket ..... 1. H 06
Oil cooler mounting bracket ..... 1. F 04
Oil cooler mounting-rubber ..... 1. F 04
Oil cooler output pipe ..... 2. E 09

Oil drain feedback adaptor ..... 1. E 13
Oil drain feedback adaptor ..... 1. E 14
Oil drain pipe ..... 1. F 03
Oil feed pipe ..... 1. F 04
Oil feed pipe ..... 1. E 18

Oil filler cap ..... 1. F 02
Oil filler cap ..... 1. F 03
Oil filler cap ..... 1. G 15
Oil filler pipe ..... 1. F 02
Oil filler pipe ..... 1. F 03

Oil filler plug ..... 3. C 10
Oil filler plug ..... 3. C 11
Oil filter ..... 1. E 16
Oil filter ..... 1. E 17
Oil filter housing gasket ..... 1. H 02

Oil filter housing gasket ..... 1. H 06
Oil filter plug ..... 3. C 11
Oil gallery plug ..... 1. E 09
Oil gallery plug ..... 1. E 10
Oil gauge transmitter ..... 1. E 16

Oil gauge transmitter ..... 1. E 17
Oil pipe ..... 1. E 12
Oil pipe O-ring ..... 1. H 02
Oil pipe O-ring ..... 1. H 05
Oil pipe O-ring ..... 1. H 06

Oil pipe O-ring ..... 1. E 12
Oil pipe bracket ..... 2. E 09
Oil pipe carrier ..... 1. E 12
Oil plug O-ring ..... 1. H 02
Oil plug O-ring ..... 1. H 05

Oil plug O-ring ..... 1. H 06
Oil plug O-ring ..... 1. E 09
Oil plug O-ring ..... 1. E 10
Oil pressure switch/link lead-kit ..... 1. E 16
Oil pressure switch/link lead-kit ..... 1. E 17

Oil pressure transducer ..... 1. E 16
Oil pressure transducer ..... 1. E 17
Oil pump chain ..... 1. E 12
Oil pump sprocket ..... 1. E 12
Oil pump-assembly ..... 1. E 12

Oil relief valve plug ..... 1. E 12
Oil relief valve plug ..... 1. E 13
Oil relief valve plunger ..... 1. E 12
Oil relief valve spring ..... 1. E 12
Oil return pipe ..... 1. F 04

Oil return pipe ..... 2. E 09
Oil screen ..... 2. E 10
Oil seal O-ring ..... 1. J 02
Oil seal O-ring ..... 1. I 18
Oil seal-auxiliary shaft ..... 1. H 02

Oil seal-auxiliary shaft ..... 1. H 05
Oil seal-auxiliary shaft ..... 1. H 06
Oil seal-auxiliary shaft ..... 1. G 04
Oil seal-front-35mm ..... 2. F 16
Oil seal-front-35mm ..... 2. F 17

Oil suction pipe-assembly ..... 1. E 12
Oil sump drain plug ..... 2. E 10
Oil sump pan ..... 2. E 10
Oil sump-less valve access plug ..... 1. E 14
Oil sump-with valve access plug ..... 1. E 13

Oil/temperature gauge-assembly ..... 3. H 03
Oil/temperature gauge-assembly ..... 3. H 04
Olive ..... 1. F 03
Olive ..... 1. K 04
Olive ..... 1. K 05

Olive ..... 1. J 07
Olive ..... 1. J 08
Olive ..... 2. J 15
Olive-spherical ..... 2. C 02
Olive-spherical ..... 2. C 03

Olive-spherical ..... 2. C 05
Olive-spherical ..... 2. C 06
Olive-spherical ..... 2. C 07
Olive-spherical ..... 2. C 08
Olive-spherical ..... 2. C 09

Olive-spherical ..... 2. C 11
Omnicote bolt ..... 2. H 12
Omnicote bolt ..... 2. H 14
One piece gaiter ..... 2. I 10
Open end wheel nut-alloy wheel ..... 2. K 08

Open end wheel nut-alloy wheel ..... 2. K 09
Open end wheel nut-alloy wheel ..... 5. E 08
Open end wheel nut-steel wheel ..... 2. K 18
Operating handle ..... 4. D 16
Operating lever-assembly ..... 1. L 13

Operating link -accelerator ..... 1. L 12
Operating rod ..... 1. L 12
Outer circlip ..... 1. J 05
Outer pivot pin ..... 2. J 10
Outer pivot pin ..... 2. J 12

Outer pivot pin ..... 2. J 16
Outer seal ..... 2. J 10
Outer seal ..... 2. J 11
Outer seal ..... 2. J 12
Outer washer ..... 2. J 03

Outlet flange stud ..... 1. H 11
Outlet flange stud ..... 1. H 12
Outlet pipe-gasket sealing ..... 3. C 05
Outlet pipe-gasket sealing ..... 3. D 13
Output flange ..... 2. F 09

Output flange ..... 2. F 10
Output flange seal ..... 2. F 09
Output flange seal ..... 2. F 10
Output shaft ..... 2. F 09
Output shaft ..... 2. F 10

Output shaft and stud-assembly ..... 2. H 12
Output shaft and stud-assembly ..... 2. H 14
Oval washer ..... 4. K 04
Oval washer ..... 4. L 15
Oval washer ..... 5. C 17

Over axle heatshield 2. D 03
Over pressure pipe 1. M 06
P-clip 1. K 04
P-clip 1. M 04
P-clip 1. K 05

P-clip 1. N 09
P-clip 1. N 10
P-clip 1. J 12
P-clip 1. L 16
P-clip 1. L 17

P-clip 2. K 07
P-clip 2. M 07
P-clip 3. F 04
P-clip 3. E 05
P-clip 5. F 07

P-clip-0.5" diameter 3. I 02
P-clip-0.5" diameter 3. I 03
P-clip-0.5" diameter 4. D 18
P-clip-0.5" diameter 5. F 08
P-clip-no.10 2. J 15

P-clip-pipe to heelboard 2. M 04
P-clip-pipe to heelboard 2. M 05
P-clip-small 1. L 11
P-clip-small 1. L 12
Packer 1. N 12

Packer 2. I 08
Packer 2. I 09
Packer 4. N 09
Packing and locator -1.5mm 2. I 17
Packing block 2. I 05

Packing block 2. I 06
Paint clearing screw 1. L 15
Paint clearing screw 1. M 02
Paint clearing screw 2. M 04
Paint clearing screw 2. I 09

Paint clearing screw 3. J 05
Paint clearing screw 3. M 05
Paint clearing screw 4. N 02
Paint clearing screw 4. K 10
Paint clearing screw-M6 4. G 03

Paint clearing setscrew 2. D 03
Paint repair times -English 5. F 06
Paint touch-up kit -Nimbus white 5. E 18
Paint touch-up pencil-Nimbus white-BLVC 5. E 17
Pan head screw 1. J 09

Pan head screw 4. J 11
Pan head screw-M5 4. C 07
Pan head screw-M5 4. D 03
Pan head screw-M5 4. C 13
Pan head screw-M5 4. D 02

Pan head screw-M6 x 21mm 4. G 12
Pan head torx screw-frame to door 4. N 09
Pan head torx screw-upper 1. L 02
Pan head torx screw-with M6-14 mm dia 4. O 03
Pan head torx screw-with M6-14 mm dia 4 N 05

Pan head torx screw-with M6-14 mm dia 4. N 12
Pan posi head setscrew 4. N 03
Panel grommet 3. L 12
Panel grommet 5. E 10
Panel grommet 5. E 11

Panel plug-rear fender 5. C 03
Parcel shelf 4. J 15
Parcel shelf plug 4. J 15
Park lock wheel 2. F 09
Park lock wheel 2. F 10

Parkbrake adjuster-assembly 2. N 04
Parkbrake adjuster-assembly 2. N 05
Parkbrake handgrip-Coffee 4. H 03
Parkbrake handgrip-assembly-trimmed 2. M 16
Parkbrake handgrip-leather 2. M 14

Parkbrake handgrip-rubber 4. H 09
Parking brake lever 2. N 05
Parking brake pin 2. N 05
Parking brake repair kit 2. N 05
Parking pawl kit 2. F 11

Passenger door switch-assembly 4. E 02
Passive restraint module 4. F 03
Pawl 2. F 11
Pawl 2. F 12
Pedal housing 2. M 09

Pedal housing 2. M 10
Pedal operating lever 1. L 12
Pedal pad rubber-brake 2. M 08
Pedal pad rubber-brake 2. M 10
Pedal pad rubber-clutch 2. G 09

Pedal stop 1. L 12
Pendulum bush -top 2. J 17
Pendulum-assembly 2. J 17
Petrol injection control module 1. I 07
Petrol injection control module 1. I 13

Petrol injection harness 1. K 09
Petrol injection/ignition control module 1. I 15
Petrol injection/ignition control module 1. I 16
Petrol injection/ignition control module-new 1. I 08
Petrol injection/ignition control module-new 1. I 09

Petrol injection/ignition control module- 1. I 07
Petrol tank floor panel 5. C 15
Picnic tray hinge-assembly 4. H 02
Picnic tray moulding-trimmed 4. H 02
Picnic tray veneer kit 4. H 02

Pillar stud 1. I 09
Pillar stud-41.5mm length 3. I 03
Pillar stud-52mm length 1. I 14
Pillar stud-52mm length 1. I 16
Pillar stud-58.5mm length 1. I 13

Pin 2. G 03
Pin 2. G 04
Pin 2. F 11
Pin 2. F 12
Pin-0.5mm white cable-PMHD socket 3. F 11

Pinch bolt 2. I 10
Pinion bearing shim-inner-0.003" 2. H 12
Pinion bearing shim-inner-0.003" 2. H 14
Pinion bearing-inner 2. H 12
Pinion bearing-inner 2. H 14

Pinion housing circlip 2. I 02
Pinion housing circlip 2. I 03
Pinion locknut 2. H 12
Pinion locknut 2. H 14
Pinion nut 2. H 12

Pinion nut 2. H 14
Pinion nut washer 2. H 12
Pinion nut washer 2. H 14
Pinion oil seal-viton 2. H 12
Pinion oil seal-viton 2. H 14

Pinion spacer 2. H 12
Pinion spacer 2. H 14
Pipe adaptor 1. K 08
Pipe clamp-spherical 2. C 02
Pipe clamp-spherical 2. C 03

Pipe clamp-spherical 2. C 05
Pipe clamp-spherical 2. C 06
Pipe clamp-spherical 2. C 07
Pipe clamp-spherical 2. C 08
Pipe clamp-spherical 2. C 09

Pipe clamp-spherical 2. C 11
Pipe clip 1. M 03
Pipe clip 1. M 13
Pipe clip 1. M 14
Pipe clip 1. M 15

Pipe clip 1. L 16
Pipe clip 1. M 02
Pipe clip 2. K 02
Pipe clip 2. M 04
Pipe clip 2. I 05

Pipe clip 2. M 05
Pipe clip 2. I 06
Pipe clip 2. J 15
Pipe clip 2. J 18
Pipe clip 3. D 12

Pipe clip bracket 1. L 16
Pipe clip bracket 1. M 02
Pipe clip bracket 2. K 07
Pipe clip insert 1. M 03
Pipe clip insert 1. M 02

Pipe clip insert 2. M 04
Pipe clip-18mm 2. G 05
Pipe clip-6/way 2. M 02
Pipe clip-6/way 2. M 06
Pipe clip-metal-0.25" diameter 5. F 08

Pipe clip-metal-0.5" diameter 3. E 02
Pipe clip-single 1. I 02
Pipe clip-single 2. K 07
Pipe damper 2. M 03
Pipe grommet 3. J 05

Pipe-assembly-3 way RH to 3 way LH 2. K 07
Pipe-assembly-block to hose 2. M 07
Pipe-assembly-long 2. I 04
Pipe-assembly-under floor 1. L 18
Pipe-reservoir to valve block 2. J 18

Piston 2. F 03
Piston 2. F 04
Piston 2. F 05
Piston 2. F 07
Piston 2. F 08

Piston 2. F 09
Piston 2. F 10
Piston 2. E 16
Piston 2. E 17
Piston 2. E 18

Piston O-ring 1. H 03
Piston O-ring 1. H 04
Piston O-ring 1. G 12
Piston ring 2. F 09
Piston ring 2. F 10

Piston ring 2. E 15
Piston ring 2. E 16
Piston ring 2. E 17
Piston ring 2. E 18
Piston ring kit-standard 1. F 10

Piston ring kit-standard 1. F 11
Piston ring-inner 2. I 04
Piston service kit-axle set 2. N 04
Piston tensioner housing 1. G 12
Piston-assembly-high compression 1. F 10

Piston-assembly-standard 1. F 11
Pivot bearing 1. L 11
Pivot bolt 1. J 06
Pivot bolt-90 amp alternator 3. I 09
Pivot bolt-90 amp alternator 3. I 10

Pivot bracket 1. G 09
Pivot bracket 1. G 12
Pivot bracket 3. C 12
Pivot bracket 3. C 13
Pivot bracket 3. C 15

Pivot bracket 3. C 17
Pivot bracket 3. C 18
Pivot bracket-assembly 2. E 14
Pivot bracket-front 3. C 14
Pivot bracket-front 3. C 16

Pivot bush 2. M 08
Pivot bush 2. G 09
Pivot bush 2. M 09
Pivot bush 2. M 10
Pivot pin 1. G 09

Pivot pin 1. G 12
Pivot pin 2. G 07
Pivot pin 2. G 08
Pivot pin 2. E 14
Pivot pin clip 1. L 12

Pivot pin sleeve-outer ..... 2. J 10
Pivot pin sleeve-outer ..... 2. J 12
Pivot pin-accelerator pedal-plastic ..... 1. L 12
Pivot plate ..... 1 G 10
Plain washer ..... 1. I 02
Plain washer ..... 1. N 03
Plain washer ..... 1. L 04
Plain washer ..... 1. M 04
Plain washer ..... 1. E 05
Plain washer ..... 1. I 05
Plain washer ..... 1. I 11
Plain washer ..... 1. L 06
Plain washer ..... 1. M 06
Plain washer ..... 1. L 08
Plain washer ..... 1. M 08
Plain washer ..... 1. L 09
Plain washer ..... 1. N 09
Plain washer ..... 1. I 13
Plain washer ..... 1. J 13
Plain washer ..... 1. I 14
Plain washer ..... 1. I 17
Plain washer ..... 1. L 17
Plain washer ..... 2. C 02
Plain washer ..... 2. C 03
Plain washer ..... 2. G 03
Plain washer ..... 2. L 03
Plain washer ..... 2. G 04
Plain washer ..... 2. C 05
Plain washer ..... 2. J 06
Plain washer ..... 2. N 06
Plain washer ..... 2. C 06
Plain washer ..... 2. I 06
Plain washer ..... 2. C 07
Plain washer ..... 2. G 07
Plain washer ..... 2. J 08
Plain washer ..... 2. M 08
Plain washer ..... 2. C 09
Plain washer ..... 2. M 09
Plain washer ..... 2. I 10
Plain washer ..... 2. M 11
Plain washer ..... 2. C 11
Plain washer ..... 2. G 11
Plain washer ..... 2. I 11
Plain washer ..... 2. C 12
Plain washer ..... 2. G 12
Plain washer ..... 2. C 13
Plain washer ..... 2. J 13
Plain washer ..... 2. E 14
Plain washer ..... 2. J 14
Plain washer ..... 2. J 15
Plain washer ..... 2. M 14
Plain washer ..... 2. M 15
Plain washer ..... 2. C 15
Plain washer ..... 2. G 15
Plain washer ..... 2. C 16
Plain washer ..... 2. J 16
Plain washer ..... 2. M 16
Plain washer ..... 2. C 17
Plain washer ..... 2. M 17
Plain washer ..... 2. C 18
Plain washer ..... 2. H 02
Plain washer ..... 2. J 18
Plain washer ..... 3. D 02
Plain washer ..... 3. D 03
Plain washer ..... 3. D 04
Plain washer ..... 3. D 05
Plain washer ..... 3. E 05
Plain washer ..... 3. J 05
Plain washer ..... 3. D 06
Plain washer ..... 3. I 09
Plain washer ..... 3. I 10
Plain washer ..... 3. C 12
Plain washer ..... 3. L 12
Plain washer ..... 3. C 14
Plain washer ..... 3. C 15
Plain washer ..... 3. H 15
Plain washer ..... 3. C 16
Plain washer ..... 3. C 17
Plain washer ..... 4. K 02
Plain washer ..... 4. F 03
Plain washer ..... 4. I 07
Plain washer ..... 4. N 03
Plain washer ..... 4. F 04
Plain washer ..... 4. G 05
Plain washer ..... 4. K 07
Plain washer ..... 4. M 09
Plain washer ..... 4. M 10
Plain washer ..... 4. M 11
Plain washer ..... 4. H 08
Plain washer ..... 4. K 09
Plain washer ..... 4. N 11
Plain washer ..... 4. D 11
Plain washer ..... 4. H 10
Plain washer ..... 4. H 11
Plain washer-0.197" dia ..... 4. K 04
Plain washer-0.25" i/d ..... 1. M 03
Plain washer-0.25" i/d ..... 1. F 04
Plain washer-0.25" i/d ..... 1. M 05
Plain washer-0.25" i/d ..... 1. K 07
Plain washer-0.25" i/d ..... 1. N 07
Plain washer-0.25" i/d ..... 1. I 12
Plain washer-0.25" i/d ..... 1. L 12
Plain washer-0.25" i/d ..... 1. L 15
Plain washer-0.25" i/d ..... 1. L 16
Plain washer-0.25" i/d ..... 1. J 18
Plain washer-0.25" i/d ..... 1. M 02
Plain washer-0.25" i/d ..... 2. C 04
Plain washer-0.25" i/d ..... 2. G 05
Plain washer-0.25" i/d ..... 2. M 05
Plain washer-0.25" i/d ..... 2. G 06
Plain washer-0.25" i/d ..... 2. C 08
Plain washer-0.25" i/d ..... 2. I 08
Plain washer-0.25" i/d ..... 2. C 10
Plain washer-0.25" i/d ..... 2. I 09
Plain washer-0.25" i/d ..... 2. E 12
Plain washer-0.25" i/d ..... 2. E 15
Plain washer-0.25" i/d ..... 4. G 12
Plain washer-0.25" i/d ..... 4. D 13
Plain washer-0.25" i/d ..... 4. N 15
Plain washer-0.25" i/d ..... 4. D 15
Plain washer-0.25" i/d ..... 5. E 06
Plain washer-0.25" i/d ..... 5. D 02
Plain washer-0.3125" diameter ..... 1. K 08
Plain washer-0.3125" diameter ..... 1. M 09
Plain washer-0.3125" diameter ..... 1. H 11
Plain washer-0.3125" diameter ..... 1. H 12
Plain washer-0.3125" diameter ..... 1. G 15
Plain washer-0.3125" diameter ..... 2. I 04
Plain washer-0.3125" diameter ..... 2. G 08
Plain washer-0.3125" diameter ..... 2. M 10
Plain washer-0.3125" diameter ..... 2. I 15
Plain washer-0.3125" diameter ..... 2. I 16
Plain washer-25mm ..... 1. N 02
Plain washer-25mm ..... 2. D 03
Plain washer-M5 ..... 1. J 03
Plain washer-M5 ..... 1. I 09
Plain washer-M5 ..... 1. J 09
Plain washer-M5 ..... 1. K 10
Plain washer-M5 ..... 1. L 10
Plain washer-M5 ..... 1. L 11
Plain washer-M5 ..... 1. J 14
Plain washer-M5 ..... 1. J 16
Plain washer-M5 ..... 2. G 09
Plain washer-M5 ..... 2. C 14
Plain washer-M5 ..... 2. D 02
Plain washer-M5 ..... 4. D 17
Plain washer-M5 ..... 4. K 18
Plain washer-M5 ..... 5. E 10
Plain washer-M6 ..... 1. L 02
Plain washer-M6 ..... 1. N 08
Plain washer-M6 ..... 2. K 02
Plain washer-M6 ..... 2. I 05
Plain washer-M6 ..... 2. M 07
Plain washer-M6 ..... 3. E 04
Plain washer-M6 ..... 3. H 06
Plain washer-M6 ..... 3. D 07
Plain washer-M6 ..... 4. H 06
Plain washer-M6 ..... 4. L 13
Plain washer-M6 ..... 5. C 04
Plain washer-M6 ..... 5. C 13
Plain washer-no.10 ..... 4. C 07
Plain washer-no.10 ..... 4. C 13
Plain washer-no.10 ..... 4. H 15
Plain washer-no.10 ..... 4. J 15
Plain washer-no.10 ..... 4. H 18
Plain washer-no.10 ..... 4. G 18
Planetary drive ..... 2. F 15
Plastic nut ..... 1. J 03
Plastic nut ..... 1. J 14
Plastic nut ..... 4. I 14
Plastic nut-bracket and cantrail ..... 4. J 09
Plastic nut-bracket and cantrail ..... 5. E 06
Plastic nut-bracket and cantrail ..... 5. C 17
Plastic push on nut ..... 5. C 17
Plastic trim ..... 2. K 18
Plate ..... 1. G 05
Plate ..... 1. G 08
Plate ..... 5. C 11
Plate-front ..... 4. K 02
Plenum chamber drain valve ..... 3. E 05
Plenum stiffener-RH ..... 2. I 09
Plenum tie-assembly-LH ..... 2. I 09
Pliers ..... 5. E 14
Plug ..... 1. E 09
Plug ..... 1. E 10
Plug ..... 1. G 15
Plug ..... 1. G 16
Plug ..... 2. M 02
Plug lead kit ..... 1. J 04
Plug-16.7mm diameter hole ..... 5. C 03
Plug-16.7mm diameter hole ..... 5. C 15
Plug-2.8mm x 27.8mm slot ..... 5. D 02
Plug-lumbar adjustment handwheel ..... 4. C 06
Plug-lumbar adjustment handwheel ..... 4. D 03
Plug-lumbar adjustment handwheel ..... 4. C 12
Plug-lumbar adjustment handwheel ..... 4. D 02
Polish -300ml ..... 5. F 09
Polishing cloth ..... 5. F 09
Pop rivet ..... 4. L 05
Pop rivet ..... 4. H 10
Positive terminal cover ..... 3. I 06
Power brake servo ..... 2. M 13
Power seat switch-assembly-RH ..... 3. H 07
Power steering pump-assembly ..... 2. I 07
Power steering reservoir/cap-assembly ..... 2. I 06
Powerwash grommet ..... 3. E 08
Powerwash hose-823mm ..... 3. E 08
Powerwash jet -centre ..... 3. E 07
Powr-lok additive ..... 5. F 09
Pre delivery inspection form-English ..... 5. F 04
Pressed nut -M8 ..... 2. C 12
Pressure and warning switch kit ..... 2. N 07
Pressure control valve ..... 1. I 03
Pressure control valve ..... 1. L 17
Pressure delay valve ..... 2. M 03
Pressure filler cap ..... 1. N 04
Pressure filler cap ..... 1. N 05
Pressure plate ..... 2. F 07
Pressure plate ..... 2. F 08
Pressure reducing valve -5 hole type ..... 1. I 04

Pressure reducing valve -5 hole type ..... 1. M 04
Pressure reducing valve -5 hole type ..... 1. M 09
Pressure relief cap-assembly ..... 1. N 03
Pressure relief valve ..... 2. K 04
Pressure relief valve ..... 2. K 05
Pressure relief valve ..... 3. C 09
Primary timing chain ..... 1. G 10
Printer paper roll ..... 5. E 15
Printer ribbon ..... 5. E 15
Pronged button ..... 4. H 10
Propshaft ..... 2. G 13
Propshaft alignment packer -0.125" ..... 2. G 11
Propshaft alignment packer -0.125" ..... 2. G 12
Propshaft alignment packer -0.125" ..... 2. G 15
Propshaft alignment packer -0.125" ..... 2. H 02
Propshaft gaiter ..... 2. G 11
Propshaft gaiter ..... 2. G 12
Propshaft gaiter ..... 2. G 13
Propshaft-assembly ..... 2. G 11
Propshaft-assembly ..... 2. G 12
Propshaft-assembly ..... 2. G 15
Propshaft-assembly ..... 2. G 16
Propshaft-assembly ..... 2. G 18
Protection cap ..... 3. D 14
Protection cover-jack probe ..... 2. L 03
Protective boot ..... 3. E 02
Protective sleeve ..... 3. I 02
Protective sleeve ..... 3. I 03
Pulley ..... 1. N 15
Pulley ..... 1. N 17
Pulley ..... 3. I 08
Pulley ..... 3. I 09
Pulley-4 groove ..... 1. N 16
Pulley-assembly ..... 3. C 09
Pulsation damper ..... 1. M 05
Pump bracket ..... 3. E 08
Pump bracket screw ..... 3. E 02
Pump bracket screw ..... 3. E 08
Pump mounting bracket ..... 2. N 07
Pump relay ..... 2. K 03
Pump seal -front ..... 2. F 13
Pump seal -front ..... 2. F 14
Purge control kit-fuel tank ..... 1. I 05
Purge control valve ..... 1. I 03
Purge control valve ..... 1. I 04
Purge pipe ..... 1. I 02
Purge pipe ..... 1. I 03
Purge pipe ..... 1. I 04
Purge pipe ..... 1. I 05
Purge valve ..... 1. I 02
Purge valve ..... 1. I 04
Purge valve ..... 1. I 05
Push fix ..... 3. F 03
Push fix ..... 4. N 03
Push fix ..... 4. H 06
Push fix ..... 4. G 17
Push in fastener-Black ..... 4. H 09
Push nut ..... 2. L 03
Push on fix ..... 2. I 11
Push on fix ..... 2. I 12
Push on fix ..... 2. I 13
Push on fix ..... 2. I 14
Push on fix ..... 3. C 08
Push on fix ..... 4. I 07
Push on fix ..... 4. L 14
Push on fix ..... 4. L 15
Push on fix-finisher to trunk lid ..... 4. K 18
Push on fix-insulation ..... 4. I 14
Push on fix-insulation ..... 4. J 03
Push rod ..... 2. G 07
Push rod ..... 2. G 08
Push-in nut-black ..... 5. F 07
Push-on fix rivet ..... 4. J 05
Quad headlamp ..... 3. L 10
Quad headlamp-assembly-RH ..... 3. K 03
Quad headlamp-assembly-RH-quad lamp ..... 3. K 02
Quarter lamp-Doeskin ..... 3. L 05
Quarter panel-RH rear-inner ..... 5. C 16
Rack and pinion bellows ..... 2. I 02
Rack and pinion bellows ..... 2. I 03
Radiator grille badge-black/chrome ..... 4. L 14
Radiator grille surround ..... 4. L 13
Radiator grille vane block-RH ..... 4. L 14
Radiator grille-assembly ..... 4. L 13
Radiator leak inhibitor ..... 5. F 09
Radiator mounting bracket strap ..... 1. F 04
Radiator mounting bracket strap ..... 5. C 04
Radiator mounting panel-RH ..... 5. C 06
Radiator panel-top ..... 5. C 04
Radiator top hose-top ..... 1. N 11
Radiator-heater ..... 1. N 11
Radio ..... 3. J 02
Radio blanking panel-assembly ..... 3. J 04
Radio earth lead ..... 3. J 02
Radio earth strap ..... 3. J 04
Radio mounting bracket ..... 3. J 02
Radio support bracket-assembly ..... 3. J 04
Radio/cassette player ..... 3. J 03
Radio/cassette player ..... 3. J 04
Radio/cassette player ..... 5. E 04
Rail and seal-assembly-RH-passive restraint ..... 4. F 04
Rail mounting bracket ..... 4. F 04
Rail seal -RH ..... 4. F 04
Ratchet handle ..... 5. E 12
Ratchet rivet -button-hazard warning label ..... 4. J 04
Rawl nut ..... 1. N 03
Rawl nut ..... 3. L 05
Rawl nut ..... 3. D 12
Rawl nut ..... 4. K 04
Rawl nut ..... 4. L 13
Reaction shoe gasket ..... 1. H 02
Reaction shoe gasket ..... 1. G 09
Rear cover ..... 1. G 02
Rear cover ..... 1. G 03
Rear cover ..... 1. F 17
Rear electronic pack -Mph ..... 3. H 05
Rear electronic pack -imperial ..... 3. H 03
Rear lamp bezel-RH ..... 3. K 16
Rear longitudinal ..... 5. C 05
Receiver drier bottle-CFC free ..... 3. D 07
Recessed pan head screw ..... 1. E 05
Recessed pan head screw ..... 4. C 07
Recessed pan head screw ..... 4. C 13
Recessed pan head screw ..... 4. D 02
Recessed pan head screw-M4 ..... 1. J 03
Recessed pan head screw-M4 ..... 3. I 07
Recessed pan head screw-self tapping ..... 4. K 07
Recessed pan head screw-self tapping ..... 4. K 10
Recline mechanism-RH ..... 4. D 18
Recline motor and gearbox -RH ..... 4. D 18
Reducing hose ..... 1. I 03
Reducing hose ..... 1. I 04
Reducing hose ..... 1. M 04
Reducing hose ..... 1. I 05
Reducing hose ..... 1. M 06
Reflex lens-assembly-plain lens ..... 3. K 18
Reflex-assembly-amber-RH front/LH rear ..... 3. K 10
Reflex-assembly-rear -patterned lens ..... 3. K 18
Regulator ..... 3. I 09
Regulator motor-RH front ..... 4. N 12
Reinforcement ..... 5. D 02
Reinforcement plate ..... 1. L 06
Reinforcement plate ..... 5. C 09
Reinforcement plate gasket ..... 2. M 09
Reinforcement plate gasket ..... 2. M 11
Reinforcement plate-RH ..... 5. C 11
Reinforcement-RH ..... 5. C 06
Reinforcement-RH B/C-post ..... 5. C 08
Reinforcing bracket -RH ..... 2. J 08
Reinforcing plate ..... 2. M 08
Reinforcing plate ..... 2. M 09
Reinforcing plate ..... 2. M 11
Relay bracket ..... 1. L 14
Relay cover ..... 1. J 17
Relay cover label ..... 1. L 14
Relay cover-RH ..... 3. G 02
Relay cover-assembly ..... 1. L 14
Relay lever-assembly ..... 2. M 16
Relay mounting bracket ..... 1. J 11
Relay mounting bracket ..... 1. J 14
Relay mounting bracket ..... 1. J 16
Relay mounting bracket-RH ..... 1. J 17
Relay mounting bracket-RH ..... 3. G 02
Relay-black ..... 1. J 11
Relay-black ..... 1. J 14
Relay-black ..... 1. L 14
Relay-black ..... 3. G 02
Relay-black ..... 3. F 18
Relay-yellow ..... 1. J 17
Relay-yellow ..... 2. N 09
Release switch ..... 3. H 16
Remote control escutcheon-RH front/rear ..... 4. N 14
Remote control escutcheon-RH front/rear ..... 4. H 15
Remote control escutcheon-RH front/rear ..... 4. N 17
Remote control escutcheon-RH front/rear ..... 4. H 18
Remote release lever ..... 1. M 07
Repair operation times-English ..... 5. F 02
Reservoir ..... 2. I 05
Reservoir ..... 2. M 13
Reservoir clamp ..... 3. E 04
Reservoir connector ..... 3. E 08
Reservoir filler cap ..... 2. M 12
Reservoir filler cap ..... 3. E 04
Reservoir filler neck-assembly ..... 3. E 04
Reservoir kit ..... 2. M 12
Reservoir mounting bracket ..... 3. E 04
Reservoir support rod -plain-7 litre ..... 3. E 04
Restrictor ..... 1. N 09
Restrictor ..... 1. N 10
Restrictor-red ..... 3. D 16
Retainer ..... 1. L 10
Retainer ..... 2. J 02
Retainer ..... 4. N 03
Retainer ..... 4. O 05
Retainer ..... 4. I 16
Retainer clip ..... 2. K 02
Retainer clip ..... 2. G 03
Retainer clip ..... 2. G 04
Retainer clip-upper ..... 4. H 06
Retainer finisher ..... 4. L 14
Retaining bracket ..... 1. H 08
Retaining bracket ..... 1. H 09
Retaining bracket ..... 1. H 10
Retaining bracket ..... 4. K 05
Retaining bracket ..... 4. K 09
Retaining bracket ..... 4. K 11
Retaining bracket ..... 4. K 13
Retaining clip ..... 2. K 03
Retaining clip ..... 3. K 17
Retaining clip ..... 4. K 07
Retaining clip ..... 4. K 10
Retaining clip ..... 4. K 14
Retaining clip ..... 5. F 08
Retaining clip-sill locking button to latch ..... 4. O 03
Retaining clip-sill locking button to latch ..... 4. N 17
Retaining finisher spring cup ..... 4. M 09
Retaining finisher spring cup ..... 4. M 10
Retaining finisher spring cup ..... 4. M 11
Retaining pin ..... 1. E 03
Retaining pin ..... 1. L 10

Retaining plate 1 L 02
Retaining ring 2 E 05
Retaining ring 2 E 06
Retaining ring 3 C 09
Retaining ring 4 G 18

Retaining ring kit 2 I 07
Retaining ring kit 3 C 09
Retaining ring-chrome 4 H 07
Retaining ring-wire 2 K 18
Retension washer-rubber 3 K 18

Retention strip-front 4 I 14
Return hose 1 L 16
Return spring 1 L 10
Return spring-accelerator pedal 1 L 11
Return spring-accelerator pedal-plastic 1 L 12

Return spring-brake pedal 2 M 08
Return spring-brake pedal 2 G 09
Return spring-brake pedal 2 M 09
Return spring-brake pedal 2 M 10
Reverse inhibit relay-green 2 N 09

Reverse inhibit relay-green 3 G 02
Reverse inhibit relay-green 4 E 03
Reverse lamp switch 2 F 16
Reverse lamp switch 2 F 17
Reverse lokut nut no 6 round 1 M 07

Reverse lokut nut no 6 round 4 L 04
Reverse lokut nut no 6 round 5 F 07
Ride level hydraulic pipe assembly 2 K 07
Ride level sensor 2 K 06
Ride level sensor 2 M 07

Ride level sensor 2 J 18
Ride level strut assembly 2 J 15
Ride level/power steering reservoir assembly 2 J 18
Ring 2 M 11
Ring gear 2 F 15

Rise and fall motor front 4 D 18
Rivet 2 J 10
Rivet 2 J 12
Rivet 3 D 10
Rivet 4 I 02

Rivet 4 F 04
Rivet 4 L 17
Rivet 5 C 14
Rivet screw bonnet liner 4 J 04
Rivet check arm to lid 4 J 05

Road spring kit 2 J 14
Road spring kit 3 I 17
Road wheel and tyre assembly 2 L 02
Road wheel and tyre assembly 2 K 13
Road wheel and tyre assembly 2 K 18

Road wheel and tyre assembly Dunlop 2 K 09
Road wheel and tyre assembly Dunlop 2 K 11
Road wheel and tyre assembly Michelin 2 K 08
Road wheel and tyre assembly Oyster 2 K 10
Road wheel and tyre assembly Pirelli 2 K 14

Road wheel and tyre-assembly-Pirelli 2 K 15
Road wheel and tyre-assembly-Pirelli 2 K 16
Road wheel badge-Daimler 2 K 09
Road wheel badge-Daimler-Grey 2 L 02
Road wheel badge-Daimler-Grey 2 K 12

Road wheel badge-Jaguar-silver 2 K 08
Road wheel badge-Jaguar-silver 2 K 11
Road wheel badge-Jaguar-silver 2 K 15
Road wheel badge-Jaguar-silver/grey 5 E 08
Road wheel badge-Jaguar-silver/grey-with 2 K 10

Road wheel badge-Jaguar-silver/grey-with 2 K 14
Road wheel badge-Jaguar-silver/grey-with 2 K 17
Road wheel badge-silver 2 K 16
Road wheel-Regency red 2 K 16
Road wheel-alloy-8J x 16"-forged lattice 2 K 17

Road wheel-assembly 2 K 18
Road wheel-assembly-roulette-Oyster 2 K 10
Road wheel-pressed spoke 2 K 11
Rokut rivet 4 N 03
Rokut rivet 4 N 06

Rokut rivet 4 N 07
Rokut rivet 4 N 11
Rokut rivet 4 L 03
Roll pin 1 F 05
Roll pin 1 F 06

Roll pin 1 F 07
Roll pin 1 F 08
Roller bearing assembly 2 H 12
Roller bearing assembly 2 H 15
Roof console plate-without sunroof aperture- 4 G 16

Roof console plate without sunroof aperture 4 G 17
Roof console veneer plate 4 G 17
Roof console assembly Limestone 4 G 16
Roof lining 4 J 08
Roof panel assembly fixed roof 5 C 10

Roof quarter panel LH 5 C 10
Roof rack basic carrier 5 E 09
Roof seal strip 4 G 17
Rotary lamp switch knob 3 H 11
Rotary lamp switch knob 3 H 12

Rotary switch 2 E 11
Rotary switch shield 2 E 11
Rotor service kit 2 I 07
Rotor assembly 3 C 11
Roundhead woodscrew no 4 4 H 02

Rubber buffer 2 M 09
Rubber buffer 2 M 11
Rubber buffer 4 N 02
Rubber buffer self adhesive 4 J 12
Rubber bumperette 3 J 16

Rubber elbow 3 D 12
Rubber finisher glass frame to inner door 4 N 11
Rubber grommet 1 N 03
Rubber grommet 2 M 08
Rubber grommet 2 M 09

Rubber grommet 2 M 10
Rubber insert 1 L 16
Rubber mats-front 5 E 05
Rubber plug 1 L 12
Rubber retaining plate 2 C 12

Rubber retaining plate 2 C 14
Rubber retaining plate 2 C 15
Rubber retaining plate 2 C 16
Rubber seal 1 H 02
Rubber seal 1 H 05

Rubber seal 1 H 06
Rubber seal 1 H 13
Rubber seal 3 L 12
Rubber seal 5 E 10
Rubber seal 5 E 11

Safety clip 2 C 02
Safety clip 2 C 03
Safety clip 2 C 05
Safety clip 2 G 05
Safety clip 2 G 06

Safety clip 2 C 09
Safety clip 2 M 09
Safety clip 2 M 10
Safety clip 2 M 13
Screen clean paste 100ml 3 E 04

Screenwash jet cover 3 E 02
Screenwash pump link lead 3 E 02
Screenwash reservoir 7 litre 3 E 04
Screw 1 N 03
Screw 1 L 04

Screw 1 M 04
Screw 1 L 05
Screw 1 L 06
Screw 1 L 07
Screw 1 N 08

Screw 1 K 10
Screw 1 J 10
Screw 1 E 13
Screw 1 J 13
Screw 1 M 13

Screw 1 E 15
Screw 1 H 14
Screw 1 J 14
Screw 1 H 15
Screw 1 M 15

Screw 1 J 17
Screw 1 L 17
Screw 1 I 18
Screw 2 L 02
Screw 2 N 02

Screw 2 N 03
Screw 2 E 04
Screw 2 N 04
Screw 2 N 05
Screw 2 M 08

Screw 2 C 09
Screw 2 E 09
Screw 2 F 09
Screw 2 G 09
Screw 2 E 10

Screw 2 F 10
Screw 2 K 10
Screw 2 M 11
Screw 2 G 11
Screw 2 G 12

Screw 2 K 12
Screw 2 E 15
Screw 2 G 15
Screw 2 M 17
Screw 2 H 02

Screw 3 L 03
Screw 3 L 04
Screw 3 L 05
Screw 3 C 05
Screw 3 E 08

Screw 3 H 08
Screw 3 H 09
Screw 3 K 09
Screw 3 C 10
Screw 3 D 10

Screw 3 C 11
Screw 3 K 11
Screw 3 H 12
Screw 3 K 12
Screw 3 D 13

Screw 3 H 13
Screw 3 D 14
Screw 3 H 14
Screw 3 H 15
Screw 3 H 16

Screw 3 F 18
Screw 3 K 18
Screw 4 K 02
Screw 4 N 02
Screw 4 I 06

Screw 4 I 07
Screw 4 N 04
Screw 4 J 06
Screw 4 J 07
Screw 4 K 06

Screw 4 K 07
Screw 4 N 05
Screw 4 O 05
Screw 4 K 09
Screw 4 N 10

Screw 4 K 11
Screw 4 K 12
Screw 4 J 14
Screw 4 K 13
Screw 4 K 14

Screw ..... 4. L 15
Screw ..... 4. D 02
Screw ..... 4. H 15
Screw ..... 4. I 15
Screw ..... 4. J 15

Screw ..... 4. D 17
Screw ..... 4. K 16
Screw ..... 4. H 18
Screw ..... 4. L 02
Screw ..... 5. C 04

Screw ..... 5. E 06
Screw cover ..... 4. N 14
Screw cover ..... 4. H 15
Screw cover ..... 4. N 17
Screw cover ..... 4. H 18

Screw plug ..... 2. F 13
Screw plug ..... 2. F 14
Screw-6 x 16mm ..... 1. N 07
Screw-6 x 16mm ..... 4. [illegible] 13
Screw-M3 x 10mm ..... 4. [illegible] 06

Screw-M3 x 8mm ..... 4. N 03
Screw-M4 x 16mm ..... 2. [illegible] 11
Screw-M4 x 10mm ..... 2. [illegible] 12
Screw-M4 x 10mm ..... 2. [illegible] 13
Screw-M4 x 10mm ..... 2. [illegible] 14

Screw-M5 ..... 1. [illegible] 10
Screw-M5 ..... 4. F 04
Screw-M5 x 10mm ..... 3. [illegible] 12
Screw-M5 x 12mm ..... 2. C 03
Screw-M5 x 12mm ..... 4. H 08

Screw-M5 x 16mm ..... 1. J 16
Screw-M5 x 16mm ..... 3. H 02
Screw-M5 x 16mm ..... 3. D 12
Screw-M5 x 16mm ..... 4. F 03
Screw-M6 ..... 3. E 05

Screw-M6 ..... 4. C 06
Screw-M6 ..... 4. C 12
Screw-M6 x 9mm regulator to door ..... 4. N 12
Screw-M8 x 20mm ..... 1. E 04
Screw-M8 x 20mm ..... 1. E 05

Screw-M8 x 20mm ..... 1. E 06
Screw-M8 x 20mm ..... 1. E 08
Screw-M8 x 20mm ..... 2. K 02
Screw-M8 x 20mm ..... 2. [illegible] 08
Screw-M8 x 20mm ..... 5. D 02

Screw cover to head ..... 1. G 02
Screw cover to head ..... 1. F 16
Screw escutcheon to squab ..... 4. C 07
Screw escutcheon to squab ..... 4. C 13
Screw finisher ..... 4. L 03

Screw mounting bracket to body ..... 4. K 10
Screw mounting plate ..... 1. [illegible] 11
Screw no 6 x 0.375 ..... 4. L 14
Screw no 6 x 0.625 ..... 4. K 04
Screw paint clearing ..... 1. [illegible] 16

Screw-paint clearing ..... 2. M 05
Screw-self tapping ..... 4. H 10
Screw-self tapping ..... 4. L 18
Screw-self tapping-no 4 ..... 4. H 02
Screw-self tapping-no 4 ..... 4. H 13

Screw-silver finish ..... 3. L 02
Screwdriver ..... 5. E 14
Scuttle side casing kit -RH ..... 4. G 04
Scuttle side casing kit -RH-Cream ..... 4. G 09
Scuttle side casing-RH ..... 4. G 04

Seal ..... 1. K 10
Seal ..... 2. K 02
Seal ..... 2. M 12
Seal ..... 3. C 02
Seal ..... 3. C 05

Seal ..... 3. C 06
Seal ..... 3. C 07
Seal ..... 3. D 08
Seal ..... 3. D 13
Seal ..... 4. K 04

Seal ..... 4. L 13
Seal ..... 4. K 18
Seal kit ..... 2. I 04
Seal kit ..... 2. I 07
Seal kit ..... 3. C 09

Seal kit ..... 3. C 11
Seal retainer-front-outer ..... 4. K 02
Seal service kit ..... 3. C 10
Seal service kit ..... 3. C 11
Seal support plate -outer ..... 4. K 02

Seal track spacer ..... 2. J 09
Seal-A-post-facia ..... 4. G 08
Seal-RH ..... 3. F 03
Seal-lower ..... 4. L 18
Seal-upper and lower ..... 1. N 11

Seal-upper and lower ..... 3. D 07
Sealing cap ..... 1. L 06
Sealing cap ..... 1. L 09
Sealing cap-89mm diameter ..... 5. C 15
Sealing plug ..... 5. C 03

Sealing plug-rear ..... 1. G 02
Sealing plug-rear ..... 1. H 02
Sealing plug-rear ..... 1. H 03
Sealing plug-rear ..... 1. H 04
Sealing plug-rear ..... 1. G 15

Sealing plug-rear ..... 1. F 18
Sealing ring ..... 1. M 09
Sealing ring ..... 1. M 10
Sealing ring ..... 2. F 13
Sealing ring ..... 2. F 14

Sealing sleeve ..... 2. I 10
Sealing strip 100mm ..... 4. I 07
Sealing strip-1250mm ..... 3. F 03
Sealing strip-1250mm ..... 4. I 04
Sealing strip-1250mm ..... 4. G 17

Sealing strip-1250mm ..... 5. C 13
Sealing strip-1250mm ..... 5. C 17
Sealing strip-4.5mm ..... 4. M 03
Sealing strip-outer-moulding to body ..... 4. M 04
Sealing strip-outer-moulding to body ..... 4. L 17

Sealing washer ..... 1. G 03
Sealing washer ..... 1. J 07
Sealing washer ..... 1. J 08
Sealing washer ..... 1. E 09
Sealing washer ..... 1. E 10

Sealing washer ..... 1. N 12
Sealing washer ..... 1. E 13
Sealing washer ..... 1. N 13
Sealing washer ..... 1. E 14
Sealing washer ..... 1. N 14

Sealing washer ..... 1. F 18
Sealing washer ..... 3. D 10
Seat console-assembly-rear ..... 4. D 13
Seat cushion cover-assembly-rear ..... 4. D 14
Seat cushion-assembly-RH ..... 4. D 03

Seat cushion-assembly-RH ..... 4. D 15
Seat cushion-assembly-cloth ..... 4. D 04
Seat cushion-assembly-cloth ..... 4. D 07
Seat cushion-assembly-cloth-RH rear ..... 4. D 10
Seat cushion-assembly-cloth-RH/LH ..... 4. C 02

Seat cushion-assembly-cloth-RH/LH ..... 4. C 08
Seat cushion-assembly-cloth-inner piping ..... 4. C 14
Seat cushion-assembly-leather-inner piping ..... 4. C 15
Seat cushion-assembly-rear ..... 4. D 14
Seat entry switch harness ..... 4. E 03

Seat harness-electric adjust ..... 3. F 16
Seat heater dolly switch -RH ..... 3. H 07
Seat heater switch -assembly-RH ..... 3. H 07
Seat heater/gearbox switch bracket ..... 1. J 09
Seat pan bracket ..... 4. C 07

Seat pan bracket ..... 4. C 13
Seat pan bracket ..... 4. D 17
Seat pan seal-RH rear ..... 3. F 03
Seat sensor switch-assembly ..... 4. E 04
Seat slide-RH outer ..... 4. D 16

Seat squab armrest-assembly-rear ..... 4. D 14
Seat squab armrest-rear ..... 4. D 13
Seat squab cover-assembly-rear ..... 4. D 14
Seat squab-assembly ..... 4. D 15
Seat squab-assembly-RH ..... 4. D 03

Seat squab-assembly-cloth-LH ..... 4. C 17
Seat squab-assembly-cloth-RH ..... 4. C 16
Seat squab-assembly-cloth-inner piping-LH ..... 4. C 04
Seat squab-assembly-cloth-inner piping-LH ..... 4. C 10
Seat squab-assembly-cloth-inner piping-RH ..... 4. C 03

Seat squab-assembly-cloth-inner piping-RH ..... 4. C 09
Seat squab-assembly-cloth-rear ..... 4. D 04
Seat squab-assembly-cloth-rear ..... 4. D 08
Seat squab-assembly-cloth-rear ..... 4. D 11
Seat squab-assembly-leather-inner piping ..... 4. C 05

Seat squab-assembly-leather-inner piping ..... 4. C 11
Seat squab-assembly-leather-rear ..... 4. D 05
Seat squab-assembly-rear ..... 4. D 14
Seatbelt buckle stalk-assembly-RH front ..... 4. F 06
Seatbelt buckle-RH ..... 4. F 02

Seatbelt buckle-RH front ..... 4. F 07
Seatbelt buckle-RH front-Warm charcoal ..... 4. F 05
Seatbelt escutcheon-RH rear ..... 4. J 15
Seatbelt kit-front-Warm charcoal ..... 4. F 06
Seatbelt link lead ..... 4. F 06

Seatbelt-RH front ..... 4. F 07
Seatbelt-RH front-Black ..... 4. F 05
Seatbelt-RH rear ..... 4. F 09
Seatbelt-assembly-RH rear-Doeskin ..... 4. F 08
Seatbelt/buckle kit -RH-Black ..... 4. F 05

Secondary timing chain ..... 1. G 09
Secondary timing chain ..... 1. G 11
Selector cable nut ..... 2. E 12
Selector cable washer ..... 2. E 12
Selector housing ..... 2. E 14

Selector lever ..... 2. E 02
Selector lever ..... 2. E 03
Selector lever ..... 2. E 12
Selector shaft ..... 2. G 04
Selector shaft ..... 2. F 11

Selector shaft ..... 2. F 12
Selector shaft joint ..... 2. G 03
Selector shaft joint ..... 2. G 04
Selector shaft-assembly ..... 2. G 03
Self adhesive pad ..... J 16

Self adhesive pad ..... 4. N 03
Self drilling screw ..... 4. H 15
Self drilling screw-no.10-console to facia ..... 4. H 06
Self drilling screw-no.6 ..... 4. G 11
Self drilling screw-no.6 ..... 4. J 02

Self locking nut ..... 1. E 06
Self locking nut ..... 1. E 08
Self locking nut ..... 1. M 16
Self locking nut ..... 2. I 04
Self locking nut ..... 2. C 03

Self locking nut ..... 2. J 03
Self locking nut ..... 2. J 04
Self locking nut ..... 2. J 05
Self locking nut ..... 2. J 06
Self locking nut ..... 2. J 07

Self locking nut ..... 2. J 08
Self locking nut ..... 2. C 09
Self locking nut ..... 2. I 11
Self locking nut ..... 2. J 13
Self locking nut ..... 2. J 15

Self locking nut ..... 2. I 15
Self locking nut ..... 2. I 16
Self locking nut ..... 2. J 16
Self locking nut ..... 2. J 17
Self locking nut ..... 2. I 18

Self locking nut 2. J 18
Self locking nut-M6 1. F 04
Self locking nut-M6 2. C 06
Self locking nut-M6 2. C 11
Self tapping pan head screw 4. L 15

Self tapping pan head screw 4. H 15
Self tapping pan head screw-console to 4. H 06
Self tapping screw 1. J 03
Self tapping screw 1. F 04
Self tapping screw 1. I 12

Self tapping screw 1. I 13
Self tapping screw 1. J 14
Self tapping screw 1. I 17
Self tapping screw 2. M 04
Self tapping screw 2. M 05

Self tapping screw 2. K 07
Self tapping screw 2. M 07
Self tapping screw 2. C 10
Self tapping screw 2. E 09
Self tapping screw 2. I 10

Self tapping screw 2. E 11
Self tapping screw 2. C 14
Self tapping screw 2. C 16
Self tapping screw 2. D 02
Self tapping screw 3. K 03

Self tapping screw 3. E 08
Self tapping screw 3. J 07
Self tapping screw 4. C 07
Self tapping screw 4. K 02
Self tapping screw 4. I 07

Self tapping screw 4. N 03
Self tapping screw 4. G 04
Self tapping screw 4. H 06
Self tapping screw 4. G 05
Self tapping screw 4. G 06

Self tapping screw 4. K 06
Self tapping screw 4. K 07
Self tapping screw 4. N 07
Self tapping screw 4. C 13
Self tapping screw 4. H 08

Self tapping screw 4. J 09
Self tapping screw 4. K 09
Self tapping screw 4. K 10
Self tapping screw 4. N 11
Self tapping screw 4. H 11

Self tapping screw 4. K 11
Self tapping screw 4. H 13
Self tapping screw 4. J 12
Self tapping screw 4. D 13
Self tapping screw 4. G 13

Self tapping screw 4. K 13
Self tapping screw 4. L 15
Self tapping screw 4. G 17
Self tapping screw 4. H 18
Self tapping screw 4. G 18

Self tapping screw 5. E 06
Self tapping screw 5. C 14
Self tapping screw 5. C 17
Self tapping screw-M4 4. N 15
Self tapping screw-M4 4. H 15

Self tapping screw-M4 4. N 17
Self tapping screw-backcover to squab 4. C 06
Self tapping screw-backcover to squab 4. C 12
Self tapping screw-backcover to squab 4. D 02
Self tapping screw-bezel to rear header 4. J 10

Self tapping screw-no.4 x 0.25" 1. J 09
Self tapping screw-no.6 x 1" 1. M 07
Self tapping screw no.6 x 1" 4. I 16
Self tapping screw-no.6 x 25mm 3. L 03
Self tapping screw-no.8 4. H 10

Self tapping screw-no.8 4. J 15
Self tapping screw-no.8 x 10mm 4. M 03
Self tapping screw-no.8 x 10mm 4. L 04
Self tapping screw-no.8 x 19mm 4. J 04
Self tapping screw-no.8 x 19mm 4. G 12

Self tapping screw-surround to trunk lid 4. L 03
Sems screw-self tapping 4. H 06
Sems screw-self tapping 4. K 04
Sems screw-self tapping 4. G 05
Sems screw-self tapping 4. L 13

Sems screw-self tapping 4. M 02
Sems screw-self tapping 5. C 17
Sensor 3. D 10
Sensor 3. D 12
Sensor cable bracket 1. G 05

Sensor cable bracket 1. G 08
Sensor fixing kit 3. D 10
Sensor fixing kit 3. D 12
Sensor mounting bracket 1. G 07
Sensor mounting bracket 1. G 08

Sensor mounting bracket 2. H 04
Sensor mounting bracket 2. H 08
Sensor mounting bracket 2. H 11
Sensor mounting bracket 3. H 06
Sensor rotor -front 2. J 02

Sensor rotor -rear 2. J 09
Sensor rotor -rear 2. J 12
Serrated washer 2. M 08
Serrated washer 3. M 03
Serrated washer 3. L 09

Serrated washer-console extension 1. I 09
Serrated washer-console extension 3. J 04
Serrated washer-console extension 4. K 02
Serrated washer-console extension 4. H 08
Serrated washer-console extension 4. D 13

Serrated washer-metric fixing 1. N 06
Serrated washer-metric fixing 1. H 07
Serrated washer-metric fixing 1. H 08
Serrated washer-metric fixing 1. H 09
Serrated washer-metric fixing 1. H 10

Serrated washer-metric fixing 1. G 15
Service manual -English 5. F 03
Service record/warranty book-English 5. F 03
Servo motor-upper and lower 3. C 04
Servo vacuum motor-upper and lower 3. D 11

Setscrew 1. N 02
Setscrew 1. N 03
Setscrew 1. E 04
Setscrew 1. G 04
Setscrew 1. J 04

Setscrew 1. K 04
Setscrew 1. E 05
Setscrew 1. K 05
Setscrew 1. I 09
Setscrew 1. J 06

Setscrew 1. M 06
Setscrew 1. N 06
Setscrew 1. L 08
Setscrew 1. E 09
Setscrew 1. F 09

Setscrew 1. G 09
Setscrew 1. M 09
Setscrew 1. E 10
Setscrew 1. N 10
Setscrew 1. G 11

Setscrew 1. L 11
Setscrew 1. G 12
Setscrew 1. L 12
Setscrew 1. H 13
Setscrew 1. H 14

Setscrew 1. J 15
Setscrew 1. M 14
Setscrew 1. H 15
Setscrew 1. N 15
Setscrew 1. E 16

Setscrew 1. L 16
Setscrew 1. N 16
Setscrew 1. I 17
Setscrew 1. N 17
Setscrew 1. M 02

Setscrew 2. K 02
Setscrew 2. K 03
Setscrew 2. E 04
Setscrew 2. G 05
Setscrew 2. I 05

Setscrew 2. C 06
Setscrew 2. G 06
Setscrew 2. I 06
Setscrew 2. G 07
Setscrew 2. I 07

Setscrew 2. K 07
Setscrew 2. M 07
Setscrew 2. M 08
Setscrew 2. G 09
Setscrew 2. C 11

Setscrew 2. E 11
Setscrew 2. C 12
Setscrew 2. C 13
Setscrew 2. J 13
Setscrew 2. J 14

Setscrew 2. J 15
Setscrew 2. C 15
Setscrew 2. C 16
Setscrew 2. J 17
Setscrew 2. C 17

Setscrew 2. I 17
Setscrew 2. C 18
Setscrew 2. F 18
Setscrew 2. J 18
Setscrew 3. I 02

Setscrew 3. I 03
Setscrew 3. L 03
Setscrew 3. M 03
Setscrew 3. M 05
Setscrew 3. L 09

Setscrew 3. I 11
Setscrew 3. I 12
Setscrew 3. C 13
Setscrew 3. D 14
Setscrew 3. H 15

Setscrew 3. C 18
Setscrew 4. I 06
Setscrew 4. F 04
Setscrew 4. K 04
Setscrew 4. K 05

Setscrew 4. K 12
Setscrew 4. K 14
Setscrew 4. L 13
Setscrew 4. D 18
Setscrew-5/16" 2. G 11

Setscrew-5/16" 2. G 12
Setscrew-5/16" 2. G 15
Setscrew-5/16" 2. H 02
Setscrew-M6 1. F 02
Setscrew-M6 1. F 03

Setscrew-M6 1. M 05
Setscrew-M6 1. K 07
Setscrew-M6 1. N 09
Setscrew-M6 1. M 13
Setscrew-M6 2. C 04

Setscrew-M6 2. C 05
Setscrew-M6 2. C 10
Setscrew-M6 4. I 16
Setscrew-M6 x 12mm 1. I 11
Setscrew-M6 x 12mm 1. E 12

Setscrew-M6 x 12mm 1. I 12
Setscrew-M6 x 12mm 2. C 02
Setscrew-M6 x 12mm 2. C 03
Setscrew-M6 x 12mm 2. C 07
Setscrew-M6 x 12mm 2. C 09

Setscrew-M6 x 12mm ..... 3. J 04
Setscrew-M6 x 12mm ..... 3. L 12
Setscrew-M6 x 12mm ..... 5. E 06
Setscrew-M6 x 14mm ..... 2. D 02
Setscrew-M6 x 14mm ..... 5. E 10

Setscrew-M8 x 16mm ..... 2. L 03
Setscrew-M8 x 16mm ..... 2. J 07
Setscrew-M8 x 16mm ..... 2. J 08
Setscrew-M8 x 16mm ..... 2. I 08
Setscrew-M8 x 16mm ..... 2. I 09

Setscrew-M8 x 16mm ..... 2. M 15
Setscrew-M8 x 16mm ..... 2. M 16
Setscrew-M8 x 16mm ..... 3. E 05
Setscrew-M8 x 20mm ..... 5. C 04
Setscrew-M8 x 25mm ..... 2. I 04

Setscrew-heatshield to manifold ..... 1. H 11
Setscrew-heatshield to manifold ..... 1. H 12
Setscrew-imperial fixing ..... 2. E 12
Setscrew-imperial fixing ..... 3. E 04
Setscrew-imperial fixing ..... 3. H 06

Setscrew-imperial fixing ..... 4. K 02
Setscrew-imperial fixing ..... 4. N 03
Setscrew-imperial fixing ..... 5. C 13
Shaft and ring ..... 2. I 07
Shaft bearing retaining collar ..... 2. H 12

Shaft bearing retaining collar ..... 2. H 15
Shaft seal-gearbox ..... 2. F 11
Shaft seal-gearbox ..... 2. F 12
Shakeproof washer ..... 1. I 10
Shakeproof washer ..... 1. M 08

Shakeproof washer ..... 1. K 10
Shakeproof washer ..... 1. I 13
Shakeproof washer ..... 1. I 17
Shakeproof washer ..... 3. L 12
Shakeproof washer ..... 3. H 14

Shakeproof washer ..... 5. E 10
Shakeproof washer-0.25" ..... 4. N 03
Shakeproof washer-M4 ..... 1. J 03
Shakeproof washer-M4 ..... 2. M 17
Shakeproof washer-M4 ..... 3. L 03

Shakeproof washer-M4 ..... 3. H 13
Shakeproof washer-M4 ..... 4. K 02
Shakeproof washer-M6 ..... 1. I 02
Shakeproof washer-M6 ..... 3. J 05
Shakeproof washer-M6 ..... 5. C 13

Shakeproof washer-earth stud ..... 3. I 06
Shampoo -300ml ..... 5. F 09
Shear head bolt ..... 3. I 11
Shear head bolt ..... 3. I 12
Shim ..... 2. G 05

Shim ..... 2. G 06
Shim ..... 3. I 07
Shim ..... 4. J 06
Shim pack ..... 2. I 02
Shim pack ..... 2. I 03

Shim-0.005" ..... 1. E 12
Shim-1mm ..... 2. H 12
Shim-1mm ..... 2. H 15
Shock absorber isolator ..... 2. I 18
Shoe hold down kit -axle set ..... 2. N 04

Shorting link-power seat ..... 1. J 11
Shorting link-power seat ..... 3. F 16
Shorting link-trunk ..... 3. G 02
Shorting plug-5 pin diagnostic ..... 3. F 06
Shorting socket -2 way ..... 1. M 16

Shrink seal -0.5mm-pink ..... 3. F 13
Side harness and bulkhead grommet ..... 3. F 02
Side harness-LH ..... 3. F 08
Side harness-RH ..... 3. F 09
Side harness-RH ..... 3. F 10

Side marker lamp lens -RH front ..... 3. K 10
Side marker lamp-assembly-RH front ..... 3. K 10
Side moulding cup and rivet-assembly ..... 4. K 15
Side moulding cup and rivet-assembly ..... 4. K 16
Side moulding-RH front fender ..... 4. K 15

Side moulding-RH front fender ..... 4. K 16
Side moulding-RH front wing-lower ..... 4. K 17
Side plate ..... 2. E 15
Side seal ..... 1. N 11
Side seal ..... 3. D 07

Silencer mounting-rear ..... 2. C 15
Silencer mounting-rear ..... 2. C 17
Silent run channel -RH/LH front ..... 4. N 06
Silent run channel -RH/LH rear ..... 4. N 11
Sill carpet-RH ..... 4. I 11

Sill carpet-RH-Coffee ..... 4. I 13
Sill closing panel-RH ..... 5. C 11
Sill panel-RH ..... 5. C 08
Sill panel-assembly-RH inner ..... 5. C 07
Sill sealing plug ..... 5. C 07

Single clip-single ..... 5. F 08
Six way seat adjuster-front seat ..... 4. D 18
Sixlight glass-assembly-RH-Securiv-black ..... 4. M 03
Ski holder -roof rack ..... 5. E 09
Sleeve ..... 1. J 07

Sleeve ..... 1. J 08
Sleeve ..... 2. E 05
Sleeve ..... 2. E 06
Sleeve ..... 4. D 17
Slide cam ..... 4. K 02

Sliding arm ..... 2. E 15
Sliding block shaft ..... 2. E 15
Sliding block-assembly ..... 2. E 15
Sliding link ..... 1. L 10
Slipflex bush ..... 2. J 03

Slotted cheese head screw-M5 ..... 3. I 07
Small end bearing ..... 1. F 10
Small end bearing ..... 1. F 12
Snap ring ..... 2. F 02
Snap ring ..... 2. F 03

Snap ring ..... 2. F 04
Snap ring ..... 2. F 05
Snap ring ..... 2. F 06
Snap ring ..... 2. F 07
Snap ring ..... 2. F 08

Snap ring ..... 2. F 09
Snap ring ..... 2. F 10
Snap ring ..... 2. F 15
Snap ring ..... 2. E 17
Snap ring ..... 3. C 10

Snap ring ..... 3. C 11
Snap ring-1.5mm ..... 2. E 16
Snap ring-2.5mm ..... 2. E 18
Snap-in valve ..... 2. K 08
Snap-in valve ..... 2. K 15

Snap-in valve ..... 2. K 18
Snow chain kit ..... 5. E 08
Socket and hose-assembly ..... 1. M 05
Socket head bolt ..... 2. N 04
Socket head cap screw ..... 2. N 04

Socket head cap screw ..... 2. N 06
Socket head screw ..... 1. G 15
Socket head screw -M4 ..... 4. K 02
Socket head screw -sensor to bracket ..... 1. G 05
Socket head screw -sensor to bracket ..... 1. G 06

Socket head screw -sensor to bracket ..... 1. G 07
Socket head screw -sensor to bracket ..... 1. G 08
Socket head screw -sensor to bracket ..... 2. N 08
Socket head screw -sensor to bracket ..... 2. N 09
Socket retainer ..... 4. G 11

Socket stowage box-RH front door ..... 3. F 02
Socket stowage box-RH front door ..... 4. O 04
Socket-0.5mm white cable-AMP Econoseal ..... 3. F 12
Socket-0.5mm white cable-PMHD socket ..... 3. F 11
Socket-plastic ..... 3. K 03

Socket-plastic ..... 4. I 07
Solar sensor ..... 3. D 12
Solar sensor cover ..... 4. I 05
Solenoid ..... 3. I 07
Solenoid shift valve-gearbox ..... 2. E 08

Solenoid valve ..... 1. J 07
Solenoid valve ..... 1. K 07
Solenoid valve ..... 1. J 08
Solenoid valve block-assembly ..... 2. K 04
Solenoid valve block-assembly-twin ..... 2. K 05

Solenoid valve-assembly ..... 2. K 04
Solenoid valve-moulded connector ..... 1. L 04
Solenoid valve/relief valve-assembly ..... 2. K 04
Solid mounting stud -motor to regulator ..... 4. N 12
Solid rubber grommet -2.75" diameter ..... 2. I 10

Spacer ..... 1. I 05
Spacer ..... 2. M 15
Spacer ..... 2. M 16
Spacer ..... 4. K 07
Spacer ..... 4. K 10

Spacer ..... 4. I 12
Spacer ..... 4. K 12
Spacer ..... 4. I 13
Spacer ..... 4. K 14
Spacer ..... 4. K 16

Spacer tube ..... 2. J 14
Spacer tube ..... 2. J 15
Spacer washer ..... 3. E 05
Spacer washer ..... 4. I 06
Spacer washer-18mm ..... 2. E 15

Spacer-0.13" ..... 2. M 07
Spacer-3.4mm/2.9mm ..... 2. J 14
Spacer-4mm ..... 4. D 16
Spacer-8mm ..... 4. D 18
Spacer-inner-wishbone ..... 2. J 15

Spacer-thin ..... 2. G 14
Spacer-thin ..... 2. G 17
Spacing boss-outer ..... 2. J 13
Spacing plate-thick ..... 2. J 05
Spacing plate-thin ..... 2. J 03

Spanner 17mm x 19mm ..... 5. F 14
Spare fuse holder ..... 1. J 11
Spare wheel clamp screw ..... 2. L 03
Spare wheel clamp washer ..... 2. L 03
Spare wheel cover-Rattan ..... 4. I 16

Spark plug ..... 1. J 04
Spark plug boss seal ..... 1. G 02
Spark plug boss seal ..... 1. H 03
Spark plug boss seal ..... 1. H 04
Spark plug boss seal ..... 1. F 16

Spark plug socket ..... 5. E 13
Speaker moulding ..... 3. J 07
Special bolt ..... 2. J 04
Special bolt ..... 2. J 06
Special bolt ..... 2. I 18

Special bolt ..... 4. N 15
Special bolt ..... 4. N 17
Special bolt-M12 x 32mm ..... 2. J 02
Special bolt-M12 x 32mm ..... 2. N 02
Special bolt-caliper to vertical link ..... 2. N 03

Special pipe clip-hose to crush tube ..... 2. I 06
Special washer ..... 1. E 06
Special washer ..... 1. E 08
Special washer ..... 2. G 03
Special washer ..... 2. G 04

Special washer ..... 2. J 07
Special washer ..... 2. I 08
Special washer ..... 4. K 11
Special washer ..... 4. K 12
Special washer ..... 4. N 12

Special washer ..... 4. K 13
Special washer ..... 4. K 14
Special washer-0.84mm ..... 2. F 13
Special washer-0.84mm ..... 2. F 14
Special washer-front ..... 2. J 04

Special washer-rear 2 J 06
Speed control actuator 1 M 16
Speed control actuator pump 1 M 16
Speed control bracket 1 L 10
Speed control continuity unit 1 J 11
Speed control module 1 J 15
Speed nut 1 M 07
Speed nut 4 J 12
Speed sensor rotor 2 G 10
Speed sensor shim 3 H 06
Speed sensor-RH front 2 N 08
Speed sensor-anti lock brake system-RH 2 N 09
Speed transducer-gearbox 2 E 08
Speed transducer-gearbox 2 F 10
Speedometer sensor 3 H 06
Speedometer-Mph 3 H 02
Speedometer/tachometer gauge-Mph 3 H 03
Speedometer/tachometer gauge-assembly- 3 H 05
Spherical bearing 2 G 04
Spherical joint 2 J 14
Spherical washer 2 G 03
Spherical washer 2 G 04
Spider shaft 2 F 15
Spigot bearing 2 G 02
Spigot bearing 2 F 18
Spigot bush shim 2 J 13
Spire clip 3 H 11
Spire clip 3 H 12
Spire fastener-no.8 4 G 12
Spire fastener-surround 3 K 09
Spire nut 2 C 10
Spire nut 2 C 14
Spire nut 2 C 16
Spire nut 2 D 02
Spire nut 3 J 05
Spire nut 4 G 04
Spire nut 4 G 05
Spire nut 4 D 11
Spire nut 4 D 15
Spire nut 4 I 15
Spirol pin-3mm diameter 1 G 09
Spirol pin-4mm diameter 1 G 04
Spirol pin-4mm diameter 1 G 11
Splash shield backplate -RH 2 N 05
Split cone 2 I 11
Split cone 2 I 12
Split cone 2 I 13
Split cone 2 I 14
Split hose 2 E 09
Split pin 1 L 11
Split pin 2 J 02
Split pin 2 J 04
Split pin 2 J 06
Split pin 2 E 14
Split pin 2 M 14
Split pin 2 I 15
Split pin 2 I 16
Split pin 2 M 16
Spoiler panel 4 K 04
Spoiler panel 4 L 13
Sponge 5 F 09
Sports mode switch 2 E 13
Spring 2 K 11
Spring 4 D 17
Spring clip 1 M 05
Spring clip 1 M 06
Spring clip 1 N 07
Spring clip 1 M 08
Spring clip 1 L 16
Spring clip 2 G 07
Spring clip 2 G 08
Spring clip 3 I 06
Spring clip 4 N 07
Spring clip 1 N 10
Spring clip 4 D 17
Spring clip 4 G 17
Spring clip-control cable to door 4 N 15
Spring clip-control cable to door 4 N 17
Spring clip-finisher to facia 4 I 09
Spring clip-fuel hose to tank 1 L 15
Spring cradle 1 E 05
Spring cradle 1 E 06
Spring cradle 1 E 07
Spring cup-lower 1 E 05
Spring cup-lower 1 E 06
Spring cup-lower 1 E 07
Spring dowel 1 G 02
Spring dowel 1 G 03
Spring dowel 1 G 05
Spring dowel 1 G 06
Spring dowel 1 G 07
Spring dowel 1 G 08
Spring dowel 1 E 09
Spring dowel 1 E 10
Spring dowel 1 E 12
Spring dowel 1 G 15
Spring dowel 1 F 17
Spring fix pin 2 M 15
Spring isolator 2 J 14
Spring nut 3 K 03
Spring nut 3 L 02
Spring nut 4 L 15
Spring nut 4 D 02
Spring pan-RH 2 I 17
Spring pan-upper 2 J 14
Spring pin 1 L 12
Spring plate -upper 2 J 14
Spring retainer 2 G 03
Spring retainer 2 G 04
Spring ring 2 G 03
Spring ring 2 G 04
Spring seat 1 L 11
Spring seat 1 L 13
Spring seat-lower 1 E 05
Spring seat-lower 1 E 06
Spring seat-lower 1 E 07
Spring support 2 J 14
Spring washer 1 J 06
Spring washer 3 D 02
Spring washer 3 D 03
Spring washer 3 D 04
Spring washer 3 D 05
Spring washer 3 D 06
Spring washer 5 E 06
Spring washer-0.3125" 1 H 11
Spring washer-M5 1 J 17
Spring washer-M5 3 I 07
Spring washer-M5 3 L 12
Spring washer-M5 5 E 10
Spring washer-M8 1 E 06
Spring washer-M8 1 E 08
Spring washer-M8 2 H 04
Spring washer-M8 2 H 08
Spring washer-M8 2 G 07
Spring washer-M8 2 J 07
Spring washer-M8 2 J 08
Spring washer-M8 2 G 08
Spring washer-M8 2 I 06
Spring washer-M8 2 I 09
Spring washer-M8 2 G 11
Spring washer-M8 2 H 11
Spring washer-M8 2 G 12
Spring washer-M8 2 M 13
Spring washer-M8 2 M 15
Spring washer-M8 2 G 15
Spring washer-M8 2 M 16
Spring washer-M8 2 H 02
Spring washer-M8 3 H 06
Spring washer-M8 3 I 08
Spring washer-M8 3 I 09
Spring washer-M8 3 I 10
Spring washer-M8 4 D 17
Spring washer-M8 4 D 18
Spring washer-M8 5 C 04
Spring-A-type 2 I 10
Spring/damper mounting-top 2 J 14
Spring/strut mounting -top 2 J 14
Squab backcover-ABS moulding-RH 4 C 06
Squab backcover-ABS moulding-RH 4 C 12
Squab backcover-LH 4 D 02
Squab backcover-RH 4 D 03
Squab backcover-RH 4 C 18
Squab cover 4 D 03
Squab cover-RH 4 D 15
Squab cover-cloth 4 C 18
Squab cover-cloth-RH rear 4 D 11
Squab cover-cloth-rear 4 D 05
Squab cover-cloth-rear 4 D 08
Squab cover-front-cloth-inner piping 4 C 05
Squab cover-front-cloth-inner piping 4 C 11
Squab cover-leather-RH rear 4 D 12
Squab cushion/frame cover-RH 4 C 07
Squab cushion/frame cover-RH 4 C 13
Squab cushion/frame cover-RH 4 D 02
Stabilising link 3 D 02
Stabilising link 3 D 03
Stabilising link 3 D 04
Stabilising link 3 D 05
Stabilising link 3 D 06
Starter motor drive-assembly 3 I 07
Starter motor-new 3 I 07
Starter solenoid link lead-Lucas 3 F 04
Steady bracket 2 M 08
Steel armature/knee bolster -driver's side 4 G 12
Steel clutch plate -1.8mm 2 E 16
Steering column cover-upper 3 I 11
Steering column cover-upper 3 I 12
Steering column damper-lower 2 I 10
Steering column lock barrel -assembly 3 I 11
Steering column lock-assembly 3 I 11
Steering column lock-assembly 3 I 12
Steering column lock/switch-assembly 3 I 12
Steering column mounting bracket 2 I 09
Steering column mounting bracket-assembly 2 I 08
Steering column shaft/swing link-assembly 2 I 10
Steering column spacer 2 I 08
Steering column-assembly-upper 2 I 08
Steering column-assembly-upper 2 I 09
Steering pump adaptor 2 I 07
Steering pump coupling 2 I 07
Steering rack and pinion-assembly 2 I 02
Steering rack and pinion-assembly-new 2 I 03
Steering wheel centre-Warm charcoal 2 I 14
Steering wheel centre-Warm charcoal 2 I 11
Steering wheel centre-Warm charcoal 2 I 12
Steering wheel centre-assembly-Warm 2 I 13
Steering wheel-assembly-Warm charcoal 2 I 11
Steering wheel-assembly-Warm charcoal 2 I 12
Steering wheel-assembly-Warm charcoal 2 I 13
Steering wheel-assembly-Warm charcoal 2 I 14
Stepped connector 3 D 08
Stepped hose 3 D 08
Stepped washer 2 J 16
Stepped washer 2 J 17
Stepper motor 1 K 02
Stepper motor kit 1 K 03
Stoneguard 1 L 15
Stoneguard-torque converter housing 2 F 05
Stoneguard-torque converter housing 2 E 06
Stop pin 2 F 11

Stop pin 2 F 12
Stop ring 2 F 03
Stop ring 2 F 04
Stop ring 2 F 07
Stop ring 2 F 08
Stop ring 2 F 09
Stop ring 2 F 10
Stop rubber-J-gate 2 E 15
Stoplight switch 2 M 08
Stowage support -Doeskin 4 J 14
Striker 4 N 03
Striker 5 C 12
Striker friction plate 4 N 03
Striker pin -front/rear 4 O 03
Stripped engine 1 E 03
Stripped engine-high compression 1 E 02
Strut gaiter 2 J 15
Strut gasket 4 K 12
Stub axle 2 J 02
Stub pipe adaptor 1 K 08
Stub pipe adaptor 1 H 10
Stud 1 G 05
Stud 1 G 06
Stud 1 G 07
Stud 1 H 07
Stud 1 G 08
Stud 1 H 08
Stud 1 H 09
Stud 1 H 10
Stud 1 H 11
Stud 1 H 12
Stud 1 G 15
Stud 1 N 15
Stud 1 E 16
Stud 1 N 16
Stud 1 E 17
Stud 1 N 17
Stud 2 G 05
Stud 2 G 06
Stud 2 G 07
Stud 2 G 08
Stud 2 M 08
Stud 2 M 09
Stud 2 M 10
Stud 2 E 11
Stud 2 H 12
Stud 2 H 14
Stud 2 F 16
Stud retainer 4 H 10
Stud retainer 4 H 15
Stud retainer 4 H 18
Stud retainer-fir tree 4 G 12
Stud tie 2 G 07
Stud-colour keyed 4 G 08
Stud-colour keyed 4 H 10
Stud-edge finisher/ski slope 4 H 06
Stud-pedal stop to retainer 1 L 11
Stud-pedal stop to retainer 1 L 13
Stud-upper 4 G 13
Stud-valve and adaptor to exhaust manifold 1 K 08
Styled headlamp kit 3 K 03
Sub-frame bush 2 J 13
Sump pan gasket 2 E 10
Sun gear 2 F 15
Sun gear shaft 2 F 15
Sunblind kit-Doeskin 4 J 16
Sunblind retention bezel-Doeskin 4 J 10
Sunroof motor 4 K 03
Sunroof motor bracket 4 K 03
Sunroof opening mechanism-RH 4 K 02
Sunroof panel 4 K 02
Sunroof panel-inner 4 J 08
Sunroof seat -outer 4 K 02
Sunroof switch module-assembly-Doeskin 3 L 06
Sunroof undertray 4 K 02
Sunvisor bracket and arm -RH 4 J 12
Sunvisor foot finisher -Doeskin 4 J 12
Sunvisor foot finisher -Doeskin 4 J 14
Sunvisor support clip-Doeskin 4 J 12
Sunvisor support clip-Savile grey 4 J 14
Sunvisor-RH-leather-Doeskin 4 J 13
Sunvisor-RH-velour 4 J 12
Supplementary air adaptor gasket 1 H 02
Supplementary air adaptor gasket 1 H 05
Supplementary air adaptor gasket 1 H 06
Supplementary air adaptor gasket 1 H 07
Supplementary air adaptor gasket 1 H 09
Supplementary air valve 1 K 02
Supplementary gasket set 1 H 02
Supplementary gasket set 1 H 04
Supplementary gasket set 1 H 05
Support bracket 1 F 02
Support bracket 1 L 02
Support bracket 1 F 03
Support bracket 1 K 04
Support bracket 1 K 05
Support bracket 1 L 09
Support bracket 1 E 13
Support bracket 1 E 14
Support bracket 2 I 08
Support bracket 2 I 09
Support bracket 4 N 05
Support bracket-edge finisher 4 G 05
Support bracket-rear 4 J 15
Support bracket-sunroof 4 K 02
Support clip-grille mounting bracket 4 L 14
Support frame-lamp-RH 3 K 09
Support mandrel 1 E 12
Support plate 1 G 10
Support plate 2 J 13
Support plate stud 2 H 03
Support plate stud 2 H 04
Support plate stud 2 H 05
Support plate stud 2 H 06
Support plate stud 2 H 07
Support plate stud 2 H 08
Support plate stud 2 H 09
Support plate stud 2 H 10
Support plate stud 2 J 13
Support ring 2 F 02
Support ring 2 F 05
Support ring 2 F 06
Support ring 2 E 18
Surge flap-assembly-leaded fuel 1 M 08
Suspension bumpstop 2 J 17
Suspension damper-assembly-front 2 I 18
Suspension damper-assembly-rear 2 J 14
Suspension down solenoid-assembly 2 K 04
Suspension down solenoid-assembly 2 K 05
Suspension mounting stud 2 H 04
Suspension mounting stud 2 H 08
Suspension mounting stud 2 H 11
Suspension subframe-assembly 2 J 13
Suspension up solenoid-assembly 2 K 04
Swaged petrol hose 1 M 04
Swinging arm J-gate seal 2 E 15
Switch 3 H 16
Switch dolly-fog lamps-front 3 H 11
Switch dolly-fog lamps-front 3 H 12
Switch dolly-heated rear window 3 H 09
Switch harness 4 K 03
Switch knob-control panel 3 D 09
Switch mounting bracket 3 H 08
Switch mounting bracket 4 D 18
Switch mounting plate-veneer-RH 4 H 11
Switch panel-assembly-driver's door 4 E 02
Switchpack and clock module-assembly 3 H 09
Switchpack housing 3 H 16
T-connector 3 E 02
T-connector 3 D 16
T-piece 1 I 04
T-piece 1 K 07
T-piece 1 J 08
T-piece 1 N 12
T-piece 1 N 13
T-piece 1 N 14
T-piece 1 M 16
T-piece elbow 1 I 04
T-valve 3 E 08
Tab washer 1 G 09
Tab washer 1 G 11
Tab washer 1 E 12
Tab washer 2 F 09
Tab washer 2 F 10
Tab washer 2 G 11
Tab washer 2 E 12
Tab washer 2 G 12
Tab washer 2 G 15
Tab washer 2 G 16
Tab washer 2 G 18
Tachometer 3 H 02
Tactile panel-upper-bright finish 4 K 16
Tailpipe clamp 2 C 12
Tailpipe clamp 2 C 13
Tailpipe clamp 2 C 15
Tailpipe clamp 2 C 16
Tailpipe clamp 2 C 17
Tailpipe clamp 2 C 18
Tank floor crossmember 5 C 15
Tank strap-assembly 1 M 06
Tank strap-assembly 1 M 09
Taper roller bearing 2 J 10
Taper roller bearing 2 J 12
Taper roller bearing 2 H 12
Taper roller bearing 2 H 14
Tappet 1 F 15
Tappet adjustment shim-0 085" 1 F 13
Tappet adjustment shim-0 085" 1 G 17
Tappet adjustment shim-0 0895" 1 F 14
Tappet block -assembly 1 G 15
Tappet-standard 1 G 03
Tappet-standard 1 G 16
Tapping plate 5 C 11
Taptite screw 2 E 14
Taptite screw 2 E 15
Taptite screw 3 H 15
Taptite screw-lumbar adjustment handwheel 4 C 06
Taptite screw-lumbar adjustment handwheel 4 D 03
Taptite screw-lumbar adjustment handwheel 4 C 12
Taptite screw-lumbar adjustment handwheel 4 D 02
Telephone armrest lid -ambla 4 H 04
Temperature sensor 1 K 08
Temperature sensor 1 N 12
Temperature sensor 1 N 13
Temperature sensor 1 N 14
Temperature switch 1 N 12
Temperature transmitter 1 N 12
Temperature transmitter 1 N 13
Temperature transmitter 1 N 14
Tension spring 2 N 06
Tension spring 2 E 14
Tensioner piston housing 1 G 10
Terminal post -assembly 3 I 06
Terminal post lead 3 F 04
Terminal post sleeve 3 I 06
Thermal sensor 1 J 13
Thermal sensor mounting bracket 1 J 13
Thermal switch 1 N 11
Thermal switch gasket 1 N 11
Thermal valve 1 N 12

Thermal valve 1. N 14
Thermocouple compression gland 1. J 13
Thermocouple-assembly 1 J 13
Thermostat 1 N 12
Thermostat 1 N 13
Thermostat 1. N 14
Thermostat cover 1 N 12
Thermostat cover 1 N 13
Thermostat cover 1 N 14
Thermostat housing 1. N 12
Thermostat housing O-ring 1 H 02
Thermostat housing O-ring 1 H 03
Thermostat housing O-ring 1 H 04
Thermostat housing O-ring 1 N 12
Thermostat housing O-ring 1 N 13
Thermostat housing O-ring 1 N 14
Thermostat housing-assembly-O-ring sealing 1 N 13
Thermostat housing-assembly-O-ring sealing 1. N 14
Thermostat switch 1 N 11
Thread forming screw 3 I 11
Throttle body 1. L 04
Throttle body 1 L 05
Throttle body 1. L 06
Throttle body 1. L 07
Throttle body gasket 1 H 02
Throttle body gasket 1 H 05
Throttle body gasket 1 H 06
Throttle body gasket 1. L 04
Throttle body gasket 1. L 06
Throttle body gasket 1. L 07
Throttle body trumpet 1 L 02
Throttle body trumpet gasket 1 H 02
Throttle body trumpet gasket 1. L 02
Throttle body trumpet gasket 1 H 03
Throttle body trumpet gasket 1 H 04
Throttle body trumpet gasket 1 H 05
Throttle body trumpet gasket 1 H 06
Throttle body trumpet gasket 1. L 04
Throttle body trumpet gasket 1. L 06
Throttle body trumpet gasket 1. L 07
Throttle cable pulley 1. L 10
Throttle coupling -assembly 1 L 10
Throttle coupling shaft 1 L 10
Throttle disc 1. L 04
Throttle disc 1. L 05
Throttle disc 1. L 06
Throttle disc 1. L 07
Throttle pedestal 1 L 10
Throttle potentiometer 1. L 04
Throttle potentiometer 1 L 05
Throttle potentiometer 1 L 06
Throttle potentiometer 1. L 07
Throttle spindle 1 L 04
Throttle spindle 1 L 05
Throttle spindle 1 L 06
Throttle spindle 1. L 07
Throttle spindle lever 1. L 05
Throttle spindle location cup 1 L 05
Throttle spindle nut 1 L 05
Throttle spindle seal 1 H 02
Throttle spindle seal 1. H 05
Throttle spindle seal 1. H 06
Throttle spindle seal 1. L 04
Throttle spindle seal 1 L 05
Throttle spindle seal 1. L 06
Throttle spindle seal 1 L 07
Throttle spindle tabwasher 1. L 05
Throttle stop screw 1. L 04
Throttle stop screw 1. L 05
Throttle stop screw 1 L 06
Throttle stop screw 1. L 07
Throttle stop screw 1. L 10
Thrust washer 1 G 04
Thrust washer 2. I 02
Thrust washer 2. I 03
Thrust washer 2. F 09
Thrust washer 2 F 10
Thrust washer-standard 1. F 05
Thrust washer-standard 1. F 06
Thrust washer-standard 1. F 07
Thrust washer-standard 1. F 08
Tie brace-assembly 2. I 08
Tie down bracket-RH 2. J 08
Tie strap 1. M 05
Tie strap 1. M 06
Tie strap 2. I 08
Tie strap 2. I 09
Tie strap 2. J 10
Tie strap 2. J 12
Tie strap and push-on fix -7" long 5. F 07
Tie strap-10.75" 4. K 07
Tie strap-15.75" 1. M 10
Tie strap-15.75" 3. E 08
Tie strap-4" 1. M 08
Tie strap-4" 3. E 02
Tie strap-4" 5. F 07
Tie strap-7.75" long 1. N 04
Tie strap-7.75" long 1. N 05
Tie strap-7.75" long 1. J 12
Tie strap-7.75" long 1. J 13
Tie strap-7.75" long 1. J 14
Tie strap-7.75" long 3. E 05
Tie strap-7.75" long 3. F 06
Tie strap-7.75" long 3. J 05
Tie strap-7.75" long 3. F 18
Tie strap-7.75" long 4. E 03
Tie strap-7.75" long 4. G 17
Tie wrap 1. I 05
Timing chain damper-lower 1. G 09
Timing chain damper-lower 1. G 11
Timing chain damper-lower -primary 1. G 10
Timing cover-assembly 1. G 05
Timing cover-assembly 1. G 06
Timing cover-assembly-80 amp alternator 1 G 08
Timing cover-assembly-90/115 amp 1. G 07
Timing indicator 1. G 05
Timing indicator 1. G 06
Timing indicator 1. G 07
Timing indicator 1. G 08
Timing ring 1. F 05
Timing ring 1. F 06
Timing ring 1. F 07
Timing ring 1. F 08
Toeboard-RH 4. I 18
Tommy bar 5. E 14
Tonneau panel-RH rear 5. C 16
Tonneau side moulding -RH rear 4. K 17
Tool case-adjustable spanner 5. E 13
Toolcase support panel 4. I 16
Toolkit-assembly 5. E 13
Top plate 2. I 02
Top plate 2 I 03
Torquatrol unit 1. N 06
Torque converter 2. E 06
Torque converter housing 2. E 05
Torque converter housing 2. E 06
Torque converter-assembly-new 2. E 05
Torque plate-assembly 2. N 04
Torsion spring 1. L 04
Torsion spring 1. L 05
Torsion spring 1. L 06
Torsion spring 1. L 07
Torx drive screw 4. K 09
Torx flange head screw 1. M 02
Torx head screw 1. M 02
Torx head screw 4. M 08
Torx head screw 4. M 09
Torx head screw 4. M 10
Torx head screw 4. M 11
Torx head screw-M6 4. K 07
Torx head screw-M6 4. K 10
Torx head screw-M6 4. K 12
Torx head screw-M6 4. K 14
Torx screw-M10 x 25mm 4. D 16
Torx screw-M10 x 30mm 4. D 18
Torx screw-without washer-frame to door 4. N 05
Torx screw-without washer-frame to door 4. N 09
Torx self tapping screw 4. L 18
Tow bar kit 3. L 12
Tow bar kit 5. E 10
Tow bar kit 5. E 11
Tow eye kit 4. K 07
Towbar-assembly 5. E 10
Towing mirror 5. E 10
Transmission adaptor plate 1. H 13
Transmission control module 1. I 17
Transmission harness 3. F 07
Treadplate endcap -RH 4. G 03
Treadplate insert-front-Jaguar 4. G 02
Treadplate-front 4. G 02
Trim clip-red 4. G 06
Trim clip-red 4. G 12
Trim fastener 4. G 11
Trim panel-RH-Cream 4. H 16
Trim strip 3. H 03
Trim strip 3. H 05
Trim stud 2. J 07
Trip computer keyboard-assembly 3. H 11
Trip computer module 3. H 12
Trip computer-assembly 3. H 12
Triple lip oil seal 2. H 12
Triple lip oil seal 2. H 14
Trunk floor carpet-front 4 I 15
Trunk floor panel 5 C 15
Trunk fume baffle panel -RH 5. C 13
Trunk lamp switch 3. L 03
Trunk lamp-assembly 3 L 03
Trunk latch-assembly 4 N 03
Trunk lid and cubby box lockset 4. N 04
Trunk lid and cubby box lockset 4. J 07
Trunk lid aperture finisher-lower 4. K 18
Trunk lid emblem-Jaguar 4. L 06
Trunk lid gas strut 4. J 04
Trunk lid hinge-RH 5. C 12
Trunk lid latch actuator-remote release 4. N 04
Trunk lid latch cover 4. N 03
Trunk lid latch link 4. N 03
Trunk lid lock finisher 4. K 18
Trunk lid lock-less key and barrel 4. N 04
Trunk lid panel-assembly 5. C 18
Trunk lid plaque -Jaguar 4. L 06
Trunk lid plaque -Vanden Plas -silver/black 4. L 07
Trunk lid seal 4. O 05
Trunk lid trimboard 4. J 04
Trunk lock striker-assembly 4. N 03
Trunk panel carpet -rear -Rattan 4. I 15
Trunk side carpet brace -LH 4. I 15
Trunk side carpet-RH-Rattan 4. I 15
Trunk side finisher -RH 4. L 02
Tube 2. G 03
Tube 2 G 04
Tube 3. D 12
Tube 5. C 06
Tube connector 1. L 04
Tube-2500mm 3 E 02
Tunnel carpet-rear 4 I 12
Tunnel carpet-rear -Coffee/Cream 4. I 13
Tunnel pad -rear 4 J 02
Turn stud-Cream 4 G 09
Turnbuckle stud-cover to scuttle side casing- 4. G 09

Turnbuckle stud-cover to scuttle side casing- 4. G 04
Twin seatbelt buckle -assembly-rear 4. F 09
Tyre pressure gauge 5. E 14
Tyre valve 2. K 11
Tyre valve-long 2. K 16

Tyre valve-short 2. L 02
Tyre valve-short 2. K 08
Tyre valve-short 2. K 09
Tyre valve-short 2. K 10
Tyre valve-short 2. K 12

Tyre valve-short 2. K 14
Tyre valve-short 2. K 17
U-bolt 2. C 10
U-bolt 2. C 11
U-spring nut 2. I 10

U-type spring nut 4. H 06
Under bonnet lamp-assembly 3. L 03
Underscuttle casing label 1. J 16
Underscuttle pad steel armature washer -M6- 4. G 12
Underscuttle pad-LH 4. G 06

Underscuttle pad-driver's side 4. G 12
Underscuttle pad-passenger-RH-Cream 4. I 08
Undertray drain tube -front 4. K 03
Undertray-RH 3. H 11
Undertray-RH 3. H 12

Undertray-RH 4. K 04
Undertray-RH 4. L 15
Universal joint 2. G 10
Universal joint 2. G 13
Universal joint kit 2. G 11

Universal joint kit 2. G 12
Universal joint kit 2. G 15
Universal joint kit 2. G 16
Universal joint kit 2. G 18
Upper fulcrum bolt 2. J 03

Upper fulcrum bolt 2. J 05
Upper potentiometer 3. C 04
Upper potentiometer 3. D 11
Upper wishbone-RH front 2. J 03
Vacuum actuator 3. C 06

Vacuum actuator 3. C 07
Vacuum elbow 3. D 16
Vacuum hose 1. I 03
Vacuum hose 1. M 16
Vacuum hose 3. D 08

Vacuum hose 3. D 15
Vacuum hose 3. D 16
Vacuum hose 4. I 04
Vacuum pipe 3. D 08
Vacuum pipe 3. D 15

Vacuum pipe elbow 1. I 09
Vacuum pipe elbow 1. I 13
Vacuum pipe-730mm 1. I 05
Vacuum pipe-White 3. D 16
Vacuum pump spacer 1. M 16

Vacuum restrictor-blue 3. D 16
Vacuum solenoid-assembly-RH 3. D 16
Vacuum stepped hose 1. L 17
Vacuum stepped hose 3. D 16
Vacuum tank 3. D 08

Vacuum valve bracket-assembly 1. K 07
Valance panel and crushtube-assembly-RH 5. C 05
Valance panel-RH front 5. C 05
Valance reinforcement-RH 5. C 07
Valve adaptor 1. K 08

Valve and pinion seal kit 2. I 04
Valve and pinion-assembly 2. I 02
Valve and pinion-assembly 2. I 03
Valve block 2. K 04
Valve block mounting 2. M 07

Valve block/seal-assembly 2. K 02
Valve body O-ring 2. E 08
Valve body gasket 2. E 07
Valve body nut 2. E 08
Valve collar-inlet 1. F 13

Valve cotter-inlet 1. F 13
Valve cotter-inlet 1. G 18
Valve guide circlip 1. G 02
Valve guide circlip 1. G 03
Valve guide circlip 1. F 13

Valve guide circlip 1. F 17
Valve guide-inlet-1st oversize 1. G 02
Valve guide-inlet-1st oversize 1. G 03
Valve guide-inlet-1st oversize 1. F 13
Valve guide-inlet-1st oversize 1. F 17

Valve plate-assembly 3. C 10
Valve plate-assembly 3. C 11
Valve seat kit 2. K 04
Valve seat insert-inlet 1. F 13
Valve spring 1. G 18

Valve spring seat 1. F 13
Valve spring seat 1. G 18
Valve spring-outer 1. F 13
Vanity mirror -assembly-leather-Doeskin 4. J 14
Vapour hose-0.125" bore x 65" 1. L 04

Vapour hose-0.125" bore x 65" 1. J 07
Vapour hose-0.125" bore x 65" 1. J 08
Vapour pipe 1. M 04
Vapour pipe-assembly 1. M 06
Vapour pipe-pipe to vacuum valve 1. I 03

Vapour pipe-pipe to vacuum valve 1. L 17
Vee mounting 2. J 07
Vehicle maintenance sheets -English 5. F 05
Veneer kit-console extension/rear vent 3. C 08
Veneer kit-console extension/rear vent 4. H 08

Veneer kit-facia panel 4. I 08
Veneer kit-facia panel 4. I 09
Veneer panel 4. J 06
Vent box -assembly-RH 5. C 14
Vent box outlet 5. C 14

Vent cover 1. J 05
Vent finisher-figured walnut 3. C 08
Vent operating knob 3. C 08
Vent tube conversion kit 3. I 06
Vent/drain tube support 3. I 03

Vent/drain tube support 3. I 06
Ventilation air duct -RH 3. C 08
Vertical link-RH 2. J 02
Viton olive 1. M 03
Viton olive 1. M 02

Voltage warning label 1. J 04
WD40 fluid-5 litre container 5. F 10
WD40 spray-small container 5. F 10
Waist finisher/seal-RH rear door 4. N 10
Waist finisher/seal-RH-door glass 4. N 07

Warning triangle 5. E 02
Warranty codes -English 5. F 03
Washer 1. G 02
Washer 1. N 04
Washer 1. N 05

Washer 1. E 06
Washer 1. N 06
Washer 1. E 08
Washer 1. K 08
Washer 1. L 08

Washer 1. J 12
Washer 1. N 12
Washer 1. E 13
Washer 1. M 13
Washer 1. M 14

Washer 1. N 14
Washer 1. M 15
Washer 1. N 15
Washer 1. F 16
Washer 1. N 16

Washer 1. N 17
Washer 1. E 18
Washer 2. C 02
Washer 2. I 04
Washer 2. K 02

Washer 2. G 03
Washer 2. J 03
Washer 2. J 04
Washer 2. G 04
Washer 2. C 05

Washer 2. G 05
Washer 2. J 06
Washer 2. G 06
Washer 2. J 07
Washer 2. J 08

Washer 2. G 08
Washer 2. M 08
Washer 2. C 09
Washer 2. E 09
Washer 2. F 09

Washer 2. J 10
Washer 2. M 09
Washer 2. F 10
Washer 2. M 10
Washer 2. J 12

Washer 2. G 12
Washer 2. J 13
Washer 2. F 14
Washer 2. M 15
Washer 2. F 15

Washer 2. I 15
Washer 2. E 16
Washer 2. F 16
Washer 2. I 16
Washer 2. J 17

Washer 2. M 16
Washer 2. E 17
Washer 2. H 02
Washer 3. D 02
Washer 3. J 04

Washer 3. D 04
Washer 3. E 04
Washer 3. E 05
Washer 3. C 06
Washer 3. C 07

Washer 3. D 07
Washer 3. K 11
Washer 3. C 13
Washer 3. C 18
Washer 4. K 02

Washer 4. O 03
Washer 4. I 06
Washer 4. F 04
Washer 4. J 06
Washer 4. I 12

Washer 4. I 13
Washer 4. L 15
Washer 4. I 15
Washer 4. N 17
Washer faced bolt 1. G 07

Washer faced bolt 1. G 08
Washer faced bolt 1. H 08
Washer faced bolt 1. H 09
Washer faced bolt 1. H 10
Washer faced bolt 1. G 11

Washer faced bolt 1. G 12
Washer faced bolt 1. F 15
Washer faced bolt 1. F 18
Washer faced bolt 1. E 17
Washer faced bolt 2. C 02

Washer faced bolt 2. C 03
Washer faced bolt 2. C 05
Washer faced bolt 2. C 06
Washer faced bolt 2. C 07
Washer faced bolt 2. C 08

Washer faced bolt 2 C 09
Washer faced bolt 2 C 11
Washer faced bolt 3 D 02
Washer faced bolt 3 D 03
Washer faced bolt 3 D 04
Washer faced bolt 3 D 05
Washer faced bolt 3 D 06
Washer faced bolt 3 I 09
Washer faced bolt 3 C 12
Washer faced bolt 3 C 13
Washer faced bolt 3 C 14
Washer faced bolt 3 C 15
Washer faced bolt 3 C 17
Washer faced bolt 3 C 18
Washer faced bolt-M10 x 35mm-lower 3 I 07
Washer faced bolt-M10 x 35mm-lower 3 C 16
Washer faced bolt-M8 x 100mm-flanged 1 N 13
Washer faced bolt-M8 x 100mm-flanged 1 N 14
Washer faced bolt-M8 x 10mm 1 G 02
Washer faced bolt-M8 x 10mm 1 G 03
Washer faced bolt-M8 x 10mm 1 G 05
Washer faced bolt-M8 x 10mm 1 G 06
Washer faced bolt-M8 x 10mm 1 G 09
Washer faced bolt-M8 x 10mm 1 F 17
Washer faced bolt-M8 x 60mm 1 E 12
Washer faced bolt-M8 x 60mm 1 E 13
Washer faced bolt-M8 x 60mm 1 E 14
Washer faced bolt-M8 x 9mm 1 F 05
Washer faced bolt-M8 x 9mm 1 H 07
Washer faced bolt-M8 x 9mm 1 F 08
Washer faced bolt-M8 x 9mm 1 G 10
Washer faced bolt-M8 x 9mm 3 I 10
Washer faced setscrew-M8 x 20mm 1 K 04
Washer faced setscrew-M8 x 20mm 1 E 05
Washer faced setscrew-M8 x 20mm 1 K 05
Washer faced setscrew-M8 x 20mm 1 J 06
Washer faced setscrew-M8 x 20mm 1 G 07
Washer faced setscrew-M8 x 20mm 1 E 09
Washer faced setscrew-M8 x 20mm 1 G 09
Washer faced setscrew-M8 x 20mm 1 E 10
Washer faced setscrew-M8 x 20mm 1 G 10
Washer faced setscrew-M8 x 20mm 1 E 12
Washer faced setscrew-M8 x 20mm 1 N 12
Washer faced setscrew-M8 x 20mm 1 N 13
Washer faced setscrew-M8 x 20mm 1 N 14
Washer faced setscrew-M8 x 20mm 1 E 18
Washer faced setscrew-M8 x 20mm 2 I 08
Washer faced setscrew-M8 x 20mm 2 I 09
Washer faced setscrew-M8 x 20mm 2 M 14
Washer faced setscrew-M8 x 20mm 2 M 16
Washer faced setscrew-M8 x 20mm 3 C 13
Washer faced setscrew-M8 x 20mm 3 C 18
Washer faced setscrew-M8 x 20mm 4 G 12
Washer faced setscrew-M8 x 25mm 1 F 02
Washer faced setscrew-M8 x 25mm 1 G 02
Washer faced setscrew-M8 x 25mm 1 G 03
Washer faced setscrew-M8 x 25mm 1 F 03
Washer faced setscrew-M8 x 25mm 1 L 04
Washer faced setscrew-M8 x 25mm 1 L 05
Washer faced setscrew-M8 x 25mm 1 L 06
Washer faced setscrew-M8 x 25mm 1 L 07
Washer faced setscrew-M8 x 25mm 1 N 09
Washer faced setscrew-M8 x 25mm 1 N 10
Washer faced setscrew-M8 x 25mm 1 G 11
Washer faced setscrew-M8 x 25mm 1 G 12
Washer faced setscrew-M8 x 25mm 1 E 13
Washer faced setscrew-M8 x 25mm 1 E 14
Washer faced setscrew-M8 x 25mm 1 F 17
Washer faced setscrew-M8 x 25mm 2 G 02
Washer faced setscrew-M8 x 25mm 2 I 07
Washer faced setscrew-M8 x 25mm 2 F 18
Washer faced setscrew-M8 x 25mm 3 I 09
Washer faced setscrew-M8 x 25mm 3 I 10
Washer headed bolt 3 I 07
Washer pump-screenwash 3 E 02
Washer tube -2265mm-T-piece connector to 3 E 02
Washer-0.25" diameter 3 L 12
Washer-M6-black finish 4 G 12
Washer-M6-black finish 4 G 13
Washer-finisher 4 L 03
Washer-lower 2 J 14
Washer-metric 2 M 02
Washer-metric 2 M 03
Washer-metric 2 M 04
Washer-metric 2 M 05
Washer-metric 2 M 06
Washer-metric 2 J 15
Washer-top 2 I 18
Water deflector-air vent 4 M 02
Water heater -240v-assembly 1 N 11
Water heater restrictor gasket 1 H 02
Water heater restrictor gasket 1 H 05
Water heater restrictor gasket 1 H 06
Water heater restrictor gasket 1 N 09
Water heater restrictor gasket 1 N 10
Water hose 1 N 03
Water hose 1 N 10
Water hose 1 N 11
Water pipe 1 N 10
Water pipe 1 N 11
Water pump bearing 1 N 15
Water pump bearing 1 N 16
Water pump bearing 1 N 17
Water pump body 1 N 15
Water pump body 1 N 16
Water pump bo 1 N 17
Water pump g t 1 N 16
Water pump impeller 1 N 15
Water pump impeller 1 N 16
Water pump impeller 1 N 17
Water pump seal 1 N 15
Water pump seal 1 N 16
Water pump seal 1 N 17
Water pump-assembly 1 N 15
Water pump-assembly 1 N 16
Water pump-assembly 1 N 17
Water rail 1 N 09
Water rail 1 N 10
Water rail gasket 1 H 02
Water rail gasket 1 H 05
Water rail gasket 1 H 06
Water rail gasket 1 N 09
Water rail gasket 1 N 10
Water shield-RH 2 J 02
Water temperature switch-red 3 C 05
Water temperature switch-red 3 D 13
Water valve 1 N 12
Water valve 1 N 13
Water valve 1 N 14
Wave spring washer 2 M 09
Wave spring washer 2 M 10
Wave spring washer 2 M 15
Wave spring washer 2 E 14
Waved clutch plate 2 E 16
Weldnut-pump bracket 3 E 02
Weldnut-pump bracket 3 E 08
Well nut-reservoir 3 E 04
Well nut-reservoir 3 E 08
Wheel balance weight-60g 2 L 02
Wheel balance weight-60g 2 K 08
Wheel balance weight-60g 2 K 09
Wheel balance weight-60g 2 K 11
Wheel balance weight-60g 2 K 14
Wheel balance weight-60g 2 K 15
Wheel balance weight-60g 2 K 16
Wheel balance weight-clip on fixing-10g 2 K 10
Wheel balance weight-clip on fixing-10g 2 K 13
Wheel balance weight-clip on fixing-10g 2 K 17
Wheel bearing-inner 2 J 02
Wheel brace 5 E 12
Wheel nut 2 K 08
Wheel nut 2 K 09
Wheel nut 2 K 11
Wheel nut 2 K 14
Wheel nut 2 K 15
Wheel nut cover 2 K 11
Wheel nut-domed 2 L 02
Wheel nut-domed 2 K 10
Wheel nut-domed 2 K 13
Wheel nut-domed 2 K 16
Wheel nut-domed 2 K 17
Wheel nut-steel wheel 2 K 18
Wheel stud 2 J 02
Wheel stud-threaded 2 J 09
Wheel stud-threaded 2 J 11
Wheel trim 2 K 11
Wheelarch baffle-RH 4 K 04
Wheelarch baffle-RH 5 C 17
Wheelarch extension -RH front 5 C 17
Wheelarch liner-RH 5 C 17
Wheelarch location plate 5 C 17
Wheelarch panel-RH rear-outer 5 C 16
Wheelarch-RH rear-inner/outer 5 C 16
Wheelarch-RH rear-lower 5 C 15
Wheelarch/quarter panel-assembly-RH rear- 5 C 16
Wide mounting bracket-assembly 2 J 13
Wind deflector 4 K 02
Windage tray 1 E 09
Windage tray 1 E 10
Window air demist intake grommet-Warm 4 H 14
Window regulator-assembly-RH front 4 N 12
Windscreen demist vacuum motor 4 I 07
Windscreen demister grille-RH 4 I 05
Windscreen finisher-lower 4 L 18
Windscreen glass spacer 4 L 18
Windscreen glass-clear glass-Triplex 4 L 16
Windscreen glazing rubber 4 L 17
Windscreen panel 5 C 10
Windscreen washer fluid -500ml 5 F 10
Windscreen washer fluid -Trico-100ml 3 E 04
Windscreen wiper switch-assembly 3 H 13
Windscreen wiper switch-assembly 3 H 14
Windsurfer holder -roof rack 5 E 09
Wing motif -RH 4 L 02
Wing nut 4 H 06
Wing panel-RH front 5 C 18
Wing/tonneau coachline tape-RH/LH-Flame 4 L 12
Wiper arm 3 E 06
Wiper arm nut cover 3 E 06
Wiper blade cap nut 3 E 06
Wiper blade-all season 3 E 06
Wiper motor and mechanism -assembly 3 E 05
Wiper motor gasket kit 3 E 05
Wiper motor microswitch 3 E 05
Wiper spindle cover 4 M 02
Wiper/audible warning module 1 J 15
Wire clip 2 M 15
Wire clip-split cone to column 2 I 12
Wire clip-split cone to column 2 I 13
Wire clip-split cone to column 2 I 14
Wishbone arm -RH front-upper 2 J 03
Wishbone arm -RH front-upper 2 J 05
Wishbone bush-upper 2 J 03
Wishbone bush-upper 2 J 05
Wishbone fulcrum bolt 2 J 16
Wishbone tie -assembly 2 J 16
Wishbone-assembly-RH rear 2 J 16
Wishbone/bush-assembly-RH front-upper 2 J 03
Wishbone/bush-assembly-RH front-upper 2 J 05
Woodruff key 1 F 05

Woodruff key ..... 1 F 06
Woodruff key ..... 1 F 07
Woodruff key ..... 1 F 08
Worm drive hose clip ..... 1 I 02
Worm drive hose clip ..... 1 K 02

Worm drive hose clip ..... 1 F 03
Worm drive hose clip ..... 1 K 03
Worm drive hose clip ..... 1 N 03
Worm drive hose clip ..... 1 K 04
Worm drive hose clip ..... 1 N 04

Worm drive hose clip ..... 1 I 05
Worm drive hose clip ..... 1 J 05
Worm drive hose clip ..... 1 K 05
Worm drive hose clip ..... 1 N 05
Worm drive hose clip ..... 1 K 06

Worm drive hose clip ..... 1 J 07
Worm drive hose clip ..... 1 J 08
Worm drive hose clip ..... 1 M 08
Worm drive hose clip ..... 1 N 09
Worm drive hose clip ..... 1 M 10

Worm drive hose clip ..... 1 N 10
Worm drive hose clip ..... 1 N 11
Worm drive hose clip ..... 1 E 18
Worm drive hose clip ..... 1 J 18
Worm drive hose clip ..... 2 I 05

Worm drive hose clip ..... 2 M 07
Worm drive hose clip ..... 2 J 18
Worm drive hose clip ..... 3 E 08
Xylan coated washer ..... 2 H 12
Xylan coated washer ..... 2 H 14

Y-piece ..... 1 I 05
Y-piece connector ..... 1 I 05
Y-piece connector ..... 3 D 16
Y-pipe-low pressure hose ..... 2 J 18
Z-bend bush ..... 4 N 13

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

CAMSHAFTS AND VALVE GEAR ..... 1. G 15
CONNECTING RODS AND PISTONS ..... 1. F 10
CRANKSHAFT AND PULLEY ..... 1. F 05
CYLINDER BLOCK ..... 1. E 09
CYLINDER HEAD ..... 1. F 13
DISTRIBUTOR/AUXILIARY DRIVES ..... 1. G 04
DRIVE BELTS AND PULLEYS ..... 1. G 13
DRIVE PLATE AND FLYWHEEL COVERS ..... 1. H 14
ENGINE AND GEARBOX MOUNTING ..... 1. E 04
ENGINE ASSEMBLY ..... 1. E 02
ENGINE GASKET AND SEAL SETS ..... 1. H 02
INLET AND EXHAUST MANIFOLDS ..... 1. H 07
OIL COOLER AND PIPES ..... 1. F 04
SUMP AND OIL DELIVERY SYSTEMS ..... 1. E 11
TIMING CHAINS AND ADJUSTERS ..... 1. G 05
TRANSMISSION ADAPTOR ..... 1. H 13
AUXILIARY SHAFT-XJ6 ..... 1. G 04
CAMSHAFT AND TAPPET BLOCK-2.9 LITRE ..... 1. G 15
CAMSHAFT AND VALVES-3.2/3.6/4.0 LITRE ..... 1. G 16
CHAIN TENSIONER-UPPER-XJ6 ..... 1. G 12
CRANKSHAFT AND MAIN BEARINGS-2.9 ..... 1. F 05
CRANKSHAFT AND MAIN BEARINGS-2.9 ..... 1. F 06
CRANKSHAFT AND MAIN BEARINGS-3.2/4.0 ..... 1. F 07
CRANKSHAFT AND MAIN BEARINGS-3.6 ..... 1. F 08
CRANKSHAFT BALANCE WEIGHT-2.9/3.6 ..... 1. F 09
CYLINDER BLOCK ASSEMBLY-2.9 LITRE ..... 1. E 09
CYLINDER BLOCK ASSEMBLY-3.2/3.6/4.0 ..... 1. E 10
CYLINDER HEAD AND GASKET-2.9 LITRE ..... 1. F 13
CYLINDER HEAD AND GASKET-3.2/4.0 LITRE ..... 1. F 16
CYLINDER HEAD AND GASKET-3.6 LITRE ..... 1. G 02
CYLINDER HEAD GASKET SET-2.9 LITRE ..... 1. H 02
CYLINDER HEAD GASKET SET-3.2/3.6/4.0 ..... 1. H 03
DRIVE BELTS-2.9 LITRE ..... 1. G 13
DRIVE BELTS-3.2/3.6/4.0 LITRE ..... 1. G 14
DRIVE PLATE ASSEMBLY-2.9/3.6 LITRE ..... 1. H 14
DRIVE PLATE ASSEMBLY-3.2/4.0 LITRE ..... 1. H 15
ENGINE ASSEMBLY-2.9 LITRE ..... 1. E 02
ENGINE ASSEMBLY-3.2/3.6/4.0 LITRE ..... 1. E 03
ENGINE MOUNTING BRACKET-REAR ..... 1. E 05
ENGINE MOUNTING-FRONT-XJ6 ..... 1. E 04
ENGINE MOUNTING-REAR-MANUAL ..... 1 E 06
EXHAUST MANIFOLD-2.9 LITRE ..... 1 H 11
EXHAUST MANIFOLD-3.2/3.6/4.0 LITRE ..... 1 H 12
HYDRAULIC PUMP-2.9/3.2/3.6/4.0 LITRE ..... 1. E 11
INDUCTION MANIFOLD-2.9 LITRE ..... 1. H 07
INDUCTION MANIFOLD-3.2 LITRE ..... 1. H 08
INDUCTION MANIFOLD-3.6 LITRE ..... 1 H 09
INDUCTION MANIFOLD-4.0 LITRE ..... 1. H 10
OIL COOLER AND PIPES-2.9/3.2/3.6/4.0 LITRE ..... 1. F 04
OIL FEED PIPE-2.9 LITRE ..... 1. E 18
OIL FILLER PIPE-3.2/4.0 LITRE ..... 1. F 02
OIL FILLER PIPE-3.6/4.0 LITRE ..... 1. F 03
OIL FILTER-2.9 LITRE ..... 1. E 16
OIL FILTER-3.2/3.6/4.0 LITRE ..... 1. E 17
OIL PUMP AND CARRIER-XJ6 ..... 1. E 12
OIL SUMP AND DIPSTICK-2.9/3.6 LITRE ..... 1. E 13
OIL SUMP AND DIPSTICK-3.2/4.0 LITRE ..... 1. E 14
Oil pressure transducer ..... 1. E 16
Oil pressure transducer ..... 1. E 17
PISTON AND CONNECTING ROD-2.9 LITRE ..... 1. F 10
PISTON AND CONNECTING ROD-3.2/3.6/4.0 ..... 1. F 11
TRANSMISSION MOUNTING-REAR ..... 1. E 07

ENGINE

ENGINE ASSEMBLY


ENGINE ASSEMBLY-3.2/3.6/4.0 LITRE

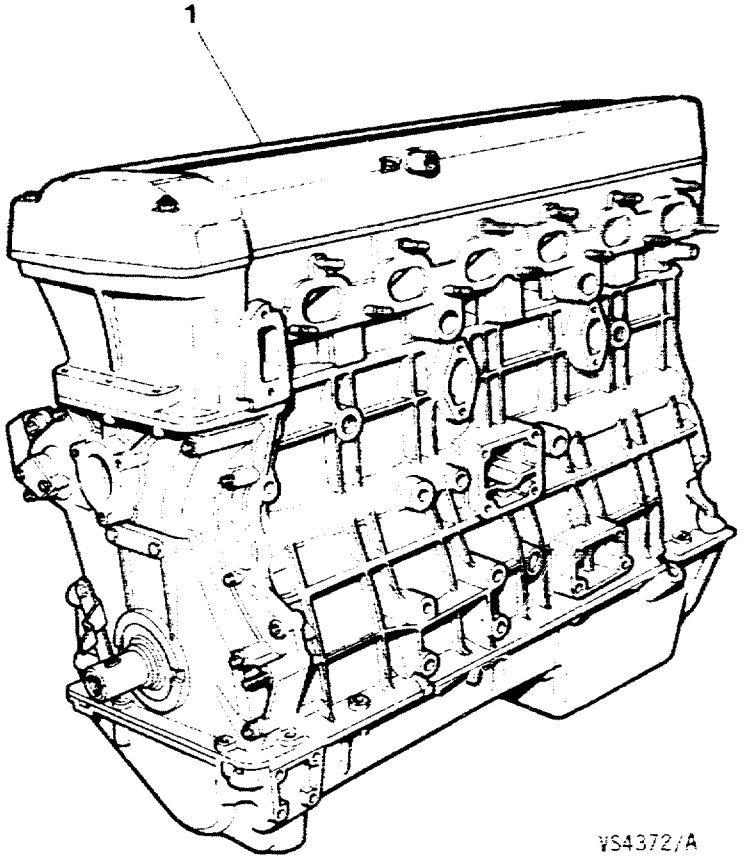

VS4372/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 2221 N	Stripped engine	NLA		Use JLM11245 3.2 Litre
1	JLM 11245	Stripped engine	NLA		Use JLM2221SE
1	JLM 2221 SE	Stripped engine	1		3.2 Litre
1	JLM 1566 N	Stripped engine-high compression	NLA		Use JLM1566E
1	JLM 1566 E	Stripped engine-high compression	NLA		Use JLM1566SE
1	JLM 1566 SE	Stripped engine-high compression	1		3.6 Litre (XJ40)
1	JLM 1567 N	Stripped engine-standard compression	NLA		Use JLM1567SE
1	JLM 1567 SE	Stripped engine-standard compression	1		3.6 Litre (XJ40)
1	JLM 1792 N	Stripped engine	NLA		Use JLM11246
1	JLM 11246	Stripped engine	NLA		Use JLM11246SE
1	JLM 11246 SE	Stripped engine	NLA		Use JLM1792SE
1	JLM 1792 SE	Stripped engine	1		4.0 Litre


ENGINE MOUNTING-FRONT-XJ6

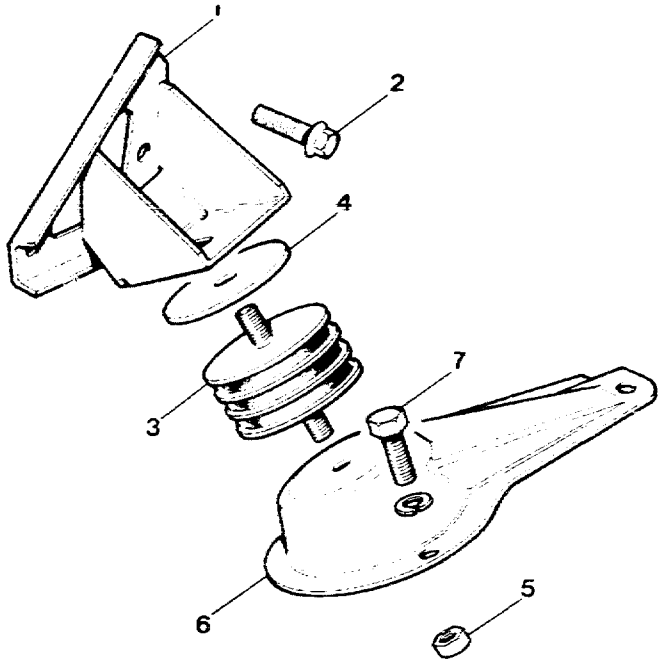

VS4454

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 8742	Engine mounting bracket-RH	1		
1	CAC 9727	Engine mounting bracket-LH	NLA		Use MMB7511AA
1	MMB 7511AA	Engine mounting bracket-LH	1		
2	FS 110251J	Setscrew	6		
3	CBC 244813	Mounting rubber-RH	1		
3	CBC 129716	Mounting rubber-LH	1		
4	CBC 5931	Insulator	2		
5	CBC 6798	Durlock nut	2		
6	CBC 1746	Mounting bracket-RH	NLA		Use CCC7363
6	CCC 7363	Mounting bracket-RH	1		
6	CAC 9543	Mounting bracket-LH	1		
7	SH 108201J	Screw-M8 x 20mm	4		


ENGINE MOUNTING BRACKET-REAR-MANUAL GEARBOX

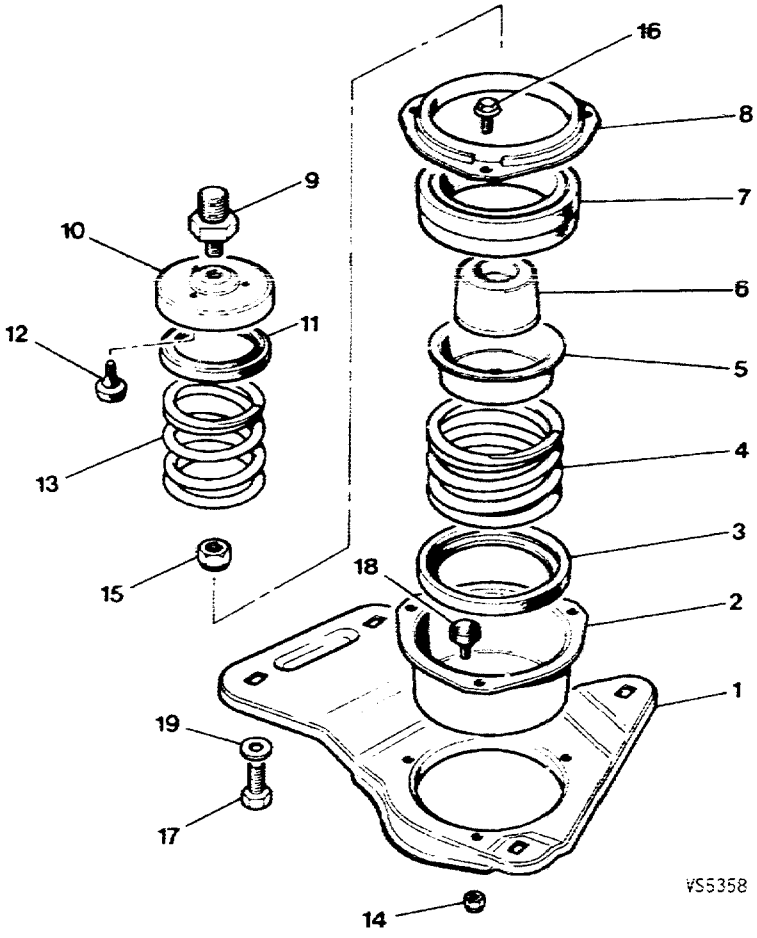

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6418	Gearbox mounting bracket	NLA	(1)	Manual
2	CAC 9333	Spring cup-lower	1		
3	CBC 1383	Spring seat-lower	1		
4	CCC 5373	Coil spring-lower -white/green	1		
4	CBC 4744	Coil spring-outer-white/green	1		
5	CBC 1319	Spring cradle	1		
6	CBC 6368	Locating weight-centre	NLA		Use MMB7558AA
6	MMB 7558AA	Locating weight-centre	1		
7	CCC 5688	Foam buffer	NLA		Use CBC1324
7	CBC 1324	Foam buffer	NLA		Use MHG7566AA
7	MHG 7566AA	Foam buffer	1		
8	CBC 1321	Buffer ring-assembly	NLA		Use CBC1332
8	CBC 1332	Buffer ring-assembly	1		
9	CBC 1320	Adaptor pin	1		
10	CBC 1329	Spring seat-upper	1		
11	CAC 9343	Spring seat-upper-rubber	1		
12	CAC 9344	Buffer	3		
13	CCC 5379	Coil spring-upper-white/red	NLA		Use CBC4745
13	CBC 4745	Coil spring-upper-white/red	1		
14	FX 108041 J	Flanged nut -8mm	NLA		
15	FX 112041 J	Flanged nut	1		
16	SH 108201 J	Screw-M8 x 20mm	3		
17	FS 108201 J	Washer faced setscrew-M8 x 20mm	3		
	FS 108301	Setscrew	1		
18	BD 36436	Buffer	3		
19	WJ 108001 J	Plain washer	4		
	SE 105121 M	Setscrew	NLA		Use JSE10516BM
	JSE 10516B M	Recessed pan head screw	1		

CHANGE POINTS
(1) From (V) 594576


ENGINE MOUNTING-REAR-MANUAL GEARBOX

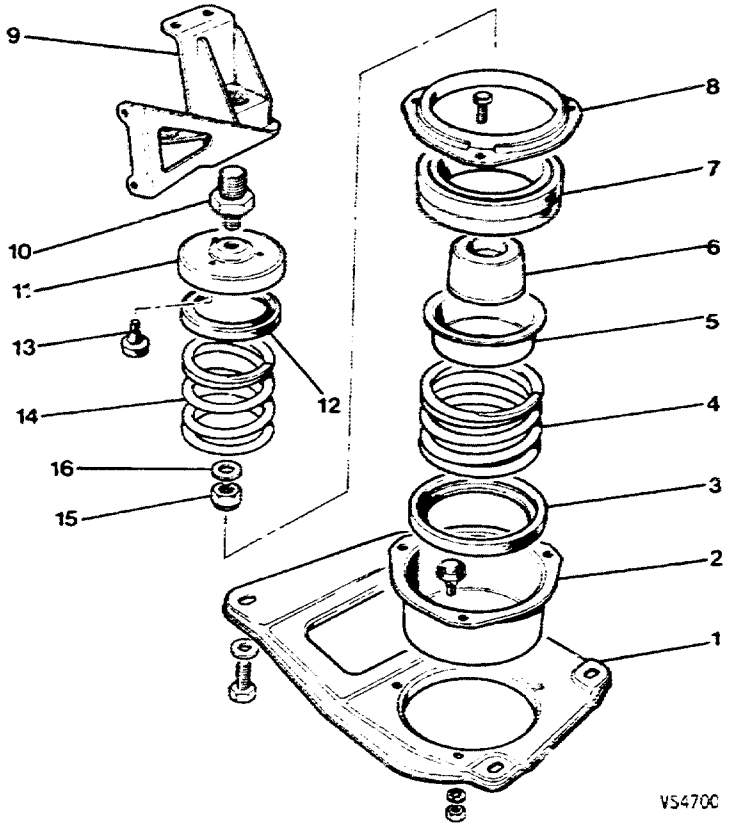

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6180	Gearbox mounting bracket	1	(1)	Manual
1	CBC 5418	Gearbox mounting bracket	NLA	(2)	
2	CAC 9333	Spring cup-lower	1		
3	CBC 1883	Spring seat-lower	1		
4	CBC 4744	Coil spring-outer-white/green	1		
5	CBC 1319	Spring cradle	1		
6	CBC 1318	Locating weight-gearbox mounting	NLA		Use CBC6368
6	CBC 6368	Locating weight-centre	NLA		Use MMB7558AA
6	MMB 7558AA	Locating weight-centre	1		
7	CBC 1324	Foam buffer	NLA		Use MHG7566AA
8	CBC 1322	Buffer ring	1		
9	CAC 7996	Mounting bracket	NLA		
10	CBC 1320	Adaptor pin	1		
11	CBC 1329	Spring seat-upper	1		
12	CAC 9343	Spring seat-upper-rubber	1		
13	CAC 9344	Buffer	6		
14	CAC 9338	Coil spring	NLA		Use CBC4745
14	CBC 4745	Coil spring-upper-white/red	1		
15	NY 112041J	Self locking nut	1		
16	WA 112041J	Washer	NLA		Use WA112001J
16	WA 112001J	Washer	1		
	SH 108201J	Screw-M6 x 20mm	2		
	SH 108351J	Screw	2		
	BD 54148	Special washer	4		
	WL 108001J	Spring washer-M8	4		
	AGU 2494J	Screw-M8	NLA		Use JFS10816EP
	JFS 10816EP	Flange head screw	A/R		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576


TRANSMISSION MOUNTING-REAR

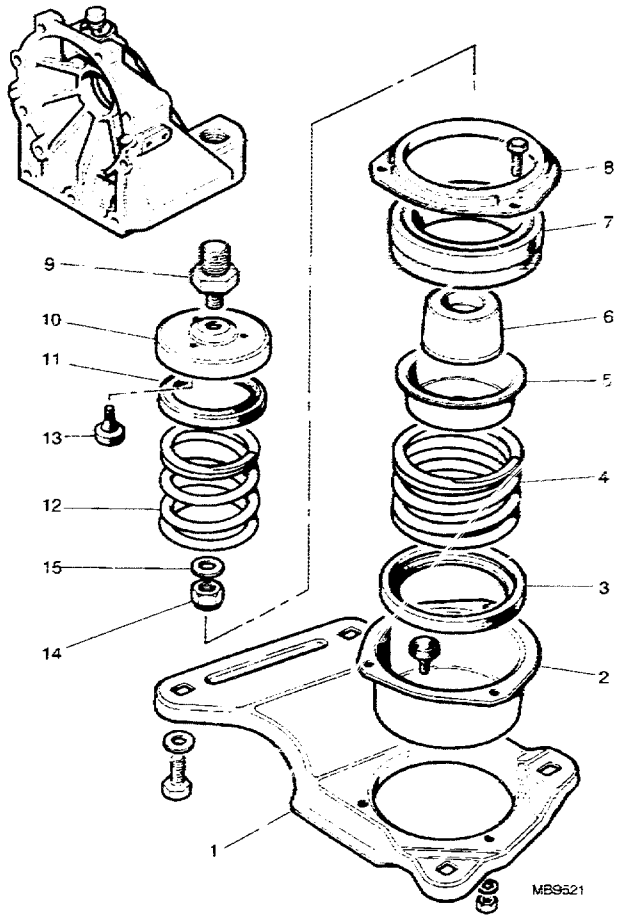

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 9060	Mounting bracket	1	(1)	
1	CBC 5301	Mounting bracket	1		Canada,USA
1	CBC 6776	Mounting bracket	1	(2)	2.9 Litre
					3.2 Litre
1	CBC 6417	Mounting bracket	NLA		Use CBC7831
1	CBC 7831	Mounting bracket	1		4.0 Litre
2	CAC 9333	Spring cup-lower	1		
3	CBC 1883	Spring seat-lower	1		
4	CBC 4744	Coil spring-outer-white/green	1		
5	CBC 1320	Spring cradle	1		
6	CBC 6368	Locating weight-centre	NLA		Use MMB7558AA
6	MMB 7558AA	Locating weight-centre	1		
7	CBC 1324	Foam buffer	NLA		Use MHG7566AA.
7	MHG 7566AA	Foam buffer	1		
8	CBC 1321	Buffer ring-assembly	NLA	(1)	Use CBC1332
					Except Canada and USA
8	CBC 5287	Buffer ring	NLA	(1)	Use CBC5353
					Canada,USA
8	CBC 1322	Buffer ring	1	(2)	Except Canada and USA
8	CBC 5353	Buffer ring-assembly	1	(2)	Canada,USA
9	CBC 1320	Adaptor pin	1		
10	CBC 1329	Spring seat-upper	1		
11	CAC 9343	Spring seat-upper-rubber	1		
12	CBC 4745	Coil spring-upper-white/red	1		


CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

TRANSMISSION MOUNTING-REAR

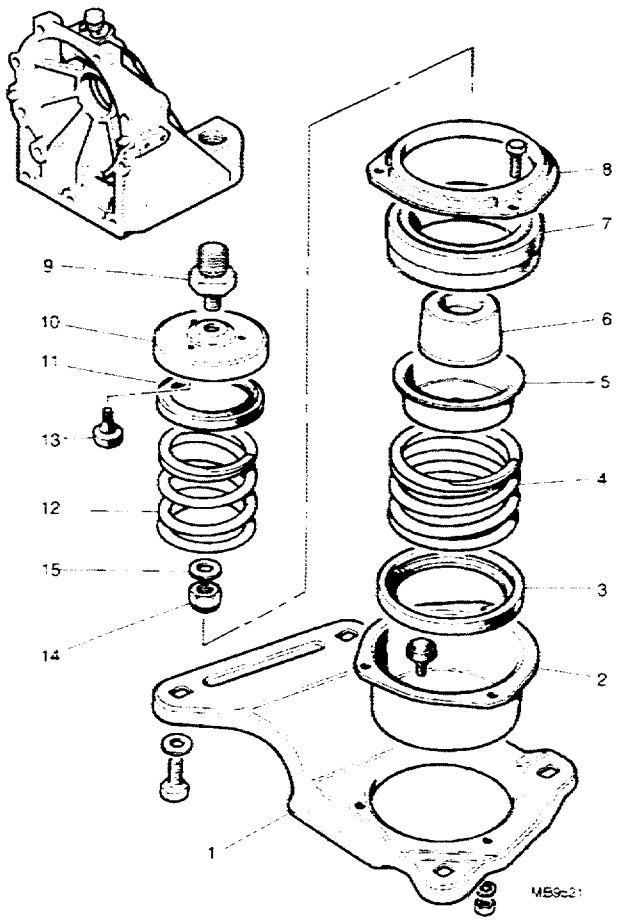

Illus	Part Number	Description	Quantity	Change Point	Remarks
13	CAC 9344	Buffer	6		
14	NY 112041 J	Self locking nut	1		
15	WA 112041 J	Washer	NLA		Use WA112001J.
15	WA 112001 J	Washer	1		
	SH 108201 J	Screw-M8 x 20mm	2		
	SH 108351 J	Screw	2		
	BD 54148	Special washer	4		
	WL 108001 J	Spring washer-M8	4		
	CBC 5285	Check cable	1		
	CBC 5286	Retaining pin	1		
	AGU 2494 J	Screw-M8	NLA		Use JFS10816EP
	JFS 10816E P	Flange head screw	A/R		

CYLINDER BLOCK ASSEMBLY-3.2/3.6/4.0 LITRE

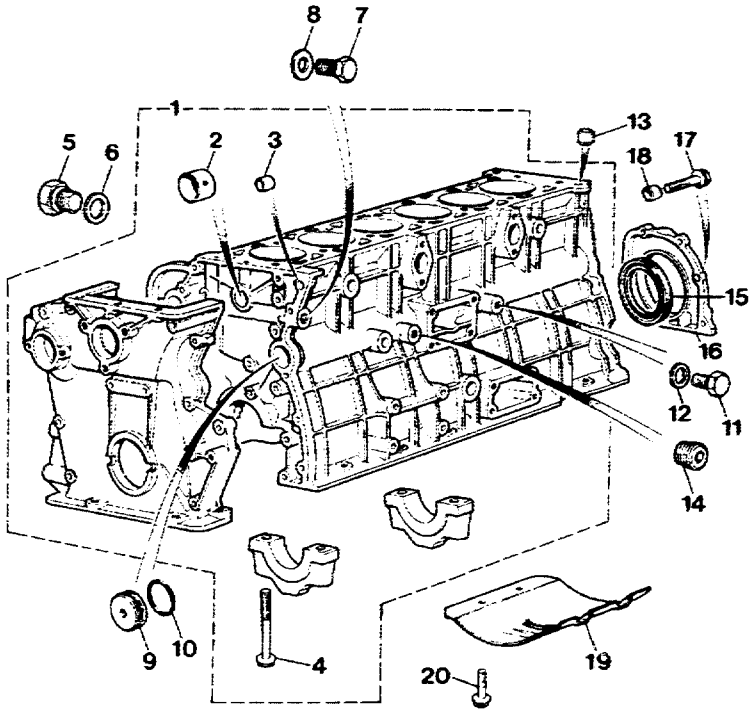


VS4393

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	8594	CYLINDER BLOCK	NLA	.....	Use EBC3962.
1	EBC	3962	CYLINDER BLOCK	NLA	.....	3.2 Litre
			.....		.....	3.6 Litre (XJ40)
			.....		.....	4.0 Litre
2	EAC	2522	• Bush	1		
3	C	2373	• Spring dowel	NLA	.....	Use EBC9705.
4	EAC	4119	• Bearing cap bolt	14		
3	EBC	9705	Spring dowel	2		
5	EAC	3972	Drain plug	1		
6	C	229624	Sealing washer	NLA	.....	Use EBC9044.
6	EBC	9044	Sealing washer	1		
7	EAC	7769	Plug	1		
8	C	229623	Sealing washer	1		
9	EAC	2494	Oil gallery plug	2		
10	EAC	2495	Oil plug O-ring	2		
11	SH	506051 J	Blanking screw	1		
12	C	22964	Sealing washer	1		
13	C	2373	Spring dowel	NLA	.....	Use EBC9705.
13	EBC	9705	Spring dowel	2		
14	C	43638	Plug	1		
15	EAC	4974	Crankshaft oil seal-rear	1		
16	EAC	1864	Crankshaft oil seal housing-rear	1		
17	FS	108301 J	Setscrew	6		
18	C	2373	Spring dowel	NLA	.....	Use EBC9705.
18	EBC	9705	Spring dowel	2		
19	EAC	4451	Windage tray	2		
20	FS	108201 J	Washer faced setscrew-M8 x 20mm	8		

HYDRAULIC PUMP-2.9/3.2/3.6/4.0 LITRE


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 5918	Hydraulic pump	1	.....	2.9 Litre
		.....		.....	3.2 Litre
		.....		.....	3.6 Litre (XJ40)
		.....		.....	4.0 Litre
2	FB 108131 J	Bolt	3		
3	EAC 6778	Drive ring	1		

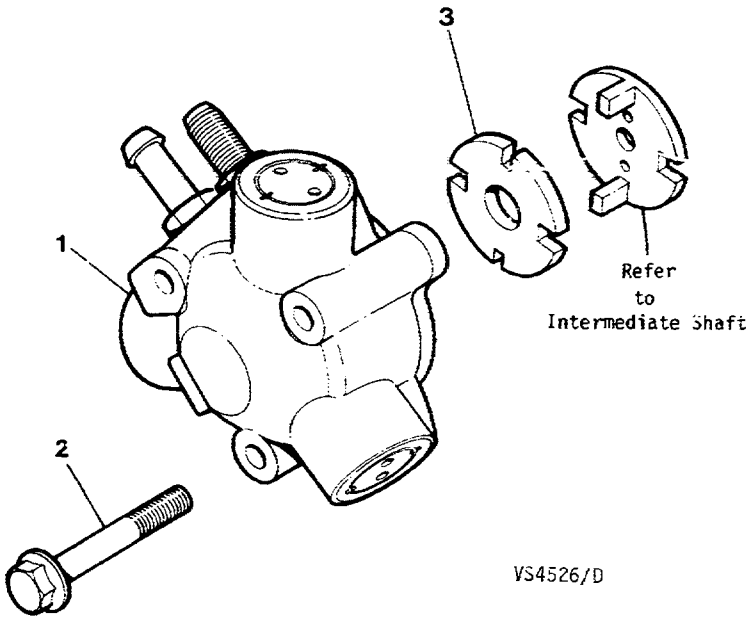

VS4526/D

VS4526/D


OIL PUMP AND CARRIER-XJ6

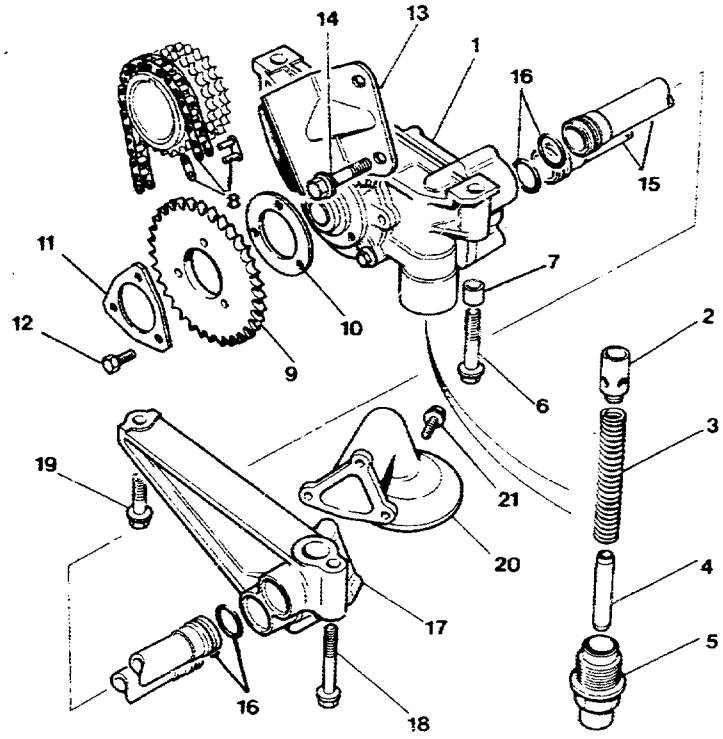

VS4362/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	7398	OIL PUMP-ASSEMBLY	NLA		Use EBC11571.
1	NBB	1760AA	OIL PUMP-ASSEMBLY	1		
2	EAC	4326	• Oil relief valve plunger	1		
3	EAC	4380	• Oil relief valve spring	1		
4	EAC	4327	• Support mandrel	1		
5	EAC	4328	• Oil relief valve plug	1		
1	EBC	11571	Oil pump-assembly	NLA		Use NBB1760AA.
6	FB	108121 J	Washer faced bolt-M8 x 60mm	1		
6	FB	108101 J	Washer faced bolt-M8 x 10mm	1		
7	C	2373	Spring dowel	NLA		Use EBC9705.
7	EBC	9705	Spring dowel	2		
8	EAC	2619	Oil pump chain	NLA		Use JLM1279.
8	JLM	1279	Oil pump chain	1		
9	EAC	6395	Oil pump sprocket	1		
10	EAC	43291	Shim-0.005"	A/R		
10	EAC	43292	Shim-0.01"	A/R		
10	EAC	43293	Shim-0.02"	A/R		
11	EAC	4505	Tab washer	1		
12	SH	106121 J	Setscrew-M6 x 12mm	3		
13	EBC	3823	Chain tensioner blade	1		
14	FS	108201 J	Washer faced setscrew-M8 x 20mm	2		
15	EAC	3793	Oil pipe	2		
16	EAC	5536	Oil pipe O-ring	4		
17	EAC	5674	Oil pipe carrier	1		
18	FB	108061 J	Washer faced bolt	1		
19	FB	108121 J	Washer faced bolt-M8 x 60mm	1		
20	EAC	7355	Oil suction pipe-assembly	1		
21	FS	106201 J	Flange head screw	3		

OIL SUMP AND DIPSTICK-3.2/4.0 LITRE

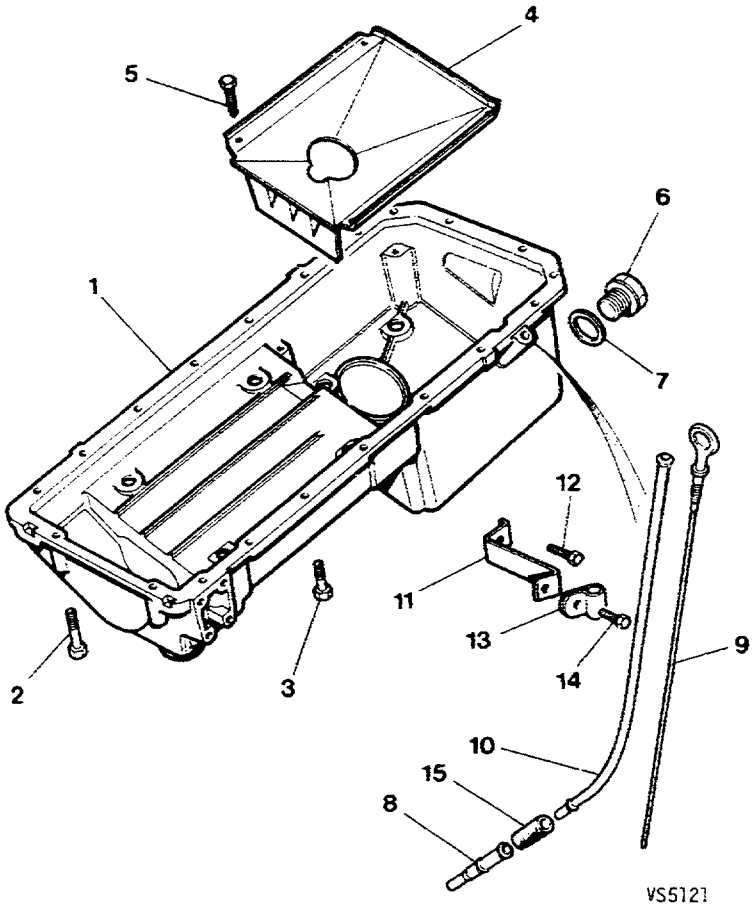


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 3498	Oil sump-less valve access plug	1	(1)	
1	EBC 3936	Oil sump-less valve access plug	1	(2; 3)	
1	EBC 8427	Oil sump	NLA	(4; 5)	Use EBC10433 qty 1 with EBC10435 qty 1.
1	EBC 10433	Oil sump	NLA		Use EBC3892 qty 1 with EBC1981 qty 1.
1	EBC 3892	Oil sump	NLA		Use EBC10430 qty 1 with EBC10432 qty 1.
1	EBC 10430	Oil sump	NLA		Use NBC1701AA.
1	NBC 1701AA	Oil sump	1		
4	EBC 10435	Baffle tray	NLA		
4	EBC 1981	Baffle tray-for EBC 3892	NLA		Use EBC10432.
4	EBC 10432	Baffle tray-for EBC 10430	1		Use with EBC 10430
2	FB 108121 J	Washer faced bolt-M8 x 60mm	2		Sump to timing cover
3	FS 108251 J	Washer faced setscrew-M8 x 25mm	18		Sump to block
4	EAC 7353	Baffle tray	1		Use with EBC3498, EBC3936 & EBC8427
5	FS 108161 J	Flange screw-M8	4		Baffle tray to sump
6	EAC 3972	Drain plug	1		
7	C 229624	Sealing washer	NLA	(6; 7)	Use EBC9044.
7	EBC 9044	Sealing washer	1	(8; 9)	
8	EAC 2258	Location tube	1		
	EAC 7428	Oil drain feedback adaptor	1	(1)	
9	EAC 9276	Dipstick	1		
10	EAC 8958	Dipstick tube	1		
11	EAC 4808	Support bracket	1		

CHANGE POINTS:


(1) To (E) 112735 4.0 Litre
(2) To (E) 100885 3.2 Litre
(3) From (E) 112736 To (E) 137933 4.0 Litre
(4) From (E) 100886 3.2 Litre
(5) From (E) 137934 4.0 Litre
(6) To (E) 105618 3.2 Litre
(7) To (E) 152088 4.0 Litre
(8) From (E) 105619 3.2 Litre
(9) From (E) 152089 4.0 Litre

OIL SUMP AND DIPSTICK-3.2/4.0 LITRE

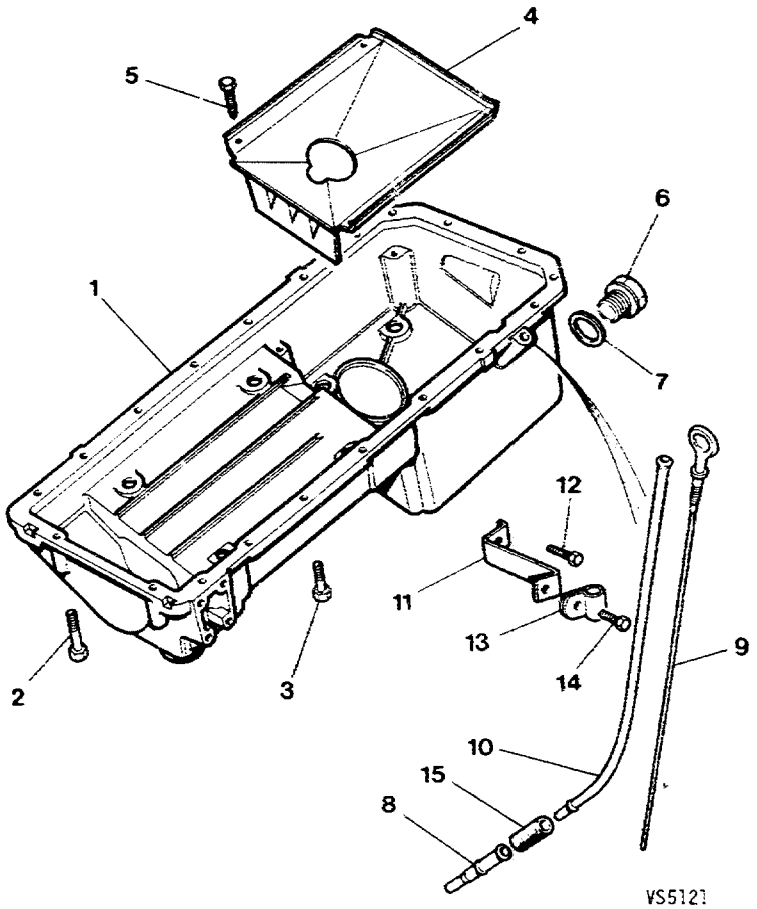

Illus	Part Number	Description	Quantity	Change Point	Remarks
12	FS 106161 J	Flange head screw-M6	NLA		Use FS106165P
12	FS 106165 P	Flange head screw	1		
13	C 44230	Clip	1		
14	C 35093 1	Screw	1		
15	EBC 2084	Dipstick tube sleeve	1		

OIL FILTER-3.2/3.6/4.0 LITRE

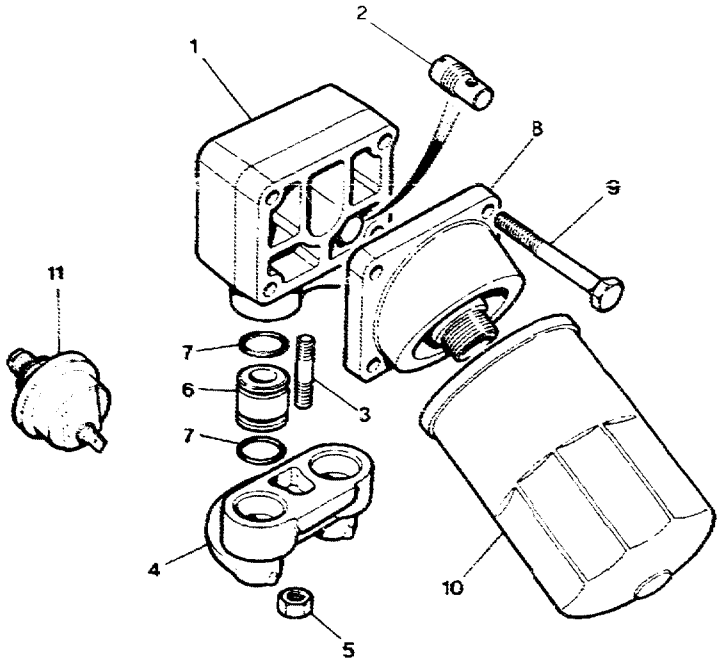


MB9520

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 3671	OIL COOLER ADAPTOR	1		Oil cooler
2	EAC 2428	• Bypass valve	1		
3	TE 108041 J	• Stud	1		
1	EBC 8168	OIL COOLER ADAPTOR	1	(1)	Canada;USA;except oil cooler
2	EAC 2428	• Bypass valve	1		
3	JZC 100005 J	• Stud	1		
4	EBC 4124	Bypass pipe	1		Canada;USA;except oil cooler
5	FN 108041 J	Flanged nut -M8	1		
6	EBC 4244	Connector	2		
7	CAC 5118	O-ring	4		
8	EAC 4512	Filter head	1		
9	FB 108141 J	Washer faced bolt	4		
10	C 42797	Oil filter	NLA		Use EBC9658.
10	EBC 9658	Oil filter	1		3.2 Litre
					3.6 Litre (XJ40)
					4.0 Litre
11	DBC 4418	Oil pressure transducer	NLA	(2)	Use C46272.
11	DBC 5513	Oil pressure transducer	NLA	(3; 4)	Use DAC7879.
11	DAC 7879	Oil pressure transducer	NLA	(5; 6)	Use LMD5640AB.
11	LMD 5640AB	Oil pressure transducer	NLA		Use JLM20791.
	C 46272	Oil gauge transmitter	1		
	JLM 20791	Oil pressure switch/link lead-kit	1		

CHANGE POINTS

(1) From (V) 655269
(2) To (V) 594575
(3) From (V) 594576 To (E) 103370 3.2 Litre
(4) From (V) 594576 To (E) 145250 4.0 Litre
(5) From (C) 103371 3.2 Litre
(6) From (E) 145251 4.0 Litre


OIL FILLER PIPE-3.2/4.0 LITRE

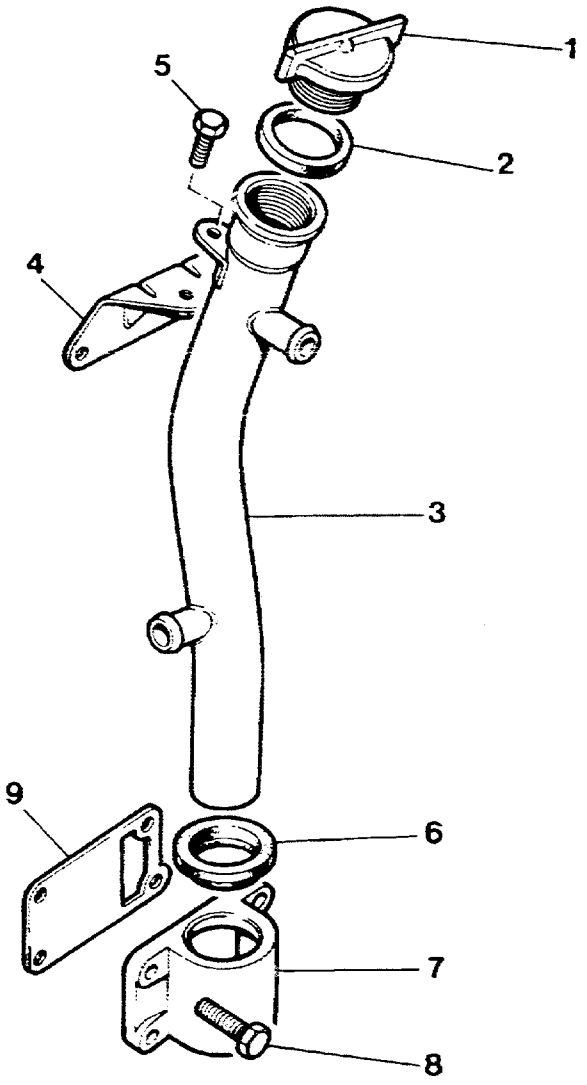

VS5112

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	6523	Oil filler cap	1		3.2 Litre,except oil drain feed back
1	EAC	6523	Oil filler cap	1	(1)	4.0 Litre,except oil drain feed back
2	C	42511	O-ring	1		Except oil drain feed back
3	EAC	6434	Oil filler pipe	NLA		Use EBC10086
						3.2 Litre,except oil drain feed back
3	EAC	6434	Oil filler pipe	NLA	(1)	Use EBC10086
						4.0 Litre,except oil drain feed back
4	EAC	5004	Support bracket	1		3.2 Litre,except oil drain feed back
4	EAC	5004	Support bracket	1	(1)	4.0 Litre,except oil drain feed back
5	FS	106121 J	Setscrew-M6	1		Except oil drain feed back
6	EAC	2632	Bush	1		
7	EAC	2618	Filler tube housing	1		
8	FS	108251 J	Washer faced setscrew-M8 x 25mm	4		
9	EAC	4886	Baffle plate	1		3.2 Litre,except oil drain feed back
9	EAC	4886	Baffle plate	1	(1)	4.0 Litre,except oil drain feed back

CHANGE POINTS:
(1) From (E) 112736 4.0 Litre

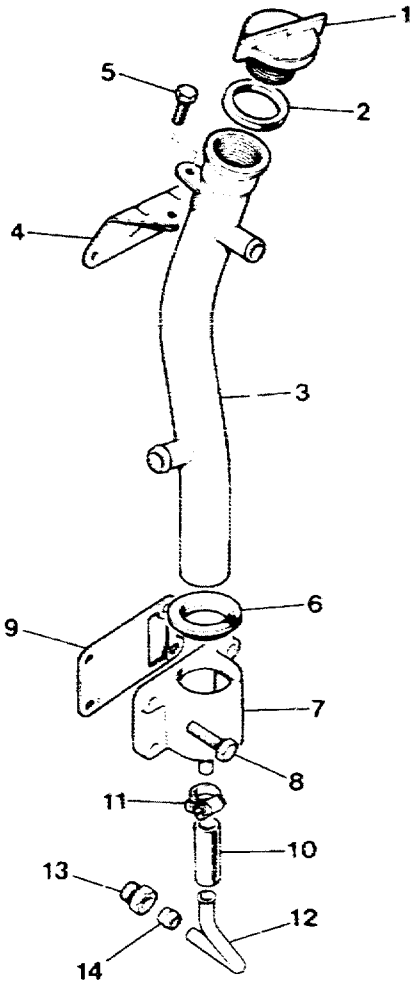

VS4378/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	6523	Oil filler cap	1		3.6 Litre (XJ40) oil drain feed back
1	EAC	6523	Oil filler cap	1	(1)	4.0 Litre oil drain feed back
2	C	42511	O-ring	1		Oil drain feed back
3	EAC	6434	Oil filler pipe	NLA		Use EBC10086
						3.6 Litre (XJ40) oil drain feed back
3	EAC	6434	Oil filler pipe	NLA	(1)	Use EBC10086
						4.0 Litre oil drain feed back
4	EAC	5004	Support bracket	1		Oil drain feed back
5	FS	106121J	Setscrew M6	1		
6	EAC	2632	Bush	1		
7	EAC	7443	Filler tube housing	1		3.6 Litre (XJ40) oil drain feed back
7	EAC	7443	Filler tube housing	1	(1)	4.0 Litre oil drain feed back
8	FS	108251J	Washer faced setscrew M8 x 25mm	4		Oil drain feed back
9	EAC	4886	Baffle plate	1		3.6 Litre (XJ40) oil drain feed back
9	EAC	4886	Baffle plate	1	(1)	4.0 Litre oil drain feed back
10	EAC	7407	Hose	1		Oil drain feed back
11	EAC	32154	Worm drive hose clip	NLA		Use JHC200101
11	JHC	200101	Worm drive hose clip-steel	2		Oil drain feed back
12	EAC	7441	Oil drain pipe	NLA		Use EBC3057
12	EBC	3057	Oil drain pipe	1		Oil drain feed back
13	EAC	4927	Nut-pipe to sump adaptor	1		Oil drain feed back
14	AGU	2527J	Olive	1		


CHANGE POINTS

(1) To (F) 112735 4.0 Litre

ENGINE

OIL COOLER AND PIPES

OIL COOLER AND PIPES-2.9/3.2/3.6/4.0 LITRE

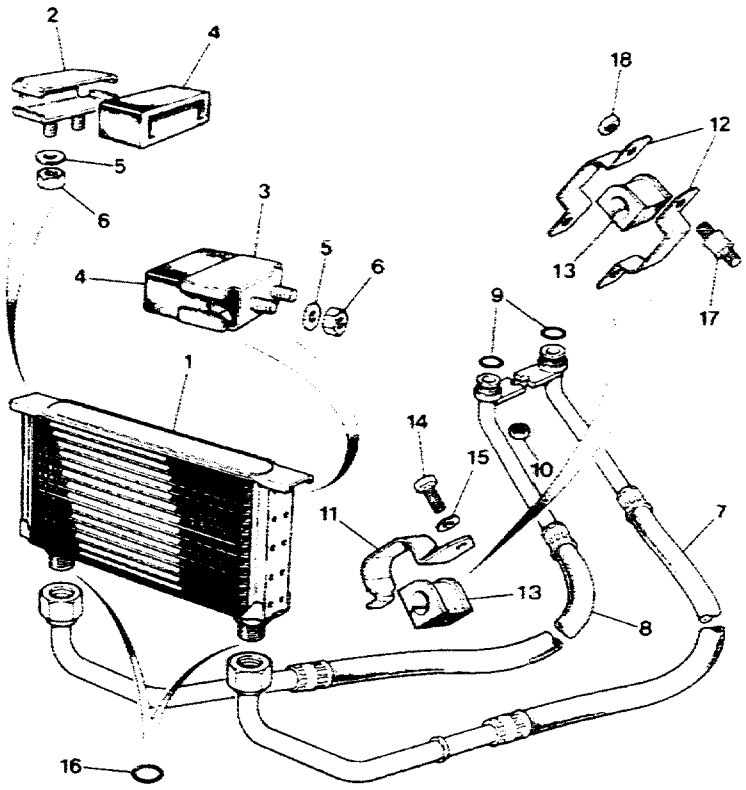


VS4620/D

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	8509	Oil cooler	1		
2	CAC	8443	Oil cooler mounting bracket	1		
3	CAC	8442	Mounting bracket	1		
4	CAC	8444	Oil cooler mounting rubber	2		
5	WA	106041 J	Plain washer 0.25" i/d	4		
6	NY	106041 J	Nyloc nut	4		
7	CBC	1310	Oil feed pipe	1	(1)	
7	CBC	8661	Oil feed pipe	1	(2)	
8	CBC	1309	Oil return pipe	1	(3)	
8	CBC	8662	Oil return pipe	1	(4)	
9	CAC	5118	O-ring	2		
10	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B
11	CAC	9074	Radiator mounting bracket strap	1	(1)	
12	CBC	8663	Radiator mounting bracket strap	2	(2)	
13	CAC	5537	Insulating bush	2		
14	AZ	614051 J	Self tapping screw	1		
15	WJ	106001 J	Plain washer-M6	1		
16	KRC	1160	O-ring	2		
17	EAC	6805	Instrumount	2		
18	FX	106041 J	Self locking nut-M6	4		

CHANGE POINTS

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 544387
(4) From (V) 544388

CRANKSHAFT AND MAIN BEARINGS-3.2/4.0 LITRE

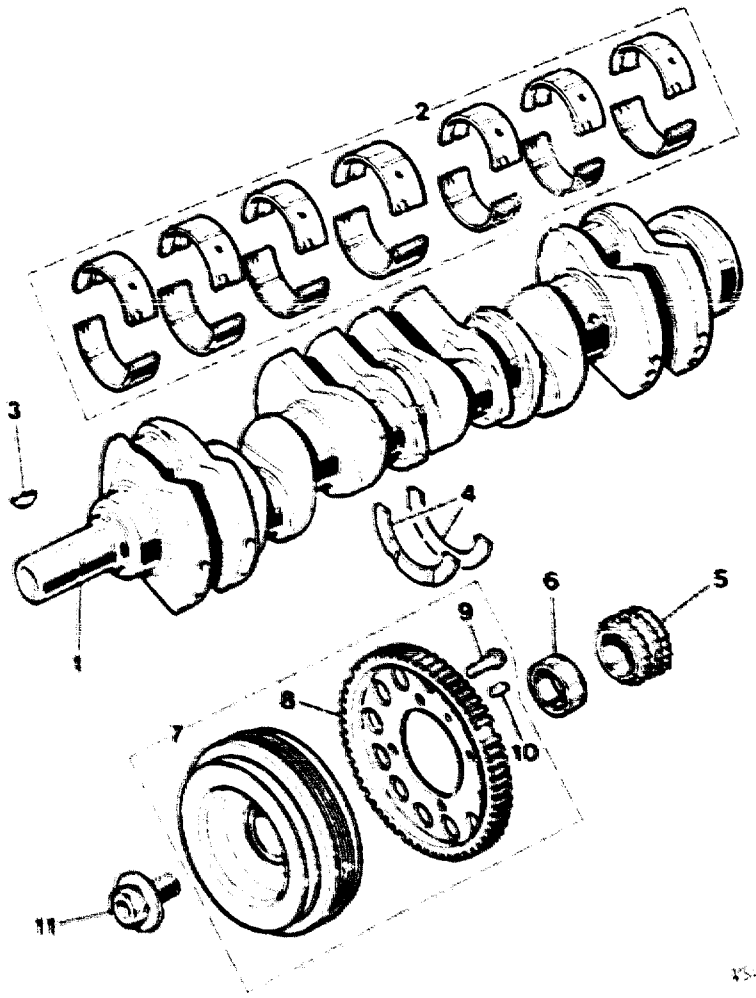

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	3705	Crankshaft-83mm stroke-standard	1	(1)	3.2 Litre
1	EBC	1880	Crankshaft-102mm stroke-standard	1	(1)	4.0 Litre
2	JLM	1817 S	Main bearing kit-standard -blue	1	(1)	
2	JLM	181720	Main bearing kit-+0.02"-blue	NLA	(1)	
3	CAM	1978 J	Woodruff key	2	(1)	
4	C	34697	Thrust washer-standard	2	(1)	
4	C	346971	Thrust washer-oversize	2	(1)	
5	EAC	2456	Crankshaft sprocket	1	(1)	
6	EAC	2464	Distance piece	1	(1)	
7	EBC	1441	CRANKSHAFT DAMPER-ASSEMBLY	1	(2)	3.2 Litre
7	EBC	1441	CRANKSHAFT DAMPER-ASSEMBLY	1	(2)	4.0 Litre
7	EBC	8697	CRANKSHAFT DAMPER-ASSEMBLY	1	(3)	3.2 Litre
7	EBC	8697	CRANKSHAFT DAMPER-ASSEMBLY	1	(3)	4.0 Litre
7	EBC	1442	• Crankshaft damper	NLA		Use EBC2225 qty 1 2.9 Litre or EBC1441 qty 1 3.2/3.6/4.0 Litre
8	EAC	6650	• Timing ring	1		
9	EAC	7291	• Bolt -timing ring to damper	4		
10	PA	108121 J	• Roll pin	1		
11	C	323671	Bolt -damper to crankshaft	1	(3)	

VS-


CHANGE POINTS

(1) From (V) 166424

(2) To (V) 181588

(3) From (V) 181587

PISTON AND CONNECTING ROD-3.2/3.6/4.0 LITRE

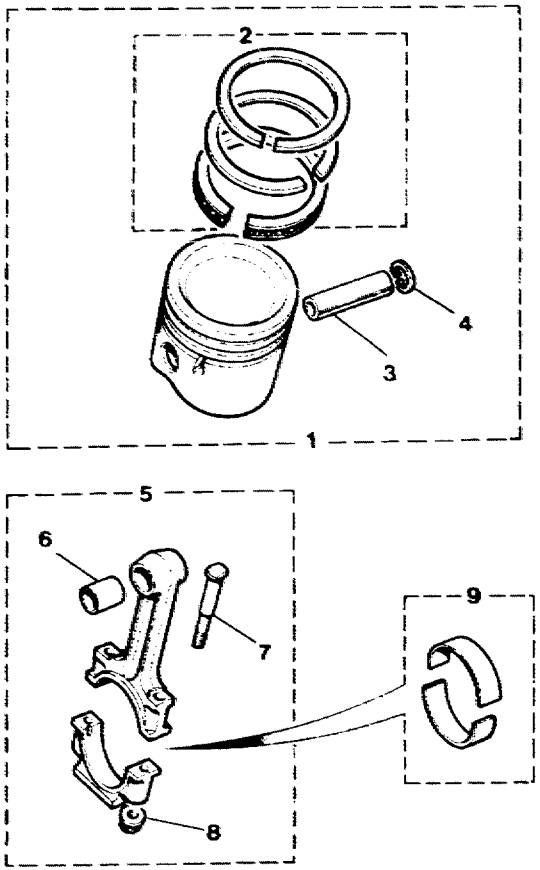

VS3696


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	4691 S	PISTON-ASSEMBLY-STANDARD	NLA		Use EBC11057S Replace with matched set (6).
1	EBC	4691 20	PISTON-ASSEMBLY-+0.02"	NLA		Use EBC1105720 Replace with matched set (6).
1	EAC	8744 S	PISTON-ASSEMBLY-HIGH COMPRESSION	NLA	(1)	Use EBC1288S.
1	EAC	8744 20	PISTON-ASSEMBLY-HIGH COMPRESSION	NLA		Use EBC128820.
1	EBC	1288 S	PISTON-ASSEMBLY-HIGH COMPRESSION	NLA	(2)	Use EBC3554S. 3.6 Litre (XJ40)
1	EBC	1288 20	PISTON-ASSEMBLY-HIGH COMPRESSION	NLA	(2)	Use EBC355420.
1	EBC	3554 S	PISTON-ASSEMBLY-HIGH COMPRESSION	6	(2)	3.6 Litre (XJ40)
1	EBC	3554 20	PISTON-ASSEMBLY-HIGH COMPRESSION	6	(2)	3.6 Litre (XJ40)
1	EAC	8746 20	PISTON-ASSEMBLY-+0.02"-STANDARD COMPRESSION	NLA		3.6 Litre (XJ40)
1	EBC	4133 S	PISTON-ASSEMBLY-STANDARD	NLA		Use EBC11058S Replace with matched set (6).
1	EBC	4133 20	PISTON-ASSEMBLY-+0.02"	NLA		Use EBC1105820 Replace with matched set (6).
2	JLM	2223 S	• Piston ring kit-standard	1		Part of EBC4691S.
3	EBC	3756	• Gudgeon pin	1		Part of EBC4691S, EBC469120.
4	C	29699	• Circlip	2		
2	JLM	2223 20	• Piston ring kit-oversize	1		Part of EBC469120.
2	JLM	581 S	• Piston ring kit-standard	1		Part of EAC8744S, EBC1288S.
3	EAC	4431	• Gudgeon pin	1		Part of EAC8744S, EAC874420, EAC874620.
2	JLM	581 20	• Piston ring kit-oversize	1		Part of EAC874420, EBC128820, EAC874620.
3	EBC	1620	• Gudgeon pin	1		Part of EBC1288S, EBC128820, EBC3554S, EBC355420.
2	JLM	1790 S	• Piston ring kit-standard	1		Part of EBC3554S.
2	JLM	1790 20	• Piston ring kit-oversize	NLA		Part of EBC355420.
2	JLM	1818 S	• Piston ring kit-standard	1		Part of EBC4133S.
3	EBC	3256	• Gudgeon pin	1		Part of EBC4133S, EBC413320.
2	JLM	1818 20	• Piston ring kit-+0.02"-oversize	1		Part of EBC413320.


CHANGE POINTS

(1) To (E) 122723

(2) From (E) 122724

PISTON AND CONNECTING ROD-3.2/3.6/4.0 LITRE

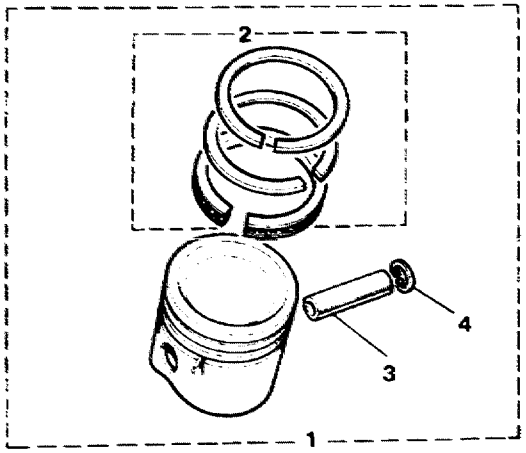


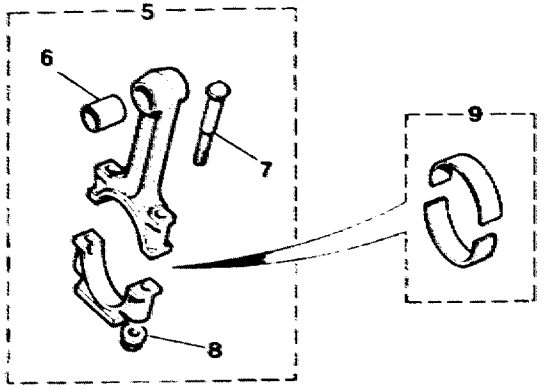

VS3696

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	JLM	2222	CONNECTING ROD-ASSEMBLY	NLA		Use JLM12042.
						3.2 Litre
5	JLM	12042	CONNECTING ROD-ASSEMBLY	1SET		3.2 Litre
5	RTC	2996	CONNECTING ROD-ASSEMBLY	NLA		Use RTC2996E.
						3.6 Litre (XJ40)
5	RTC	2996 E	CONNECTING ROD-ASSEMBLY-REMANUFACTURED UNIT	1SET		3.6 Litre (XJ40)
5	JLM	1794	CONNECTING ROD-ASSEMBLY	NLA		Use JLM12043.
						4.0 Litre
5	JLM	12043	CONNECTING ROD-ASSEMBLY	1SET		4.0 Litre
6	EAC	6567	• Small end bearing	6		Part of JLM2222, JLM12042
						JLM1794, JLM12043.
7	EAC	1027	• Bolt	12		
8	EAC	5541	• Nut	12		
6	EAC	2732	• Small end bearing	6		Part of RTC2996, RTC2996E.
9	RTC	2854 S	Big end bearing shell kit-standard	1SET		
9	RTC	2854 20	Big end bearing shell kit-oversize	1SET		

CYLINDER HEAD AND GASKET-3.2/4.0 LITRE

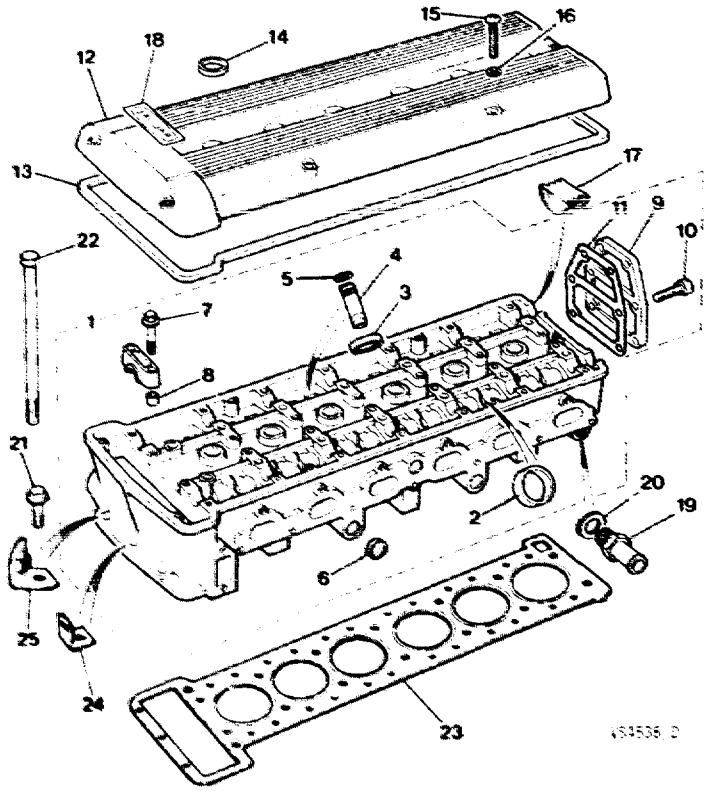


Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 11243	CYLINDER HEAD-ASSEMBLY-WITH CAMSHAFT AND VALVES	1		3.2 Litre
					4.0 Litre
12	EAC 4989	• Camshaft cover	1		
13	EAC 2912	• Camshaft cover seal	1		
14	EAC 4049	• Spark plug boss seal	6		
15	SE 106601J	• Screw-cover to head	7		
16	EBC 1294	• Washer	7		
1	EBC 2926	BARE CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	NLA	(1)	Use EBC4282. 3.2 Litre
1	EBC 2926	BARE CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	NLA	(2)	Use EBC4282 4.0 Litre
1	EBC 4282	BARE CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	NLA	(3)	Use EBC11327 3.2 Litre
1	EBC 4282	BARE CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	NLA	(4)	Use EBC11327 4.0 Litre
1	EBC 8614	BARE CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	NLA	(5)	Use EBC10690 4.0 Litre
1	EBC 10690	BARE CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	NLA	(5)	Use EBC11327 4.0 Litre

CHANGE POINTS


(1) To (E) 103628
(2) To (E) 146106
(3) From (E) 103629
(4) From (E) 146107 To (E) 153550
(5) From (E) 153551

CYLINDER HEAD AND GASKET-3.2/4.0 LITRE

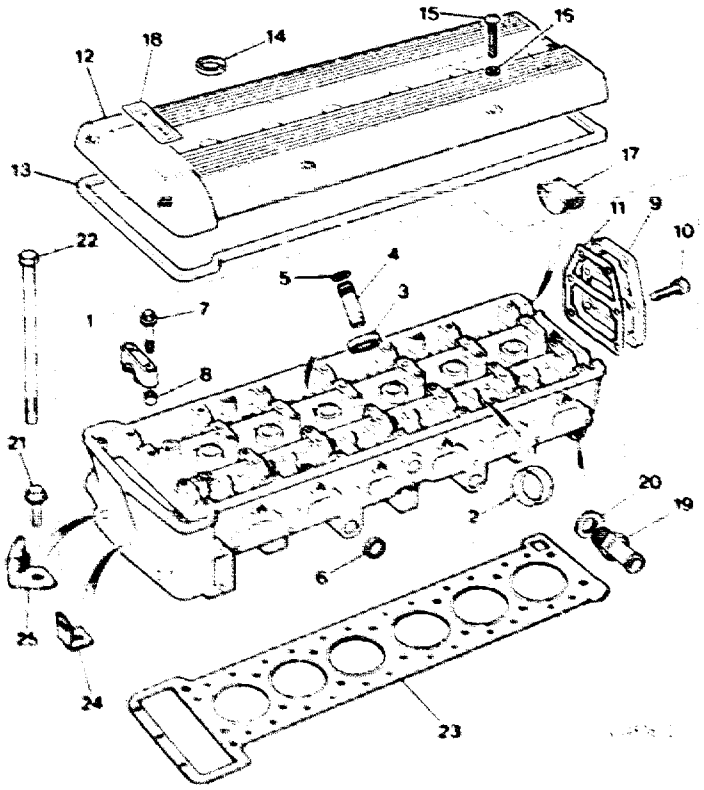

Illus	Part Number	Description	Quantity	Change Point	Remarks
	EBC 11327	CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES			3.2 Litre
	EBC 11327	CYLINDER HEAD-ASSEMBLY-LESS CAMSHAFT AND VALVES	1		4.0 Litre
2	EAC 6437	• Inlet valve seat insert	12		
3	EAC 6435	• Exhaust valve seat insert	NLA		Use EBC4198
					Part of EBC2926, EBC2926
4	C 29390	• Valve guide-inlet-1st oversize	24		
4	C 29391	• Valve guide-inlet-2nd oversize	24		
5	EBC 1782	• Valve guide circlip	24		
6	C 168623	• Cylinder block core plug	6		
7	FB 108101 J	• Washer faced bolt-M8 x 10mm	28		
8	EBC 9705	• Spring dowel	28		
9	EAC 2911	• Rear cover	1		
10	FS 108251 J	• Washer faced setscrew-M8 x 25mm	6		
11	EBC 2568	• Cover gasket-rear	1		
3	EBC 4198	• Exhaust valve seat insert	12		Part of EBC4282, EBC4282, EBC8614, EBC10690, EBC11327, EBC11327.


CYLINDER HEAD AND GASKET-3.2/4.0 LITRE

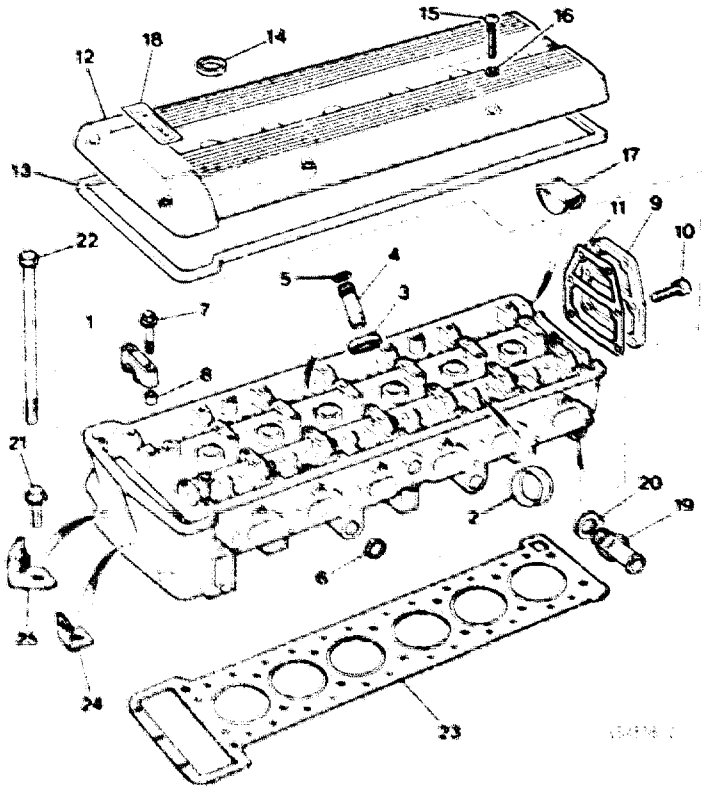

Illus	Part Number		Description	Quantity	Change Point	Remarks
17	C	30431	Sealing plug-rear	2		
18	EBC	3889	Emblem-Jaguar 3.2	1		
18	EBC	3888	Emblem-Jaguar 4.0	1		
18	EBC	3890	Emblem-Daimler	1		
19	EAC	7189	Hea[illegible] feed adaptor	1		
20	C	22964	Sealing washer	1		
21	FB	108071J	Washer faced bolt	3		
22	EBC	1771	Bolt -cylinder head to block	14		
23	EBC	1551	Cylinder head gasket	NLA	(1)	Use EBC9213 3.2 Litre
23	EBC	1551	Cylinder head gasket	NLA	(1)	Use EBC9213 4.0 Litre
23	EBC	9213	Cylinder head gasket	NLA	(2)	Use EBC10256 3.2 Litre
23	EBC	9213	Cylinder head gasket	NLA	(2)	Use EBC10256 4.0 Litre
23	EBC	10256	Cylinder head gasket	NLA		Use NBC2520AA 3.2 Litre
23	EBC	10256	Cylinder head gasket	NLA		Use NBC2520AA 4.0 Litre
23	NBC	2520AA	Cylinder head gasket	NLA		Use NBC2520AB 3.2 Litre
23	NBC	2520AA	Cylinder head gasket	NLA		Use NBC2520AB 4.0 Litre
23	NBC	2520AB	Cylinder head gasket	1		3.2 Litre
23	NBC	2520AB	Cylinder head gasket	1		4.0 Litre
24	DBC	1626	Harness bracket	1		
25	DAC	1670	Hose mounting bracket	1		


CHANGE POINTS
(1) To (V) 1[illegible]
(2) From (V) 1[illegible]

AUXILIARY SHAFT-XJ6

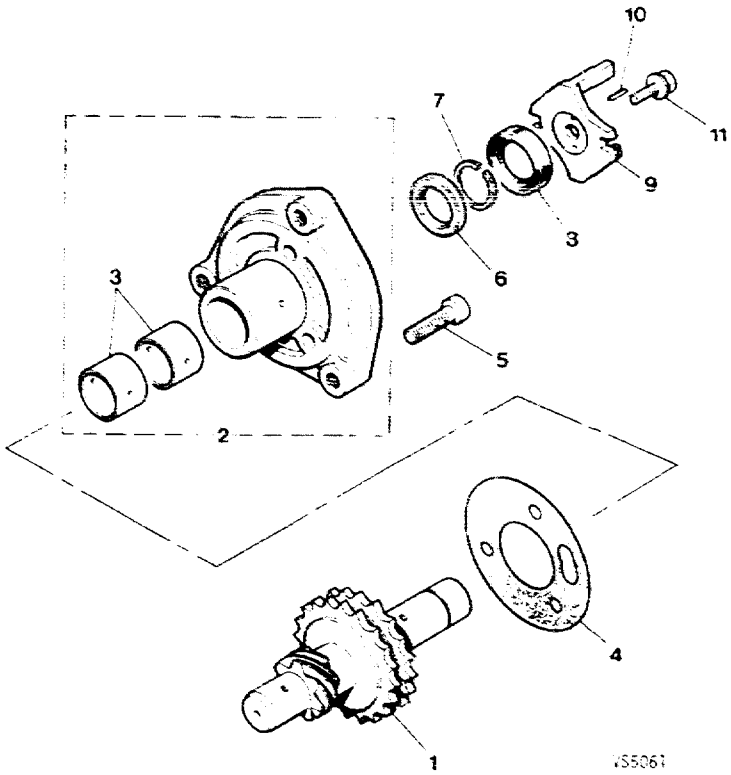

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	6741	Auxiliary shaft and sprocket-3mm pin holes	NLA		Use EBC3415 qty 1 with EBC3412 qty 2 with EBC3396 qty 1
2	EAC	3921	HOUSING	1		
3	EAC	2522	• Bush	2		
1	EBC	3415	Auxiliary shaft and sprocket-4mm pin holes	NLA		Use EBC11386
1	EBC	11386	Auxiliary shaft and sprocket-4mm pin holes	NLA		Use NBB1963AA
1	NBB	1963AA	Auxiliary shaft and sprocket-4mm pin holes	1		
10	EBC	3412	Spirol pin-4mm diameter	2		
4	EAC	4038	Auxiliary shaft bearing gasket	1		
5	EAC	8367	Cap screw	3		
6	EAC	3455	Thrust washer	1		
7	CR	120225 J	Circlip	1		
8	EAC	6156	Oil seal-auxiliary shaft	1		
9	EAC	7080	Auxiliary shaft driving dog-3mm pin holes	NLA		Use EBC3396
9	EBC	3396	Auxiliary shaft driving dog-3mm pin holes	1		
10	EAC	7643	Spirol pin-3mm diameter	2		
11	EBC	1223	Setscrew	1		

TIMING COVER-3.2/4.0 LITRE

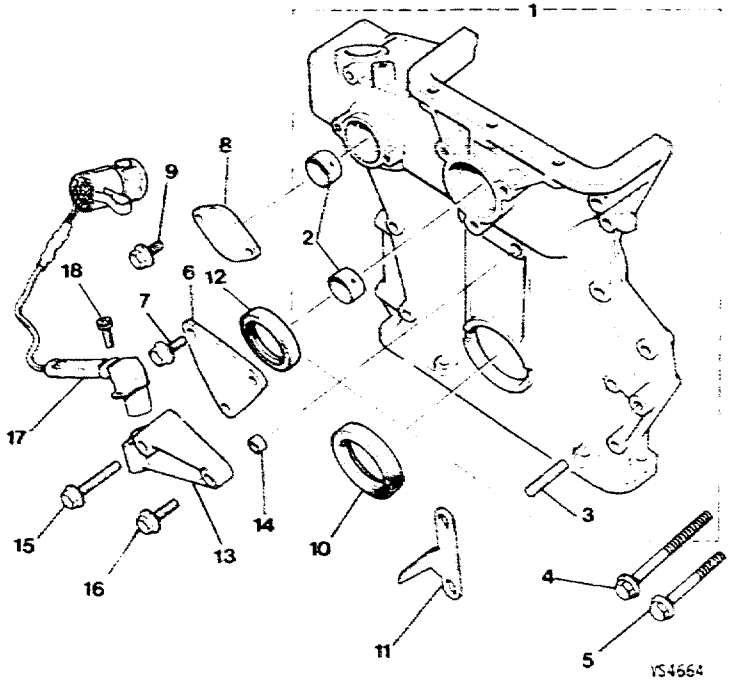


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 9657	TIMING COVER-ASSEMBLY-90/115 AMP ALTERNATOR	NLA		Use NBC2100BA 3.2 Litre
1	EAC 9657	TIMING COVER-ASSEMBLY-90/115 AMP ALTERNATOR	NLA		Use NBC2100BA 4.0 Litre
1	NBC 2100BA	TIMING COVER-ASSEMBLY	1		3.2 Litre
1	NBC 2100BA	TIMING COVER-ASSEMBLY	1		4.0 Litre
2	EAC 2522	• Bush	2		
3	TE 108051J	• Stud	1		
4	FB 108181J	Bolt	4		
5	FB 108131J	Bolt	4		
6	EAC 3977	Intermediate shaft cover plate	1		Except ride level system
7	FS 108201J	Washer faced setscrew-M8 x 20mm	3		Except ride level system
8	EAC 3926	Auxiliary shaft cover plate	1		
9	FS 106161J	Flange head screw-M6	NLA		Use FS106165P
9	FS 106165P	Flange head screw	2		
10	EAC 7954	Crankshaft oil seal	1		
11	EAC 6811	Timing indicator	1		
12	EAC 5721	Intermediate shaft oil seal	1		
13	EBC 1253	Sensor mounting bracket	1	(1)	
	EBC 5017	Ignition sensor mounting bracket	1	(2)	Use with 2 x FB108061J
14	C 2373	Spring dowel	NLA		Use EBC9705 Bracket to timing cover
14	EBC 9705	Spring dowel	2		Bracket to timing cover
15	FB 108111J	Bolt	1		Bracket to timing cover
16	FB 108061J	Washer faced bolt	1		Bracket to timing cover
17	DBC 2139	Crankshaft speed sensor	1	(3)	
17	DBC 5552	Crankshaft speed sensor	NLA	(4)	Use DBC11501
17	DBC 11501	Crankshaft speed sensor	1	(4)	
18	SS 106121J	Socket head screw -sensor to bracket	1		

CHANGE POINTS


(1) To (E) 161586
(2) From (E) 161587
(3) To (V) 629285
(4) From (V) 629286

TIMING CHAIN-LOWER-XJ6

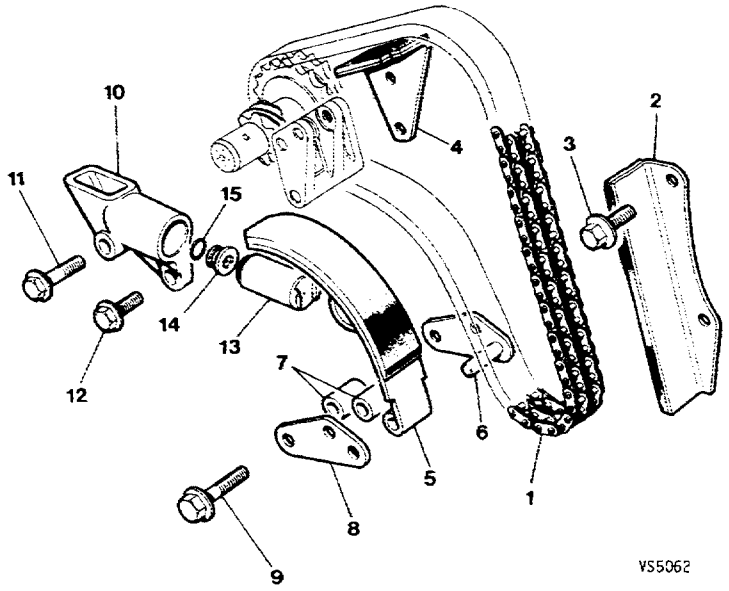

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 4519	Primary timing chain	1		
2	EAC 4533	Timing chain damper-lower -primary	1		
3	FS 108201 J	Washer faced setscrew-M8 x 20mm	2		
4	EAC 6766	Timing chain damper-upper-primary	1		
5	EAC 4527	Chain tensioner	1		
6	EAC 4528	Pivot plate	1		
7	EAC 4531	Distance piece	2		
8	EAC 4532	Support plate	1		
9	FB 108091 J	Washer faced bolt-M8 x 9mm	2		
10	EAC 6878	Tensioner piston housing	1		
11	FB 108091 J	Washer faced bolt-M8 x 9mm	1		
12	FB 108061 J	Washer faced bolt	1		
13	EAC 5317	Chain tensioner piston	NLA		Use EBC11336.
13	EBC 11336	Chain tensioner piston	NLA		Use NBC1986AA.
13	NBC 1986AA	Chain tensioner piston	1		
14	EAC 4647	Non return valve	1		
15	EAC 6779	Non return valve O-ring-timing chain tensioner	1		


TIMING CHAIN-UPPER-XJ6

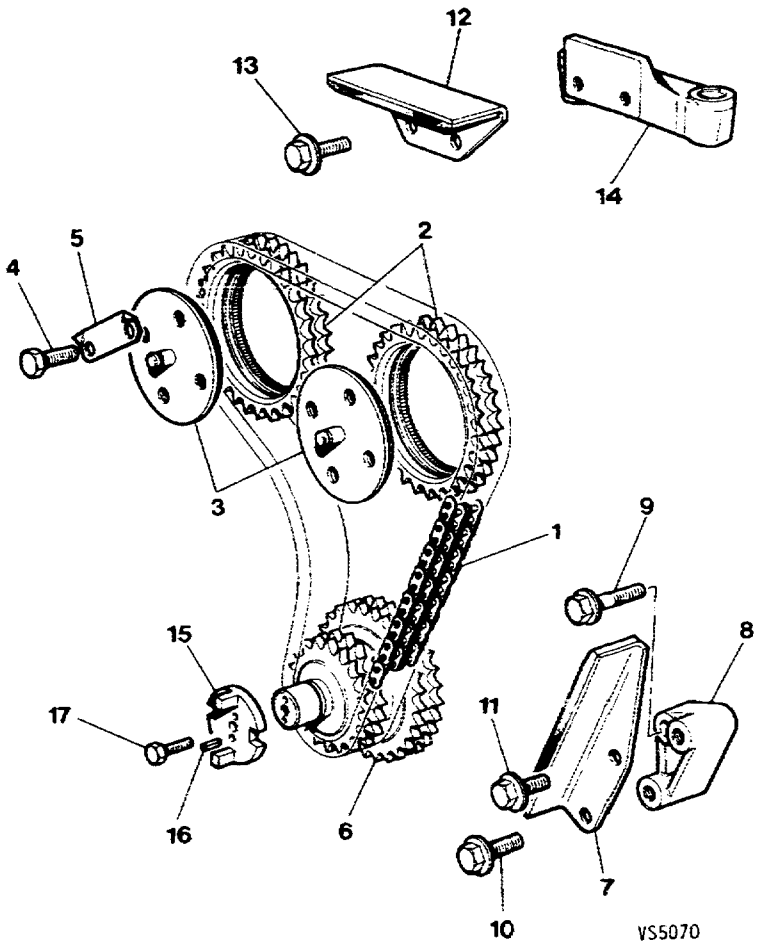

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 4520	Secondary timing chain	1		
2	C 24686	Camshaft sprocket	NLA		Use NBB2549AA qty 1 with
					JZS100082 qty 4.
2	NBB 2549AA	Camshaft sprocket	2		
3	C 33889	Camshaft coupling	2		
	C 30767	Circlip	2	(1)	3.6 Litre (XJ40)
4	C 33918	Setscrew	NLA		Use JZB100042.
4	JZB 100042	Setscrew-0.375" unf x 0.625"	8		
5	C 33917	Tab washer	4		
6	EAC 7642	Intermediate shaft and sprocket	NLA		Use NBB1953AA qty 1 with
					EBC3412 qty 2 with EBC3398 qty
					1.
6	NBB 1953AA	Intermediate shaft and sprocket	1		
15	EBC 3398	Drive coupling-4mm pin holes	1		
16	EBC 3412	Spirol pin-4mm diameter	2		
7	EAC 4534	Timing chain damper-lower	1		
8	EAC 2989	Distance piece	1		
9	FB 108071 J	Washer faced bolt	1		
10	FB 108101 J	Washer faced bolt-M8 x 10mm	1		
11	FS 108251 J	Washer faced setscrew-M8 x 25mm	1		
12	EAC 4535	Timing chain damper-upper	1		
13	FS 108161 J	Flange screw-M8	2		
14	EAC 4175	Damper saddle -upper	NLA		Use EBC11334.
14	EBC 11334	Damper saddle -upper	1		
15	EAC 7639	Drive coupling-3mm pin holes	1		
16	EAC 7643	Spirol pin-3mm diameter	2		
17	EBC 1411	Setscrew	1		


CHANGE POINTS:
(1) To (E) 159900

CHAIN TENSIONER-UPPER-XJ6

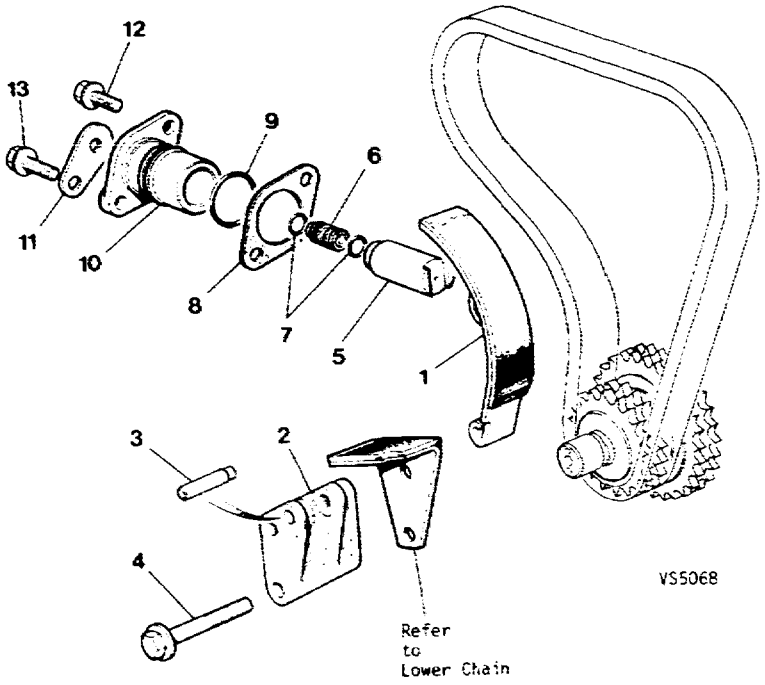

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 4536	Chain tensioner blade-secondary	1		
2	EAC 6783	Pivot bracket	1		
3	EAC 4538	Pivot pin	1		
4	FB 108141 J	Washer faced bolt	2		
5	EAC 9607	Chain tensioner piston	1		
6	EAC 6744	Non return valve	NLA		Use NBC2031AA
	NBC 2031AA	Chain tensioner-assembly	1		
7	EAC 6779	Non return valve O-ring-timing chain tensioner	2		
8	EAC 4557	Housing gasket	1		
9	EAC 4540	Piston O-ring	1		
10	EAC 9508	Piston tensioner housing	NLA		Use NBB2021AA
10	NBB 2021AA	Piston tensioner housing	NLA		Use NBC2031AA
11	EAC 4650	End plate	NLA		Use NBC2031AA
12	FS 108251 J	Washer faced setscrew-M8 x 25mm	1		
13	FS 108301 J	Setscrew	1		


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 3850	Alternator drive belt-80 amp alternator	1	(1)	3.6 Litre (XJ40),80 amp alternator
1	EAC 7033	Alternator drive belt-90/115 amp alternator	1	(2)	3.6 Litre (XJ40),90/115 amp alternator
1	EAC 7033	Alternator drive belt-90/115 amp alternator	1		3.2 Litre,90/115 amp alternator
					4.0 Litre,90/115 amp alternator
2	EAC 3878	Compressor drive belt	1		
3	EAC 6335	Air pump drive belt	1		

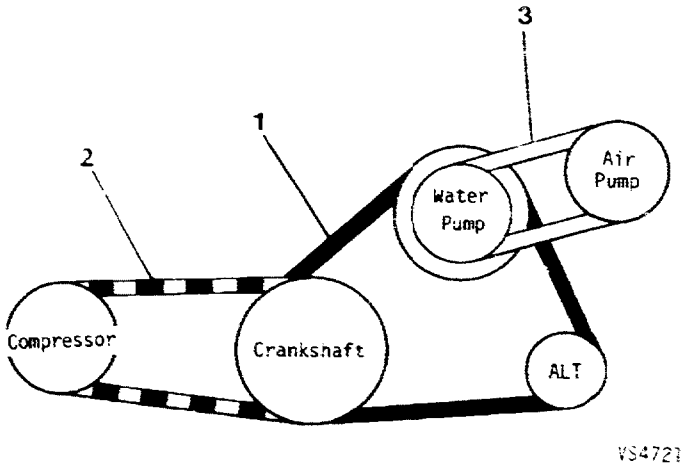

VS4721

CHANGE POINTS
(1) To (E) 109969
(2) From (E) 109970


CAMSHAFT AND VALVES-3.2/3.6/4.0 LITRE

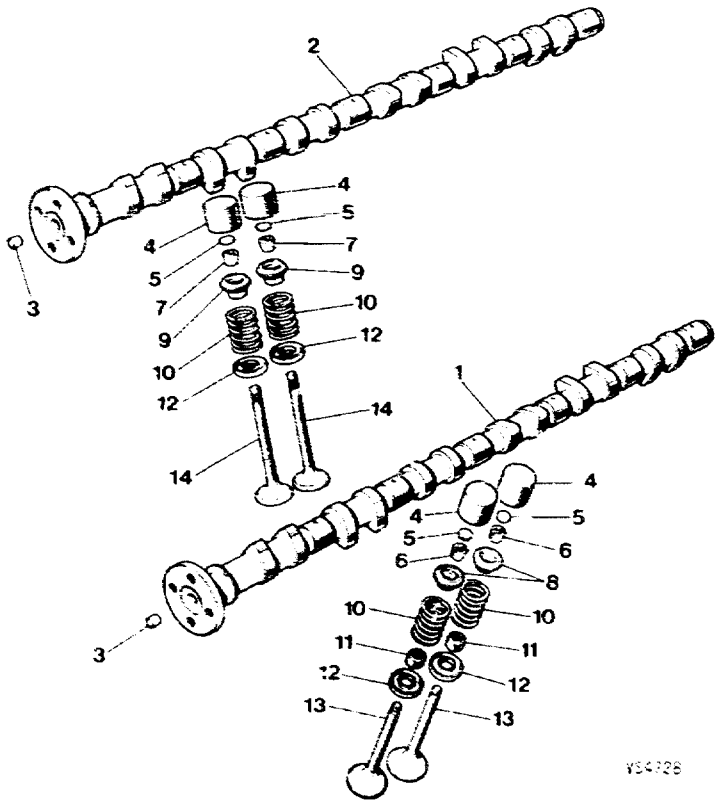

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	2755	Camshaft-inlet-assembly	1		3.6 Litre (XJ40)
2	EBC	2756	Camshaft-exhaust-assembly	1		3.6 Litre (XJ40)
1	EBC	2908	Camshaft-inlet-assembly	1		3.2 Litre
1	EBC	2908	CAMSHAFT-INLET-ASSEMBLY	1	(1)	3.6 Litre (XJ40)
3	C	33244	• Plug	A/R		
1	EBC	2908	CAMSHAFT-INLET-ASSEMBLY	1		4.0 Litre
3	C	33244	• Plug	A/R		
2	EBC	2907	CAMSHAFT-EXHAUST-ASSEMBLY	1		3.2 Litre
3	C	33244	• Plug	A/R		
2	EBC	2907	CAMSHAFT-EXHAUST-ASSEMBLY	1		4.0 Litre
3	C	33244	• Plug	A/R		
4	EAC	8418	Tappet-standard	24	(2)	3.6 Litre (XJ40)
4	EBC	2197	Tappet-oversize	NLA		3.6 Litre (XJ40)
4	EAC	9218	Tappet-standard	NLA		Use NBC2543AA 3.2 Litre
4	EAC	9218	Tappet-standard	NLA		Use NBC2543AA 4.0 Litre
4	EBC	2946	Tappet-oversize	24		3.2 Litre
4	EBC	2946	Tappet-oversize	24	(1)	3.6 Litre (XJ40)
4	EBC	2946	Tappet-oversize	24		4.0 Litre


CHANGE POINTS
(1) From (E) 168885
(2) To (E) 168884

CAMSHAFT AND VALVES-3.2/3.6/4.0 LITRE

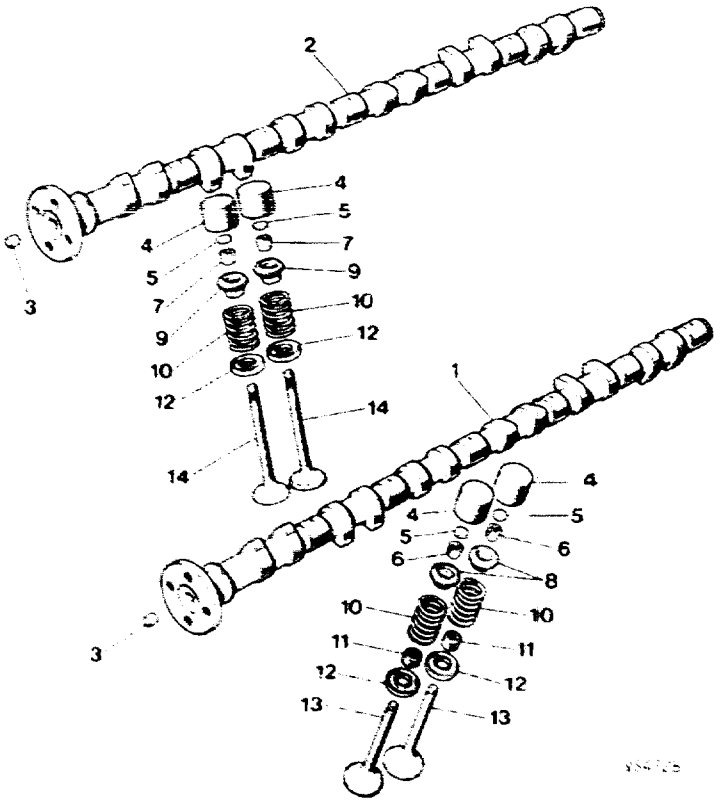

Illus	Part Number	Description	Quantity	Change Point	Remarks
5	EAC 501312	Tappet adjustment shim-0.085"	NLA		Use EBC113602
5	EAC 501313	Tappet adjustment shim-0.0855"	NLA		Use EBC113603
5	EAC 501314	Tappet adjustment shim-0.086"	NLA		Use EBC113604
5	EAC 501315	Tappet adjustment shim-0.0865"	NLA		Use EBC113605
5	EAC 501316	Tappet adjustment shim-0.087"	NLA		Use EBC113606
5	EAC 501317	Tappet adjustment shim-0.0875"	NLA		Use EBC113607
5	EAC 501318	Tappet adjustment shim-0.088"	NLA		Use EBC113608
5	EAC 501319	Tappet adjustment shim-0.0885"	NLA		Use EBC113609
5	EAC 501310	Tappet adjustment shim-0.089"	NLA		Use EBC1136010
5	EAC 501311	Tappet adjustment shim-0.0895"	NLA		Use EBC1136011
5	EAC 501312	Tappet adjustment shim-0.09"	NLA		Use EBC1136012
5	EAC 501313	Tappet adjustment shim-0.0905"	NLA		Use EBC1136013
5	EAC 501314	Tappet adjustment shim-0.091"	NLA		Use EBC1136014
5	EAC 501315	Tappet adjustment shim-0.0915"	NLA		Use EBC1136015
5	EBC 113602	Tappet adjustment shim-0.085"	A/R		
5	EBC 113603	Tappet adjustment shim-0.0855"	A/R		
5	EBC 113604	Tappet adjustment shim-0.086"	A/R		
5	EBC 113605	Tappet adjustment shim-0.0865"	A/R		
5	EBC 113606	Tappet adjustment shim-0.087"	A/R		
5	EBC 113607	Tappet adjustment shim-0.0875"	A/R		
5	EBC 113608	Tappet adjustment shim-0.088"	A/R		
5	EBC 113609	Tappet adjustment shim-0.0885"	A/R		
5	EBC 1136010	Tappet adjustment shim-0.089"	A/R		
5	EBC 1136011	Tappet adjustment shim-0.0895"	A/R		
5	EBC 1136012	Tappet adjustment shim-0.09"	A/R		
5	EBC 1136013	Tappet adjustment shim-0.0905"	A/R		
5	EBC 1136014	Tappet adjustment shim-0.091"	A/R		
5	EBC 1136015	Tappet adjustment shim-0.0915"	A/R		

CAMSHAFT AND VALVES-3.2/3.6/4.0 LITRE

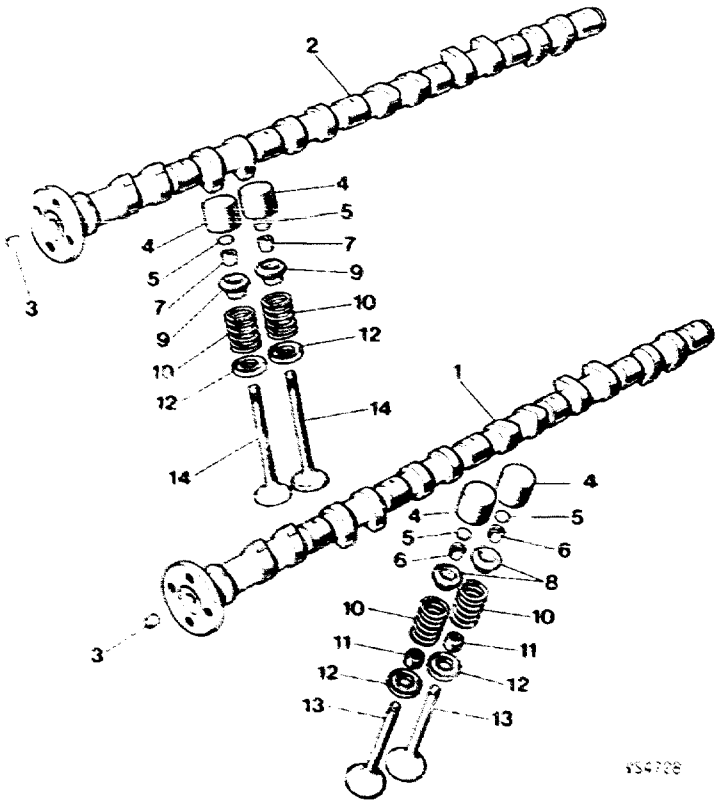



Illus	Part Number		Description	Quantity	Change Point	Remarks
6	C	27482	Valve cotter-inlet	NLA	(1)	Use EBC2997. 3.2 Litre
6	C	27482	Valve cotter-inlet	NLA		Use EBC2997. 3.6 Litre (XJ40)
6	C	27482	Valve cotter-inlet	NLA	(2)	Use EBC2997. 4.0 Litre
6	EBC	2997	Valve cotter-inlet	12PR	(3)	3.2 Litre
6	EBC	2997	Valve cotter-inlet			3.6 Litre (XJ40)
6	EBC	2997	Valve cotter-inlet	12PR	(4)	4.0 Litre
7	EAC	7256	Valve cotter-exhaust	NLA	(1)	Use EBC2998. 3.2 Litre
7	EAC	7256	Valve cotter-exhaust	NLA		Use EBC2998. 3.6 Litre (XJ40)
7	EAC	7256	Valve cotter-exhaust	NLA	(2)	Use EBC2998. 4.0 Litre
7	EBC	2998	Valve cotter-exhaust	12PR	(3)	3.2 Litre
7	EBC	2998	Valve cotter-exhaust			3.6 Litre (XJ40)
7	EBC	2998	Valve cotter-exhaust	12PR	(4)	4.0 Litre
8	EAC	4709	Inlet valve collar	12		
9	EAC	7227	Exhaust valve collar	12		
10	EAC	5875	Valve spring	NLA		Use EBC4871. 3.6 Litre (XJ40)
10	EAC	5875	Valve spring	NLA	(5)	Use EBC4871. 4.0 Litre
10	EBC	4871	Valve spring	24		3.2 Litre
10	EBC	4871	Valve spring	24	(6)	4.0 Litre
11	EAC	5032	Inlet valve seal	NLA	(7)	Use EBC3531. 3.2 Litre
11	EBC	3531	Inlet valve seal	12	(8)	3.2 Litre
11	EBC	3531	Inlet valve seal	12	(9)	4.0 Litre
11	EAC	5032	Inlet valve seal	NLA	(10)	Use EBC3531. 4.0 Litre
12	C	27481	Valve spring seat	24		
13	EAC	2909	Cylinder head valve-inlet	12		
14	EAC	7255	Cylinder head valve-exhaust	12		

CHANGE POINTS

(1) To (E) 105085
(2) To (E) 149883
(3) From (E) 105036
(4) From (E) 149834
(5) To (E) 120212
(6) From (E) 120213
(7) To (E) 115441
(8) From (E) 105442
(9) From (E) 151349
(10) To (E) 151348


CYLINDER HEAD GASKET SET-3.2/3.6/4.0 LITRE

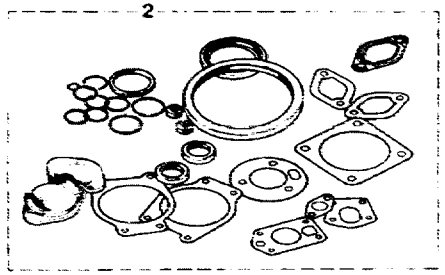


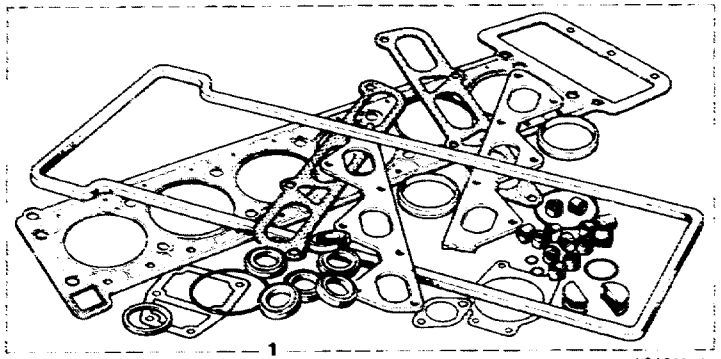

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	2101	CYLINDER HEAD GASKET SET	NLA		Use JLM11088 3.2 Litre
1	JLM	2101	CYLINDER HEAD GASKET SET	NLA		Use JLM11088 3.6 Litre (XJ40)
1	JLM	2101	CYLINDER HEAD GASKET SET	NLA		Use JLM11088 4.0 Litre
	C	30431	• Sealing plug-rear	2		
	CBC	4834	• Manifold gasket	NLA		Use EBC4881
	EAC	2912	• Camshaft cover seal	1		
	EAC	4049	• Spark plug boss seal	6		
	EAC	4540	• Piston O-ring	1		
	EAC	4557	• Housing gasket	1		
	EAC	4714	• Aircleaner O-ring	1		
	EAC	6779	• Non return valve O-ring-timing chain tensioner	2		
	EAC	8994	• Manifold gasket-front	1		
	EAC	8995	• Manifold gasket-rear	1		
	EAC	8999	• Thermostat housing O-ring	1		
	EAC	9826	• Throttle body trumpet gasket	1		
	EBC	1436	• Exhaust gas recirculation valve gasket	3		
	EBC	2568	• Cover gasket -rear	1		
	EBC	2781	• Inlet manifold gasket	1		
	EBC	3531	• Inlet valve seal	12		
	EBC	9213	• Cylinder head gasket	NLA		Use EBC10256
1	JLM	11088	CYLINDER HEAD GASKET SET	1		3.2 Litre
1	JLM	11088	CYLINDER HEAD GASKET SET	1		3.6 Litre (XJ40)
1	JLM	11088	CYLINDER HEAD GASKET SET	1		4.0 Litre

CYLINDER HEAD GASKET SET-3.2/3.6/4.0 LITRE

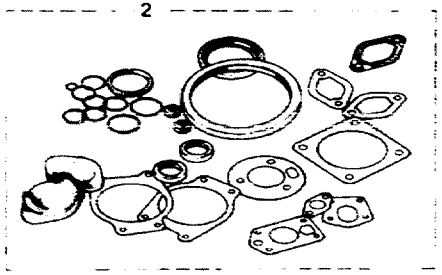

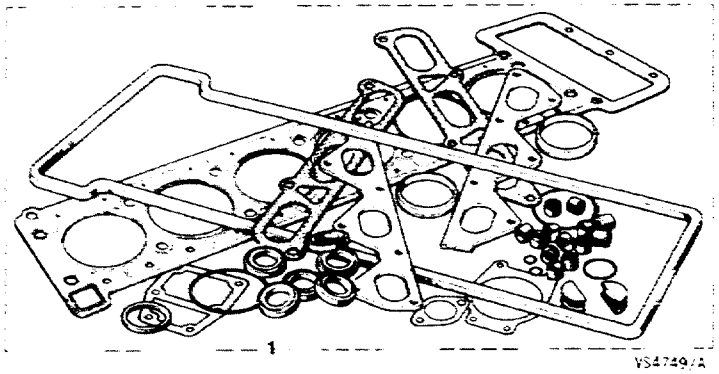


Illus	Part Number		Description	Quantity	Change Point	Remarks
	C	30431	• Sealing plug-rear	2		
	EAC	2912	• Camshaft cover seal	1		
	EAC	4049	• Spark plug boss seal	6		
	EAC	4540	• Piston O-ring	1		
	EAC	4557	• Housing gasket	1		
	EAC	4714	• Aircleaner O-ring	1		
	EAC	6779	• Non return valve O-ring-timing chain tensioner	2		
	EAC	8994	• Manifold gasket-front	1		
	EAC	8995	• Manifold gasket-rear	1		
	EAC	8999	• Thermostat housing O-ring	1		
	EAC	9826	• Throttle body trumpet gasket	1		
	EBC	1436	• Exhaust gas recirculation valve gasket	3		
	EBC	2568	• Cover gasket -rear	1		
	EBC	2781	• Inlet manifold gasket	1		
	EBC	3531	• Inlet valve seal	24		
	NBC	2520AB	• Cylinder head gasket	1		
	EBC	9388	• Manifold gasket-manifold to downpipe	2		
2	JLM	835	Supplementary gasket set	1	(1)	3.6 Litre (XJ40)
2	JLM	1759	SUPPLEMENTARY GASKET SET	NLA	(2)	Use JLM11574 3.2 Litre
2	JLM	1759	SUPPLEMENTARY GASKET SET	NLA	(2)	Use JLM11574 3.6 Litre (XJ40)
2	JLM	1759	SUPPLEMENTARY GASKET SET	NLA	(2)	Use JLM11574 4.0 Litre

CHANGE POINTS

(1) To (E)9DPAMA 180210

(2) From (E)9DPAMA 180211


CYLINDER HEAD GASKET SET-3.2/3.6/4.0 LITRE

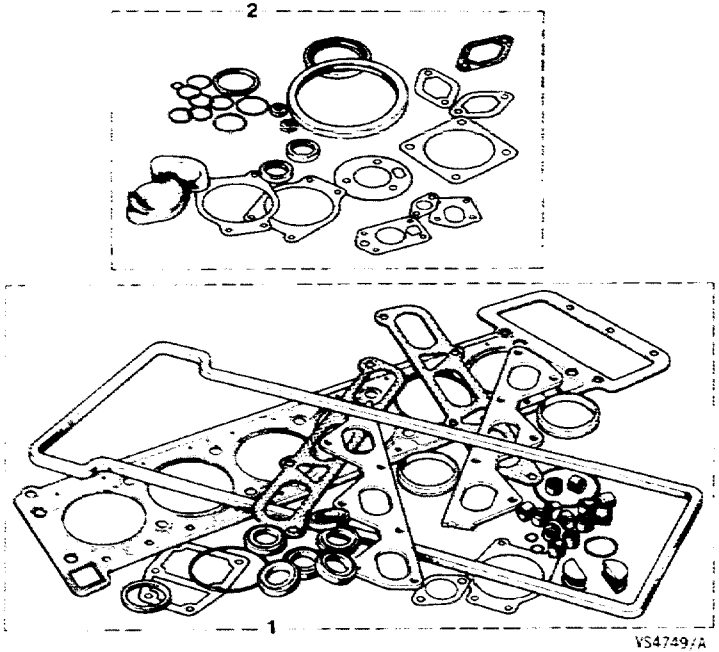


Illus	Part Number		Description	Quantity	Change Point	Remarks
	C	32366	• Housing gasket	2		
	C	42511	• O-ring	1		
	CAC	5118	• O-ring	2		
	EAC	2495	• Oil plug O-ring	2		
	EAC	4038	• Auxiliary shaft bearing gasket	1		
	EAC	4378	• Rubber seal	2		
	EAC	4974	• Crankshaft oil seal-rear	1		
	EAC	5536	• Oil pipe O-ring	4		
	EAC	5721	• Intermediate shaft oil seal	1		
	EAC	6156	• Oil seal-auxiliary shaft	1		
	EAC	6779	• Non return valve O-ring-timing chain tensioner	1		
	EAC	7329	• Throttle spindle seal	NLA		Use EBC3964.
	EAC	7954	• Crankshaft oil seal	1		
	EAC	9745	• Water rail gasket	1		
	EAC	9822	• Throttle body gasket	1		
	EAC	9823	• Supplementary air adaptor gasket	1		
	EAC	9824	• Water heater restrictor gasket	1		
	EAC	9825	• Idle air valve gasket	1		
	EAC	9826	• Throttle body trumpet gasket	2		
	EBC	1767	• Idle speed valve gasket-valve to manifold	1		
	EBC	2731	• Blanking plate gasket-adaptor to inlet manifold	2		
2	JLM	11574	Supplementary gasket set	1	(1)	

CHANGE POINTS:
(1) From (E)9DPAMA 180211

CYLINDER HEAD GASKET SET-3.2/3.6/4.0 LITRE

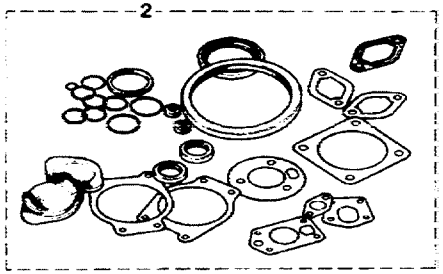


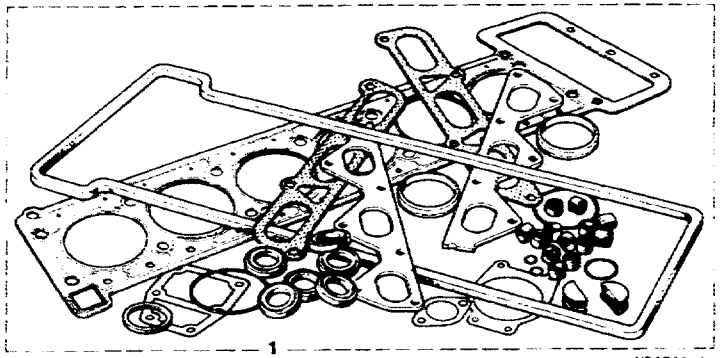

VS4749/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
C	32366	• Housing gasket	2		
C	42511	• O-ring	1		
CAC	5118	• O-ring	2		
EAC	2495	• Oil plug O-ring	2		
EAC	4038	• Auxiliary shaft bearing gasket	1		
EAC	4378	• Rubber seal	2		
EAC	4974	• Crankshaft oil seal-rear	1		
EAC	5536	• Oil pipe O-ring	4		
EAC	5721	• Intermediate shaft oil seal	1		
EAC	6156	• Oil seal-auxiliary shaft	1		
EAC	6779	• Non return valve O-ring-timing chain tensioner	1		
EAC	7954	• Crankshaft oil seal	1		
EAC	9745	• Water rail gasket	1		
EAC	9822	• Throttle body gasket	1		
EAC	9823	• Supplementary air adaptor gasket	1		
EAC	9824	• Water heater restrictor gasket	1		
EAC	9825	• Idle air valve gasket	1		
EAC	9826	• Throttle body trumpet gasket	2		
EBC	1767	• Idle speed valve gasket-valve to manifold	1		
EBC	2731	• Blanking plate gasket-adaptor to inlet manifold	2		
EBC	3964	• Throttle spindle seal	2		
NBB	1715AA	• Oil cooler adaptor gasket	1		
NBB	1716AA	• Oil filter housing gasket	1		

INDUCTION MANIFOLD-4.0 LITRE

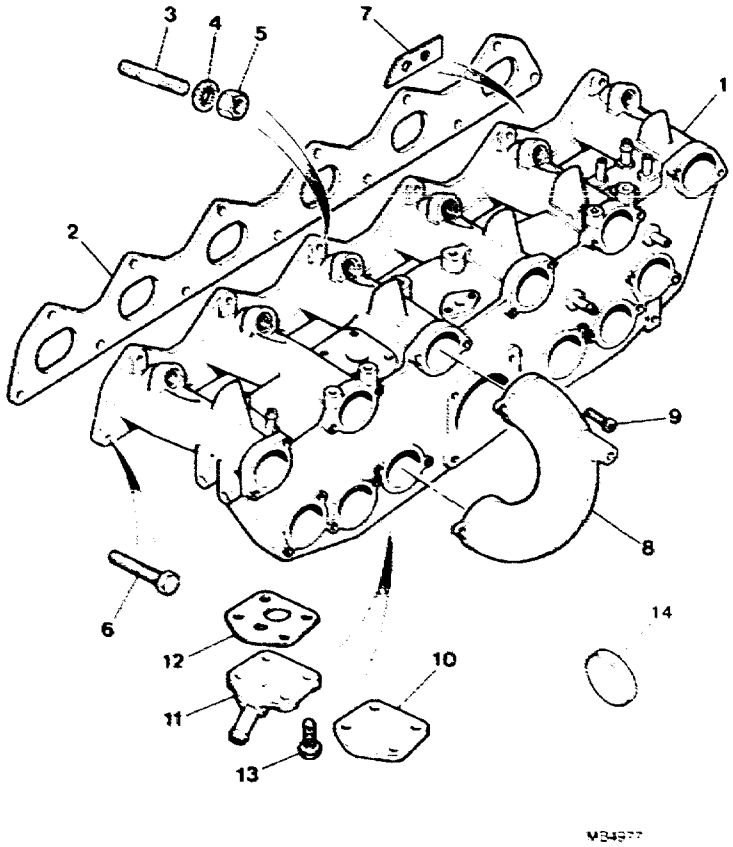


M34877

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 7748	Induction manifold-with decal valve	1		4.0 Litre
2	EBC 2781	Inlet manifold gasket	1		
3	TE 108061 J	Stud	6		
4	C 300752	Serrated washer-metric fixing	6		
5	NH 108041 J	Flanged nut -M8	NLA		Use FN108041J
5	FN 108041 J	Flanged nut -M8	6		
6	FB 108061 J	Washer faced bolt	7		
7	DBC 2237	Retaining bracket	1		
8	EAC 6382	Elbow-aluminium-with mounting boss	NLA	(1)	Use EBC1057
8	EAC 4681	Elbow-aluminium-less mounting boss	NLA	(1)	Use EBC1058
8	EBC 1057	Elbow-plastic-with mounting boss	NLA	(2)	Use EBC4953
8	EBC 1058	Elbow-plastic-less mounting boss	NLA	(2)	Use EBC4954
8	EBC 4953	Elbow-with mounting boss	3	(3)	4.0 Litre
8	EBC 4954	Elbow-less mounting boss	3	(3)	4.0 Litre
9	EBC 2635	Elbow setscrew	24		
10	EBC 2091	Blanking plate	1		4.0 Litre,except purge control
11	EBC 2092	Induction manifold adaptor	1		4.0 Litre;purge control
	EBC 3445	Stub pipe adaptor	NLA	(4)	Use EBC5140 qty 1 with EBC5185 qty 2 with JLM10500 qty 1
					4.0 Litre;USA
	EBC 5140	Stub pipe adaptor	1	(5)	4.0 Litre;USA
12	EBC 2731	Blanking plate gasket-adaptor to inlet manifold	1		
13	FS 106161 J	Flange head screw-M6	NLA		Use FS106165P
					Adaptor to manifold ,except USA
13	FS 106165 P	Flange head screw	4		Adaptor to manifold ,except USA
13	FS 106201 J	Flange head screw	2		4.0 Litre,adaptor to manifold ,USA
	FB 106082 J	Bolt	2		4.0 Litre,adaptor to manifold ,USA
14	C 168628	Cylinder block core plug	2		

CHANGE POINTS

(1) To (E) 110828
(2) From (E) 110829 To (E) 151348
(3) From (E) 151349
(4) To (E) 134515
(5) From (E) 134516

EXHAUST MANIFOLD-3.2/3.6/4.0 LITRE

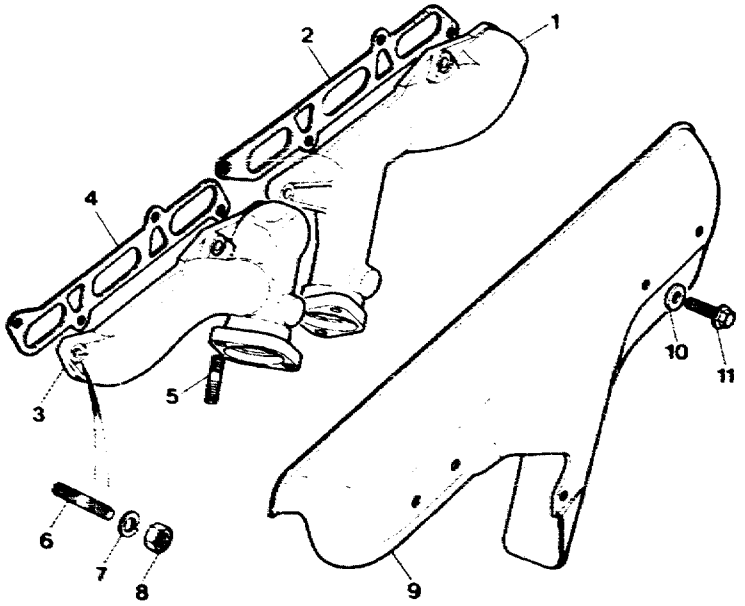


VS3631/B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	3599	Exhaust manifold-front	1		3.2 Litre
						3.6 Litre (XJ40),except air injection
						4.0 Litre,except air injection
1	EBC	3570	Exhaust manifold-front	NLA	(1)	Use EBC3598
						Air injection,4.0 Litre
1	EBC	3598	Exhaust manifold-front	1	(2)	Air injection,4.0 Litre
1	EAC	7275	Exhaust manifold-front	1		Air injection,3.6 Litre (XJ40)
2	EAC	8994	Manifold gasket-front	1		
3	EBC	3597	Exhaust manifold-rear	1		3.2 Litre
						3.6 Litre (XJ40),except air injection
						4.0 Litre,except air injection
3	EAC	7276	Exhaust manifold-rear	NLA		Use EBC3601
						Air injection,3.6 Litre (XJ40)
3	EBC	3572	Exhaust manifold-rear	1	(1)	Air injection,4.0 Litre
3	EBC	3601	Exhaust manifold-rear	1	(2)	Air injection,4.0 Litre
4	EAC	8995	Manifold gasket-rear	1		
5	EAC	3823	Outlet flange stud	4		
6	EBC	3316	Stud	8		Manifold to cylinder head
7	WL	110001 J	Lock washer-metric	8		
8	EAC	5308	Nut	NLA		Use FX110041
9	EAC	9675	Heatshield	NLA		Use EBC3539
						3.2 Litre
9	EAC	9675	Heatshield	NLA	(3)	Use EBC3539
						3.6 Litre (XJ40)
9	EBC	3539	Heatshield	1		3.2 Litre
9	EBC	3539	Heatshield	1	(4)	3.6 Litre (XJ40)
9	EBC	3540	Heatshield	1		Air injection,4.0 Litre
10	SH	108141 J	Setscrew-heatshield to manifold	4		
11	WA	108051	Plain washer-0.3125" diameter	4		

CHANGE POINTS

(1) To (E) 110976
(2) From (E) 110977
(3) To (E) 184292
(4) From (E) 184293

TRANSMISSION ADAPTOR-2.9/3.2/3.6/4.0 LITRE

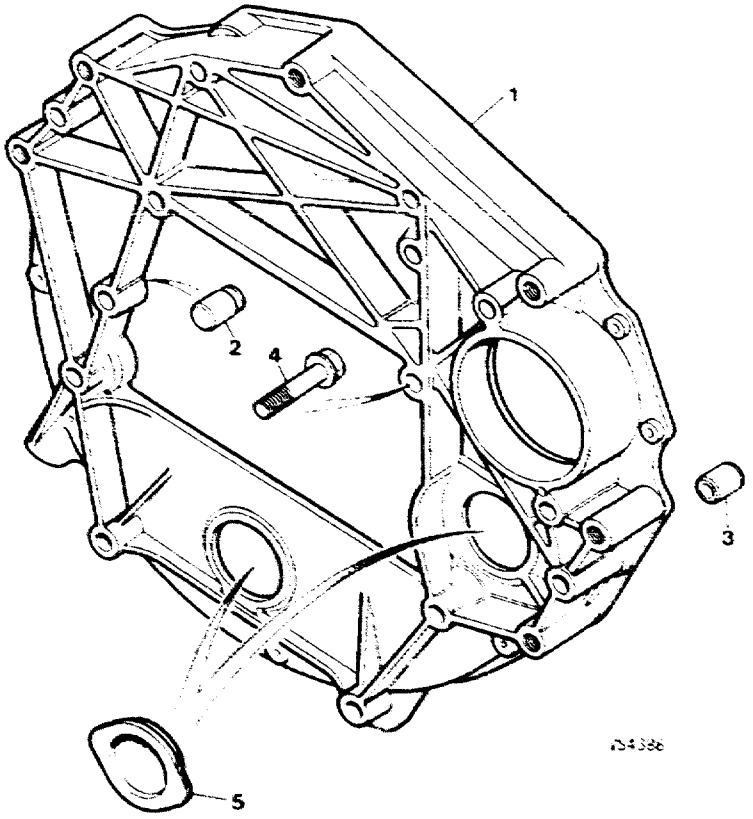


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 7067	Transmission adaptor plate	NLA	(1)	2.9 Litre
1	EAC 7067	Transmission adaptor plate	NLA	(3)	3.6 Litre (XJ40)
1	EBC 1647	Transmission adaptor plate	NLA		Use EBC2051 3.2 Litre
1	EBC 1647	Transmission adaptor plate	NLA	(2)	Use EBC2051 2.9 Litre
1	EBC 1647	Transmission adaptor plate	NLA	(4)	Use EBC2051 3.6 Litre (XJ40)
1	EBC 1647	Transmission adaptor plate	NLA		Use EBC2051 4.0 Litre
1	EBC 2051	Transmission adaptor plate	1		
2	C 13478	Dowel	2		
3	C 46021	Dowel	2		
4	FS 110251 J	Setscrew	4		
5	EAC 4378	Rubber seal	2		

CHANGE POINTS

(1) To (E)9APTMA 101986
(2) From (E)9APTMA 101987
(3) To (E) 110688
(4) From (E) 110689

DRIVE PLATE ASSEMBLY-3.2/4.0 LITRE

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 2788	Drive plate-assembly	NLA		Use NNA1426AA 3.2 Litre
1	EBC 2788	Drive plate-assembly	NLA		Use NNA1426AA 4.0 Litre
1	NNA 1426AA	Drive plate-assembly	1		
2	EBC 1908	Drive plate adaptor	1		
3	EBC 1939	Screw	8		
4	EAC 5580	Setscrew	3		

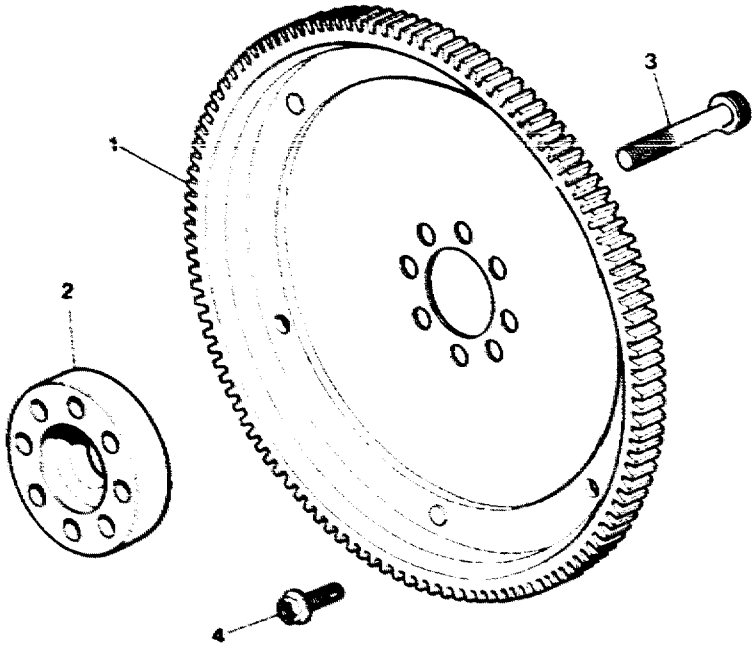


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX


ENGINE HARNESSES AND WIRING ..... 1. K 09
ENGINE MANAGEMENT CONTROL MODULE ..... 1. I 06
EVAPORATIVE EMISSION CONTROL ..... 1. I 02
EXHAUST GAS RECIRCULATION SYSTEM ..... 1. K 07
HOSES AND PIPES-ENGINE ..... 1. K 04
IDLE SPEED COMPONENTS ..... 1. J 16
IGNITION SYSTEM ..... 1. I 18
SECONDARY AIR INJECTION SYSTEM ..... 1. J 05
SENSORS, SWITCHES AND RELAYS ..... 1. J 09
AIR INJECTION PIPES-3.6 LITRE ..... 1. J 07
AIR INJECTION PIPES-4.0 LITRE ..... 1. J 08
AIR INJECTION PUMP-3.6/4.0 LITRE ..... 1. J 05
AIR PUMP MOUNTING-3.6/4.0 LITRE ..... 1. J 06
CARBON CANISTER BYPASS SYSTEM ..... 1. I 04
CARBON CANISTER PURGE CONTROL ..... 1. I 05
CARBON CANISTER-FROM (V)629362 ..... 1. I 03
CARBON CANISTER-UP TO (V)629361 ..... 1. I 02
CONTROL UNIT-2.9 LITRE ..... 1. I 13
CONTROL UNIT-3.2 LITRE ..... 1. I 14
CONTROL UNIT-4.0 LITRE-AUTOMATIC ..... 1. I 15
CONTROL UNIT-4.0 LITRE-MANUAL ..... 1. I 16
DISTRIBUTOR-2.9 LITRE ..... 1. I 18
DISTRIBUTOR-3.2/3.6/4.0 LITRE ..... 1. J 02
ENGINE BREATHING-2.9 LITRE-FROM ..... 1. K 05
ENGINE BREATHING-2.9 LITRE-UP TO ..... 1. K 04
ENGINE BREATHING-3.2/3.6/4.0 LITRE ..... 1. K 06
ENGINE COMPARTMENT RELAYS ..... 1. J 17
EXHAUST GAS RECIRCULATION VACUUM ..... 1. K 07
EXHAUST GAS RECIRCULATION VALVE AND ..... 1. K 08
EXHAUST TEMPERATURE WARNING ..... 1. J 13
GEARBOX ELECTRONIC CONTROL MODULE ..... 1. I 17
HEATED OXYGEN SENSOR ..... 1. J 12
IDLE AIR VALVE-3.2/4.0 LITRE ..... 1. K 03
IDLE AIR VALVE-3.6 LITRE ..... 1. K 02
IDLE SPEED ACTUATOR-2.9 LITRE ..... 1. J 18
IGNITION COIL AND MODULE ..... 1. J 03
INERTIA SWITCH AND MOUNTING ..... 1. J 09
INERTIA SWITCH AND RELAY FUSEBOX ..... 1. J 10
MICROPROCESSOR-FROM (V)594576 ..... 1. I 12
MICROPROCESSOR/ELECTRONIC ..... 1. I 06
PETROL INJECTION HARNESS ..... 1. K 09
RELAYS AND CONTROL UNITS ..... 1. J 14
SPARK PLUG AND LEADS ..... 1. J 04
Supplementary air valve ..... 1. K 02

CARBON CANISTER-UP TO (V)629361

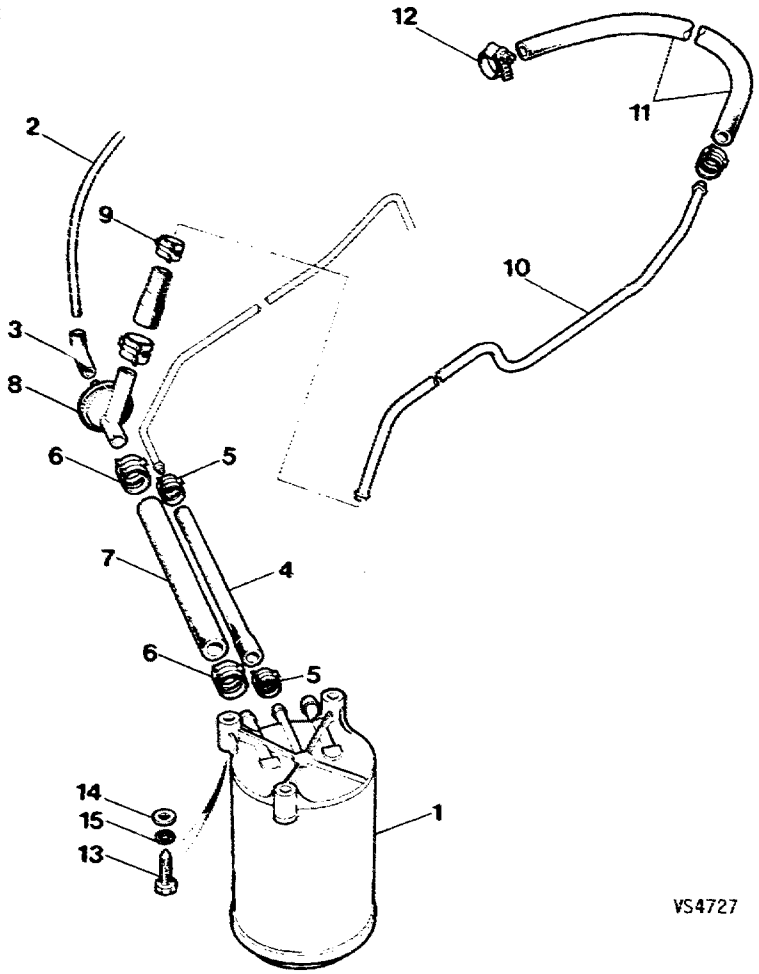

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6739	Carbon canister	1		
2	CAC 7867 1	Nylon tube	1		
3	CAC 7868	Elbow	1		
4	CAC 1853 4	Hose	1		
5	CAC 8772	Hose clip	2		
6	CAC 8776	Hose clip	5		
7	CAC 5869 3	Hose	1		
8	CAC 6874	Purge valve	1		
9	CAC 7843	Hose-purge valve to purge pipe	1		
10	CAC 7854	Purge pipe	1		
11	CAC 8901 22	Fuel hose-1295mm	1		
12	EAC 3215 2	Worm drive hose clip	NLA		Use JHC200101.
12	JHC 200101	Worm drive hose clip-steel	2		
	CAC 8855	Clip	1		Purge pipe/vapour pipe to body
	AB 610051 J	Flanged head screw	1		Purge pipe/vapour pipe to body
	CZK 3264 J	Lokut nut-RH/LH	NLA		Use BBC3242.
	BBC 3242	Lokut nut-RH/LH	1		
13	BH 106091 J	Bolt	3		
14	WC 106041 J	Plain washer	NLA		
15	WF 106001 J	Shakeproof washer-M6	3		
	C 327462	Pipe clip-single	1		

CARBON CANISTER-FROM (V)629362

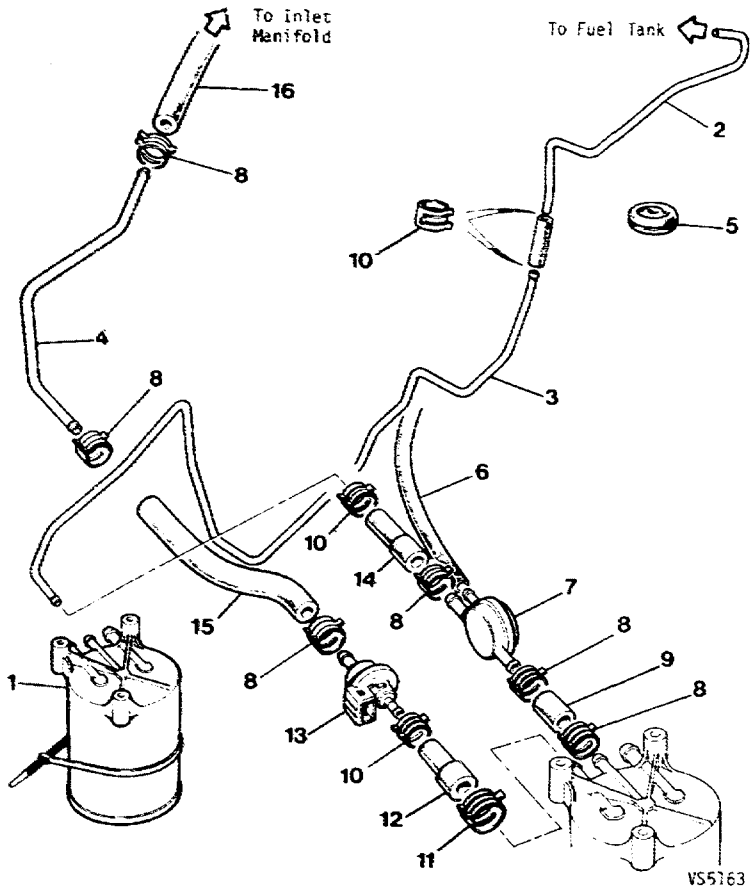


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6739	Carbon canister	1		
2	CAC 8638	Vapour pipe-pipe to vacuum valve	1		
3	CBC 8945	Vapour pipe	1		
4	CBC 8099	Purge pipe	1		
5	C 23035	Bonnet release cable hole grommet	1		
6	EAC 8022 19	Vacuum hose	1		
7	CBC 7714	Pressure control valve	1		
8	CAC 8773	Hose clip	6		
9	CAC 5867 3	Hose-75mm	NLA		Use CAC586725 115mm
9	CAC 5867 25	Hose-115mm	1		Cut to correct length
10	CAC 8772	Hose clip	3		
11	CAC 8776	Hose clip	1		
12	CAC 7586	Reducing hose	NLA	(1)	Use EBC10152
12	EBC 10152	Reducing hose	1	(2)	
13	DBC 4301	Purge control valve	1		
14	NSP	Fuel hose	NLA		
15	CAC 5867 25	Hose-115mm	1		
16	CAC 5867 7	Hose-purge pipe to manifold	NLA		
	EAC 3215	Jubilee clip	NLA		

CHANGE POINTS

(1) To (V) 663501

(2) From (V) 663502


CARBON CANISTER BYPASS SYSTEM

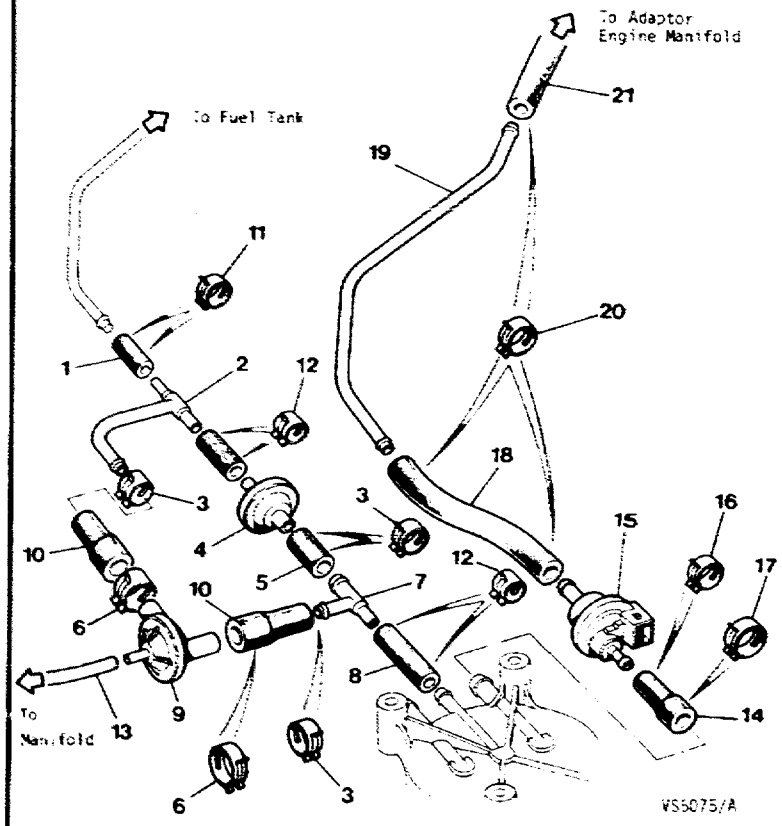

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	5866 20	Fuel hose-1400mm	1		35mm length;under floor pipe to T-piece
2	CBC	6523	T-piece elbow	1		
1	CAC	5866 20	Fuel hose-1400mm	1		40mm length;elbow T-piece to P-vacuum valve
3	CAC	8774	Hose clip	4		
4	CBC	6280	Pressure reducing valve -5 hole type	NLA		Use CAC3101
4	CAC	3101	Pressure reducing valve -white	1		
5	CAC	8900 11	Hose-1220mm	1		35mm length;pressure vacuum to T-piece
6	CAC	8776	Hose clip	2		
7	CBC	6524	T-piece	1		
8	CAC	8901 22	Fuel hose-1295mm	1		65mm length;T-piece to carbon canister
9	CAC	6874	Purge valve	1		
10	CAC	7843	Hose-purge valve to purge pipe	1		T piece to purge valve
11	CAC	8772	Hose clip	2		
12	CAC	8773	Hose clip	4		
13	EAC	8022 30	Breather hose-63"	1		
14	CAC	7586	Reducing hose	NLA	(1)	Use EBC10152
14	EBC	10152	Reducing hose	1		
15	DBC	4301	Purge control valve	1		
16	CAC	8772	Hose clip	1		
17	CAC	8776	Hose clip	1		
18	CAC	8901 22	Fuel hose-1295mm	1		
19	CBC	8099	Purge pipe	1		
20	CAC	8774	Hose clip	3		
21	CAC	8901 22	Fuel hose-1295mm	1		

CHANGE POINTS
(1) From (V) 594576


CARBON CANISTER PURGE CONTROL

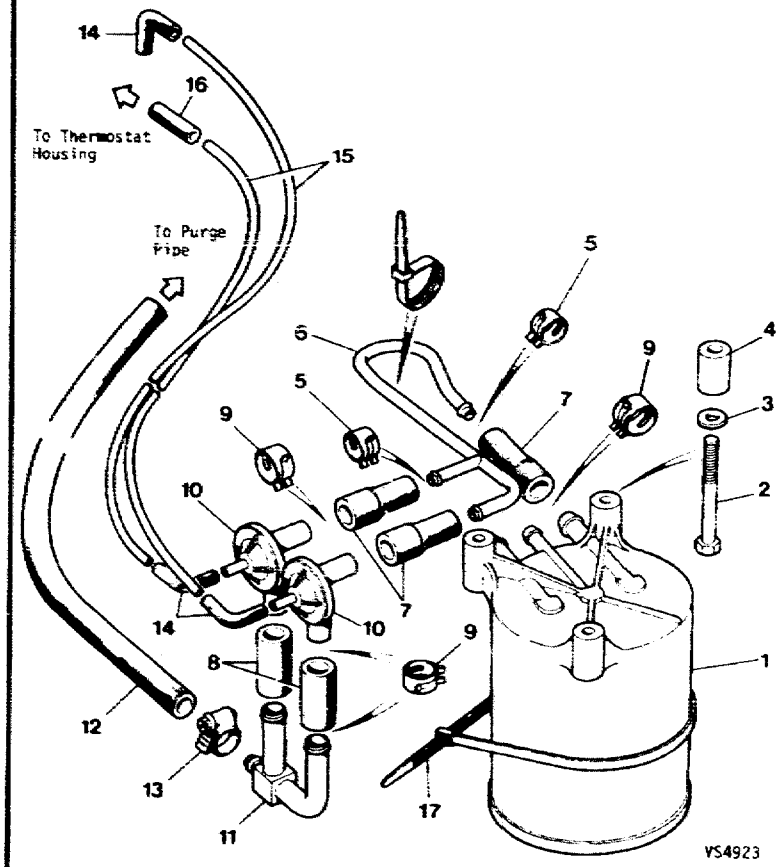

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6739	Carbon canister	1		
2	BH 106151 J	Bolt	NLA		
3	WC 106041 J	Plain washer	NLA		
4	CBC 6885	Spacer	3		
5	CAC 87742	Hose clip	NLA		
6	CBC 6553	Y-piece	1		
7	CAC 7586	Reducing hose	NLA		Use EBC10152
7	EBC 10152	Reducing hose	3		
8	CAC 586919	Hose-40mm	2		
9	CAC 8776	Hose clip	3		
10	CAC 6874	Purge valve	2		
11	CBC 6554	Y-piece connector	1		
12	CAC 890122	Fuel hose-1295mm	1		Y-piece to purge pipe
	CAC 7854	Purge pipe	1		
12	CAC 890122	Fuel hose-1295mm	1		Purge pipe to plenum
13	EAC 32152	Worm drive hose clip	NLA		Use JHC200101
13	JHC 200101	Worm drive hose clip-steel	4		
14	CAC 8050	Elbow	NLA		Use CBC8859
14	CBC 8859	Elbow	3		
15	CAC 805130	Vacuum pipe-730mm	2		1 x 730mm and 1 x 840mm
16	EAC 802230	Breather hose-63"	1		
17	AGU 2532	Tie wrap	1		
	JLM 1576	Purge control kit-fuel tank	NLA	(1)	

CHANGE POINTS
(1) To (V) 538526

MICROPROCESSOR-FROM (V)594576

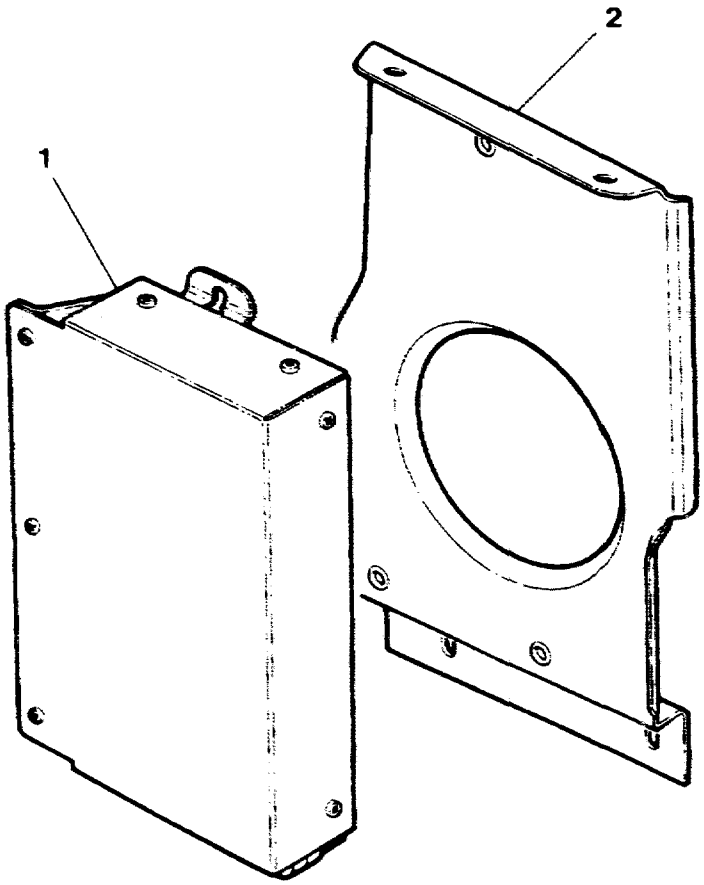

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 4968	Microprocessor	NLA	(1)	Use DBC10234 USA,passive belt
1	DBC 4967	Microprocessor	NLA	(1)	Use DBC10233 Canada,Taiwan,Middle East;except passive belt
1	DBC 4966	Microprocessor	NLA	(1)	Use DBC10232 Except Canada and Taiwan and USA and passive belt and Middle East
1	DBC 10234	Microprocessor	1	(2)	USA,passive belt
1	DBC 10233	Microprocessor	1	(2)	Canada,Taiwan,Middle East;except passive belt
1	DBC 10232	Microprocessor	1	(2)	Except Canada and Taiwan and passive belt and Middle East
2	DBC 3133	Microprocessor mounting plate -LH	NLA	(3)	Use DBC10363 Oblong cut out,RHD
2	DBC 3132	Microprocessor mounting plate -RH	NLA	(3)	Use DBC10362 Oblong cut out,LHD
2	DBC 10363	Microprocessor mounting plate -LH	1		Self tapping screw holes,RHD
2	DBC 10362	Microprocessor mounting plate -RH	1		Self tapping screw holes,LHD
	AB 610041 J	Self tapping screw	2		
	SH 106121 J	Setscrew-M6 x 12mm	2		
	WA 106041 J	Plain washer-0.25" i/d	2		
	AGU 2221 J	Blanking plug	2		
	DAC 40273	Edge protection strip-241mm	NLA		Use DAC402716
	DAC 402716	Edge protection strip	A/R		

VS5169

CHANGE POINTS

(1) From (V) 594576 To (V) 648923
(2) From (V) 648924
(3) To (V) 661742

CONTROL UNIT-4.0 LITRE-AUTOMATIC

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5704	Petrol injection/ignition control module	NLA		Use DBC6554
					Use with EBC3541
1	DBC 6554	Petrol injection/ignition control module	NLA	(1)	Use DBC10784
1	DBC 6834	Petrol injection/ignition control module	NLA	(2)	Use DBC10784
1	DBC 9624	Petrol injection/ignition control module	1	(3)	Middle East;except catalyst
1	DBC 10784	Petrol injection/ignition control module	1	(4)	
1	DBC 6552	Petrol injection/ignition control module	1	(1)	USA
1	DBC 6832	Petrol injection/ignition control module	1	(2)	
1	DBC 10782	Petrol injection/ignition control module	1	(3)	
1	DBC 6555	Petrol injection/ignition control module	1	(1)	Catalyst;except Taiwan and USA
1	DBC 6835	Petrol injection/ignition control module	1	(5)	and Europe and Middle East
1	DBC 6556	Petrol injection/ignition control module	1	(1)	Catalyst;Australia
1	DBC 6836	Petrol injection/ignition control module	1	(6)	
1	DBC 10786	Petrol injection/ignition control module	1	(8)	
1	DBC 10785	Petrol injection/ignition control module	1	(9)	Emission C;catalyst;Australia
1	DBC 10786	Petrol injection/ignition control module	1	(7)	Korea
1	DBC 10785	Petrol injection/ignition control module	1	(7)	Catalyst;emission
					C;Taiwan;Europe;Middle East
1	DBC 6550	Petrol injection/ignition control module	1	(1)	Emission B;except catalyst
1	DBC 6830	Petrol injection/ignition control module	1	(2)	
1	DBC 10780	Petrol injection/ignition control module	1	(3)	

CHANGE POINTS:


(1) To (G) 42730
(2) From (G) 42731 To (V) 629285
(3) From (V) 629286
(4) From (V) 655580
(5) From (G) 42731
(6) From (G) 42731 To (V) 657854
(7) From (V) 657855
(8) From (V) 657855 To (V) 663755
(9) From (V) 663756

CONTROL UNIT-4.0 LITRE-MANUAL

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 6551	Petrol injection/ignition control module	1		4.0 Litre,manual,except catalyst
1	DBC 9621	Petrol injection/ignition control module	1		4.0 Litre,manual,except catalyst
1	DBC 5703	Petrol injection/ignition control module	1		4.0 Litre,catalyst,Austria,Belgium,Canada,France,Germany,Japan,Korea,Luxembourg,Netherlands,Norway,Sweden,Switzerland
1	DBC 6553	Petrol injection/ignition control module	1		4.0 Litre,catalyst,Austria,Belgium,Canada,France,Germany,Japan,Korea,Luxembourg,Netherlands,Norway,Sweden,Switzerland
1	DBC 9623	Petrol injection/ignition control module	1		4.0 Litre,catalyst,Austria,Belgium,Canada,France,Germany,Japan,Korea,Luxembourg,Netherlands,Norway,Sweden,Switzerland
2	DBC 5872	Module mounting bracket-LH	1		4.0 Litre,RHD,manual
2	DBC 5873	Module mounting bracket-RH	1		4.0 Litre,LHD,manual
3	DBC 3106 1	Pillar stud-52mm length	1		4.0 Litre,RHD,manual
3	DBC 3106 1	Pillar stud-52mm length	2		4.0 Litre,LHD,manual
3	DBC 5666 1	Pillar stud-58.5mm length	2		4.0 Litre,RHD,manual
3	DBC 5666 1	Pillar stud-58.5mm length	4		4.0 Litre,LHD,manual
3	DBC 5666 2	Pillar stud-41.5mm length	1		4.0 Litre,RHD,manual
	DBC 3914 1	Battery tray pillar nut long	4		4.0 Litre,LHD,manual
	FN 108041 J	Flanged nut M8	4		4.0 Litre,RHD,manual
	FS 108121 J	Flange screw	1		4.0 Litre,RHD,manual
	DAC 40273	Edge protection strip-241mm	NLA		Use DAC402716

GEARBOX ELECTRONIC CONTROL MODULE


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3682	Gearbox decoder module	NLA	(1)	Use DBC5082
1	DBC 5082	Gearbox decoder module	NLA	(1)	Use DBC10060
1	DBC 10060	Gearbox decoder module	1	(2)	
2	DBC 5080	Gearbox control module	NLA	(3)	Use DBC6369
2	DBC 6369	Gearbox control module	NLA	(3)	Use DBC10110
2	DBC 10110	Gearbox control module	NLA	(4)	Use LMA2400AA
2	LMA 2400AA	Transmission control module	1	(4)	4.0 Litre,automatic
3	WE 702101 J	Shakeproof washer	3		
4	AB 610041 J	Self tapping screw	3		
	NY 104041 J	Nut	2		Decoder module fixings
	SE 104161 J	Setscrew	2		Decoder module fixings
	WA 104001 J	Plain washer	2		Decoder module fixings

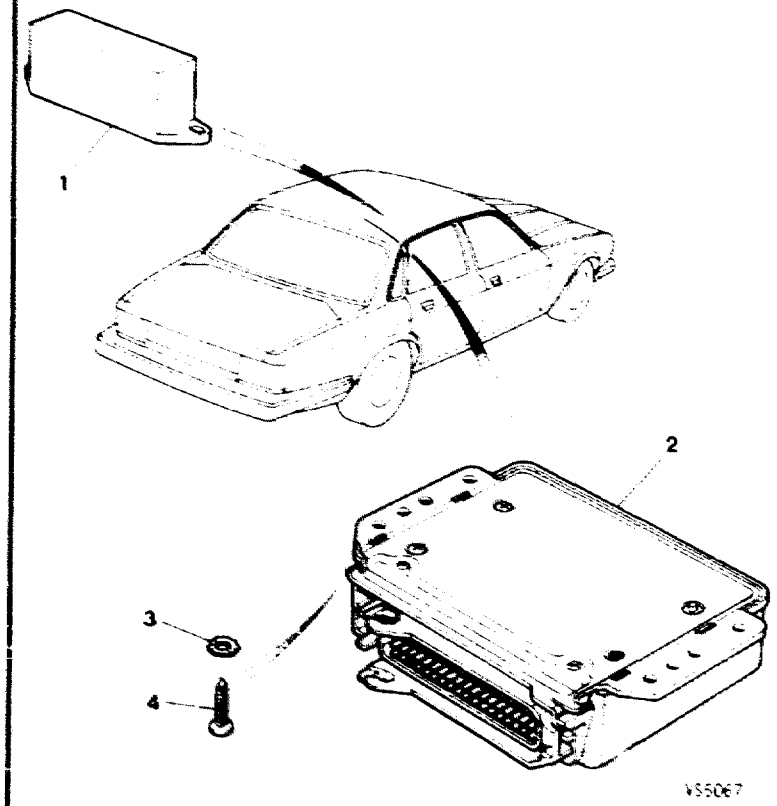

CHANGE POINTS


(1) To (V) 645802
(2) From (V) 645803
(3) To (V) 614440
(4) From (V) 614441

DISTRIBUTOR-3.2/3.6/4.0 LITRE

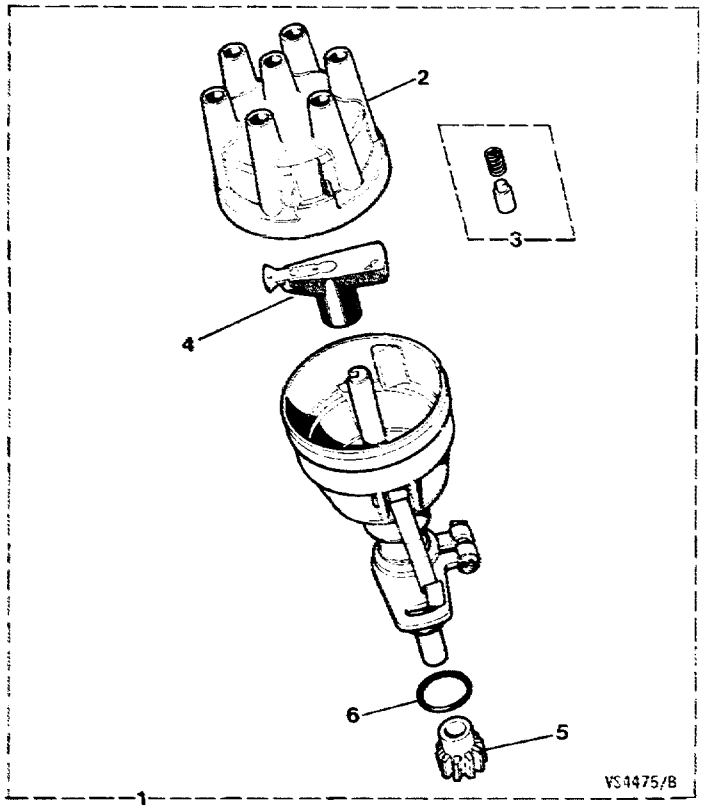

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2690	DISTRIBUTOR-ASSEMBLY	1		3.2 Litre
,	DBC 2690	DISTRIBUTOR-ASSEMBLY	1		3.6 Litre (XJ40)
1	DBC 2690	DISTRIBUTOR-ASSEMBLY	1		4.0 Litre
2	JLM 150	• Distributor cap	1		
3	608094 J	• Brush and spring-assembly	1		
4	JLM 381	• Distributor rotor arm	1		
5	EAC 4674	• Driving gear	1		
6	513682 J	• Oil seal O-ring	1		
	FS 106201 J	• Flange head screw	1		

IGNITION COIL AND MODULE

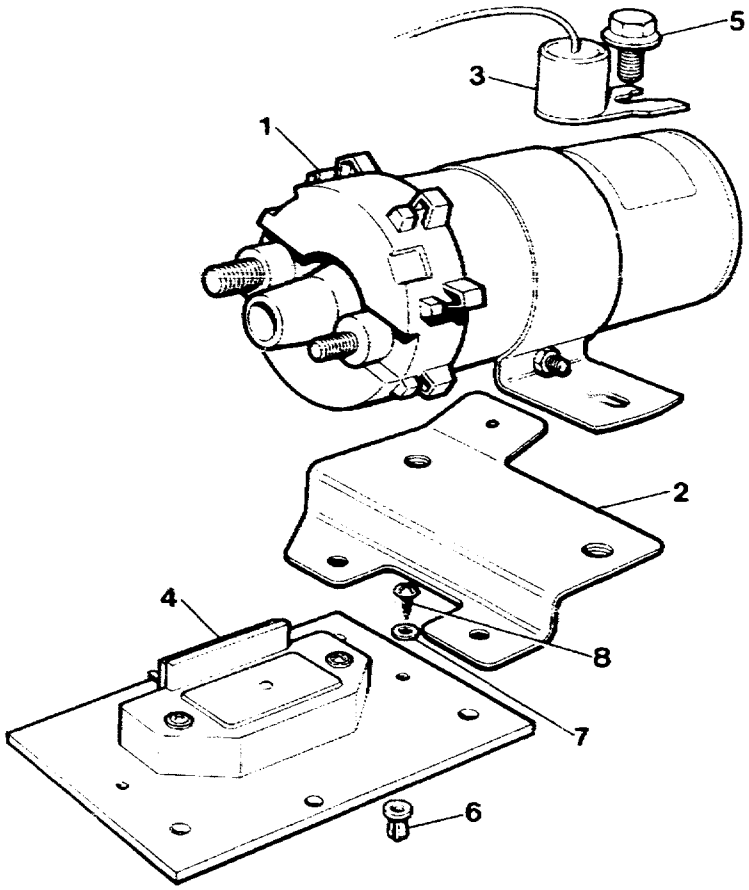


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DAC 8520	Ignition coil	1		2.9 Litre
1	DBC 1140	Ignition coil	1		3.2 Litre
					3.6 Litre (XJ40)
					4.0 Litre
2	DBC 1859	Coil mounting bracket	1	(1)	
2	DBC 5346	Coil mounting bracket	1	(2)	
3	DBC 2000	Ignition coil suppressor	1		
4	DBC 2642	Ignition amplifier module-assembly	NLA	(3, 4)	Use DBC5919.
4	DBC 5919	Ignition amplifier module	NLA	(5, 6)	Use DAC10923.
4	DAC 10923	Ignition amplifier module-assembly	1		
5	FS 106141 J	Flanged head screw	2		
6	C 31973 14	Plastic nut	NLA		
7	WA 105001 J	Plain washer-M5	3		
8	JLM 9577	Self tapping screw	3		
	SE 104061 J	Recessed pan head screw-M4	1		Ignition module earth fixing
	WE 104001 J	Shakeproof washer-M4	1		

VS4603 CHANGE POINTS:

(1) To (V) 591101
(2) From (V) 591102
(3) To (V) 594575 3.6 Litre (XJ40)
(4) To (V) 629285 4.0 Litre
(5) From (V) 629286 3.2 Litre
(6) From (V) 629286 4.0 Litre


SPARK PLUG AND LEADS

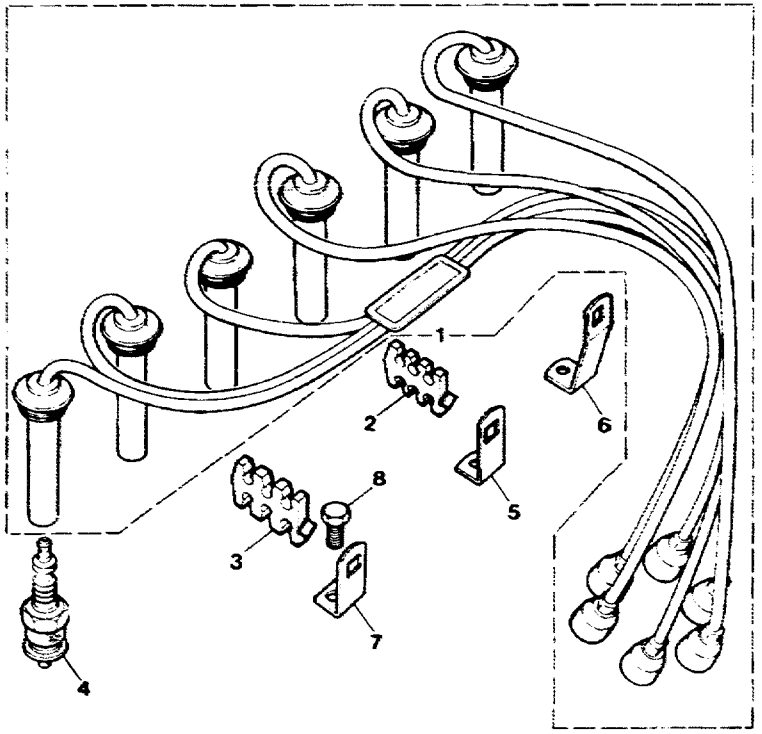

VS4602

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	3228	Plug lead kit	1		2.9 Litre
1	DBC	6501	PLUG LEAD KIT	NLA		Use DAC7811
						3.6 Litre (XJ40)
						Use DAC7811
						3.2 Litre
						Use DAC7811
						4.0 Litre
	EAC	7277	• Voltage warning label	1		
1	DAC	7811	PLUG LEAD KIT	1		3.2 Litre
						3.6 Litre (XJ40)
						4.0 Litre
	DAC	5583	• Coil cover	1		
	DBC	12514	• Voltage warning label	1		
2	C	33460	Cable clip	5		
3	EAC	5045	Cable clip	5		
4	EAC	8344	Spark plug	6		2.9 Litre
4	EBC	2230	Spark plug	NLA		Use EBC11480.
						3.6 Litre (XJ40)
						Use EBC11480.
						3.2 Litre
						Use EBC11480.
						4.0 Litre
4	EBC	11480	Spark plug	6		3.2 Litre
4	EBC	11480	Spark plug	6		3.6 Litre (XJ40)
4	EBC	11480	Spark plug	6		4.0 Litre
5	EAC	6612	Clip bracket	1		2.9 Litre
6	EAC	6606	Clip bracket	4		2.9 Litre
7	EAC	5046	Clip bracket	3		3.6 Litre (XJ40)
8	FS	106101 J	Setscrew	3		3.6 Litre (XJ40)

AIR INJECTION PUMP-3.6/4.0 LITRE

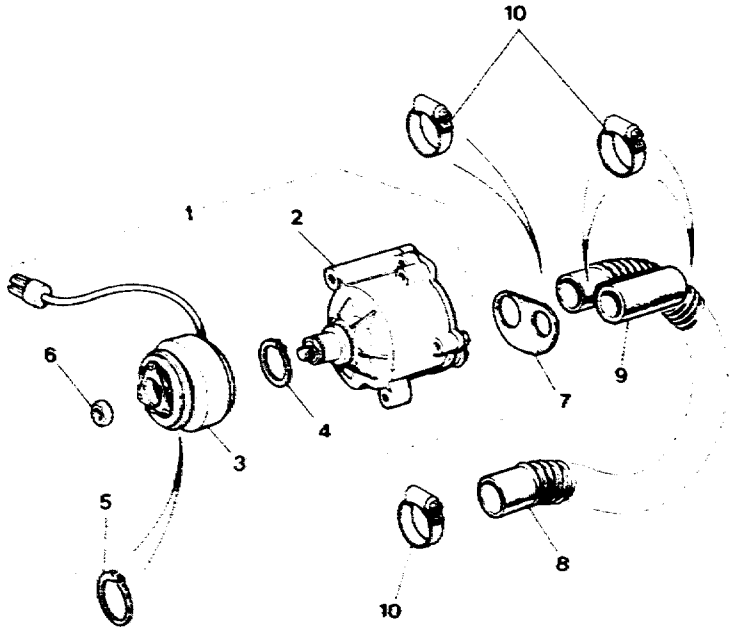


VS4588-A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 8809	AIR PUMP AND CLUTCH-ASSEMBLY	NLA	(2, 1)	Air injection
1	EBC 4024	AIR PUMP AND CLUTCH-ASSEMBLY	NLA	(3)	Use EAC8810 qty 1 with EBC3894 qty 1 with AGU1329J qty 1 with EAC8950 qty 1 with EAC8951 qty 1
2	EAC 8810	• Air pump-assembly	1		
3	EAC 8811	• Clutch	1		Part of EAC8809
4	EAC 8951	• Outer circlip	1		
5	EAC 8950	• Circlip-inner	1		
6	AGU 1329J	• Nut	1		
3	EBC 3894	• Clutch	1		Part of EBC4024
7	EAC 5192	Vent cover	1		
8	EAC 7417	Hose-pump to aircleaner	NLA		Air injection,3 6 Litre (XJ40),pump to aircleaner
8	EBC 3109	Hose-pump to aircleaner	1		Air injection,4 0 Litre,pump to aircleaner
9	EAC 5911	Hose	1		Air injection,pump to switch valve
10	EAC 32158	Worm drive hose clip	NLA		Use JHC200601
10	JHC 200601	Worm drive hose clip	4		

CHANGE POINTS

(1) To (V) 594575 3 6 Litre (XJ40)
(2) To (V) 629285 4 0 Litre
(3) From (V) 629286 4 0 Litre


AIR PUMP MOUNTING-3.6/4.0 LITRE

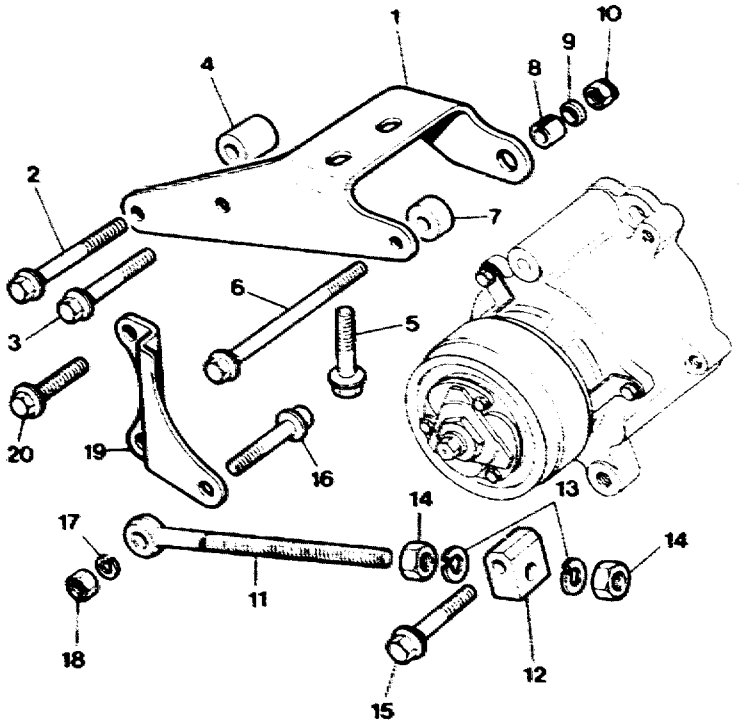

V54428/C


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	5958	Mounting bracket	1		Air injection;3.6 Litre (XJ40)
1	EAC	5958	Mounting bracket	1		Air injection,4.0 Litre
2	FB	108181 J	Bolt	1		
3	FB	108111 J	Bolt	1		
4	EAC	7237	Distance piece	2		
5	FS	108201 J	Washer faced setscrew-M8 x 20mm	1		
6	BH	108231 J	Pivot bolt	1		
7	EAC	5438	Distance piece	1		
8	EAC	4897	Distance piece	1		
9	EAC	4898	Clamp washer	1		
10	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B
10	JFY	10804B	Locking nut	1		
11	EAC	7508	Adjustment bolt	1		
12	EAC	5961	Adjustment sleeve	1		
13	WM	600061 J	Spring washer	2		
14	JLM	9685	Hexagonal nut-0.375" unf	2		
15	FB	108081 J	Bolt	1		
16	SH	606091 J	Setscrew	1		
17	WM	600061 J	Spring washer	1		
18	JLM	9685	Hexagonal nut-0.375" unf	1		
19	EAC	7236	Air pump adjustment bracket	1		
20	FS	108301 J	Setscrew	2		

AIR INJECTION PIPES-4.0 LITRE

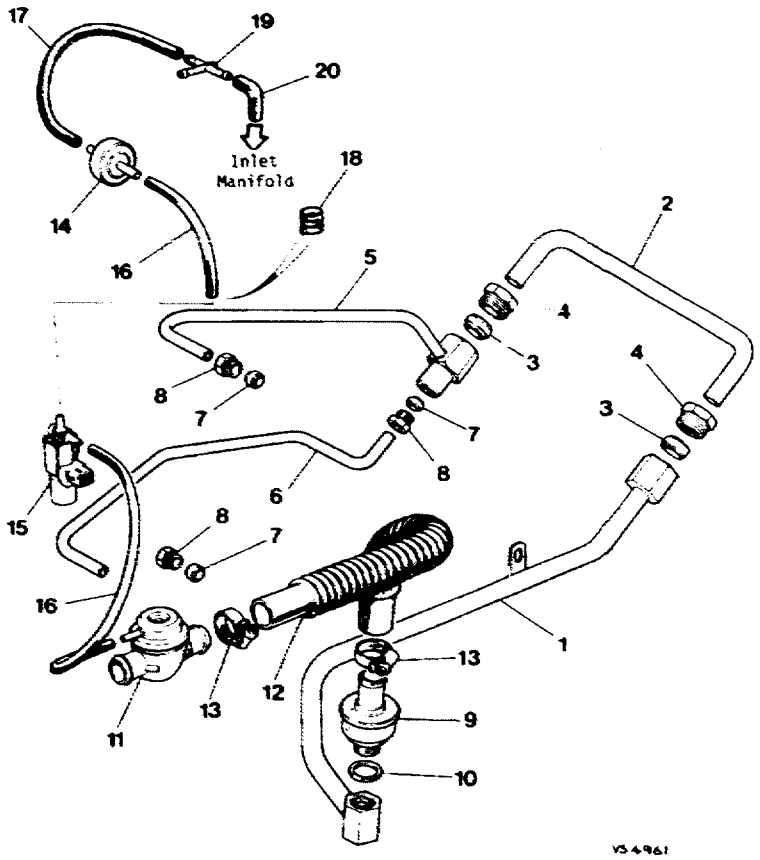

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 6191	Air delivery pipe-primary	1		Air injection;4.0 Litre;USA
2	EAC 5944	Air delivery pipe-secondary	1		
3	EAC 5939	Sleeve	2		
4	EAC 5940	Nut	2		
5	EAC 5943	Air tube	1		
6	EAC 5945	Air tube	1		
7	EAC 4929	Sleeve-10mm	NLA		Use AGU2527J
	AGU 2527J	Olive	3		Air injection;4.0 Litre;USA
8	EAC 4927	Nut-pipe to sump adaptor	3		
9	EAC 5042	Check valve	1		
10	C 45759 3	Sealing washer	1		
11	EAC 5040	Air switching valve	1		
12	EAC 5896	Air hose	1		
13	EAC 3215 8	Worm drive hose clip	NLA		Use JHC200601
13	JHC 200601	Worm drive hose clip	2		Air injection;4.0 Litre;USA
14	EAC 2206	Delay valve	1		
15	EAC 7905	Solenoid valve	1		
16	EAC 8021 18	Vapour hose-0.125" bore x 65"	A/R		
17	EAC 8022 30	Breather hose-63"	A/R		
18	AGU 2536J	Hose band	1		
19	C 15644	T-piece	1		
20	CAC 8050	Elbow	NLA		Use CBC8859
20	CBC 8859	Elbow	1		Air injection;4.0 Litre;USA

INERTIA SWITCH AND MOUNTING BRACKETS

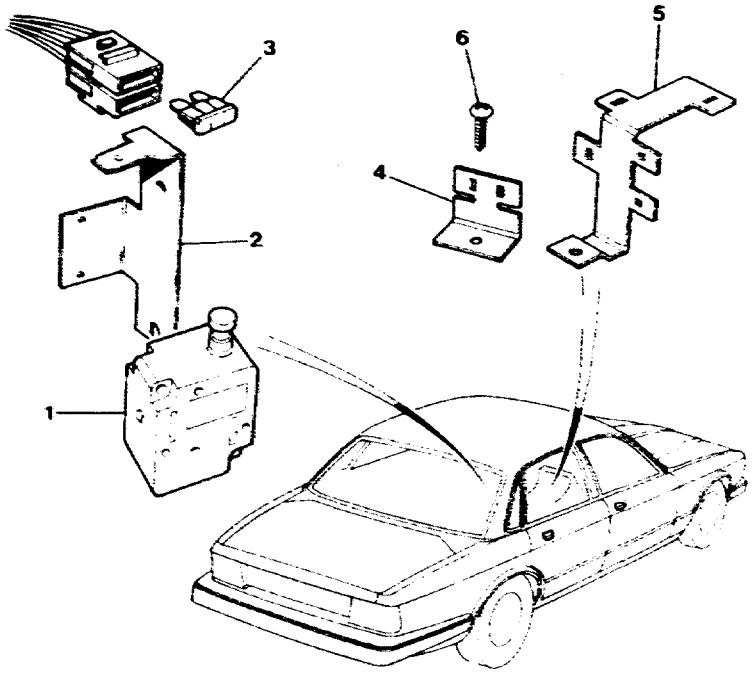

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2022	Inertia switch	1		
2	DAC 1762	Inertia switch mounting bracket	NLA	(1)	Use DBC4971
2	DBC 4971	Inertia switch mounting bracket	1	(2)	
2	DBC 6910	Inertia switch mounting bracket	1	(3)	RHD
2	DBC 6911	Inertia switch mounting bracket	1	(3)	LHD
	GT 105161 J	Pan head screw	4		
	WA 105001 J	Plain washer-M5	4		
	AB 604021 J	Self tapping screw-no.4 x 0.25"	2		
3	DGC 2499	Fuse-30 amp-light green	NLA		Use LST8731AA
3	LST 8731AA	Fuse-30 amp	2		
4	DBC 6902	Seat heater/gearbox switch bracket	1		Manual
5	DBC 6903	Seat heater/gearbox switch bracket	1		Automatic


CHANGE POINTS:

(1) To (V) 583946

(2) From (V) 583947 To (V) 629285

(3) From (V) 629286

INERTIA SWITCH AND RELAY FUSEBOX

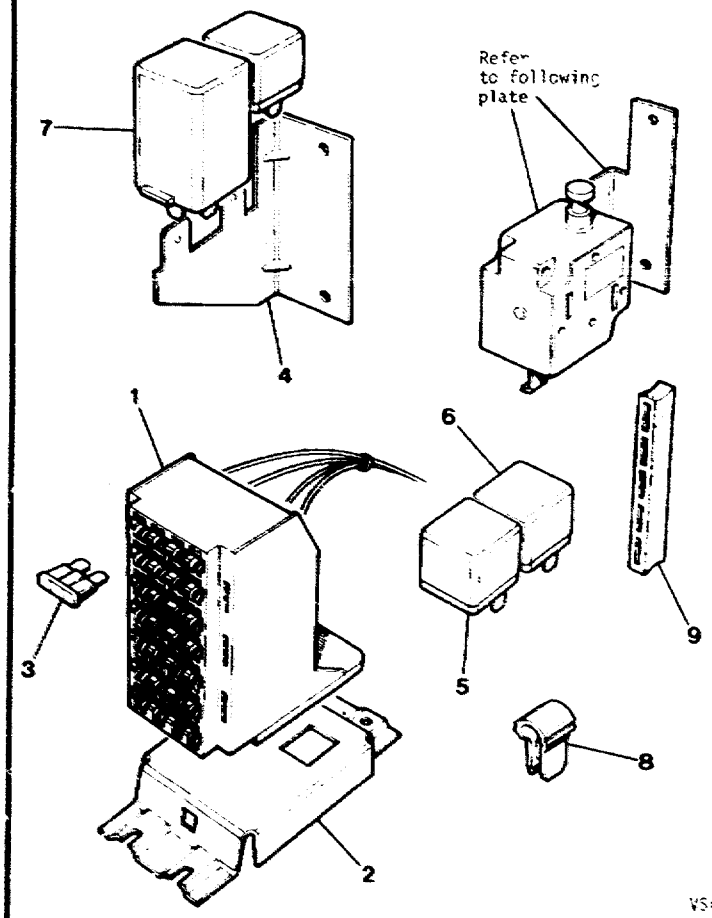


VS4054/B

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3979	Fusebox module-RH-14 fuse	NLA		
1	DBC 3398	Fusebox module-RH-17 fuse	NLA		
1	DBC 5891	Fusebox module-RH-24 fuse	1	(1)	
1	DBC 11299	Fusebox module-RH-24 fuse	1	(2)	
1	DBC 2597	Fusebox module-LH	NLA	(3)	Use DBC3983
1	DBC 3983	Fusebox module-LH-14 fuse	1		
1	DBC 3399	Fusebox module-LH-17 fuse	1		
1	DBC 5892	Fusebox module-LH-24 fuse	1	(1)	
1	DBC 10166	Fusebox module-LH-24 fuse	1	(2)	
2	DAC 8447	Fusebox mounting bracket	2	(4)	
2	DBC 4824	Fusebox mounting bracket	2	(5)	
3	DGC 2491	Fuse-3 amp-violet	NLA		Use LST8724AA
3	LST 8724AA	Fuse-3 amp-violet	A/R		
3	DGC 2493	Fuse-5 amp -tan	NLA		Use LST8725AA
3	LST 8725AA	Fuse-5 amp -tan	A/R		
3	DGC 2494	Fuse-7.5 amp -brown	A/R		
3	DGC 2495	Fuse-10 amp -red	NLA		Use LST8727AA
3	LST 8727AA	Fuse-10 amp -red	A/R		
3	DGC 2496	Fuse-15 amp -light blue	NLA		Use LST8728AA
3	LST 8728AA	Fuse-15 amp -light blue	A/R		
3	DGC 2497	Fuse-20 amp -yellow	NLA		Use LST8729AA
3	LST 8729AA	Fuse-20 amp -yellow	A/R		
3	ADU 1879J	Fuse-25 amp	NLA		Use DGC2498
3	DGC 2498	Fuse-25 amp	NLA		Use LST8730AA
3	LST 8730AA	Fuse-25 amp -white	A/R		
3	DGC 2499	Fuse-30 amp-light green	NLA		Use LST8731AA
3	LST 8731AA	Fuse-30 amp	A/R		
	BBC 3242	Lokut nut-RH/LH	3		
	BD 48954	Lokut nut	2	(5)	
	DA 610061J	Screw	8		

CHANGE POINTS

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 524374
(4) To (V) 556850
(5) From (V) 556851

INERTIA SWITCH AND RELAY FUSEBOX

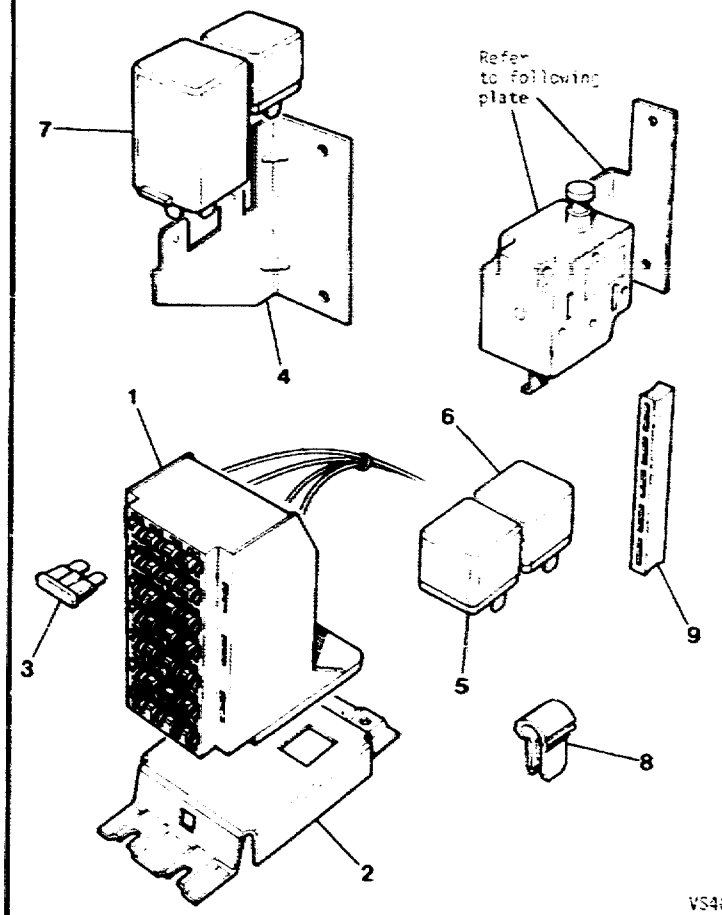

VS4654/B


Illus	Part Number		Description	Quantity	Change Point	Remarks
4	DBC	2274	Relay mounting bracket	NLA		Use DBC4969 RHD
4	DBC	4969	Relay mounting bracket	1		RHD
4	DBC	2275	Relay mounting bracket	NLA		Use DBC4970 LHD
4	DBC	4970	Relay mounting bracket	1		LHD
5	DBC	2484	Relay-black	1		Radio illumination
5	DBC	2484	Relay-black	1		Speed control,automatic
5	DBC	2484	Relay-black	1		Door lock heater
6	DBC	2486	Relay-yellow	1		Lower A-post,ride level system,power brake
6	DBC	2484	Relay-black	2		Powered seat,except Canada and USA
	DBC	3286	Shorting link-power seat	NLA		Use DBC3946
	DBC	3946	Shorting link-trunk	2		
7	DBC	3775	Speed control continuity unit	1		2.9 Litre
7	DBC	3775	Speed control continuity unit	1		3.2 Litre
7	DBC	3775	Speed control continuity unit	1		3.6 Litre (XJ40)
	DBC	3980	Fuse label-RH side	1	(1)	RH side
	DBC	4326	Fuse label	NLA	(2)	RH side
	DBC	5712	Fuse label	1	(3)	RH side
	DBC	11300	Fuse label	1	(4)	RH side
	DBC	3758	Fuse label	NLA	(1)	LH side
	DBC	4327	Fuse label	NLA	(2)	LH side
	DBC	10167	Fuse label	NLA	(4)	LH side
8	DBC	3085	Fuse extractor	1		
9	DBC	10355	Spare fuse holder	1		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286

HEATED OXYGEN SENSOR

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	AGU 1870	Heated oxygen sensor	NLA	(1, 2)	Use DAC6907
1	DBC 4138	Heated oxygen sensor	NLA	(3, 4)	Use DAC6907
1	DAC 6907	Heated oxygen sensor	1	(5)	
	DAC 4743	Cable clip	3	(6)	
	ADU 9028	Tie strap-7 75" long	1	(6)	
	C 39377	P-clip	1	(6)	
	JLM 9688	Nut-M8	1	(6)	
	WD 108051 J	Washer	1	(6)	
	C 45099	Tie strap-4"	3	(5)	
	C 20172	Edge clip	1		
	C 331394	Hose sleeve	1		

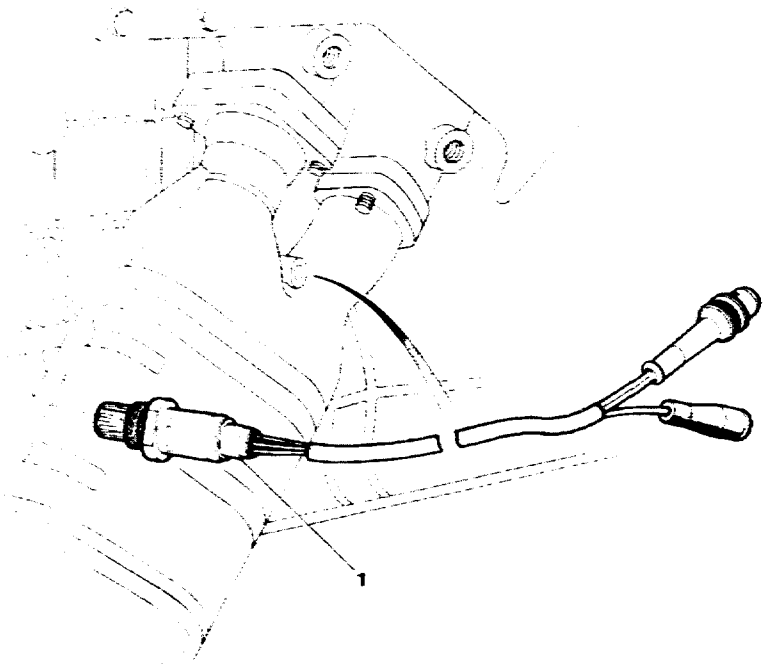


WS4611

CHANGE POINTS

(1) To (V) 542207 2.9 Litre
(2) To (V) 541364 3.6 Litre (XJ40)
(3) From (V) 542208 To (V) 594575 2.9 Litre
(4) From (V) 541365 To (V) 594575 3.6 Litre (XJ40)
(5) From (V) 594576
(6) To (V) 594575

EXHAUST TEMPERATURE WARNING

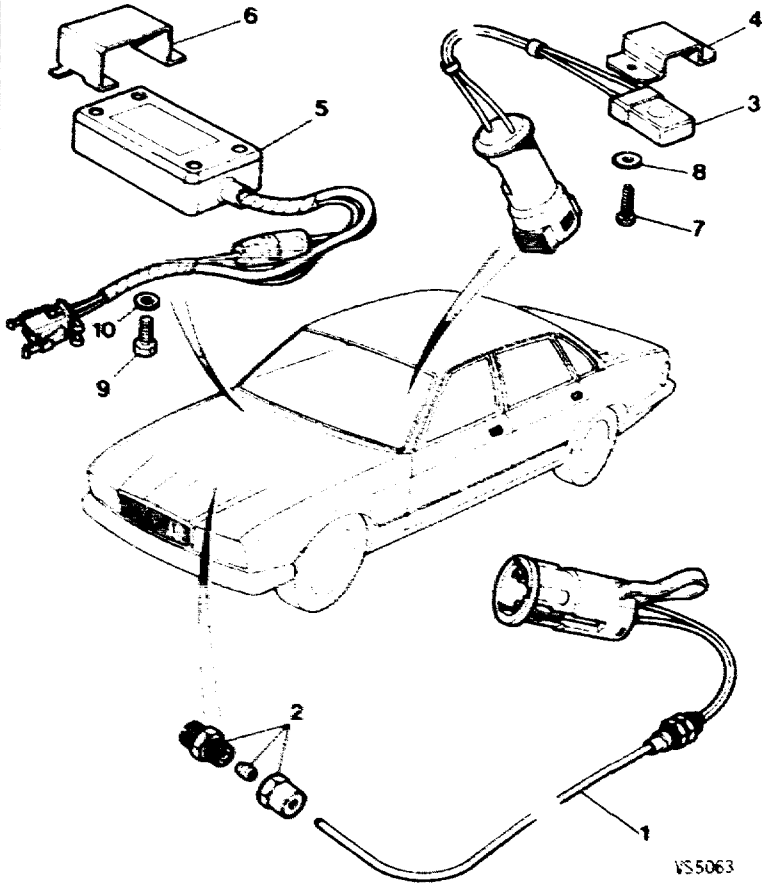


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	1603	Thermocouple-assembly	1	(1)	
1	DBC	5563	Thermocouple-assembly	1	(2)	
2	DBC	1606	Thermocouple compression gland	1		
3	DBC	2081	Thermal sensor	1	(3)	Rear seat pan
4	DBC	1616	Thermal sensor mounting bracket	NLA	(3)	Use DBC4313 Rear seat pan
4	DBC	4313	Thermal sensor mounting bracket	NLA	(4)	
5	DBC	2879	Catalyst switching module	1		
6	DBC	1605	Mounting bracket-RH	NLA	(5)	Facia support bracket
6	DBC	6026	Mounting bracket-RH	1	(6)	
6	DBC	1609	Mounting bracket-LH	NLA	(5)	
6	DBC	6027	Mounting bracket-LH	1	(6)	
	ADU	9028	Tie strap-7 75" long	4		
7	AR	610021J	Screw	NLA		
8	WJ	105001J	Plain washer	2		
9	SH	104121J	Screw	1		
10	WA	104001J	Plain washer	1		

CHANGE POINTS

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 556850
(4) From (V) 556851 To (V) 632815
(5) To (V) 657854
(6) From (V) 657855

RELAYS AND CONTROL UNITS

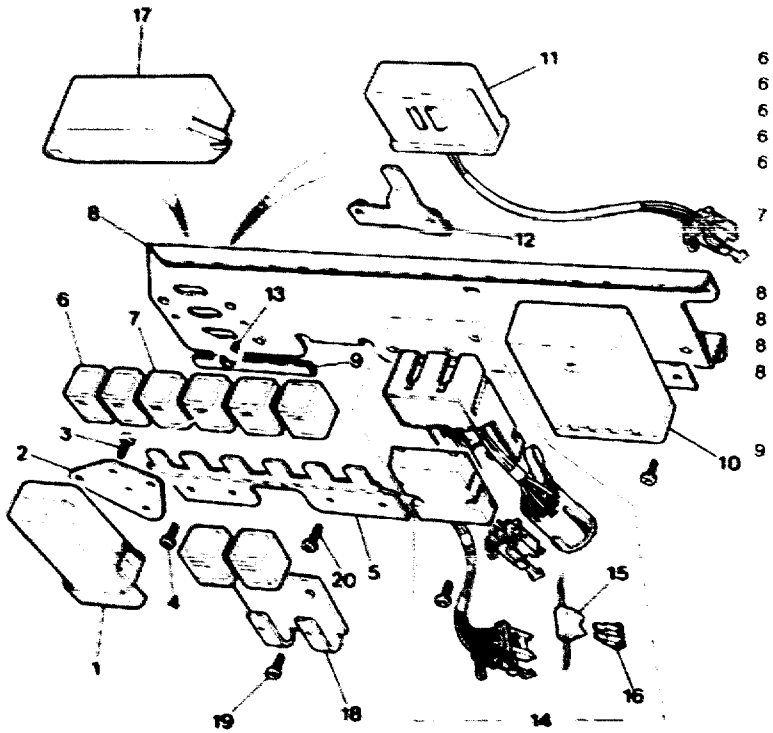


MC4628A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	1554	Door lock control module	1		
2	DAC	8731	Control unit mounting plate	1		
3	AFU	2538 J	Screw	2		
4	SE	105121 J	Screw-M5 x 12mm	13		
5	DBC	1139	Relay mounting bracket	NLA		
20	SE	105161 J	Screw-M5 x 16mm	1		
	ADU	9028	Tie strap-7 75" long	1		
6	DBC	2484	Relay-black	1		Ignition coil
6	DBC	2484	Relay-black	1		Radio
6	DBC	2484	Relay-black	1		Side lamp
6	DBC	2484	Relay-black	1		Petrol injection
6	DBC	2484	Relay-black	1		Fuel pump
7	DBC	2486	Relay-yellow	1		Starter motor
	WA	105001 J	Plain washer-M5	4		
8	DBC	1134	Glovebox mounting plate	NLA	(1)	Use DBC5720
8	DBC	5720	Glovebox mounting plate	1	(2)	RHD
8	DBC	1135	Glovebox mounting plate	NLA	(1)	Use DBC5721
8	DBC	5721	Glovebox mounting plate	1	(2)	LHD
	DAC	8756	Bracket	NLA		
9	BD	44643 1	Edge strip-35 75"	A/R		
	AB	610051 J	Flanged head screw	4		Plate to body
	WA	105001 J	Plain washer-M5	4		Plate to body
	AB	608051 J	Self tapping screw	NLA		Use AB608051J
	AB	608051 J	Self tapping screw	NLA		Use DA608051J
	DA	608051 J	Self tapping screw-no 8	2		
	WA	104001 J	Plain washer	2		Bracket to plate
	AGU	1411	Plastic nut	2		Bracket to plate

CHANGE POINTS
(1) To (V) 594575
(2) From (V) 594576

RELAYS AND CONTROL UNITS

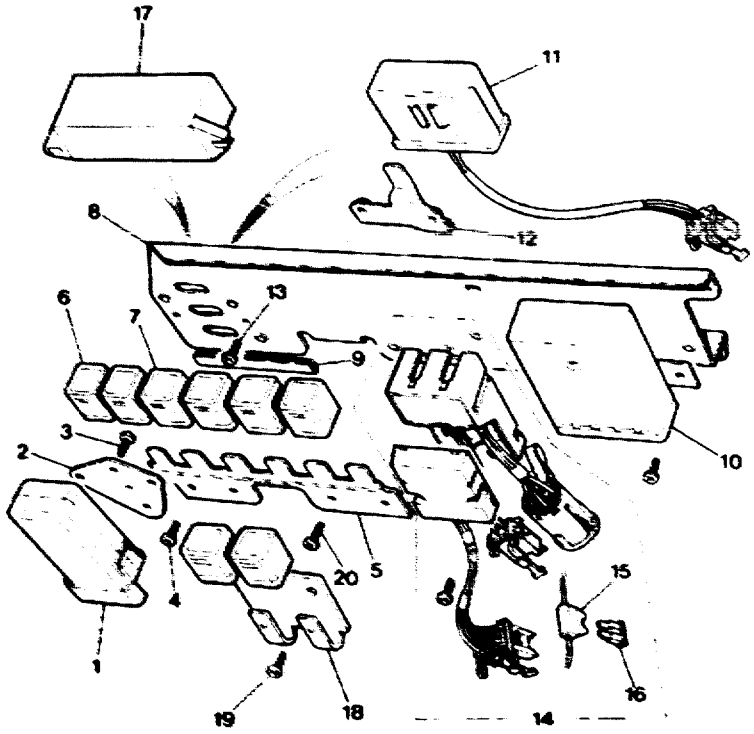


MC46CRA

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	DBC 1169	Speed control module	1		
11	DBC 3057	Interface unit-trip computer	1		2.9 Litre
12	DAC 8839 1	Interface unit mounting bracket	NLA	(1)	Use DBC41011
12	DBC 4101 1	Interface unit mounting bracket	1	(2)	2.9 Litre,RHD
12	DAC 8839 2	Interface unit mounting bracket	NLA	(1)	Use DBC41012
12	DBC 4101 2	Interface unit mounting bracket	NLA	(2)	2.9 Litre,LHD
13	SE 105061 J	Setscrew	2		
	C 42799 17	Hose-1500mm	1		
14	DBC 3244	Wiper/audible warning module	1	(3)	Except Saudi Arabia
14	DBC 5125	Wiper/audible warning module	NLA	(4)	Use DBC10838
14	DBC 10838	Wiper/audible warning module	1	(5)	Except Middle East
14	DBC 3245	Wiper/audible warning module	NLA	(3)	Use DBC5124
14	DBC 5124	Wiper/audible warning module	NLA	(4)	Use DBC10837
14	DBC 10837	Wiper/audible warning module	1	(5)	Middle East
	DBC 3242	In line fuse	NLA	(3)	Use DBC5123
15	JLM 10468	Fuse holder	1	(6)	
16	DGC 2495	Fuse-10 amp -red	NLA	(6)	Use LST8727AA
16	LST 8727AA	Fuse-10 amp -red	1		

CHANGE POINTS

(1) To (V) 542207
(2) From (V) 542208
(3) To (V) 594575
(4) From (V) 594576 To (V) 655499
(5) From (V) 655500
(6) From (V) 594576

RELAYS AND CONTROL UNITS

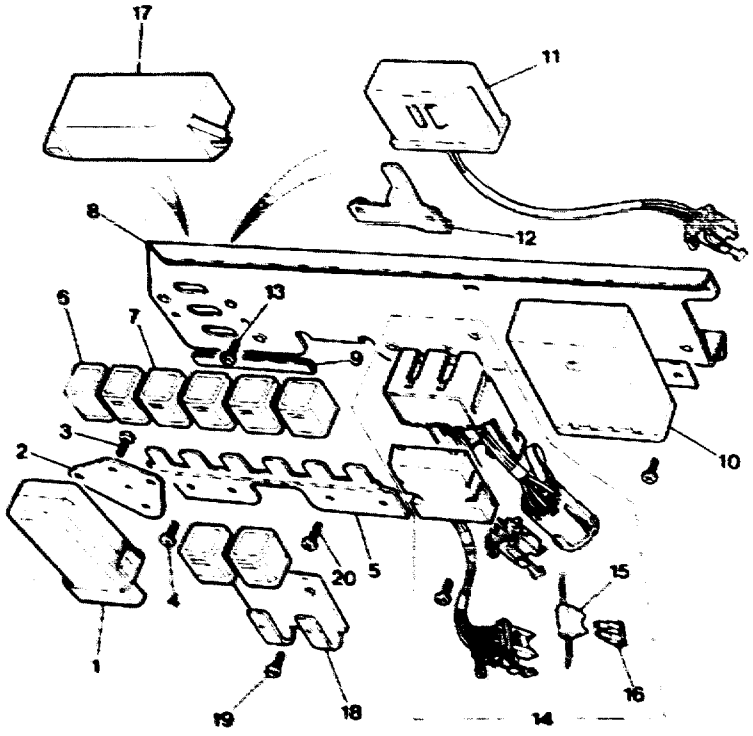


MC4623A

Illus	Part Number		Description	Quantity	Change Point	Remarks
17	DBC	3682	Gearbox decoder module	NLA	(1)	Use DBC5082
17	DBC	5082	Gearbox decoder module	NLA		Use DBC10060
17	DBC	10060	Gearbox decoder module	1		4.0 Litre,automatic
	BBC	2534	Self adhesive pad	1		
	WA	105001 J	Plain washer-M5	2		
	DBC	2036	Underscuttle casing label	NLA	(2, 3)	RHD
	DBC	4734	Underscuttle casing label	1	(4, 5)	RHD
	DBC	5745	Underscuttle casing label	NLA	(6)	Use DBC5934
	DBC	5934	Underscuttle casing label	1	(6)	RHD
	DBC	6900	Underscuttle casing label	1	(7)	RHD
	DBC	2037	Underscuttle casing label	NLA	(2, 3)	LHD
	DBC	4733	Underscuttle casing label	NLA	(4, 5)	LHD
	DBC	5744	Underscuttle casing label	NLA	(6)	Use DBC5935
	DBC	5935	Underscuttle casing label	NLA	(6)	LHD
	DBC	6901	Underscuttle casing label	1	(7)	LHD
18	DBC	3366	Relay mounting bracket	NLA		
19	SE	105161 J	Screw-M5 x 16mm	1		Relay mounting bracket to plate
	NY	105041 J	Nyloc nut-M5	1		Relay mounting bracket to plate
19	SE	105121 J	Screw-M5 x 12mm	1		Relay mounting bracket to plate

CHANGE POINTS

(1) From (V) 594576
(2) To (V) 542207 2.9 Litre
(3) To (V) 541364 3.6 Litre (XJ40)
(4) From (V) 542208 To (V) 594575 2.9 Litre
(5) From (V) 541365 To (V) 594575 3.6 Litre (XJ40)
(6) From (V) 594576 To (V) 629285
(7) From (V) 629286

ENGINE COMPARTMENT RELAYS

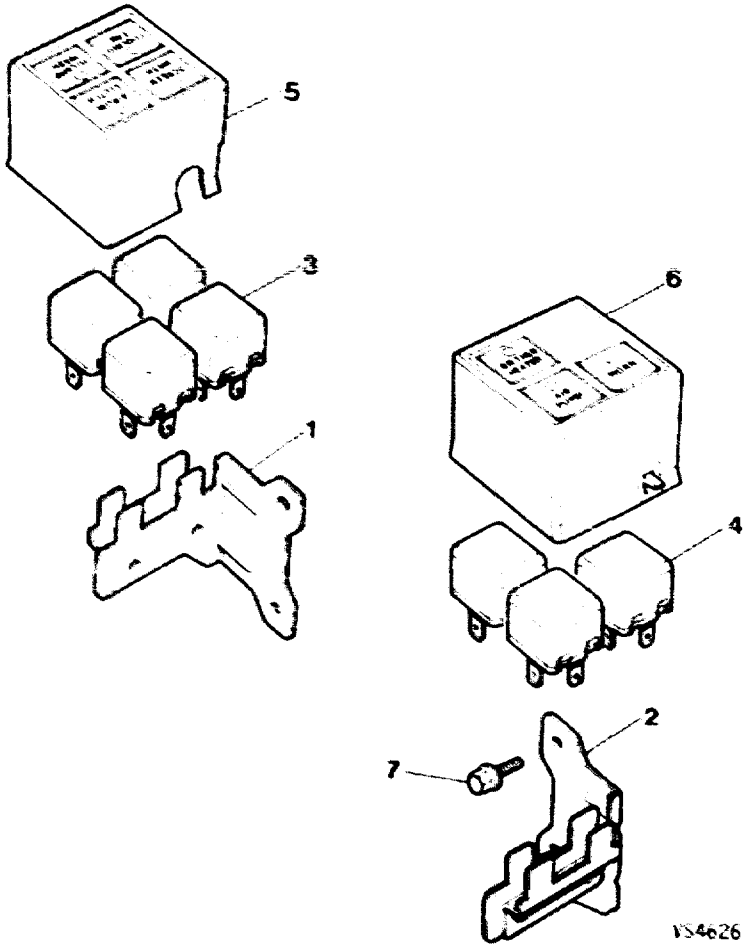


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	1062	Relay mounting bracket-RH	NLA		
2	DBC	1063	Relay mounting bracket-LH	1		
3	DBC	2486	Relay-yellow	1		Cooling fan
3	DBC	2486	Relay-yellow	1		Screenwash
3	DBC	2486	Relay-yellow	1		Headlamp wash/wipe
4	DBC	2484	Relay-black	1		Breather heater
4	DBC	2484	Relay-black	1		Horn
4	DBC	2484	Relay-black	1		Air conditioning ,compressor clutch
4	DBC	2484	Relay-black	1	(1)	Air pump
5	DBC	3289	Relay cover	1		
6	DBC	3164	Relay cover	1		
	WL	105001 J	Spring washer-M5	8		
7	SH	105101 J	Screw	8		

CHANGE POINTS
(1) To (V) 594575


IDLE AIR VALVE-3.2/4.0 LITRE

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5727	IDLE AIR VALVE-SPEED CONTROL	1	.....	3.2 Litre
1	DBC 5727	IDLE AIR VALVE-SPEED CONTROL	1	.....	4.0 Litre
2	JLM 12185	• STEPPER MOTOR KIT	1		
	JLM 11490	• • Gasket	1		
3	EBC 1767	Idle speed valve gasket-valve to manifold	1		
4	FB 106131 J	Bolt -valve to manifold	4		
5	EBC 1481	Idle air valve hose-intake elbow to valve	1		
6	EAC 32158	Worm drive hose clip	NLA	.....	Use JHC200601.
6	JHC 200601	Worm drive hose clip	2		

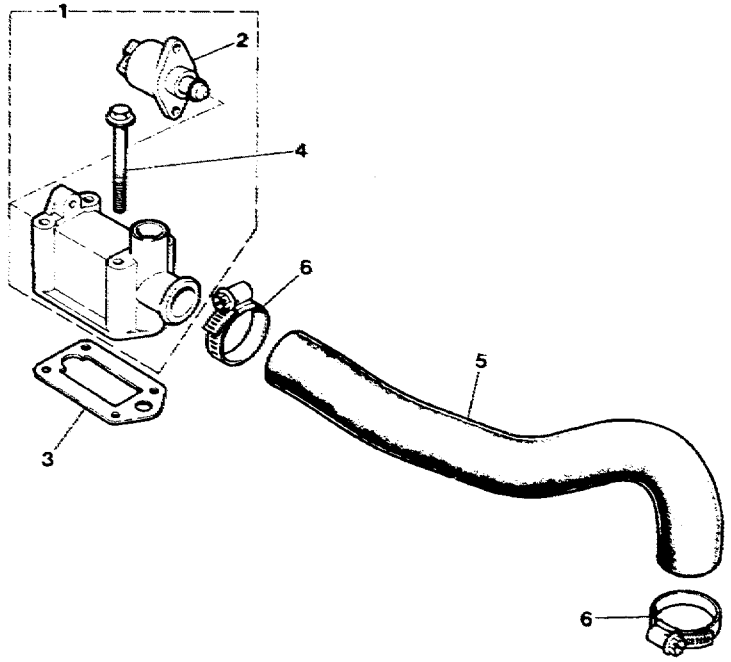

YS4956/A

ENGINE BREATHING-3.2/3.6/4.0 LITRE

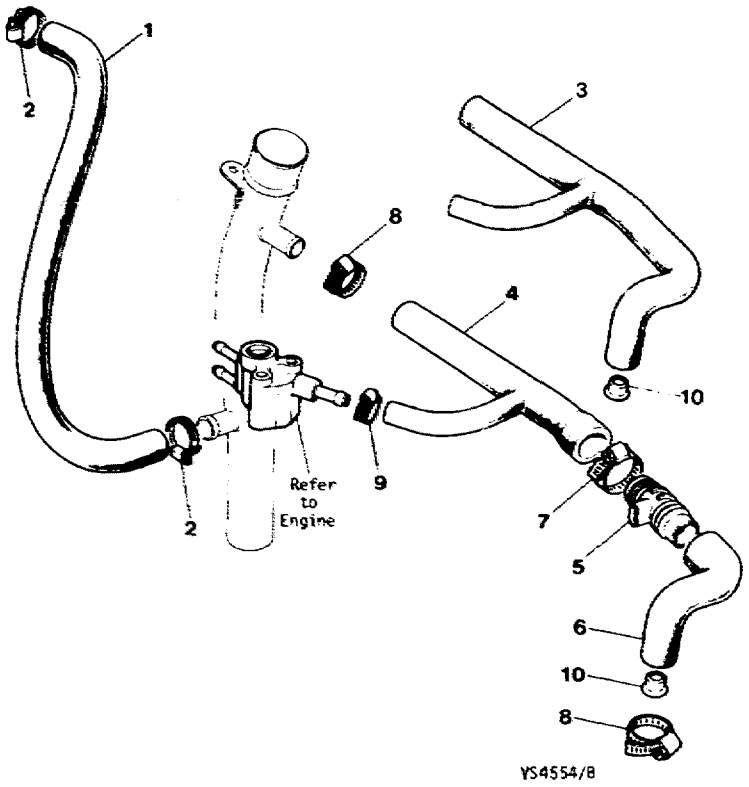


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 1233	Breather hose-filler pipe to cam cover	1		3.6 Litre (XJ40)
1	EBC 1868	Breather hose-filler pipe to cam cover	NLA	(1)	Use EBC4322
					4.0 Litre
1	EBC 4322	Breather hose	1	(2)	4.0 Litre
1	EBC 4322	Breather hose	1		3.2 Litre
2	EAC 32156	Hose clip	NLA		Use JHC200401
2	JHC 200401	Hose clip	2		
3	EAC 7457	Hose-filler pipe to restrictor	1		
4	EAC 7418	Hose-filler pipe to element	1		Austria;Canada;Germany;Japan;S-
5	EAC 7991	Heater element	1		weden;Switzerland;USA;heated
6	EAC 7447	Hose-element to restrictor	1		engine breathing
7	EAC 32157	Hose clip	NLA		Use JHC200501
7	JHC 200501	Hose clip-worm drive	2		Austria;Canada;Germany;Japan;S-
					weden;Switzerland;USA;heated
					engine breathing
10	EAC 7155	Breather restrictor	NLA	(3)	Use EAC7557
					3.6 Litre (XJ40)
10	EAC 7557	Breather restrictor	1	(4)	3.6 Litre (XJ40)
10	EAC 7557	Breather restrictor	1		4.0 Litre
10	EAC 7557	Breather restrictor	1		3.2 Litre
8	EAC 32156	Hose clip	NLA		Use JHC200401
8	JHC 200401	Hose clip	2		
9	EAC 32152	Worm drive hose clip	NLA		Use JHC200101
9	JHC 200101	Worm drive hose clip-steel	1		

CHANGE POINTS.

(1) To (E) 128677
(2) From (E) 128678
(3) To (E) 135612
(4) From (E) 135613


EXHAUST GAS RECIRCULATION VACUUM HOSE-4.0 LITRE

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 7905	Solenoid valve	1		Air injection;4.0 Litre;USA
2	EAC 8022 30	Breather hose-63"	1		
3	AGU 2536 J	Hose band	2		
4	C 15644	T-piece	1		
5	CAC 3050	Elbow	NLA		Use CBC8859.
5	CBC 8859	Elbow	1		Air injection;4.0 Litre;USA
6	DBC 6112	Vacuum valve bracket-assembly	1	(1)	
7	FS 106121 J	Setscrew-M6	1		
8	WA 106041 J	Plain washer-0.25" i/d	1		

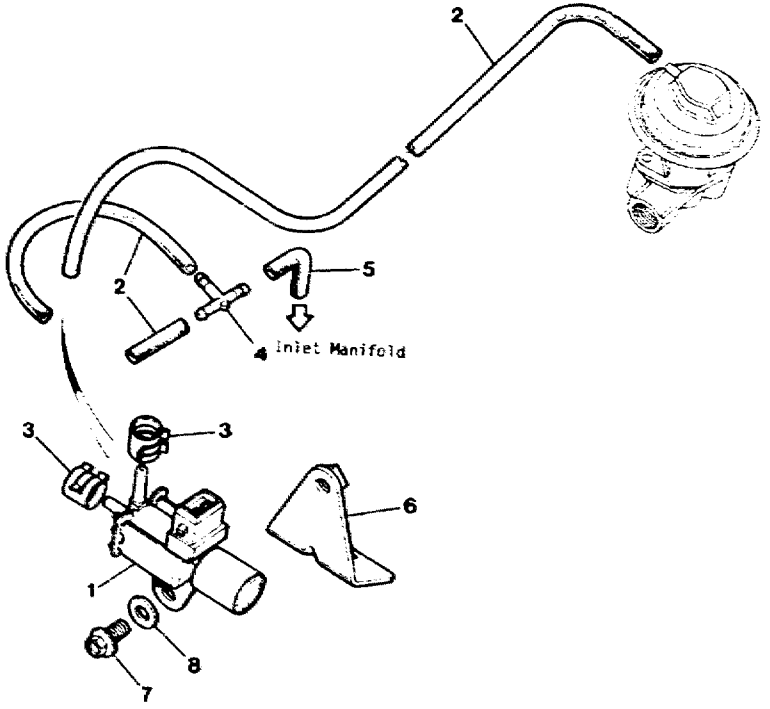

CHANGE POINTS:
(1) From (E) 132601

EXHAUST GAS RECIRCULATION VALVE AND PIPES-4.0 LITRE

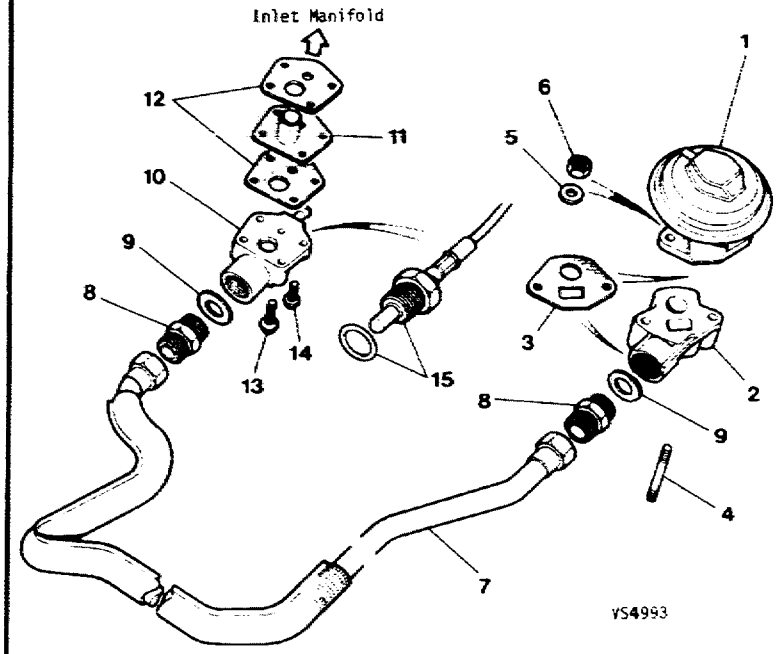


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 2737	Exhaust gas recirculation valve-assembly	1		Air injection;4.0 Litre;USA
2	EBC 3764	Valve adaptor	1		Air injection;4.0 Litre;USA
3	EBC 1436	Exhaust gas recirculation valve gasket	3		
4	TE 108101 J	Stud-valve and adaptor to exhaust manifold	2		
5	WA 108051	Plain washer-0.3125" diameter	2		
6	EAC 5277	Nut	2		
7	EBC 4138	Exhaust gas recirculation pipe-assembly	NLA	(1)	Use EBC4664.
7	EBC 4664	Exhaust gas recirculation pipe-assembly	NLA	(2)	Use EBC9237.
7	EBC 9237	Exhaust gas recirculation pipe-assembly	NLA		Use EBC9959.
7	EBC 9959	Exhaust gas recirculation pipe-assembly	1		Air injection;4.0 Litre;USA
8	EBC 3930	Pipe adaptor	NLA		
9	C 2296 18	Washer	2	(3)	Air injection;4.0 Litre;USA
10	EBC 3445	Stub pipe adaptor	NLA	(3)	Use EBC5140 qty 1 with EBC5185 qty 2 with JLM10500 qty 1
9	EBC 5185	Washer	2	(4)	Air injection;4.0 Litre;USA
10	EBC 5140	Stub pipe adaptor	1	(4)	Air injection;4.0 Litre;USA
	JLM 10500	Hermetite paste -140g tube	NLA	(4)	Air injection;4.0 Litre;USA
11	EBC 3882	Mounting plate	1		
12	EBC 2731	Blanking plate gasket-adaptor to inlet manifold	2		
13	FB 106081 J	Bolt -adaptor to inlet manifold	2		
14	FS 106201 J	Flange head screw	2		
15	DBC 5034	Temperature sensor	1		

CHANGE POINTS

(1) To (E) 117782
(2) From (E) 117783
(3) To (E) 134515
(4) From (E) 134516

PETROL INJECTION HARNESS

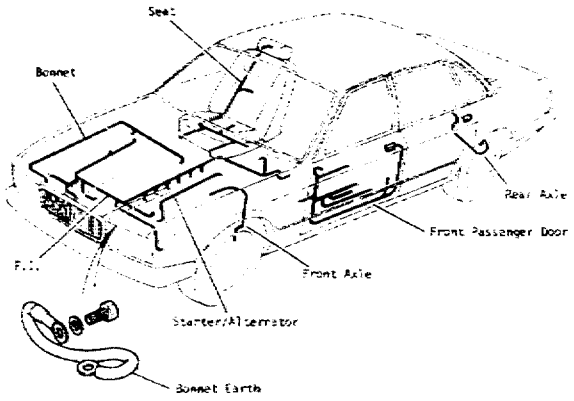

MC4774a


Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2423	Petrol injection harness	NLA	(1)	2.9 Litre;except catalyst
	DBC 3088	Petrol injection harness	NLA	(2)	Use DBC4972.
					2.9 Litre;except catalyst
	DBC 4972	Petrol injection harness	1	(3)	2.9 Litre;except catalyst
	DBC 6176	Petrol injection harness	1	(4)	2.9 Litre;except catalyst
	DBC 2424	Petrol injection harness	NLA	(5)	2.9 Litre;catalyst
	DBC 3089	Petrol injection harness	NLA	(6)	Use DBC4973.
					2.9 Litre;catalyst
	DBC 4973	Petrol injection harness	NLA	(6)	Use DBC5857.
					2.9 Litre;catalyst
	DBC 5857	Petrol injection harness	NLA	(4)	Use DBC6175.
					2.9 Litre;catalyst
	DBC 6175	Petrol injection harness	1	(4)	2.9 Litre;catalyst
	DBC 6884	Petrol injection harness	1	(7)	3.2 Litre;catalyst
	DBC 2499	Petrol injection harness	NLA	(1)	3.6 Litre (XJ40);except catalyst
	DBC 3086	Petrol injection harness	NLA	(2)	Use DBC4785.
					3.6 Litre (XJ40);except catalyst
	DBC 4785	Petrol injection harness	1	(3)	3.6 Litre (XJ40);except catalyst
	DBC 2476	Petrol injection harness	NLA	(5)	3.6 Litre (XJ40);catalyst
	DBC 3087	Petrol injection harness	1	(8)	3.6 Litre (XJ40);catalyst
	DBC 5176	Petrol injection harness	1	(9)	3.6 Litre (XJ40);catalyst
	DBC 5746	Petrol injection harness	NLA	(10)	Use DBC5911
					4.0 Litre;except catalyst
	DBC 5911	Petrol injection harness	1	(11)	4.0 Litre;except catalyst
	DBC 6887	Petrol injection harness	NLA	(7)	4.0 Litre;except catalyst
	DBC 5747	Petrol injection harness	1	(10)	4.0 Litre;catalyst
	DBC 5910	Petrol injection harness	1	(12)	4.0 Litre;catalyst
	DBC 6885	Petrol injection harness	1	(7)	4.0 Litre;catalyst;USA
	DBC 6886	Petrol injection harness	1	(7)	4.0 Litre;catalyst;except USA

CHANGE POINTS:

(1) To (V) 507393
(2) From (V) 507394 To (E) 553356
(3) From (V) 553357 To (V) 594575
(4) From (V) 594576
(5) To (V) 506447
(6) From (V) 506448 To (V) 594575
(7) From (V) 629362
(8) From (V) 506448 To (V) 578249
(9) From (V) 578250 To (V) 594575
(10) From (V) 594576 To (V) 616983
(11) From (V) 616984
(12) From (V) 616984 To (V) 629361

PETROL INJECTION HARNESS

Illus	Part Number	Description	Quantity	Change Point	Remarks
	AGU 1088	Clip	NLA		2.9 Litre
	SH 105121J	Screw	1		2.9 Litre
	WA 105001J	Plain washer-M5	1		2.9 Litre
	WA 105001J	Plain washer-M5	1		3.6 Litre (XJ40)
	WF 105001J	Shakeproof washer	1		3.6 Litre (XJ40)
	NH 105041J	Nyloc nut-M5	NLA		Use NH105061J.
					3.6 Litre (XJ40)
	NH 105061J	Nyloc nut-M5	1		3.6 Litre (XJ40)
	DBC 5293	Blanking plug	1		Austria;Canada;Germany;Japan;S-
					witzerland;USA;except air
					injection
	DBC 1095	Seal	1		

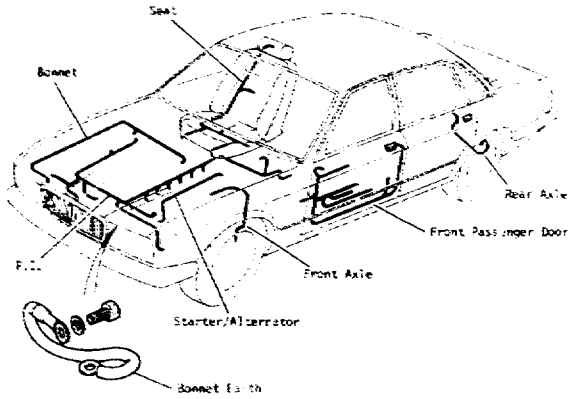

MC4774a

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

AIR DELIVERY SYSTEM COMPONENTS ..... 1. L 02
AIRCLEANERS AND HOSES ..... 1. L 08
ELECTRONIC FUEL DISTRIBUTION ..... 1. L 14
FUEL FILLER FIXTURES AND FITTINGS ..... 1. M 06
FUEL FILTERS ..... 1. L 15
FUEL PIPES AND HOSES ..... 1. L 17
FUEL PUMP ..... 1. M 05
FUEL TANK ..... 1. M 09
INJECTORS AND PIPES ..... 1. M 13
SPEED CONTROL SYSTEM ..... 1. M 16
THROTTLE PEDAL AND LINKAGE ..... 1. L 10

AIR FLOW METER AIR BOX ..... 1. L 02
AIRCLEANER-2.9/3.2/4.0 LITRE ..... 1. L 08
AIRCLEANER-2.9/3.6 LITRE ..... 1. L 09
Air flow meter ..... 1. L 03
Elbow-air meter to throttle body-without ..... 1. L 02
FUEL FILLER CAP AND HOSES ..... 1. M 08
FUEL FILLER REMOTE RELEASE- ..... 1. M 07
FUEL FILTER AND RETURN PIPE-3.2/4.0 ..... 1. L 16
FUEL FILTER ..... 1. L 15
FUEL LATCH BOX, FILLER CAP AND HOSES ..... 1. M 06
FUEL PIPES-2.9/3.6 LITRE ..... 1. L 18
FUEL PIPES-2.9/4.0 LITRE ..... 1. M 03
FUEL PIPES ..... 1. L 17
FUEL PUMP AND MOUNTING ..... 1. M 05
FUEL PUMP RELAY ..... 1. L 14
FUEL TANK-FROM (V)629286 ..... 1. M 10
FUEL TANK-UP TO (V)629285 ..... 1. M 09
FUEL VAPOUR SYSTEM ..... 1. M 04
Fuel filter ..... 1. L 16
Fuel pressure regulator-inlet ..... 1. M 14
Fuel pressure regulator-inlet ..... 1. M 15
Fuel pressure regulator ..... 1. M 13
INJECTOR FUEL RAIL-2.9 LITRE ..... 1. M 13

INJECTOR FUEL RAIL-3.2/4.0 LITRE ..... 1. M 14
INJECTOR FUEL RAIL-3.6 LITRE ..... 1. M 15
SPEED CONTROL ACTUATOR ..... 1. M 16
THROTTLE BODY-2.9 LITRE ..... 1. L 04
THROTTLE BODY-3.2 LITRE ..... 1. L 05
THROTTLE BODY-3.6 LITRE ..... 1. L 06
THROTTLE BODY-4.0 LITRE ..... 1. L 07
THROTTLE LINKAGE ..... 1. L 10

AIR FLOW METER AIR BOX

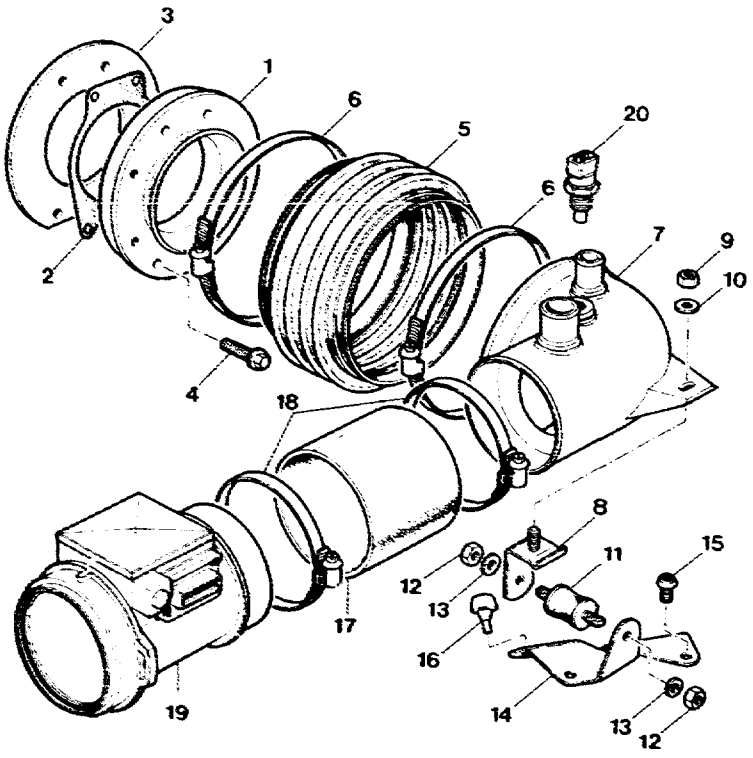


NS4382/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 5070	Throttle body trumpet	NLA	(1)	Use EBC3375.
1	EBC 3375	Throttle body trumpet	1	(2)	
2	EAC 6266	Throttle body trumpet gasket	1	(3)	
2	EAC 9826	Throttle body trumpet gasket	1	(4)	
3	EAC 7561	Retaining plate	1		
4	FB 106071 MJ	Bolt	4		Trumpet to throttle body
4	FB 106071 PJ	Bolt	4		Trumpet to air box
5	EAC 6370	Hose-trumpet to air box	1		
6	EAC 321520	Hose clip	NLA		Use JHC201801.
6	JHC 201801	Hose clip	2		
7	EAC 6962	Elbow-air meter to throttle body-with sensor	1		Use when EAC2863 is not fitted
7	EAC 9552	Elbow-air meter to throttle body-without sensor	1		Use when EAC 2863 is fitted
8	EAC 8460	Mounting bracket	1		
9	NH 106041 J	Nut-M6	1		
10	WJ 106001 J	Plain washer-M6	1		
11	EAC 6805	Instrumount	1		
12	NH 106041 J	Nut-M6	2		
13	WL 106001 J	Plain washer-M6	2		
14	EAC 8116	Support bracket	1		
15	AGU 1895 J	Pan head torx screw-upper	2		
16	BD 36436	Buffer	1		
17	EAC 51661	Hose	1		2.9 Litre;air box to air flow meter
17	EAC 51662	Hose-air box to air flow meter	1		3.2 Litre;air box to air flow meter
17	EAC 51662	Hose-air box to air flow meter	1		3.6 Litre (XJ40);air box to air flow meter
17	EAC 51662	Hose-air box to air flow meter	1		4.0 Litre;air box to air flow meter
18	EAC 321515	Hose clip	NLA		Use JHC201301.
18	JHC 201301	Hose clip	2		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851
(3) To (E) 180210
(4) From (E) 180211

AIR FLOW METER AIR BOX

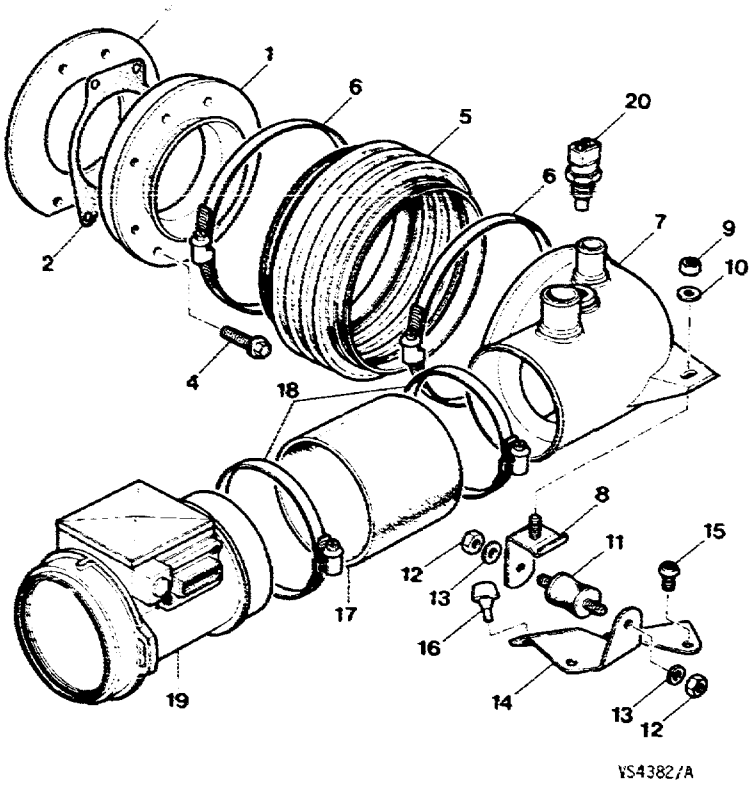


VS4382/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
19	EAC 5606	Air flow meter	1		2.9 Litre
19	EAC 6215	Air flow meter	NLA	(1)	Use DBC5917.
19	EAC 6215	Air flow meter	NLA	(1)	Use DBC5917.
19	DBC 5917	Air flow meter	NLA	(2)	Use DBC11509.
19	DBC 5917	Air flow meter	NLA	(2)	Use DBC11509.
19	DBC 11509	Air flow meter	NLA		Use DBC12517 qty 1 with
19	DBC 11509	Air flow meter	NLA		LMD3345AA qty 1 or DBC12516
					qty 1 with LMD3345AA qty 1 or
					DBC12517 qty 1 with LHD3345AA
					qty 1 or DBC12516 qty 1 with
					LHD3345AA qty 1.
19	DBC 12517	Air flow meter-new	NLA		Use DBC12517E.
19	DBC 12517	Air flow meter-new	NLA		Use DBC12517E.
19	DBC 12516	Air flow meter-new	NLA		Use DBC12516E.
					3.2 Litre
19	DBC 12516	Air flow meter-new	NLA		Use DBC12516E.
					4.0 Litre
19	DBC 12517E	Air flow meter-remanufactured unit	1		3.2 Litre;alternative to DBC12516E
19	DBC 12517E	Air flow meter-remanufactured unit	1		4.0 Litre;alternative to DBC12516E
19	DBC 12516E	Air flow meter-remanufactured unit	1		3.2 Litre;alternative to DBC12517E
19	DBC 12516E	Air flow meter-remanufactured unit	1		4.0 Litre;alternative to DBC12517E
	LMD 3345AA	Link lead	1		
	LHD 3345AA	Link lead	1		
20	EAC 2863	Air temperature sensor	1		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

THROTTLE BODY-4.0 LITRE

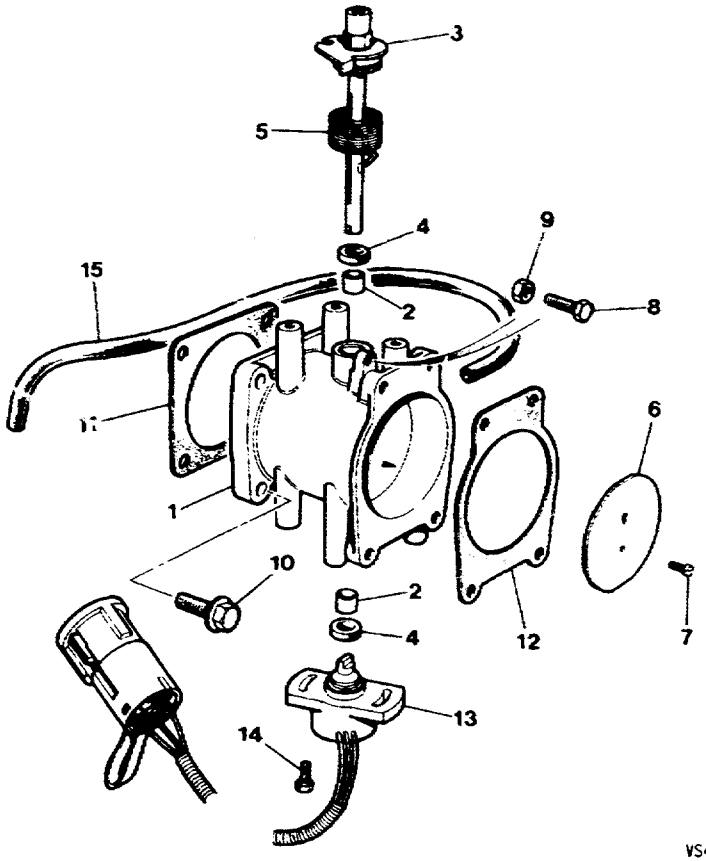


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 2369	THROTTLE BODY	1		4.0 Litre
2	C 209523	• Bush	2		
3	EBC 2372	Throttle spindle	1		
4	EAC 7329	Throttle spindle seal	NLA	(1)	Use EBC3964.
4	EBC 3964	Throttle spindle seal	2	(2)	
5	EAC 4834	Torsion spring	NLA	(3)	Use EBC2964.
5	EBC 2964	Torsion spring	1	(4)	
6	EAC 4820	Throttle disc	1		
7	AUC 1358J	Screw	NLA		Use C43212.
7	C 43212	Screw - disc to spindle	2		
8	C 37939	Throttle stop screw	NLA		
9	UFN 119L	Locknut-imperial	1		
10	FS 108251J	Washer faced setscrew-M8 x 25mm	4		Throttle body to manifold
11	EAC 9822	Throttle body gasket	1	(5)	Throttle body to manifold
12	EAC 9826	Throttle body trumpet gasket	1	(5)	Throttle body to trumpet
13	DBC 5319	Throttle potentiometer	1	(6)	
13	DBC 2889	Throttle potentiometer	1	(7)	
14	SN 104161J	Screw	2		
15	EAC 802230	Breather hose-63"	1		

VS4959 CHANGE POINTS:

(1) To (E) 146106
(2) From (E) 146107
(3) To (E) 149081
(4) From (E) 149082
(5) To (E)9EPCLA 113727
(6) To (E)9EPCLA 111200
(7) From (E)9EPCLA 111201

AIRCLEANER-2.9/3.2/4.0 LITRE

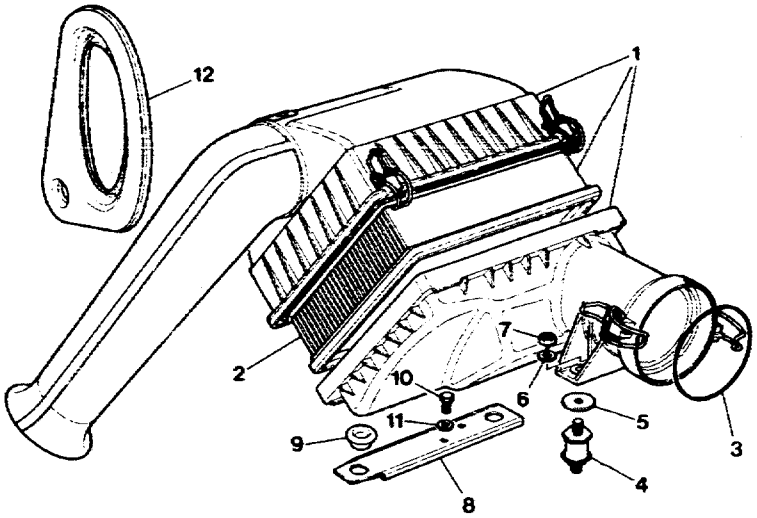


VS4971

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	2940	AIRCLEANER-ASSEMBLY	NLA	(1)	Use EBC8445.
						2.9 Litre
						Use EBC8445.
						3.2 Litre
						Use EBC8445.
						4.0 Litre
1	EBC	8445	AIRCLEANER-ASSEMBLY	NLA		Use NBB3500AA.
						2.9 Litre
						Use NBB3500AA.
						3.2 Litre
						Use NBB3500AA.
						4.0 Litre
2	EAC	5672	• Air filter	1		
	EAC	5864	• Aircleaner cover clip	6		
1	NBB	3500AA	Aircleaner-assembly	1		2.9 Litre
1	NBB	3500AA	Aircleaner-assembly	1		3.2 Litre
1	NBB	3500AA	Aircleaner-assembly	1		4.0 Litre
3	EAC	4714	Aircleaner O-ring	1		
4	EAC	8130	Instrumount	2		
5	WJ	106041 J	Washer	NLA		
6	WC	106041 J	Plain washer	NLA		
7	NH	106041 J	Nut-M6	1		
8	EBC	3446	Aircleaner mounting bracket-front	1		
9	EBC	2882	Grommet	2		
10	SH	105081 J	Setscrew	2		
11	WA	105001 J	Plain washer-M5	2		
12	EBC	2820	Air intake grommet	1		
	EAC	5620	Firing order chart	1		
	C	33884	Lubrication chart	1		

CHANGE POINTS:
(1) From (V) 594576


THROTTLE LINKAGE

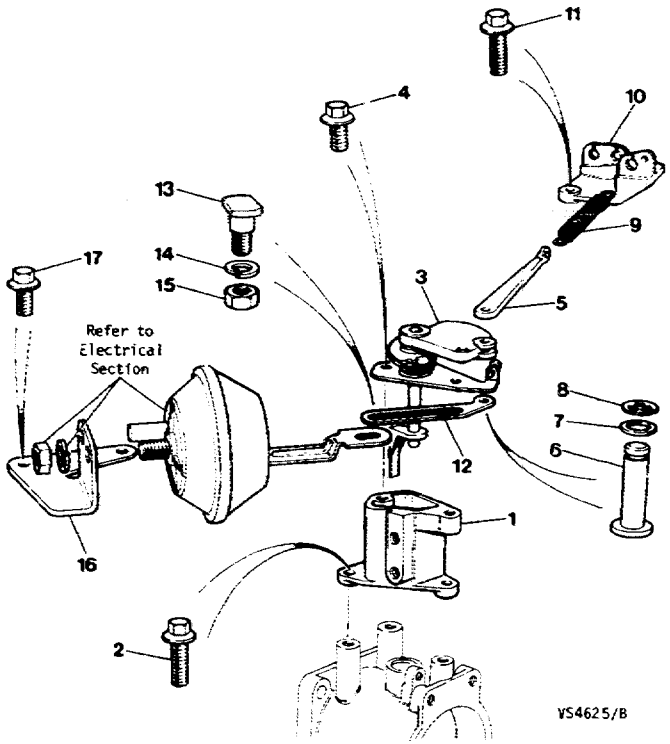

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 4888	Throttle pedestal	NLA		Use EBC2493
1	EBC 2493	Throttle pedestal	1		
2	FS 106201 J	Flange head screw	3		
3	EAC 9333	THROTTLE COUPLING -ASSEMBLY	NLA		Use EBC4175
	C 37939	• Throttle stop screw	NLA		
	UFN 119 L	• Locknut-imperial	1		
3	EBC 4175	Throttle coupling -assembly	NLA		Use NBA3072AA
3	NBA 3072AA	Throttle coupling -assembly	NLA		Use EAC9342 qty 1 with EAC9335 qty 1 with EAC8151 qty 1
3	EAC 9335	Throttle coupling	1		
	EAC 9342	Throttle coupling shaft	1		
	EAC 8151	Throttle cable pulley	1		
4	FS 106161 J	Flange head screw-M6	NLA		Use FS106165P
4	FS 106165 P	Flange head screw	2		
5	EAC 8162	Retainer	1		
6	EAC 8164	Retaining pin	1		
7	WA 105001 J	Plain washer-M5	1		
8	C 14350	Circlip	1		
9	EAC 8161	Return spring	1		
10	EAC 8567	Cable abutment bracket	NLA	(1)	Use EBC1224
10	EBC 1224	Cable abutment bracket	1	(2)	
11	FS 106201 J	Flange head screw	2		
12	EAC 8778	Sliding link	1		
13	EAC 8167	Bolt -link to actuator	1		
14	WL 104001 J	Lock washer-M4	1		
15	NH 104041 J	Nut-M4	1		
16	EAC 8166	Speed control bracket	NLA		Use EBC9695
16	EBC 9695	Speed control bracket	1		
17	FS 106141 J	Flanged head screw	2		

CHANGE POINTS:
(1) To (V) 556850
(2) From (V) 556851

ACCELERATOR PEDAL AND CABLE-UP TO (V)594575

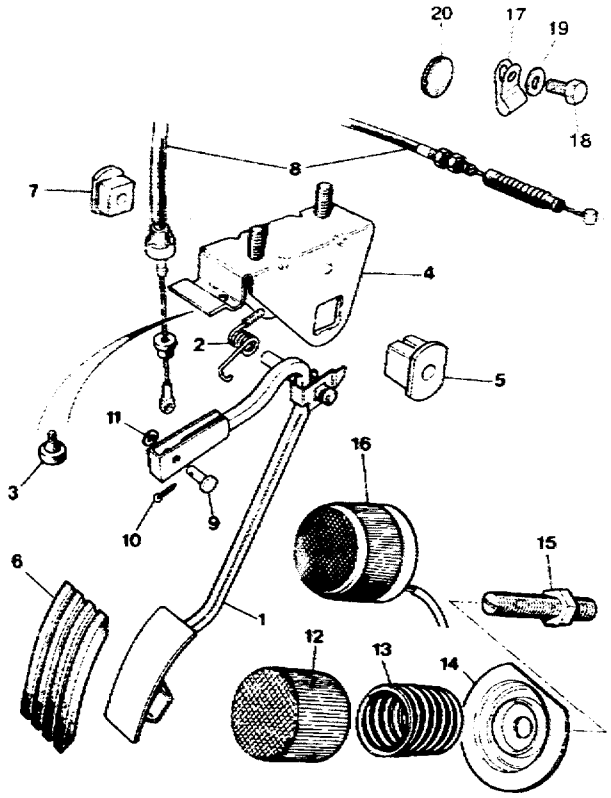


MD4710D

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4276	Accelerator pedal -RH	1	(1)	
1	CBC 4277	Accelerator pedal -LH	1	(1)	
2	CAC 9753	Return spring-accelerator pedal	1		
3	BD 36436	Buffer	1		
4	CAC 9682	Accelerator mounting bracket -RH	1	(1)	
4	CAC 9683	Accelerator mounting bracket -LH	1	(1)	
5	BMK 2091	Accelerator bearing	1		
6	C 45287	Accelerator pedal pad	1		
7	C 28732	Pivot bearing	1		
8	CBC 2618	Accelerator cable-RH	1	(1)	
8	CBC 2619	Accelerator cable-LH	1	(1)	
9	PC 105291 J	Clevis pin	1		
10	PS 103101 J	Split pin	1		
11	WA 105001 J	Plain washer-M5	1		
	FN 106041 J	Flange nut-M6	2		
17	C 104012	P-clip-small	1	(1)	Cable to bulkhead (RHD)
18	GL 106141 J	Setscrew	NLA	(1)	
19	WA 106041 J	Plain washer-0.25" i/d	1		
20	AGU 2221 J	Blanking plug	1	(1)	
12	CAC 9463	Accelerator pedal stop	1		
13	CAC 9464	Compression spring	1		
14	CAC 9465	Spring seat	1		
15	CAC 9629	Stud-pedal stop to retainer	1		
16	DBC 5828	Kickdown switch	1	(1)	

CHANGE POINTS
(1) To (V) 594575

ACCELERATOR PEDAL AND CABLE-FROM (V)594576

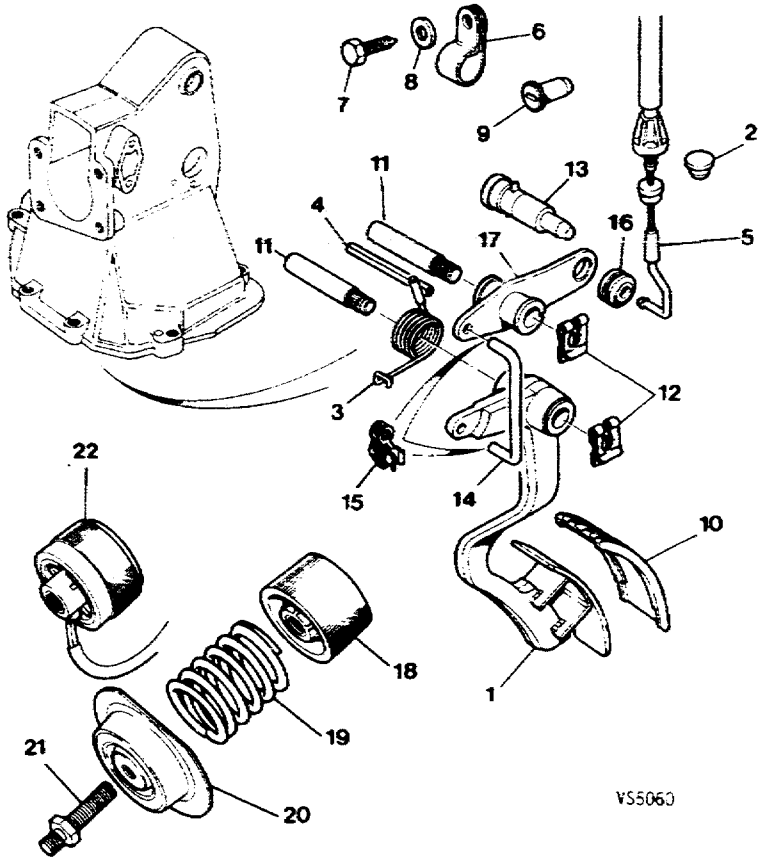


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8510	Accelerator pedal -assembly	1	(1)	RHD
1	CBC 8511	Accelerator pedal -assembly	NLA	(1)	Use CCC4499
					LHD
1	CCC 4499	Accelerator pedal -assembly	NLA		Use MNA5380BA qty 1 with
					MNA5385AA qty 1 with
					MNA4715AB qty 1 with
					MNA4709AA qty 1
					LHD
1	MNA 5380BA	ACCELERATOR PEDAL -ASSEMBLY-PLASTIC	1		LHD
	MNA 5399AA	• Operating link -accelerator	1		
	MNA 5385AA	• Pedal operating lever	1		
3	MNA 4715AB	Return spring-accelerator pedal-plastic	1		LHD
11	MNA 4709AA	Pivot pin-accelerator pedal-plastic	1		LHD
1	CBC 6801	Accelerator pedal -assembly	NLA	(2)	Use CBC8510
					RHD
1	CCC 4674	Accelerator pedal -assembly	NLA	(2)	LHD
2	CBC 7363	Rubber plug	1		
3	CBC [illegible]	Return spring-accelerator pedal-rubber	1		
4	PA [illegible]	Spring pin	1		
5	CBC [illegible]2	Accelerator cable	1		RHD
5	CBC [illegible]	Accelerator cable	1	(3)	LHD
5	CBC [illegible]	Accelerator cable	1	(4)	
6	C 1040 12	P-clip-small	1		
7	GL 106141 J	Setscrew	NLA		
8	WA 106041 J	Plain washer-0.25" i/d	1		
9	AGU 2221 J	Blanking plug	1		
10	C 45287	Accelerator pedal pad	1		
11	CBC 6805	Pivot pin-accelerator pedal-rubber	NLA		Use CCC2672
11	CCC 2672	Pivot pin-accelerator pedal-rubber	2		
12	C 272383	Pivot pin clip	NLA		
13	CBC 7734	Pedal stop	1		
14	CBC 6811	Operating rod	1		
15	C 13824	Clip	2		
16	CBC 6850	Grommet	1		

CHANGE POINTS

(1) From (V) 594576 To (V) 629285
(2) From (V) 629286
(3) From (V) 594576 To (V) 629361
(4) From (V) 629362

ACCELERATOR PEDAL AND CABLE-FROM (V)594576

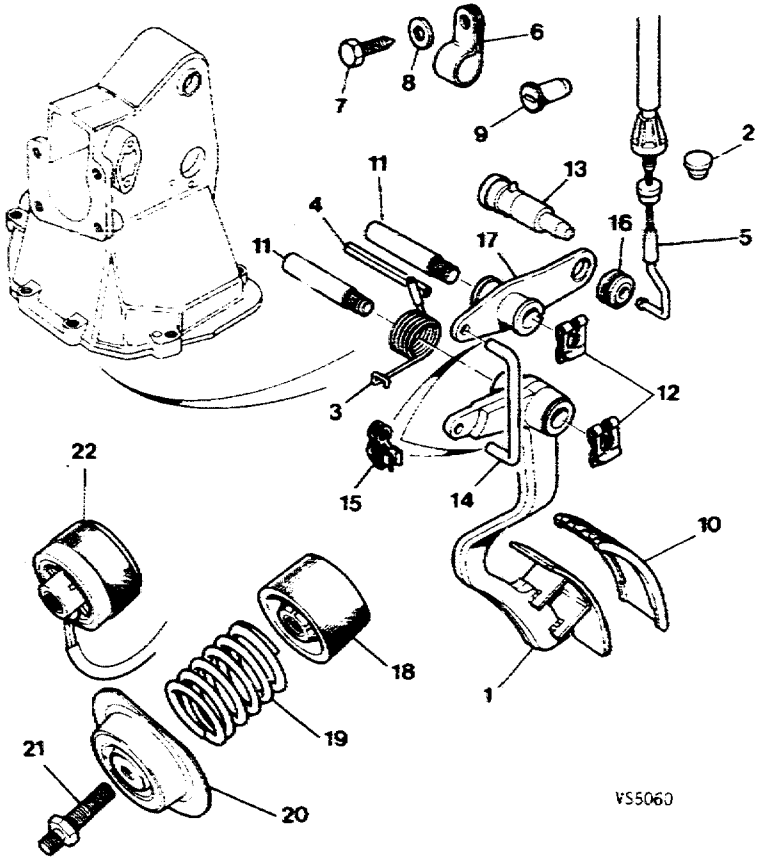

Illus	Part Number	Description	Quantity	Change Point	Remarks
17	CBC 6816	Operating lever-assembly	1	(1)	
17	CBC 8974	Operating lever-assembly	1	(2)	
	CBC 6951	Flanged bush	2		
18	CAC 9463	Accelerator pedal stop	1		2.9 Litre;automatic
18	CAC 9463	Accelerator pedal stop	1		Manual
19	CAC 9464	Compression spring	1		2.9 Litre;automatic
19	CAC 9464	Compression spring	1		Manual
20	CAC 9465	Spring seat	1		2.9 Litre;automatic
20	CAC 9465	Spring seat	1		Manual
21	CAC 9629	Stud-pedal stop to retainer	1		2.9 Litre;automatic
21	CAC 9629	Stud-pedal stop to retainer	1		Manual
21	CBC 9625	Stud	1		4.0 Litre;alternatives;automatic
21	CBC 9625 1	Stud	1		4.0 Litre;alternatives;automatic
22	DBC 5828	Kickdown switch	1	(1)	
22	DBC 6286	Kickdown switch	NLA	(2)	Use DBC12243
22	DBC 12243	Kickdown switch	1	(2)	


CHANGE POINTS:

(1) From (V) 594576 To (V) 629285

(2) From (V) 629286

FUEL PUMP RELAY


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2484	Relay-black	1	(1)	
2	DBC	6809	Relay cover-assembly	1		
	DBC	6570	Relay cover label	NLA		
3	DBC	6417	Relay bracket	1	(1)	LHD
4	DBC	6568	Relay bracket	1	(1)	RHD

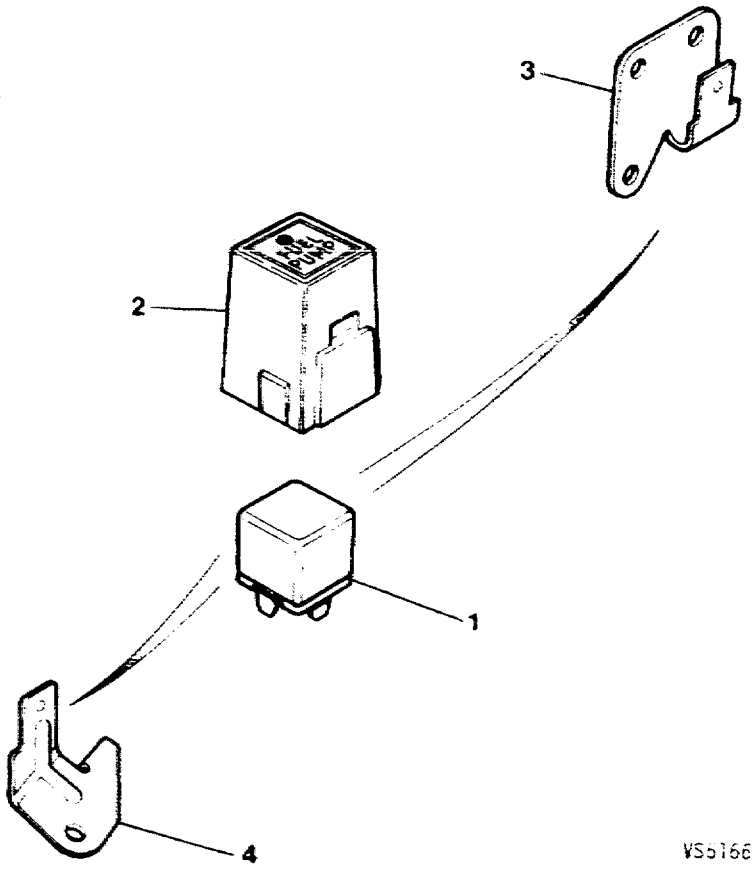

VS5166

CHANGE POINTS
(1) From (V) 629286

FUEL FILTER

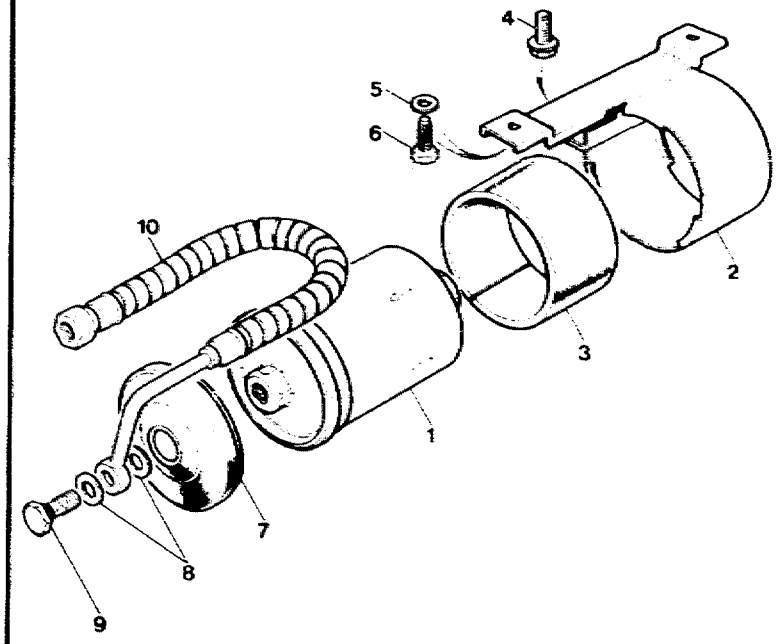

VS465B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	9630	Fuel filter	1	(1)	
2	CBC	2028	Mounting bracket	NLA	(2)	Use CBC7234
2	CBC	7234	Mounting bracket	1	(3)	
3	CAC	9864	Mounting rubber	1		
4	FS	106161J	Flange head screw-M6	NLA		Use FS106165P
4	FS	106165P	Flange head screw	1		
5	WA	106041J	Plain washer-0 25" i/d	3		
6	GG	106161J	Paint clearing screw	NLA		
7	CAC	8128	Stoneguard	1		
8	CBC	6461	Bonded seal	2		
9	CAC	7859	Banjo bolt	1		
10	CBC	2578	Fuel hose-assembly	1	(1)	Tank filter to underfloor pipe
10	CBC	2573	Fuel hose-assembly	NLA	(1)	Use CBC8185. Underfloor pipe to tank
10	CBC	8185	Fuel hose-assembly	1	(1)	Underfloor pipe to tank
	CBC	2666	Spring clip-fuel hose to tank	NLA		Use CBC8294. Fuel hose to tank
	CBC	8294	Spring clip-fuel hose to tank	1		Fuel hose to tank


CHANGE POINTS

(1) To (V) 629285

(2) To (V) 589690

(3) From (V) 589690 To (V) 629285

FUEL FILTER AND RETURN PIPE-3.2/4.0 LITRE

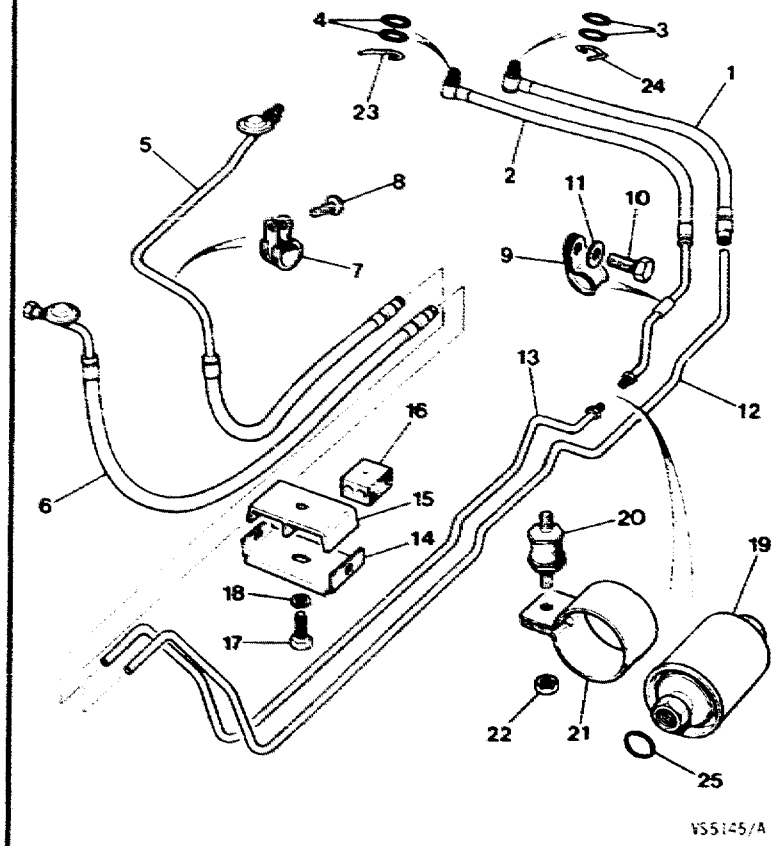


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 4356	Fuel return hose-assembly	1	(1)	3.2 Litre
1	EBC 4356	Fuel return hose-assembly	1		4.0 Litre
2	EBC 4355	Fuel feed hose-assembly	NLA	(2)	Use EBC8663
2	EBC 4355	Fuel feed hose-assembly	NLA	(2)	Use EBC8663
2	EBC 8663	Fuel feed hose-assembly	1	(3)	3.2 Litre
2	EBC 8663	Fuel feed hose-assembly	1	(3)	4.0 Litre
3	AGU 1386J	O-ring	NLA		Use AGU1386
3	AGU 1386	O-ring	2		
4	AGU 1387	Feed hose O-ring	2		
5	EBC 8642	Fuel feed hose-assembly-PTFE	NLA	(4)	Use EBC9813
5	EBC 8642	Fuel feed hose-assembly-PTFE	NLA	(4)	Use EBC9813
5	EBC 9813	Fuel feed hose-assembly	1	(5)	3.2 Litre
5	EBC 9813	Fuel feed hose-assembly	1	(5)	4.0 Litre
6	EBC 8643	Return hose	1		
7	EBC 4469	Pipe clip	3		
8	FS 106101J	Setscrew	2		
9	C 104035	P-clip	NLA		
10	AGU 2202	Setscrew	2		
11	WA 106041J	Plain washer-0.25" i/d	2		
12	CBC 8899	Fuel return pipe	1	(1)	3.2 Litre
12	CBC 8899	Fuel return pipe	1	(1)	4.0 Litre
13	CBC 8897	Fuel feed pipe	1	(1)	3.2 Litre
13	CBC 8897	Fuel feed pipe	1	(1)	4.0 Litre
14	CBC 9084	Pipe clip bracket	7		
15	CAC 7162	Clip bracket	7		
16	CBC 9085	Rubber insert	7		
17	AGU 2207	Screw-paint clearing	7		
18	WA 106041J	Plain washer-0.25" i/d	7		
19	CBC 7083	Fuel filter	NLA	(1)	Use NMD6091AB
19	CBC 7083	Fuel filter	NLA	(1)	Use NMD6091AB
19	NMD 6091AB	Fuel filter	NLA		Use NMD6091AC
19	NMD 6091AB	Fuel filter	NLA		Use NMD6091AC
19	NMD 6091AC	Fuel filter	1		3.2 Litre
19	NMD 6091AC	Fuel filter	1		4.0 Litre
20	CBC 8522	Instrumount-2 bolt	1		
21	CBC 9512	Fuel filter clamp	1		
22	FN 106041J	Flange nut-M6	1		
23	CBC 8293	Spring clip	1		
24	CBC 8294	Spring clip-fuel hose to tank	1		
25	CAC 89682	O-ring	NLA		Use KSR605002
25	KSR 605002	O-ring	1		

CHANGE POINTS.

(1) From (V) 629286
(2) From (V) 629286 To (V) 647412
(3) From (V) 647413
(4) From (V) 629286 To (V) 661684
(5) From (V) 661685


FUEL PIPES

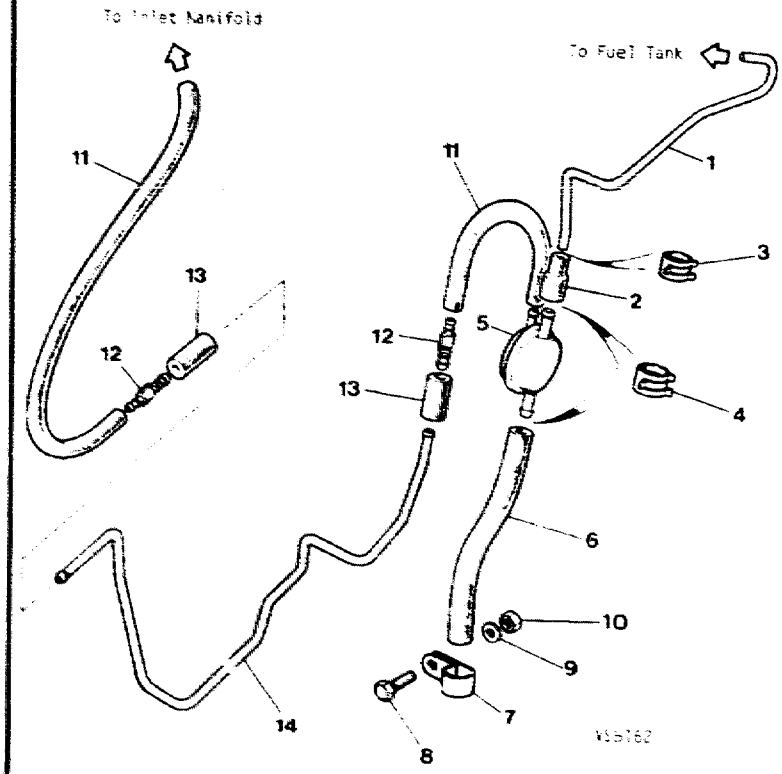

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 8638	Vapour pipe-pipe to vacuum valve	1	(1)	Except evaporative loss control
2	CAC 9538	Fuel hose	1		
3	CAC 8772	Hose clip	1		
4	CAC 8773	Hose clip	2		
5	CBC 7714	Pressure control valve	1		Except evaporative loss control
6	CAC 890122	Fuel hose-1295mm	1		
7	C 104019	P-clip	1		
8	SH 105121J	Screw	1		
9	WJ 105001J	Plain washer	1		
10	NY 105041J	Nyloc nut-M5	1		
11	EAC 802224	Hose	NLA		
12	EAC 9286	Vacuum stepped hose	2		
13	CBC 25919	Hose	2		
14	CBC 8945	Vapour pipe	1		

CHANGE POINTS
(1) From (V) 629286

FUEL PIPES-2.9/4.0 LITRE

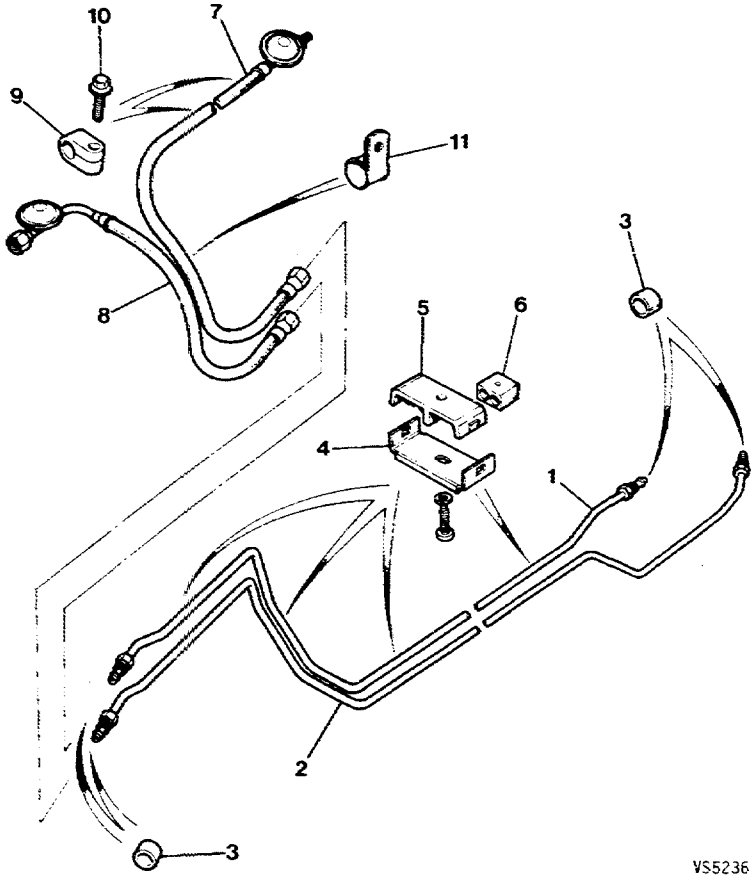


VS5236

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	5618	Fuel feed pipe	NLA	(1)	4.0 Litre
1	CBC	5618	Fuel feed pipe	NLA	(1)	2.9 Litre
2	CBC	5619	Fuel return pipe	1	(1)	4.0 Litre
2	CBC	5619	Fuel return pipe	1	(1)	2.9 Litre
3	CBC	4720	Viton olive	4		
4	CAC	7053	Pipe clip	6		
5	CAC	7162	Clip bracket	6		
6	CAC	7160	Pipe clip insert	NLA		
7	CBC	2581	Fuel feed hose-assembly-under floor pipe to rail	NLA	(1)	Use EBC9811.
7	EBC	9811	Fuel feed hose-assembly-under floor pipe to rail	1		4.0 Litre
7	CBC	2583	Fuel feed hose-assembly	NLA	(1)	Use EBC9812.
7	EBC	9812	Fuel feed hose-assembly	1		2.9 Litre
8	CBC	2582	Fuel return hose-assembly-regulator to under floor pipe	1	(1)	4.0 Litre
8	CBC	4264	Fuel return hose-assembly	1	(1)	2.9 Litre
	EBC	10394	Fuel hose-assembly-service only	1	(2)	4.0 Litre;USA
9	AGU	2098 J	Pipe clip	2		
10	FB	106061 J	Flange head bolt	2		
	AGU	2097 J	Double clip	1		
11	JZP	100036	Pipe clip-18mm	1		
	NH	106041 J	Nut-M6	1		
	WA	106041 J	Plain washer-0.25" i/d	1		

CHANGE POINTS:
(1) From (V) 594576
(2) To (V) 629285

FUEL VAPOUR SYSTEM

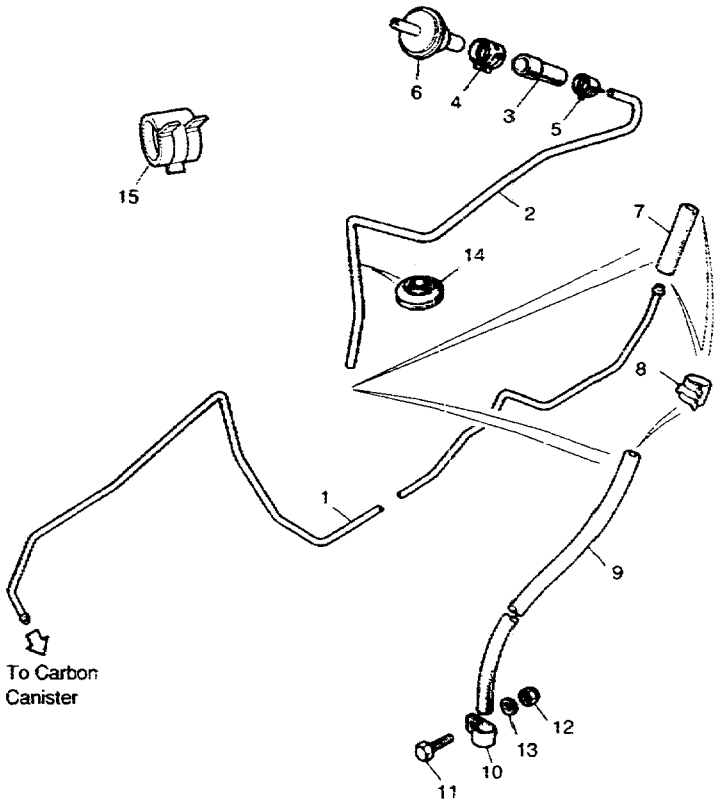


MD4784B

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6389	Vapour pipe	NLA	(1)	Use CBC5623.
1	CBC 4866	Vapour pipe	NLA	(2)	Use CBC5620.
1	CBC 5620	Vapour pipe	1		
	CBC 5623	Fuel and brake pipe-assembly	1		
2	CAC 8638	Vapour pipe-pipe to vacuum valve	1		
3	CAC 7586	Reducing hose	NLA		Use EBC10152.
3	EBC 10152	Reducing hose	1		
	CAC 2641 1	Swaged petrol hose	1		
4	CAC 8774	Hose clip	3		
5	CAC 8772	Hose clip	1		
15	CAC 8773	Hose clip	1		
6	CBC 6280	Pressure reducing valve -5 hole type	NLA		Use CAC3101.
6	CAC 3101	Pressure reducing valve -white	1		
7	CAC 586620	Fuel hose-1400mm	1		
8	CAC 8772	Hose clip	1		
9	CAC 586620	Fuel hose-1400mm	1		Except Australia and Canada and Sweden and Switzerland and USA and Middle East
10	C 104019	P-clip	1		
11	SH 105121 J	Screw	1		
12	NY 105041 J	Nyloc nut-M5	1		
13	WJ 105001 J	Plain washer	1		
14	C 23035	Bonnet release cable hole grommet	2		

CHANGE POINTS:
(1) To (V) 522094
(2) From (V) 522095

FUEL PUMP AND MOUNTING

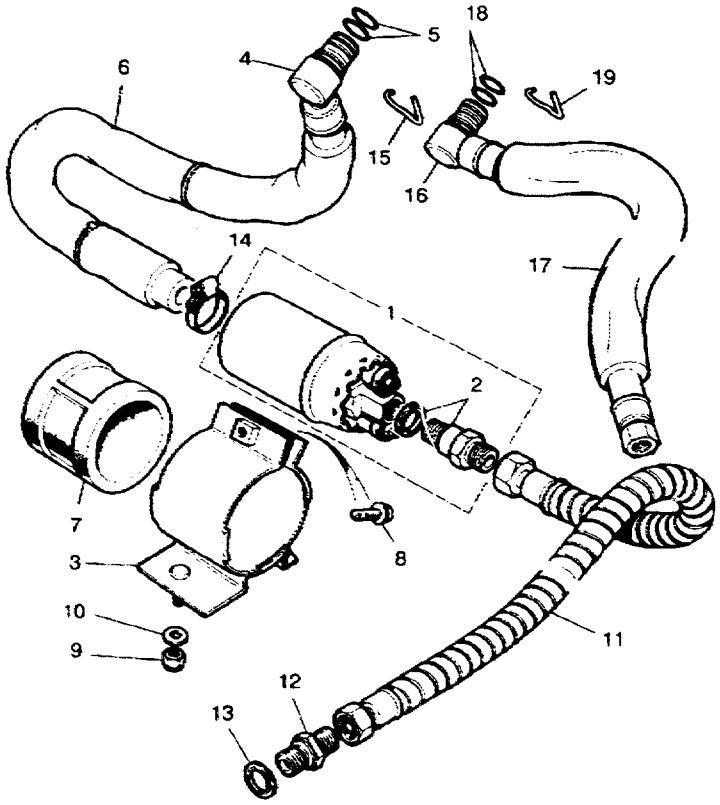


MD4680D

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	5656	Fuel pump	NLA	(1)	Use EBC11580.
1	EBC	11580	Fuel pump	1		
2	JLM	1854	Non return valve kit	1	(1)	
3	CBC	2026	Mounting bracket	1		
4	CBC	1474	SOCKET AND HOSE-ASSEMBLY	NLA	(2)	Use CBC8183.
4	CBC	8183	SOCKET AND HOSE-ASSEMBLY	1	(3)	
5	AGU	1387J	• O-ring	2		
6	C	331396	Insulation sleeve-38"	1		
7	CBC	1489	Mounting rubber-fuel pump	1		
8	FS	106121J	Setscrew-M6	1		
9	NY	106041J	Nyloc nut	2		
10	WA	106041J	Plain washer-0.25" i/d	2		
11	CBC	2576	Fuel hose-assembly-pump to filter	1	(1)	
12	CBC	1481	Fuel filter adaptor	1	(1)	
13	AGU	2081J	Copper washer	NLA		Use CBC6460.
	CBC	6460	Bonded seal	1		
14	EAC	32155	Clip	1		
15	CBC	2687	Spring clip	NLA	(2)	Use CBC8293.
15	CBC	8293	Spring clip	1	(3)	
	CBC	4724	Pulsation damper	1		
	AGU	1058	Tie strap	2		
16	CBC	2573	Fuel hose-assembly	NLA	(4)	Use CBC8185.
16	CBC	8185	Fuel hose-assembly	1	(5)	
17	C	391938	Insulation sleeve	NLA		
18	AGU	1386J	O-ring	NLA		Use AGU1386.
18	AGU	1386	O-ring	2		
19	CBC	2688	Spring clip-fuel hose to tank	NLA	(4)	Use CBC8294.
19	CBC	8294	Spring clip-fuel hose to tank	1	(5)	

CHANGE POINTS:

(1) To (V) 629285
(2) To (V) 598527
(3) From (V) 598528 To (V) 629285
(4) To (V) 524374
(5) From (V) 524375 To (V) 629285

FUEL LATCH BOX, FILLER CAP AND HOSES

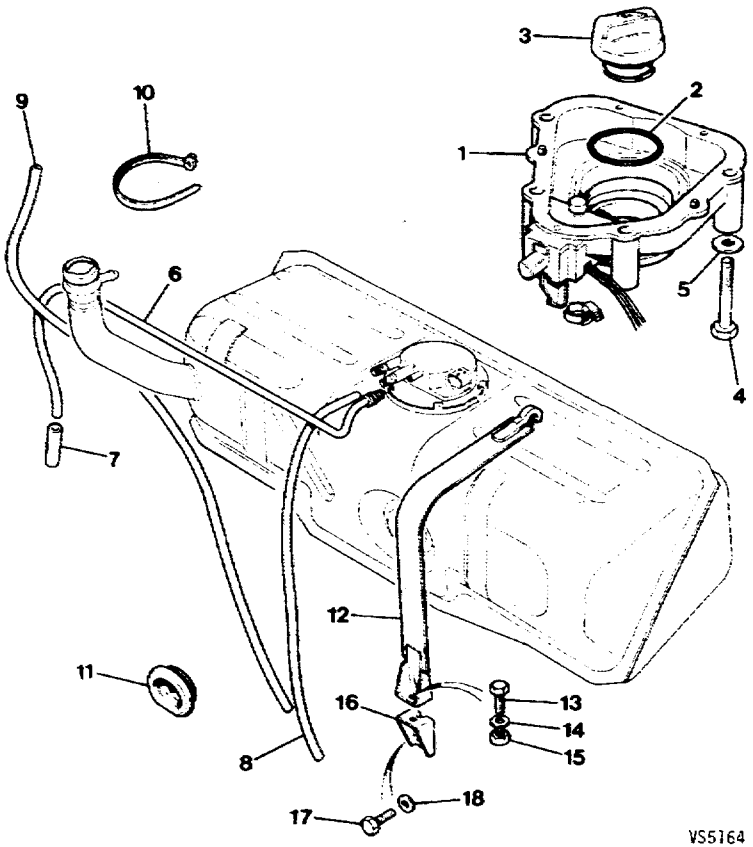

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 7531	Fuel filler latch box	1	(1)	
2	CAC 9253	Spring clip	NLA	(1)	Use HNA3106AA.
2	HNA 3106AA	Spring clip	1		
3	EBC 4314	Fuel filler cap	NLA	(2)	Use EBC9416.
3	EBC 9416	Fuel filler cap	NLA	(3)	Use NMB5942AA.
3	NMB 5942AA	Fuel filler cap	NLA		Use NMB5942AB.
3	NMB 5942AA	Fuel filler cap	NLA		Use NMB5942AB.
3	NMB 5942AB	Fuel filler cap	NLA		Use NJA5942AA.
3	NJA 5942AA	Fuel filler cap	NLA		Use NJA5942AC.
3	NJA 5942AC	Fuel filler cap	NLA		Use NJA5942AD.
4	BH 105101 J	Filler latch box bolt	NLA		
5	WJ 105001 J	Plain washer	4		
6	CBC 8153	Vapour pipe-assembly	NLA		Use EBC10237.
6	EBC 10237	Vapour pipe-assembly	1		
7	CAC 18535	Reducing hose	1		
	CAC 58664	Fuel hose	NLA	(1)	Use CAC586620.
					Evaporative loss control
	CAC 586620	Fuel hose-1400mm	1		Evaporative loss control
	CAC 18538	Fuel hose	1	(1)	Except evaporative loss control
8	CBC 9507	Over pressure pipe	1		
9	CAC 8518	Drain tube	1		
10	UKC 6683	Tie strap	1		
11	CAC 9863	Grommet	NLA		Use BEC23778.
11	BEC 23778	Grommet	1		
12	CAC 9787	Tank strap-assembly	1		
13	SH 108451 J	Setscrew	1		
14	WA 108051	Plain washer-0.3125" diameter	1		
15	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B.
15	JFY 10804B	Locking nut	1		
16	CBC 1368	Anchor bracket	1		
17	SH 108161 J	Setscrew-M8 x 16mm	1		
18	WA 108051	Plain washer-0.3125" diameter	1		


CHANGE POINTS:

(1) From (V) 629286

(2) From (V) 629286 To (V) 654112

(3) From (V) 654113

FUEL FILLER REMOTE RELEASE-CANADA/USA

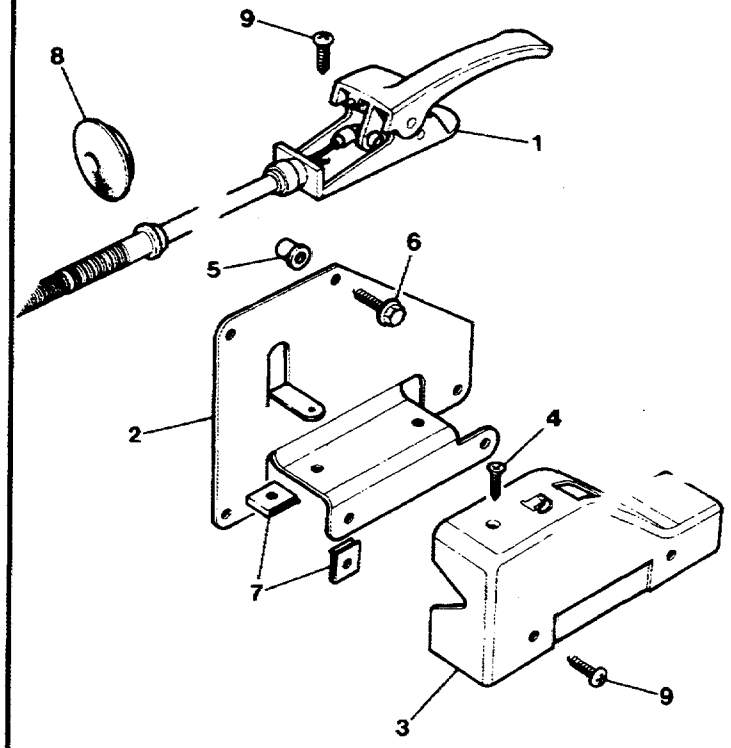


VS4990

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	1765	Remote release lever	NLA	(1)	Use BEC4979.
						Canada;USA
1	BEC	4979	Remote release lever	NLA	(2)	Use BEC6636.
						Canada;USA
1	BEC	6636	Remote release lever	1		Canada;USA
2	BDC	9979	Lever bracket	NLA	(3)	Use BEC1771.
						Canada;USA
2	BEC	1771	Lever bracket	NLA		Use BEC4033.
2	BEC	4033	Lever bracket	NLA	(4)	Use BEC7721.
						Canada;USA
2	BEC	7721	Lever bracket	1		
3	BEC	4831	Bracket cover	1		
4	AC	604024 J	Countersunk self tapping screw	NLA		
5	BCC	6181	Reverse lokut nut-no.6 round	3		
6	BCC	6624	Flanged head screw	3		
7	BD	863304	Speed nut	4		
8	BEC	1802	Grommet	1		
9	DA	608044 J	Self tapping screw-no.6 x 1"	4		

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 597356
(4) From (V) 597357

FUEL FILLER CAP AND HOSES

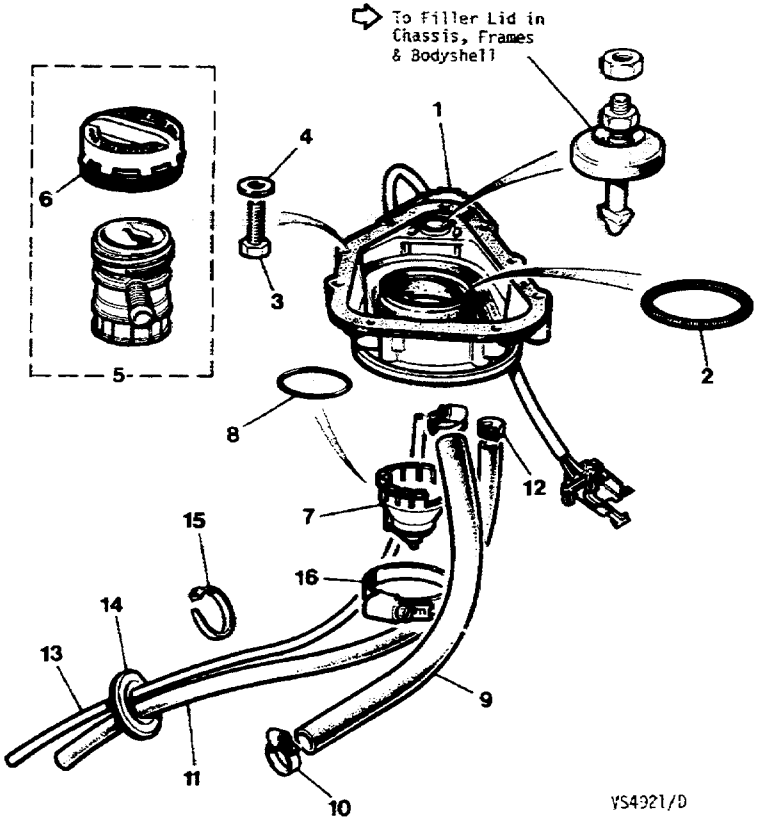


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9734	Fuel filler latch box-electrical release	1	(1)	
1	EBC 4321	Fuel filler latch box-manual release	1	(1)	
	CAC 9792	Gaiter	1		
	CBC 8731	Fuel filler release arm-assembly	1	(1)	LHD
2	CAC 9253	Spring clip	NLA		Use HNA3106AA.
2	HNA 3106AA	Spring clip	1		
3	BH 105101 J	Filler latch box bolt	NLA		
	FB 105101 J	Flange head bolt	4		
4	WJ 105001 J	Plain washer	4		
	WF 105001 J	Shakeproof washer	4		
5	CBC 6021	FUEL FILLER NECK/CAP-ASSEMBLY	1	(1)	
6	CBC 5292	• Filler cap	1		
7	CBC 6621	SURGE FLAP-ASSEMBLY-LEADED FUEL	1	(1)	
7	CBC 6326	SURGE FLAP-ASSEMBLY-UNLEADED FUEL	1	(2)	
7	CBC 6622	SURGE FLAP-ASSEMBLY-UNLEADED FUEL	1	(3)	
8	CBC 6471	• O-ring	1		
9	CAC 78332	Breather hose	NLA		
10	EAC 32156	Hose clip	NLA		Use JHC200401.
10	JHC 200401	Hose clip	2		
11	EAC 802230	Breather hose-63"	1		
12	CAC 8772	Hose clip	1		
13	CAC 8518	Drain tube	1		
14	CAC 9863	Grommet	NLA		Use BEC23778.
14	BEC 23778	Grommet	1		
15	C 45099	Tie strap-4"	1		Hose to tube
15	C 46294	Tie strap-10.75"	1		Hose and tube to filler neck
16	C 432065	Worm drive hose clip	NLA		Use EAC321513.
16	EAC 321513	Worm drive hose clip	NLA		Use JHC201001.
16	JHC 201001	Worm drive hose clip	1		Hose and tube to filler neck
	JLM 1585	Fuse	1		
	JLM 1586	Fuse	1		

CHANGE POINTS:

(1) To (V) 629285
(2) To (V) 547672
(3) From (V) 547673 To (V) 629285

FUEL TANK-UP TO (V)629285

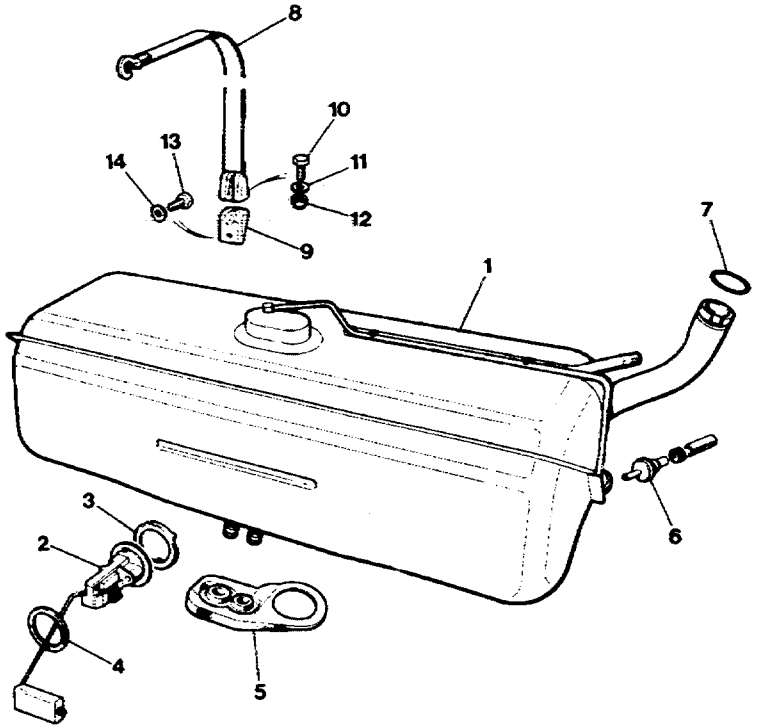


VS4632/D

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	8803 1	Fuel tank	1	(1)	
2	DBC	4735	Fuel tank sender unit-steel	NLA	(1)	Use DBC10284.
2	DBC	10284	Fuel tank sender unit-plastic	1	(1)	
3	ARA	1501 J	Lock ring	1		
4	ARA	1502 J	Sealing ring	1		
5	CBC	2403	Fuel tank seal	1		
6	CBC	6280	Pressure reducing valve -5 hole type	NLA	(1)	Use CAC3101.
						Evaporative loss control
6	CAC	3101	Pressure reducing valve -white	1	(1)	Evaporative loss control
7	AGU	1284 J	O-ring	1		
8	CAC	9787	Tank strap-assembly	2		
9	CBC	1368	Anchor bracket	2		
10	SH	108451 J	Setscrew	2		
11	WA	108051	Plain washer-0.3125" diameter	2		
12	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B.
12	JFY	10804B	Locking nut	2		
13	SH	108161 J	Setscrew-M8 x 16mm	2		
14	WA	108051	Plain washer-0.3125" diameter	2		

CHANGE POINTS:
(1) To (V) 629285

FUEL TANK-FROM (V)629286

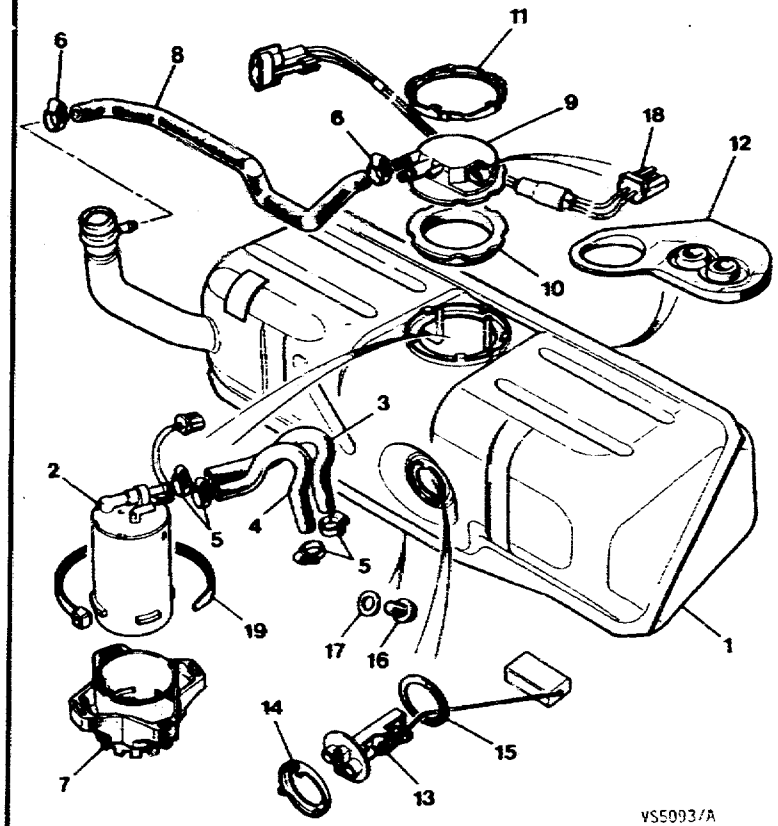


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 5151 1	Fuel tank-assembly-unleaded fuel	NLA	(1)	Use EBC84461. Except Japan
1	EBC 5150 1	Fuel tank-assembly-leaded fuel	NLA	(1)	Use EBC84471. Japan
1	EBC 8446 1	Fuel tank-assembly-unleaded fuel	NLA	(1)	Use EBC100941. Except Japan
1	EBC 8447 1	Fuel tank-assembly-leaded fuel	NLA	(1)	Use EBC94811. Japan
1	EBC 9481 1	Fuel tank-assembly	NLA		Use EBC100951. Japan
2	EBC 4676	Fuel pump module	NLA	(1)	Use EBC8597.
2	EBC 8597	Fuel pump module	NLA		Use EBC10123 qty 1 with EBC10124 qty 1.
2	EBC 10123	Fuel pump module	NLA		Use EBC11365.
2	EBC 11365	Fuel pump module	1		
3	EBC 4678	Fuel hose-feed/return-in tank	1		
4	EBC 4679	Fuel return hose-in tank	1		
5	EAC 32152	Worm drive hose clip	NLA		Use JHC200101.
5	JHC 200101	Worm drive hose clip-steel	4		
6	EAC 32155	Clip	2		
7	EBC 4681	Mounting rubber	NLA		Use EBC10124.
7	EBC 10124	Mounting rubber	1		
8	CBC 7190	Hose	1		
9	EBC 4677	Evaporative loss flange	NLA		Use JLM21258.
9	JLM 21258	Evaporative loss flange-kit	1		
10	CBC 9223	Sealing ring	NLA		Use EBC8836.
10	EBC 8836	Sealing ring-plastic flange	1		
11	CBC 7804	Lock ring	1		
12	CBC 2403	Fuel tank seal	1		
13	DBC 6513	Fuel tank sender unit	NLA		Use DBC6936.
13	DBC 6936	Fuel tank sender unit	1		
14	ARA 1501 J	Lock ring	1		
15	ARA 1502 J	Sealing ring	1		
16	CAC 5692	Magnetic drain plug	1		
17	AGU 1285	Drain plug washer	1		
18	DBC 6139	Fuel pump protection module	1		
19	UKC 6683 J	Tie strap-15.75"	1		

CHANGE POINTS:
(1) From (V) 629286


FUEL TANK-FROM (V)629286

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 10094 1	FUEL TANK-ASSEMBLY-UNLEADED FUEL	NLA		Use NMB5908DG1 qty 1 with
					DBC12115 qty 1 with EBC10134
					qty 1 with EBC10135 qty 1 with
					JHC200301 qty 1
					Except Japan
1	EBC 10095 1	FUEL TANK-ASSEMBLY-LEADED FUEL	NLA		Use NMB5908CF1 qty 1 with
					DBC12115 qty 1 with EBC10134
					qty 1 with EBC10135 qty 1 with
					JHC200301 qty 1.
					Japan

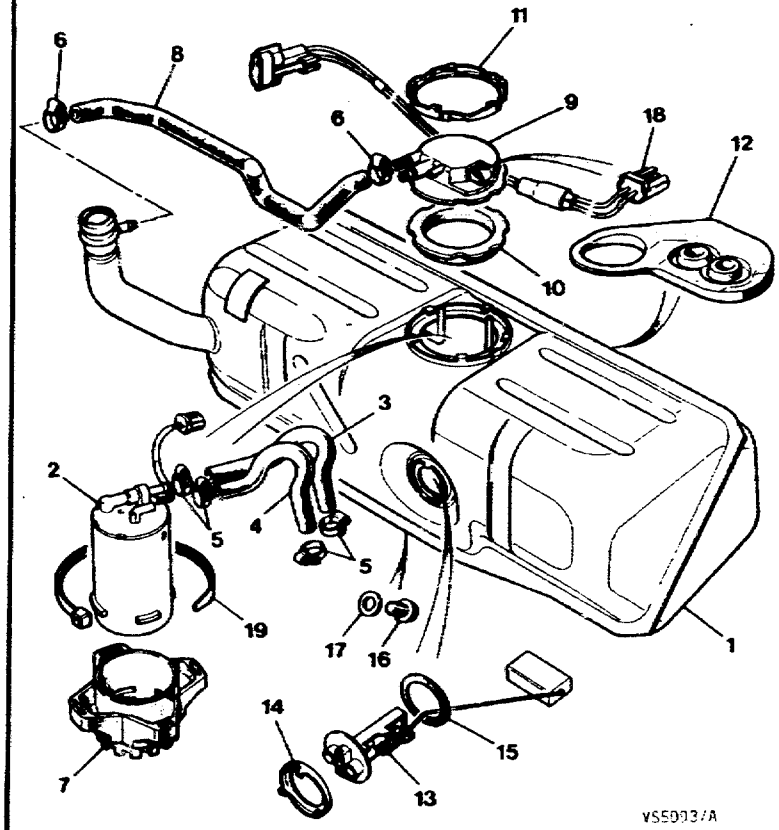


FUEL TANK-FROM (V)629286

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	NMB 5908DG 1	FUEL TANK-ASSEMBLY-UNLEADED FUEL	1		Except Japan
1	NMB 5908CF 1	FUEL TANK-ASSEMBLY-LEADED FUEL	1		Japan

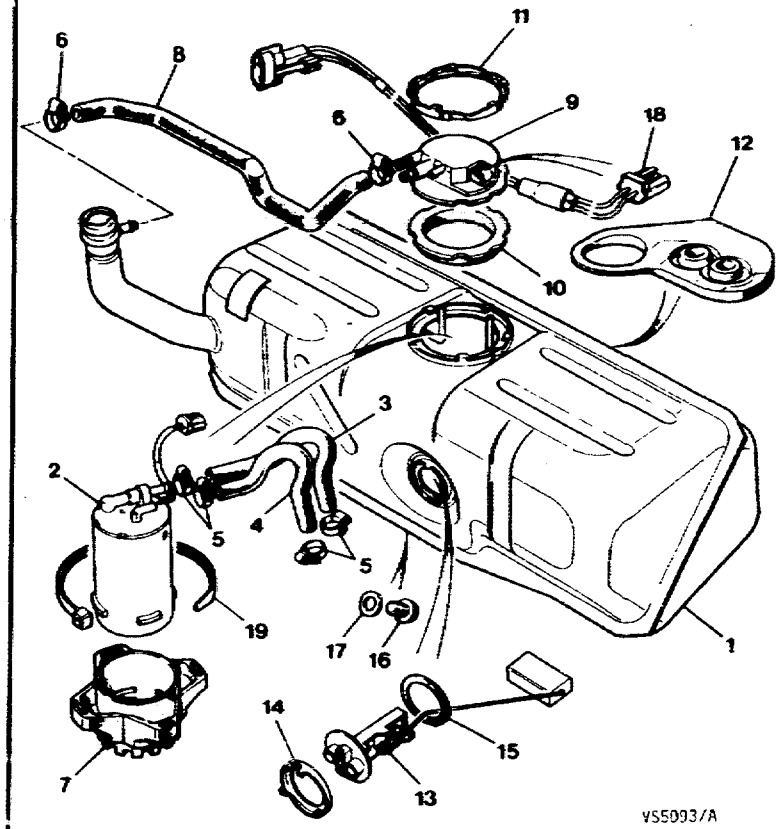


INJECTOR FUEL RAIL-3.2/4.0 LITRE

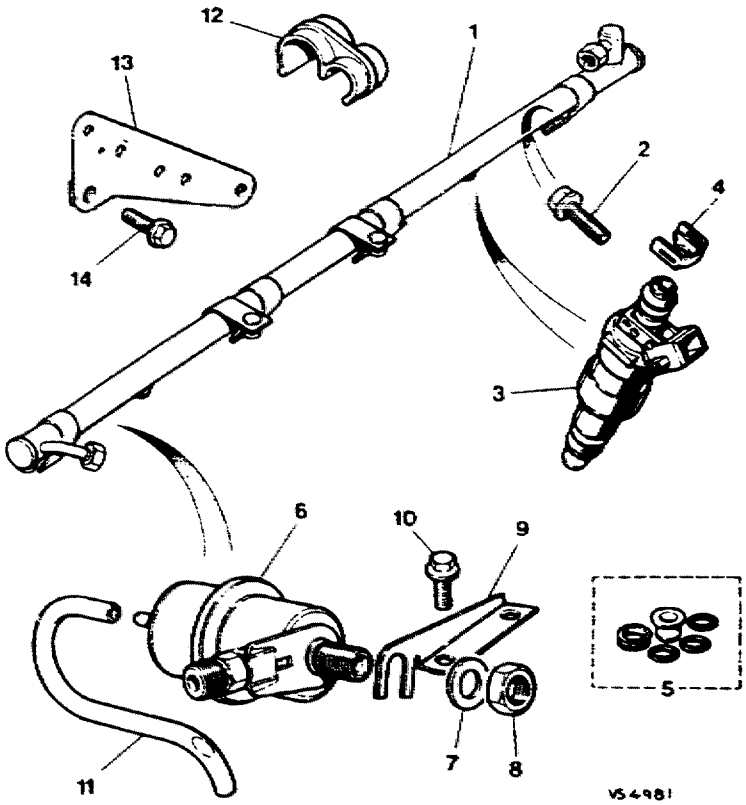

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	79	Fuel rail	1		3.2 Litre
1	EBC	3679	Fuel rail	1		4.0 Litre
2	FS	106141 J	Flanged head screw	4		
3	EAC	4867	Fuel injector	6		3.2 Litre
3	EAC	4866	Fuel injector	6		4.0 Litre
4	EAC	4579	Clip	6		
5	EAC	5901	Injector O-ring kit	6		3.2 Litre
5	EAC	5901	Injector O-ring kit	6		4.0 Litre
6	EBC	2606	Fuel pressure regulator-inlet	1		3.2 Litre
6	EBC	2606	Fuel pressure regulator-inlet	1		4.0 Litre
7	WB	114001 J	Washer	1		
8	AGU	1329 J	Nut	1		
9	EAC	6278	Mounting bracket	1		
10	FS	106141 J	Flanged head screw	2		
11	EAC	8022 30	Breather hose-63"	1		
12	AGU	2096 J	Pipe clip	2	(1)	
12	EBC	4469	Pipe clip	2	(2)	
13	EBC	1905	Fuel hose bracket	1		
14	FS	106101 J	Setscrew	2		

CHANGE POINTS
(1) To (V) 629285
(2) From (V) 629286

SPEED CONTROL ACTUATOR

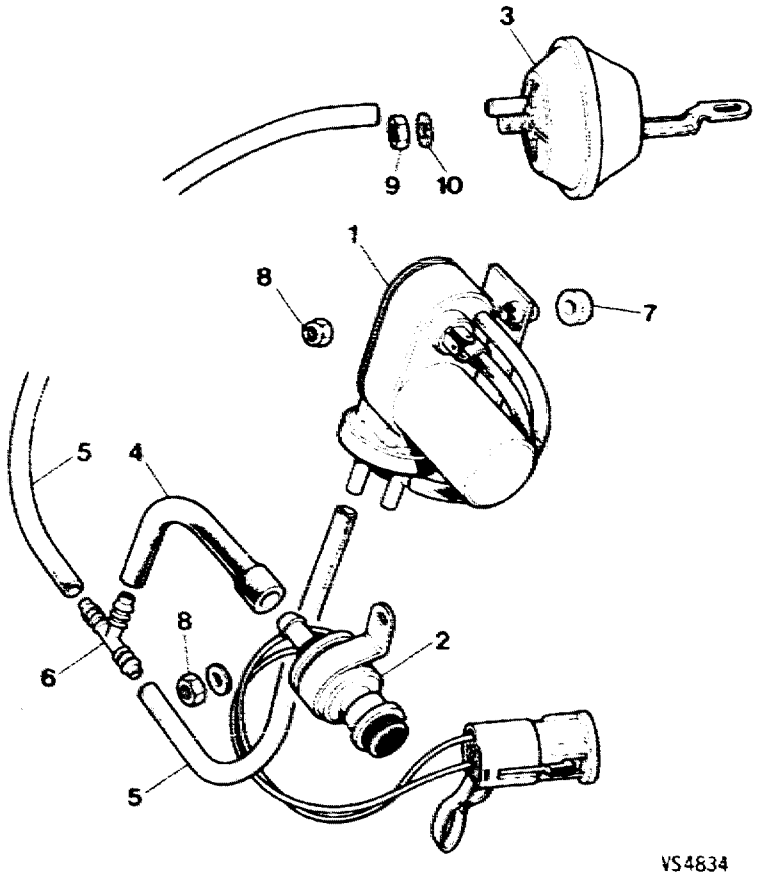

VS4834

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	3722	Speed control actuator pump	1		
2	DBC	4293	Dump valve	NLA	(1)	Use DBC5667
2	DBC	5667	Dump valve	1	(2)	
2	DAC	7237	Dump valve	1	(3)	
3	DBC	2641	Speed control actuator	1		
	DBC	1973	Shorting socket - 2 way	1		
4	DBC	1153	Vacuum hose	1		
5	DBC	1168 1	Vacuum hose-36"	NLA		Use JLM21587 qty 1 For mounting bracket DBC11681 use JLM21587. For vacuum hose DBC1168_1 use JLM21588 or JLM21588 qty 1 For mounting bracket DBC11681 use JLM21587. For vacuum hose DBC1168_1 use JLM21588
6	DBC	1167	T-piece	1		
7	C	33826	Vacuum pump spacer	3		
8	NV	105041 J	Self locking nut	5		
9	NH	108041 J	Flanged nut -M8	NLA		Use FN108041J.
9	FN	108041 J	Flanged nut -M8	1		
10	WL	600051 J	Lock washer	1		

CHANGE POINTS

(1) To (V) 615773
(2) From (V) 615774 To (V) 629285
(3) From (V) 629286

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

EXPANSION TANK ..... 1. N 02
HOSES AND PIPES-COOLING SYSTEM ..... 1. N 09
RADIATOR AND HOSES ..... 1. N 11
RADIATOR FAN AND FAN MOTORS ..... 1. N 06
WATER PUMP ..... 1. N 15
WATER RAIL AND THERMOSTAT ..... 1. N 12
ATMOSPHERIC RECOVERY BOTTLE ..... 1. N 02
COOLING FAN AND DRIVE UNIT ..... 1. N 06
ELECTRIC FAN AND MOTOR ..... 1. N 08
RADIATOR FAN COWL ..... 1. N 07
RADIATOR HEADER TANK ASSEMBLY-UP TO ..... 1. N 03
RADIATOR HEADER TANK ASSEMBLY- ..... 1. N 04
RADIATOR HEADER TANK ASSEMBLY- ..... 1. N 05
THERMOSTAT AND BYPASS HOSE-2.9 ..... 1. N 12
THERMOSTAT AND BYPASS HOSE-3.2/4.0 ..... 1. N 13
THERMOSTAT AND BYPASS HOSE-3.6 ..... 1. N 14
Temperature transmitter ..... 1. N 12
Temperature transmitter ..... 1. N 14
WATER PUMP ASSEMBLY-2.9 LITRE ..... 1. N 15
WATER PUMP ASSEMBLY-3.2/4.0 LITRE ..... 1. N 16
WATER PUMP ASSEMBLY-3.6 LITRE ..... 1. N 17
WATER RAIL AND HEATER HOSE-2.9 LITRE ..... 1. N 09
WATER RAIL AND HEATER RETURN HOSE- ..... 1. N 10


ATMOSPHERIC RECOVERY BOTTLE

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	6840	ATMOSPHERIC RECOVERY BOTTLE	1		
2	AGU	1429	• Edge nut-M6	NLA		
	CAC	8772	Hose clip	1		
3	SH	106251 J	Setscrew	1		
4	WJ	600041 J	Plain washer-25mm	1		
5	WL	106001 J	Plain washer-M6	1		

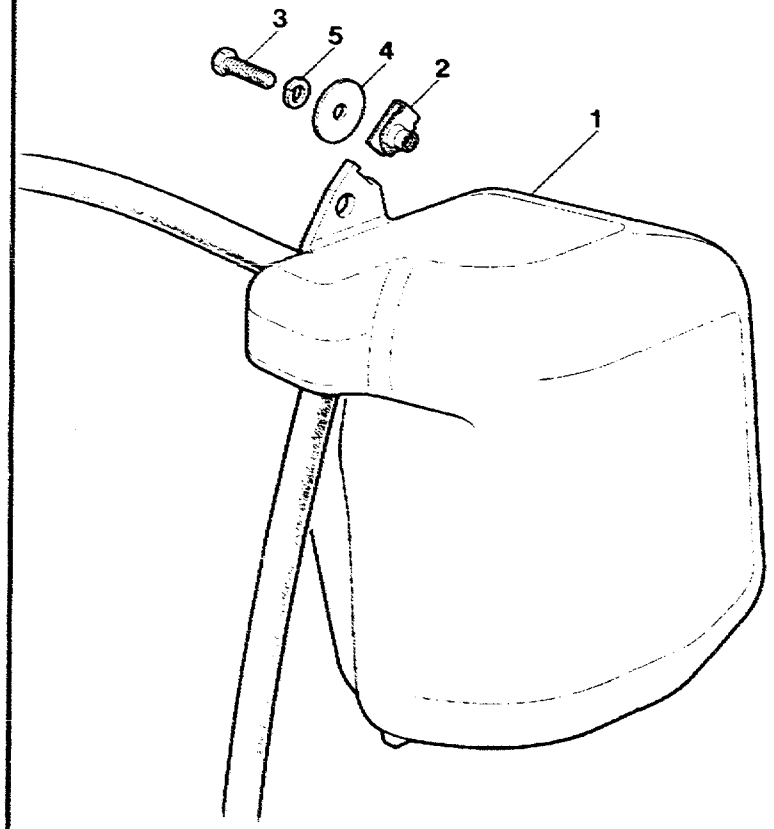

VS4672

RADIATOR HEADER TANK ASSEMBLY-1990MY

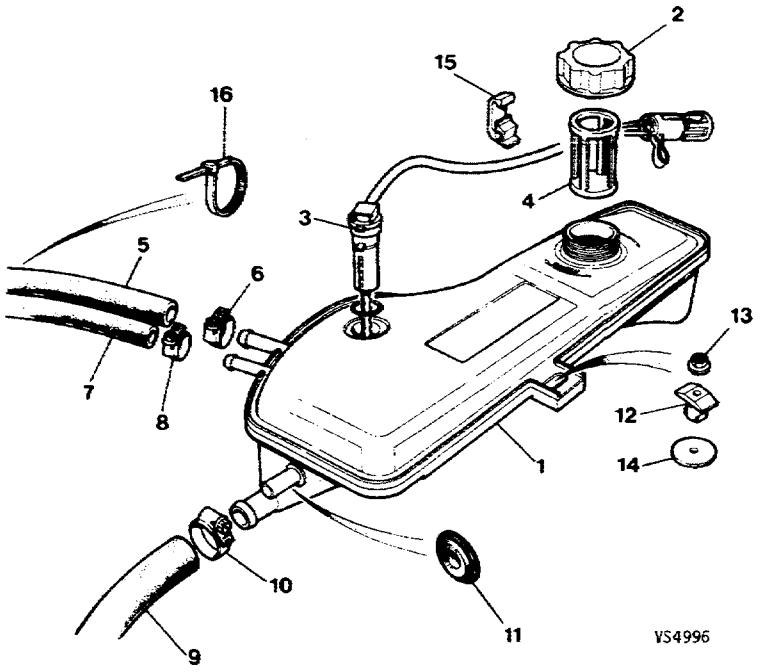


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 1510	Header tank	1	(1)	With warning label
2	CBC 7901	Pressure filler cap	NLA	(2)	Use MMB4440AA.
2	MMB 4440AA	Pressure filler cap-1.2 bar	NLA	(2)	Use MNA4440AA.
2	MNA 4440AA	Pressure filler cap	1	(2)	
3	DBC 5578	Low level sensor	1	(3)	
4	CBC 7902	Fill level indicator gauge	1		
5	CAC 45722	Bleed hose	1		
6	JHC 200901	Worm drive hose clip	1		
7	C 3617519	Hose	1		
8	EAC 32152	Worm drive hose clip	NLA		Use JHC200101.
8	JHC 200101	Worm drive hose clip-steel	1		
9	CBC 8772	Hose	1		Except USA
9	CBC 8771	Hose	1		USA
10	EAC 32157	Hose clip	NLA		Use JHC200501.
10	JHC 200501	Hose clip-worm drive	1		
11	CBC 8261	Grommet-front mounting	1		Front mounting
11	CBC 8262	Grommet	1		Rear mounting
12	CBC 7904	Adjustable bush	1		
13	FN 106041J	Flange nut-M6	1		
14	CBC 7905	Washer	NLA		
15	CBC 7906	Harness clip	1		
16	ADU 9028	Tie strap-7.75" long	1		

CHANGE POINTS:

(1) From (V) 594576 To (V) 629385
(2) From (V) 594576 To (V) 629285
(3) From (V) 594576

RADIATOR HEADER TANK ASSEMBLY-1991MY

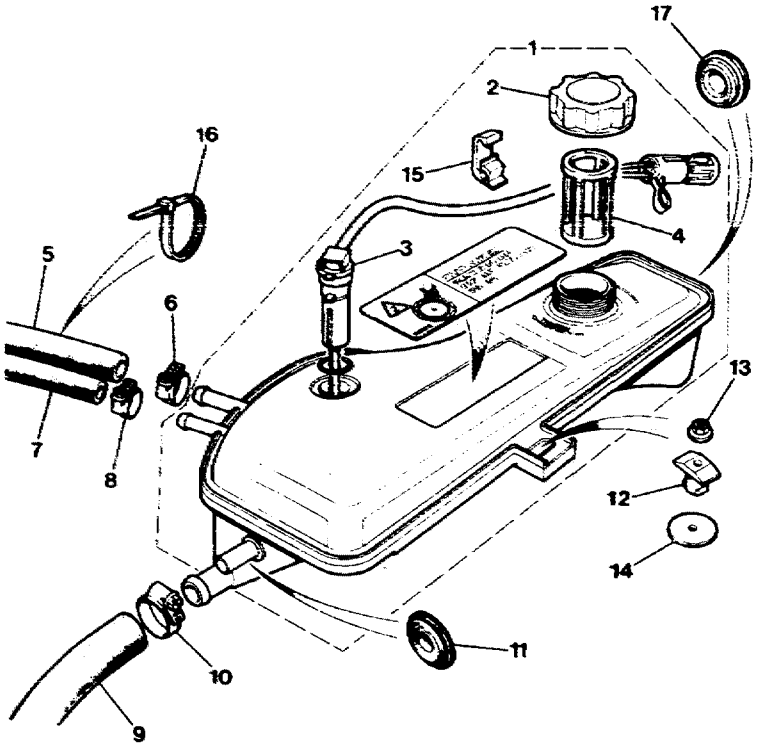

VS4996/A


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CCC 4914	HEADER TANK-ASSEMBLY	NLA	(1)	Use CCC4783.
1	CCC 7338	HEADER TANK-ASSEMBLY	NLA	(1)	Use MMB4400AA.
1	MMB 4400AA	HEADER TANK-ASSEMBLY	1	(1)	
	CBC 8519	• Coolant label	1		
2	CBC 7901	• Pressure filler cap	NLA		Use MMB4440AA.
					Part of CCC4914.
3	DBC 5546	• Low level sensor	1		
4	CBC 7902	• Fill level indicator gauge	1		
	CBC 5929	• Anti freeze label	1		Part of CCC7338, MMB4400AA.
2	MMB 4440AA	• Pressure filler cap-1.2 bar	NLA		Use MNA4440AA.
					Part of CCC7338, MMB4400AA.
15	CBC 7906	• Harness clip	3		Part of CCC7338, MMB4400AA.
1	CCC 4783	Header tank-assembly	NLA	(1)	Use CCC7338.
3	DBC 5578	Low level sensor	1	(2)	
2	MMB 4440AA	Pressure filler cap-1.2 bar	NLA		Use MNA4440AA.
2	MNA 4440AA	Pressure filler cap			
5	CAC 45722	Bleed hose	1		
6	JHC 200901	Worm drive hose clip	1		
7	C 3617519	Hose	1		
8	EAC 32152	Worm drive hose clip	NLA		Use JHC200101.
8	JHC 200101	Worm drive hose clip-steel	1		
9	CBC 8772	Hose	1		Except USA
9	CBC 8771	Hose	1		USA
10	EAC 32157	Hose clip	NLA		Use JHC200501.
10	JHC 200501	Hose clip-worm drive	1		
11	CBC 8261	Grommet-front mounting	1		
12	CBC 7904	Adjustable bush	1		
13	FN 106041J	Flange nut-M6	1		
14	CBC 7905	Washer	NLA		
16	ADU 9028	Tie strap-7.75" long	1		
17	CBC 8262	Grommet	1		

CHANGE POINTS:

(1) From (V) 629286

(2) From (V) 629286 To (V) 629385

COOLING FAN AND DRIVE UNIT

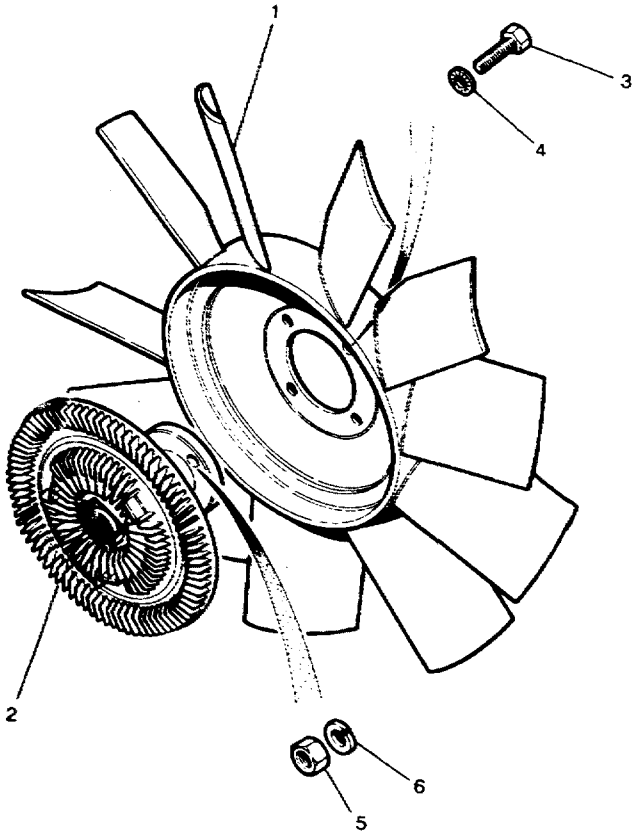

ME9500


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 3263	Cooling fan-assembly	NLA		Use EAC9367.
					3.6 Litre (XJ40)
1	EAC 3263	Cooling fan-assembly	NLA	(1)	Use EAC9367.
					2.9 Litre
1	EAC 3263	Cooling fan-assembly	NLA	(2)	Use EAC9367.
					4.0 Litre
1	EAC 9367	Cooling fan-assembly	1		3.2 Litre
1	EAC 9367	Cooling fan-assembly	1	(3)	2.9 Litre
1	EAC 9367	Cooling fan-assembly	1	(4)	4.0 Litre
2	EAC 8948	Torquatrol unit	NLA		Use NBC2215AA.
2	NBC 2215AA	Torquatrol unit	1		
3	SH 505051 J	Setscrew	4		
4	C 300752	Serrated washer-metric fixing	4		
5	NH 108041 J	Flanged nut -M8	NLA		Use FN108041J.
5	FN 108041 J	Flanged nut -M8	4		
6	WF 108001 J	Washer	4		

CHANGE POINTS:

(1) To (E) 112473
(2) To (E) 109641
(3) From (E) 112474
(4) From (E) 109642

RADIATOR FAN COWL


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	6338	Fan cowl-assembly	1		Except Canada and USA
1	CBC	5606	Fan cowl-assembly	1		Canada;USA
2	CAC	7975	Grommet	2		
3	CBC	2775	Locator	2		
4	CBC	1707	Spring clip	2		
	SE	106161 J	Screw-6 x 16mm	2		
	WA	106041 J	Plain washer-0.25" i/d	2		

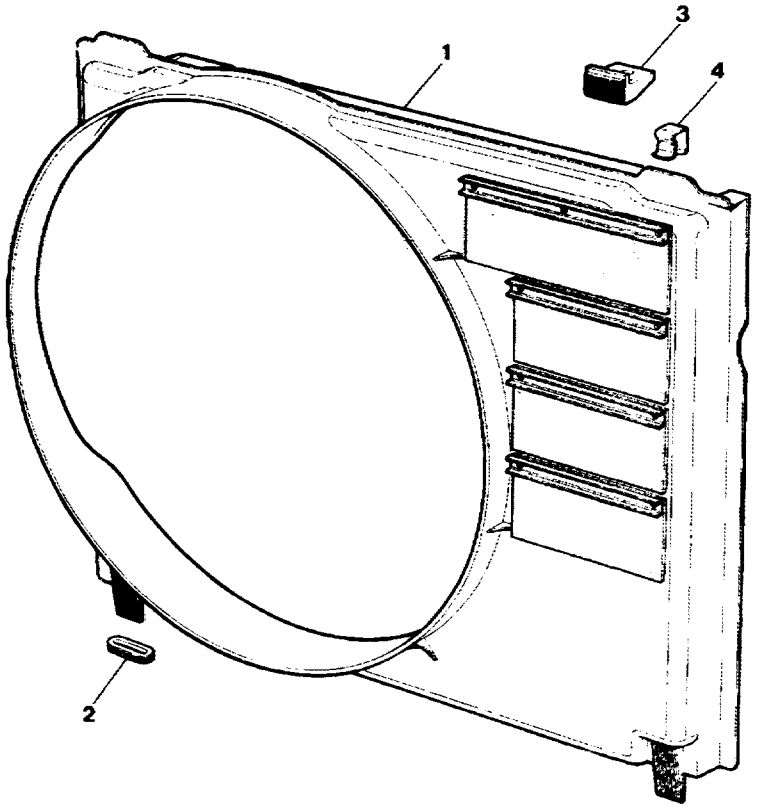

VS4697/A

ELECTRIC FAN AND MOTOR


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 9702	Cooling fan motor and cowl-assembly	1	(1)	
1	CBC 8647	Cooling fan motor and cowl-assembly	1	(2)	
2	CBC 1448	Grommet-lower	2		
3	C 29875	Distance tube	2		
4	GL 106351 J	Screw	2		
5	WJ 106001 J	Plain washer-M6	3		
6	WL 106001 J	Plain washer-M6	2		
7	CAC 6426	Grommet	NLA		Use CBC8262.
7	CBC 8262	Grommet	1		

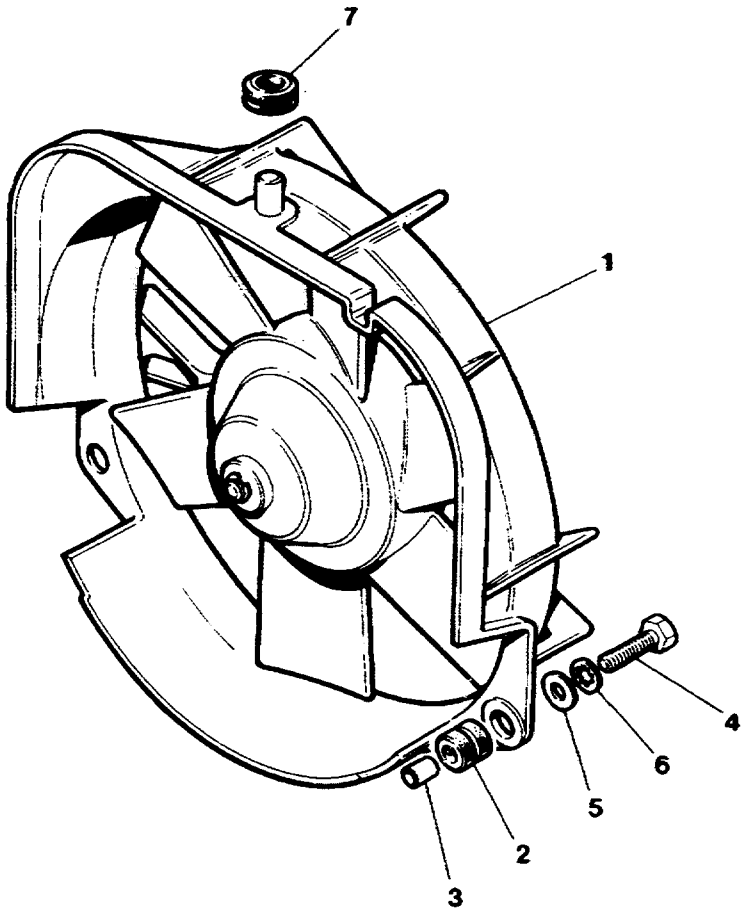

VS4687/A

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

WATER RAIL AND HEATER RETURN HOSE-3.2/3.6/4.0 LITRE

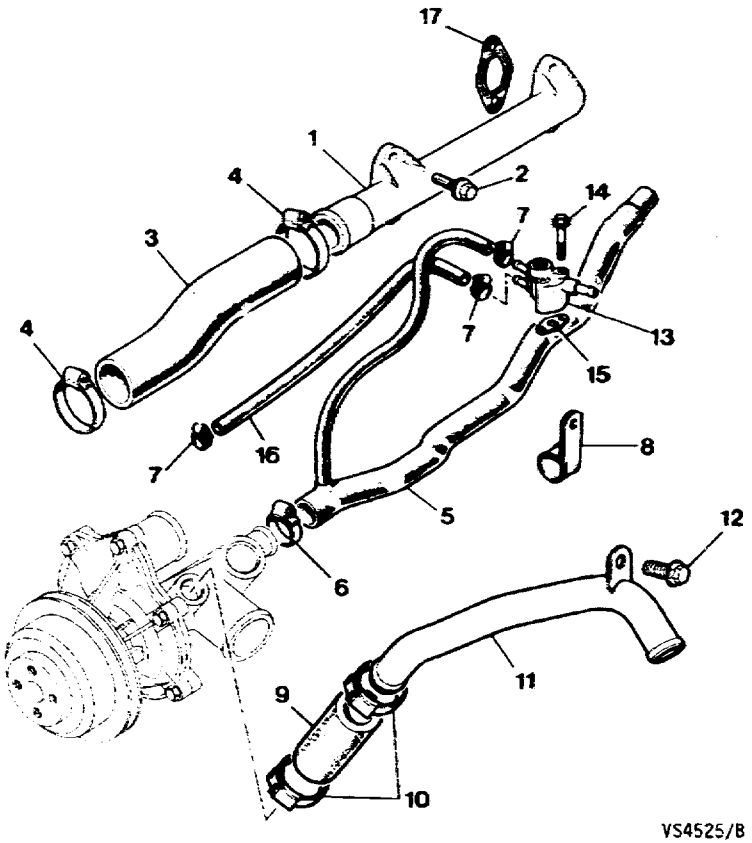


VS4525/B

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 4644	Water rail	NLA		Use EBC10342.
1	EBC 10342	Water rail	1		3.2 Litre
					3.6 Litre (XJ40)
					4.0 Litre
2	FS 108251J	Washer faced setscrew-M8 x 25mm	4		
3	EAC 3454	Hose	1		
4	EAC 321512	Worm drive hose clip	NLA		Use JHC201001.
4	JHC 201001	Worm drive hose clip	2		
5	EAC 8347	Heater return hose	NLA		Use EBC3707 qty 1 with
					CP106251J qty 1.
					3.6 Litre (XJ40)
5	EBC 2802	Heater return hose	NLA	(1)	Use EBC3707.
					4.0 Litre
5	EBC 3707	Heater return hose	1		3.2 Litre
5	EBC 3707	Heater return hose	1	(2)	4.0 [illegible]
6	EAC 32158	Worm drive hose clip	NLA		Use [illegible]200601.
6	JHC 200601	Worm drive hose clip	1		
7	EAC 32151	Hose clip	NLA		Use JHC201901.
7	JHC 201901	Hose clip	3		
8	EAC 7993	Hose support clip	1		
	CP 106251J	P-clip	1		
9	EAC 7343	Water hose	1		Air injection
10	EAC 32158	Worm drive hose clip	NLA		Use JHC200601.
					Air injection
10	JHC 200601	Worm drive hose clip	2		Air injection
11	EAC 7339	Water pipe	1		Air injection
12	FS 108141J	Setscrew	1		Air injection
13	EAC 6106	Restrictor	NLA	(3)	Use EAC7019.
					3.6 Litre (XJ40)
13	EAC 7019	Restrictor	1	(4)	3.6 Litre (XJ40)
13	EAC 7019	Restrictor	1	(5)	4.0 Litre
13	EBC 4614	Restrictor	1		3.2 Litre
13	EBC 4614	Restrictor	1	(6)	4.0 Litre
14	FB 106121J	Bolt	2		
15	EAC 5513	Water heater restrictor gasket	1	(7)	3.6 Litre (XJ40)
15	EAC 9824	Water heater restrictor gasket	1	(8)	3.6 Litre (XJ40)
15	EAC 9824	Water heater restrictor gasket	1		4.0 Litre
15	EAC 9824	Water heater restrictor gasket	1		3.2 Litre

CHANGE POINTS:

(1) To (E) 126904
(2) From (E) 126905
(3) To (E) 135612
(4) From (E) 135613
(5) To (E) 124346
(6) From (E) 124347
(7) To (E) 180210
(8) From (E) 180211


RADIATOR AND HOSES

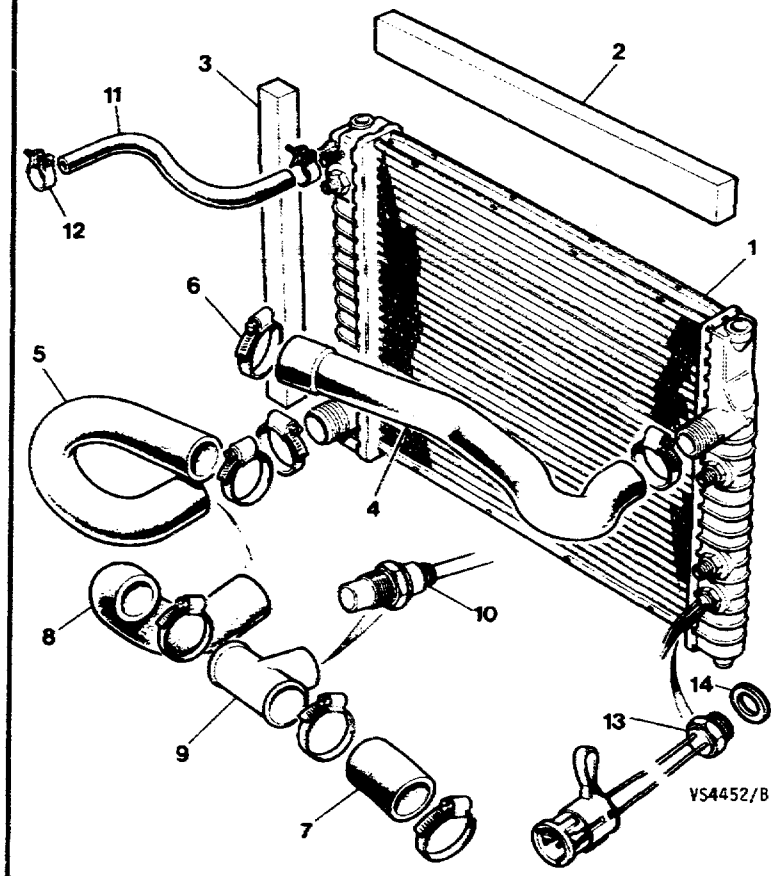

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 1470	Radiator-heater	1		Manual
1	CBC 1471	Radiator-heater	1		Automatic
1	CBC 1472	Radiator-air conditioning	1	(1)	Manual
1	CBC 1473	Radiator-air conditioning	1	(1)	Automatic
1	CBC 8644	Radiator-air conditioning	1	(2)	Manual
1	CBC 8645	RADIATOR-AIR CONDITIONING	1	(2)	Automatic
	JLM 1340	• Drain plug	1		
	JLM 1499	• Drain plug O-ring	1		
2	CAC 75226	Seal-upper and lower	2		
3	CAC 75225	Side seal	2		
4	CBC 1582	Radiator top hose-top	NLA		Use MNA4500BA.
4	MNA 4500BA	Radiator top hose-top	1		
5	CAC 9142	Bottom hose	NLA	(3)	Use CBC6440
					Except water heater
5	CBC 6440	Bottom hose	1	(4)	Except water heater
6	JHC 200901	Worm drive hose clip	4		
7	CBC 4906	Bottom hose-upper	NLA	(3)	Use CBC6441.
					Water heater
7	CBC 6441	Bottom hose	1	(4)	Water heater
6	JHC 200901	Worm drive hose clip	4		Water heater
8	CBC 4907	Bottom hose-lower	1		Water heater
9	EAC 5038	Water pipe	1		
10	C 30381	Water heater -240v-assembly	1		
10	EAC 9587	Water heater -110v-assembly-less cable	1		Canada;USA
	EAC 9588	Heater cable -110v-assembly	1		Canada;USA
11	C 3617519	Hose	1		
12	JHC 200101	Worm drive hose clip-steel	2		
	CAC 45723	Bleed hose	NLA		Use CAC45722.
					Thermostat vent to header tank
	CAC 45722	Bleed hose	1		Thermostat vent to header tank
12	EAC 32152	Worm drive hose clip	NLA		Use JHC200101.
12	JHC 200101	Worm drive hose clip-steel	2		
	CAC 8092	Water hose	2		Water pump to header
					tank;except Canada and USA
	EAC 32157	Hose clip	NLA		Use JHC200501.
	JHC 200501	Hose clip-worm drive	2		
13	DBC 2145	Thermostat switch	1	(1)	Air conditioning
14	CAC 9294	Thermal switch gasket	1		Air conditioning
	CAC 9293	Blanking plug	1		Heater
	DBC 5564	Thermal switch	1		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 507393
(4) From (V) 507394

THERMOSTAT AND BYPASS HOSE-3.2/4.0 LITRE

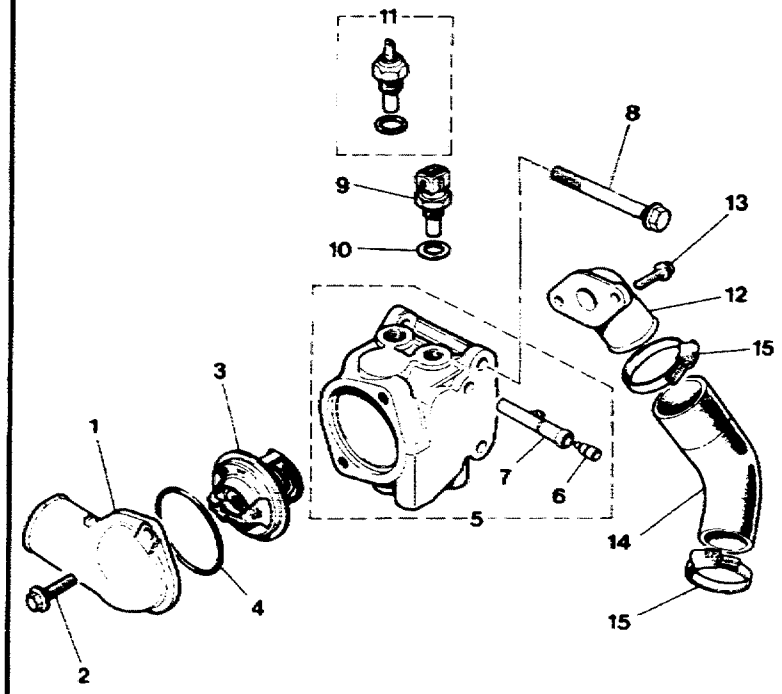


VS4951/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 8209	Thermostat cover	NLA		Use EBC10345
1	EBC 10345	Thermostat cover	1		3.2 Litre
1	EBC 10345	Thermostat cover	1		4.0 Litre
2	FS 108201 J	Washer faced setscrew-M8 x 20mm	2		
3	JLM 322	Thermostat	NLA	(1)	Use EBC3621 3.2 Litre
3	JLM 322	Thermostat	NLA	(5)	Use EBC3621 4.0 Litre
3	EBC 3621	Thermostat	1	(2)	3.2 Litre
3	EBC 3621	Thermostat	1	(6)	4.0 Litre
4	EAC 8999	Thermostat housing O-ring	1		
5	EAC 6140	THERMOSTAT HOUSING-ASSEMBLY-O-RING SEALING	1		3.2 Litre
5	EAC 6140	THERMOSTAT HOUSING-ASSEMBLY-O-RING SEALING	1		4.0 Litre
6	EAC 4126	• Water valve	1		
7	EAC 6142	• T-piece	1		
8	FB 108201 J	Washer faced bolt-M8 x 100mm-flanged head	2		
9	EAC 3927	Temperature sensor	NLA	(3)	Use DBC3728 3.2 Litre
9	EAC 3927	Temperature sensor	NLA	(3)	Use DBC3728 4.0 Litre
9	DBC 3728	Temperature sensor	1	(4)	3.2 Litre
9	DBC 3728	Temperature sensor	1	(4)	4.0 Litre
10	C 229623	Sealing washer	1		
11	DAC 2583	Temperature transmitter	1		
12	EAC 6813	Bypass elbow	NLA		Use EBC10343
12	EBC 10343	Bypass elbow	1		
13	FS 108201 J	Washer faced setscrew-M8 x 20mm	2		
14	EAC 3803	Hose	1		
15	EAC 321510	Hose clip	NLA		Use JHC200801
15	JHC 200801	Hose clip	2		

CHANGE POINTS:

(1) To (E) 104885
(2) From (E) 104886
(3) To (V) 629285
(4) From (V) 629286
(5) To (E) 149121
(6) From (E) 149122

WATER PUMP ASSEMBLY-3.2/4.0 LITRE

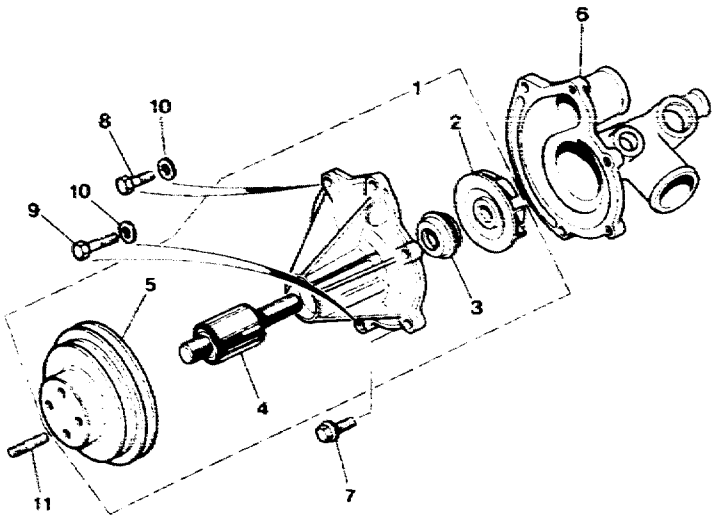

VS4948

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9213	WATER PUMP-ASSEMBLY	NLA	(1)	Use EBC4437 4.0 Litre
1	EBC	4437	WATER PUMP-ASSEMBLY	NLA	(1)	Use EBC8550 4.0 Litre
1	EBC	8550	WATER PUMP-ASSEMBLY	1		3.2 Litre
1	EBC	8550	WATER PUMP-ASSEMBLY	1	(2)	4.0 Litre
2	EAC	7220	• Water pump impeller	1		
3	EBC	3131	• Water pump seal	1		
4	EAC	6305	• Water pump bearing	1		
5	EAC	6651	• Pulley-4 groove	1		
6	EBC	3067	Water pump body	NLA	(3)	Use EBC8552 3.2 Litre
6	EBC	3067	Water pump body	NLA	(4)	Use EBC8552 4.0 Litre
6	EBC	8552	Water pump body	NLA	(5)	3.2 Litre
6	EBC	8552	Water pump body	NLA	(6)	4.0 Litre
7	FS	108301J	Setscrew	5		
8	BH	108101J	Bolt -pump to engine	1		
9	BH	108141J	Bolt -pump to engine	2		
10	WB	108051J	Washer	3		
11	TE	108031J	Stud	4		
	EBC	9220	Water pump gasket	1		

CHANGE POINTS

(1) To (E) 132994
(2) From (E) 132995
(3) To (E) 102848
(4) To (E) 143478
(5) From (E) 102849
(6) From (E) 143479

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

EXHAUST SYSTEM ..... 2 C 02
HEATSHIELDS ..... 2 D 03

EXHAUST HEATSHIELDS ..... 2 D 03
EXHAUST PIPE-FRONT-2.9/3.6 LITRE-NON ..... 2 C 07
EXHAUST PIPE-FRONT-3.2/4.0 LITRE-JAPAN ..... 2 C 11
EXHAUST PIPE-FRONT-3.2/4.0 LITRE-NON ..... 2 C 08
EXHAUST PIPE-FRONT-3.6 LITRE-JAPAN ..... 2 C 09
EXHAUST PIPE-REAR-2.9/3.6 LITRE-NON ..... 2 C 12
EXHAUST PIPE-REAR-2.9/3.6 LITRE- ..... 2 C 13
EXHAUST PIPE-REAR-2.9/4.0 LITRE- ..... 2 C 16
EXHAUST PIPE-REAR-3.2/4.0 LITRE-ALL ..... 2 C 15
EXHAUST PIPE-REAR-4.0 LITRE-JAPAN ..... 2 C 17
EXHAUST PIPE-REAR-JAPAN ..... 2 C 18
EXHAUST PIPE/CATALYST-FRONT-2.9/3.6 ..... 2 C 03
EXHAUST PIPE/CATALYST-FRONT-3.2/4.0 ..... 2 C 06
EXHAUST PIPE/CATALYST-FRONT- ..... 2 C 02
EXHAUST PIPE CATALYST-FRONT-2.9 ..... 2 C 05

EXHAUST PIPE/CATALYST-FRONT-AUSTRALIA/CANADA/USA-UP TO (V)594575

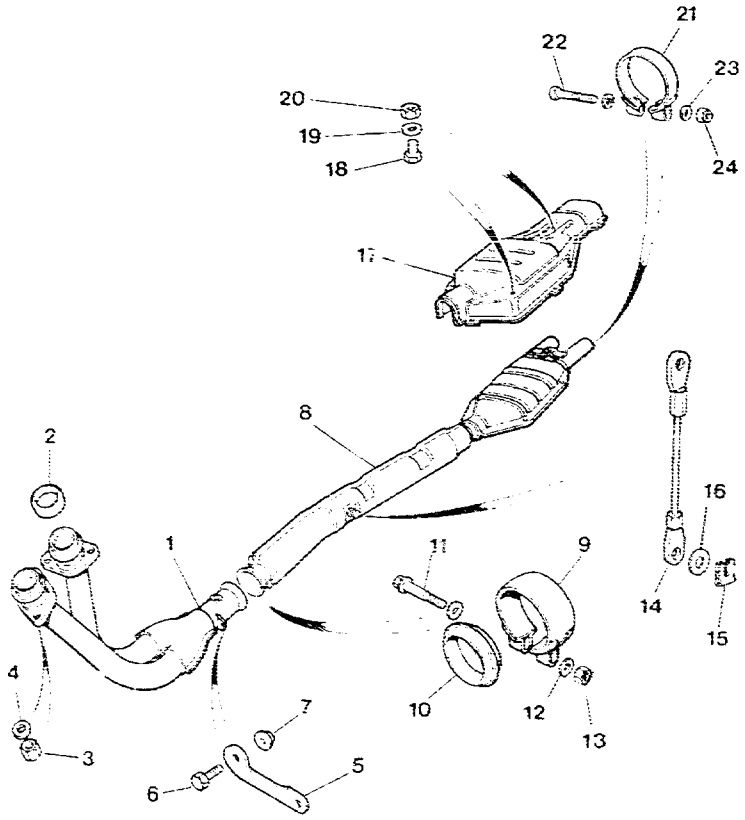


VS.463E

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 9999	Downpipe	1	(1)	Canada
1	CAC 9999	Downpipe	1		Australia
2	EBC 9388	Manifold gasket-manifold to downpipe	2		
3	C 179161	Locking nut	NLA		Use JZN100010
3	JZN 100010	Locking nut	NLA		Use JZN100024
3	JZN 100024	Locking nut-copper	4		
4	FW 106TJ	Plain washer	4		
5	CAC 8535	Exhaust downpipe stay	1		
6	SH 106121J	Setscrew-M6 x 12mm	1		
7	FN 106041J	Flange nut-M6	2		
8	CBC 8113	Intermediate exhaust pipe/catalyst	1		Canada
8	CBC 8113	Intermediate exhaust pipe/catalyst	1	(2)	USA
9	CAC 4073	Pipe clamp-spherical	1		
10	CAC 4336	Olive-spherical	1		
11	FB 10814J	Washer faced bolt	1		
12	FW 105T	Plain washer-0.25" i/d	2		
13	JZN 100025	Locking nut-M8-copper plated	1		
14	CBC 1282	Exhaust tie cable	1		
15	C 2732832	Safety clip	NLA		
16	WD 108051J	Washer	1		
17	CBC 6518	Catalyst heatshield	NLA		e CBC6200
17	CBC 6200	Catalyst heatshield	1		
18	FS 106121J	Setscrew-M6	3		
19	WA 106041J	Plain washer-0.25" i/d	3		
20	NV 106041J	Nut-M6-upper	3		
21	CAC 38014	Exhaust pipe clamp	NLA		Use EBC92571
21	EBC 92571	Exhaust pipe clamp	2		
22	CAC 3802	Bolt-0.25" unf	2		
23	FW 104TJ	Plain washer	NLA		Use WA106041J
23	WA 106041J	Plain washer-0.25" i/d	4		
24	NV 604041J	Locknut-0.25" unf	2		
	CBC 2520	Mounting bracket	1		
	CBC 1700	Exhaust tie stud	NLA		

CHANGE POINTS
(1) To (D) end May 87
(2) From (D) June 87 on

EXHAUST PIPE/CATALYST-FRONT-3.2/4.0 LITRE

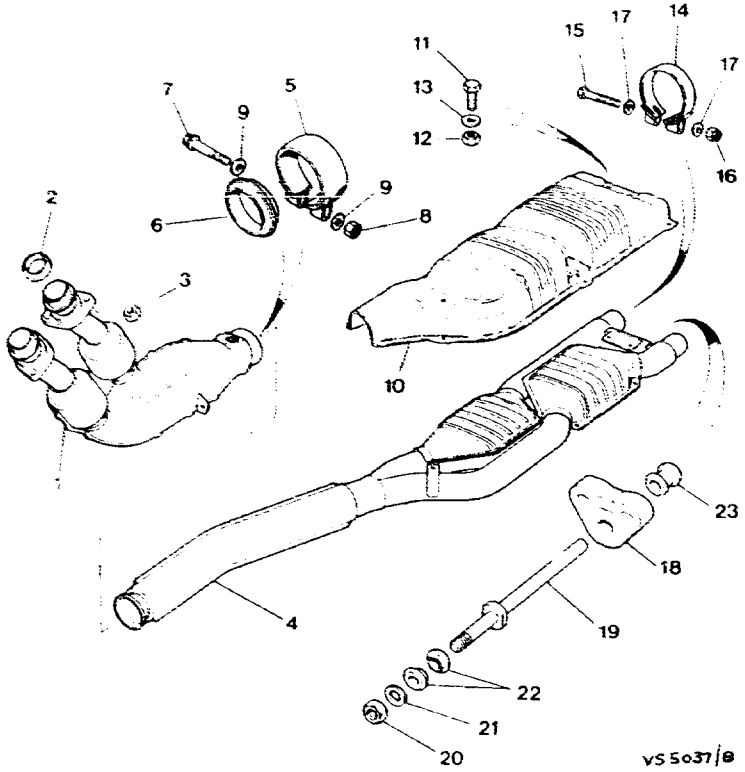


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8767	Exhaust downpipe and catalyst-spherical	NLA		Use JLM20704.
					Note (1)
1	JLM 20704	Exhaust downpipe and catalyst-spherical	1		Note (1)
2	EBC 9388	Manifold gasket-manifold to downpipe	2		
3	C 17916 1	Locking nut	NLA		Use JZN100010.
3	JZN 100010	Locking nut	NLA		Use JZN100024.
3	JZN 100024	Locking nut-copper	4		
4	CBC 8766	Intermediate exhaust pipe-assembly-staggered catalyst	1		Note (1)
5	CAC 4073	Pipe clamp-spherical	1		
6	CAC 4336	Olive-spherical	1		
7	FB 108141 J	Washer faced bolt	1		
8	JZN 100025	Locking nut-M8-copper plated	1		
9	FW 105 TJ	Plain washer	2		
10	CBC 8438	Catalyst heatshield-under floor	NLA		Use EBC9678.
					Note (1)
10	EBC 9678	Catalyst heatshield-exhaust	1		Note (1)
11	FS 106101 J	Setscrew	3		
12	FS 106161 J	Flange head screw-M6	NLA		Use FS106165P.
12	FS 106165 P	Flange head screw	3		
13	FX 106041 J	Self locking nut-M6	3		
14	CAC 3801 4	Exhaust pipe clamp	NLA		Use EBC92571.
14	EBC 9257 1	Exhaust pipe clamp	2		
15	CAC 3802	Bolt -0.25" unf	2		
16	NV 604041 J	Locknut-0.25" unf	2		
17	FW 104 TJ	Plain washer	NLA		Use WA106041J.
17	WA 106041 J	Plain washer-0.25" i/d	2		
18	CBC 9103	Mounting rubber	1		
19	CBC 8459	Exhaust mounting	NLA	(1)	Use EBC10041.
					Note (1)
19	EBC 10041	Exhaust mounting-assembly	1	(2)	Note (1)
20	C 31075	Locknut	1		
21	FW 206 J	Plain washer	1		
22	C 44083	Collar	2		
23	CAC 2750	Bush	2		

CHANGE POINTS.
(1) To (V) 660988
(2) To (V) 660989

Remarks
(1) except Japan-1990/1991


EXHAUST PIPE-FRONT-3.2/4.0 LITRE-NON CATALYST

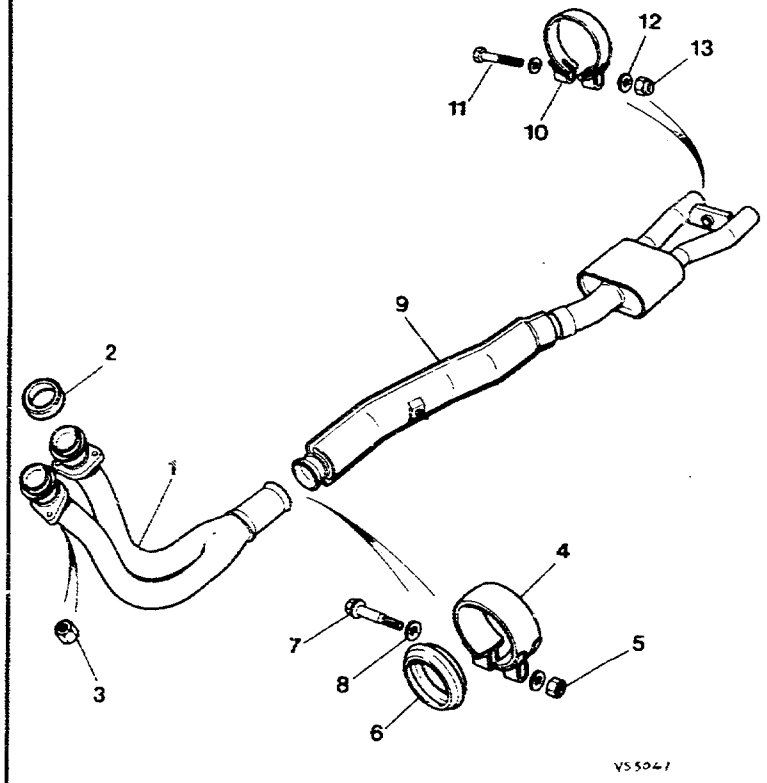

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6373	Exhaust downpipe-assembly-front-spherical joint	1	(1)	3.2 Litre;except catalyst
1	CBC 6373	Exhaust downpipe-assembly-front-spherical joint	1	(2)	4.0 Litre;except catalyst
2	EBC 9388	Manifold gasket-manifold to downpipe	2		
3	C 179161	Locking nut	NLA		Use JZN100010.
3	JZN 100010	Locking nut	NLA		Use JZN100024.
3	JZN 100024	Locking nut-copper	4		
4	CAC 4073	Pipe clamp-spherical	1		
5	ACU 6289	Locking nut-helicoil	NLA		Use JZN100025.
5	JZN 100025	Locking nut-M8-copper plated	1		
6	CAC 4336	Olive-spherical	1		
7	FB 108141J	Washer faced bolt	1		
8	FW 105T	Plain washer-0.25" i/d	2		
9	CBC 7220	Intermediate exhaust pipe/silencer	1	(1)	3.2 Litre;except catalyst
9	CBC 7220	Intermediate exhaust pipe/silencer	1	(2)	4.0 Litre;except catalyst
10	CAC 38014	Exhaust pipe clamp	NLA		Use EBC92571.
10	EBC 92571	Exhaust pipe clamp	2		
11	CAC 3802	Bolt -0.25" unf	2		
12	FW 104T	Plain washer-0.25" i/d	NLA		Use WA106041J.
12	WA 106041J	Plain washer-0.25" i/d	4		
13	NV 604041J	Locknut-0.25" unf	2		

CHANGE POINTS:
(1) From (V) 629286
(2) From (V) 594576

EXHAUST PIPE-FRONT-3.2/4.0 LITRE-JAPAN

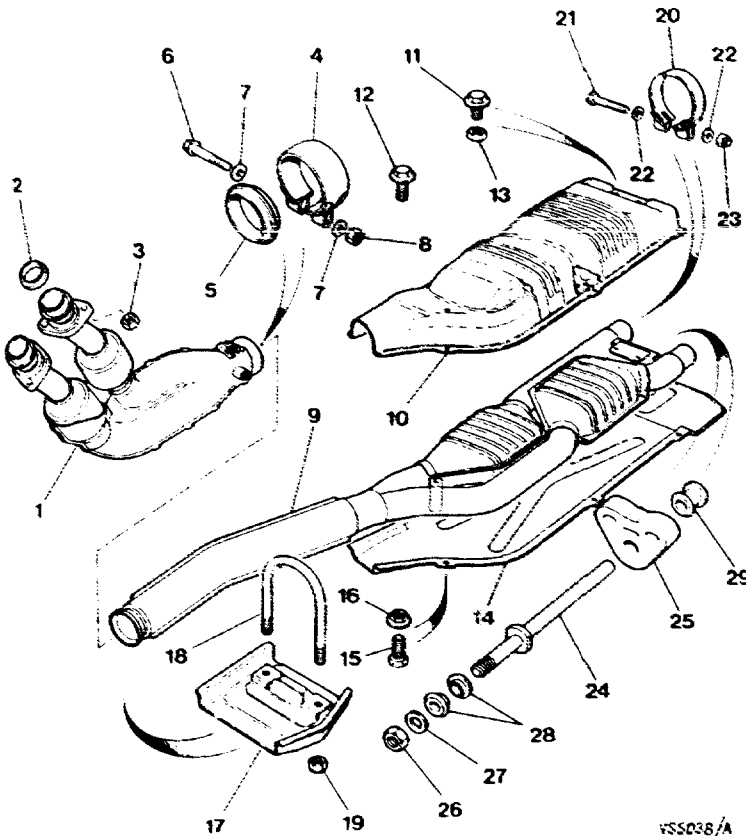

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 7317	Exhaust downpipe and catalyst-assembly	1	(1)	3.2 Litre,Japan
1	CBC 7317	Exhaust downpipe and catalyst-assembly	1	(2)	4.0 Litre,Japan
2	EBC 9388	Manifold gasket-manifold to downpipe	2		
3	C 179161	Locking nut	NLA		Use JZN100010
3	JZN 100010	Locking nut	NLA		Use JZN100024
3	JZN 100024	Locking nut-copper	4		
4	CAC 4073	Pipe clamp-spherical	1		
5	CAC 4336	Olive-spherical	1		
6	FB 108141J	Washer faced bolt	2		
7	FW 105TJ	Plain washer	2		
8	JZN 100025	Locking nut-M8-copper plated	1		
9	CBC 8766	Intermediate exhaust pipe-assembly-staggered catalyst	1	(1)	3.2 Litre,Japan
9	CBC 8766	Intermediate exhaust pipe-assembly-staggered catalyst	1	(2)	4.0 Litre,Japan
10	CBC 8438	Catalyst heatshield-under floor	NLA		Use EBC9678
10	EBC 9678	Catalyst heatshield-exhaust	1		
11	FS 106101J	Setscrew	3		
12	FS 106161J	Flange head screw-M6	NLA		Use FS106165P
12	FS 106165P	Flange head screw	4		
13	FX 106041J	Self locking nut-M6	4		
14	CBC 7826	Catalyst grass shield	1	(3)	4.0 Litre,Japan
15	SH 106121J	Setscrew-M6 x 12mm	6		
16	FN 106041J	Flange nut-M6	6		
17	CBC 8630	Heatshield spherical clamp joint	1	(3)	4.0 Litre,Japan
18	CBC 2167	U-bolt	1		
19	CBC 15251	Helicoil nut	NLA	(3)	4.0 Litre,Japan
20	CAC 38014	Exhaust pipe clamp	NLA		Use EBC92571
20	EBC 92571	Exhaust pipe clamp	2		
21	CAC 3802	Bolt -0.25" unf	2		
22	FW 104TJ	Plain washer	NLA		Use WA106041J
22	WA 106041J	Plain washer-0.25" id	4		
23	CAC 3803	Locknut	NLA		Use NV604041J
23	NV 604041J	Locknut-0.25" unf	2		
24	CBC 8459	Exhaust mounting	NLA		Use EBC10041
24	EBC 10041	Exhaust mounting-assembly	1		
25	CBC 9103	Mounting rubber	1		
26	C 31075	Locknut	1		
27	FW 206 2J	Plain washer	1		
28	C 44083	Collar	2		
29	CAC 2750	Bush	2		


CHANGE POINTS:

(1) From (V) 629286
(2) From (V) 594576
(3) To (V) 629285

EXHAUST SYSTEM AND COMPONENTS

EXHAUST SYSTEM

EXHAUST PIPE-REAR-3.2/4.0 LITRE-ALL MARKETS

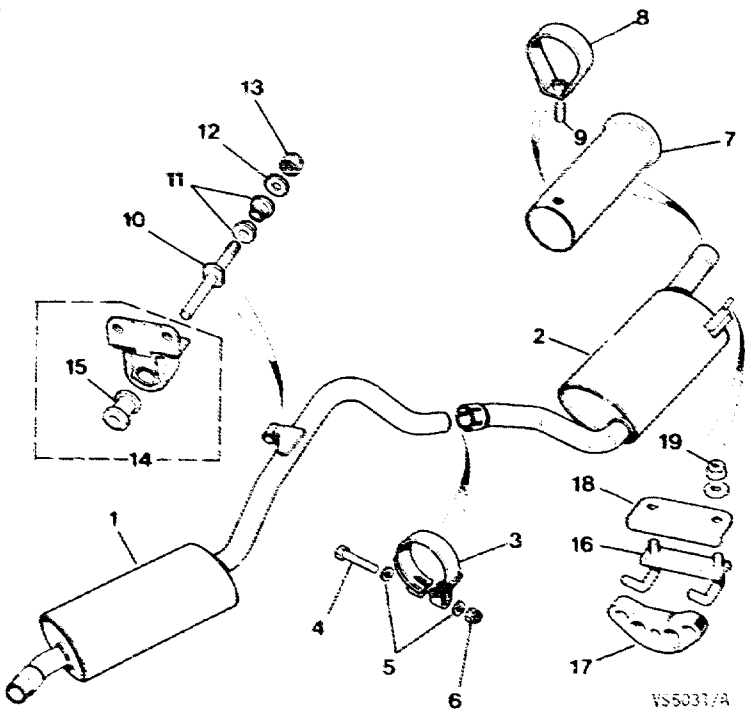


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6842	Intermediate exhaust silencer-assembly-RH	NLA	(1, 2)	Use EBC10076.
1	EBC 10076	Intermediate exhaust silencer-RH	1		
1	CBC 6843	Intermediate exhaust silencer-assembly-LH	NLA	(1, 2)	Use EBC10077.
1	EBC 10077	Intermediate exhaust silencer-LH	1		
2	CBC 8784	Exhaust silencer-assembly-RH rear	1	(3, 4)	
2	CBC 8785	Exhaust silencer-assembly-LH rear	1	(3, 4)	
2	EBC 5020	Exhaust silencer-assembly-RH rear	NLA	(5)	Use EBC10968.
2	EBC 10968	Exhaust silencer-assembly-RH rear	1	(5)	
2	EBC 5021	Exhaust silencer-assembly-LH rear	NLA	(5)	Use EBC10969.
2	EBC 10969	Exhaust silencer-assembly-LH rear	1	(5)	
3	CAC 3801 4	Exhaust pipe clamp	NLA		Use EBC92571.
3	EBC 9257 1	Exhaust pipe clamp	2		
4	CAC 3802	Bolt 0.25" unf	2		
5	FW 104 TJ	Plain washer	NLA		Use WA106041J.
5	WA 106041 J	Plain washer-0.25" i/d	4		
6	NV 604041 J	Locknut 0.25" unf	2		
7	CBC 7322	Exhaust tailpipe	2		
8	CBC 8388	Tailpipe clamp	2		
9	AGU 1004	Setscrew	2		
10	CAC 3103	Mounting bar-assembly-rear	2		
11	C 44083	Collar	4		
12	FW 206 T	Plain washer-imperial	2		
13	C 31075	Locknut	2		
14	CAC 8181	Exhaust mounting cradle-assembly	NLA		Use EBC9101.
14	EBC 9101	Exhaust mounting cradle-assembly	NLA		Use NMB6741AA.
14	NMB 6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	NLA		Use NMD6741AA.
14	NMD 6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	2		
15	CAC 2750	• Bush	1		
	EBC 4499	• Mounting rubber	1		
	EBC 4213	• Mounting cradle-exhaust	NLA		Use NJA6804BA.
	FS 108121 J	• Flange screw	2		
	NJA 6804BA	Mounting cradle-exhaust	1		
16	CAC 9703	Exhaust hanger-assembly	2	(6)	
17	CBC 6514	Exhaust mounting rubber	2	(6)	
18	CBC 2958	Rubber retaining plate	2	(6)	
	EBC 4685	Silencer mounting-rear	2	(7)	
19	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B.
19	JFY 10804B	Locking nut	4		

CHANGE POINTS:

(1) From (V) 594576 4.0 Litre
(2) From (V) 629286 3.2 Litre
(3) From (V) 594576 To (V) 650154 4.0 Litre
(4) From (V) 629286 To (V) 660154 3.2 Litre
(5) From (V) 660155
(6) From (V) 594576 To (V) 629385
(7) From (V) 629286

EXHAUST PIPE-REAR-2.9/4.0 LITRE-CATALYST

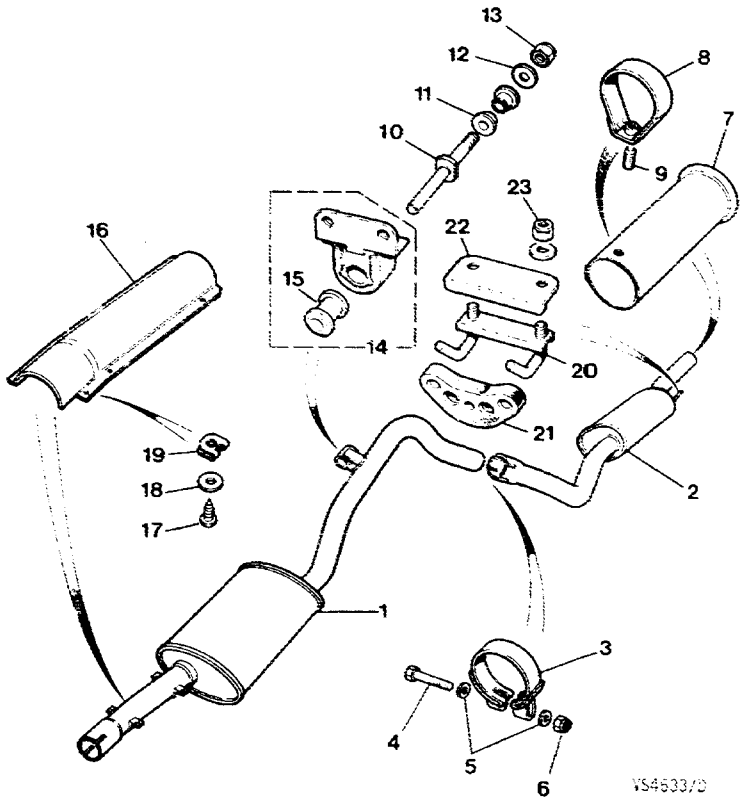


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 5390	Intermediate exhaust silencer-assembly-RH	1	(1)	2.9 Litre;catalyst
1	CBC 5390	Intermediate exhaust silencer-assembly-RH	1	(2)	4.0 Litre;catalyst
1	CBC 5391	Intermediate exhaust silencer-assembly-LH	1	(1)	2.9 Litre;catalyst
1	CBC 5391	Intermediate exhaust silencer-assembly-LH	1	(2)	4.0 Litre;catalyst
2	CBC 8784	Exhaust silencer-assembly-RH rear	1	(1)	2.9 Litre;catalyst
2	CBC 8784	Exhaust silencer-assembly-RH rear	1	(2)	4.0 Litre;catalyst
2	CBC 8785	Exhaust silencer-assembly-LH rear	1	(1)	2.9 Litre;catalyst
2	CBC 8785	Exhaust silencer-assembly-LH rear	1	(2)	4.0 Litre;catalyst
3	CAC 3801 4	Exhaust pipe clamp	NLA		Use EBC92571
3	EBC 9257 1	Exhaust pipe clamp	2		
4	CAC 3802	Bolt -0.25" unf	2		
5	FW 104 TJ	Plain washer	NLA		Use WA106041J
5	WA 106041 J	Plain washer-0.25" I/d	4		
6	NV 604041 J	Locknut-0.25" unf	2		
7	CBC 7322	Exhaust tailpipe	2		
8	CBC 8388	Tailpipe clamp	2		
9	AGU 1004	Setscrew	2		
10	CAC 3103	Mounting bar-assembly-rear	2		
11	C 44083	Collar	4		
12	FW 206 TJ	Plain washer	2		
13	C 31075	Locknut	2		
14	CAC 8181	Exhaust mounting cradle-assembly	NLA		Use EBC9101
14	EBC 9101	Exhaust mounting cradle-assembly	NLA		Use NMB6741AA
14	NMB 6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	NLA		Use NMD6741AA
14	NMD 6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	2		
15	CAC 2750	• Bush	1		
	EBC 4499	• Mounting rubber	1		
	EBC 4213	• Mounting cradle-exhaust	NLA		Use NJA6804BA
	FS 108121 J	• Flange screw	2		
	NJA 6804BA	Mounting cradle-exhaust	1		
	AGU 1875	Nut-M8	4		
16	CBC 1696	Heatshield-assembly-outlet pipe-RH	1		
16	CBC 1697	Heatshield-assembly-outlet pipe-LH	1		
17	AB 610041 J	Self tapping screw	8		
18	WA 105001 J	Plain washer-M5	8		
19	AK 610011 J	Spire nut	8		
20	CAC 9703	Exhaust hanger-assembly	2		
21	CBC 6514	Exhaust mounting rubber	2		
22	CBC 2958	Rubber retaining plate	2		
23	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
23	JFY 10804B	Locking nut	4		

CHANGE POINTS:

(1) From (V) 594576 To (V) 629285

(2) From (V) 594576

EXHAUST PIPE-REAR-4.0 LITRE-JAPAN

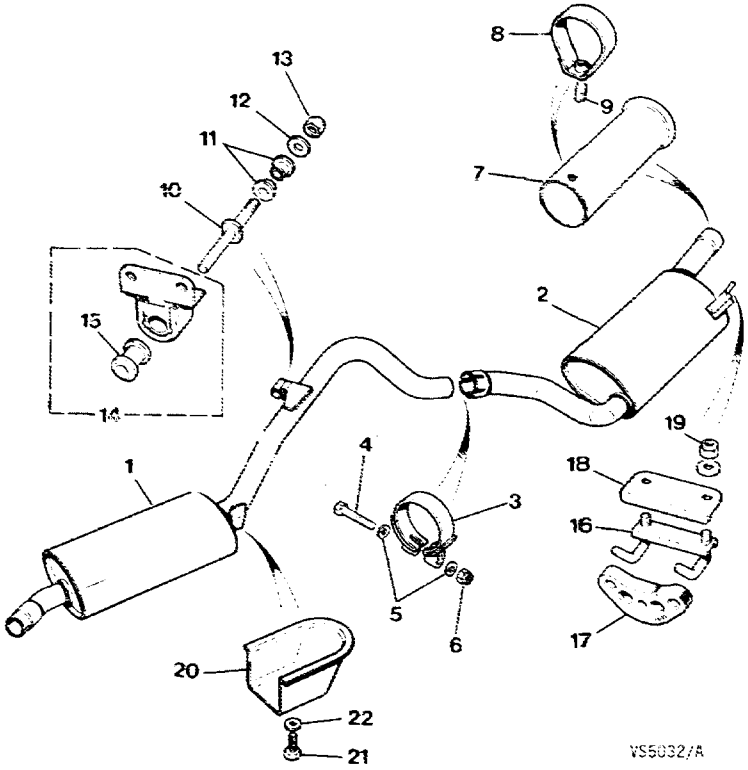

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 7438	Intermediate exhaust silencer-RH	NLA	(1)	Use CBC6842
1	CBC 6842	Intermediate exhaust silencer-assembly-RH	NLA		Use EBC10076
1	EBC 10076	Intermediate exhaust silencer RH	1		4.0 Litre,Japan
1	CBC 7439	Intermediate exhaust silencer-LH	NLA	(1)	Use CBC6843
1	CBC 6843	Intermediate exhaust silencer-assembly-LH	NLA		Use EBC10077
1	EBC 10077	Intermediate exhaust silencer-LH	1		4.0 Litre,Japan
2	CBC 8784	Exhaust silencer-assembly-RH rear	1	(1)	4.0 Litre,Japan
2	CBC 8785	Exhaust silencer-assembly-LH rear	1	(1)	4.0 Litre,Japan
3	CAC 3801 4	Exhaust pipe clamp	NLA		Use EBC92571
3	EBC 92571	Exhaust pipe clamp	2		
4	CAC 3802	Bolt-0.25" unf	2		
5	FW 104 TJ	Plain washer	NLA		Use WA106041J
5	WA 106041 J	Plain washer-0.25" i/d	4		
6	NV 604041 J	Locknut 0.25" unf	2		
7	CBC 7322	Exhaust tailpipe	2	(1)	4.0 Litre,Japan
8	CBC 8386	Tailpipe clamp	2		
9	AGU 1004	Setscrew	2		
10	CAC 3103	Mounting bar-assembly-rear	2		
11	C 44083	Collar	4		
12	FW 206 TJ	Plain washer	2		
13	C 31075	Locknut	2		
14	CAC 8181	Exhaust mounting cradle-assembly	NLA		Use EBC9101
14	EBC 9101	Exhaust mounting cradle-assembly	NLA		Use NMB6741AA
14	NMB 6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	NLA		Use NMD6741AA
14	NMD 6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	2		
15	CAC 2750	• Bush	1		
	EBC 4499	• Mounting rubber	1		
	EBC 4213	• Mounting cradle-exhaust	NLA		Use NJA6804BA
	FS 108121 J	• Flange screw	2		
	NJA 6804BA	Mounting cradle-exhaust	1		
16	CAC 9703	Exhaust hanger-assembly	2	(2)	4.0 Litre,Japan
17	CBC 6514	Exhaust mounting rubber	2	(2)	4.0 Litre,Japan
18	CAC 2958	Mounting plate rubber	NLA	(2)	4.0 Litre,Japan
	EBC 4685	Silencer mounting-rear	2	(3)	4.0 Litre,Japan
19	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
19	JFY 10804B	Locking nut	4		
20	CBC 4659	Grass shield-outlet pipe	NLA		
21	SH 106141 J	Setscrew-M6 x 14mm	2		
22	WJ 106001 J	Plain washer-M6	2		

CHANGE POINTS:

(1) From (V) 594576


(2) From (V) 594576 To (V) 629285

(3) From (V) 629286

EXHAUST SYSTEM AND COMPONENTS

EXHAUST SYSTEM

EXHAUST PIPE-REAR-JAPAN

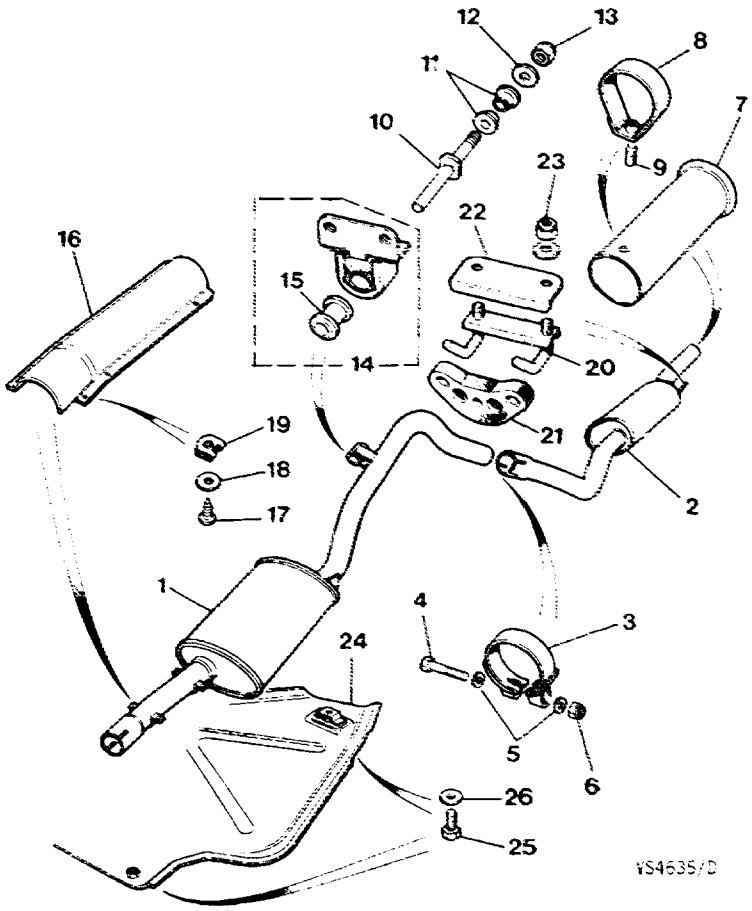


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	2088	Intermediate exhaust silencer assembly RH	NLA	(1)	Use CBC5392
1	CBC	2089	Intermediate exhaust silencer assembly LH	NLA	(1)	Use CBC5393
1	CBC	5392	Intermediate exhaust silencer assembly RH	1	(2)	Japan
1	CBC	5393	Intermediate exhaust silencer assembly LH	1	(2)	Japan
2	CBC	2802	Exhaust silencer assembly RH rear	NLA	(3)	Use CBC8784 qty 1 with CBC7322 qty 1
2	CBC	2803	Exhaust silencer assembly LH rear	NLA	(3)	Use CBC8785 qty 1 with CBC7322 qty 1
2	CBC	7516	Exhaust silencer assembly RH rear	NLA	(4)	Use CBC8784
2	CBC	7517	Exhaust silencer assembly LH rear	NLA	(4)	Use CBC8785
2	CBC	8784	Exhaust silencer assembly RH rear	1		Japan
2	CBC	8785	Exhaust silencer assembly LH rear	1		Japan
3	CAC	3801	Exhaust pipe clamp	NLA		Use EBC92571
3	EBC	92571	Exhaust pipe clamp	2		
4	CAC	3802	Bolt-0.25" unf	2		
5	FW	104 TJ	Plain washer	NLA		Use WA106041J
5	WA	106041 J	Plain washer-0.25" Ld	4		
6	NV	604041 J	Locknut-0.25" unf	2		
7	CBC	2011	Exhaust tailpipe	NLA	(3)	Use CBC7322
7	CBC	7322	Exhaust tailpipe	2	(4)	Japan
8	CBC	8388	Tailpipe clamp	2		
9	AGU	1004	Setscrew	2		
10	CAC	3103	Mounting bar-assembly-rear	2		
11	C	44083	Collar	4		
12	FW	206 TJ	Plain washer	2		
13	C	31075	Locknut	2		
14	CAC	8181	Exhaust mounting cradle-assembly	NLA		Use EBC9101
14	EBC	9101	Exhaust mounting cradle-assembly	NLA		Use NMB6741AA
14	NMB	6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	NLA		Use NMD6741AA
14	NMD	6741AA	EXHAUST MOUNTING CRADLE-ASSEMBLY	2		
15	CAC	2750	• Bush	1		
	EBC	4499	• Mounting rubber	1		
	EBC	4213	• Mounting cradle-exhaus	NLA		Use NJA6804BA
	FS	108121 J	• Flange screw	2		
	NJA	6804BA	Mounting cradle-exhaust	1		
	AGU	1875	Nut-M8	4		

CHANGE POINTS


(1) To (V) 524374
(2) From (V) 524375 To (V) 594575
(3) To (V) 566603
(4) From (V) 566604 To (V) 594575

EXHAUST PIPE-REAR-JAPAN

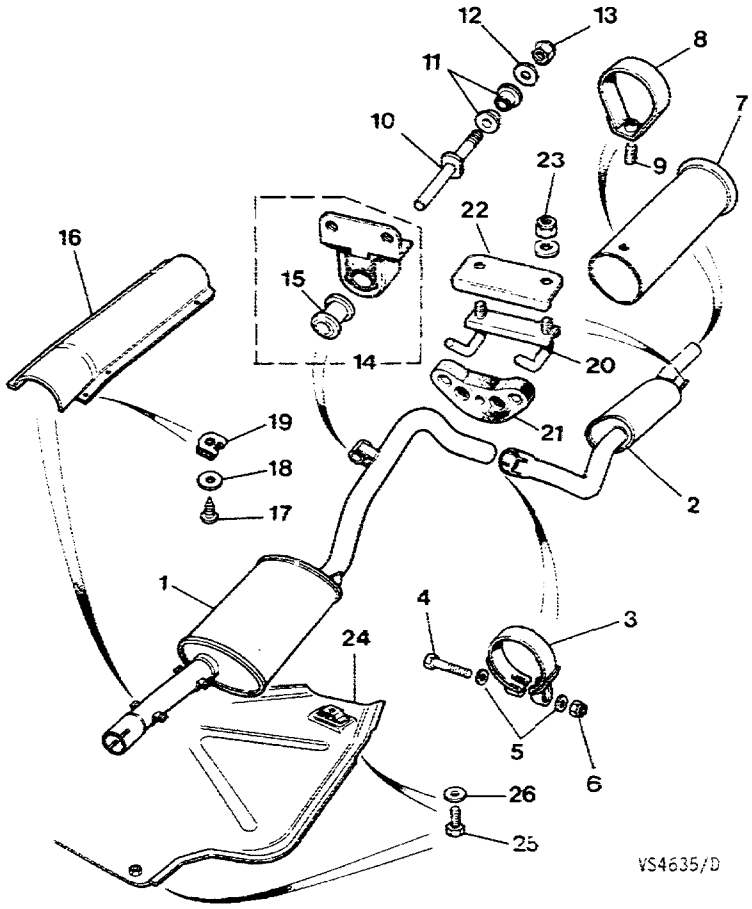

Illus	Part Number	Description	Quantity	Change Point	Remarks
16	CBC 1696	Heatshield-assembly-outlet pipe-RH	1		Japan
16	CBC 1697	Heatshield-assembly-outlet pipe-LH	1		Japan
17	AB 610041 J	Self tapping screw	8		
18	WA 105001 J	Plain washer-M5	8		
19	AK 610011 J	Spire nut	8		
20	CAC 9703	Exhaust hanger-assembly	2		
21	CBC 6514	Exhaust mounting rubber	2		
22	CAC 2958	Mounting plate rubber	NLA		
23	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
23	JFY 10804B	Locking nut	4		
	CAC 8310	Catalyst grass shield	1		Japan
19	AK 610011 J	Spire nut	5		Grass shield to heatshield
27	WC 105001 J	Plain washer	5		
17	AB 610041 J	Self tapping screw	5		
24	CAC 8311	Grass shield-intermediate silencer	NLA		Use CBC4660 qty 1 with CBC4661 qty 1 with CBC4659 qty 1.
24	CBC 4660	Grass shield-RH-inlet pipe	1		
24	CBC 4661	Grass shield-LH-inlet pipe	NLA		
24	CBC 4659	Grass shield-outlet pipe	NLA		
19	AK 610011 J	Spire nut	2		Grass shield to inlet pipe
27	WC 105001 J	Plain washer	2		heatshield
17	AB 610041 J	Self tapping screw	2		
25	SH 106141 J	Setscrew-M6 x 14mm	3		Grass shield to exhaust
26	WJ 106001 J	Plain washer-M6	3		pipe/catalyst grass shield

EXHAUST HEATSHIELDS

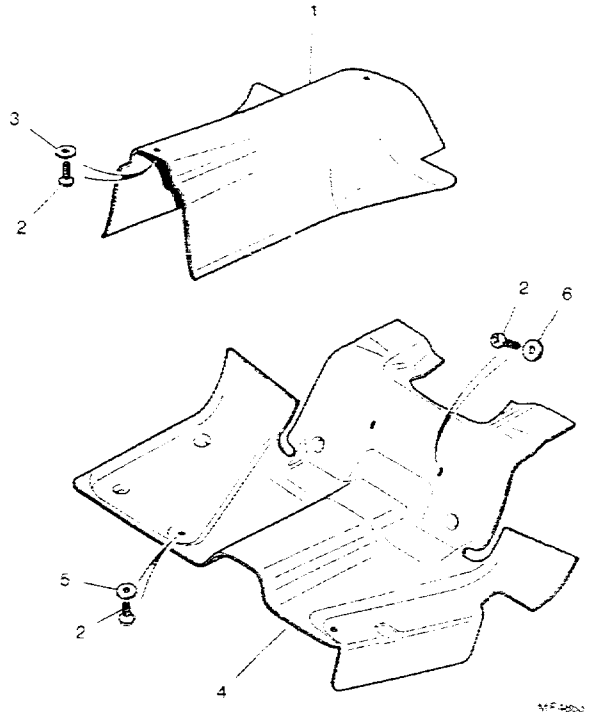

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	2869	Floor/tunnel heatshield	1	(1)	
2	AGU	2022	Paint clearing setscrew	2		
3	WJ	600041 J	Plain washer-25mm	2		
4	CBC	1954	Over axle heatshield	1	(2)	
4	CBC	6312	Over axle heatshield	1	(3)	
5	AGU	2022	Paint clearing setscrew	2		
6	WJ	106001 J	Plain washer-M6	2		
7	WJ	600041 J	Plain washer-25mm	2		
8	AGU	2022	Paint clearing setscrew	2		

CHANGE POINTS
(1) To (V) 594575
(2) To (V) 524374
(3) From (V) 524375


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

CLUTCH MASTER CYLINDER/SLAVE ..... 2. G 05
CLUTCH PEDAL AND MECHANICAL LINKAGE 2. G 07
CLUTCHES-AUTOMATIC GEARBOX ..... 2. E 16
CONTROL VALVE ASSEMBLY-AUTOMATIC ..... 2. E 07
CONTROLS AND LINKAGE-AUTOMATIC ..... 2. E 11
CONTROLS AND SELECTORS-MANUAL ..... 2. G 03
DIFFERENTIAL ASSEMBLY ..... 2. H 03
FLYWHEEL AND CLUTCH ..... 2. F 18
GEARBOX ASSEMBLY AND CASING- ..... 2. E 02
GEARBOX ASSEMBLY-MANUAL GEARBOX ..... 2. F 16
HALFSHAFTS ..... 2. G 10
LUBRICATION SYSTEM-AUTOMATIC ..... 2. E 09
PARK LOCK-AUTOMATIC GEARBOX ..... 2. F 11
PROPSHAFT ..... 2. G 11
PUMP-AUTOMATIC GEARBOX ..... 2. F 13
SHAFTS AND GEARS-AUTOMATIC ..... 2. F 15
TORQUE CONVERTER AND HOUSING ..... 2. E 05
A-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. E 16
A-CLUTCH-4.0 LITRE ..... 2. E 17
B-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. E 18
B-CLUTCH-4.0 LITRE ..... 2. F 02
Bearing and sleeve-assembly ..... 2. G 07
C-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 03
C-CLUTCH-4.0 LITRE ..... 2. F 04
CHANGE SPEED LEVER-2.9/3.2 LITRE- ..... 2. G 04
CHANGE SPEED LEVER-2.9/3.6 LITRE- ..... 2. G 03
CLUTCH MASTER CYLINDER-FROM ..... 2. G 06
CLUTCH MASTER CYLINDER-UP TO ..... 2. G 05
CLUTCH MECHANISM-2.9/3.2/3.6 LITRE ..... 2. G 07
CLUTCH MECHANISM-4.0 LITRE ..... 2. G 08
CLUTCH PEDAL ..... 2. G 09
CONTROL VALVE ASSEMBLY-FROM ..... 2. E 08
CONTROL VALVE ASSEMBLY-UP TO ..... 2. E 07
Clutch housing ..... 2. G 07
Clutch lever ..... 2. G 07
Clutch lever ..... 2. G 08
Clutch release bearing-assembly ..... 2. G 08
Clutch slave cylinder repair kit ..... 2. G 07
Clutch slave cylinder repair kit ..... 2. G 08
Clutch slave cylinder ..... 2. G 07
Clutch slave cylinder ..... 2. G 08
Clutch switch ..... 2. G 09
D-CLUTCH COUPLING-4.0 LITRE ..... 2. F 06
D-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 05
DIFFERENTIAL ASSEMBLY COMPONENTS- ..... 2. H 12
DIFFERENTIAL ASSEMBLY COMPONENTS- ..... 2. H 14
DIFFERENTIAL ASSEMBLY-JURID FLANGE ..... 2. H 09
DIFFERENTIAL ASSEMBLY-JURID ..... 2. H 05
DIFFERENTIAL ASSEMBLY-NON JURID ..... 2. H 11
DIFFERENTIAL ASSEMBLY ..... 2. H 03
E-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 07
E-CLUTCH-4.0 LITRE ..... 2. F 08
F-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 09
F-CLUTCH-4.0 LITRE ..... 2. F 10
Gear change knob ..... 2. E 14
Gear selector illumination module-assembly ..... 2. E 14
Governor-assembly ..... 2. F 09
Pedal pad rubber-clutch ..... 2. G 09
SELECTOR MODULE ASSEMBLY- ..... 2. E 14
SPORT MODE SWITCH-AUTOMATIC ..... 2. E 13
Selector housing ..... 2. E 14
Sports mode switch ..... 2. E 13
TRANSMISSION CONTROL CABLE ..... 2. E 12

GEARBOX ASSEMBLY-AUTOMATIC-FROM (V)594576

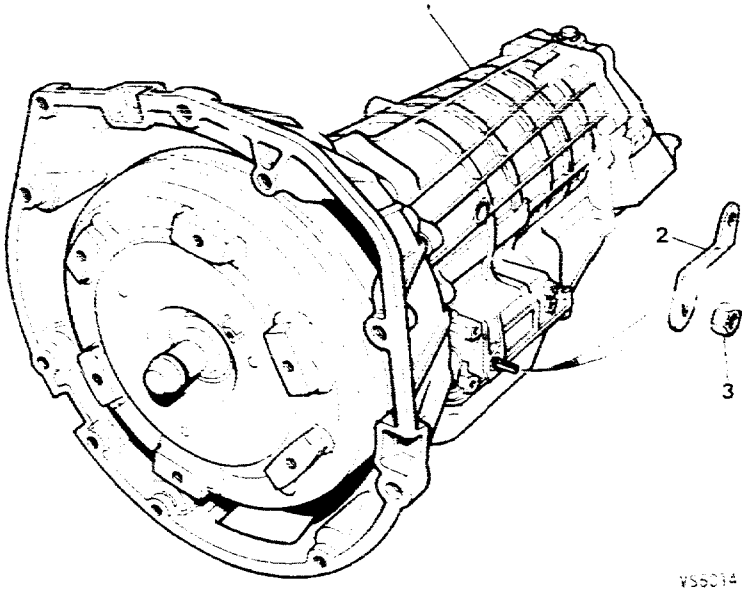


VS5014

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9613 N	Automatic gearbox assembly new	NLA		Use EAC9613E 2.9 Litre
1	EAC	9613 E	Automatic gearbox assembly remanufactured unit	1		2.9 Litre
1	EBC	4769 N	Automatic gearbox assembly new	NLA		Use EBC4769E 3.2 Litre
1	EBC	4769 E	Automatic gearbox assembly remanufactured unit	1		3.2 Litre
1	EBC	3541	Automatic gearbox assembly new	NLA	(1)	Use EBC3541E 4.0 Litre,Service Bulletin JD 10/90 item 44
1	EBC	3541 E	Automatic gearbox assembly remanufactured unit	1	(1)	4.0 Litre Service Bulletin JD 10/90 item 44
1	EBC	4409	Automatic gearbox assembly new	NLA	(2)	Use EBC4409E 4.0 Litre Service Bulletin JD 10/90 item 44
1	EBC	4409 E	Automatic gearbox assembly remanufactured unit	1	(2)	4.0 Litre,Service Bulletin JD 10/90 item 44
2	EBC	1465	Selector lever	1		
3	NH	208041	Nut selector lever	1		

CHANGE POINTS
(1) To (V) 614440
(2) From (V) 614441

EXTENSION AND BREATHER-REAR

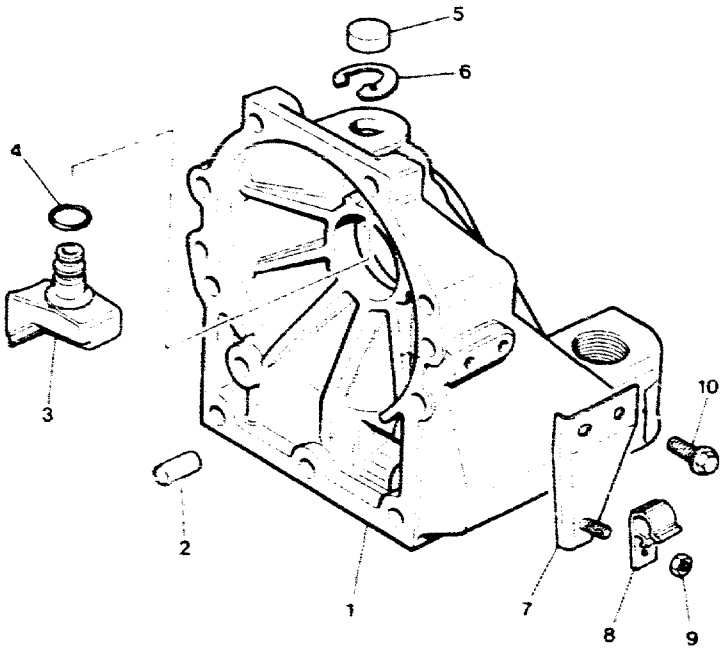


Illus	Part Number		Description	Quantity	Change Point	Remarks
	JLM	693	Gearbox extension housing rear	NLA	(1)	
	EBC	1178	Gearbox extension housing rear	1	(2)	
2	JLM	697	Cylindrical pin	2		
3	JLM	705	Gearbox extension case breather	NLA		Use JLM10411 2.9 Litre
3	JLM	705	Gearbox extension case breather	NLA		Use JLM10411 3.2 Litre
3	JLM	705	Gearbox extension case breather	NLA		Use JLM10411 3.6 Litre (XJ40)
3	JLM	10411	Gearbox extension case breather	1		4.0 Litre
4	JLM	703	O-ring	NLA		Use JLM10412 2.9 Litre
4	JLM	703	O-ring	NLA		Use JLM10412 3.2 Litre
4	JLM	703	O-ring	NLA		Use JLM10412 3.6 Litre (XJ40)
4	JLM	10412	O-ring	1		4.0 Litre
5	JLM	706	Breather cover	1		
6	JLM	905	Lock washer	1		
	JLM	700	Screw	8		
	JLM	701	Screw	1		
	JLM	698	Extension case gasket	1		
7	DBC	6510	Cable steady bracket	1		
8	DBC	2850	D-clip	1		
9	AGU	2567	Nut and washer assembly-metric	1		
10	FS	106101J	Getscrew	2		

CHANGE POINTS
(1) To (G) 891230
(2) From (G) 891231

TORQUE CONVERTER AND HOUSING-4.0 LITRE


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	2378	Torque converter	1		4.0 Litre,automatic
2	EAC	9187	Torque converter housing	1		4.0 Litre,automatic
3	JLM	659	Bolt	6		
4	JLM	666	Bolt	12		
5	JLM	662	Gasket	1		
6	JLM	674	Compression spring	4		
7	JLM	675	Compression spring	5		
8	JLM	672	Sleeve	8		
9	JLM	863	Sleeve	1		
10	JLM	864	Retaining ring	9		
	C	39246	Stoneguard-torque converter housing	1		

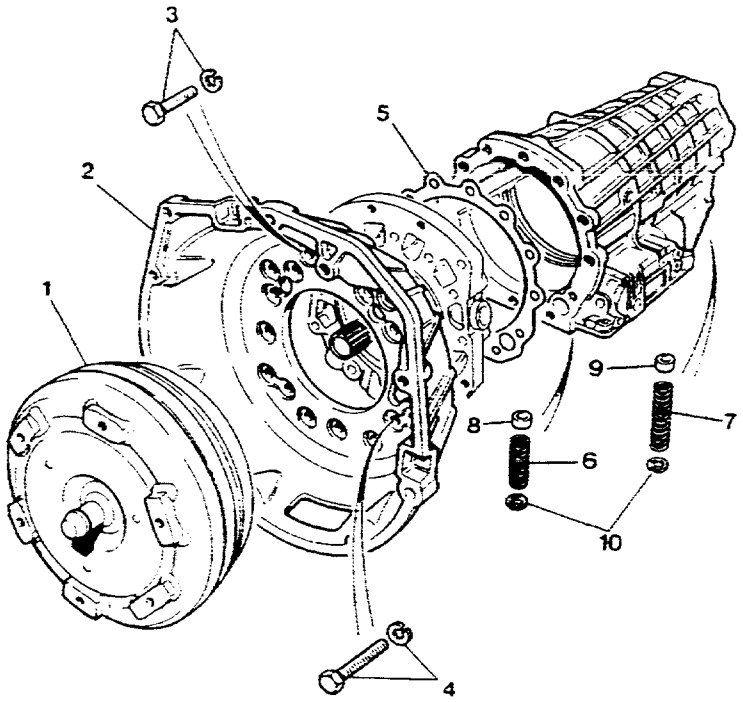

VS5019

CONTROL VALVE ASSEMBLY-FROM (V)594576


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	3901	Control valve-assembly	1	(1)	2.9 Litre
1	EBC	4770	Control valve-assembly	1	(1)	3.2 Litre
1	EBC	3492	Control valve-assembly	1	(2)	4.0 Litre
1	EBC	4410	Control valve-assembly	1	(3)	4.0 Litre
2	JLM	10473	Valve body O-ring	1	(1)	4.0 Litre
3	JLM	10474	Valve body nut	1	(1)	
	JLM	11250	Solenoid shift valve-gearbox	NLA	(1)	Use JLM20219.
						4.0 Litre,electronic gearbox
	JLM	20219	Solenoid shift valve-gearbox	3		4.0 Litre,electronic gearbox
	JLM	11251	Speed transducer-gearbox	1	(1)	4.0 Litre,electronic gearbox
	JLM	11252	Gearbox internal harness	1	(1)	4.0 Litre,electronic gearbox

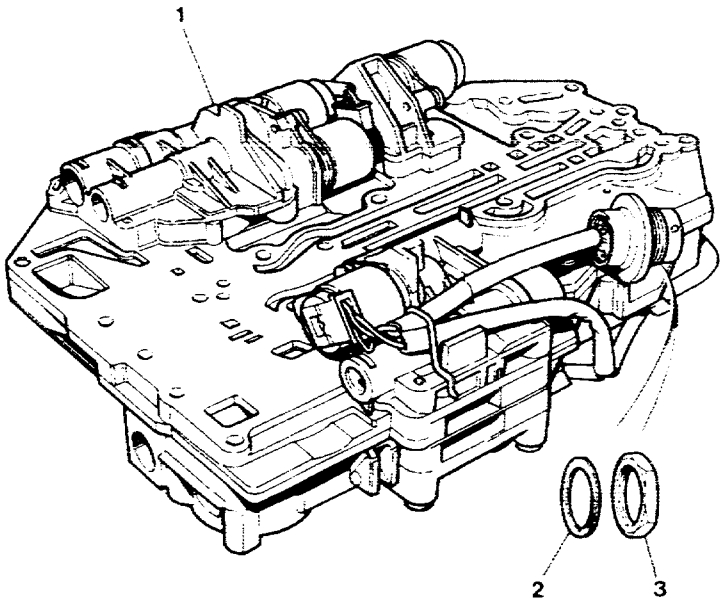

VS50183/A

CHANGE POINTS:
(1) From (V) 594576
(2) From (V) 594576 To (V) 614440
(3) From (V) 614441


DIPSTICK AND OIL COOLER PIPES

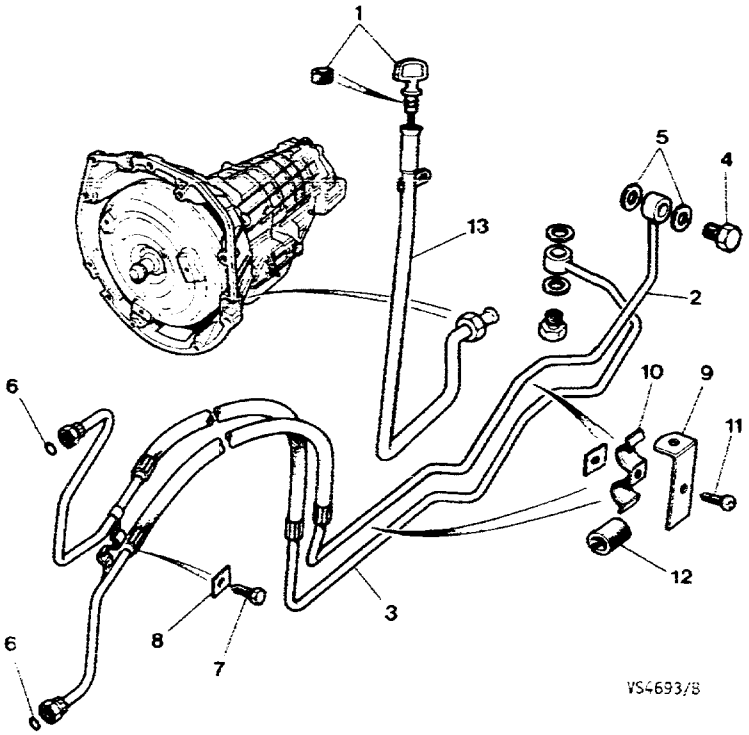

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	3635	DIPSTICK, LABEL AND SEAL -ASSEMBLY	NLA	(1)	Use EBC8409.
						4.0 Litre
1	EBC	8409	DIPSTICK, LABEL AND SEAL -ASSEMBLY	1	(2)	4.0 Litre
	EAC	2978	• Dipstick seal	NLA		Use EBC10188.
1	EBC	4034	Dipstick, label and seal -assembly	1		2.9 Litre
1	EBC	4034	Dipstick, label and seal -assembly	1		3.2 Litre
1	EBC	4034	Dipstick, label and seal -assembly	1		3.6 Litre (XJ40)
2	EBC	3912	Oil return pipe	1		2.9 Litre
2	EBC	3912	Oil return pipe	1		3.2 Litre
2	EBC	3912	Oil return pipe	1		3.6 Litre (XJ40)
3	EBC	3911	Oil cooler output pipe	1		2.9 Litre
3	EBC	3911	Oil cooler output pipe	1		3.6 Litre (XJ40)
2	EBC	3908	Oil return pipe	1		4.0 Litre
3	EBC	3907	Oil cooler output pipe	1		4.0 Litre
6	CAC	8968 2	O-ring	NLA		Use KSR605002.
4	EAC	5625	Banjo bolt	2		2.9 Litre
4	EAC	5625	Banjo bolt	2		3.2 Litre
4	EAC	5625	Banjo bolt	2		3.6 Litre (XJ40)
4	EAC	9905	Banjo bolt	2		4.0 Litre
	AGU	2093 J	Washer	NLA		Use EBC4896.
						2.9 Litre
	AGU	2093 J	Washer	NLA		Use EBC4896.
						3.2 Litre
	AGU	2093 J	Washer	NLA		Use EBC4896.
						3.6 Litre (XJ40)
5	ESC	4896	Bonded seal	4		2.9 Litre
5	EBC	4895	Bonded seal	4		4.0 Litre
	AZ	610051	Screw	NLA		Use AZ610051J.
7	AZ	610051 J	Self tapping screw	1		
8	AH	610011	Flat speed nut	NLA		Use AH610011J.
	AH	610011 J	Nut	2		
9	EAC	8126	Oil pipe bracket	1		
10	CAC	8635	Double clip-double	1		2.9 Litre
10	CAC	8635	Double clip-double	1		3.2 Litre
10	CAC	8635	Double clip-double	1		3.6 Litre (XJ40)
	EBC	2626	Ape clip	1		4.0 Litre
11	JLM	9577	Self tapping screw	1		
12	EAC	8124	Split hose	1		
13	EAC	8183	Dipstick tube	1		2.9 Litre
13	EAC	8183	Dipstick tube	1		3.2 Litre
13	EAC	8183	Dipstick tube	1		3.6 Litre (XJ40)
13	EBC	3274	Dipstick tube	1		4.0 Litre

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

OIL SUMP PAN

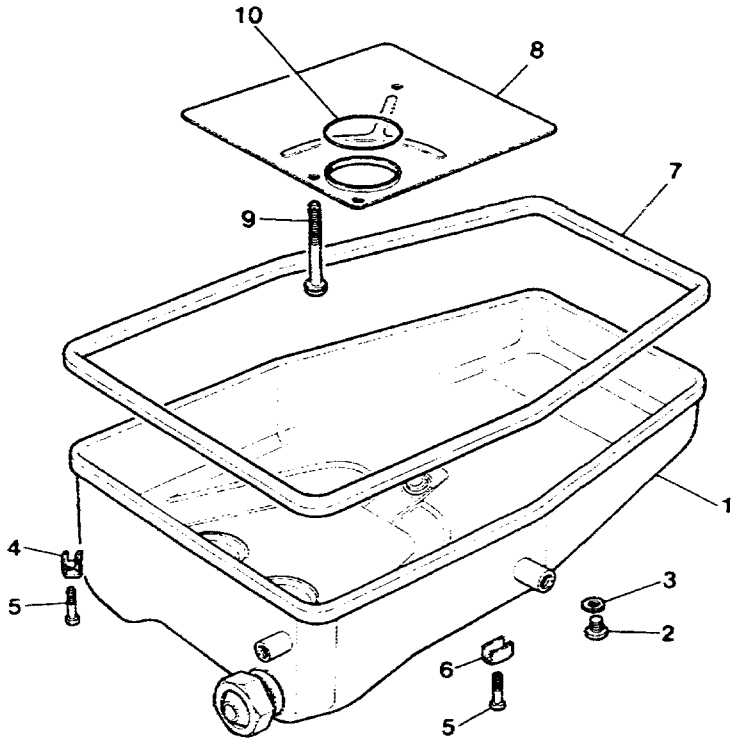


VS5012

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 648	Oil sump pan	1		2.9 Litre
1	JLM 648	Oil sump pan	1		3.2 Litre
1	JLM 648	Oil sump pan	1		3.6 Litre (XJ40)
1	JLM 2143	Oil sump pan	NLA		Use JLM12457.
1	JLM 12457	Oil sump pan-without drain plug	1		4.0 Litre
2	JLM 655	Oil sump drain plug	1		
3	JLM 649	Drain plug washer	1		
4	JLM 10399	Fixing plate	4		
5	JLM 651	Screw	6	(1)	
5	JLM 1849	Screw	6	(2)	
6	JLM 653	Fixing plate	NLA		Use JLM1848.
6	JLM 1848	Fixing plate	2		
7	JLM 650	Sump pan gasket	NLA		Use JLM12343.
					2.9 Litre
7	JLM 12343	Sump pan gasket	1		2.9 Litre
7	JLM 650	Sump pan gasket	NLA		Use JLM12343
					3.2 Litre
7	JLM 2144	Sump pan gasket	1		4.0 Litre
8	JLM 664	Oil screen	1	(3)	2.9 Litre
8	JLM 664	Oil screen	1	(3)	3.2 Litre
8	JLM 664	Oil screen	1	(3)	3.6 Litre (XJ40)
8	JLM 2128	Oil screen	1	(4)	4.0 Litre
9	JLM 667	Screw	2		
10	JLM 665	O-ring	NLA	(5)	Use JLM2127.
					2.9 Litre
10	JLM 665	O-ring	NLA	(5)	Use JLM2127.
					3.6 Litre (XJ40)
10	JLM 2127	O-ring	1	(6)	3.2 Litre
10	JLM 2127	O-ring	1	(6)	3.6 Litre (XJ40)
10	JLM 2127	O-ring	1	(6)	4.0 Litre

CHANGE POINTS:

(1) To (G) 558750
(2) From (G) 558751
(3) To (G) 33240
(4) From (G) 33241
(5) To (G) 115389
(6) From (G) 115390 To (G) 33240


ROTARY SWITCH-AUTOMATIC GEARBOX-4.0 LITRE

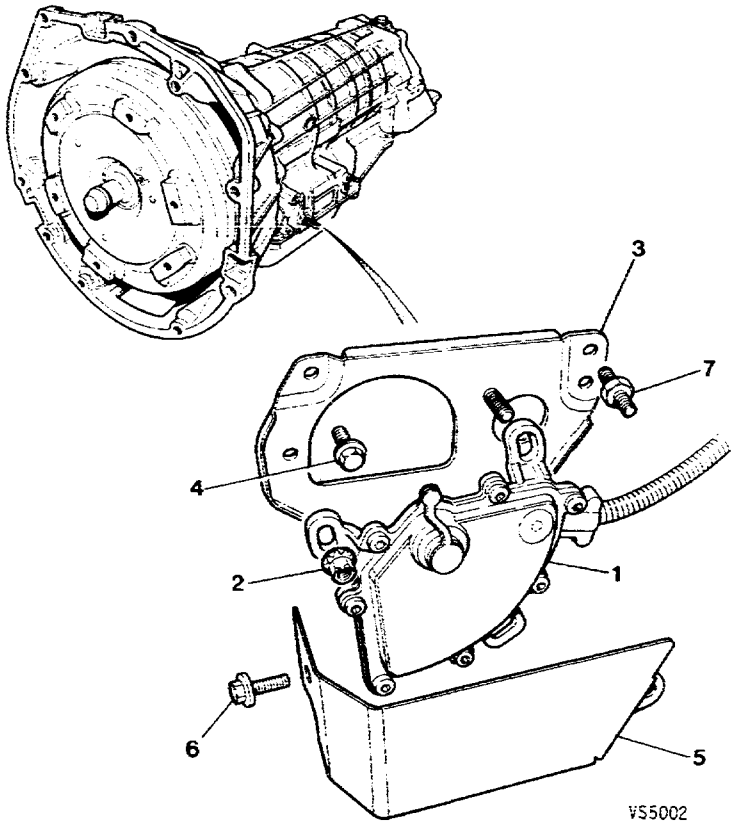

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5858	Rotary switch	1	(1)	4.0 Litre
1	DBC 6133	Rotary switch	1	(2)	4.0 Litre
2	AGU 2580	Hexagonal nut-M6	3		
	AB 610041 J	Self tapping screw	1		
3	EBC 3309	Mounting plate switch	1		4.0 Litre
4	FS 106165 J	Setscrew	1		
5	EBC 3278	Rotary switch shield	1		4.0 Litre
6	FS 106165 P	Flange head screw	2		
7	EBC 3310	Stud	3		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286


TRANSMISSION CONTROL CABLE

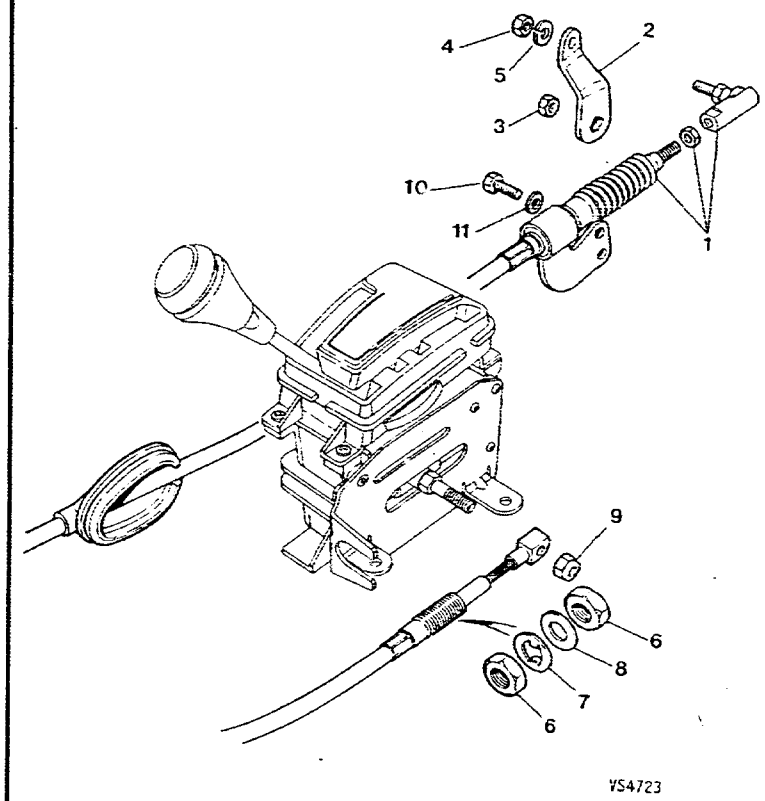

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9328	Control cable -assembly	NLA		Use MMB4830BA.
					4.0 Litre
1	MMB 4830BA	Control cable -assembly	NLA		Use MMD4830BA.
					4.0 Litre
	MMD 4830BA	Gear control cable-assembly	NLA		Use MNA4830CA.
					4.0 Litre
1	CBC 8150	Control cable -assembly	NLA		Use MMB4830AA.
					2.9 Litre
1	CBC 8150	Control cable -assembly	NLA		Use MMB4830AA.
					3.2 Litre
1	MMB 4830AA	Control cable -assembly	NLA		Use MMD4830AA.
					2.9 Litre
1	MMB 4830AA	Control cable -assembly	NLA		Use MMD4830AA.
					3.2 Litre
1	CBC 5694	Control cable -assembly	1		3.6 Litre (XJ40)
2	EAC 5249	Selector lever	NLA		Automatic
3	NH 208041	Nut-selector lever	1		
4	NH 106041 J	Nut-M6	1		
5	WL 106001	Lock washer-M6	1		
	CBC 1499	Selector cable washer	NLA		
6	CBC 1498	Selector cable nut	2		
7	CBC 2919	Tab washer	NLA		
8	FW 104 T	Plain washer-0.25" i/d	NLA		Use WA106041J.
9	NY 106041 J	Nyloc nut	1		
10	SH 106161 J	Setscrew-imperial fixing	2		
11	WL 106001 J	Plain washer-M6	2		


SPORT MODE SWITCH-AUTOMATIC GEARBOX

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DAC 4843	Sports mode switch	1	(1)	Automatic

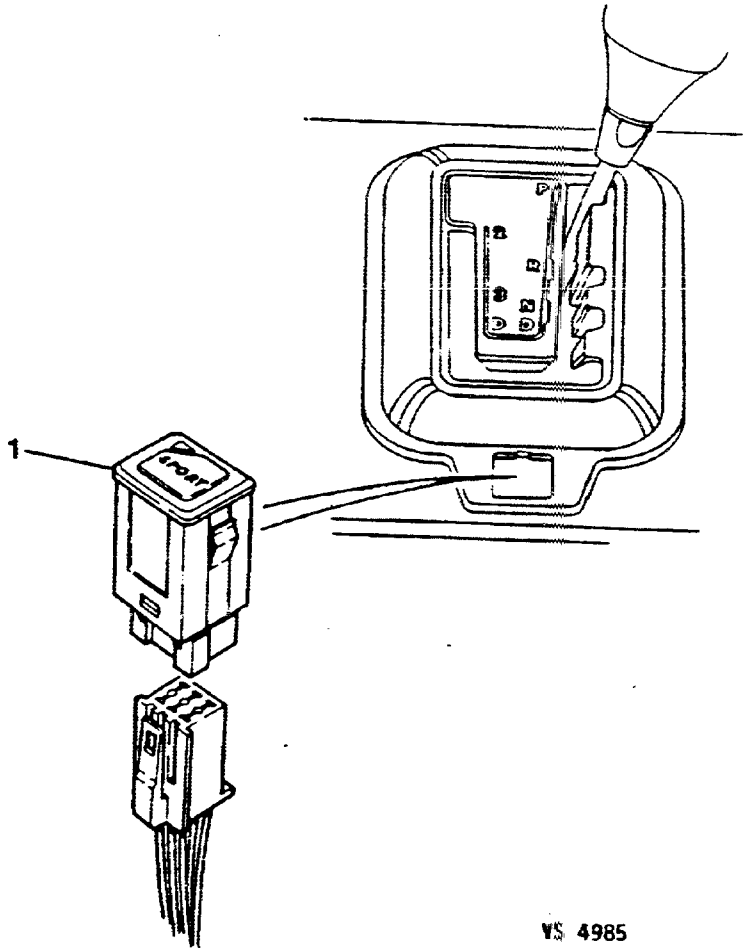

CHANGE POINTS:
(1) From (V) 594576

SELECTOR MODULE ASSEMBLY-AUTOMATIC GEARBOX

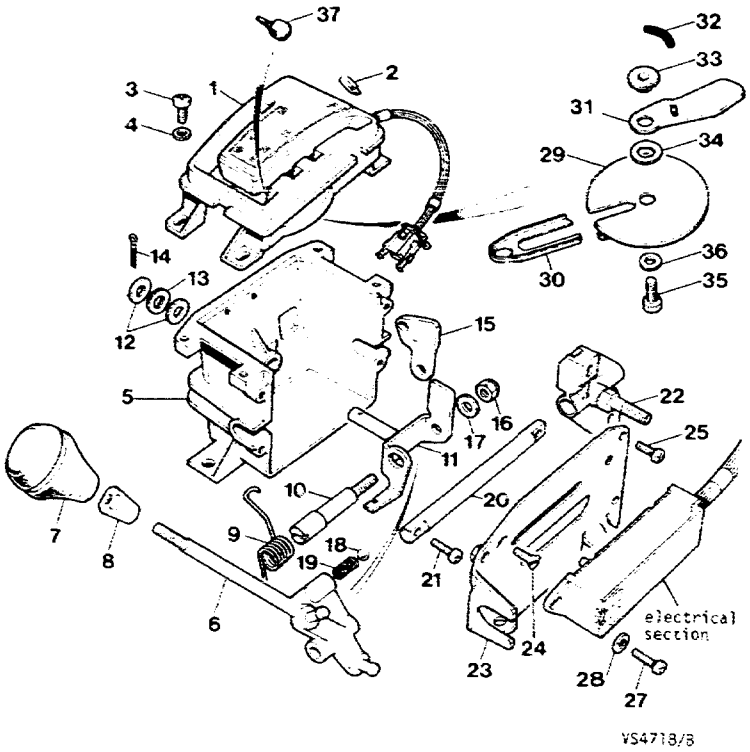


VS4718/3

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2441	Gear selector illumination module-assembly	1	(1)	Automatic
1	DBC 6433	Gear selector illumination module-assembly	1	(2)	Automatic
2	JLM 516	Bulb	NLA		Use JLM1223.
2	JLM 1223	Bulb-clear-bayonet	1		
3	SL 104161 J	Taptite screw	4		
4	WA 104001 J	Plain washer	4		
5	CBC 5[illegible]	Selector housing	1		
6	CBC 6252	Gearshift hand lever	NLA		Use MNA4915AA.
6	MNA 4915AA	Gearshift hand lever	NLA		Use MNA4915AB.
					Automatic
6	MNA 4915AB	Gearshift hand lever-J-gate	1		Automatic
7	CBC 1992	Gear change knob	1		Except Majestic
7	CBC 8977	Gear change knob-Coffee	1	(3)	Majestic
7	CBC 9563 AEE	Gear change knob-assembly-leather-Doeskin	1		Majestic
7	CBC 9563 LEG	Gear change knob-assembly-leather-Warm charcoal	1		Majestic
7	CBC 9111 SDC	Gear change knob-assembly-autolux leather-Coffee	1	(4)	Majestic
8	CAC 7835	Cone	1		
9	CAC 9068	Tension spring	1		
10	CAC 9067	Pivot pin	NLA		Use CCC7104.
10	CCC 7104	Pivot pin	1		
11	CBC 8014	Pivot bracket-assembly	NLA		Use CCC7460.
11	CCC 7460	Pivot bracket-assembly	NLA		Use MNA4920AA.
					Automatic
11	MNA 4920AA	Pivot bracket-assembly	NLA		Use MNA4920AB.
					Automatic
11	MNA 4920AB	Pivot bracket-assembly	1		Automatic
13	WW 108001 J	Wave spring washer	1		
14	PS 105121	Split pin	1		
15	CBC 5625	Change over plate	NLA		Use MNA4919AA.
					Except USA
15	MNA 4919AA	Change over plate	NLA		Use MNA4919AB.
					Except USA
15	MNA 4919AB	Change over plate-gearbox	1		Except USA

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 649175
(4) From (V) 649176

SELECTOR MODULE ASSEMBLY-AUTOMATIC GEARBOX

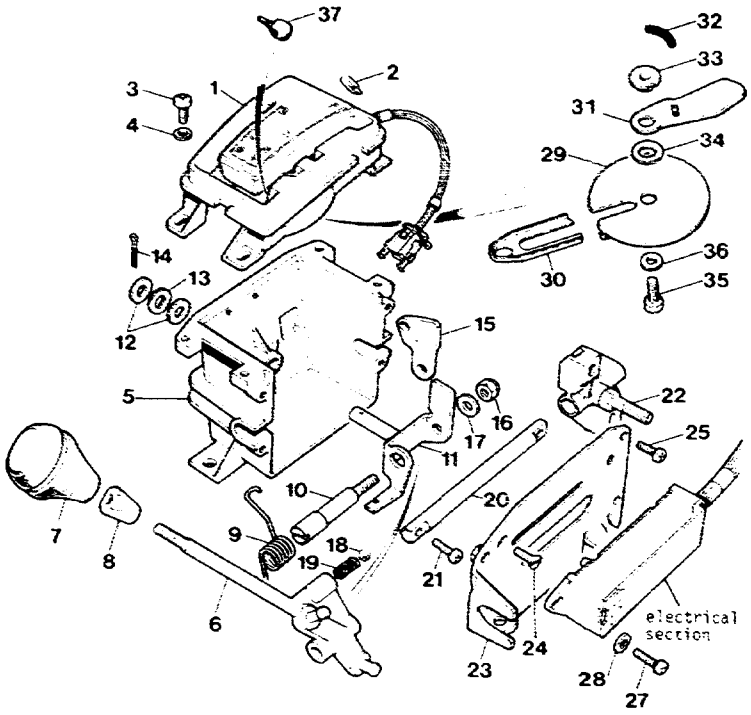

YS4718/3


Illus	Part Number		Description	Quantity	Change Point	Remarks
16	NY	106041 J	Nyloc nut	1		
17	FW	104 T	Plain washer-0.25" i/d	NLA		Use WA106041J
17	WA	106041 J	Plain washer-0.25" i/d	1		
18	CAC	73253	Ball bearing	1		Except USA
19	CBC	1751	Compression spring	1		Except USA
20	CBC	5220	Sliding block shaft	1		
21	SL	104161 J	Taptite screw	2		
22	CBC	2021	Sliding block-assembly	NLA		Use CCC6941
22	CCC	6941	Sliding block-assembly	1		
23	CBC	2918	Side plate	NLA		Use CBC8089
23	CBC	8089	Side plate	NLA		Use CBC9120
23	CBC	9120	Side plate	1	(1)	Majestic
24	SM	104121 J	Screw	1		
25	SL	104121 J	Taptite screw	3		
26	DBC	2684	Linear switch	1	(2)	2.9 Litre
27	SE	104101 J	Screw	NLA		
28	WA	104001 J	Plain washer	2		
29	CAC	8475	Disc gate seal	NLA		Use CBC5508
29	CBC	5508	Disc gate seal	1		
30	CAC	8476	Sliding arm	1		
31	CBC	7362	Swinging arm J-gate seal	NLA		Use CCC7043
31	CCC	7043	Swinging arm J-gate seal	1		
32	CAC	9012	Compression spring	1		
33	CBC	1417	J-gate seal spacer	1		
34	CAC	9484	Spacer washer-18mm	1		Except USA
34	CBC	5559	Spacer washer-14mm	1		
35	SH	105121 J	Screw	1		
36	WC	105001 J	Plain washer	1		
37	CBC	4678	Stop rubber-J-gate	1		
38	CBC	5508	Disc gate seal	1		

CHANGE POINTS

(1) From (V) 594576 To (V) 629285

(2) To (V) 594575


A-CLUTCH-4.0 LITRE

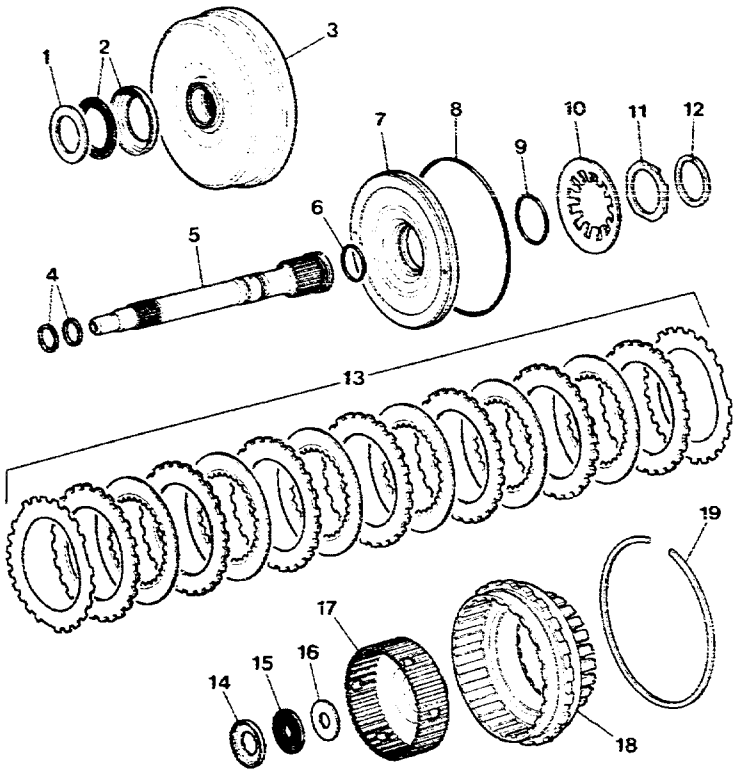

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 10430	Angle disc	1		
2	JLM 1026	Needle cage	1		
3	JLM 10402	Clutch coupling	NLA		Use JLM10397
3	JLM 10397	Clutch coupling	1		
4	JLM 1025	Piston ring	2		
5	JLM 10401	Input shaft	1		
6	JLM 1023	O-ring	1		
7	JLM 1068	Piston	1		
8	JLM 10404	O-ring	1		
9	JLM 10403	O-ring	1		
10	JLM 1087	Cup spring	1		
11	JLM 1074	Lock washer	1		
12	JLM 1075	Snap ring	1		
13	JLM 10397	Clutch coupling	1		4.0 Litre
14	JLM 1028	Washer	NLA		Use JLM944
14	JLM 944	Washer	1		
15	JLM 1029	Needle cage	1		
16	JLM 1030	Washer	1		
17	JLM 10431	Disc carrier	1		
18	JLM 10432	Clutch coupling	1		
19	JLM 1036	Snap ring	1		
	JLM 2237	O-ring and seal kit	1		
	JLM 1005	Needle bearing and piston ring kit	1		


B-CLUTCH-4.0 LITRE

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 10432	Clutch coupling	1		4.0 Litre
2	JLM 10404	O-ring	1		
3	JLM 10403	O-ring	1		
4	JLM 1036	Snap ring	1		
5	JLM 1035	Support ring	NLA		
6	JLM 1023	O-ring	1		
	JLM 2237	O-ring and seal kit	1		
	JLM 1005	Needle bearing and piston ring kit	1		

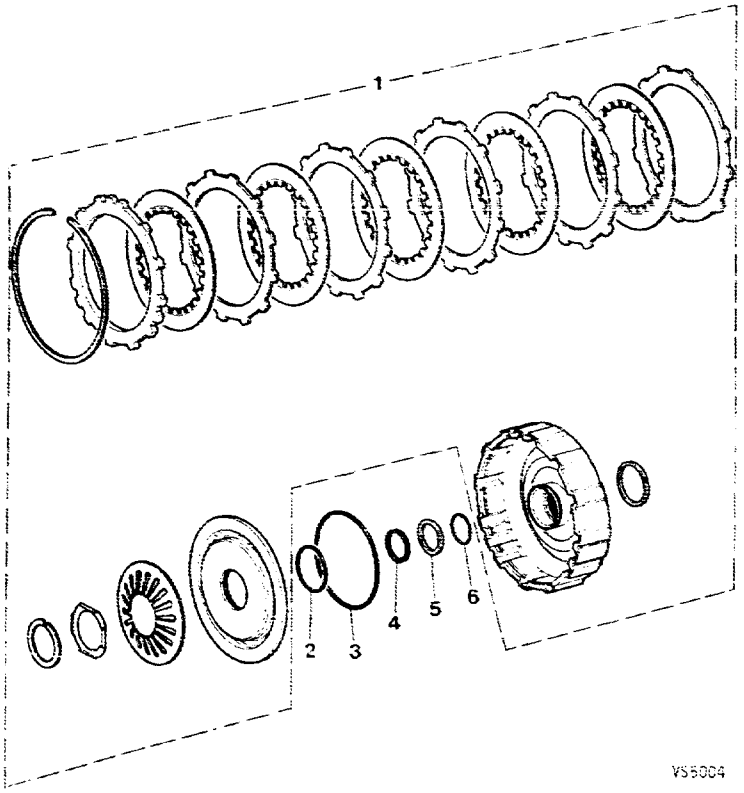

VS6004


C-CLUTCH-4.0 LITRE

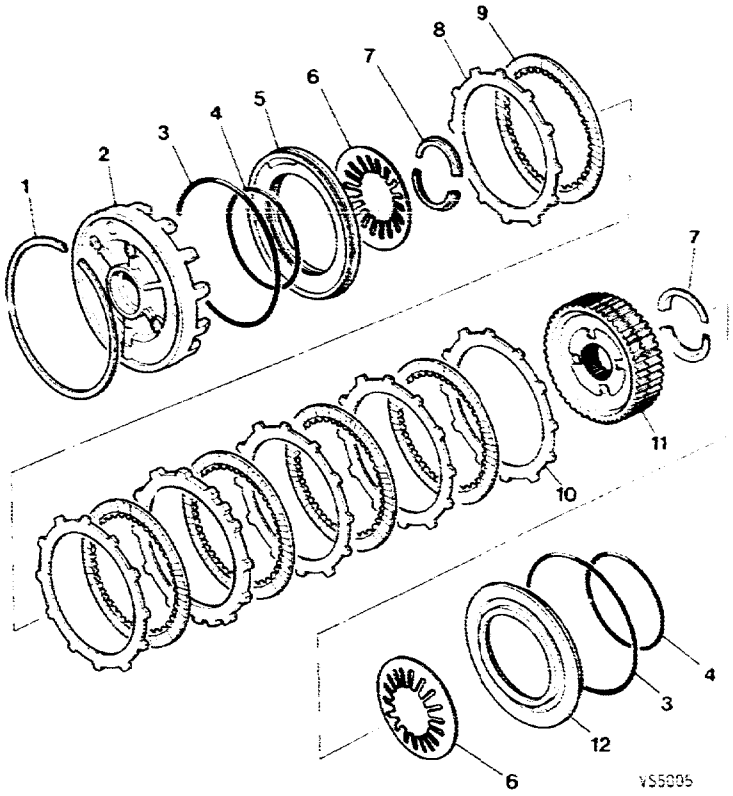


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	916	Snap ring	1		
2	JLM	10420	Centering plate	1	(1)	4.0 Litre
2	JLM	10862	Centering plate	1	(2)	4.0 Litre
3	JLM	878	O-ring	2		
4	JLM	919	O-ring	2		
5	JLM	918	Piston	1		
6	JLM	920	Cup spring	2		
7	JLM	921	Stop ring	2		
8	JLM	992	Clutch disc-1.8mm	1		4.0 Litre
8	JLM	999	Clutch disc 2.1mm	4		4.0 Litre
9	JLM	10421	Clutch disc-lined	5		4.0 Litre
10	JLM	10422	End clutch disc	1		4.0 Litre
11	JLM	10439	Free wheel	1		4.0 Litre
12	JLM	10423	Piston	1		
	JLM	2237	O-ring and seal kit	1		
	JLM	1005	Needle bearing and piston ring kit	1		

CHANGE POINTS
(1) To (G) 92964
(2) From (G) 92965

D-CLUTCH COUPLING-4.0 LITRE

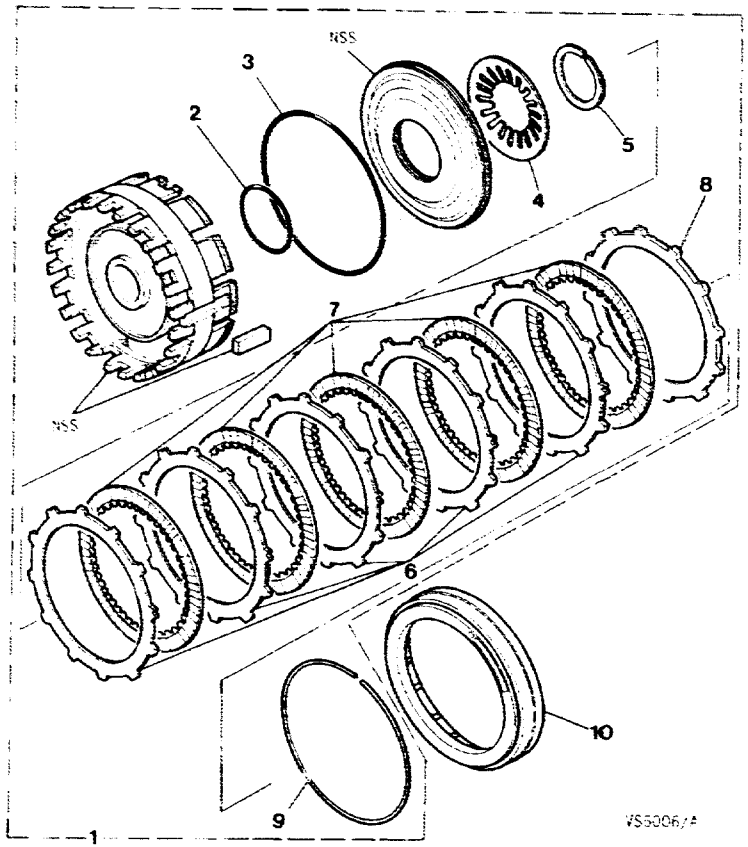


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	10429	D-CLUTCH PLATE PACK	1		4.0 Litre
2	JLM	877	• O-ring	1		
3	JLM	10820	• O-ring	1		
4	JLM	10545	• Cup spring	1		
5	JLM	879	• Snap ring	1		
6	JLM	10821	• Clutch disc-1.2mm	5		
7	JLM	10822	• Clutch disc-lined	5		
8	JLM	10823	Clutch disc-2.1mm	1		
8	JLM	10824	Clutch disc-1.8mm	1		
8	JLM	10825	Clutch disc-1.5mm	1		
8	JLM	10821	Clutch disc-1.2mm	1		
9	JLM	880	Snap ring	1		
10	JLM	881	Support ring	1		

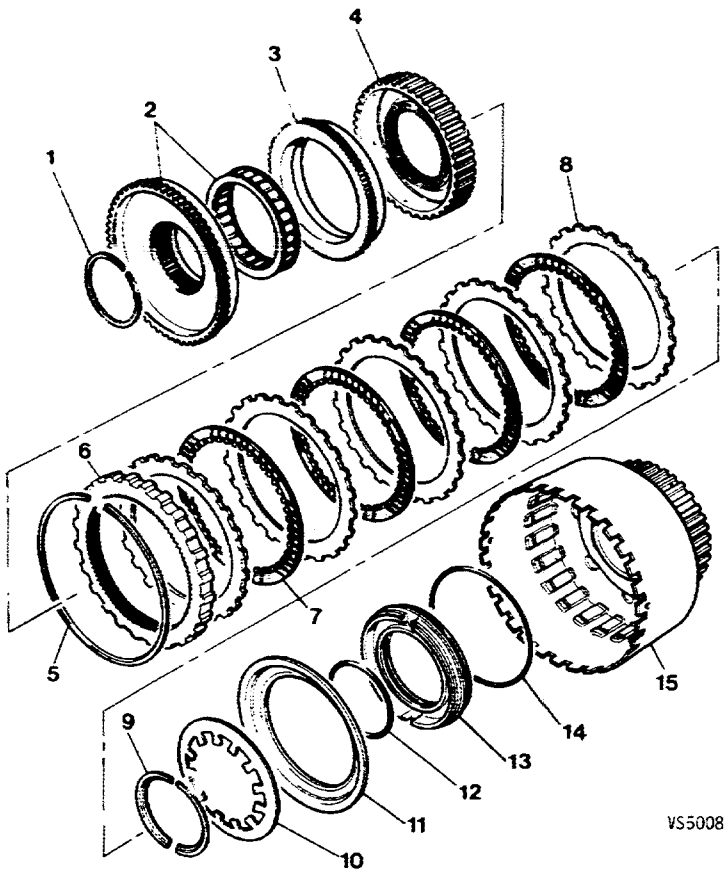


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 914	Snap ring	NLA		4.0 Litre
2	JLM 10418	Free wheel ring	1		4.0 Litre
3	JLM 10419	Free wheel	1		4.0 Litre
4	JLM 10417	Disc carrier	1		4.0 Litre
5	JLM 897	Snap ring	1		4.0 Litre
6	JLM 1003	End disc	1		4.0 Litre
7	JLM 10421	Clutch disc-lined	4		4.0 Litre
8	JLM 999	Clutch disc-2.1mm	4		4.0 Litre
9	JLM 909	Stop ring	1		4.0 Litre
10	JLM 908	Cup spring	1		4.0 Litre
11	JLM 907	Pressure plate	1		4.0 Litre
12	JLM 904	O-ring	1		4.0 Litre
13	JLM 903	Piston	1		4.0 Litre
14	JLM 1051	O-ring	1		4.0 Litre
15	JLM 10413	Cylinder	NLA		Use JLM2307.
					4.0 Litre

F-CLUTCH-4.0 LITRE

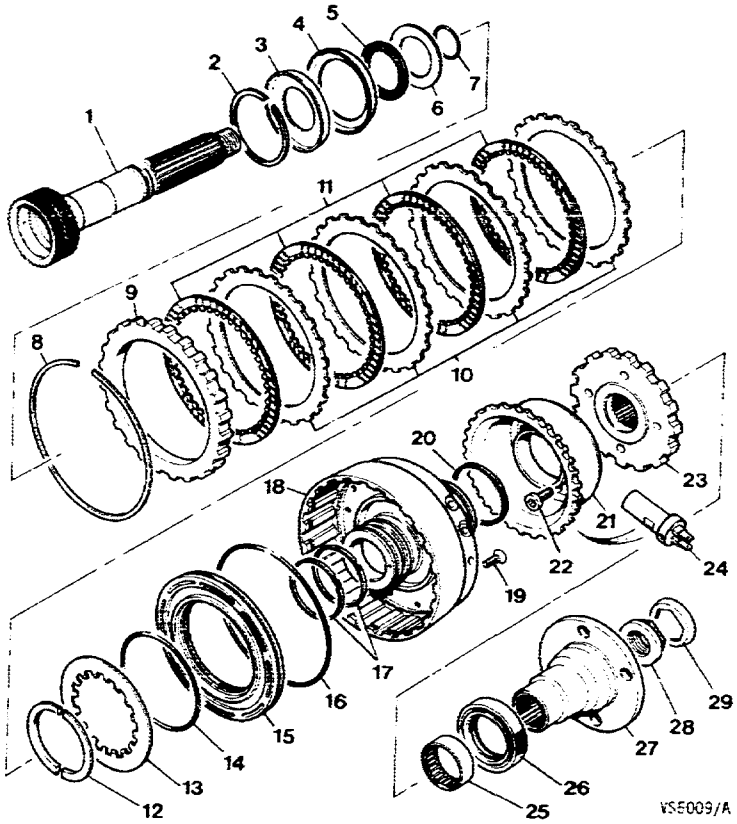


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	2305	Output shaft	1		4.0 Litre
2	JLM	915	Snap ring	NLA		
3	JLM	900	Thrust washer	1		
4	JLM	901	Thrust washer	NLA		
5	JLM	902	Needle bearing	1		
6	JLM	899	Washer	NLA		
7	JLM	2306	O-ring	NLA		
8	JLM	897	Snap ring	1		
9	JLM	996	End disc	1		
10	JLM	994	Clutch disc	4		
11	JLM	995	Friction plate	4		
12	JLM	909	Stop ring	1		
13	JLM	896	Cup spring	1		
14	JLM	894	O-ring	1		
15	JLM	893	Piston	1		
16	JLM	895	O-ring	2		
17	JLM	2308	Piston	2		
18	JLM	2307	Cylinder	1		
19	JLM	890	Screw	10		
20	JLM	2309	Piston ring	NLA		
21	JLM	2276	Counting disc	1		
22	JLM	2277	Cap screw	2		
23	JLM	2270	Park lock wheel	1		
24	JLM	2173	Speed transducer-gearbox	NLA		Use JLM11251
						4.0 Litre
24	JLM	11251	Speed transducer-gearbox	1		
25	JLM	694	Needle sleeve	1		
26	JLM	10723	Output flange seal	1		
27	JLM	874	Output flange	1		
28	JLM	711	Collar nut	1		
29	JLM	699	Tab washer	1		

PARKING LOCK-4.0 LITRE

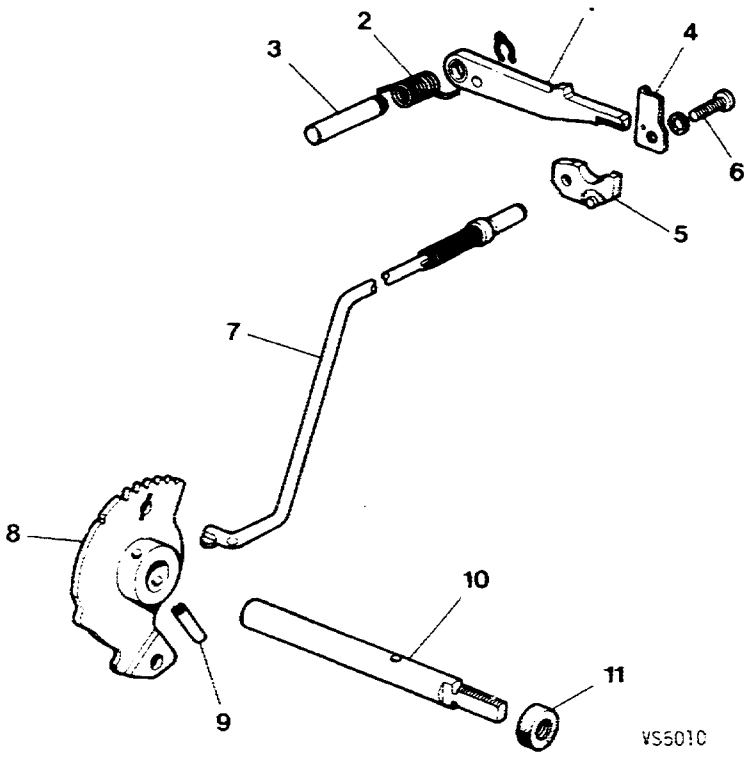

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 2273	Pawl	1		4.0 Litre
2	JLM 2274	Leg spring	1		4.0 Litre
3	JLM 2272	Pin	1		4.0 Litre
4	JLM 1052	Guide sheet	1		4.0 Litre
5	JLM 2278	Guide piece	1		4.0 Litre
6	JLM 2279	Cap screw	NLA		4.0 Litre
7	JLM 2275	Connecting bar	1		4.0 Litre
8	JLM 869	Detent disc	1		4.0 Litre
9	JLM 1195	Stop pin	1		4.0 Litre
10	JLM 2280	Selector shaft	1		4.0 Litre
11	JLM 866	Shaft seal-gearbox	1		4.0 Litre


FRONT PUMP AND INTERMEDIATE PLATE-4.0 LITRE

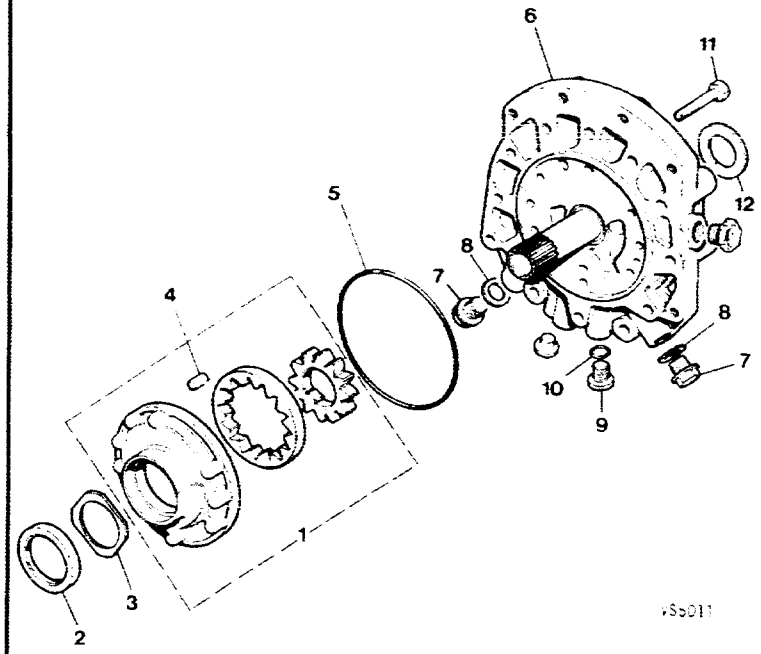

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 10441	Front pump -assembly	1	(1)	4.0 Litre
1	JLM 10716	Front pump -assembly-front	1	(2)	4.0 Litre
2	JLM 10856	PUMP SEAL -FRONT	1		
3	JLM 10442	• Washer	1		
4	JLM 10444	• Cylindrical pin	1		
5	JLM 10409	• O ring	1		
6	JLM 10448	Intermediate plate	1	(1)	4.0 Litre
6	JLM 10717	Intermediate plate	1	(2)	4.0 Litre
7	JLM 737	Screw plug	2		
8	JLM 734	Sealing ring	2		
9	JLM 738	Screw plug	1		
10	JLM 733	Sealing ring	1		
11	JLM 663	Hexagon head screw	NLA		
12	JLM 702	Special washer-0.84mm	1		
12	JLM 692	Special washer-1.2mm	1		
12	JLM 689	Special washer-1.4mm	1		
12	JLM 685	Special washer-1.6mm	1		
12	JLM 684	Special washer-1.8mm	1		
12	JLM 679	Special washer-2mm	1		
12	JLM 678	Special washer-2.17mm	1		
12	JLM 673	Special washer-2.37mm	1		
12	JLM 670	Special washer-2.55mm	1		
12	JLM 668	Special washer-2.8mm	1		

CHANGE POINTS
(1) To (G) 35363
(2) From (G) 35364


SUN GEAR AND PLANETARY DRIVE

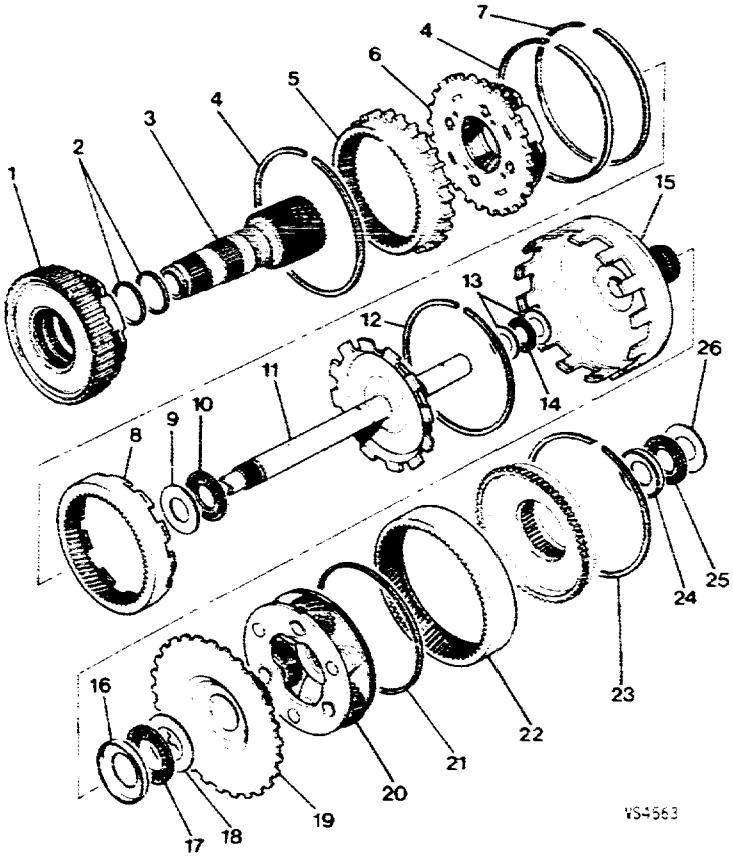

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 927	Planetary drive	1		2.9 Litre
					3.2 Litre
					3.6 Litre (XJ40)
1	JLM 10425	Planetary drive	1		4.0 Litre
2	JLM 925	Piston ring	1		
3	JLM 1006	Sun gear shaft	1		2.9 Litre
					3.6 Litre (XJ40)
3	JLM 10424	Sun gear shaft	1		4.0 Litre
4	JLM 1069	Snap ring	2		
5	JLM 924	Ring gear	1		
6	JLM 934	Planetary drive	1		
7	JLM 937	Snap ring	1		
8	JLM 926	Ring gear	1		
9	JLM 929	Washer	1		
10	JLM 928	Needle cage	1		
11	JLM 930	Intermediate shaft	1		
12	JLM 931	Snap ring	1		
13	JLM 932	Washer	2		
14	JLM 933	Needle cage	1		
15	JLM 936	Spider shaft	1		
16	JLM 938	Angle disc	1		
17	JLM 1086	Needle bearing	NLA		Use JLM902
17	JLM 902	Needle bearing	1		
18	JLM 939	Washer	1		
19	JLM 940	Sun gear	NLA		
20	JLM 941	Planetary drive	1	(1)	
20	JLM 10876	Planetary drive	1	(2)	3.2 Litre
20	JLM 10428	Planetary drive	NLA	(3)	4.0 Litre
20	JLM 10861	Planetary drive-stamped "0147"	1	(4)	4.0 Litre
21	JLM 943	Snap ring	NLA		
22	JLM 942	Ring gear	1		
23	JLM 943	Snap ring	NLA		
24	JLM 944	Washer	1		
25	JLM 928	Needle cage	1		
26	JLM 929	Washer	1		

CHANGE POINTS

(1) To (G) 1370464
(2) From (G) 1370465
(3) To (G) 91535
(4) From (G) 91536

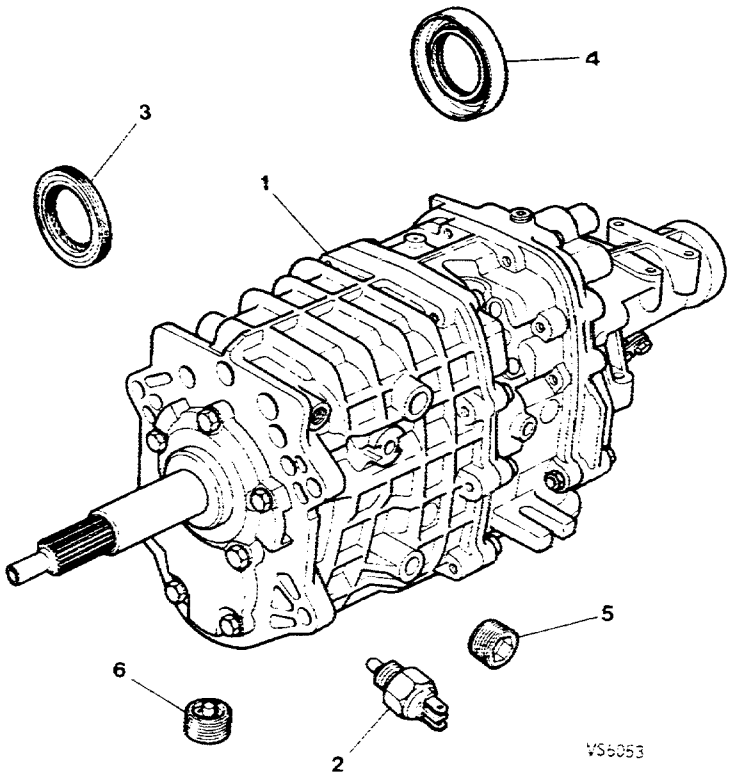


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	8195	Manual gearbox-assembly-non speed sensor-new	NLA	(1)	Use EAC8195E. 2.9 Litre;manual
1	EAC	8195 E	Manual gearbox-assembly-speed sensor-remanufactured unit	NLA	(1)	2.9 Litre;manual
1	EBC	1937 E	Manual gearbox-assembly-speed sensor-remanufactured unit	1	(2)	2.9 Litre;manual
1	EBC	3283 N	Manual gearbox-assembly-speed sensor-new	NLA	(3)	Use EBC3283E. 2.9 Litre;manual
1	EBC	3283 E	Manual gearbox-assembly-speed sensor-remanufactured unit	1		2.9 Litre;manual
1	EBC	3283 N	Manual gearbox-assembly-speed sensor-new	NLA		Use EBC3283E 3.2 Litre;manual
1	EBC	3283 E	Manual gearbox-assembly-speed sensor-remanufactured unit	1		3.2 Litre;manual
1	EAC	8195	Manual gearbox-assembly-non speed sensor-new	NLA	(4)	Use EAC8195E 3.6 Litre (XJ40);manual
1	EAC	8195 E	Manual gearbox-assembly-speed sensor-remanufactured unit	NLA	(4)	3.6 Litre (XJ40);manual
1	EBC	1937 E	Manual gearbox-assembly-speed sensor-remanufactured unit	1	(5)	3.6 Litre (XJ40);manual
2	DAC	3476	Reverse lamp switch	1		
3	JLM	1181	Oil seal-front-35mm	1		
3	JLM	10396	Oil seal-front-27mm inside diameter	1		
4	AEU	4006	Oil seal-rear	1		
5	JLM	1180	Filler plug	1		
6	JLM	1182	Magnetic drain plug	1		
	TE	112071 J	Stud	4		Gearbox to bell housing
	WA	112081 J	Washer	4		
	NH	112041 J	Nut	4		

CHANGE POINTS.

(1) To (G) 103852
(2) From (G) 103853 To (V) 594575
(3) From (V) 594576
(4) To (G) 121187
(5) From (G) 121188

GEARBOX-4.0 LITRE-MANUAL

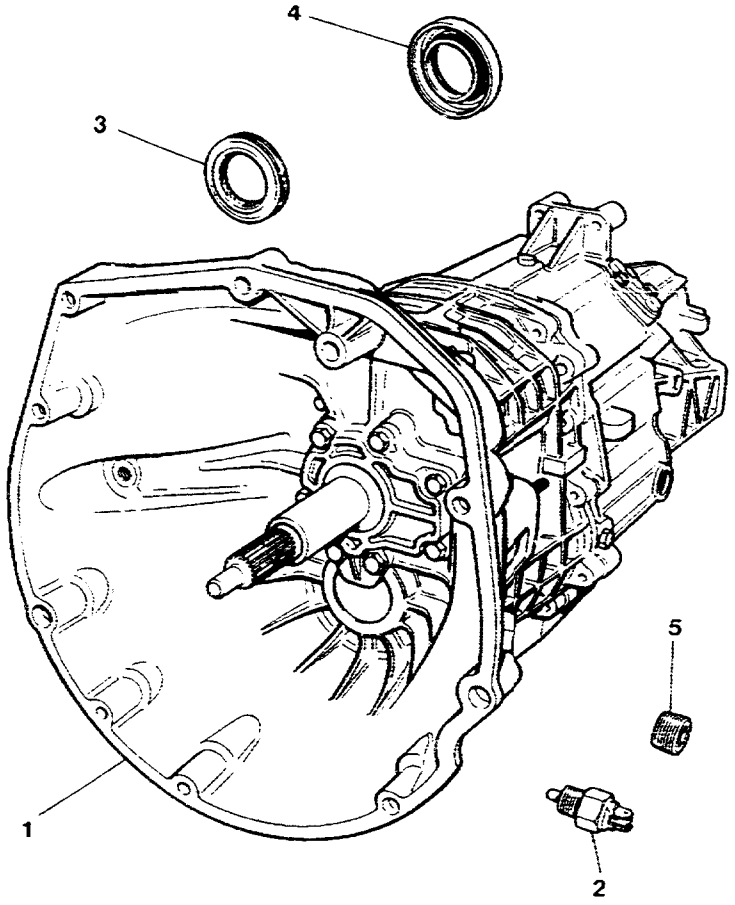


VS5058/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	3667 N	Manual gearbox-assembly-new	NLA	(1)	Use EBC4663N
1	EBC	3667 E	Manual gearbox-assembly-remanufactured unit	NLA	(1)	Use EBC4663E
1	EBC	4663 N	Manual gearbox-assembly-new	NLA	(2)	Use EBC11305N
1	EBC	4663 E	Manual gearbox-assembly-remanufactured unit	NLA		Use EBC11305E
1	EBC	11305 N	Manual gearbox-assembly-new	NLA		Use EBC11305E
1	EBC	11305 E	Manual gearbox-assembly-remanufactured unit	1		4.0 Litre,manual
2	DBC	3055	Reverse lamp switch	NLA		Use DBC6754
						4.0 Litre,manual
2	DBC	6754	Reverse lamp switch	1		4.0 Litre,manual
	DBC	3054	1st and 2nd gear switch	1		4.0 Litre,manual
3	JLM	1181	Oil seal-front-35mm	1		
4	AEU	4006	Oil seal-rear	1		
5	JLM	1180	Filler plug	2		
	FB	110165 J	Bolt	4		Gearbox to engine
	FB	110201 J	Bolt	4		
	FB	110125 J	Bolt	1		

CHANGE POINTS
(1) To (V) 629285
(2) From (V) 629286

FLYWHEEL AND CLUTCH-2.9/3.2/3.6 LITRE

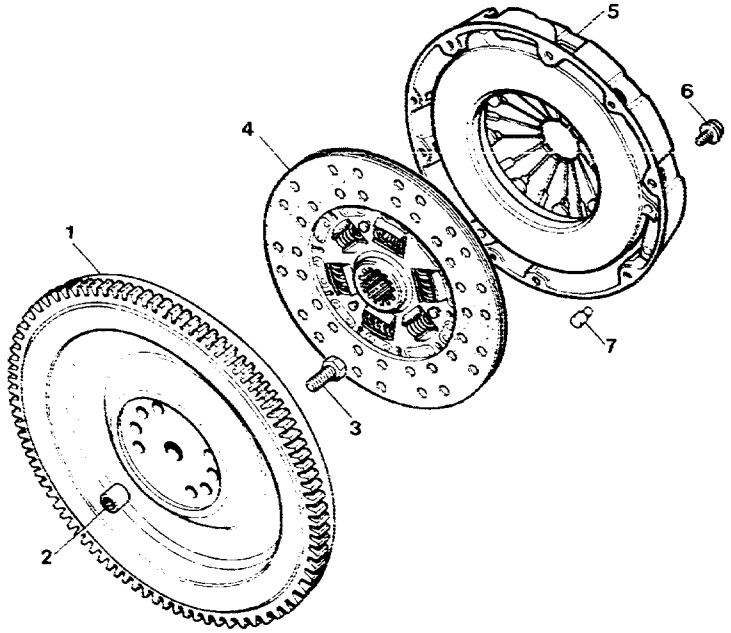

VS4273

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	1832	Flywheel	1		2.9 Litre;manual
1	EBC	1832	Flywheel	1		3.2 Litre;manual
1	EBC	1832	Flywheel	1		3.6 Litre (XJ40);manual
2	UKC	8154 J	Spigot bearing	1		
3	EAC	2547	Setscrew	8		
4	EAC	8595	Clutch plate	NLA		Use EBC4132.
						2.9 Litre;manual
4	EAC	8595	Clutch plate	NLA		Use EBC4132.
						3.6 Litre (XJ40);manual
4	EBC	4132	Clutch plate	1		3.2 Litre;manual
5	EAC	9985	Clutch cover	1		
6	FS	108251 J	Washer faced setscrew-M8 x 25mm	6		Clutch to flywheel
7	C	8631	Dowel	NLA		Clutch to flywheel

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

CLUTCH MASTER CYLINDER/SLAVE ..... 2. G 05
CLUTCH PEDAL AND MECHANICAL LINKAGE ..... 2. G 07
CLUTCHES-AUTOMATIC GEARBOX ..... 2. E 16
CONTROL VALVE ASSEMBLY-AUTOMATIC ..... 2. F 07
CONTROLS AND LINKAGE-AUTOMATIC ..... 2. E 11
CONTROLS AND SELECTORS-MANUAL ..... 2. G 03
DIFFERENTIAL ASSEMBLY ..... 2. H 03
FLYWHEEL AND CLUTCH ..... 2. F 18
GEARBOX ASSEMBLY AND CASING- ..... 2. E 02
GEARBOX ASSEMBLY-MANUAL GEARBOX ..... 2. F 16
HALFSHAFTS ..... 2. G 10
LUBRICATION SYSTEM-AUTOMATIC ..... 2. E 09
PARK LOCK-AUTOMATIC GEARBOX ..... 2. F 11
PROPSHAFT ..... 2. G 11
PUMP-AUTOMATIC GEARBOX ..... 2. F 13
SHAFTS AND GEARS-AUTOMATIC ..... 2. F 15
TORQUE CONVERTER AND HOUSING ..... 2. E 05
A-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. E 16
A-CLUTCH-4.0 LITRE ..... 2. E 17
B-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. E 18
B-CLUTCH-4.0 LITRE ..... 2. F 02
Bearing and sleeve-assembly ..... 2. G 07
C-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 03
C-CLUTCH-4.0 LITRE ..... 2. F 04
CHANGE SPEED LEVER-2.9/3.2 LITRE- ..... 2. G 04
CHANGE SPEED LEVER-2.9/3.6 LITRE- ..... 2. G 03
CLUTCH MASTER CYLINDER-FROM ..... 2. G 06
CLUTCH MASTER CYLINDER-UP TO ..... 2. G 05
CLUTCH MECHANISM-2.9/3.2/3.6 LITRE ..... 2. G 07
CLUTCH MECHANISM-4.0 LITRE ..... 2. G 08
CLUTCH PEDAL ..... 2. G 09
CONTROL VALVE ASSEMBLY-FROM ..... 2. E 08
CONTROL VALVE ASSEMBLY-UP TO ..... 2. E 07
Clutch housing ..... 2. G 07
Clutch lever ..... 2. G 07
Clutch lever ..... 2. G 08
Clutch release bearing-assembly ..... 2. G 08
Clutch slave cylinder repair kit ..... 2. G 07
Clutch slave cylinder repair kit ..... 2. G 08
Clutch slave cylinder ..... 2. G 07
Clutch slave cylinder ..... 2. G 08
Clutch switch ..... 2. G 09
D-CLUTCH COUPLING-4.0 LITRE ..... 2. F 06
D-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 05
DIFFERENTIAL ASSEMBLY COMPONENTS- ..... 2. H 12
DIFFERENTIAL ASSEMBLY COMPONENTS- ..... 2. H 14
DIFFERENTIAL ASSEMBLY-JURID FLANGE ..... 2. H 09
DIFFERENTIAL ASSEMBLY-JURID ..... 2. H 05
DIFFERENTIAL ASSEMBLY-NON JURID ..... 2. H 11
DIFFERENTIAL ASSEMBLY ..... 2. H 03
E-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 07
E-CLUTCH-4.0 LITRE ..... 2. F 08
F-CLUTCH-2.9/3.2/3.6 LITRE ..... 2. F 09
F-CLUTCH-4.0 LITRE ..... 2. F 10
Gear change knob ..... 2. E 14
Gear selector illumination module-assembly ..... 2. E 14
Governor-assembly ..... 2. F 09
Pedal pad rubber-clutch ..... 2. G 09
SELECTOR MODULE ASSEMBLY- ..... 2. E 14
SPORT MODE SWITCH-AUTOMATIC ..... 2. E 13
Selector housing ..... 2. E 14
Sports mode switch ..... 2. E 13
TRANSMISSION CONTROL CABLE ..... 2. E 12


FLYWHEEL ASSEMBLY-4.0 LITRE

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EBC	3114	FLYWHEEL-ASSEMBLY	1		4.0 Litre;manual
2	UKC	8154J	• Spigot bearing	1		
3	EAC	9705	Bolt	8		
4	EBC	2856	Clutch plate	1		4.0 Litre;manual
5	EBC	3115	Clutch cover	1		4.0 Litre;manual
6	FS	108251J	Washer faced setscrew-M8 x 25mm	6		

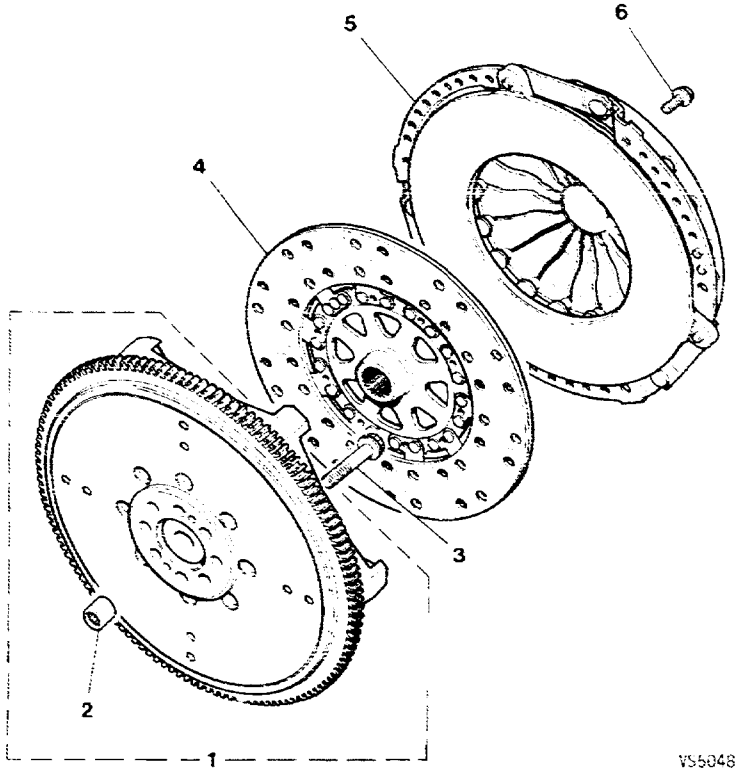

VS5048


CHANGE SPEED LEVER-2.9/3.2 LITRE-MANUAL-FROM (V)594576

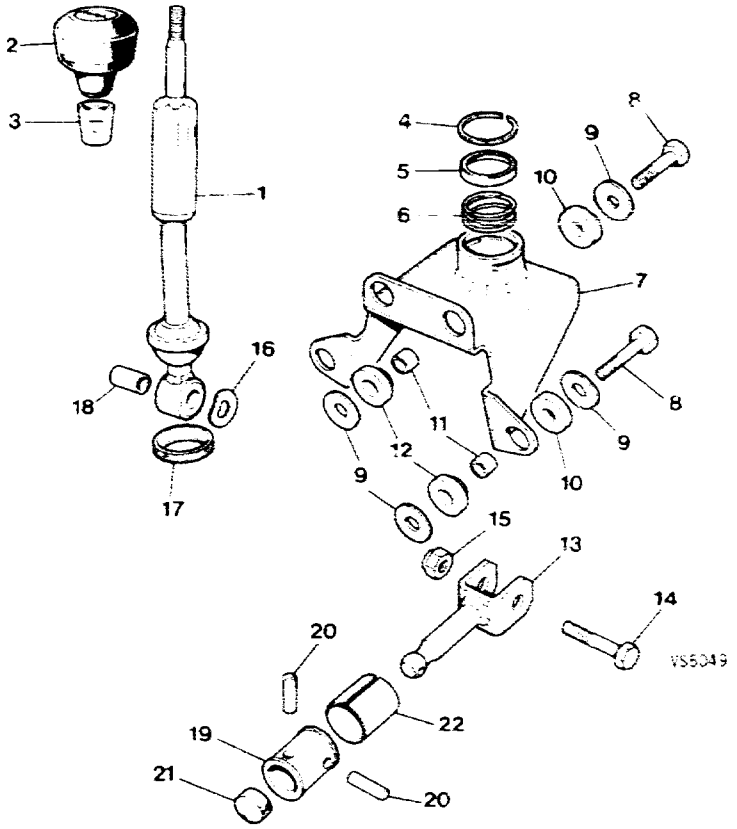

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9946	Change speed lever-assembly	1	(1)	2.9 Litre
1	EAC	9946	Change speed lever-assembly	1	(1)	3.2 Litre
1	EAC	9946	Change speed lever-assembly	1	(1)	4.0 Litre
2	EAC	9816	Gear change knob-assembly	1	(1)	2.9 Litre
2	EAC	9816	Gear change knob-assembly	1	(1)	3.2 Litre
2	EAC	9816	Gear change knob-assembly	1	(1)	4.0 Litre
3	EAC	1896	Locking cone	1		
4	AGU	1381	Spring ring	1		
5	EAC	5261	Spring retainer	1		
6	EAC	9855	Coil spring	1		
7	EAC	9947	Gear change housing -assembly	1	(1)	2.9 Litre
7	EAC	9162	Gear change housing -assembly	1	(1)	3.2 Litre
7	EAC	9162	Gear change housing -assembly	1	(1)	4.0 Litre
8	BH	108071J	Bolt	4		
9	WJ	108001J	Plain washer	4		
10	UKC	1090	Washer	NLA		Use UKC1090J
10	UKC	1090J	Washer	4		
11	EAC	4902	Tube	4		
12	UKC	854J	Bush	NLA		Use FRC7418J
12	FRC	7418J	Bush	4		
13	EAC	9586	Selector shaft	1		
14	BH	108081J	Bolt	1		
15	NY	108041J	Locking nut-M8	NLA		Use JFY10804B
15	JFY	10804B	Locking nut	1		
16	AGU	1533	Special washer	1		
17	EAC	5259	Spherical washer	1		
18	EAC	5271	Lever sleeve	1		
19	EAC	6024	Selector shaft joint	1		
20	EAC	6025	Pin	1		
21	EAC	6026	Foam disc	1		
22	EAC	6027	Retainer clip	1		
	EAC	9164	Spherical bearing	1		

CHANGE POINTS
(1) From (V) 594576

CLUTCH MASTER CYLINDER-FROM (V)594576

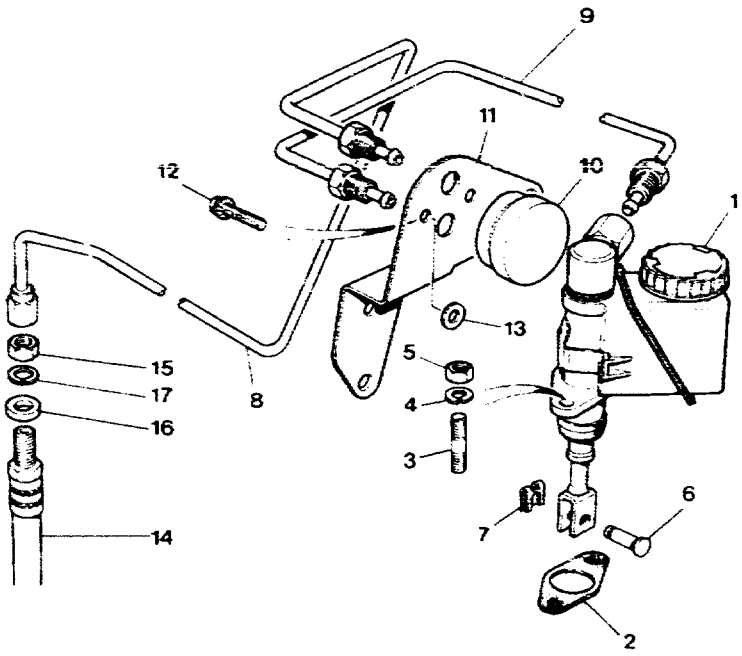


VS5185

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	7284	Clutch master cylinder	1	(1)	
1	NSP		Clutch master cylinder	NLA	(2)	Use CCC6760
	CCC	6760	MASTER CYLINDER	1		
	JLM	12263	• Cap	1		
2	C	32202	Shim	A/R		
3	TD	108041 J	Stud	NLA		
4	WF	600050 J	Washer	2		
5	NH	108041 J	Flanged nut -M8	NLA		Use FN108041J
5	FN	108041 J	Flanged nut -M8	2		
6	J	205 8S	Joint pin	NLA		
7	C	27328 3Z	Safety clip	1		
8	CBC	6565	Hydraulic pipe-RH	1	(3)	RHD
8	CBC	6566	Hydraulic pipe-LH	1	(3)	LHD
9	CBC	4406	Clutch pipe -assembly	NLA	(4)	Use CBC9647
9	CBC	9647	Clutch pipe	NLA		Use CCC2984
9	CCC	2984	Clutch pipe	1	(5)	
10	CAC	9508	Clutch damper-assembly	NLA		Use AAU8008
10	AAU	8008	Clutch damper-assembly	1		
11	CBC	7319	Damper mounting bracket	1		
12	AGU	1198 J	Setscrew	NLA		Use FS106121J
12	FS	106121 J	Setscrew-M6	2		
13	FW	104 T	Plain washer-0.25" I/d	NLA		Use WA106041 J
13	WA	106041 J	Plain washer-0.25" I/d	4		
14	CAC	9301	Clutch slave cylinder flexible hose	1		
15	NT	212041 J	Nut	1		
16	C	31135	Flexible hose washer	1	(3)	RHD
17	WF	112001 J	Flexible hose washer	NLA	(3)	LHD
	CBC	9674	Clutch slave cylinder	1	(3)	
	CBC	8827	Hydraulic clutch pipe	NLA	(2)	LHD
	CBC	8826	Hydraulic clutch pipe	NLA	(2)	RHD
	CBC	9750	Clutch pipe support bracket	NLA	(2)	
	CBC	6152	Clutch pedal housing gasket	A/R		

CHANGE POINTS.


(1) From (V) 594576 To (V) 629361
(2) From (V) 629362
(3) From (V) 594576
(4) From (V) 594576 To (V) 629285
(5) From (V) 629286

CLUTCH MECHANISM-4.0 LITRE

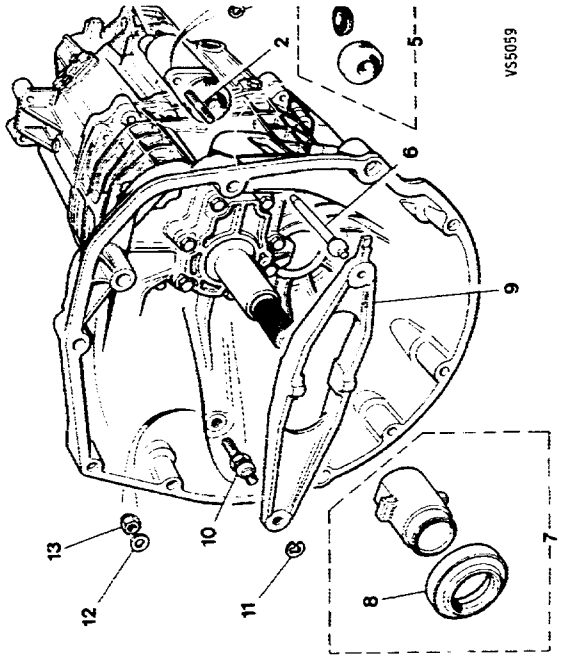

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 9044	Clutch slave cylinder	1		4.0 Litre;manual
2	TE 108051 J	Stud	2		
3	WL 108001 J	Spring washer-M8	2		
4	NH 108041 J	Flanged nut -M8	NLA		Use FN108041J.
4	FN 108041 J	Flanged nut -M8	2		
5	BAU 4781 A	Clutch slave cylinder repair kit	1		4.0 Litre;manual
6	EAC 5378	Push rod	1		4.0 Litre;manual
7	EAC 9809	CLUTCH RELEASE BEARING-ASSEMBLY	1		4.0 Litre;manual
8	JLM 9626	• Clutch release bearing	1		
9	EAC 9895	Clutch lever	1		4.0 Litre;manual
10	EAC 5405	Pivot pin	1		
11	BRC 1063	Spring clip	1		
	WA 108051 J	Washer	NLA		Use WA108051.
12	WA 108051	Plain washer-0.3125" diameter	1		
13	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B.
13	JFY 10804B	Locking nut	1		

CLUTCH PEDAL

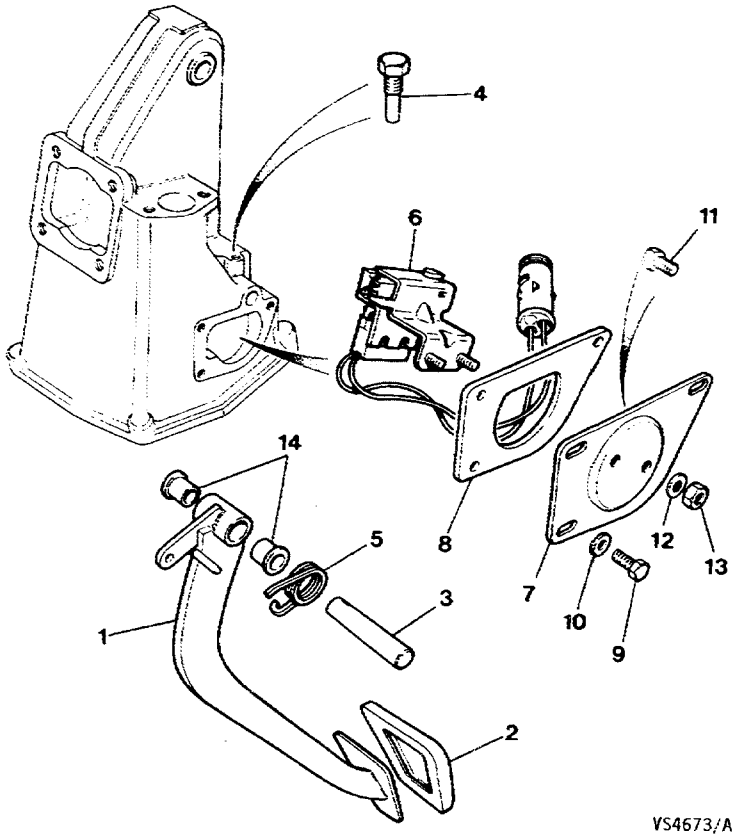


VS4673/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6680	Clutch pedal	NLA	(1)	
2	CAC 9759	Pedal pad rubber-clutch	1		
3	CAC 4995	Clutch pedal pivot pin	1		
4	CAC 8451	Locking pin	1		
5	C 24689	Return spring-brake pedal	1		
6	DBC 2925	Clutch switch	1		
7	CAC 9971	Cover plate	1		
8	CAC 7922	Gasket	1		
9	SH 105101 J	Screw	3		
10	WA 105001 J	Plain washer-M5	3		
11	SH 104101 J	Setscrew	2		
12	WA 104001 J	Plain washer	2		
13	NH 104041 J	Nut-M4	2		
14	CAC 1742	Pivot bush	2		

CHANGE POINTS:
(1) To (V) 594575


HALFSHAFT ASSEMBLY

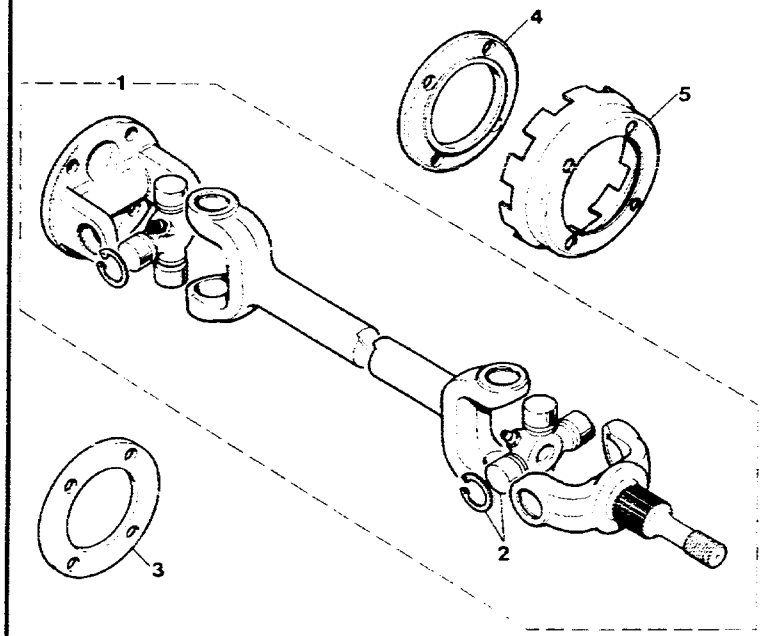

VS4586/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	2268	HALFSHAFT-ASSEMBLY	2		
2	JLM	1388	• Universal joint	4		
3	CBC	480635	Halfshaft spacer-3.5mm	A/R		
3	CBC	480640	Halfshaft spacer-4mm	A/R		
3	CBC	480645	Halfshaft spacer-4.5mm	A/R		
3	CBC	480650	Halfshaft spacer-5mm	A/R		
3	CBC	480655	Halfshaft spacer-5.5mm	A/R		
3	CBC	480660	Halfshaft spacer-6mm	A/R		
3	CBC	480665	Halfshaft spacer-6.5mm	A/R		
3	CBC	480670	Halfshaft spacer-7.0mm	A/R		
3	CBC	480675	Halfshaft spacer-7.5mm	A/R		
4	CBC	480715	Halfshaft spacer-1.5mm	A/R		
4	CBC	480720	Halfshaft spacer-2mm	A/R		
4	CBC	480725	Halfshaft spacer-2.5mm	A/R		
4	CBC	480730	Halfshaft spacer-3.0mm	A/R		
4	CBC	480735	Halfshaft spacer-3.5mm	A/R		
4	CBC	480740	Halfshaft spacer-4mm	A/R		
4	CBC	480750	Halfshaft spacer-5mm	A/R		
4	CBC	480755	Halfshaft spacer-5.5mm	A/R		
5	CAC	8713	Speed sensor rotor	1		LH side
	NV	607041	Nut	8		

PROPSHAFT-NON JURID-AUTOMATIC GEARBOX

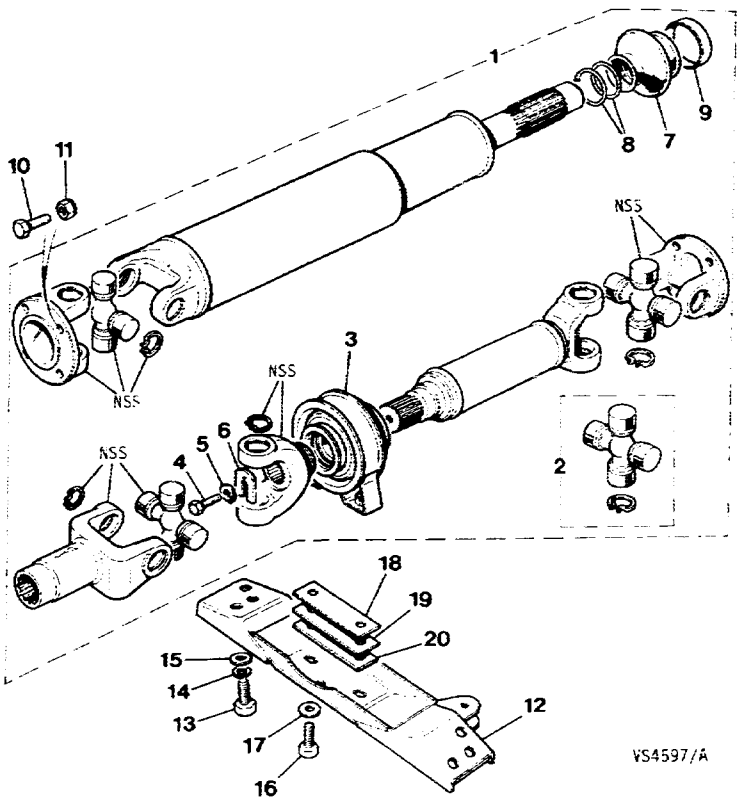

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	45543	PROPSHAFT-ASSEMBLY	1	(1, 2, 3)	
2	JLM	823	• Universal joint kit	3		
3	JLM	1542	• Centre bearing-5/16" unf	NLA		Use EBC9040
4	RTC	1335 J	• Centre propshaft bolt	1		
5	RTC	1336 J	• Tab washer	1		
6	RTC	1337 J	• Centre propshaft U-spacer	1		
7	JLM	1543	• Propshaft gaiter	1		
8	JLM	1544	• Gaiter clip	NLA		
9	JLM	1545	• Gaiter clip rubber	1		
3	EBC	9040	Centre bearing	1		
10	C	19827	Bolt -propshaft to gearbox	8	(1, 2, 3)	
11	NZ	606041 J	Locking nut	8		
12	CAC	9399	Mounting bracket	NLA		RHD
12	CAC	9400	Mounting bracket	1		LHD
13	GL	108301 J	Screw	NLA		
14	WL	108001 J	Spring washer-M8	6		
15	WC	108051 J	Plain washer	6		
16	SH	605061 MJ	Setscrew-5/16"	2		
17	WA	108051	Plain washer-0.3125" diameter	2		
18	C	29593	Propshaft alignment packer -0.125"	NLA	(1, 2, 3)	
19	C	28654 3	Propshaft alignment packer -0.064"	A/R		
20	C	28654 4	Propshaft alignment packer -0.028"	A/R		


CHANGE POINTS:

(1) To (V) 538477 3.6 Litre (XJ40); USA

(2) To (V) 542184 3.6 Litre (XJ40); except USA

(3) To (V) 549502 2.9 Litre

PROPSHAFT-2.9/3.6 LITRE-JURID COUPLING

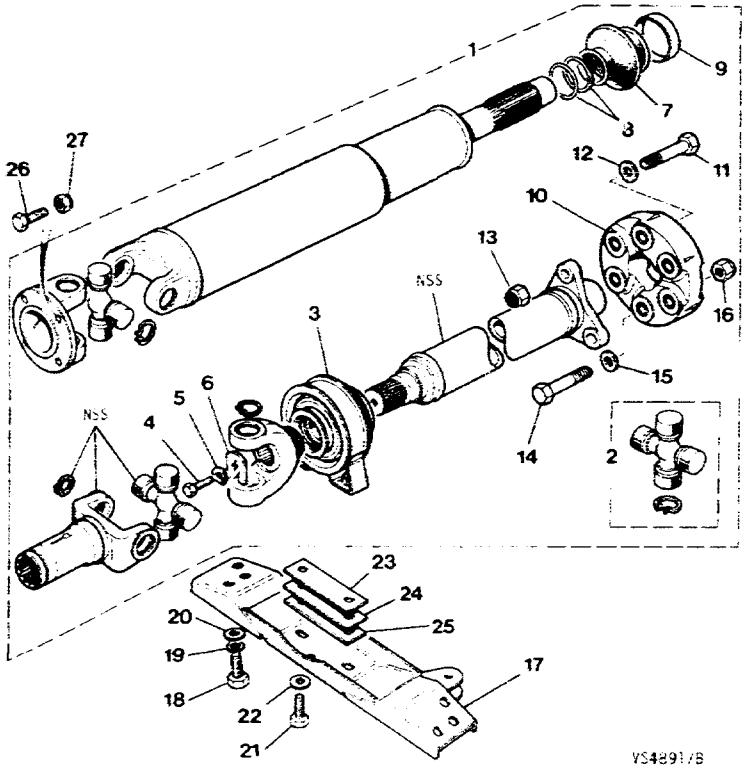

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	5194	PROPSHAFT-ASSEMBLY	NLA	(1)	Use CBC7779 2.9 Litre,Jurid coupling
						Use CBC7779 3.6 Litre (XJ40),Jurid coupling
1	CBC	7779	PROPSHAFT-ASSEMBLY	1	(2)	2.9 Litre;Jurid coupling
						3.6 Litre (XJ40),Jurid coupling
2	JLM	823	• Universal joint kit	2		
3	JLM	1542	• Centre bearing-5/16" unf	NLA		Use EBC9040
4	RTC	1335 J	• Centre propshaft bolt	1		
5	RTC	1336 J	• Tab washer	1		
6	RTC	1337 J	• Centre propshaft U-spacer	1		
7	JLM	1543	• Propshaft gaiter	1		
8	JLM	1544	• Gaiter clip	NLA		
9	JLM	1545	• Gaiter clip rubber	1		
10	CAC	7576	• Flexible jurid coupling	1		
11	CBC	7800	• Coupling bolt-propshaft to drive unit	NLA		Use CBC8174
12	CBC	8067	• Coupling washer	3		
13	NV	112051 J	• Locknut	3		
3	EBC	9040	Centre bearing	1		
11	CBC	8174	Coupling bolt-M12 x 70mm	3		
14	BX	112131 J	Coupling bolt-M12 x 65mm	3		
14	CBC	8174	Coupling bolt-M12 x 70mm	3		
15	WA	112081 J	Washer	6		
16	NV	112051 J	Locknut	3		
17	CAC	9399	Mounting bracket	NLA	(3)	2.9 Litre,Jurid coupling;RHD
17	CAC	9399	Mounting bracket	NLA	(3)	3.6 Litre (XJ40),Jurid coupling;RHD
17	CAC	9400	Mounting bracket	1	(3)	2.9 Litre;Jurid coupling;LHD
17	CAC	9400	Mounting bracket	1	(3)	3.6 Litre (XJ40),Jurid coupling;LHD
18	GL	108301 J	Screw	NLA		
19	WL	108001 J	Spring washer-M8	6		
20	WC	108051 J	Plain washer	6		
21	SH	605061 MJ	Setscrew-5/16"	2		
22	WA	108051	Plain washer-0.3125" diameter	2		
23	C	29593	Propshaft alignment packer -0.125"	NLA		
24	C	28654 3	Propshaft alignment packer -0.064"	A/R		
25	C	28654 4	Propshaft alignment packer -0.028"	A/R		
26	C	19827	Bolt -propshaft to gearbox	4		
27	NZ	6060-1 J	Locking nut	4		


CHANGE POINTS:

(1) To (V) 524374

(2) From (V) 524375 To (V) 594575

(3) To (V) 594575

PROPSHAFT-AUTOMATIC GEARBOX-FROM (V)594576

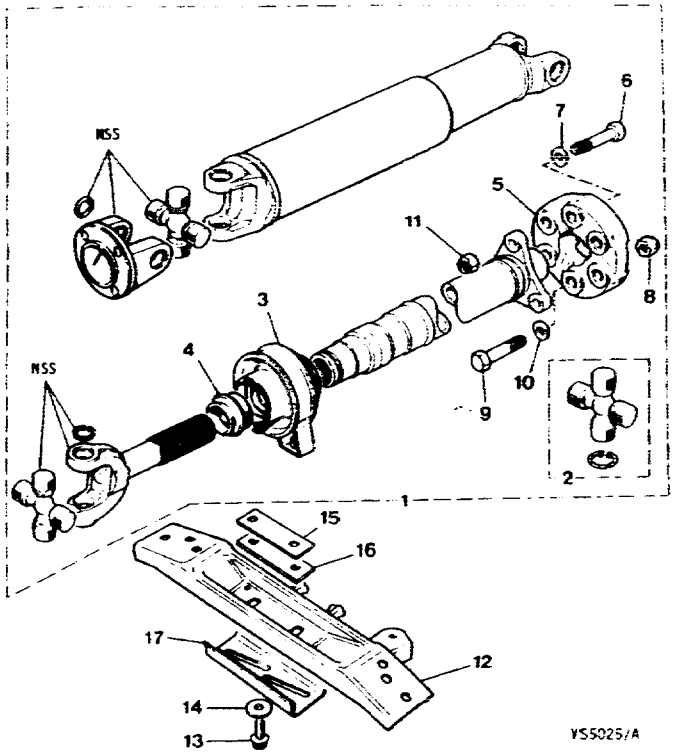


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EBC 3810	PROPSHAFT	NLA	(1)	Use EBC9104 4.0 Litre,automatic
1	EBC 9104	PROPSHAFT	NLA	(2)	Use NMB5800AA 4.0 Litre,automatic
1	CBC 9025	PROPSHAFT	NLA	(3)	Use NMB5800BA 2.9 Litre,automatic
1	CBC 9025	PROPSHAFT	NLA	(3)	Use NMB5800BA 3.2 Litre,automatic
1	EBC 9105	PROPSHAFT	NLA	(4)	Use NMB5800BA 3.2 Litre,automatic
2	JLM 2302	• Universal joint	2		
3	JLM 1989	• Centre bearing	NLA		Use appropriate propshaft Part of EBC3810, CBC9025, CBC9025
4	JLM 1543	• Propshaft gaiter	1		
5	CBC 8996	• Flexible joint coupling	1		
6	CBC 8174	• Coupling bolt-M12 x 70mm	3		
7	CBC 8067	• Coupling washer	3		
8	NV 112051J	• Locknut	3		
3	EBC 9040	• Centre bearing	1		Part of EBC9104, EBC9105
1	NMB 5800AA	Propshaft	NLA		Use NBB5800AC 4.0 Litre,automatic
1	NBB 5800AC	Propshaft-assembly-with RUT	1		4.0 Litre,automatic
1	NMB 5800BA	Propshaft-assembly	NLA		Use NNA5800EA 2.9 Litre,automatic
1	NMB 5800BA	Propshaft-assembly	NLA		Use NNA5800EA 3.2 Litre,automatic
1	NNA 5800EA	Propshaft-assembly-without RUT	NLA		Use NNA5800EC 2.9 Litre,automatic
1	NNA 5800EA	Propshaft-assembly-without RUT	NLA		Use NNA5800EC 3.2 Litre,automatic
1	NNA 5800EC	Propshaft-assembly-without RUT	1		2.9 Litre,automatic
1	NNA 5800EC	Propshaft-assembly-without RUT	1		3.2 Litre,automatic

CHANGE POINTS

(1) From (V) 594576 To (V) 646827
(2) From (V) 646828
(3) From (V) 594576 To (V) 657854
(4) From (V) 657855

PROPSHAFT-AUTOMATIC GEARBOX-FROM (V)594576

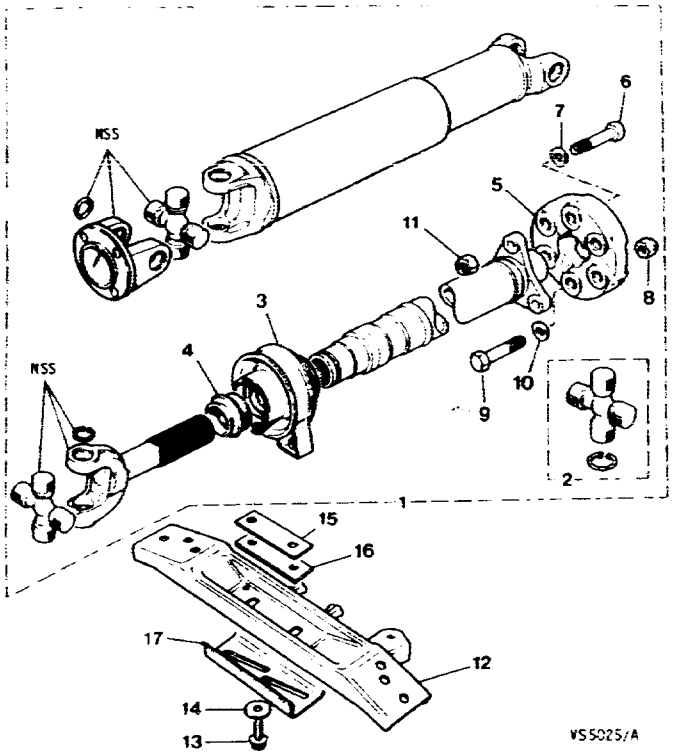


Illus	Part Number		Description	Quantity	Change Point	Remarks
9	CBC	8174	Coupling bolt-M12 x 70mm	3		
10	CBC	8067	Coupling washer	6		
11	NV	112051 J	Locknut	3		
12	EBC	3829	Centre bearing mounting bracket	1	(1)	RHD,automatic
12	EBC	3830	Centre bearing mounting bracket	1	(1)	LHD;automatic
13	FS	108201 MJ	Flanged head screw-M8	6		
14	AGU	2608	Centre bearing washer	2		
15	CBC	72531	Spacer-thin	1		
16	CBC	72532	Aluminium spacer	1		
	C	19827	Bolt -propshaft to gearbox	4		
	NZ	606041 J	Locking nut	4		
17	EBC	3966	Anti twist bracket	1		

CHANGE POINTS

(1) From (V) 594576

PROPSHAFT-MANUAL GEARBOX

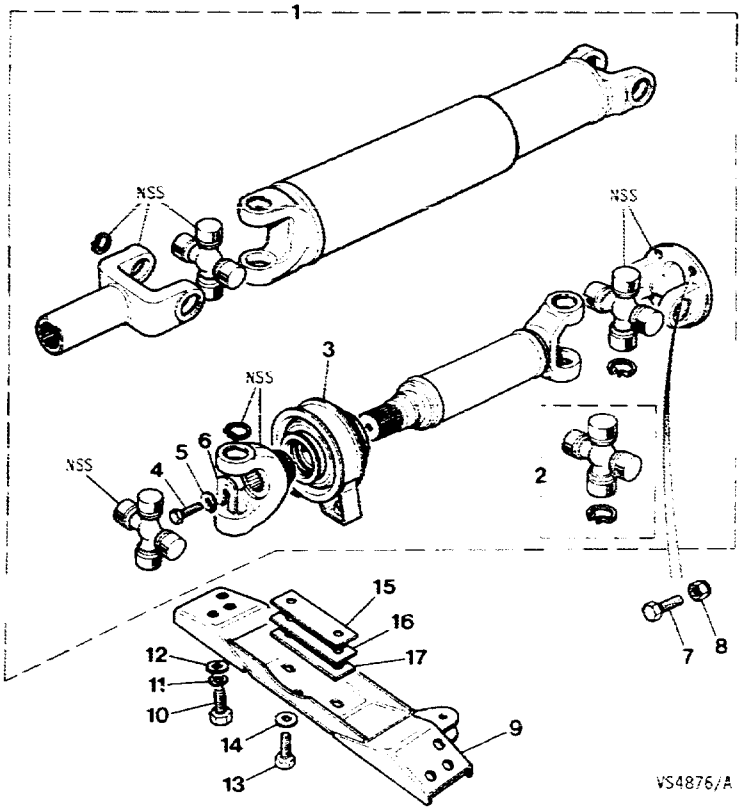

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 4555 6	PROPSHAFT-ASSEMBLY	NLA	(1, 2, 3)	Use NBA5800EA Manual,except Jurid coupling
2	JLM 823	• Universal joint kit	3		
3	JLM 1542	• Centre bearing-5/16" unf	NLA		Use EBC9040
3	EBC 9040	• Centre bearing	1		
4	RTC 1335 J	• Centre propshaft bolt	1		
5	RTC 1336 J	• Tab washer	1		
6	RTC 1337 J	• Centre propshaft U-spacer	1		
1	NBA 5800EA	Propshaft	1		Manual
7	C 19827	Bolt -propshaft to gearbox	4		
8	NZ 606041 J	Locking nut	4		
9	CAC 9399	Mounting bracket	NLA	(1, 2, 3)	RHD;manual
9	CAC 9400	Mounting bracket	1	(1, 2, 3)	LHD,manual
10	GL 108301 J	Screw	NLA		
11	WL 108001 J	Spring washer-M8	6		
12	WC 108051 J	Plain washer	6		
13	SH 605061 MJ	Setscrew-5/16"	2		
14	WA 108051	Plain washer-0.3125" diameter	2		
15	C 29593	Propshaft alignment packer -0.125"	NLA		
16	C 28654 3	Propshaft alignment packer -0.064"	A/R		
17	C 28654 4	Propshaft alignment packer -0.028"	A/R		


CHANGE POINTS:

(1) To (V) 538477 3.6 Litre (XJ40), USA

(2) To (V) 542184 3.6 Litre (XJ40), except USA

(3) To (V) 549502 2.9 Litre

PROPSHAFT-2.9/3.2/4.0 LITRE-MANUAL GEARBOX

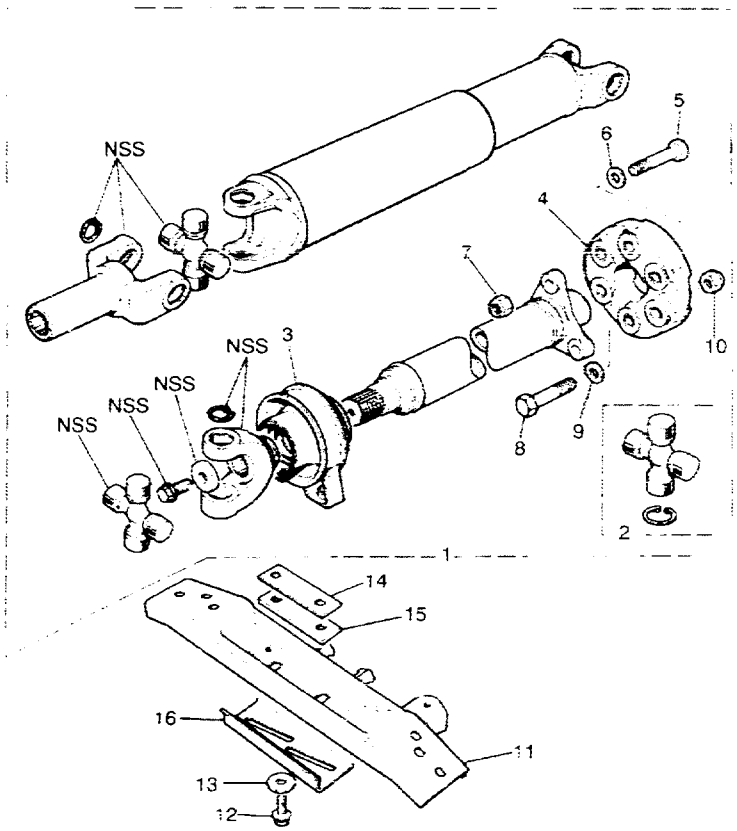


MG5026B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	7780	PROPSHAFT-ASSEMBLY	NLA	(1)	Use EBC4263 2.9 Litre,manual
1	CBC	7780	PROPSHAFT-ASSEMBLY	NLA	(1)	Use EBC4263 4.0 Litre,manual
2	JLM	823	• Universal joint kit	2		
3	JLM	1542	• Centre bearing-5/16" unf	NLA		Use EBC9040
3	EBC	9040	• Centre bearing	1		
	RTC	1335 J	• Centre propshaft bolt	1		
	RTC	1336 J	• Tab washer	1		
	RTC	1337 J	• Centre propshaft U-spacer	1		
4	CAC	7576	• Flexible juriid coupling	1		
5	CBC	7800	• Coupling bolt-propshaft to drive unit	NLA		Use CBC8174
6	CBC	8067	• Coupling washer	3		
7	NV	112051 J	• Locknut	3		
1	EBC	4263	Propshaft	NLA	(2)	Use EBC9106 2.9 Litre,manual
1	EBC	4263	Propshaft	NLA	(2)	Use EBC9106 4.0 Litre
1	EBC	4263	Propshaft	NLA	(3)	Use EBC9106 3.2 Litre,manual
1	EBC	9106	Propshaft-metalastic centre bearing	NLA		Use NMB5800CA 2.9 Litre,manual
1	EBC	9106	Propshaft-metalastic centre bearing	NLA	(4)	Use NMB5800CA 3.2 Litre,manual
1	EBC	9106	Propshaft-metalastic centre bearing	NLA	(4)	Use NMB5800CA 4.0 Litre,manual
1	NMB	5800CA	Propshaft	NLA		Use NNA5800DA
1	NNA	5800DA	Propshaft	NLA		Use NNA5800JA
1	NNA	5800JA	Propshaft-assembly-without RUT	NLA		Use NNA5800JB with NNA5800JD or NNA5800JC
1	NNA	5800JB	Propshaft-assembly-with RUT	NLA		Use NNA5800JC
1	NNA	5800JC	Propshaft-assembly-without RUT	1		Manual
1	NNA	5800JD	Propshaft-manual-with RUT	1		Manual

CHANGE POINTS

(1) From (V) 594576 To (V) 594634
(2) From (V) 594635
(3) From (V) 629286
(4) From (V) 657855

PROPSHAFT-2.9/3.2/4.0 LITRE-MANUAL GEARBOX

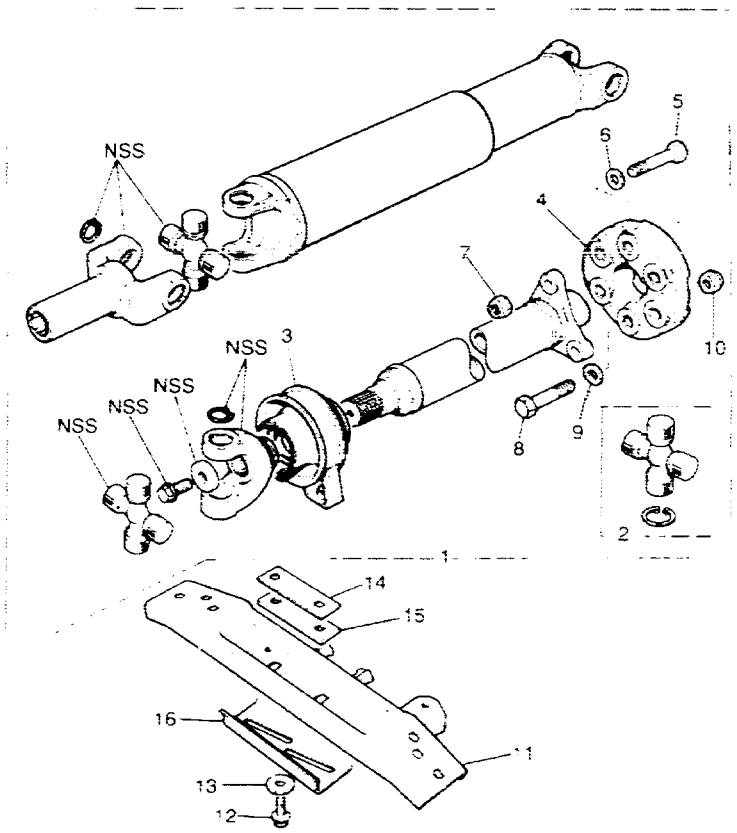


MG502b5

Illus	Part Number		Description	Quantity	Change Point	Remarks
8	CBC	8174	Coupling bolt-M12 x 70mm	3		
9	CBC	8067	Coupling washer	6		
10	NV	112051 J	Locknut	3		
11	EBC	3829	Centre bearing mounting bracket	1	(1)	2 9 Litre,RHD,manual 3 2 Litre,RHD,manual 4 0 Litre,RHD,manual
11	EBC	3830	Centre bearing mounting bracket	1	(1)	2 9 Litre,LHD,manual 3 2 Litre,LHD,manual 4 0 Litre,LHD,manual
12	FS	108201 M	Flange head screw	6		
13	AGU	2608	Centre bearing washer	2		
14	CBC	7253 1	Spacer-thin	1		
15	CBC	7253 2	Aluminium spacer	1		
16	EBC	3966	Anti twist bracket	1		

CHANGE POINTS

(1) From (V) 594576


PROPSHAFT-2.9/3.6 LITRE-JURID-MANUAL GEARBOX

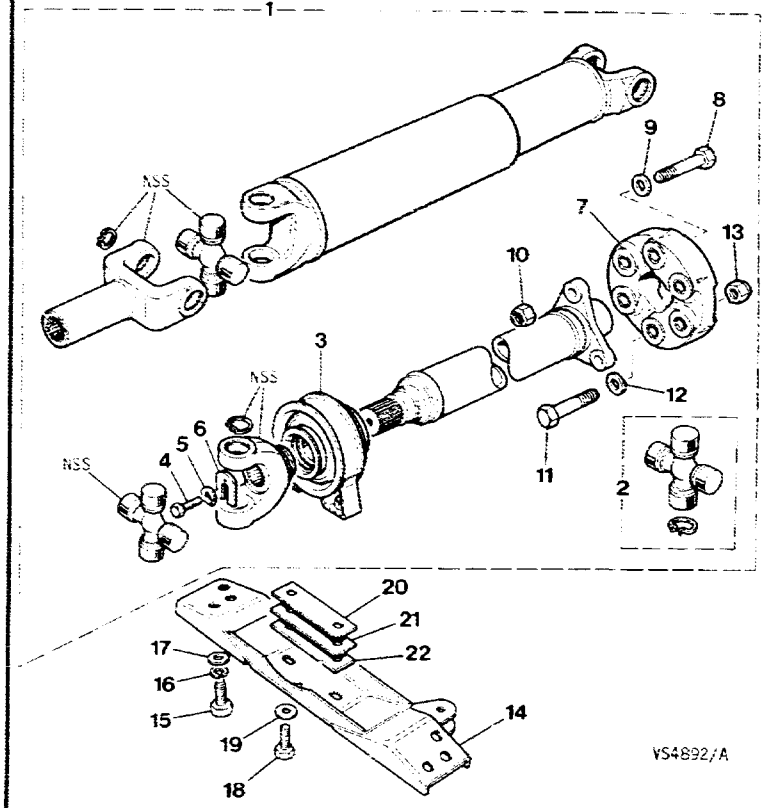

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	5195	PROPSHAFT-ASSEMBLY	NLA	(1)	Use CBC7780. 2.9 Litre;Jurid coupling;manual
1	CBC	5195	PROPSHAFT-ASSEMBLY	NLA	(1)	Use CBC7780. 3.6 Litre (XJ40),Jurid coupling;manual
1	CBC	7780	PROPSHAFT-ASSEMBLY	NLA	(2)	Use EBC4263. 2.9 Litre,Jurid coupling;manual
1	CBC	7780	PROPSHAFT-ASSEMBLY	NLA	(2)	Use EBC4263. 3.6 Litre (XJ40),Jurid coupling;manual
2	JLM	823	• Universal joint kit	2		
3	JLM	1542	• Centre bearing-5/16" unf	NLA		Use EBC9040.
3	EBC	9040	• Centre bearing	1		
4	RTC	1335 J	• Centre propshaft bolt	1		
5	RTC	1336 J	• Tab washer	1		
6	RTC	1337 J	• Centre propshaft U-spacer	1		
7	CAC	7576	• Flexible jurid coupling	1		
8	CBC	7800	• Coupling bolt-propshaft to drive unit	NLA		Use CBC8174.
9	CBC	8067	• Coupling washer	3		
10	NV	112051 J	• Locknut	3		
1	EBC	4263	Propshaft	NLA		Use EBC9106.
1	EBC	4263	Propshaft	NLA		Use EBC9106.
1	EBC	9106	Propshaft-metalastic centre bearing	NLA		Use NMB5800CA.
1	EBC	9106	Propshaft-metalastic centre bearing	NLA		Use NMB5800CA.
1	NMB	5800CA	Propshaft	NLA		Use NNA5800DA.
1	NMB	5800CA	Propshaft	NLA		Use NNA5800DA.
1	NNA	5800DA	Propshaft	NLA		Use NNA5800JA.
1	NNA	5800JA	Propshaft-assembly-without RUT	NLA		Use NNA5800JB with NNA5800JD or NNA5800JC.
1	NNA	5800JB	Propshaft-assembly-with RUT	NLA		Use NNA5800JC.
1	NNA	5800JC	Propshaft-assembly-without RUT	1		Manual
1	NNA	5800JD	Propshaft-manual-with RUT	1		Manual

CHANGE POINTS:
(1) To (V) 524374
(2) From (V) 524375 To (V) 594575


PROPSHAFT-2.9/3.6 LITRE-JURID-MANUAL GEARBOX

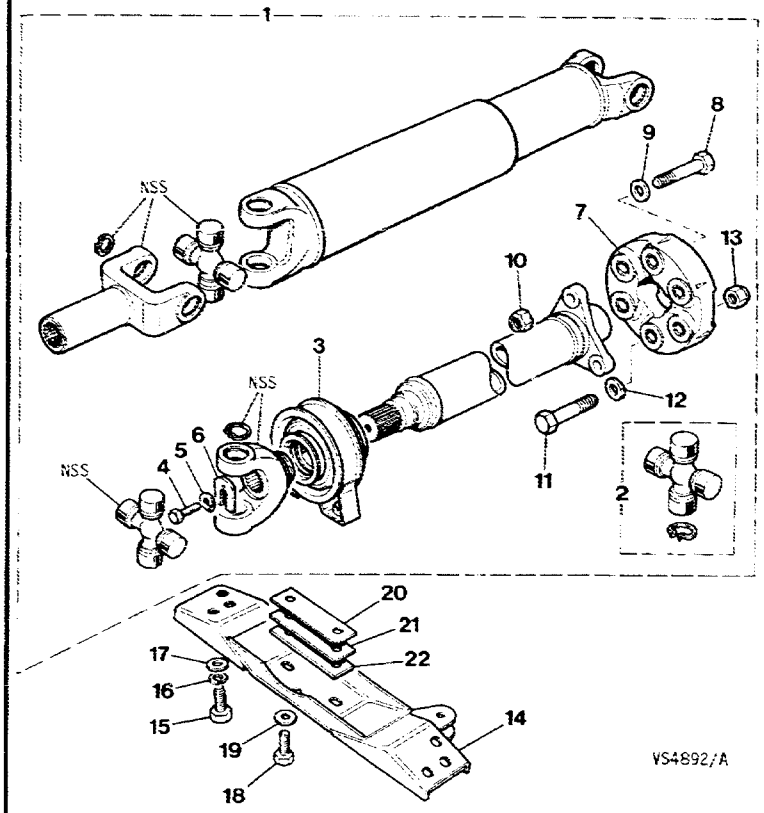

Illus	Part Number		Description	Quantity	Change Point	Remarks
8	CBC	8174	Coupling bolt-M12 x 70mm			
11	BX	112131 J	Coupling bolt-M12 x 65mm	3		
12	WA	112081 J	Washer	6		
13	NV	112051 J	Locknut	3		
14	CAC	9399	Mounting bracket	NLA	(1)	2.9 Litre;Jurid coupling;RHD;manual
14	CAC	9399	Mounting bracket	NLA	(1)	3.6 Litre (XJ40);Jurid coupling;RHD;manual
14	CAC	9400	Mounting bracket	1	(1)	2.9 Litre;Jurid coupling;LHD;manual
14	CAC	9400	Mounting bracket	1	(1)	3.6 Litre (XJ40);Jurid coupling;LHD;manual
15	GL	108301 J	Screw	NLA		
16	WL	108001 J	Spring washer-M8	6		
17	WC	108051 J	Plain washer	6		
18	SH	605061 MJ	Setscrew-5/16"	2		
	FS	108201 MJ	Flanged head screw-M8	2		
19	WA	108051	Plain washer-0.3125" diameter	2		
20	C	29593	Propshaft alignment packer -0.125"	NLA		
21	C	28654 3	Propshaft alignment packer -0.064"	A/R		
22	C	28654 4	Propshaft alignment packer -0.028"	A/R		

CHANGE POINTS:
(1) To (V) 594575


DIFFERENTIAL ASSEMBLY

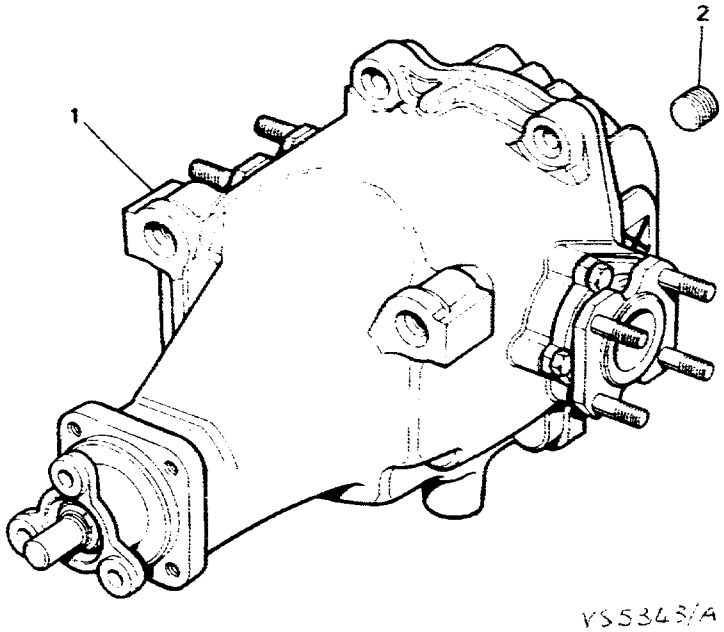

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1078037	Differential-assembly-3.77:1-new	NLA	(1)	Use JLM11881
1	JLM	11881	DIFFERENTIAL-3.77:1-BROWN-NEW	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	1078037E	Differential-assembly-3.77:1-remanufactured unit	NLA	(1)	Use JLM11881E
1	JLM	11881 E	DIFFERENTIAL-3.77:1-BROWN-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	1078038	Differential-assembly-3.58:1-new	NLA	(1)	Use JLM11880
1	JLM	11880	DIFFERENTIAL-3.58:1-RED/YELLOW STRIPE-NEW	NLA		Use JLM11880E
1	JLM	11880 E	DIFFERENTIAL-3.58:1-RED/YELLOW STRIPE-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	1078038E	Differential-3.58:1-assembly-remanufactured unit	NLA	(1)	Use JLM11880E
1	JLM	1078049	Differential-assembly-4.09:1-new	NLA	(1)	Use JLM11882
1	JLM	11882	DIFFERENTIAL-4.09:1-BLUE-NEW	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	1078049E	Differential-4.09:1-assembly-remanufactured unit	NLA	(1)	Use JLM11882E
1	JLM	11882 E	DIFFERENTIAL-4.09:1-BLUE-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	1078137	Differential-assembly-Powr-Lok-3.77:1-new	NLA	(1)	Use JLM11877
1	JLM	11877	DIFFERENTIAL-POWR-LOK-3.77:1-BROWN/BLACK CROSS-NEW	NLA		Use JLM11877E
1	JLM	11877 E	DIFFERENTIAL-POWR-LOK-3.77:1-BROWN/BLACK CROSS-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	1078137E	Differential-assembly-Powr-Lok-3.77:1-remanufactured unit	NLA	(1)	Use JLM11877E

CHANGE POINTS:
(1) From (V) 633430


DIFFERENTIAL ASSEMBLY

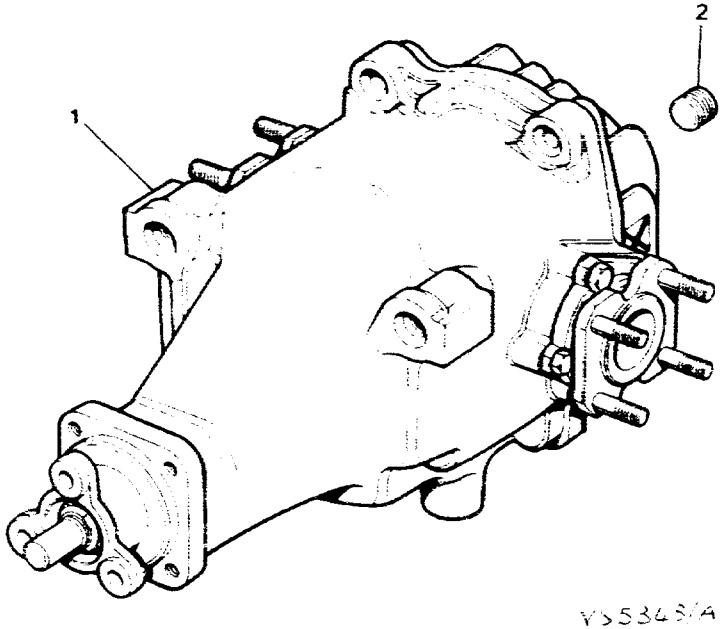

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	10781 38	Differential-assembly-Powr-Lok-3 58 1 -new	1	(1)	
1	JLM	10781 38E	Differential-assembly-Powr-Lok-3 58 1 -remanufactured unit	NLA	(1)	Use JLM11876E
1	JLM	11876 E	DIFFERENTIAL-POWR-LOK-3 58 1 RED/YELLOW STRIPE/BLACK CROSS-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	10781 49	Differential-assembly-Powr-Lok-4 09 1-new	NLA	(1)	Use JLM11878
1	JLM	11878	DIFFERENTIAL-POWR-LOK-4.09 1-BLUE/BLACK CROSS-NEW	NLA		Use JLM11878E
1	JLM	11878 E	DIFFERENTIAL-POWR-LOK-4 09 1-BLUE/BLACK CROSS-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041 J	• Locking nut	4		
1	JLM	10781 49E	Differential-assembly-Powr-Lok-4 09 1-remanufactured unit	NLA	(1)	Use JLM11878E
	CAC	9884	Sensor mounting bracket	1		
	BH	108081 J	Bolt	2		
	WL	108001 J	Spring washer-M8	2		
	JLM	631	Differential case breather-assembly	1		
	CAC	8228	Suspension mounting stud	2		
	JLM	616	Differential carrier cover	1		
	JLM	612	Carrier cover bolt			
2	JLM	632	Female plug -0.75" bsp	1		

CHANGE POINTS
(1) From (V) 633430

DIFFERENTIAL ASSEMBLY-JURID

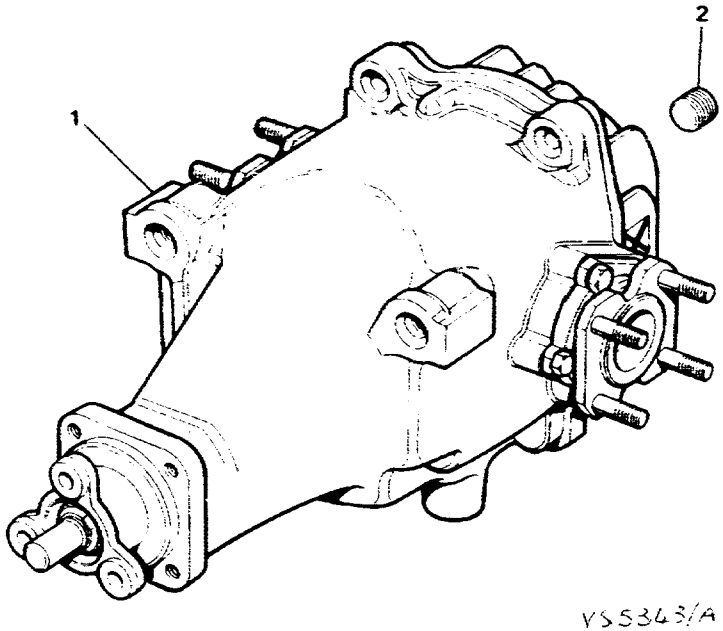

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	157428	Differential-assembly-2.88:1-Jurid-new	NLA	(1)	Use JLM177528 3.6 Litre (XJ40),USA
1	JLM	177528	Differential-assembly-2.88:1-Jurid-new	NLA	(1)	Use JLM177528E. 3.6 Litre (XJ40),USA
1	JLM	177528E	Differential-assembly-2.88:1-Jurid-remanufactured unit	1	(2)	
1	JLM	174438	Differential-assembly-3.58:1 -Jurid-new	NLA	(3)	Use JLM191938 3.6 Litre (XJ40);automatic,Europe
1	JLM	174438	Differential-assembly-3.58:1 -Jurid-new	NLA	(1)	Use JLM191938. 3.6 Litre (XJ40);USA;automatic
1	JLM	191938	Differential-assembly-3.58:1 -Jurid-new	NLA		Use JLM1078038. 3.6 Litre (XJ40);automatic;Europe
1	JLM	191938	Differential-assembly-3.58:1 -Jurid-new	NLA		Use JLM1078038. 3.6 Litre (XJ40);USA;automatic
1	JLM	1078038	Differential-assembly-3.58:1 -new	NLA		Use JLM11880. 3.6 Litre (XJ40),automatic;Europe
1	JLM	1078038	Differential-assembly-3.58:1 -new	NLA		Use JLM11880. 3.6 Litre (XJ40);USA;automatic
1	JLM	11880	DIFFERENTIAL-3.58:1 -RED/YELLOW STRIPE-NEW	NLA		Use JLM11880E. 3.6 Litre (XJ40);automatic;Europe
1	JLM	11880	DIFFERENTIAL-3.58:1 -RED/YELLOW STRIPE-NEW	NLA		Use JLM11880E. 3.6 Litre (XJ40);USA;automatic
1	JLM	11880E	DIFFERENTIAL-3.58:1 -RED/YELLOW STRIPE-REMANUFACTURED UNIT	1		3.6 Litre (XJ40);automatic;Europe
1	JLM	11880E	DIFFERENTIAL-3.58:1 -RED/YELLOW STRIPE-REMANUFACTURED UNIT	1		3.6 Litre (XJ40);USA;automatic
	CBC	1261	• Support plate stud	4		
	NY	210041J	• Locking nut	4		


CHANGE POINTS:

(1) From (V) 538478 To (V) 594575 USA

(2) To (V) 594575

(3) From (V) 542185 To (V) 594575 Except USA

DIFFERENTIAL ASSEMBLY-JURID

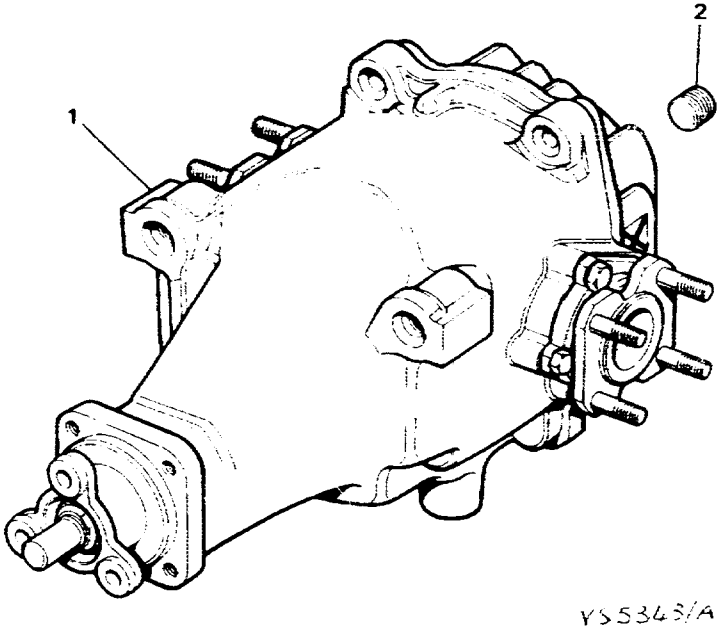


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 173237	Differential-assembly-3.77:1-Jurid-new	NLA	(1)	Use JLM192037 2.9 Litre;manual;Europe;except Austria and Switzerland
1	JLM 192037	Differential-assembly-3.77:1-Jurid-new	NLA		Use JLM1078037 2.9 Litre;manual;Europe;except Austria and Switzerland
1	JLM 1078037	Differential-assembly-3.77:1-new	NLA		Use JLM11881 2.9 Litre;manual;Europe;except Austria and Switzerland
1	JLM 11881	DIFFERENTIAL-3.77:1-BROWN-NEW	1		2.9 Litre;manual;Europe;except Switzerland and Austria
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		
1	JLM 173349	Differential-assembly-4.09:1 -Jurid-new	NLA	(2)	Use JLM192149 Except Austria and Switzerland
1	JLM 192149	Differential-assembly-4.09:1 -Jurid-new	NLA		Use JLM1078049 Except Austria and Switzerland
1	JLM 1078049	Differential-assembly-4.09:1 -new	NLA		Use JLM11882 Except Austria and Switzerland
1	JLM 11882	DIFFERENTIAL-4.09:1 -BLUE-NEW	1		Except Austria and Switzerland
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		

CHANGE POINTS

(1) From (V) 549503 To (V) 594575

(2) To (V) 594575

DIFFERENTIAL ASSEMBLY-JURID

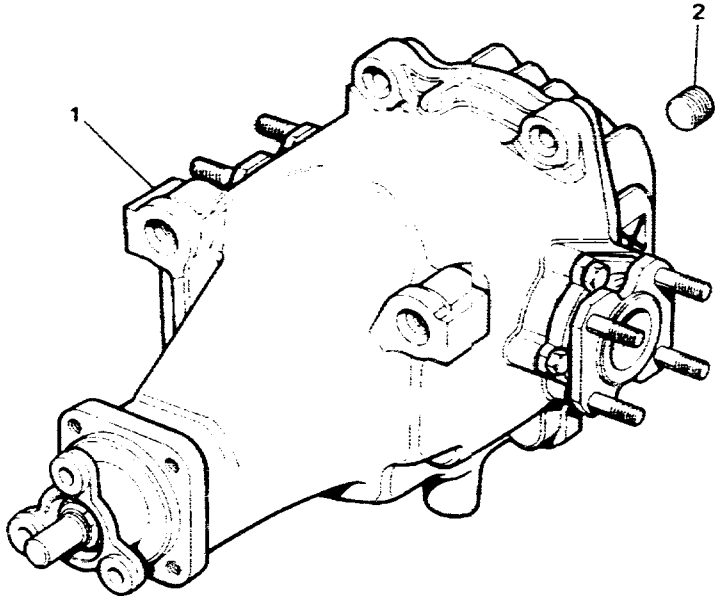

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 174538	Differential-assembly-Powr-Lok-3.58:1-Jurid-new	NLA	(1)	Use JLM192238. 3.6 Litre (XJ40),Austria,UK,Canada,automatic
1	JLM 174538	Differential-assembly-Powr-Lok-3.58:1-Jurid-new	NLA	(1)	Use JLM192238. 3.6 Litre (XJ40),manual,Europe
1	JLM 174538	Differential-assembly-Powr-Lok-3.58:1-Jurid-new	NLA	(2)	Use JLM192238. 3.6 Litre (XJ40),USA
1	JLM 192238	Differential-assembly-Powr-Lok-3.58:1-Jurid-new	NLA		Use JLM1078138. 3.6 Litre (XJ40),Austria,UK,Canada,automatic
1	JLM 192238	Differential-assembly-Powr-Lok-3.58:1-Jurid-new	NLA		Use JLM1078138. 3.6 Litre (XJ40),manual,Europe
1	JLM 192238	Differential-assembly-Powr-Lok-3.58:1-Jurid-new	NLA		Use JLM1078138. 3.6 Litre (XJ40),USA
1	JLM 1078138	Differential-assembly-Powr-Lok-3.58:1-new	1		~~Austria,Canada,UK,3.6 Litre~~ (XJ40),automatic
1	JLM 1078138	Differential-assembly-Powr-Lok-3.58:1-new	1		3.6 Litre (XJ40),manual,Europe
1	JLM 1078138	Differential-assembly-Powr-Lok-3.58:1-new	1		3.6 Litre (XJ40),USA
1	JLM 173537	Differential-assembly-Powr-Lok-3.77:1-Jurid-new	NLA	(3)	Use JLM192337. 2.9 Litre,manual
1	JLM 192337	Differential-assembly-Powr-Lok-3.77:1-Jurid-new	NLA		Use JLM11877. 2.9 Litre,manual
1	JLM 11877	DIFFERENTIAL-POWR-LOK-3.77:1-BROWN/BLACK CROSS-NEW	NLA		Use JLM11877E. 2.9 Litre,manual
1	JLM 11877 E	DIFFERENTIAL-POWR-LOK-3.77:1-BROWN/BLACK CROSS-REMANUFACTURED UNIT	1		2.9 Litre;manual
	CBC 1261	• Support plate stud	4		
	NY 210041 J	• Locking nut	4		


CHANGE POINTS:

(1) From (V) 542185 To (V) 594575 Except USA

(2) From (V) 538478 To (V) 594575 USA

(3) From (V) 549503 To (V) 594575

DIFFERENTIAL ASSEMBLY-JURID

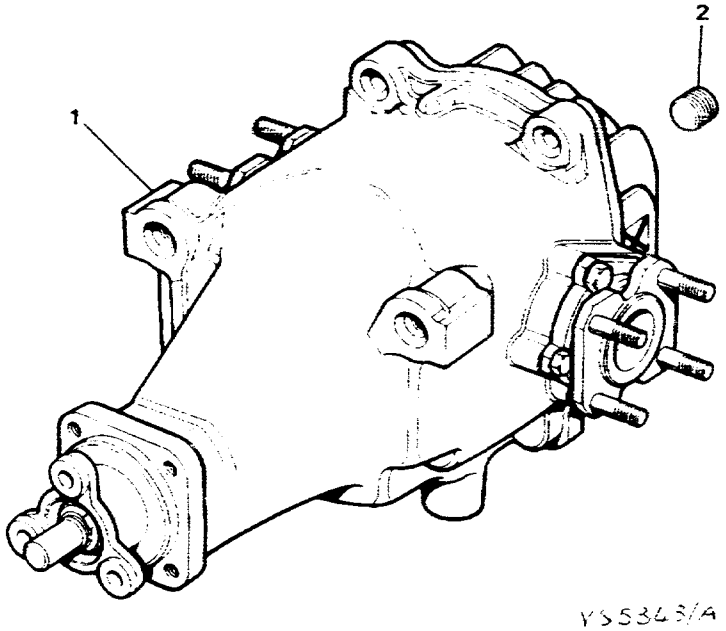


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	168049	Differential-assembly-4.09:1 -Jurid-new	NLA	(1)	Use JLM173649.
						Austria;Switzerland
1	JLM	173649	Differential-assembly-Powr-Lok-4.09:1-Jurid-new	NLA	(1)	Use JLM192449.
						Austria;Switzerland
1	JLM	192449	Differential-assembly-Powr-Lok-4.09:1-Jurid-new	NLA		Use JLM1078149.
						Austria;Switzerland
1	JLM	1078149	Differential-assembly-Powr-Lok-4.09:1-new	NLA		Use JLM11878.
						Austria;Switzerland
1	JLM	11878	DIFFERENTIAL-POWR-LOK-4.09:1-BLUE/BLACK CROSS-NEW	NLA		Use JLM11878E.
						Austria;Switzerland
1	JLM	11878E	DIFFERENTIAL-POWR-LOK-4.09:1-BLUE/BLACK CROSS-REMANUFACTURED UNIT	1		Austria;Switzerland
	CBC	1261	• Support plate stud	4		
	NY	210041J	• Locking nut	4		
1	JLM	177628	Differential-assembly-Powr-Lok-2.88:1 -Jurid-new	NLA	(2)	Use JLM177628E
						3.6 Litre
						(XJ40);Austria;automatic;except
						Vanden Plas
1	JLM	177628E	Differential-assembly-Powr-Lok-2.88:1 -Jurid-remanufactured unit	1		
	CAC	9884	Sensor mounting bracket	1		
	BH	108081J	Bolt	2		
	WL	108001J	Spring washer-M8	2		
	JLM	631	Differential case breather-assembly	1		
	CAC	8228	Suspension mounting stud	2		
	JLM	616	Differential carrier cover	1		
	JLM	612	Carrier cover bolt	1		
	JLM	1146	Magnetic drain plug-0.75" bsp	NLA		Use JLM1263.
	JLM	1263	Magnetic drain plug-0.75" bsp	1		
2	JLM	632	Female plug -0.75" bsp	1		

CHANGE POINTS

(1) To (V) 594575

(2) From (V) 542185 To (V) 594575 Except USA

DIFFERENTIAL ASSEMBLY-JURID FLANGE

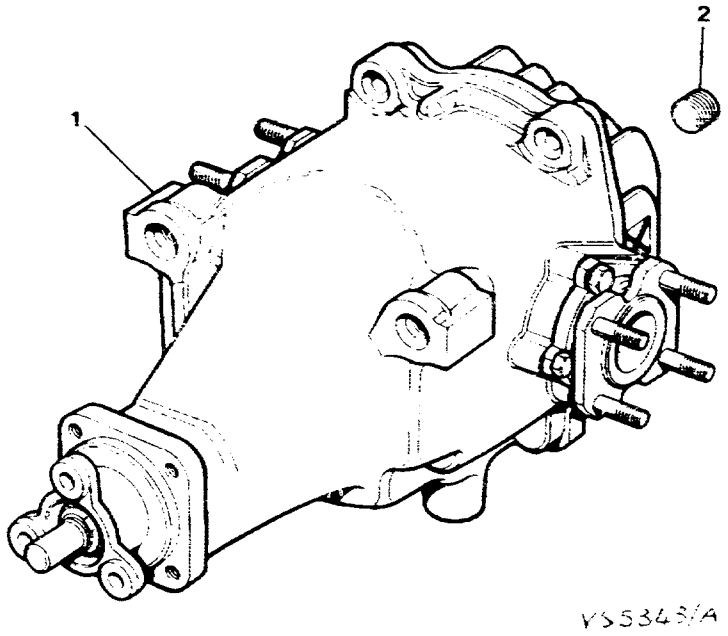


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 191938	Differential-assembly-3.58:1 -Jurid-new	NLA	(1)	Use JLM1078038
1	JLM 1078038	Differential-assembly-3.58:1 -new	NLA		Use JLM11880
1	JLM 11880	DIFFERENTIAL-3.58:1 -RED/YELLOW STRIPE-NEW	NLA		Use JLM11880E
1	JLM 11880E	DIFFERENTIAL-3.58:1 -RED/YELLOW STRIPE-REMANUFACTURED UNIT	1		
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		
1	JLM 191938E	Differential 3.58:1 -assembly-Jurid-remanufactured unit	NLA	(1)	Use JLM1078038E
1	JLM 1078038E	Differential-3.58:1 -assembly-remanufactured unit	NLA		Use JLM11880E
1	JLM 192037	Differential-assembly-3.77:1-Jurid-new	NLA	(1)	Use JLM1078037
1	JLM 1078037	Differential-assembly-3.77:1-new	NLA		Use JLM11881
1	JLM 11881	DIFFERENTIAL-3.77:1-BROWN-NEW	1		
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		
1	JLM 192037E	Differential-3.77:1-assembly-Jurid-remanufactured unit	NLA	(1)	Use JLM1078037E
1	JLM 1078037E	Differential-assembly-3.77:1-remanufactured unit	NLA		Use JLM11881E
1	JLM 11881E	DIFFERENTIAL-3.77:1-BROWN-REMANUFACTURED UNIT	1		
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		
1	JLM 192149	Differential-assembly-4.09:1 -Jurid-new	NLA	(1)	Use JLM1078049
1	JLM 1078049	Differential-assembly-4.09:1 -new	NLA		Use JLM11882
1	JLM 11882	DIFFERENTIAL-4.09:1 -BLUE-NEW	1		
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		
1	JLM 192149E	Differential-4.09:1 -assembly-Jurid-remanufactured unit	NLA	(1)	Use JLM1078049E
1	JLM 1078049E	Differential-4.09:1 -assembly-remanufactured unit	NLA		Use JLM11882E
1	JLM 11882E	DIFFERENTIAL-4.09:1 -BLUE-REMANUFACTURED UNIT	1		
	CBC 1261	• Support plate stud	4		
	NY 210041J	• Locking nut	4		

CHANGE POINTS

(1) From (V) 594576 To (V) 633429

DIFFERENTIAL ASSEMBLY-JURID FLANGE

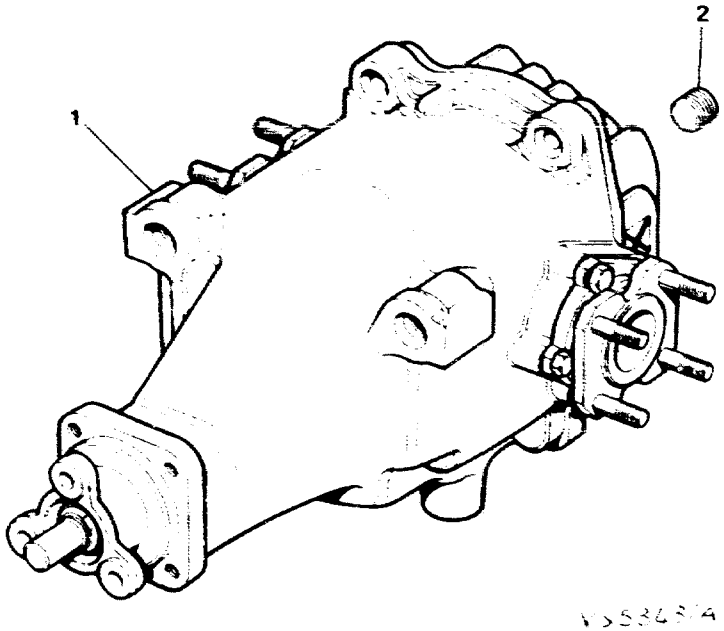


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	192238	Differential assembly Powr-Lok 3.58:1 -Jurid-new	NLA	(1)	Use JLM1078138
1	JLM	1078138	Differential assembly Powr-Lok 3.58:1 -new	1		
1	JLM	192238E	Differential assembly Powr-Lok 3.58:1 -Jurid-remanufactured unit	NLA	(1)	Use JLM1078138E
1	JLM	1078138E	Differential assembly Powr-Lok 3.58:1 -remanufactured unit	NLA		Use JLM11876E
1	JLM	11876E	DIFFERENTIAL POWR-LOK 3.58:1 -RED/YELLOW STRIPE/BLACK CROSS-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041J	• Locking nut	4		
1	JLM	192337	Differential assembly Powr-Lok 3.77:1-Jurid-new	NLA	(1)	Use JLM11877
1	JLM	11877	DIFFERENTIAL POWR-LOK 3.77:1-BROWN/BLACK CROSS-NEW	NLA		Use JLM11877E
1	JLM	11877E	DIFFERENTIAL POWR-LOK 3.77:1-BROWN/BLACK CROSS-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041J	• Locking nut	4		
1	JLM	192337E	Differential assembly Powr-Lok 3.77:1-Jurid-remanufactured unit	NLA	(1)	Use JLM11877E
1	JLM	192449	Differential assembly Powr-Lok 4.09:1-Jurid-new	NLA	(1)	Use JLM1078149
1	JLM	1078149	Differential assembly Powr-Lok 4.09:1-new	NLA		Use JLM11878
1	JLM	11878	DIFFERENTIAL POWR-LOK 4.09:1-BLUE/BLACK CROSS-NEW	NLA		Use JLM11878E
1	JLM	11878E	DIFFERENTIAL POWR-LOK 4.09:1-BLUE/BLACK CROSS-REMANUFACTURED UNIT	1		
	CBC	1261	• Support plate stud	4		
	NY	210041J	• Locking nut	4		
1	JLM	192449E	Differential assembly Powr-Lok 4.09:1-Jurid-remanufactured unit	NLA	(1)	Use JLM1078149E
1	JLM	1078149E	Differential assembly Powr-Lok 4.09:1-remanufactured unit	NLA		Use JLM11878E
2	JLM	632	Female plug 0.75" bsp	1		

CHANGE POINTS

(1) From (V) 594576 To (V) 633429

DIFFERENTIAL ASSEMBLY-NON JURID

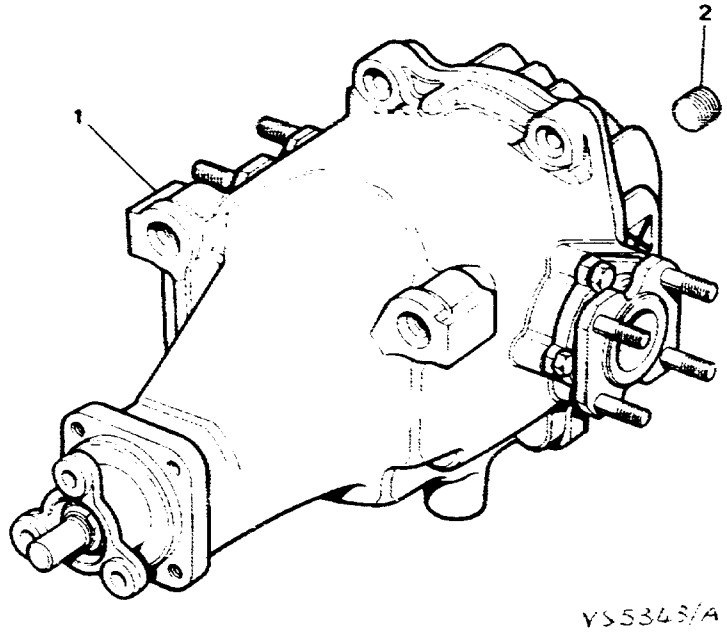


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	137128	Differential-assembly-2.88:1-new	NLA	(1)	Use JLM137128E 3.6 Litre (XJ40),USA
1	JLM	137128E	Differential-assembly-2.88:1-remanufactured unit	1		3.6 Litre (XJ40),USA
1	JLM	137135	Differential-assembly-3.54:1-new	NLA	(2)	Use JLM137135E 3.6 Litre (XJ40),automatic,Europe
1	JLM	137135E	Differential-assembly-3.54:1-remanufactured unit	1		3.6 Litre (XJ40),automatic,Europe
1	JLM	137137	Differential-assembly-3.77:1-new	NLA	(3)	Use JLM137137E 2.9 Litre,manual,Europe,except Austria and Switzerland
1	JLM	137137E	Differential-assembly-3.77:1-remanufactured unit	1		2.9 Litre,manual,Europe,except Austria and Switzerland
1	JLM	137149	Differential-assembly-4.09:1-new	1	(3)	2.9 Litre,except Austria and Switzerland
1	JLM	137149	Differential-assembly-4.09:1-new	1	(4)	3.6 Litre (XJ40),except Austria and Switzerland
1	JLM	129228	Differential-assembly-Powr-Lok-2.88:1-new	NLA	(1)	Use JLM129228E 3.6 Litre (XJ40),USA
1	JLM	129228E	Differential-assembly-Powr-Lok-2.88:1-remanufactured unit	1		3.6 Litre (XJ40),USA
1	JLM	129235	Differential-assembly-Powr-Lok-3.54:1-new	NLA	(2)	Use JLM129235E 3.6 Litre (XJ40),Austria,Canada,UK
1	JLM	129235E	Differential-assembly-Powr-Lok-3.54:1-remanufactured unit	1		3.6 Litre (XJ40),Austria,Canada,UK
1	JLM	129249	Differential-assembly-Powr-Lok-4.09:1-new	NLA	(3)	Use JLM129249E 2.9 Litre
1	JLM	129249E	Differential-assembly-Powr-Lok-4.09:1-remanufactured unit	1		
	CAC	9884	Sensor mounting bracket	1		
	BH	108081J	Bolt	2		
	WL	108001J	Spring washer-M8	2		
	JLM	631	Differential case breather-assembly	1		
	CAC	8228	Suspension mounting stud	2		
	JLM	616	Differential carrier cover	1		
	JLM	612	Carrier cover bolt	1		
	JLM	1346	Magnetic drain plug-0.75" bsp	NLA		Use JLM1263
	JLM	1263	Magnetic drain plug-0.75" bsp	1		
2	JLM	632	Female plug -0.75" bsp	1		

CHANGE POINTS:

(1) To (V) 538477 3.6 Litre (XJ40); USA
(2) To (V) 542184 3.6 Litre (XJ40); except USA
(3) To (V) 549502 2.9 Litre
(4) To (V) 542184

DIFFERENTIAL ASSEMBLY COMPONENTS-NORMAL

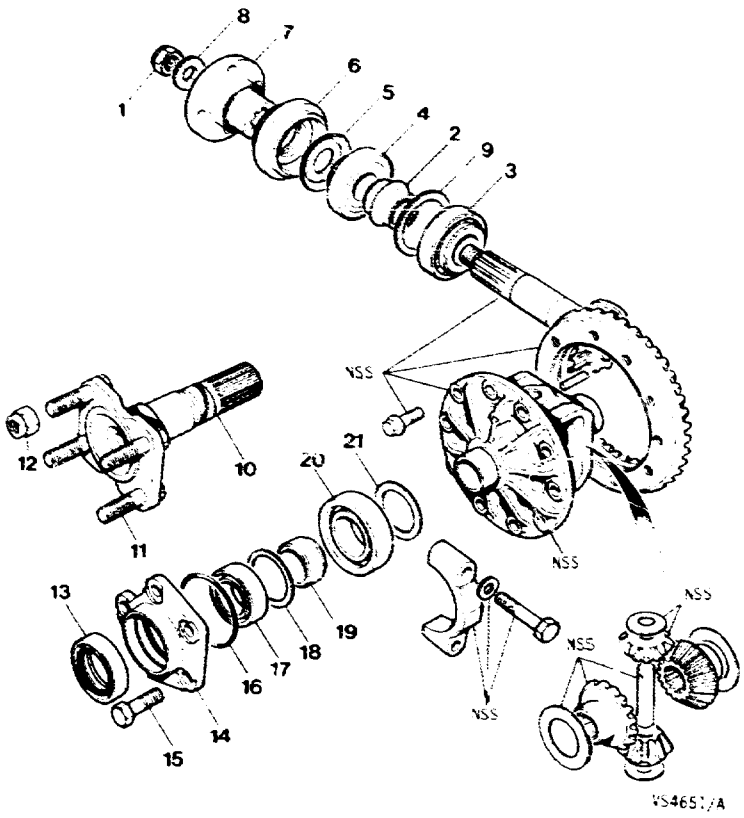


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	11099	Pinion nut	1		Except Jurid coupling
	JLM 1640	Pinion locknut	1		Jurid coupling
2	12456	Collapsible spacer	1		
3	12252	Pinion bearing-inner	1		
4	ATA 7166	Taper roller bearing	1		
5	JLM 614	Pinion spacer	1	(1)	
	JLM 10782	Xylan coated washer	1	(2)	
6	JLM 527	Pinion oil seal-viton	NLA		Use JLM11626
6	JLM 11625	Pinion oil seal	NLA		Use JLM11526
6	JLM 11526	Pinion oil seal	NLA		Use CBC6923
6	CBC 6923	Pinion oil seal	1		
7	RTC 1009	Companion flange	NLA	(3, 4, 5)	Use RTC1009A Except Jurid coupling
7	RTC 1009A	Companion flange	1	(3, 4, 5)	Except Jurid coupling
7	JLM 1700	Companion flange	NLA		Use JLM1956 Jurid coupling
7	JLM 1956	Companion flange	1		Jurid coupling
8	JLM 611	Pinion nut washer	NLA		Use WA120000J Except Jurid coupling
8	WA 120000J	Pinion nut washer	1		Except Jurid coupling
8	JLM 1641	Pinion nut washer	1		Jurid coupling
9	3860	Pinion bearing shim-inner-0.003"	2		
9	3861	Pinion bearing shim-inner-0.005"	2		
9	3862	Pinion bearing shim-inner-0.01"	2		
10	JLM 630	OUTPUT SHAFT AND STUD-ASSEMBLY	2		
11	JLM 624	* Stud	8		
12	C 241194	Cleveloc nut	NLA		Use NV607041J
12	NV 607041J	Cleveloc nut	8		
13	JLM 618	Triple lip oil seal	2		
14	JLM 619	Bearing retaining collar	2		
15	JLM 610	Omnicote bolt	10		
16	JLM 621	O-ring	2		
17	JLM 617	Ball bearing	NLA		Use JLM11527
18	JLM 1117	Shim-1mm	2		
18	JLM 1118	Shim-1.05mm	2		
18	JLM 1119	Shim-1.1mm	2		
18	JLM 1120	Shim-1.15mm	2		
19	JLM 615	Shaft bearing retaining collar	2		
20	3845	Roller bearing-assembly	2		

CHANGE POINTS.


(1) To (V) 633429
(2) From (V) 633430
(3) To (V) 538477 3.6 Litre (XJ40), USA
(4) To (V) 542184 3.6 Litre (XJ40), except USA
(5) To (V) 549502 2.9 Litre

DIFFERENTIAL ASSEMBLY COMPONENTS-NORMAL

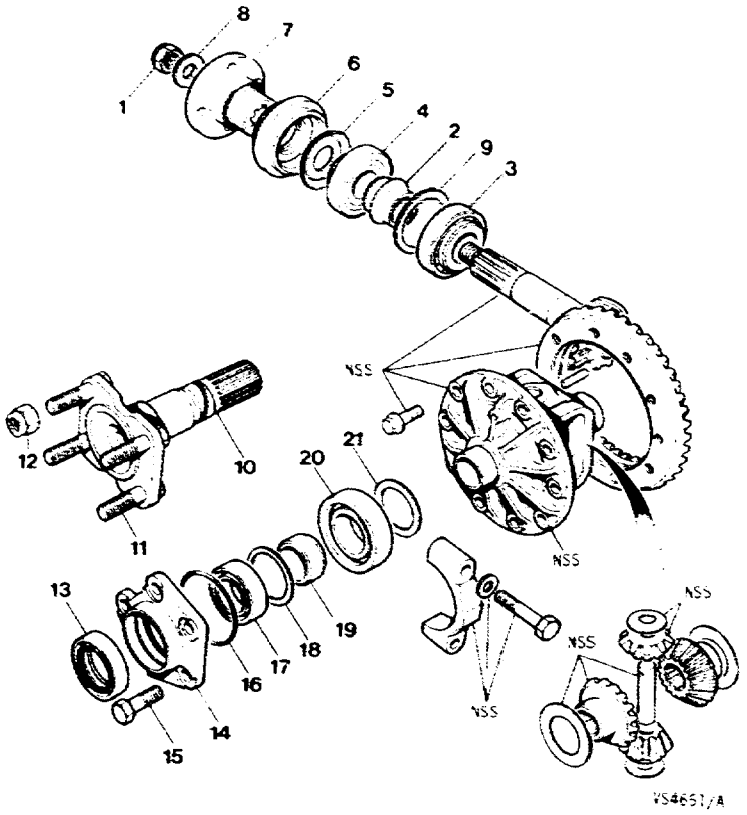

Illus	Part Number	Description	Quantity	Change Point	Remarks
21	JLM 563 A	Differential bearing shim -0 028"	2		
21	JLM 563 B	Differential bearing shim -0 03"	2		
21	JLM 563 C	Differential bearing shim -0 031"	2		
21	JLM 563 D	Differential bearing shim -0 032"	NLA		Use JLM563JD
21	JLM 563 JD	Differential bearing shim -0 032"	NLA		
21	JLM 563 E	Differential bearing shim -0 033"	NLA		Use JLM563JE
21	JLM 563 JE	Differential bearing shim -0 033"	2		
21	JLM 563 F	Differential bearing shim -0 034"	2		
21	JLM 563 G	Differential bearing shim -0 035"	2		
21	JLM 563 H	Differential bearing shim -0 036"	2		
21	JLM 563 I	Differential bearing shim -0 037"	NLA		Use JLM563JI
21	JLM 563 JI	Differential bearing shim -0 037"	NLA		
21	JLM 563 J	Differential bearing shim -0 038"	2		
21	JLM 563 K	Differential bearing shim -0 039"	NLA		Use JLM563JK
21	JLM 563 JK	Differential bearing shim -0 039"	2		
21	JLM 563 L	Differential bearing shim -0 04"	2		
21	JLM 563 M	Differential bearing shim -0 045"	NLA		Use JLM563JM
21	JLM 563 JM	Differential bearing shim -0 045"	2		

DIFFERENTIAL ASSEMBLY COMPONENTS-POWR-LOK

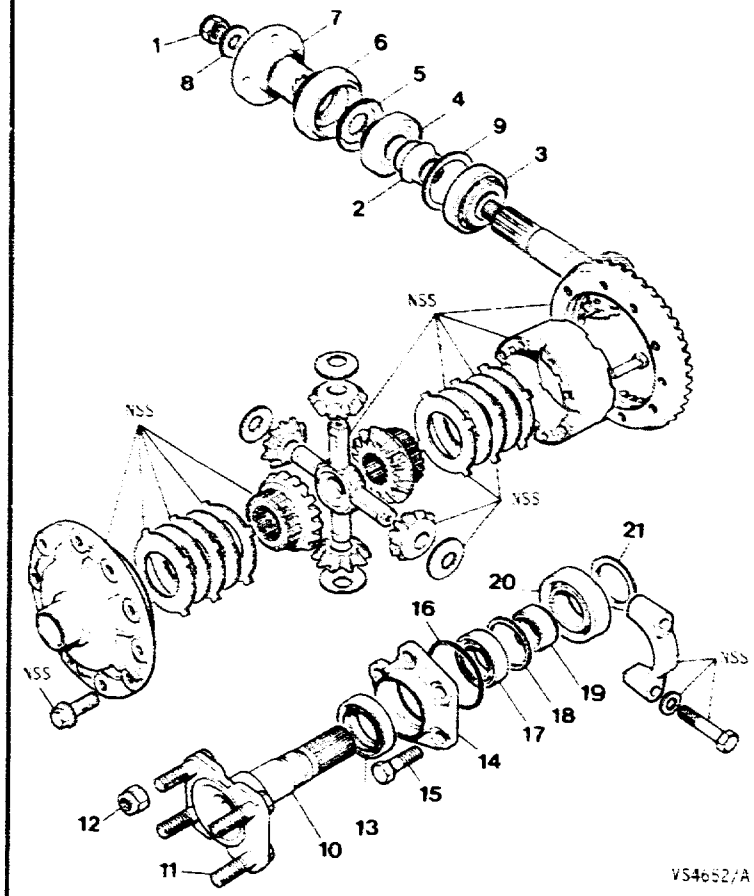


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	11099	Pinion nut	1		Except Jurid coupling
	JLM 1640	Pinion locknut	1		Jurid coupling
2	12456	Collapsible spacer	1		
3	12252	Pinion bearing-inner	1		
4	ATA 7186	Taper roller bearing	1		
5	JLM 614	Pinion spacer	1	(1)	
	JLM 10782	Xylan coated washer	1	(2)	
6	JLM 527	Pinion oil seal viton	NLA		Use JLM11626
6	JLM 11626	Pinion oil seal	NLA		Use JLM11526
6	JLM 11526	Pinion oil seal	NLA		Use CBC6923
6	CBC 6923	Pinion oil seal	1		
7	RTC 1009	Companion flange	NLA	(3, 4, 5)	Use RTC1009A Except Jurid coupling
7	RTC 1009A	Companion flange	1		Except Jurid coupling
7	JLM 1956	Companion flange	1		Jurid coupling
7	JLM 1700	Companion flange	NLA		Use JLM1956 Jurid coupling
8	JLM 611	Pinion nut washer	NLA	(3, 4, 5)	Use WA120000J
8	WA 120000J	Pinion nut washer	1		
9	3860	Pinion bearing shim-inner-0.003"	2	(3, 4, 5)	
9	3861	Pinion bearing shim-inner-0.005"	2		
9	3862	Pinion bearing shim-inner-0.01"	2		
10	JLM 630	OUTPUT SHAFT AND STUD-ASSEMBLY	2		
11	JLM 624	* Stud	8		
12	C 241194	Cleveloc nut	NLA		Use NV607041J
12	NV 607041J	Cleveloc nut	8		
13	JLM 618	Triple lip oil seal	2		
14	JLM 619	Bearing retaining collar	2		
15	JLM 610	Ommicote bolt	10		
16	JLM 621	O-ring	2		
17	JLM 617	Ball bearing	NLA		Use JLM11527
17	JLM 11527	Ball bearing	2		

CHANGE POINTS

(1) To (V) 633429
(2) From (V) 633430
(3) To (V) 538477 3.6 Litre (XJ40) USA
(4) To (V) 542184 3.6 Litre (XJ40), except USA
(5) To (V) 549502 2.9 Litre

DIFFERENTIAL ASSEMBLY COMPONENTS-POWR-LOK

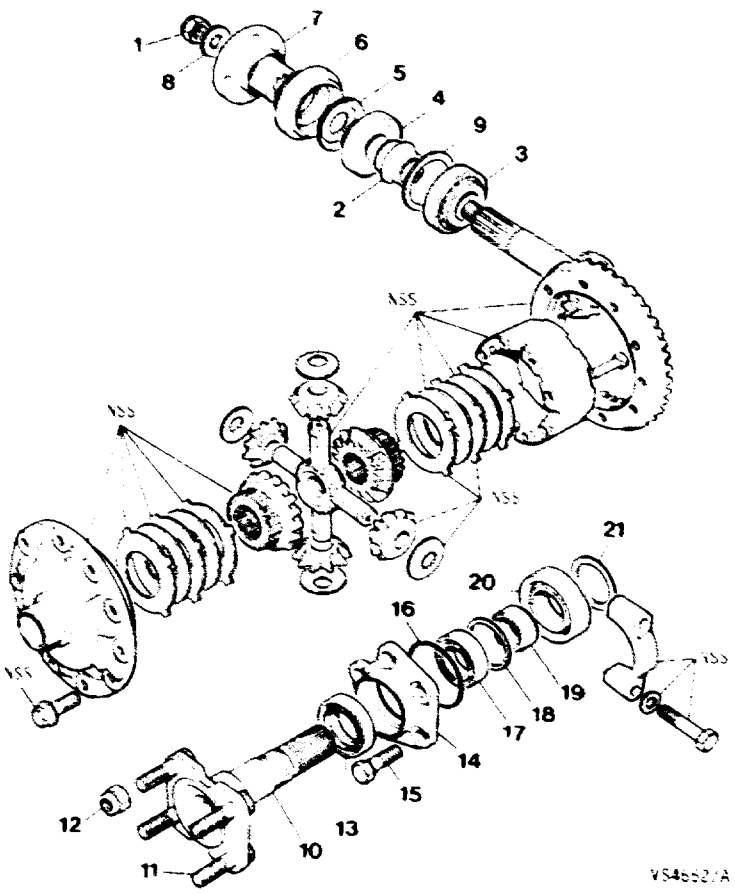


Illus	Part Number		Description	Quantity	Change Point	Remarks
18	JLM	1117	Shim 1mm	2		
18	JLM	1118	Shim 1.05mm	2		
18	JLM	1119	Shim 1.1mm	2		
18	JLM	1120	Shim 1.15mm	2		
19	JLM	615	Shaft bearing retaining collar	2		
20	3845		Roller bearing assembly	2		
21	JLM	563 A	Differential bearing shim -0.028"	2		
21	JLM	563 B	Differential bearing shim -0.03"	2		
21	JLM	563 C	Differential bearing shim -0.031"	2		
21	JLM	563 D	Differential bearing shim -0.032"	NLA		Use JLM563JD
21	JLM	563 JD	Differential bearing shim -0.032"	NLA		
21	JLM	563 E	Differential bearing shim -0.033"	NLA		Use JLM563JE
21	JLM	563 JE	Differential bearing shim -0.033"	2		
21	JLM	563 F	Differential bearing shim -0.034"	2		
21	JLM	563 G	Differential bearing shim -0.035"	2		
21	JLM	563 H	Differential bearing shim -0.036"	2		
21	JLM	563 I	Differential bearing shim -0.037"	NLA		Use JLM563JI
21	JLM	563 JI	Differential bearing shim -0.037"	NLA		
21	JLM	563 J	Differential bearing shim -0.038"	2		
21	JLM	563 K	Differential bearing shim -0.039"	NLA		Use JLM563JK
21	JLM	563 JK	Differential bearing shim -0.039"	2		
21	JLM	563 L	Differential bearing shim -0.04"	2		
21	JLM	563 M	Differential bearing shim -0.045"	NLA		Use JLM563JM
21	JLM	563 JM	Differential bearing shim -0.045"	2		

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

ANTI ROLL BAR ..... 2. I 15
CROSSBEAM AND MOUNTINGS-FRONT ..... 2. J 07
HUB AND CARRIER-REAR ..... 2. J 09
POWER STEERING PUMP ..... 2. I 07
POWER STEERING RACK ASSEMBLY ..... 2. I 02
RIDE LEVEL SYSTEM ..... 2. J 18
ROAD SPRING AND DAMPER-FRONT ..... 2. I 17
SHOCK ABSORBERS AND STOP RUBBERS ..... 2. J 14
STEERING COLUMN ..... 2. I 08
STEERING RESERVOIR, COOLER AND ..... 2. I 05
STEERING WHEEL ..... 2. I 11
SUBFRAME AND MOUNTINGS-REAR ..... 2. J 13
SUSPENSION WISHBONES AND ARMS- ..... 2. J 16
WHEELS ..... 2. K 08
WISHBONE AND HUB ASSEMBLY-FRONT ..... 2. J 02
ACCUMULATOR AND PIPES ..... 2. K 02
ANTI ROLL BAR AND FULLCRUM TIE-FROM ..... 2. I 16
ANTI ROLL BAR AND FULLCRUM TIE-UP TO ..... 2. I 15
Accumulator and seal -assembly ..... 2. K 02
Balljoint-assembly ..... 2. I 04
Bushed differential strut-assembly ..... 2. J 17
CROSSBEAM ASSEMBLY ..... 2. J 07
DAMPER UNIT AND SPRING-REAR ..... 2. J 14
DIFFERENTIAL MOUNTING AND SWING ARM ..... 2. J 16
Driving gear-steering pump ..... 2. I 07
FRAME CARRIER-REAR ..... 2. J 13
HUB CARRIER AND HUB ASSEMBLY-REAR ..... 2. J 09
HUB CARRIER AND HUB ASSEMBLY-REAR ..... 2. J 11
In line filter ..... 2. J 18
Link-assembly-LH upper ..... 2. J 13
Link-assembly-RH upper ..... 2. J 13
MODULATOR UNIT ..... 2. K 03
Mounting frame-assembly ..... 2. J 13
Power steering reservoir/cap-assembly ..... 2. I 06
RIDE LEVEL SENSOR ..... 2. K 06
RIDE LEVEL SUSPENSION PIPES ..... 2. K 07
ROAD SPRING AND DAMPER-FRONT ..... 2. I 17
ROAD WHEEL AND TYRE-ALLOY-DAIMLER ..... 2. K 09
ROAD WHEEL AND TYRE-ALLOY ..... 2. K 08
ROAD WHEEL AND TYRE-MAJESTIC-USA ..... 2. K 10
ROAD WHEEL AND TYRE-PRESSED SPOKE ..... 2. K 11
ROAD WHEEL AND TYRE-ROULETTE ..... 2. K 12
SOLENOID VALVE BLOCK ASSEMBLY ..... 2. K 05
SOLENOID VALVE BLOCK-RIDE LEVELLING ..... 2. J 18
SOLENOID VALVE BLOCK ..... 2. K 04
STEERING COLUMN-LOWER ..... 2. I 10
STEERING COLUMN-UPPER-UP TO ..... 2. I 08
STEERING PUMP AND ADAPTOR ..... 2. I 07
STEERING RACK AND PINION ..... 2. I 02
STEERING RESERVOIR AND HOSES-NON ..... 2. I 06
STEERING RESERVOIR AND HOSES ..... 2. I 05
STEERING WHEEL-2.9/3.6 LITRE- ..... 2. I 11
STEERING WHEEL-DAIMLER ..... 2. I 13
STEERING WHEEL-JAGUAR ..... 2. I 12
STEERING WHEEL- ..... 2. I 14
Seal kit ..... 2. I 04
Solenoid valve block-assembly ..... 2. K 04
Steering pump coupling ..... 2. I 07
Suspension up solenoid-assembly ..... 2. K 04
Wishbone-assembly-LH rear ..... 2. J 16
Wishbone assembly-RH rear ..... 2. J 16

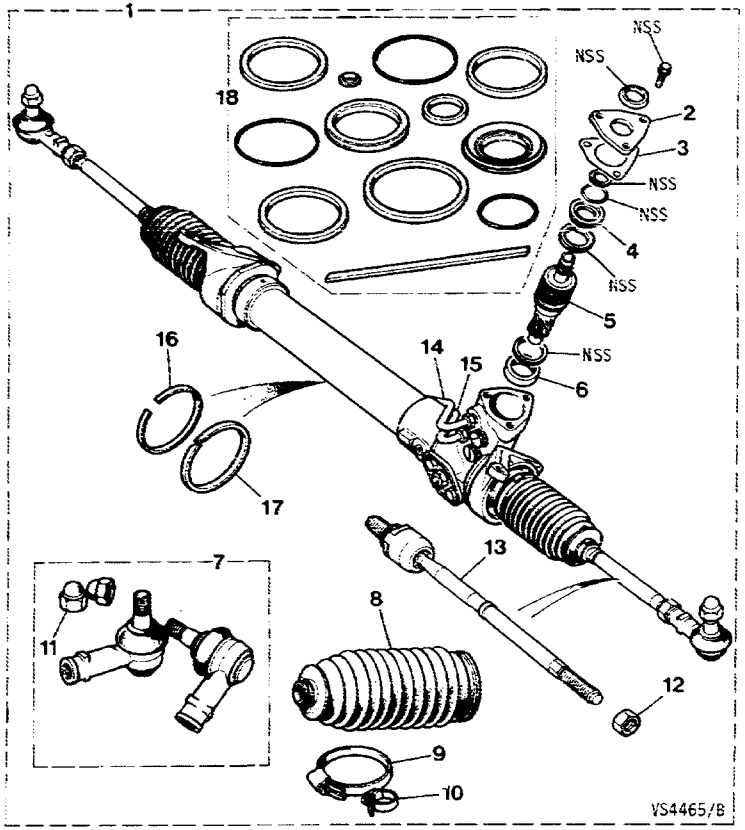


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4924	STEERING RACK AND PINION-ASSEMBLY	NLA	(1)	Use CBC9052N.
					RHD;except Police
1	CBC 9052 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC5650N.
					RHD;except Police
1	CCC 5650 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC6020N.
					Energised seals;RHD
1	CCC 5650 E	STEERING RACK AND PINION-ASSEMBLY-REMANUFACTURED UNIT	NLA	(2)	Use CCC6020E.
					Energised seals;RHD
1	CBC 4046	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(1)	Use CBC9054N.
					Police;RHD
1	CBC 9054 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC6022N.
					Police;RHD
1	CCC 5652 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC6022N.
					Sportspack;RHD
2	JLM 1110	• Top plate	1		
3	JLM 1109	• Shim pack	1		
4	JLM 1107	• Thrust washer	1		
5	JLM 1094	• Valve and pinion-assembly	NLA		Use JLM10840.
6	JLM 1108	• Needle bearing	1		
7	JLM 1098	• BALLJOINT KIT-ASSEMBLY-OUTER	2		
11	JZN 100049	• • Hexagonal nut-M12	2		
8	JLM 1103	• Rack and pinion bellows	2		
9	JLM 1390	• Clip-large	2		
10	JLM 1391	• Clip-small	2		
	JLM 1096	• Pinion housing circlip	NLA		Part of CBC4924, CBC4046.
5	JLM 10840	Valve and pinion-assembly			RHD
1	CCC 6020 N	Steering rack and pinion-assembly-new	NLA		Use MMA3890AAN.
1	CCC 6020 E	Steering rack and pinion-assembly-remanufactured unit	NLA		Use MMA3890AAE.
1	MMA 3890AA N	Steering rack and pinion-assembly-new	NLA		Use MMA3890AAE.
1	MMA 3890AA E	Steering rack and pinion-assembly-remanufactured unit	1		RHD;except Sportspack and Police
1	CCC 6022 N	Steering rack and pinion-assembly-new	NLA		Use MMA3890BAN.
1	MMA 3890BA N	Steering rack and pinion-assembly-new	NLA		Use MMA3890BAE.
1	MMA 3890BA E	Steering rack and pinion-assembly-remanufactured unit	1		Sportspack;Police;RHD

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

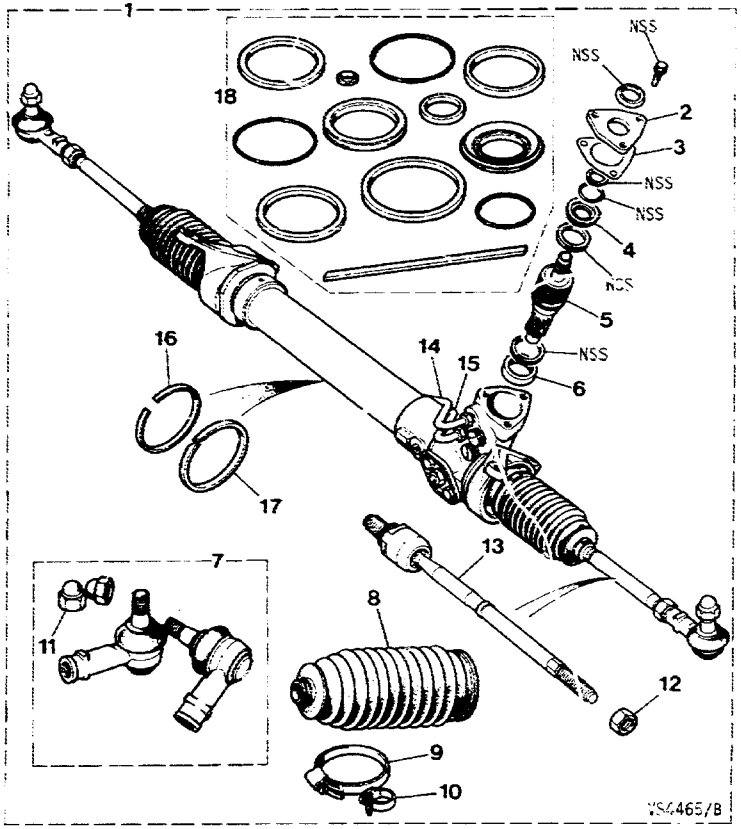

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4925	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(1)	Use CBC9053N. LHD
1	CBC 9053 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC5651N. LHD
1	CCC 5651 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC6021N. Energised seals;LHD
1	CCC 5651 E	STEERING RACK AND PINION-ASSEMBLY-REMANUFACTURED UNIT	NLA	(2)	Use CCC6021E. Energised seals;LHD
1	CCC 5653 N	STEERING RACK AND PINION-ASSEMBLY-NEW	NLA	(2)	Use CCC6023N. Sportspack;LHD
2	JLM 1110	• Top plate	1		
3	JLM 1109	• Shim pack	1		
4	JLM 1107	• Thrust washer	1		
6	JLM 1108	• Needle bearing	1		
7	JLM 1098	• BALLJOINT KIT-ASSEMBLY-OUTER	2		
11	JZN 100049	• • Hexagonal nut-M12	2		
8	JLM 1103	• Rack and pinion bellows	2		
9	JLM 1390	• Clip-large	2		
10	JLM 1391	• Clip-small	2		
	JLM 1096	• Pinion housing circlip	NLA		Part of CBC4925.
5	JLM 1095	• Valve and pinion-assembly	NLA		Use JLM10841.
5	JLM 10841	Valve and pinion-assembly			LHD
1	CCC 6021 N	Steering rack and pinion-assembly-new	NLA		Use MMA3891AAN.
1	CCC 6021 E	Steering rack and pinion-assembly-remanufactured unit	NLA		Use MMA3891AAE.
1	MMA 3891AA N	Steering rack and pinion-assembly-new	NLA		Use MMA3891AAE.
1	MMA 3891AA E	Steering rack and pinion-assembly-remanufactured unit	1		LHD;except Sportspack
1	CCC 6023 N	Steering rack and pinion-assembly-new	NLA		Use MMA3891BAN.
1	MMA 3891BA N	Steering rack and pinion-assembly-new	NLA		Use MMA3891BAE.
1	MMA 3891BA E	Steering rack and pinion-assembly-remanufactured unit	1		Sportspack;LHD


CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

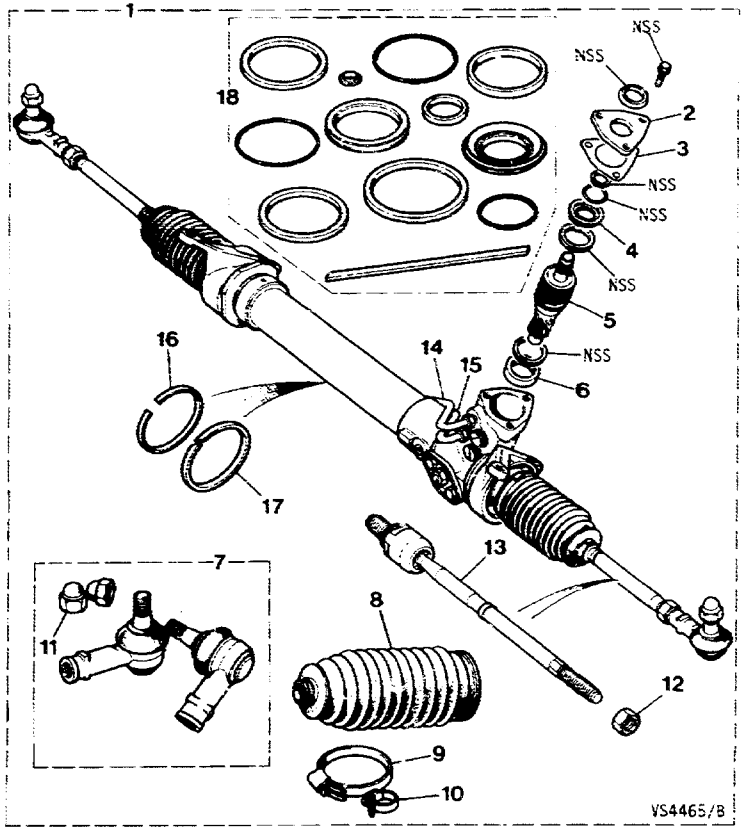

Illus	Part Number		Description	Quantity	Change Point	Remarks
12	AEU	2997	Self locking nut	2		
13	JLM	1097	Balljoint-assembly	2		
14	JLM	1099	Pipe-assembly-long	1		RHD
14	JLM	1101	Pipe-assembly-long	1		LHD
15	JLM	1100	Pipe-assembly-short	1		RHD
15	JLM	1102	Pipe-assembly short	1		LHD
16	C	39456	Piston ring-inner	NLA		
17	C	39457	Piston ring-outer	1		
18	JLM	1106	Seal kit	NLA		Use JLM10838
18	JLM	10838	Seal kit	1		
	JLM	10839	Valve and pinion seal kit	1	(1)	
	AGU	2748 J	Setscrew-M8 x 25mm	NLA		Use JLS10825E
	JLS	10825 E	Locking screw-rack to crossmember	NLA		Use JLS10825EP
	JLS	10825E P	Locking screw-rack to crossmember	4		
	WA	108051 J	Washer	NLA		Use WA108051
	WA	108051	Plain washer-0.3125" diameter	4		
	DBC	2664	Flanged nut -8mm	NLA		Use JFD108066E

CHANGE POINTS:
(1) From (V) 594576


STEERING RESERVOIR AND HOSES

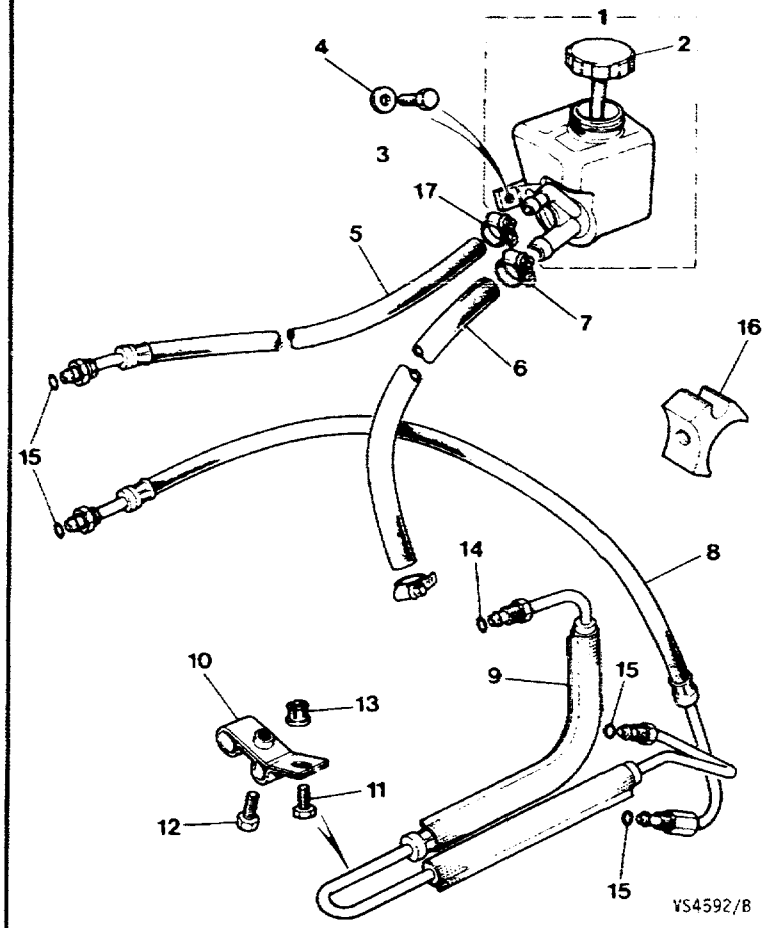

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6853	RESERVOIR	1	(1)	
2	JLM 2162	• Filler cap	1		
3	FS 106161 J	Flange head screw-M6	NLA		Use FS106165P.
3	FS 106165 P	Flange head screw	2		
4	WJ 106001 J	Plain washer-M6	2		
5	CAC 9992	Low pressure hose	1	(1)	
6	CAC 7739	Low pressure hose		(1)	Reservoir to pump
7	EAC 3215 4	Worm drive hose clip	NLA		Use JHC200101.
7	JHC 200101	Worm drive hose clip-steel	2		
8	CAC 9990	Hose-return	1	(1)	Rack to cooler;RHD
8	CBC 1830	Hose-return -rack to oil cooler	1	(1)	Rack to cooler;LHD
9	CAC 9952	High pressure hose-pump to steering rack	NLA	(1)	Use CBC9402. RHD
9	CBC 9402	High pressure hose-assembly-pump to steering rack	NLA		Use CCC7568.
9	CCC 7568	High pressure hose-assembly-pump to steering rack	1		RHD
9	CBC 9403	High pressure hose-assembly-pump to steering rack	NLA	(1)	Use MMB3985BA. LHD
9	MMB 3985BA	High pressure hose-assembly-pump to steering rack	1		LHD
10	CBC 1511	Pipe clip	1		
11	AGU 1939 1	Setscrew	1		
12	AGU 1944	Setscrew	NLA		Use AGU19441.
12	AGU 1944 1	Setscrew	1		
13	CBC 1400	Expanding nut	1		
14	CAC 8968 1	O-ring	1		
15	CAC 8968 2	O-ring	NLA		Use KSR605002.
15	KSR 605002	O-ring	1		
16	CBC 2136	Packing block	1		
17	EAC 3215 1	Hose clip	NLA		Use JHC201901.
17	JHC 201901	Hose clip	1		


CHANGE POINTS:
(1) To (V) 594575

STEERING RESERVOIR AND HOSES-NON RIDE LEVEL

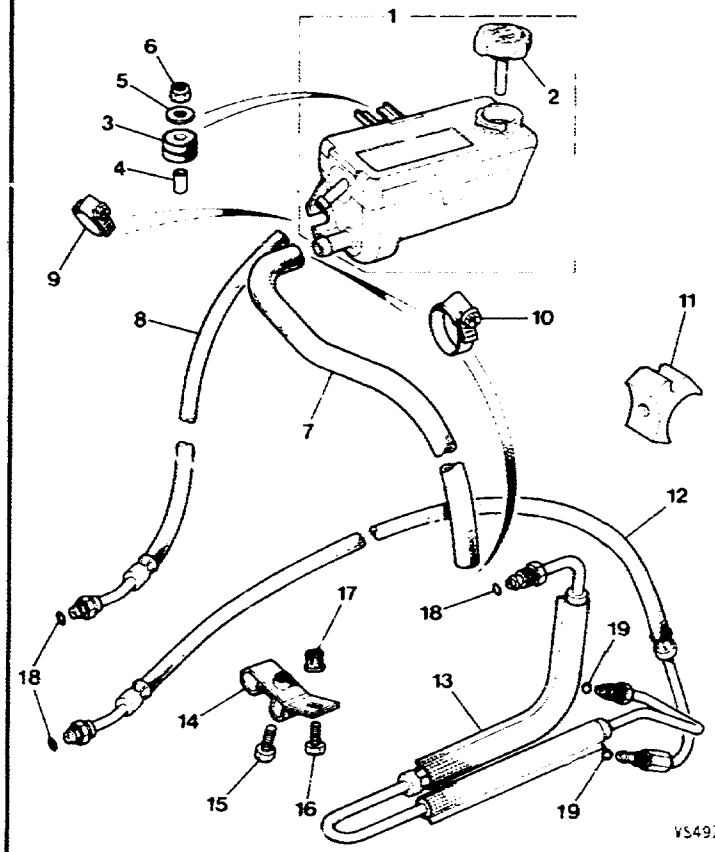


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CCC 2789	POWER STEERING RESERVOIR/CAP-ASSEMBLY	1		
2	CCC 2585	• Filler cap	1		
3	CAC 9596	Grommet-rubber	NLA		Use CBC1448
3	CBC 1448	Grommet-lower	3		
4	CAC 1825	Distance tube-0 56" long	3		
5	WJ 105001 J	Plain washer	3		
6	NY 105041 J	Nyloc nut-M5	3		
7	CBC 6297	Low pressure hose	1		
8	CBC 6298	Low pressure hose-oil cooler to reservoir	1		
9	EAC 3215 1	Hose clip	NLA		Use JHC201901
9	JHC 201901	Hose clip	1		
10	EAC 3215 5	Clip	1		
11	CBC 2136	Packing block	1		LHD
12	CAC 9990	Hose-return	1		RHD
12	CBC 1830	Hose-return -rack to oil cooler	1		LHD
13	CDC 9402	High pressure hose-assembly-pump to steering rack	NLA		Use CCC7568
13	CCC 7568	High pressure hose-assembly-pump to steering rack	1		RHD
13	CBC 9403	High pressure hose-assembly-pump to steering rack	NLA		Use MMB3985BA
13	MMB 3985BA	High pressure hose-assembly-pump to steering rack	1		LHD
14	CBC 1511	Pipe clip	1		
15	AGU 1939 1	Setscrew	1		
16	AGU 1944 1	Setscrew	1		
17	CBC 1400	Expanding nut	1		
18	CAC 8968 1	O-ring	1		
19	CAC 8968 2	O-ring	NLA		Use KSR605002
19	KSR 605002	O-ring	1		
	KZP 100001	Special pipe clip-hose to crush tube	1		

STEERING PUMP AND ADAPTOR

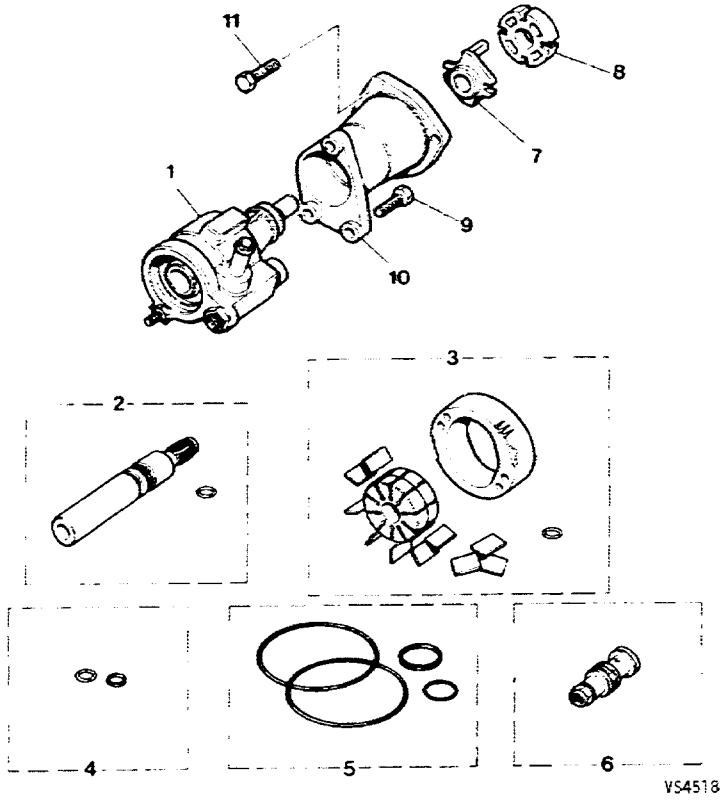

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 3970	POWER STEERING PUMP-ASSEMBLY	N A		Use MMD8110AA
1	MMD 8110AA	POWER STEERING PUMP-ASSEMBLY	1		
2	BAU 2135	• Shaft and ring	1		
3	JLM 1331	• Rotor service kit	1		
4	BAU 2137	• Retaining ring kit	NLA		
5	AEU 2787	• Seal kit	1		
6	AEU 2786	• Control valve	1		
7	EAC 7081	Driving gear-steering pump	1		
8	EAC 7107	Steering pump coupling	1		
9	FS 110251 J	Setscrew	3		Pump to adaptor
10	EAC 3968	Steering pump adaptor	1		
11	FS 108251 J	Washer faced setscrew-M8 x 25mm	3		Adaptor to engine

STEERING COLUMN-UPPER-UP TO (V)556851

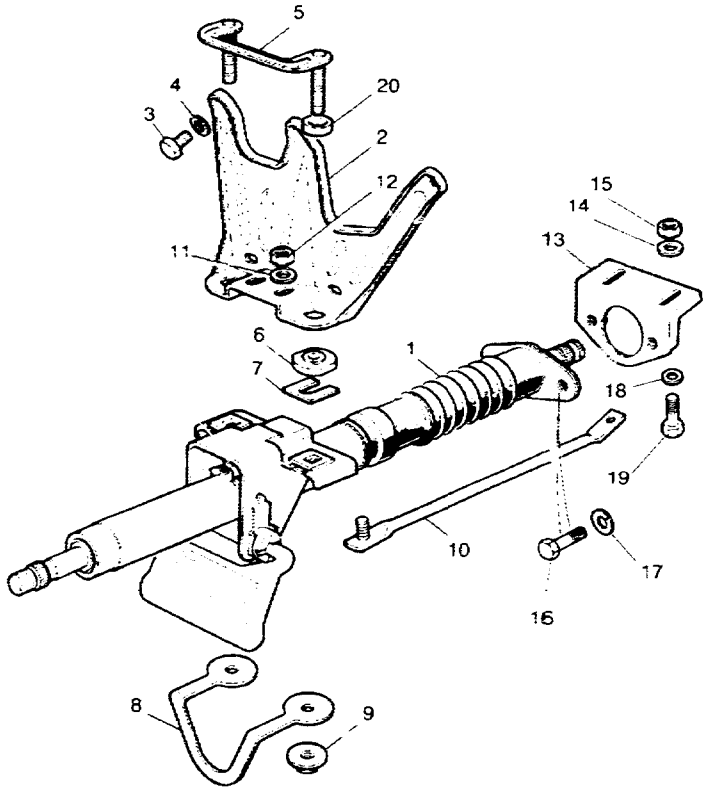


MH4653B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	5448	Steering column-assembly-upper	NLA	(1)	Use CBC6464
1	CBC	6464	Steering column-assembly-upper	1	(1)	
	C	44468	Tie strap	NLA		Use ADU9028.
	ADU	9028	Tie strap-7 75" long	1		
2	CBC	2470	Support bracket	NLA	(1)	Use CBC9235
	CBC	9235	Steering column mounting bracket-assembly	1		
3	SH	108201 J	Screw-M8 x 20mm	3		
4	FW	105 T	Plain washer-0 25" i/d	3		
5	CAC	9013	Tie brace-assembly	NLA	(1)	
6	CAC	9718	Location spacer	2		
	CBC	5558	Steering column spacer	2		
7	C	16370	Packer	A/R		
8	CAC	9817	Catch strap washer	1		
9	FN	108041 J	Flanged nut -M8	2		
10	CBC	1451	Longitudinal stay	2	(1)	
11	WA	108051	Plain washer-0.3125" diameter	2		
12	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B.
12	JFY	10804B	Locking nut	4		
13	CAC	8010	Mounting bracket	1	(1)	
14	WA	108051	Plain washer-0.3125" diameter	2		Bracket to body
15	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B.
15	JFY	10804B	Locking nut	2		Bracket to body
16	SH	108161 J	Setscrew-M8 x 16mm	2	(1)	Bracket to column
17	WL	108001 J	Spring washer-M8	2	(1)	
19	SH	108201 J	Screw-M8 x 20mm	1	(1)	LHD
18	WA	108051	Plain washer-0.3125" diameter	1		Bracket to body
	BD	25919	Blanking plug-6.35mm	NLA		Use HMD3351CA.
	HMD	3351CA	Blanking patch -50mm square	1		
20	CAC	9719	Special washer	2		
	CBC	7283	Facia bracket	1		
	FS	108201 J	Washer faced setscrew-M8 x 20mm	3		

CHANGE POINTS.
(1) To (V) 556850

STEERING COLUMN-UPPER-FROM (V)556852

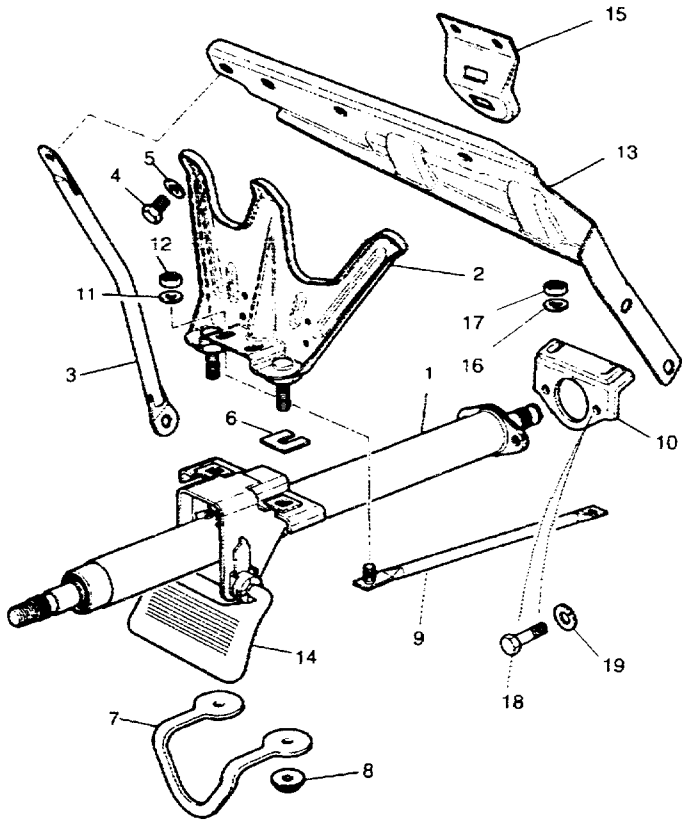

mh4970c


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6464	Steering column-assembly-upper	1	(1)	
	C 44468	Tie strap	NLA		Use ADU9028
	ADU 9028	Tie strap-7.75" long	1		
2	CBC 7247	Support bracket	NLA	(1)	Use CBC8001
	CBC 8001	Steering column mounting bracket	NLA	(1)	Use CBC9235
	CBC 9235	Steering column mounting bracket-assembly	1	(1)	
3	CBC 7817	Plenum tie-assembly-LH	1	(1)	
4	FS 108201 J	Washer faced setscrew-M8 x 20mm	3		Plenum stiffener to body
4	FS 108201 J	Washer faced setscrew-M8 x 20mm	1		Plenum tie to tunnel
5	FW 105 T	Plain washer-0.25" i/d	3		
6	C 16370	Packer	A/R		
7	CAC 9817	Catch strap washer	1		
8	FN 108041 J	Flanged nut -M8	2		
9	CBC 8168	Longitudinal stay	2	(1)	
11	WA 108051	Plain washer-0.3125" diameter	4		
12	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
12	JFY 10804B	Locking nut	2		
10	CBC 6735	Mounting bracket	1	(1)	
16	WA 108051	Plain washer-0.3125" diameter	2		Mounting bracket to body
17	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
17	JFY 10804B	Locking nut	2		Mounting bracket to body
18	SH 108161 J	Setscrew-M8 x 16mm	2		Bracket to column
19	WL 108001 J	Spring washer-M8	2		
13	CBC 7834	Plenum stiffener-RH	1	(1)	
13	CBC 7837	Plenum stiffener-LH	1	(1)	
	BCC 8005	Paint clearing screw	NLA		Use JHG10825EM
	JHG 10825E M	Paint clearing screw	3		
14	JLM 2234	Clamp handle	1	(1)	
	DAC 40273	Edge protection strip-241mm	NLA	(1)	Use DAC402716
	DAC 402716	Edge protection strip	1		
15	CBC 7283	Facia bracket	1	(1)	
	BD 25919	Blanking plug-6.35mm	NLA	(2)	Use HMD3351CA
	HMD 3351CA	Blanking patch -50mm square	1		

CHANGE POINTS:

(1) From (V) 556851

(2) From (V) 629286

STEERING COLUMN-LOWER

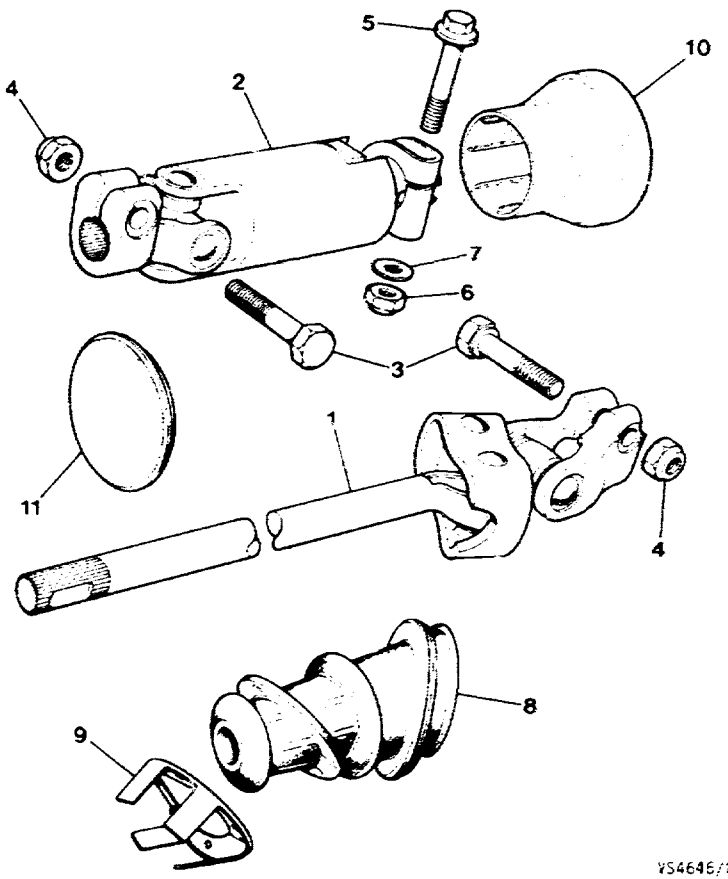

VS4646/C

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 7731	Steering column shaft/swing link-assembly	1		
2	CAC 7732	Damper and universal joint	NLA	(1)	Use BEC15132
	BEC 15132	Steering column damper-lower	1	(2)	
3	CBC 2031	Pinch bolt	2		
4	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
4	JFY 10804B	Locking nut	2		
5	BH 108091 J	Pinch bolt	1		
6	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
6	JFY 10804B	Locking nut	1		
7	FW 105 E	Plain washer	1		
8	CAC 9388	One piece gaiter	NLA	(3)	Use CBC6080
					RHD
8	CBC 6080	One piece gaiter	1	(4)	RHD
8	CAC 9389	One piece gaiter	NLA	(3)	Use CBC6081
					LHD
8	CBC 6081	One piece gaiter	1	(4)	LHD
9	CAC 9386	Gaiter sealing ring	NLA	(3)	Use CBC6078
					RHD
9	CBC 6078	Gaiter sealing ring	1	(4)	RHD
9	CAC 9387	Gaiter sealing ring	NLA	(3)	Use CBC6079
					LHD
9	CBC 6079	Gaiter sealing ring	1	(4)	LHD
	C 42879	Gaiter sleeve	1		
	C 30741	Sealing sleeve	2		
	CAC 8086	Spring-A-type	1		
	AK 608061 J	U-spring nut	3		
	AB 608031 J	Self tapping screw	3		
10	CAC 5082	Clamp shield	A/R		RHD
11	CAC 8365	Solid rubber grommet -2.75" diameter	1		

CHANGE POINTS


(1) To (V) 653320

(2) From (V) 653321

(3) To (V) 524374

(4) From (V) 524375

STEERING WHEEL-2.9/3.6 LITRE-JAGUAR/DAIMLER

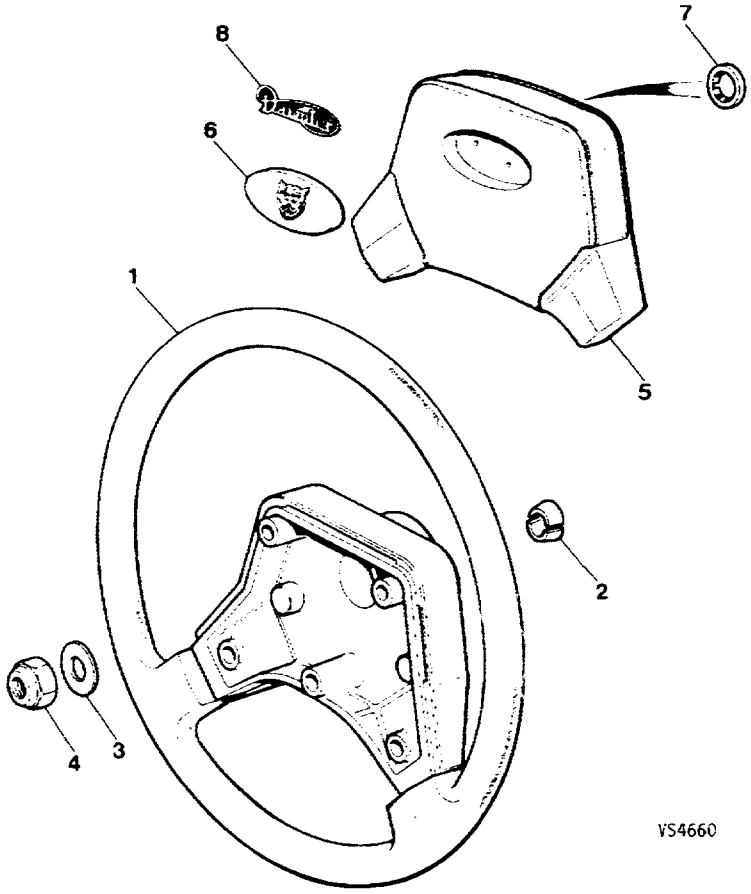


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6335	Steering wheel-assembly-Warm charcoal	NLA	(1)	Use CBC7725. 2.9 Litre
1	CBC 6335	Steering wheel-assembly-Warm charcoal	NLA	(1)	Use CBC7725. 3.6 Litre (XJ40)
1	CBC 7725	Steering wheel-assembly-Warm charcoal	NLA	(2)	Use CBC8094. 2.9 Litre
1	CBC 7725	Steering wheel-assembly-Warm charcoal	NLA	(2)	Use CBC8094. 3.6 Litre (XJ40)
1	CBC 8094	STEERING WHEEL-ASSEMBLY-WARM CHARCOAL	1		
	CBC 8095	• Cancellation switch-steering wheel	1		
	SM 104101 J	• Screw-M4 x 10mm	3		
1	CBC 7725 AEM	Steering wheel-assembly-Magnolia	1	(1)	2.9 Litre
1	CBC 7725 AEM	Steering wheel-assembly-Magnolia	1	(1)	3.6 Litre (XJ40)
2	C 38528	Split cone	1		
3	WD 116101 J	Plain washer	1		
4	NY 116041 J	Self locking nut	1		
5	CBC 2099 LEG	STEERING WHEEL CENTRE-WARM CHARCOAL - JAGUAR	1	(1)	
6	CBC 2112	• Badge-Jaguar	1		
7	AN 604061 J	• Push on fix	2		
5	CBC 8060 LEG	STEERING WHEEL CENTRE-ASSEMBLY-WARM CHARCOAL -DAIMLER	1	(1)	
8	BAC 7013	• Daimler badge-assembly	1		
7	AN 604061 J	• Push on fix	2		
5	CBC 2097	Steering wheel centre-Warm charcoal -Vanden Plas	NLA	(1)	USA
5	CBC 2098	Steering wheel centre-Warm charcoal -Daimler	NLA	(1)	Daimler
5	CBC 8058 LEG	Steering wheel centre-assembly-Warm charcoal -Jaguar	NLA	(2)	Use BEC10388LEG. Sovereign;VDP;Jaguar
5	BEC 10388 LEG	Steering wheel centre-Warm charcoal -Jaguar	1		Sovereign;VDP;Jaguar
5	CBC 8058 AEM	Steering wheel centre-Magnolia	NLA	(1)	Use BEC10388AEM.
5	BEC 10388 AEM	Steering wheel centre-Magnolia	NLA		

CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 556851 To (V) 594575


STEERING WHEEL-JAGUAR

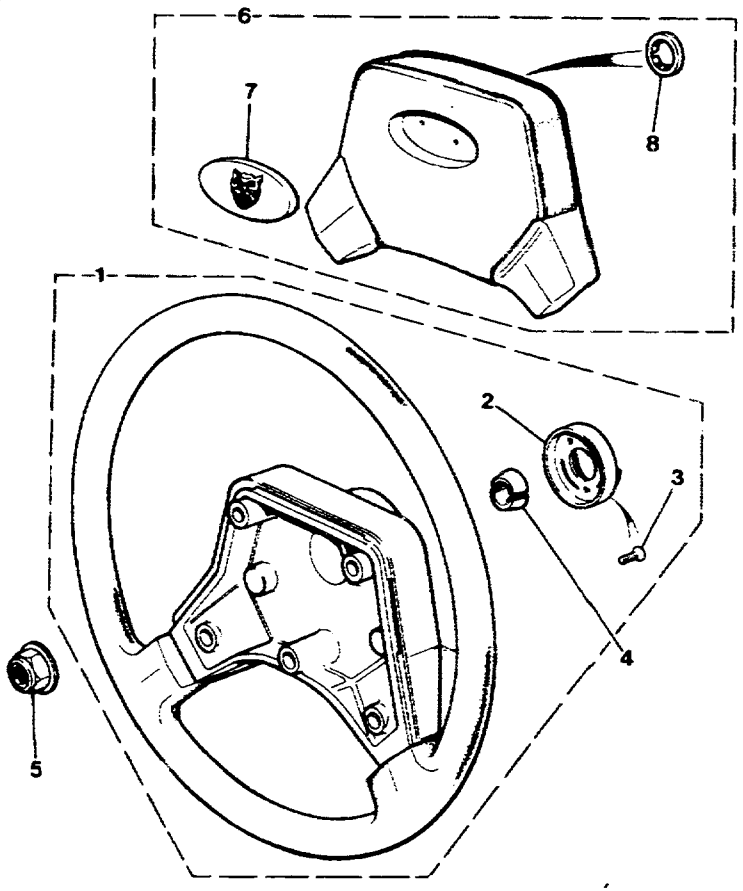

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	8094	STEERING WHEEL-ASSEMBLY-WARM CHARCOAL	1	(1)	2.9 Litre
1	CBC	8094	STEERING WHEEL-ASSEMBLY-WARM CHARCOAL	1		3.2 Litre
1	CBC	8094	STEERING WHEEL-ASSEMBLY-WARM CHARCOAL	1		4.0 Litre
2	CBC	8095	• Cancellation switch-steering wheel	1		
3	SM	104101 J	• Screw-M4 x 10mm	3		
4	CBC	6729	Split cone	1	(1)	
5	CBC	8062	Nut and washer -assembly	1		
	CBC	6742	Wire clip-split cone to column	1		
6	CBC	2099 LEG	STEERING WHEEL CENTRE-WARM CHARCOAL - JAGUAR	1		
7	CBC	2112	• Badge-Jaguar	1		
8	AN	604061 J	• Push on fix	2		

CHANGE POINTS:
(1) From (V) 594576

STEERING WHEEL-DAIMLER

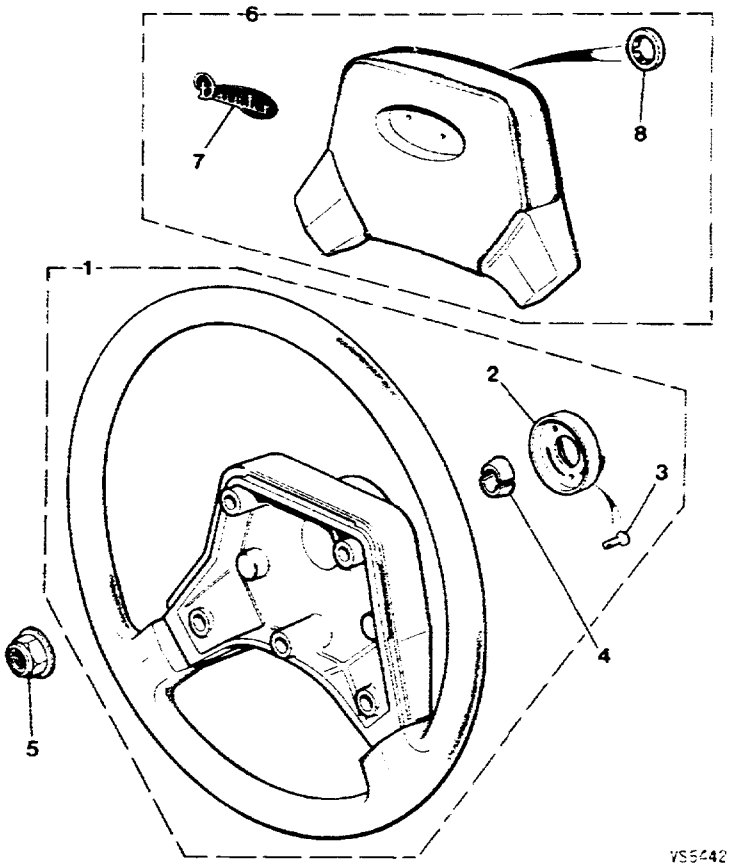


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8094	STEERING WHEEL-ASSEMBLY-WARM CHARCOAL	1	(1)	Daimler
2	CBC 8095	• Cancellation switch-steering wheel	1		
3	SM 104101 J	• Screw-M4 x 10mm	3		
4	CBC 6729	Split cone	1		
5	CBC 8062	Nut and washer -assembly	1		
	CBC 6742	Wire clip-split cone to column	1		
6	CBC 8060 LEG	STEERING WHEEL CENTRE-ASSEMBLY-WARM CHARCOAL -DAIMLER	1	(1)	Daimler
	BAC 7013	• Daimler badge-assembly	1		
	AN 604061 J	• Push on fix	2		

CHANGE POINTS

(1) From (V) 594576

STEERING WHEEL-SOVEREIGN/VDP/MAJESTIC

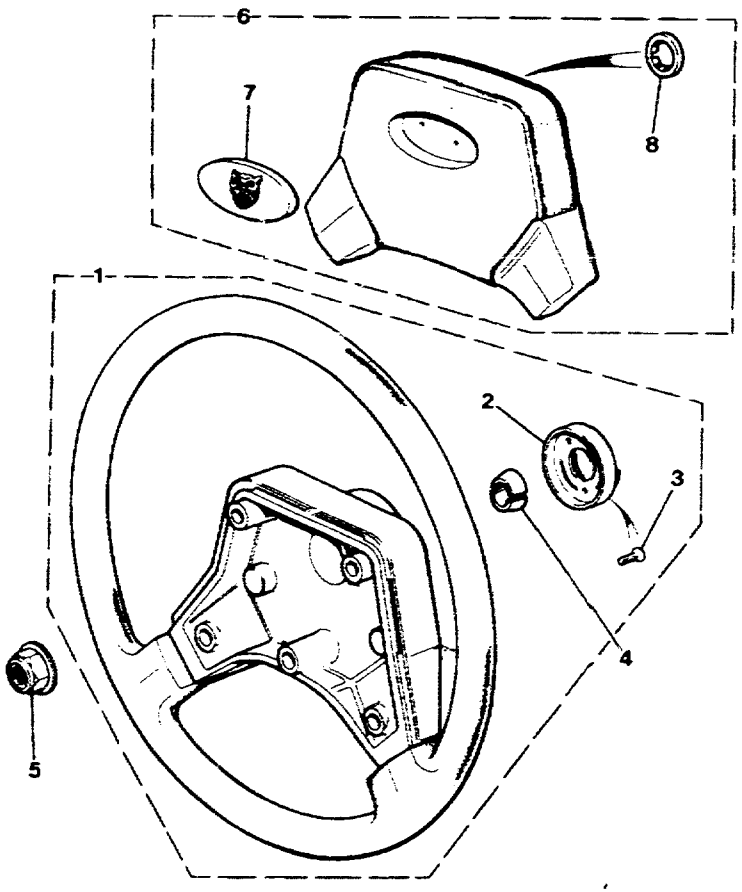


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8094	STEERING WHEEL-ASSEMBLY-WARM CHARCOAL	1	(1)	Majestic,Sovereign,VDP
1	CBC 8094 AEM	STEERING WHEEL-ASSEMBLY-MAGNOLIA	NLA	(1)	Use CBC8094
					Majestic,Sovereign,VDP
2	CBC 8095	• Cancellation switch-steering wheel	1		
3	SM 104101 J	• Screw-M4 x 10mm	3		
4	CBC 6729	Split cone	1		
5	CBC 8062	Nut and washer -assembly	1		
	CBC 6742	Wire clip-split cone to column	1		
6	CBC 8058	Steering wheel centre-Warm charcoal	NLA	(2)	Use BEC10388LEG
6	BEC 10388 LEG	Steering wheel centre-Warm charcoal -Jaguar	1	(3)	
6	CBC 8058 AEM	Steering wheel centre-Magnolia	NLA	(2)	Use BEC10388AEM
6	BEC 10388 AEM	Steering wheel centre-Magnolia	NLA	(3)	Majestic
7	CBC 2112	Badge-Jaguar	1		
8	AN 604061 J	Push on fix	2		

CHANGE POINTS:

(1) From (V) 594576
(2) From (V) 594576 To (V) 636449
(3) From (V) 636450


ANTI ROLL BAR AND FULLCRUM TIE-UP TO (V)594575

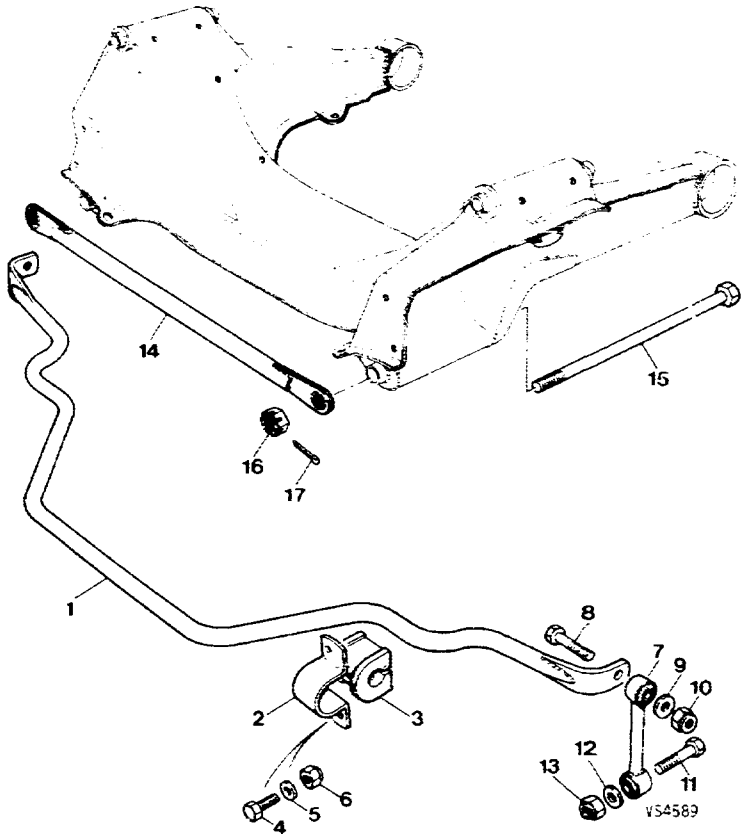

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	1466205	Anti roll bar	NLA	(1)	Use CBC6470205
1	CBC	6470205	Anti roll bar	1		
2	CAC	8848	Anti roll bar mounting bracket -RH	NLA	(1)	Use CBC5336
2	CBC	5336	Anti roll bar mounting bracket -RH	1		
2	CAC	8849	Anti roll bar mounting bracket -LH	NLA	(1)	Use CBC5337
2	CBC	5337	Anti roll bar mounting bracket -LH	1		
3	CAC	4651 10	Mounting rubber-anti roll bar	2	(1)	
4	SH	108201 PJ	Mounting bracket setscrew	4	(1)	
5	WA	108051 J	Washer	NLA	(1)	Use WA108051
	WA	108051	Plain washer-0.3125" diameter	4		
6	NY	108041 J	Locking nut-M8	NLA	(1)	Use JFY10804B
7	CAC	9827	Anti roll bar link-assembly	2	(1)	
8	CAC	7777	Bolt -7/16" x 2 3/16"	2	(1)	
9	CAC	7787	Washer	NLA	(1)	Use WA600071J
9	WA	600071 J	Washer	2		
10	NY	607041 J	Self locking nut	2	(1)	
11	BH	607301 J	Bolt -0.4375" x 3.75"	2	(1)	
12	CAC	7787	Washer	NLA	(1)	Use WA600071J
12	WA	600071 J	Washer	2		
13	NY	607041 J	Self locking nut	2	(1)	
14	CAC	9791	Fulcrum tie-lower	NLA	(1)	Use CBC9191
14	CBC	9191	Fulcrum tie	NLA		Use MMD2260AA
14	MMD	2260AA	Fulcrum tie	1		
15	CBC	1836	Fulcrum shaft and nut-assembly-lower	NLA	(1)	Use JLM11658
16	NL	609041 J	Locknut-slotted	2	(1)	
17	PS	106320 J	Split pin	2	(1)	

CHANGE POINTS
(1) To (V) 594575


ANTI ROLL BAR AND FULLCRUM TIE-FROM (V)594576

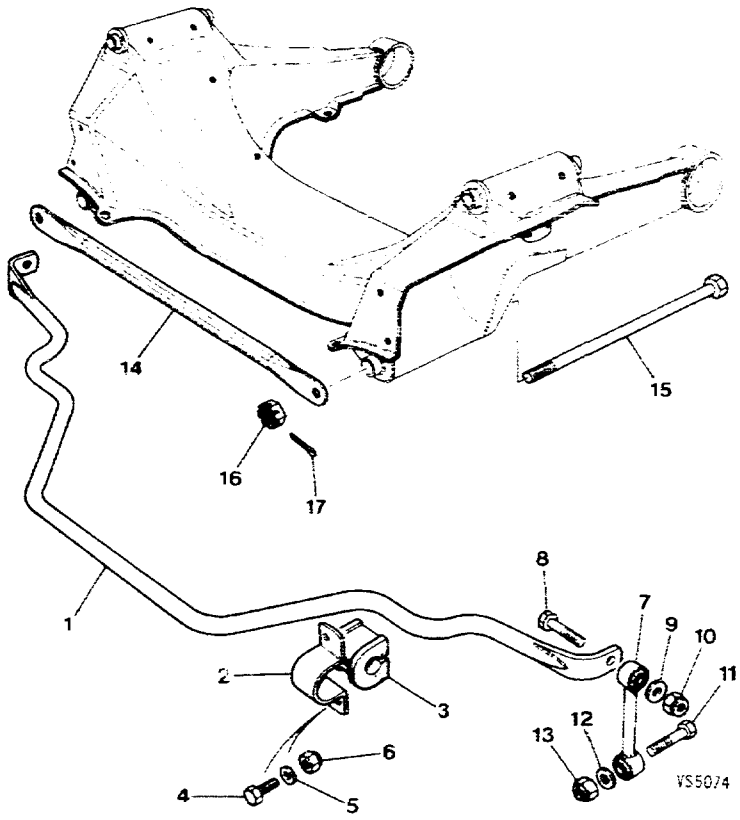

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	6470205	Anti roll bar	1	(1)	Except Sportspack
1	CBC	9642	Anti roll bar	1	(1)	Sportspack
2	CAC	8848	Anti roll bar mounting bracket -RH	NLA	(1)	Use CBC5336
2	CBC	5336	Anti roll bar mounting bracket -RH	1		
2	CAC	8849	Anti roll bar mounting bracket -LH	NLA	(1)	Use CBC5337
2	CBC	5337	Anti roll bar mounting bracket -LH	1		
3	CAC	465110	Mounting rubber-anti roll bar	2	(1)	Except Sportspack
	CCC	2806	Anti roll bar bush	2	(1)	Sportspack
4	SH	108201 PJ	Mounting bracket setscrew	4	(1)	
5	WA	108051 J	Washer	NLA	(1)	Use WA108051
	WA	108051	Plain washer-0 3125" diameter	4		
6	NY	108041 J	Locking nut-M8	NLA	(1)	Use IFY10804B
7	CAC	9827	Anti roll bar link assembly	2	(1)	
8	CAC	7777	Bolt -7/16" x 2 3/16"	2	(1)	
9	CAC	7787	Washer	NLA	(1)	Use WA600071J
9	WA	600071 J	Washer	2		
10	NY	607041 J	Self locking nut	2	(1)	
11	BH	607301 J	Bolt -0 4375" x 3 75"	2	(1)	
12	CAC	7787	Washer	NLA	(1)	Use WA600071J
12	WA	600071 J	Washer	2		
13	NY	607041 J	Self locking nut	2	(1)	
14	CAC	9791	Fulcrum tie-lower	NLA	(1)	Use CBC9191
14	CBC	9191	Fulcrum tie	NLA		Use MMD2260AA
14	MMD	2260AA	Fulcrum tie	2		
15	CBC	1836	Fulcrum shaft and nut-assembly-lower	NLA	(1)	Use JLM11858
16	NL	609041 J	Locknut-slotted	2	(1)	
17	PS	106320 J	Split pin	2	(1)	


CHANGE POINTS
(1) From (V) 594576

ROAD SPRING AND DAMPER-FRONT

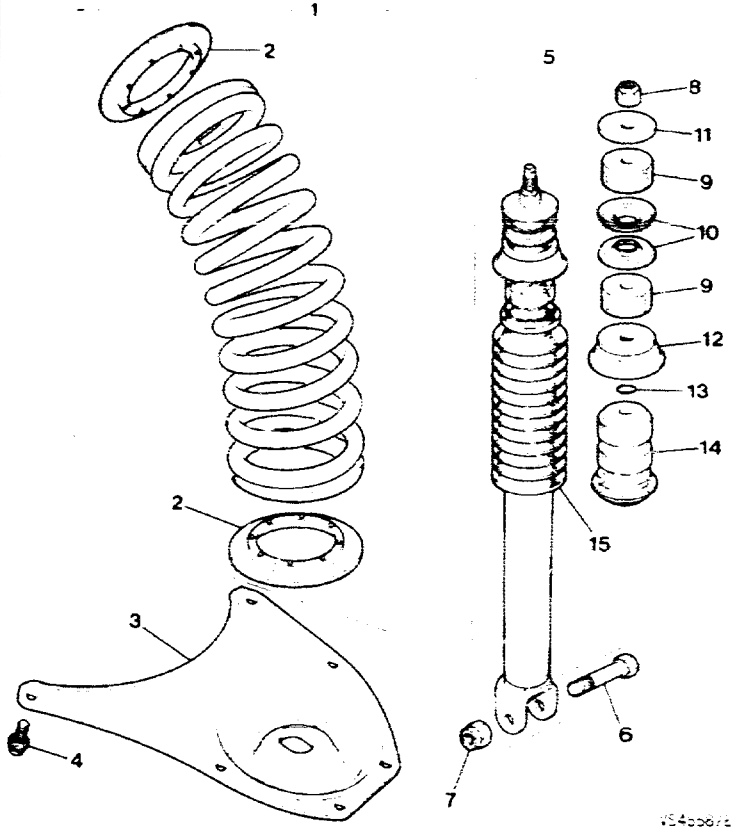

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	578	ROAD SPRING KIT	NLA		Use JLM12165
1	JLM	12165	ROAD SPRING KIT	1		3.6 Litre (XJ40),air conditioning ,Europe 4.0 Litre,air conditioning ,Europe 2.9 Litre,Canada,USA
1	JLM	579	ROAD SPRING KIT	1		3.6 Litre (XJ40),Canada,USA 4.0 Litre,Canada,USA
1	JLM	580	ROAD SPRING KIT	NLA		Use JLM12164
1	JLM	12164	ROAD SPRING KIT	NLA		Use JLM12241
1	JLM	12241	ROAD SPRING KIT	1		2.9 Litre,air conditioning ,Europe 3.2 Litre,air conditioning ,Europe
1	JLM	1557	ROAD SPRING KIT	NLA		3.6 Litre (XJ40),Europe,except air conditioning
1	JLM	1558	ROAD SPRING KIT	1		2.9 Litre,Europe,except air conditioning 3.2 Litre,Europe,except air conditioning
1	JLM	10645	ROAD SPRING KIT	1		Sportspack
2	CAC	9822	• Packing and locator -1.5mm	NLA		Use MNA2162AA
2	CAC	9822.1	• Packing and locator -4.5mm	A/R		
3	CBC	7278	Spring pan-RH	1		
3	CBC	7277	Spring pan-LH	1		
4	AGU	2551	Setscrew	12		

ROAD SPRING AND DAMPER-FRONT

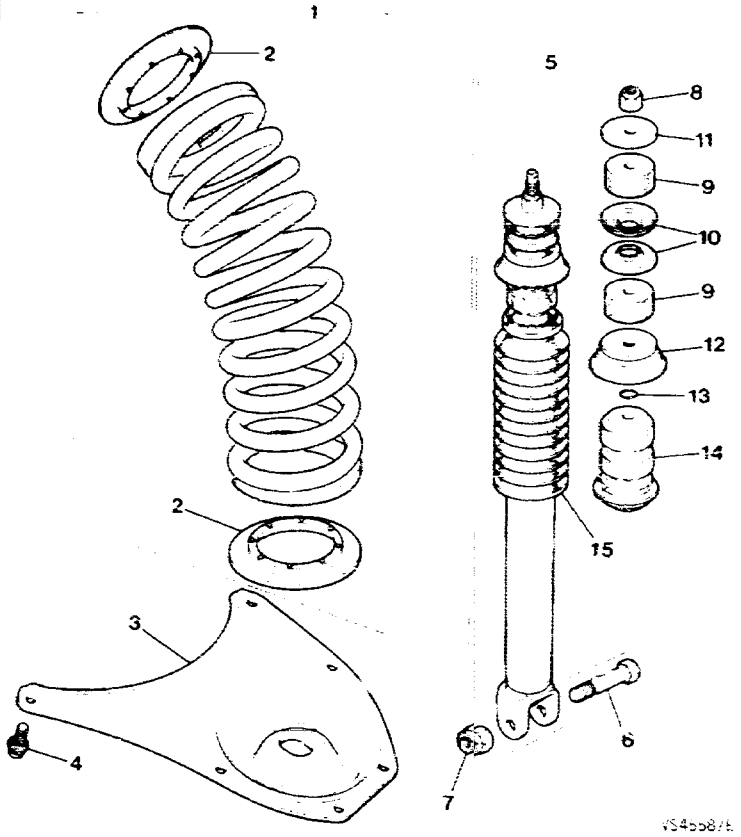

Illus	Part Number	Description	Quantity	Change Point	Remarks
5	CBC 8301	Suspension damper-assembly-front	NLA	(1)	Use CCC5133.
5	CCC 5133	Suspension damper-assembly-front	NLA		Use CCC5243.
5	CCC 5243	Suspension damper-assembly-front-black	NLA	(2)	Use 2 x MMD 2140AB.
5	CBC 9743	Suspension damper-assembly-front	NLA	(1)	Use CCC5245.
5	CCC 5245	Suspension damper-assembly-front-green	NLA	(2)	Use 2 x MMD 2140BB.
5	MMD 2140AB	SUSPENSION DAMPER-ASSEMBLY-FRONT-BLACK	2		Except Sportspack
5	MMD 2140BB	SUSPENSION DAMPER-ASSEMBLY-FRONT-GREEN	2		Sportspack
	JLM 21158	Nyloc nut-M10	2		
	CCC 6635	Buffer cup and gaiter -assembly	NLA		Use CBC6635.
	CBC 6635	Buffer cup and gaiter -assembly	2		
6	CAC 9626	Special bolt	2		
7	NY 607041 J	Self locking nut	2		
8	NY 606041 J	Locking nut-3/8" unf	2		
9	CBC 2220 50	Shock absorber isolator	~~NLA~~		~~Use CBC5956~~
9	CBC 5956	Shock absorber isolator	NLA		Use MMD2144AA.
9	MMD 2144AA	Shock absorber isolator	4		
10	CBC 4152	Cup washer	4		
11	CAC 9426	Washer-top	2		
12	CAC 9829	Buffer cup-assembly	NLA		Use CCC5274.
12	CCC 5274	Buffer cup	2		
13	CAC 9430	Circlip stem	2		
14	CAC 9428	Buffer	2		
15	CAC 9429	Gaiter	2		


CHANGE POINTS
(1) To (V) 629285
(2) From (V) 629286

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

ANTI ROLL BAR ..... 2. I 15
CROSSBEAM AND MOUNTINGS-FRONT ..... 2. J 07
HUB AND CARRIER-REAR ..... 2. J 09
POWER STEERING PUMP ..... 2. I 07
POWER STEERING RACK ASSEMBLY ..... 2. I 02
RIDE LEVEL SYSTEM ..... 2. J 18
ROAD SPRING AND DAMPER-FRONT ..... 2. I 17
SHOCK ABSORBERS AND STOP RUBBERS ..... 2. J 14
STEERING COLUMN ..... 2. I 08
STEERING RESERVOIR, COOLER AND ..... 2. I 05
STEERING WHEEL ..... 2. I 11
SUBFRAME AND MOUNTINGS-REAR ..... 2. J 13
SUSPENSION WISHBONES AND ARMS- ..... 2. J 16
WHEELS ..... 2. K 08
WISHBONE AND HUB ASSEMBLY-FRONT ..... 2. J 02
ACCUMULATOR AND PIPES ..... 2. K 02
ANTI ROLL BAR AND FULLCRUM TIE-FROM ..... 2. I 16
ANTI ROLL BAR AND FULLCRUM TIE-UP TO ..... 2. I 15
Accumulator and seal -assembly ..... 2. K 02
Balljoint-assembly ..... 2. I 04
Bushed differential strut-assembly ..... 2. J 17
CROSSBEAM ASSEMBLY ..... 2. J 07
DAMPER UNIT AND SPRING-REAR ..... 2. J 14
DIFFERENTIAL MOUNTING AND SWING ARM ..... 2. J 16
Driving gear-steering pump ..... 2. I 07
FRAME CARRIER-REAR ..... 2. J 13
HUB CARRIER AND HUB ASSEMBLY-REAR ..... 2. J 09
HUB CARRIER AND HUB ASSEMBLY-REAR ..... 2. J 11
In line filter ..... 2. J 18
Link-assembly-LH upper ..... 2. J 13
Link-assembly-RH upper ..... 2. J 13
MODULATOR UNIT ..... 2. K 03
Mounting frame-assembly ..... 2. J 13
Power steering reservoir/cap-assembly ..... 2. I 06
RIDE LEVEL SENSOR ..... 2. K 06
RIDE LEVEL SUSPENSION PIPES ..... 2. K 07
ROAD SPRING AND DAMPER-FRONT ..... 2. I 17
ROAD WHEEL AND TYRE-ALLOY-DAIMLER ..... 2. K 09
ROAD WHEEL AND TYRE-ALLOY ..... 2. K 08
ROAD WHEEL AND TYRE-MAJESTIC-USA ..... 2. K 10
ROAD WHEEL AND TYRE-PRESSED SPOKE ..... 2. K 11
ROAD WHEEL AND TYRE-ROULETTE ..... 2. K 12
SOLENOID VALVE BLOCK ASSEMBLY ..... 2. K 05
SOLENOID VALVE BLOCK-RIDE LEVELLING ..... 2. J 18
SOLENOID VALVE BLOCK ..... 2. K 04
STEERING COLUMN-LOWER ..... 2. I 10
STEERING COLUMN-UPPER-UP TO ..... 2. I 08
STEERING PUMP AND ADAPTOR ..... 2. I 07
STEERING RACK AND PINION ..... 2. I 02
STEERING RESERVOIR AND HOSES-NON ..... 2. I 06
STEERING RESERVOIR AND HOSES ..... 2. I 05
STEERING WHEEL-2.9/3.6 LITRE- ..... 2. I 11
STEERING WHEEL-DAIMLER ..... 2. I 13
STEERING WHEEL-JAGUAR ..... 2. I 12
STEERING WHEEL- ..... 2. I 14
Seal kit ..... 2. I 04
Solenoid valve block-assembly ..... 2. K 04
Steering pump coupling ..... 2. I 07
Suspension up solenoid-assembly ..... 2. K 04
Wishbone-assembly-LH rear ..... 2. J 16
Wishbone-assembly-RH rear ..... 2. J 16

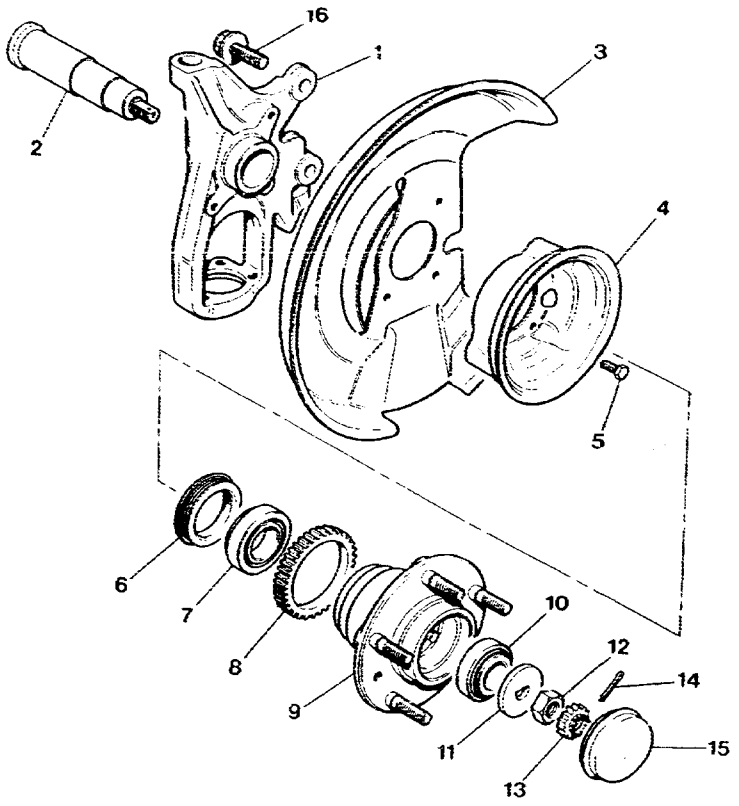

VS4559/A


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	1710	Vertical link-RH	1	(1)	Anti lock brake system
1	CBC	1711	Vertical link-LH	1	(1)	Anti lock brake system
1	CBC	1712	Vertical link-RH	NLA	(1)	Use CBC1710.
						Except anti lock brake system
1	CBC	1713	Vertical link-LH	NLA	(1)	Use CBC1711.
						Except anti lock brake system
1	CBC	1710	Vertical link-RH	1	(2)	
1	CBC	1711	Vertical link-LH	1	(2)	
2	CAC	4650	Stub axle	2		
3	CBC	1442	Disc shield -RH	NLA		Use CBC4588.
3	CBC	1443	Disc shield -LH	NLA		Use CBC4589.
3	CBC	4588	Disc shield -RH	1		
3	CBC	4589	Disc shield -LH	1		
4	CAC	9646	Water shield-RH	1		
4	CAC	9647	Water shield-LH	1		
5	SB	106101 P	Cap screw	3		
6	CBC	2858	Hub oil seal -front	2		
7	CAC	4999	Wheel bearing-inner	2		
8	CBC	4704	Sensor rotor -front	2		
9	CAC	9834	Hub-sub assembly	2		
	CAC	4556	Wheel stud	10		
10	CAC	4603	Hub bearing-assembly	2		
11	CAC	7651	D-washer	2		
12	NT	610041 J	Locknut-plain	2		
13	C	45726	Retainer	2		
14	PS	106320 J	Split pin	2		
15	CAC	9865	Grease cap	2		
16	CBC	1346	Special bolt-M12 x 32mm	NLA		Use CBC8905.
16	CBC	8905	Special bolt-M12 x 29.5mm	NLA		Use JZB100010.
16	JZB	100010	Special bolt-caliper to vertical link	2		
	JLM	1707	Hub bearing kit	2		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

STEERING AND SUSPENSION

WISHBONE AND HUB ASSEMBLY-FRONT

WISHBONE-UPPER AND LOWER-UP TO (V) 594575

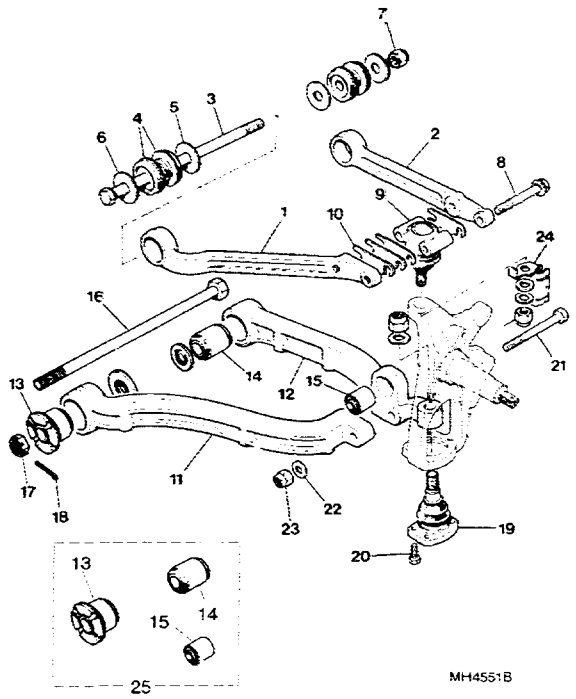


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	6776	Upper wishbone-RH front	NLA	(1)	Use CBC8562.
1	CBC	8562	Upper wishbone-front-RH	NLA		Use CCC2434.
	CCC	2434	Wishbone/bush-assembly-RH front-upper	NLA	(2)	Use CCC2426 qty 1 with CBC5523 qty 1.
	CCC	2426	Wishbone arm -RH front-upper	1		
1	CAC	6777	Upper wishbone-LH front	NLA	(1)	Use CBC8563.
1	CBC	8563	Upper wishbone-front-LH	NLA		Use CCC2435.
	CCC	2435	Wishbone/bush-assembly-LH front-upper	NLA	(2)	Use CCC2427 qty 1 with CBC5523 qty 1.
	CCC	2427	Wishbone arm -LH front-upper	1		
	CBC	5523	Wishbone bush-upper	1		
2	CAC	7128	Upper wishbone-rear	NLA	(1)	Use CCC4950 qty 1 with CCC4951 qty 1.
	CCC	4950	Wishbone/bush-assembly-RH rear-upper	1		
	CCC	4951	Wishbone/bush-assembly-LH rear-upper	1		
3	CBC	1844	Upper fulcrum bolt	2	(1)	
4	CAC	9295	Slipflex bush	4	(1)	
5	CAC	3533	Washer	6	(1)	
6	CAC	3554	Outer washer	2	(1)	
7	NY	112041 J	Self locking nut	2	(1)	
8	CAC	5863	Durlock bolt	NLA	(1)	Use JLB110167.
8	JLB	110167	Durlock bolt	4		
9	CAC	9938	Balljoint-assembly-upper	2	(1)	
10	C	15308	Spacing plate-thin	NLA	(3)	Use CBC64162.
10	CBC	64161	Spacing plate-thick	4	(4)	
10	CBC	64162	Spacing plate-thin	4	(1)	
11	CBC	2240	Lower wishbone-RH front	1	(1)	
11	CBC	2241	Lower wishbone-LH front	1	(1)	
12	CAC	9268	Lower wishbone-RH rear	1	(1)	
12	CAC	9269	Lower wishbone-LH rear	1	(1)	

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 556850
(4) From (V) 556851 To (V) 594575


WISHBONE-UPPER AND LOWER-UP TO (V) 594575

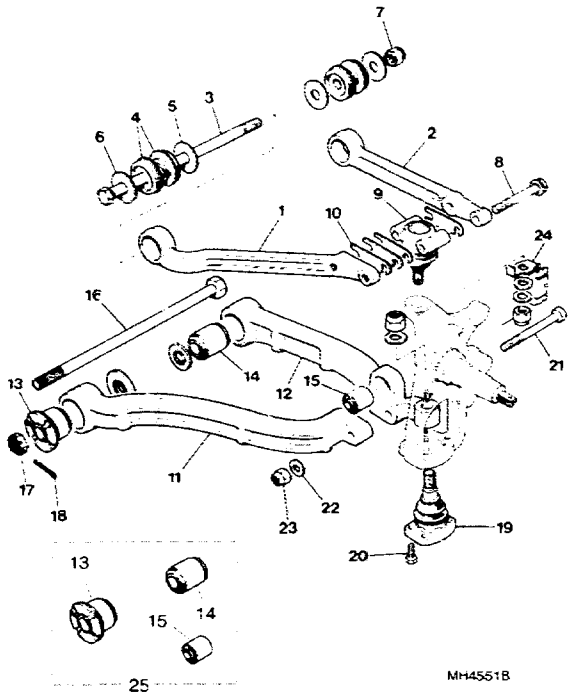

Illus	Part Number	Description	Quantity	Change Point	Remarks
25	JLM 11695	BUSHING KIT	1	(1)	
13	CBC 2291	• Bush-front lower	2		
14	CBC 2301	• Fulcrum bush-lower	2		
15	CAC 7585 1	• Damper bush	2		
16	CBC 1836	Fulcrum shaft and nut-assembly-lower	NLA	(1)	Use JLM11858
16	JLM 11858	FULCRUM SHAFT AND NUT	2	(1)	
	JZN 100062	• Nut-nyloc-M14	1		
17	NL 609041 J	Locknut-slotted	2	(1)	
18	PS 106320 J	Split pin	2	(1)	
	CAC 9574	Special washer-front	2	(1)	
	C 30954	Special washer-rear	2	(1)	
19	CAC 9937	Balljoint-assembly-lower	NLA	(1)	Use JLM11860
19	JLM 11860	Balljoint-assembly-lower	2	(1)	
20	CBC 1805	Special bolt	8	(1)	
21	BH 607301 J	Bolt -0.4375" x 3.75"	2	(1)	
22	CAC 7787	Washer	NLA	(1)	Use WA600071J
22	WA 600071 J	Washer	2	(1)	
23	NY 607041 J	Self locking nut	2	(1)	
24	DBC 2704	Brake pad sensor connector clip-Ferodo	NLA	(1)	
24	DBC 3438	Brake pad sensor connector clip-Jurid	2	(1)	

CHANGE POINTS:
(1) To (V) 594575

WISHBONE-UPPER AND LOWER-FROM (V)594576

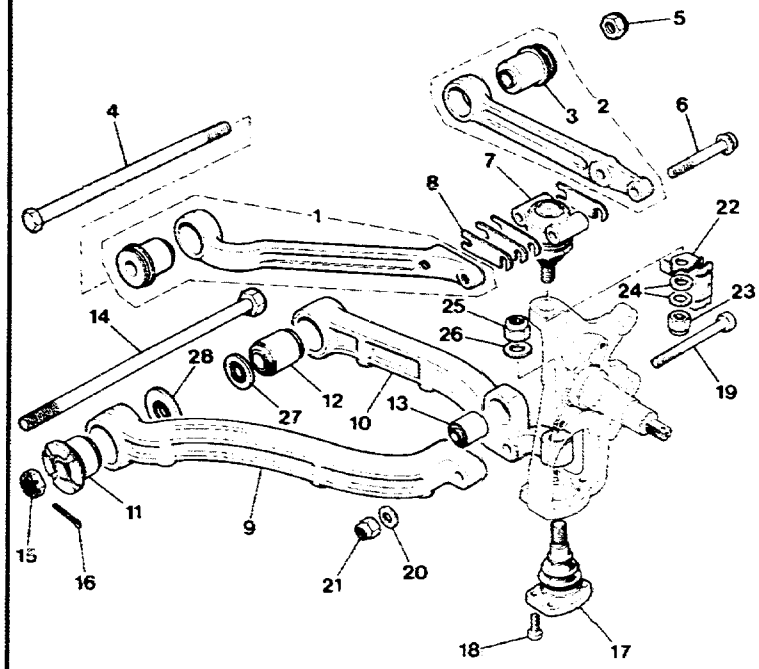


YS5073

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CCC	2434	Wishbone/bush-assembly-RH front-upper	NLA		Use CCC2426 qty 1 with CBC5523 qty 1.
	CCC	2426	Wishbone arm -RH front-upper	1		
1	CCC	2435	Wishbone/bush-assembly-LH front-upper	NLA		Use CCC2427 qty 1 with CBC5523 qty 1.
	CCC	2427	Wishbone arm -LH front-upper	1		
3	CBC	5523	Wishbone bush-upper	1		
2	CCC	4950	Wishbone/bush-assembly-RH rear-upper	1	(1)	
2	CCC	4951	Wishbone/bush-assembly-LH rear-upper	1	(1)	
4	CBC	1844	Upper fulcrum bolt	2	(1)	
5	NY	112041 J	Self locking nut	2	(1)	
6	CAC	5863	Durlock bolt	NLA	(1)	Use JLB110167.
6	JLB	110167	Durlock bolt	6		
7	CAC	9938	Balljoint-assembly-upper	2	(1)	
8	CBC	64161	Spacing plate-thick	4	(1)	
8	CBC	64162	Spacing plate-thin	4	(1)	
9	CBC	2240	Lower wishbone-RH front	1	(1)	
9	CBC	2241	Lower wishbone-LH front	1	(1)	
10	CAC	9268	Lower wishbone-RH rear	1	(1)	
10	CAC	9269	Lower wishbone-LH rear	1	(1)	
11	CBC	2291	Bush-front lower	2	(1)	
12	CBC	2301	Fulcrum bush-lower	2	(1)	
13	CAC	75851	Damper bush	2	(1)	
	DBC	3864	Mounting bracket-RH	1	(1)	
	DBC	3865	Mounting bracket-LH	1	(1)	
14	CBC	1836	Fulcrum shaft and nut-assembly-lower	NLA	(1)	Use JLM11858.
14	JLM	11858	FULCRUM SHAFT AND NUT	2		
	JZN	100062	• Nut-nyloc-M14	1		

CHANGE POINTS
(1) From (V) 594576

WISHBONE-UPPER AND LOWER-FROM (V)594576

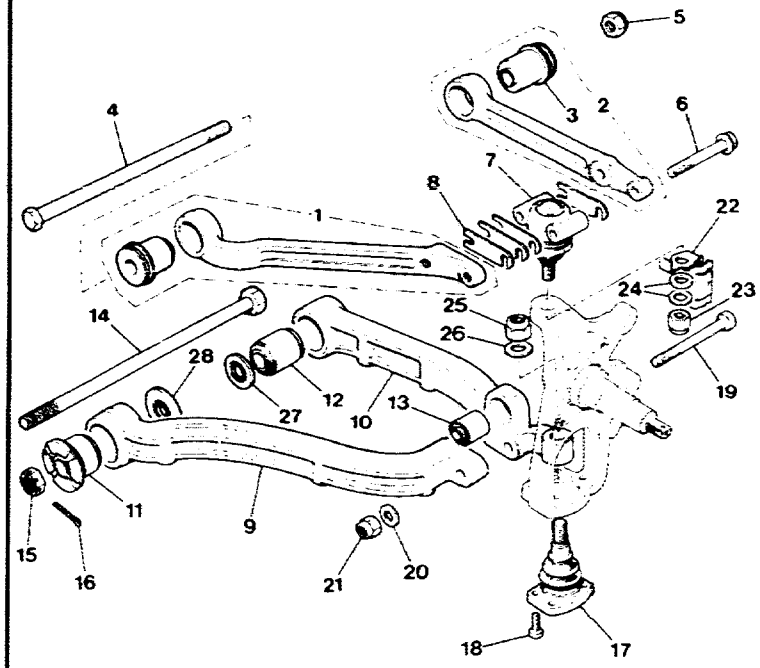


VS5073

Illus	Part Number		Description	Quantity	Change Point	Remarks
15	NL	609041 J	Locknut-slotted	2	(1)	
16	PS	106320 J	Split pin	2	(1)	
17	CAC	9937	Balljoint-assembly-lower	NLA	(1)	Use JLM11860.
17	JLM	11860	Balljoint-assembly-lower	2		
18	CBC	1805	Special bolt	8	(1)	
19	CAC	7777	Bolt -7/16" x 2 3/16"	2	(1)	
20	CAC	7787	Washer	NLA	(1)	Use WA600071J
20	WA	600071 J	Washer	2		
21	NY	607041 J	Self locking nut	2	(1)	
22	DBC	3866	Brake pad sensor connector clip	2	(1)	
23	NY	608041 J	Locknut-nyloc	2	(1)	
24	WB	112081 J	Washer	NLA	(1)	
25	C	87376	Locknut	2	(1)	
26	C	794	Plain washer	2	(1)	
27	C	30954	Special washer-rear	4	(1)	
28	CAC	9574	Special washer-front	4	(1)	

CHANGE POINTS:
(1) From (V) 594576

CROSSBEAM ASSEMBLY

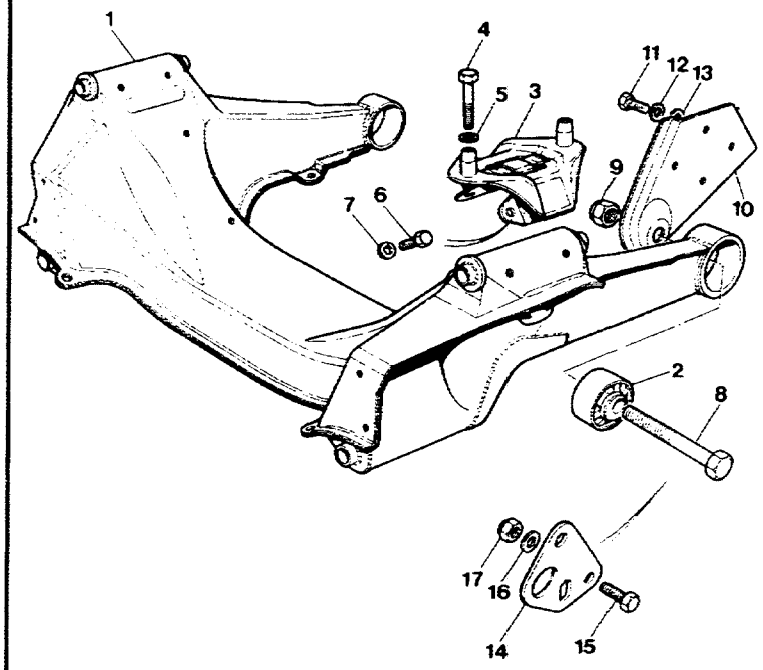


VS4553/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6139	Crossbeam-assembly-front	NLA	(1)	Use MNA2247AB qty 1 with CAP6154 qty 1 with CAP6155 qty 1 with JBH612481 qty 2 with JZW100012 qty 2 with NZ612041 qty 2 with BDC4994 qty 2.
1	CBC 8323	CROSSBEAM-ASSEMBLY	NLA	(2)	Use MNA2247AA qty 1 with CAP6154 qty 1 with CAP6155 qty 1 with JBH612481 qty 2 with JZW100012 qty 2 with NZ612041 qty 2 with BDC4994 qty 2.
2	CBC 4243	• Mounting bush-rear	NLA		Use CCC6272.
2	CCC 6272	Mounting bush-rear	NLA		Use CCC6832.
2	CCC 6832	Mounting bush-rear	NLA		Use MNA 2370AA qty 2.
1	MNA 2247AA	Crossbeam-assembly	NLA		Use MNA2247AB.
1	MNA 2247AB	CROSSBEAM-ASSEMBLY	NLA		Use MNA2247AC.
1	MNA 2247AC	CROSSBEAM-ASSEMBLY	1		
2	MNA 2370AA	• Mounting bush	2		
	CAP 6154	Mounting bracket-RH	1		
	CAP 6155	Mounting bracket-LH	1		
	JBH 612481	Hexagonal head bolt	2		
	JZW 100012	Special washer	2		
	NZ 612041	Nyloc nut	2		
	BDC 4994	Trim stud	2		
3	CBC 5957	Vee mounting	NLA	(3)	Use CBC9999.
3	CBC 9999	Vee mounting	NLA		Use CCC5253.
3	CCC 5253	Vee mounting	NLA		
4	BP 108201 J	Bolt -M8 x 100mm	NLA	(1)	Use JZB100057.
4	JZB 100057	Bolt -M8	4	(1)	
	AGU 2719	Durlock nut-M10	2	(2)	
5	C 21069	Washer	4		
6	SH 108161 J	Setscrew-M8 x 16mm	8		
7	WL 108001 J	Spring washer-M8	8		
8	BH 612451 J	Bolt	2		
9	NZ 612041 J	Self locking nut	2		

CHANGE POINTS:
(1) To (V) 629361
(2) From (V) 629362
(3) To (V) 629285

CROSSBEAM ASSEMBLY

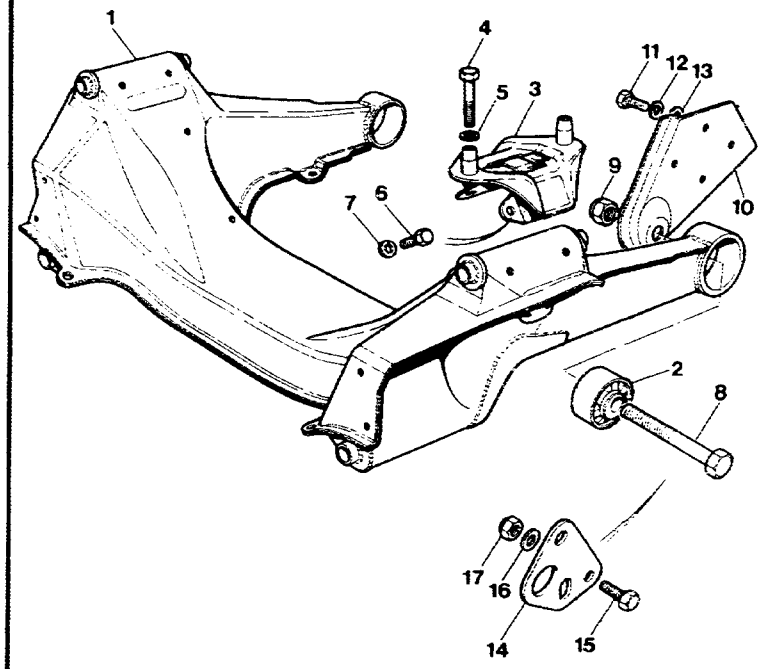


VS4553/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
10	CAP	1056	Reinforcing bracket -RH	NLA	(1)	Use CAP5090.
10	CAP	1057	Reinforcing bracket -LH	NLA	(1)	Use CAP5091.
10	CAP	5090	Reinforcing bracket -RH	1	(2)	
10	CAP	5091	Reinforcing bracket -LH	1	(2)	
11	SH	108161 J	Setscrew-M8 x 16mm	8	(3; 4)	
12	WC	108051 J	Plain washer	8	(3; 4)	
13	WL	108001 J	Spring washer-M8	8	(3; 4)	
	FS	108161 J	Flange screw-M8	8	(5)	
14	CBC	5700	Tie down bracket-RH	NLA	(6)	Use CBC6452.
14	CBC	5701	Tie down bracket-LH	NLA	(6)	Use CBC6453.
14	CBC	6452	Tie down bracket-RH	1	(7)	
14	CBC	6453	Tie down bracket-LH	1	(7)	
	SH	110251 J	Hexagon head setscrew	NLA	(6)	
	SX	110251 J	Hexagon head setscrew	2	(8)	
	WL	110001 J	Lock washer-metric	2		
14	CBC	9824	Tie down bracket-RH	1	(2)	
14	CBC	9825	Tie down bracket-LH	1	(2)	
15	SH	112301 J	Bolt	NLA	(9)	
15	SH	112251	Bolt	2	(4)	
16	WB	112081 J	Washer	NLA		
17	NY	112041 J	Self locking nut	2		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 589690
(4) From (V) 594576
(5) From (V) 589691 To (V) 594575
(6) To (V) 524374
(7) From (V) 524375 To (V) 629285
(8) From (V) 524375
(9) To (V) 594575

HUB CARRIER AND HUB ASSEMBLY-REAR UP TO (V)594575

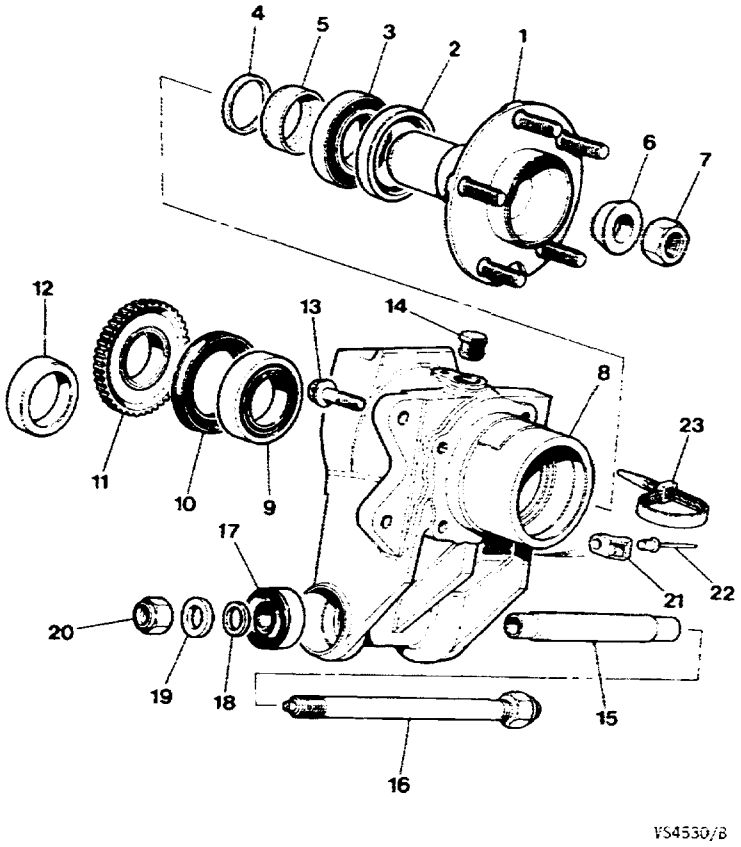


VS4530/B

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6400	Hub-assembly-rear	NLA	(1)	Use CBC8938 qty 1 with CBC8207 qty 1
1	CBC 8936	Hub-assembly-rear	NLA		Use CCC2913.
1	CCC 2913	HUB-ASSEMBLY-REAR	NLA		Use MNA3337AA.
	CAC 3878	• Wheel stud-threaded	5		
3	CAC 6333	Hub bearing-rear -outer	2	(1)	
4	CBC 9505 5	Adjustable spacer-2.42mm	A/R		
4	CBC 9505 6	Adjustable spacer-2.47mm	A/R		
4	CBC 9505 8	Adjustable spacer-2.57mm	A/R		
4	CBC 9505 9	Adjustable spacer-2.62mm	A/R		
4	CBC 9505 11	Adjustable spacer-2.72mm	A/R		
4	CBC 9505 12	Adjustable spacer-2.77mm	A/R		
4	CBC 9505 14	Adjustable spacer-2.87mm	A/R		
4	CBC 9505 15	Adjustable spacer-2.92mm	A/R		
4	CBC 9505 17	Adjustable spacer-3.02mm	A/R		
4	CBC 9505 18	Adjustable spacer-3.07mm	A/R		
4	CBC 9505 19	Adjustable spacer-3.12mm	A/R		
4	CBC 9505 21	Adjustable spacer-3.22mm	A/R		
4	CBC 9505 23	Adjustable spacer-3.32mm	A/R		
5	CAC 5825	Bearing spacer	2	(2)	
6	CBC 6652	Locating collar	2	(1)	
7	CBC 7355	Hub nut	NLA	(1)	Use CCC5204.
7	CCC 5204	Hub nut	NLA		Use JZN100035.
7	JZN 100035	Hub nut	2		
8	CBC 1534	Hub carrier-RH rear	1	(1)	
8	CBC 1535	Hub carrier-LH rear	1	(1)	
9	CAC 6332	Hub bearing-inner	NLA	(1)	Use MNC3280AA.
9	MNC 3280AA	Hub bearing-inner	NLA		Use JLM21053.
9	JLM 21053	Hub bearing-kit-inner	2		
10	CBC 1706	Inner seal	2	(1)	
11	CBC 4705	Sensor rotor -rear	2	(1)	
12	CAC 7216	Seal track spacer	2	(1)	
13	CBC 2209	Bolt	NLA	(1)	Use JZB100060.
	JZB 100060	Bolt and washer	4		

CHANGE POINTS:
(1) To (V) 594575
(2) To (V) 532683

HUB CARRIER AND HUB ASSEMBLY-REAR UP TO (V)594575

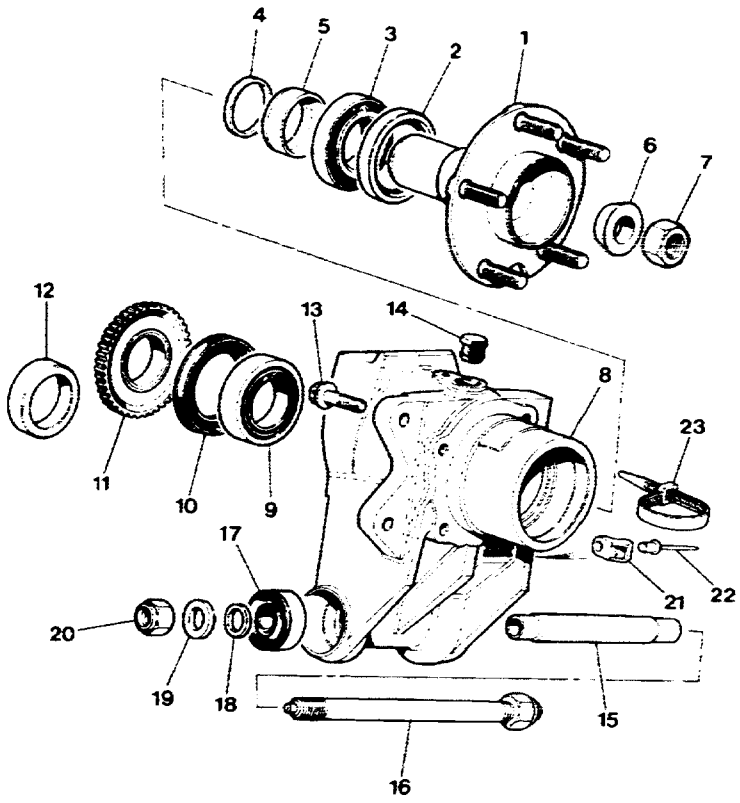


VS4530/B

Illus	Part Number		Description	Quantity	Change Point	Remarks
14	CAC	7452	Blanking plug	2	(1)	
15	CAC	5846	Pivot pin sleeve-outer	NLA	(1)	Use MNE4520AA
16	CBC	2589	Outer pivot pin	2	(1)	
17	CAC	4610	Taper roller bearing	2	(1)	
18	CBC	15371	Adjustable spacer-3.905mm	A/R	(1)	
18	CBC	15372	Adjustable spacer-3.955mm	A/R	(1)	
18	CBC	15373	Adjustable spacer-4.005mm	NLA	(1)	Use MHC3397AA3
18	MHC	3397AA3	Adjustable spacer-4.005mm	A/R		
18	CBC	15374	Adjustable spacer-4.055mm	NLA	(1)	Use MHC3397AA4
18	MHC	3397AA4	Adjustable spacer-4.055mm	A/R		
18	CBC	15375	Adjustable spacer-4.105mm	NLA	(1)	Use MHC3397AA5
18	MHC	3397AA5	Adjustable spacer-4.105mm	A/R		
18	CBC	15376	Adjustable spacer-4.155mm	NLA	(1)	Use MHC3397AA6
18	MHC	3397AA6	Adjustable spacer-4.155mm	A/R		
18	CBC	15377	Adjustable spacer-4.205mm	A/R	(1)	
18	CBC	15378	Adjustable spacer-4.255mm	A/R	(1)	
18	CBC	15379	Adjustable spacer-4.305mm	A/R	(1)	
18	CBC	153710	Adjustable spacer-4.355mm	A/R	(1)	
19	CBC	2562	Washer	1	(1)	Except Austria and Canada and Finland and Norway and Sweden and Middle East
19	CBC	2563	Washer	1	(1)	Austria;Canada;Finland;Norway;Sweden;Middle East
	CBC	2196	Hub carrier shield -RH	1	(1)	
	CBC	2197	Hub carrier shield -LH	1	(1)	
20	NY	114041J	Locknut	4	(1)	
21	AGU	1548	Mounting cradle	4	(1)	
22	RU	612503	Rivet	2	(1)	
23	AAU	5884	Tie strap	2	(1)	
	FS	106201J	Flange head screw	2		
	JLM	1708	HUB BEARING KIT	2	(1)	
2	CCC	4466	• Outer seal	1		

CHANGE POINTS:
(1) To (V) 594575


HUB CARRIER AND HUB ASSEMBLY-REAR FROM (V)594576

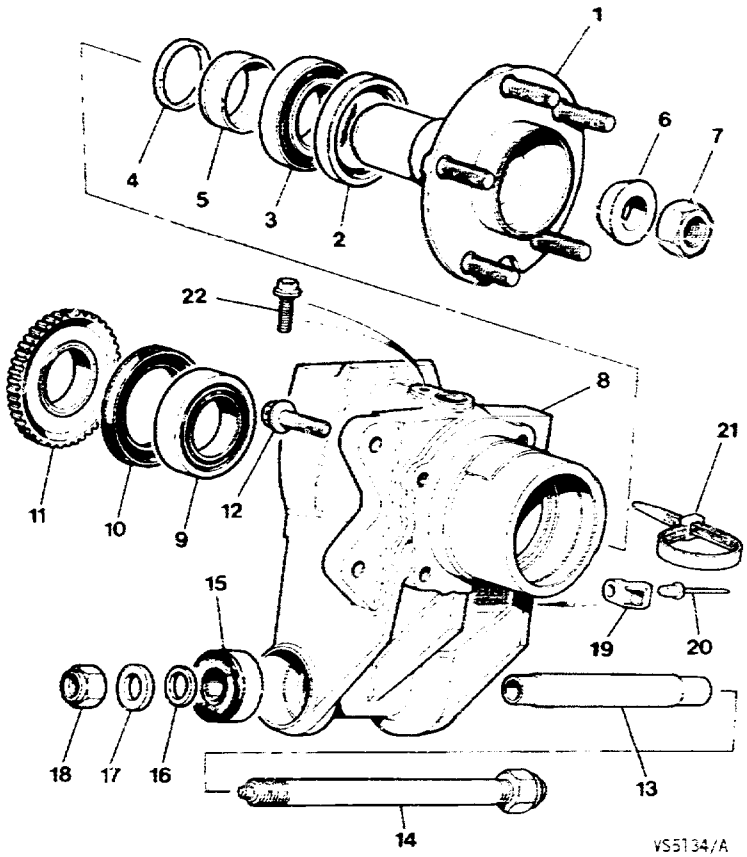

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8936	Hub-assembly-rear	NLA		Use CCC2913
1	CCC 2913	HUB-ASSEMBLY-REAR	NLA		Use MNA3337AA
	CAC 3878	• Wheel stud-threaded	5		
1	MNA 3337AA	Hub-assembly-rear	2		
2	CCC 4466	Outer seal	2	(1)	
3	CAC 6333	Hub bearing-rear -outer	2	(1)	
4	CBC 9505 1	Adjustable spacer-2.22mm	A/R		
4	CBC 9505 2	Adjustable spacer-2.27mm	A/R		
4	CBC 9505 3	Adjustable spacer-2.32mm	A/R		
4	CBC 9505 4	Adjustable spacer-2.37mm	A/R		
4	CBC 9505 5	Adjustable spacer-2.42mm	A/R		
4	CBC 9505 6	Adjustable spacer-2.47mm	A/R		
4	CBC 9505 7	Adjustable spacer-2.52mm	A/R		
4	CBC 9505 8	Adjustable spacer-2.57mm	A/R		
4	CBC 9505 9	Adjustable spacer-2.62mm	A/R		
4	CBC 9505 10	Adjustable spacer-2.67mm	A/R		
4	CBC 9505 11	Adjustable spacer-2.72mm	A/R		
4	CBC 9505 12	Adjustable spacer-2.77mm	A/R		
4	CBC 9505 13	Adjustable spacer-2.82mm	A/R		
4	CBC 9505 14	Adjustable spacer-2.87mm	A/R		
4	CBC 9505 15	Adjustable spacer-2.92mm	A/R		
4	CBC 9505 16	Adjustable spacer-2.97mm	A/R		
4	CBC 9505 17	Adjustable spacer-3.02mm	A/R		
4	CBC 9505 18	Adjustable spacer-3.07mm	A/R		
4	CBC 9505 19	Adjustable spacer-3.12mm	A/R		
4	CBC 9505 20	Adjustable spacer-3.17mm	A/R		
4	CBC 9505 21	Adjustable spacer-3.22mm	A/R		
4	CBC 9505 22	Adjustable spacer-3.27mm	A/R		
4	CBC 9505 23	Adjustable spacer-3.32mm	A/R		
4	CBC 9505 24	Adjustable spacer-3.37mm	A/R		
4	CBC 9505 25	Adjustable spacer-3.42mm	A/R		
4	CBC 9505 26	Adjustable spacer-3.47mm	A/R		
5	CBC 8207	Bearing spacer	2	(1)	
6	CBC 6652	Locating collar	2	(1)	
7	CCC 5204	Hub nut	NLA	(1)	Use JZN100035
7	JZN 100035	Hub nut	2		

CHANGE POINTS:
(1) From (V) 594576


HUB CARRIER AND HUB ASSEMBLY-REAR FROM (V)594576

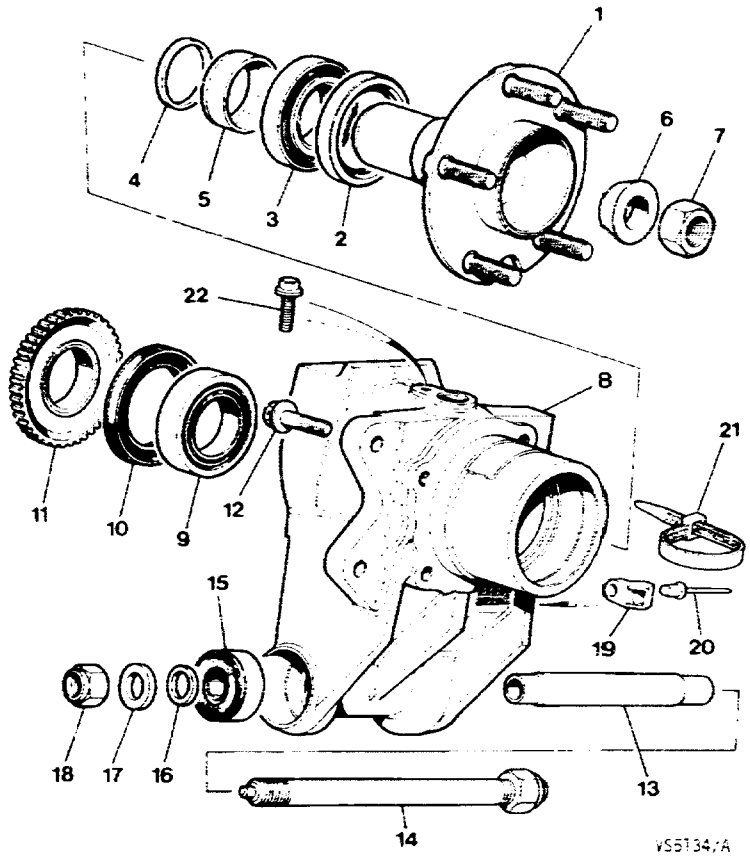

Illus	Part Number	Description	Quantity	Change Point	Remarks
8	CCC 3984	Hub carrier-RH	1	(1)	
8	CCC 3985	Hub carrier-LH	1	(1)	
9	CAC 6332	Hub bearing-inner	NLA	(1)	Use MNC3280AA
9	MNC 3280AA	Hub bearing-inner	NLA		Use JLM21053
9	JLM 21053	Hub bearing-kit-inner	2		
10	CBC 1706	Inner seal	2	(1)	
11	CBC 4705	Sensor rotor -rear	2	(1)	
12	CBC 7398	Bolt	4	(1)	
13	CAC 5846	Pivot pin sleeve-outer	NLA	(1)	Use MNE4520AA
14	CBC 2589	Outer pivot pin	2	(1)	
15	CAC 4610	Taper roller bearing	2	(1)	
16	CBC 15371	Adjustable spacer-3.905mm	A/R	(1)	
16	CBC 15372	Adjustable spacer-3.955mm	A/R	(1)	
16	CBC 15373	Adjustable spacer-4.005mm	NLA	(1)	Use MHC3397AA3
16	MHC 3397AA3	Adjustable spacer-4.005mm	A/R		
16	CBC 15374	Adjustable spacer-4.055mm	NLA	(1)	Use MHC3397AA4
16	MHC 3397AA4	Adjustable spacer-4.055mm	A/R		
16	CBC 15375	Adjustable spacer-4.105mm	NLA	(1)	Use MHC3397AA5
16	MHC 3397AA5	Adjustable spacer-4.105mm	A/R		
16	CBC 15376	Adjustable spacer-4.155mm	NLA	(1)	Use MHC3397AA6
16	MHC 3397AA6	Adjustable spacer-4.155mm	A/R		
16	CBC 15377	Adjustable spacer-4.205mm	A/R	(1)	
16	CBC 15378	Adjustable spacer-4.255mm	A/R	(1)	
16	CBC 15379	Adjustable spacer-4.305mm	A/R	(1)	
16	CBC 153710	Adjustable spacer-4.355mm	A/R	(1)	
17	CBC 2562	Washer	1	(1)	Except Austria and Canada and Finland and Norway and Sweden and Middle East
17	CBC 2563	Washer	1	(1)	Austria,Canada,Finland,Norway,Sweden,Middle East
	CBC 2196	Hub carrier shield -RH	1	(1)	
	CBC 2197	Hub carrier shield -LH	1	(1)	
18	NY 114041J	Locknut	4	(1)	
19	AGU 1548	Mounting cradle	4	(1)	
20	RU 612503	Rivet	2	(1)	
21	AAU 5884	Tie strap	2	(1)	
22	FS 106201J	Flange head screw	2		
	JLM 1708	HUB BEARING KIT	2	(1)	
2	CCC 4466	• Outer seal	1		


CHANGE POINTS.
(1) From (V) 594576

FRAME CARRIER-REAR

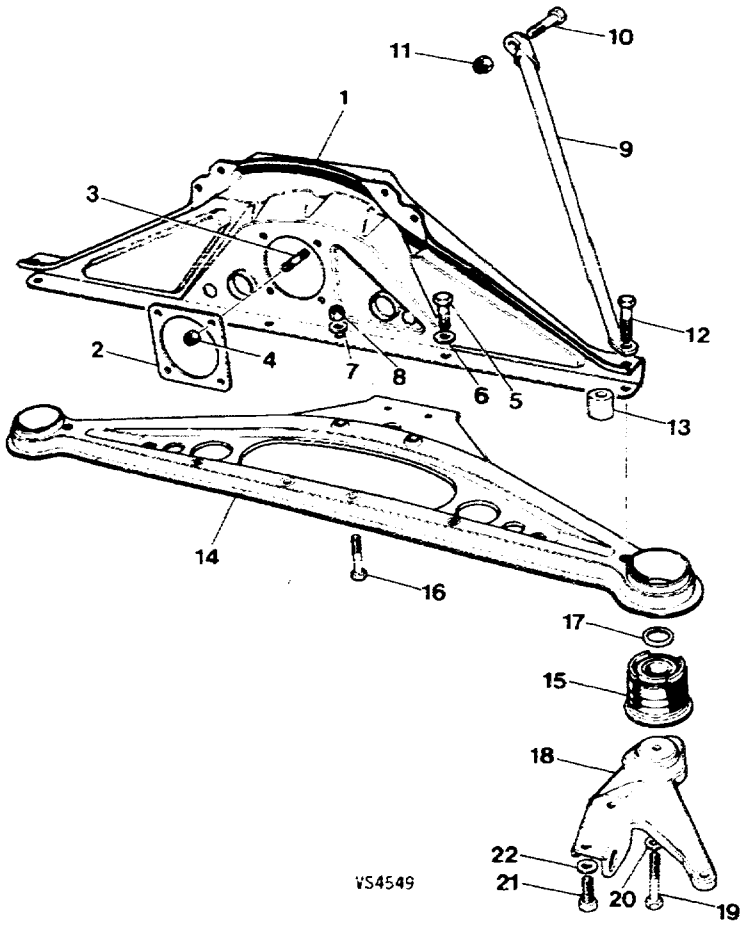

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 1891	Wide mounting bracket-assembly	NLA		Use CBC1820
1	CBC 1820	Wide mounting bracket-assembly	1		
2	CAC 8226	Support plate	1		
3	CBC 1261	Support plate stud	4		
4	NY 210041 J	Locking nut	4		
5	SH 212201 MJ	Setscrew	4		
6	WA 112081 J	Washer	4		
7	WA 112081 J	Washer	2		
8	NY 112041 J	Self locking nut	4		
9	CBC 2964	Link-assembly-RH upper	1		
9	CBC 2965	Link-assembly-LH upper	1		
10	BH 112131 J	Bolt	2		
11	NY 112041 J	Self locking nut	2		
12	BH 212091 MJ	Bolt	2		
13	CAC 9330	Spacing boss-outer	2		
14	CBC 2024	MOUNTING FRAME-ASSEMBLY	NLA		Use CCC6894
15	CBC 1863	• Mounting frame bush	NLA		Use CCC6875.
	CCC 6894	Suspension subframe-assembly	NLA		Use MMB2590AA.
	MMB 2590AA	Suspension subframe-assembly	NLA		Use MJA2600AA qty 1 with CCC6875 qty 2.
	MJA 2600AA	Suspension subframe	NLA		Use MNA2600AA.
	MNA 2600AA	Suspension subframe	NLA		Use MNA2590AB qty 1 4.0 Litre supercharged or MNA2590BB qty 1 except 4.0 Litre supercharged.
	MNA 2590BB	SUSPENSION SUBFRAME-ASSEMBLY	NLA		Use MNA2590BD qty 1 with BH112111 qty 4 with NY112041J qty 8 with BH212091M qty 2.
	MNA 2590BD	SUSPENSION SUBFRAME-REAR SUSPENSION	NLA		Use MNB2590AA.
	MNB 2590AA	SUSPENSION SUBFRAME-REAR SUSPENSION	1		
	CCC 6875	• Sub-frame bush	2		
16	SH 212401 MJ	Bolt	2		
17	CAC 48271	Spigot bush shim	2		
18	CBC 4256	Mounting bracket-RH lower	1		
18	CBC 4257	Mounting bracket-LH lower	1		
19	BH 112181 J	Bolt	2		
20	CBC 4262	Plain washer	2		
21	SH 110201 MJ	Mounting bracket setscrew-lower	2		
	SH 112301 M	Hexagon head setscrew	4		
	BH 112081 J	Hexagonal head bolt	2		

DAMPER UNIT AND SPRING-REAR

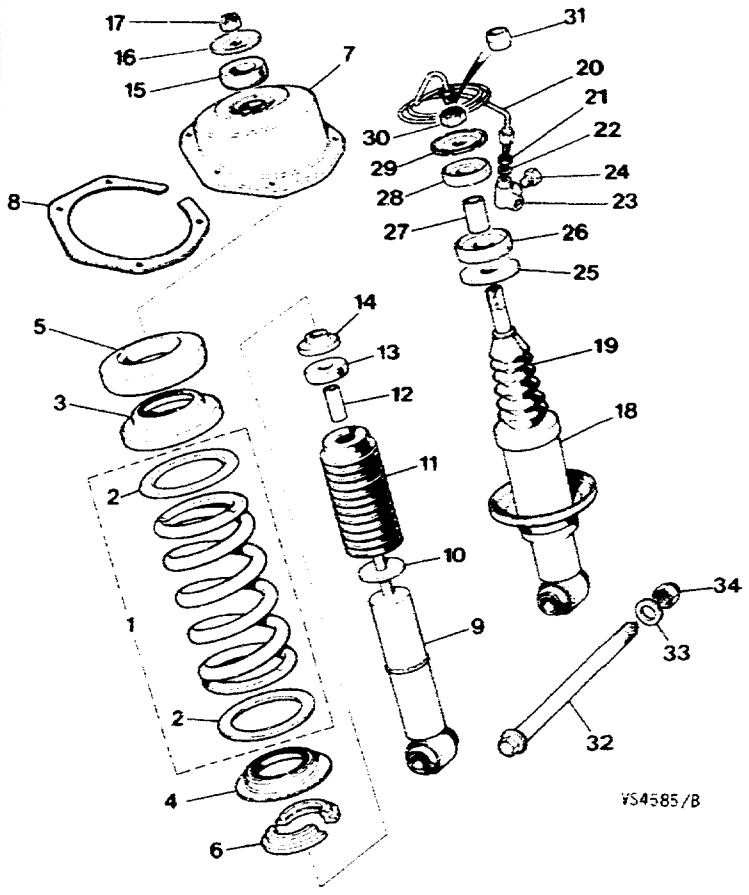


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 657	Road spring kit	1		Except ride level system
1	JLM 747	Road spring kit	1		Ride level system
1	JLM 10588	Road spring kit	1		Sportspack;ride level system
2	CAC 9162	Spacer-3.4mm/2.9mm	A/R		
2	CAC 9162 1	Spacer-6.55mm/6.05mm	A/R		
3	CAC 9439	Spring plate -upper	2		
4	CAC 4771	Spring support	2		
5	CAC 9449 60	Spring isolator	NLA		Use MMD3565AA qty 1 with MMD3563AA qty 1
5	MMD 3565AA	Spring isolator-upper	1		
	MMD 3563AA	Spring pan-upper	1		
6	CAC 4772	Collet	2		
7	CBC 1426	Spring/damper mounting-top	NLA		Use MMD3570AA. Except ride level system
	CAC 9495	Spring/strut mounting -top	NLA		Use MMD3470AA. Ride level system
7	MMD 3570AA	Spring/damper mounting-assembly	2		Except ride level system
	MMD 3470AA	Spring/strut mounting -assembly	2		Ride level system
8	BEC 1184	Mounting plate spacer -top	2		
	GL 108251 PJ	Setscrew	8		
	FW 105 E	Plain washer	8		
9	CBC 2252	Suspension damper-assembly-rear	NLA		Use CBC5410
9	CBC 5410	Suspension damper-assembly-rear	NLA	(1)	Use CBC5958
9	CBC 5958	Suspension damper-assembly-rear	NLA	(2)	Use CCC3538
9	CCC 3538	Suspension damper-assembly-rear	NLA	(3)	Use CCC6923
9	CCC 6923	Suspension damper-assembly-rear -black	2		
10	CBC 2256	Washer-lower	NLA		Use CBC5431
10	CBC 5431	Washer-lower	2		Except ride level system
11	CBC 1886	Damper gaiter	2		Except ride level system
12	CBC 2255	Spacer tube	2		Except ride level system
13	CBC 2254 55	Mounting isolator -lower	2		Except ride level system
14	CBC 2933	Guide bush	2		Except ride level system
15	CBC 2257 60	Isolator-upper	2		Except ride level system
16	CBC 1594	Washer-upper	2		Except ride level system
17	NY 110041	Nut	2		Except ride level system
	CAC 9443	Spherical joint	2		Except ride level system

CHANGE POINTS:
(1) To (V) 527356
(2) From (V) 527357 To (V) 620384
(3) From (V) 631228

STEERING AND SUSPENSION

SHOCK ABSORBERS AND STOP RUBBERS


DAMPER UNIT AND SPRING-REAR

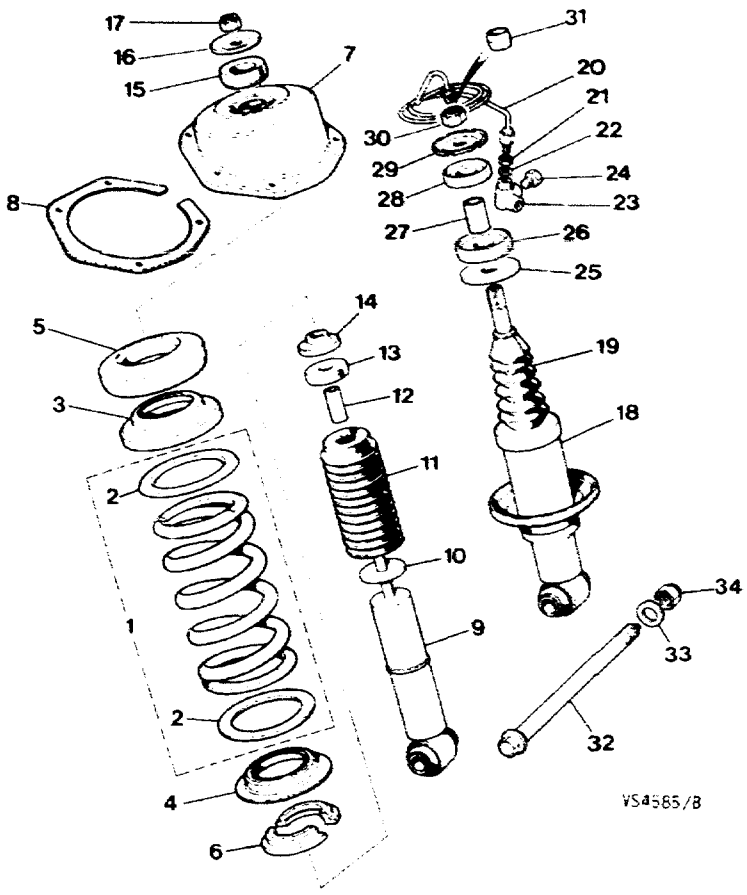

Illus	Part Number		Description	Quantity	Change Point	Remarks
18	CBC	4214	Ride level strut assembly	NLA	(1)	Use CBC5961
18	CBC	5961	Ride level strut	NLA	(2)	Use CBC8892
18	CBC	8892	Ride level strut assembly	2	(3)	Ride level system
18	CBC	9745	Ride level strut assembly	2		Sportspack,ride level system
19	CAC	9680	Strut gaiter	2		
20	CAC	8730	Hydraulic pipe-assembly-RH	NLA	(4)	Use CBC6882
20	CAC	8731	Hydraulic pipe-assembly-LH	NLA	(4)	Use CBC6883
20	CBC	6882	Hydraulic pipe-assembly-RH	1	(5)	Ride level system
20	CBC	6883	Hydraulic pipe-assembly-LH	1	(5)	Ride level system
21	C	41712	Locknut	2		
22	WF	110001 J	Washer-metric	2		
23	CBC	4622	3 way connector	2		
24	CAC	8293	Bleed screw	2		
	CBC	4177	Dust cover	1		
25	CAC	9678	Washer-lower	2		
~~26~~	~~CAC~~	~~9494 65~~	~~Isolator-lower~~	~~2~~		
27	CAC	9679	Spacer tube	2		
28	CAC	9493 50	Isolator-upper	2		
29	CAC	9492	Dished washer	2		
30	CAC	9496	Nut	2		
31	CAC	9955 5	Olive	2	(1)	Ride level system
31	CBC	7281 5	Olive	NLA	(2)	Use CBC7281
31	CBC	7281	Olive	2	(2)	
32	CAC	5833	Damper bolt	2		
33	WA	116101 J	Washer	NLA	(6)	Use JLM9571
33	JLM	9571	Washer	2	(6)	
33	WJ	116001 J	Washer	2	(7)	Ride level system
34	NY	116041 J	Self locking nut	2		
	GL	108251 PJ	Setscrew	8		
	FW	105 E	Plain washer	8		
	JZP	101025	P-clip-no 10	NLA		Use JZP100006
	JZP	100006	Pipe clip	1		


CHANGE POINTS

(1) To (V) 527356
(2) From (V) 527357
(3) To (V) 620607
(4) To (V) 556850
(5) From (V) 556851
(6) To (V) 634226
(7) From (V) 634227

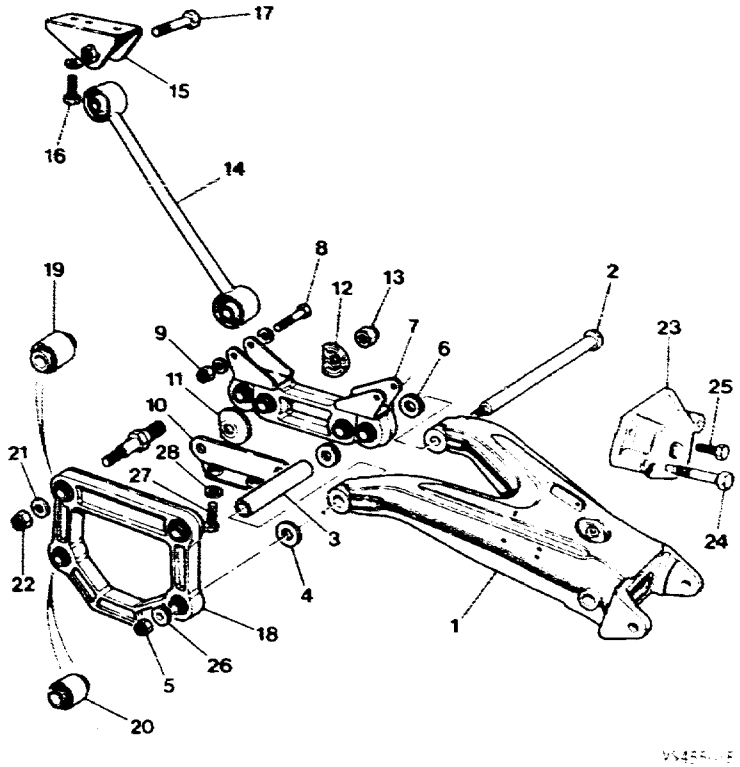

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 8680	Wishbone-assembly-RH rear	NLA	(1)	Use CCC2894
1	CAC 8681	Wishbone-assembly-LH rear	NLA	(1)	Use CCC2893
1	CCC 2894	Wishbone-assembly-RH rear	NLA	(2)	Use MMD2950AA qty 1 with JZB100047 qty 1
1	CCC 2893	Wishbone-assembly-LH rear	NLA	(2)	Use MMD2951AA qty 1 with JZB100047 qty 1
1	MMD 2950AA	Wishbone-assembly-RH rear	1		
1	MMD 2951AA	Wishbone-assembly-LH rear	NLA		See Technical bulletin JD 07/98 for appropriate wishbone & damper kits
	JZB 100047	Outer pivot pin	1		
2	CBC 4132	Wishbone fulcrum bolt	NLA		Use CCC5455 qty 1 with JFX214051 qty 1 with CBC6394 qty 1
2	CCC 5455	Wishbone fulcrum bolt	1		
5	JFX 214051	Fulcrum bolt nut	1		Use with CCC5455 fulcrum bolt
26	CBC 6394	Stepped washer	1		Use with CCC5455 fulcrum bolt
3	CAC 9384	Distance tube	2		
4	CAC 8979	Plain washer	2		
5	NY 112051J	Fulcrum bolt nut	2		Use with CBC4132 fulcrum bolt
6	CAC 5840	Fulcrum bolt washer-steel and nylon	4		
7	CAC 9036	Wishbone tie -assembly	NLA		Use MMB2850AA
7	MMB 2850AA	Wishbone tie -assembly	NLA		Use MNA2850AB qty 1 with MNA2885AA qty 2 with MNA2885BA qty 2
7	MNA 2850AB	Wishbone tie -assembly	NLA		Use MNC2850CA
	MNA 2885AA	Spacer-inner-wishbone	2		
	MNA 2885BA	Spacer-outer-wishbone	2		
7	MNC 2850CA	Wishbone tie -assembly	1		
8	BH 112131J	Bolt	2		
9	NY 112041J	Self locking nut	2		
10	CAC 7623	Mounting bracket-assembly-rear	1		
11	CBC 2449	Compliance buffer-front	NLA		Use MMB2880AA
12	CBC 2551	Compliance buffer-rear	NLA		Use MMB2881AA
11	MMB 2880AA	Compliance buffer-front	NLA		Use MNA2880AA
12	MMB 2881AA	Compliance buffer-rear	NLA		Use MNA2881AA
11	MNA 2880AA	Compliance buffer-front	2		
12	MNA 2881AA	Compliance buffer-rear	NLA		Use MNA2885BA

CHANGE POINTS
(1) To (V) 594575
(2) From (V) 594576

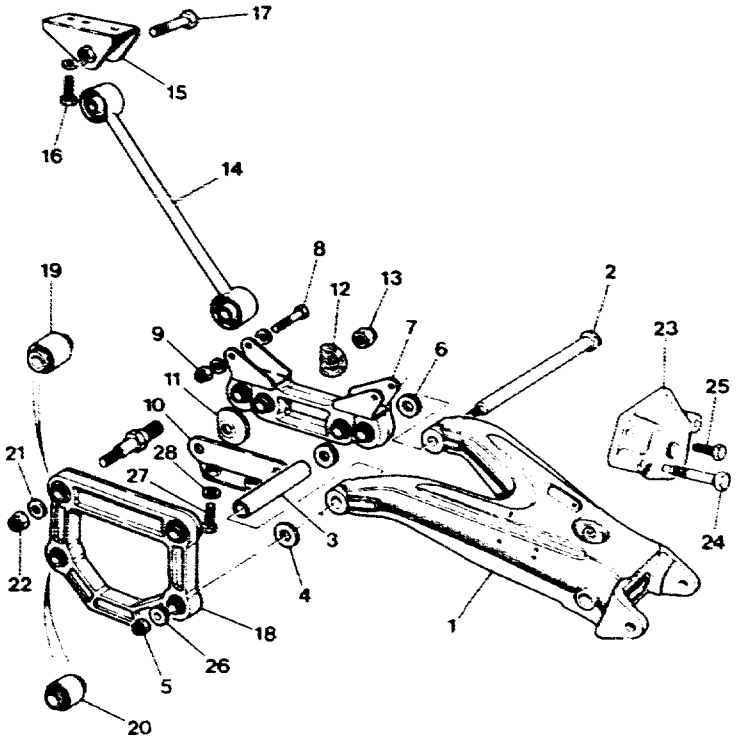


Illus	Part Number	Description	Quantity	Change Point	Remarks
13	NY 112041 J	Self locking nut	2		
14	CBC 2777	Bushed differential strut assembly	NLA	(1)	Use CBC8701
14	CBC 8701	Bushed differential strut assembly	NLA	(2)	Use MNA3711AA
14	MNA 3711AA	Bushed differential strut assembly	2	(2)	
14	CCC 3789	Bushed differential strut-assembly	NLA	(3)	Use MNA3711AA qty 2 except 4.0 Litre supercharged, manual or MNA3713AA qty 2 4.0 Litre supercharged, manual
15	CAC 7054	Mounting bracket-assembly-RH upper	NLA	(4)	Use CBC6486
15	CAC 7055	Mounting bracket-assembly-LH upper	NLA	(4)	Use CBC6487
16	AGU 1135 MJ	Setscrew	NLA		
15	CBC 6486	Mounting bracket-assembly-RH upper	1	(5)	
15	CBC 6487	Mounting bracket-assembly-LH upper	1	(5)	
16	FS 110201 MJ	Setscrew	4		
17	BH 112121 PJ	Mounting bracket bolt -top	2		
18	CAC 9049	Pendulum-assembly	1	(6)	
19	CAC 7760 1	Pendulum bush -top	2	(6)	
20	CAC 4713 1	Pendulum bush -bottom	NLA	(6)	Use CAC4713
20	CAC 4713	Pendulum bush -bottom	2	(6)	
18	CCC 2890	PENDULUM-ASSEMBLY	NLA	(7)	Use MNB2840AA
18	MNB 2840AA	PENDULUM-ASSEMBLY	1	(7)	
19	CAC 7760 1	• Pendulum bush -top	2		
20	CAC 4713	• Pendulum bush -bottom	2		
21	WA 116101 J	Washer	NLA		Use JLM9571
21	JLM 9571	Washer	4		
22	NY 116041 J	Self locking nut	2		
23	CBC 2513	Suspension bumpstop	NLA		Use MNA3750BA
23	MNA 3750BA	Suspension bumpstop-rear	2		
24	GL 108301 P	Bumpstop bolt	4		
25	CBC 9589	Bumpstop bolt-M8	2		
26	CAC 5381	Stepped washer	2		Use with CBC4132 fulicrum bolt
27	SH 212201 MJ	Setscrew	4		
28	WA 112081 J	Washer	6		

CHANGE POINTS

(1) To (V) 629285
(2) From (V) 629286 To (V) 644282
(3) From (V) 644283
(4) To (V) 541364
(5) From (V) 541365
(6) To (V) 594575
(7) From (V) 594576

SOLENOID VALVE BLOCK RIDE LEVELLING

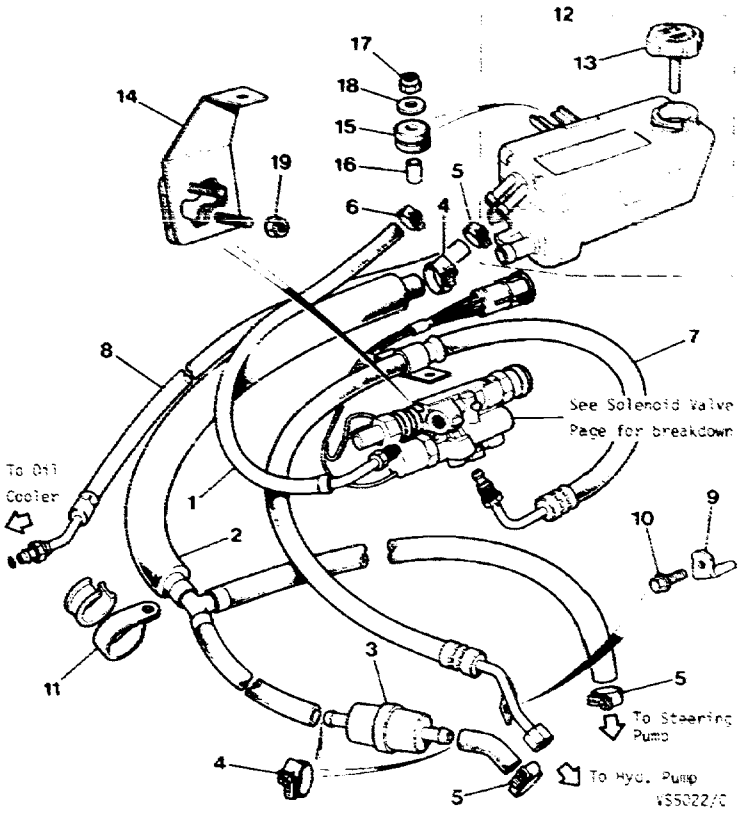

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	7345	Pipe-reservoir to valve block	1	(1)	Ride level system
2	CBC	9858	Y-pipe-low pressure hose	NLA		Use CCC6573
2	CCC	6573	Y-pipe low pressure hose	1		
3	CBC	9538	In line filter	1		Ride level system
4	EAC	3215 4	Worm drive hose clip	NLA		Use JHC200101
4	JHC	200101	Worm drive hose clip-steel	4		
5	EAC	3215 1	Hose clip	NLA		Use JHC201901
5	JHC	201901	Hose clip	1		
6	CBC	6448 1	Hose clip	1		Ride level system
7	CBC	9256	High pressure hose-pump to block	NLA		Use CCC2625 qty 1 with DBC6768 qty 1
7	CCC	2625	High pressure hose-pump to block	1		Ride level system
	DBC	6768	Ride level sensor	1		
8	CBC	6298	Low pressure hose-oil cooler to reservoir	1		Ride level system
9	CBC	1670	Hose mounting bracket	1		Pump to block,ride level system
10	FS	106101 J	Setscrew	2		Ride level system
11	AGU	2613	Pipe clip	1		Ride level system
12	JLM	1985	Ride level/power steering reservoir -assembly	NLA	(2)	Use CCC2783
13	JLM	2162	Filler cap	1	(2)	Ride level system
12	CCC	2783	Ride level/power steering reservoir -assembly	1	(3)	Ride level system
13	CCC	2585	Filler cap	1	(3)	Ride level system
14	CBC	6949	Mounting bracket	1		Ride level system
15	CAC	9596	Grommet-rubber	NLA		Use CBC1448
15	CBC	1448	Grommet-lower	1		Ride level system
16	CAC	1825	Distance tube-0.56" long	1		Ride level system
17	NY	105041 J	Nyloc nut-M5	1		Ride level system
18	WJ	105001 J	Plain washer	1		Ride level system
19	NY	116041 J	Self locking nut	2		Ride level system


CHANGE POINTS

(1) From (V) 594576

(2) From (V) 594576 To (V) 649049

(3) From (V) 649050

ACCUMULATOR AND PIPES

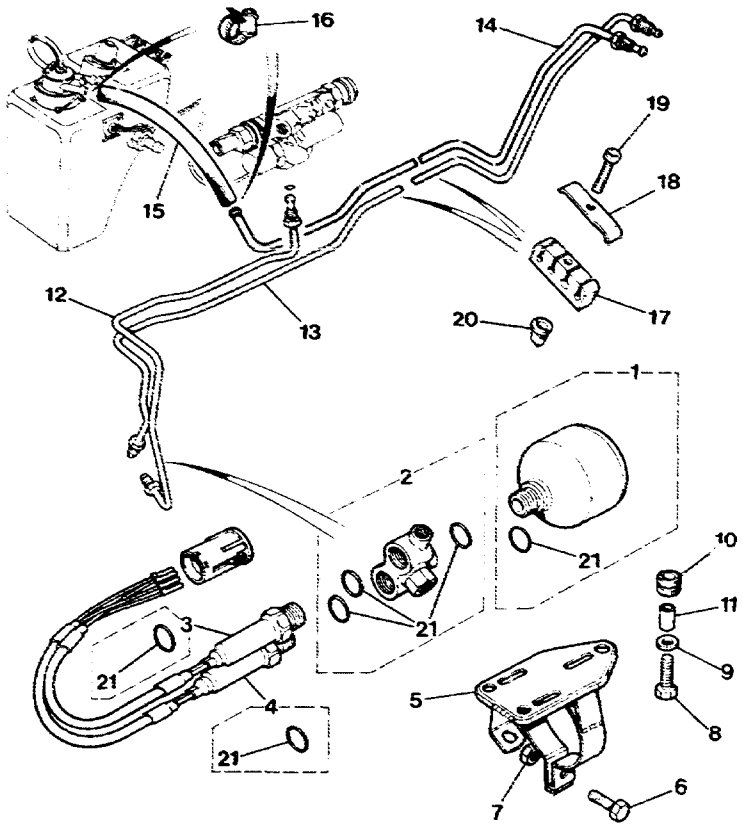


VS4591/C

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 10546	Accumulator and seal -assembly	NLA	(1)	Use JLM11659
1	JLM 11659	Accumulator and seal	1		
2	JLM 10779	Valve block/seal-assembly	1	(1)	
3	JLM 1562	Charging switch	1		
4	JLM 1563	Low pressure warning switch	1		
5	CAC 9996	Mounting bracket	1		
	SH 108250 J	Setscrew	NLA	(1)	Mounting bracket to body
6	SH 108201 J	Screw-M8 x 20mm	1		
7	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
7	JFY 10804B	Locking nut	1		
8	AGU 2209 J	Bolt	3		
9	WJ 106001 J	Plain washer-M6	3		
10	CAC 9596	Grommet-rubber	NLA		Use CBC1448
10	CBC 1448	Grommet-lower	3		
11	CAC 1825	Distance tube-0.56" long	3		
12	CAC 9528	Hydraulic pipe-accumulator to solenoid	1	(1)	
13	CAC 9525	Hydraulic pipe-accumulator to booster	NLA	(1)	RHD
13	CAC 9526	Hydraulic pipe-accumulator to booster	1	(1)	LHD
14	CAC 9527	Hydraulic pipe-booster to hose	1	(1)	RHD
14	CBC 2686	Hydraulic pipe-booster to hose	NLA	(1)	LHD
15	CAC 75173	Hose	1		Alternatives
16	EAC 32151	Hose clip	NLA		Use JHC201901
16	JHC 201901	Hose clip	2		Alternatives
15	CBC 63141	Hose-booster pipe to reservoir	1		Alternatives
16	CAC 8772	Hose clip	2		Alternatives
17	CAC 9456	Pipe clip	2		
18	CAC 9457	Retainer clip	2		
19	AGU 2071 J	Screw	2		
20	AGU 1501	Lokut nut	2		
	SH 106181 J	Setscrew	NLA	(1)	LHD
	WA 106001 J	Washer	NLA	(1)	LHD
21	JLM 10547	Seal	1		

CHANGE POINTS:
(1) To (V) 594575

MODULATOR UNIT

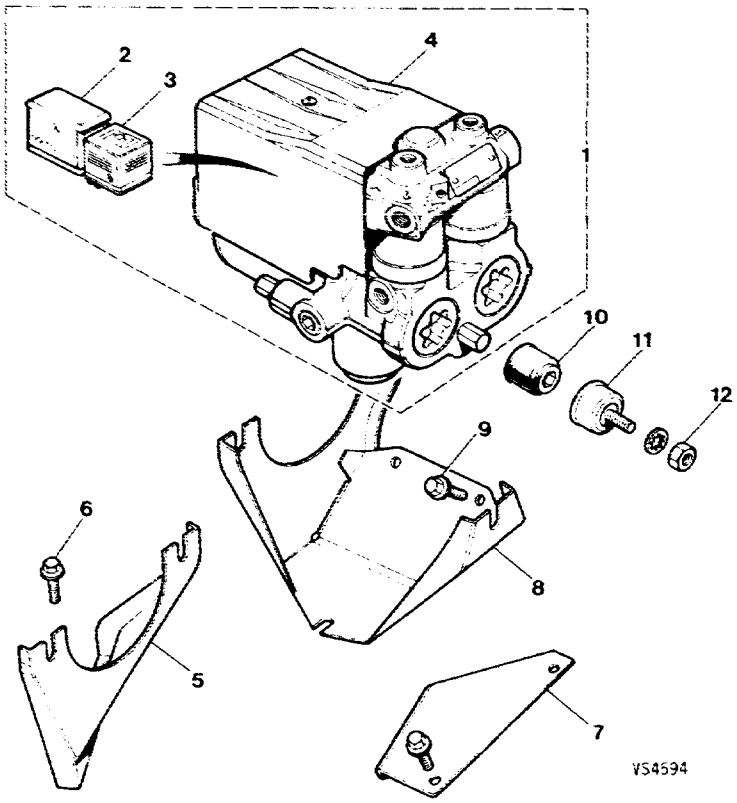

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 8274	Modulator-new	NLA	(1)	Use CAC8274E.
1	CAC 8274 E	Modulator-remanufactured unit	1		Anti lock brake system
2	JLM 1314	Pump relay	1		
3	JLM 1315	Mini valve relay	1		
4	JLM 1946	Cover	1		
5	CAC 8389	Mounting bracket	1		RHD
6	FS 106101 J	Setscrew	4		
7	CAC 8760	Mounting bracket	1		RHD
8	CAC 8275	Mounting bracket	1		LHD
9	FS 106101 J	Setscrew	3		
10	CAC 8277	Mounting rubber	NLA	(2)	
10	CBC 2694	Mounting rubber	3	(3)	
11	CAC 8278	Retaining clip	3		
12	FN 106041 J	Flange nut-M6	3		


CHANGE POINTS:

(1) To (V) 594575

(2) To (V) 524374

(3) From (V) 524375 To (V) 594575

SOLENOID VALVE BLOCK

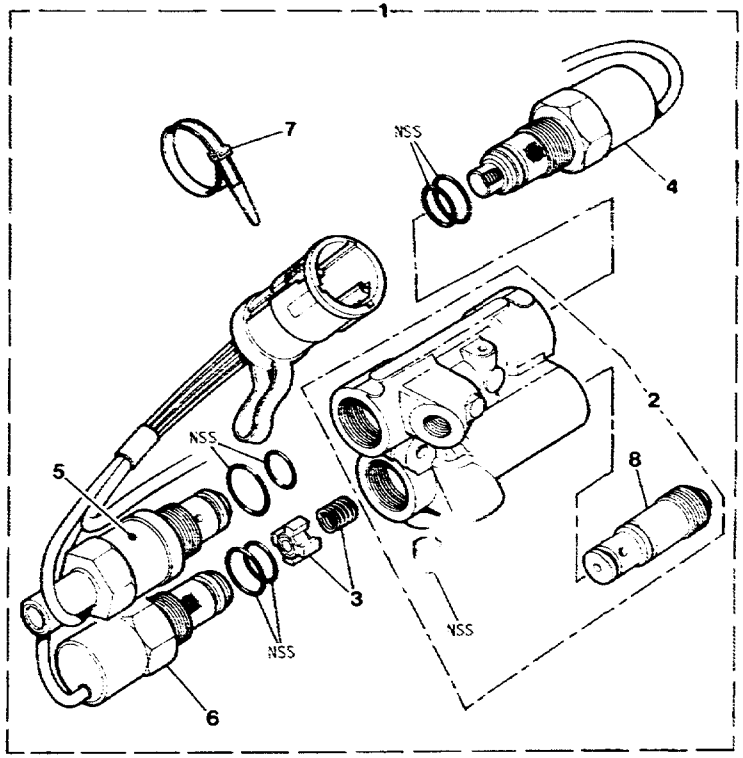

VS5055/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	2060	Solenoid valve block-assembly	NLA	(1)	Use CCC3880 Ride level system
1	CBC	9696	Solenoid valve block-assembly	NLA	(2)	Use CCC3830 Ride level system
1	CBC	7721	Solenoid valve block	NLA	(1)	Use CCC3878 Non ride level system
1	CCC	3878	Solenoid valve block	1	(2)	Non ride level system
2	JLM	2061	Valve block	NLA		Use JLM10657
	JLM	10657	Solenoid valve/relief valve-assembly	1		Brake and ride level system
	JLM	10658	Solenoid valve/relief valve-assembly	1		Non ride level system
	CBC	9697	Solenoid valve/relief valve-assembly	1		Ride level system
	CCC	3880	Solenoid valve-assembly	1		Brake and ride level system
1	CCC	3830	Solenoid valve block-assembly	1	(3)	Ride level system
3	JLM	2057	Non return valve-assembly	1		
4	CBC	9700	Suspension down solenoid-assembly	1		
5	CBC	9701	Load solenoid-assembly	NLA		Use CCC3834
5	CCC	3834	Load solenoid	1		
6	CBC	9702	Suspension up solenoid-assembly	1	(3)	
7	AAU	5884 J	Cable tie	1		
8	CCC	3832	Pressure relief valve	1		
	JLM	2058	Valve seal kit	1		

CHANGE POINTS:


(1) To (V) 594575

(2) From (V) 594576

(3) To (V) 653344

SOLENOID VALVE BLOCK ASSEMBLY

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CCC	5336	SOLENOID VALVE BLOCK-ASSEMBLY-TWIN	1	(1)	Ride level system
2	CCC	3832	• Pressure relief valve	1		
3	CBC	9700	• Suspension down solenoid-assembly	1		
4	CBC	9701	• Load solenoid-assembly	NLA		Use CCC3834
5	JLM	2057	• Non return valve-assembly	1		
6	AAU	5884 J	• Cable tie	1		
4	CCC	3834	Load solenoid	1		

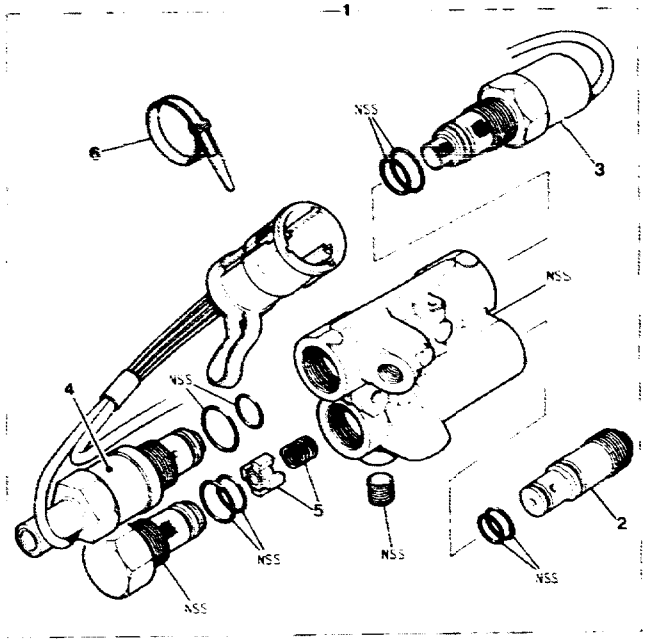


CHANGE POINTS

(1) From (V) 653345

RIDE LEVEL SENSOR

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3439	Ride level sensor	1	(1)	
1	DBC 6768	Ride level sensor	1	(2)	
2	CBC 2396	Link-assembly-sensor to wishbone	1		
3	CAC 9997	Height sensor bracket	1		
4	NY 106041 J	Nyloc nut	2		
5	NY 105041 J	Nyloc nut-M5	2		

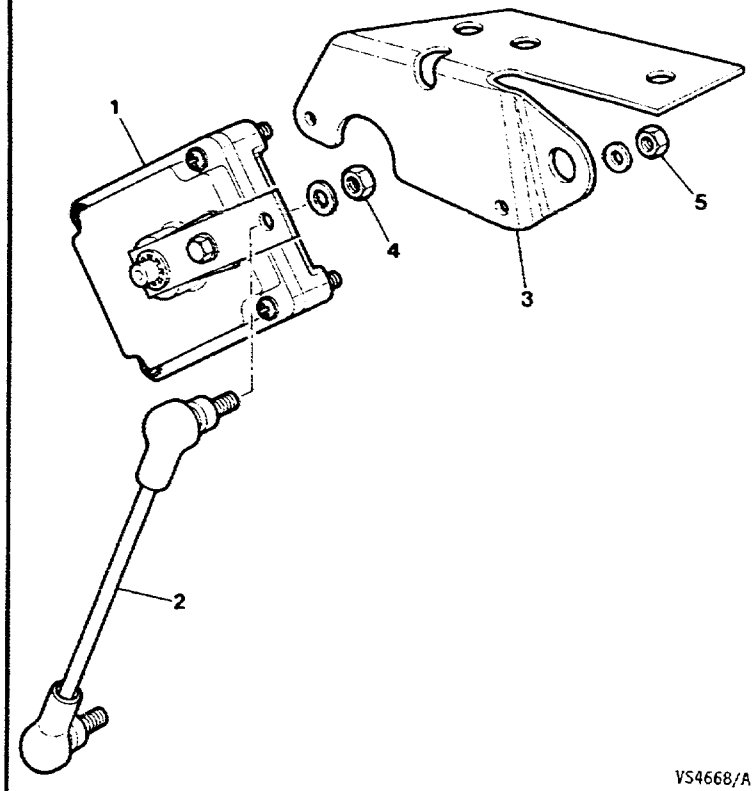


VS4668/A

CHANGE POINTS:
(1) To (V) 634204
(2) From (V) 634205

STEERING AND SUSPENSION


RIDE LEVEL SYSTEM

RIDE LEVEL SUSPENSION PIPES

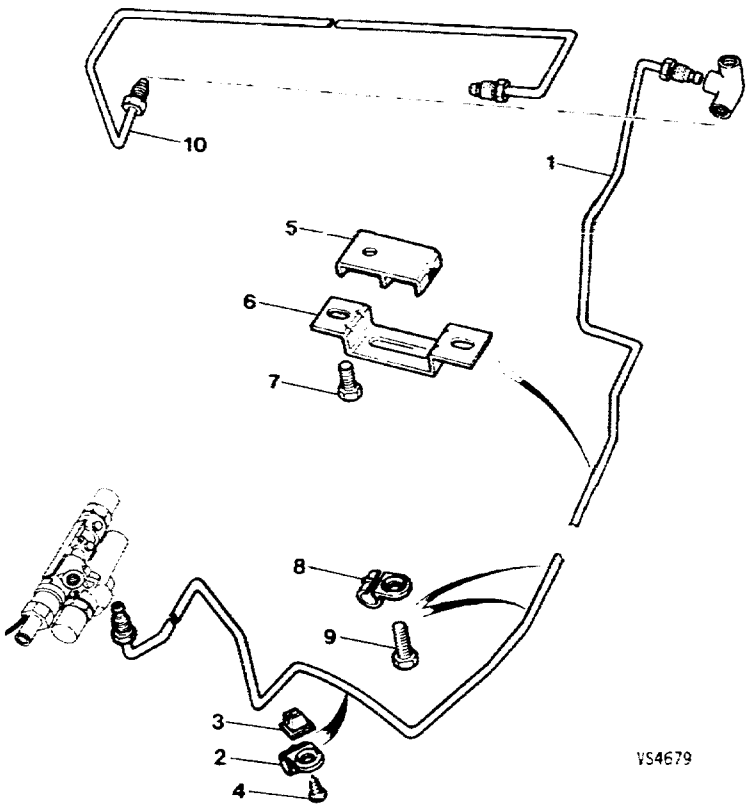

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9356	Ride level hydraulic pipe-assembly	1		
2	C 32746 2	Pipe clip-single	2		
3	C 31973 11	Lokut nut	2		
4	AB 610061	Self tapping screw	NLA		Use JLM9577
4	JLM 9577	Self tapping screw	2		
5	CAC 7114	Pipe clip	1		
6	CAC 7161	Pipe clip bracket	1		
7	AGU 2351	Setscrew	2		
8	CAC 82202	Pipe clip	3		
9	AGU 2202	Setscrew	3		
10	CBC 1808	Pipe-assembly-3 way RH to 3 way LH	1		
	CAC 7714	P-clip	4		Pipe to crossmember tank floor

ROAD WHEEL AND TYRE-ALLOY

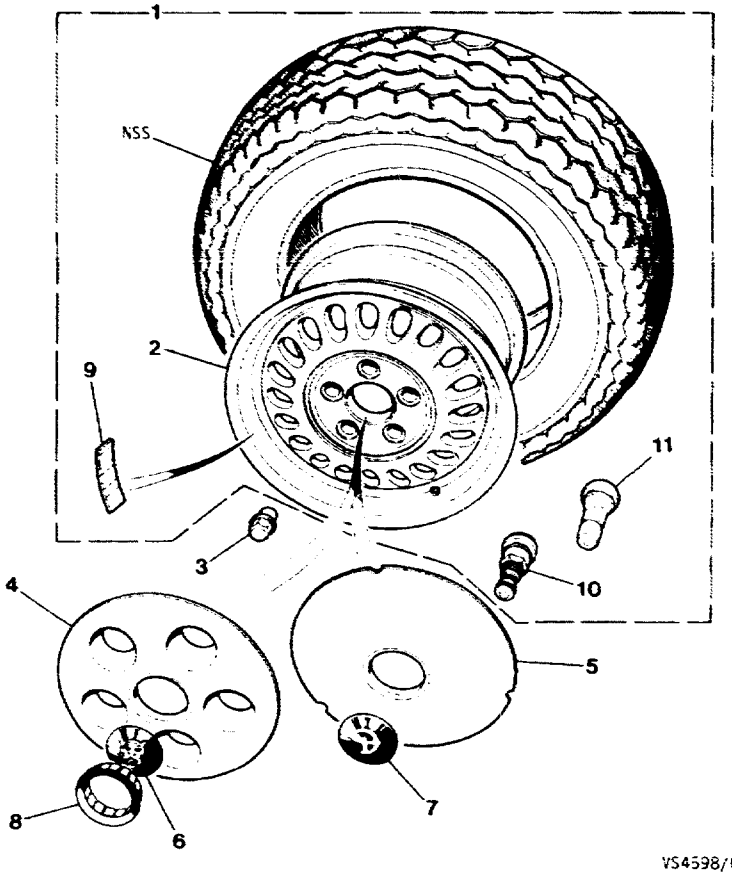


VS4598/C

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4692	Road wheel and tyre-assembly-Dunlop	NLA	(1)	Use CBC7995
1	CBC 7995	Road wheel and tyre-assembly-Dunlop	NLA		
2	CBC 4691	Alloy road wheel	NLA	(1)	Use CBC7996
2	CBC 7996	Alloy road wheel-tear drop	5		Except Canada and USA
1	CBC 4693	Road wheel and tyre-assembly-Michelin	NLA	(1)	Use CBC7994
1	CBC 7994	Road wheel and tyre-assembly-Michelin	NLA		Use CBC9463
1	CBC 9463	Road wheel and tyre-assembly-Michelin	NLA		
2	CBC 4691	Alloy road wheel	NLA	(1)	Use CBC7996
1	CBC 4689	Road wheel and tyre-assembly-Pirelli	NLA		Canada;USA
2	CAC 9650	Alloy road wheel	NLA	(1)	Use CBC4688
					Canada;USA
2	CBC 4688	Alloy road wheel-tear drop	5		Canada;USA
3	CAC 4547 2	Wheel nut	NLA	(1)	Use CCC7030
					Jaguar
	CCC 7030	Domed wheel nut-black	20		
3	CAC 7367 1	Wheel nut	NLA	(1)	Use CCC7031
					Daimler
3	CAC 7367 1	Wheel nut	NLA	(1)	Use CCC7031
					USA,Jaguar
	CCC 7031	Open end wheel nut-alloy wheel	20		
4	CAC 6438	Hub cap-holed	4	(1)	
5	CAC 6439 1	Hub cap-flush nave-plastic	4	(1)	
6	CAC 6502	Road wheel badge-Jaguar-silver	4	(1)	
7	CBC 4515	Road wheel badge-Daimler	4	(1)	
8	CAC 6442	Badge retainer-Jaguar	4	(1)	
8	CAC 5073	Badge retainer-Daimler	4	(1)	
9	CBC 4059	Balance weight strip -stick on	NLA	(1)	Use CBC5497
9	CBC 5497	Balance weight strip	NLA		Use CBC549711
	CBC 5497 11	Wheel balance weight-60g	NLA		Use MMB6134AA
	MMB 6134AA	Balance weight-self adhesive fixing	A/R		
10	CAC 4123	Tyre valve-short	5	(1)	
10	CAC 7218	Tyre valve-long	5	(1)	
11	CBC 5005	Snap-in valve	5	(1)	
	JLM 10165	Locking wheel nut kit	1	(1)	

CHANGE POINTS
(1) To (V) 594575


ROAD WHEEL AND TYRE-ALLOY-DAIMLER

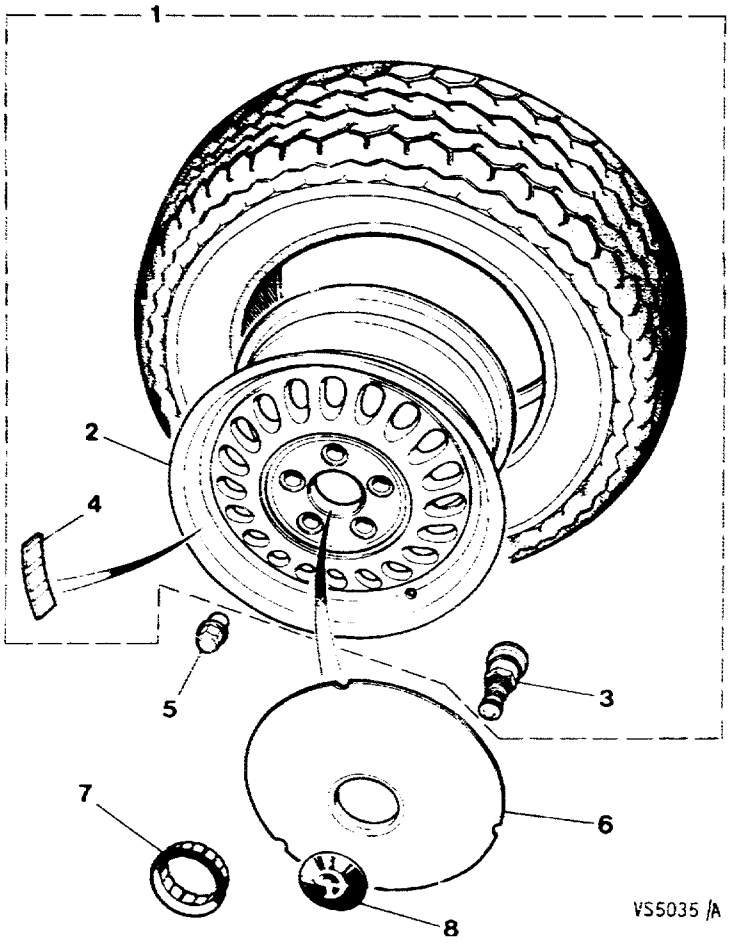

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9463	Road wheel and tyre-assembly-Michelin	NLA	(1)	Daimler
1	CBC 7995	Road wheel and tyre-assembly-Dunlop	NLA	(1)	Daimler
2	CBC 7996	Alloy road wheel-tear drop	5	(1)	Daimler
3	CAC 4123	Tyre valve-short	5	(1)	Daimler
3	CAC 7218	Tyre valve-long	5	(1)	Daimler
4	CBC 5497 11	Wheel balance weight-60g	NLA	(1)	Use MMB6134AA
	MMB 6134AA	Balance weight-self adhesive fixing	A/R		
5	CAC 7367 1	Wheel nut	NLA	(1)	Use CCC7031
	CCC 7031	Open end wheel nut-alloy wheel	20		
6	CAC 6439 1	Hub cap-flush nave-plastic	4	(1)	Daimler
7	CAC 6442	Badge retainer-Jaguar	4	(1)	Daimler
8	CBC 4515	Road wheel badge-Daimler	4	(1)	Daimler
	JLM 10165	Locking wheel nut kit	1	(1)	Daimler;optional


CHANGE POINTS:
(1) From (V) 594576

ROAD WHEEL AND TYRE-MAJESTIC-USA

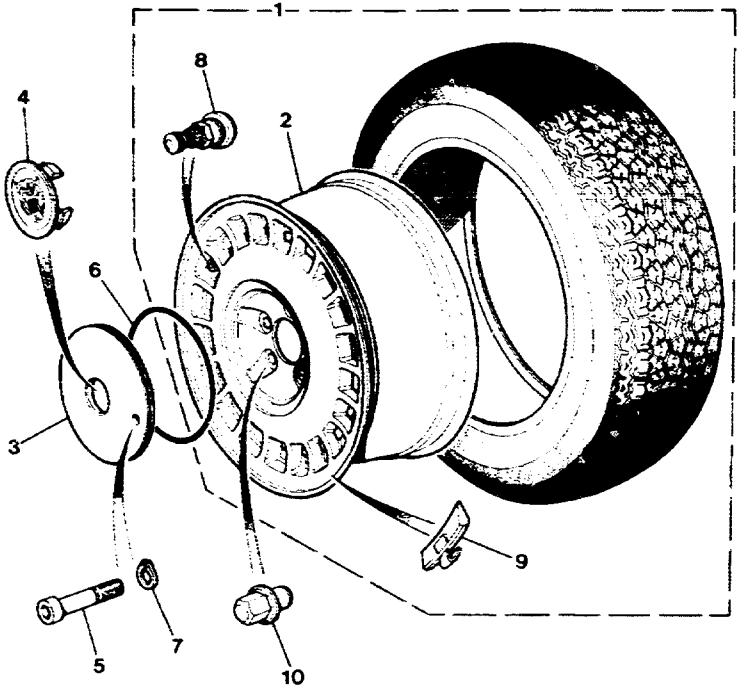

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CCC 4470	Road wheel and tyre-assembly-Oyster	NLA		USA,Majestic
2	CCC 2708 1	Road wheel-assembly-roulette-Oyster	5		USA,Majestic
3	CCC 2711 1	Hub cap	5		
4	CBC 9907 1	Road wheel badge-Jaguar-silver/grey-with retainer	NLA		Use CCC63471.
4	CCC 6347 1	Road wheel badge-Jaguar-with retainer	NLA		Use CCC6347.
4	CCC 6347	Road wheel badge-Jaguar-with retainer-silver/grey	NLA		Use MNA6249GA.
4	MNA 6249GA	Road wheel badge-Jaguar-silver/grey	4		
5	CCC 4608	Screw	4		
6	CCC 2713	O-ring	4		
7	CCC 2714	Circlip	4		
8	CAC 4123	Tyre valve-short	5		
8	CAC 7218	Tyre valve-long	5		
9	CBC 9039 1	Balance weight-5g-knock on fixing	NLA		Use CCC68901.
9	CBC 9039 2	Balance weight-10g-knock on fixing	NLA		Use CCC68902.
9	CBC 9039 3	Balance weight-15g-knock on fixing	A/R		
9	CBC 9039 4	Balance weight-20g -knock on fixing	A/R		
9	CBC 9039 5	Balance weight-25g-knock on fixing	A/R		
9	CBC 9039 6	Balance weight-30g-knock on fixing	NLA		Use CCC68906.
9	CBC 9039 7	Balance weight-35g -knock on fixing	NLA		Use CCC68907.
9	CBC 9039 8	Balance weight-40g-knock on fixing	NLA		Use CCC68908.
9	CBC 9039 9	Balance weight-45g-knock on fixing	NLA		Use CCC68909.
9	CBC 9039 10	Balance weight-50g-knock on fixing	NLA		Use CCC689010.
9	CBC 9039 11	Balance weight-55g-knock on fixing	NLA		Use CCC689011.
9	CBC 9039 12	Balance weight-60g-knock on fixing	NLA		Use CCC689012.
9	CCC 6890 1	Balance weight-5g-2 piece fixing	A/R		
9	CCC 6890 2	Balance weight-10g-2 piece fixing	NLA		Use XR86354.
9	CCC 6890 6	Balance weight-30g-2 piece fixing	A/R		
9	CCC 6890 7	Balance weight-35g -2 piece fixing	NLA		Use XR86359.
9	CCC 6890 8	Balance weight-40g-2 piece fixing	A/R		
9	CCC 6890 9	Balance weight-45g-2 piece fixing	NLA		Use XR86361.
9	CCC 6890 10	Balance weight-50g-2 piece fixing	A/R		
9	CCC 6890 11	Balance weight-55g-2 piece fixing	NLA		Use XR86363.
9	CCC 6890 12	Balance weight-60g-2 piece fixing	A/R		
	XR8 6354	Wheel balance weight-clip on fixing-10g	A/R		
	XR8 6359	Wheel balance weight-clip on fixing-35g	A/R		
	XR8 6363	Wheel balance weight-clip on fixing-55g	A/R		
10	CBC 1262	Wheel nut-domed	NLA		Use CCC7028.
10	CCC 7028	Wheel nut-domed-stainless steel	20		
	CCC 2900	Allen key-hub cap removal	1		


ROAD WHEEL AND TYRE-PRESSED SPOKE

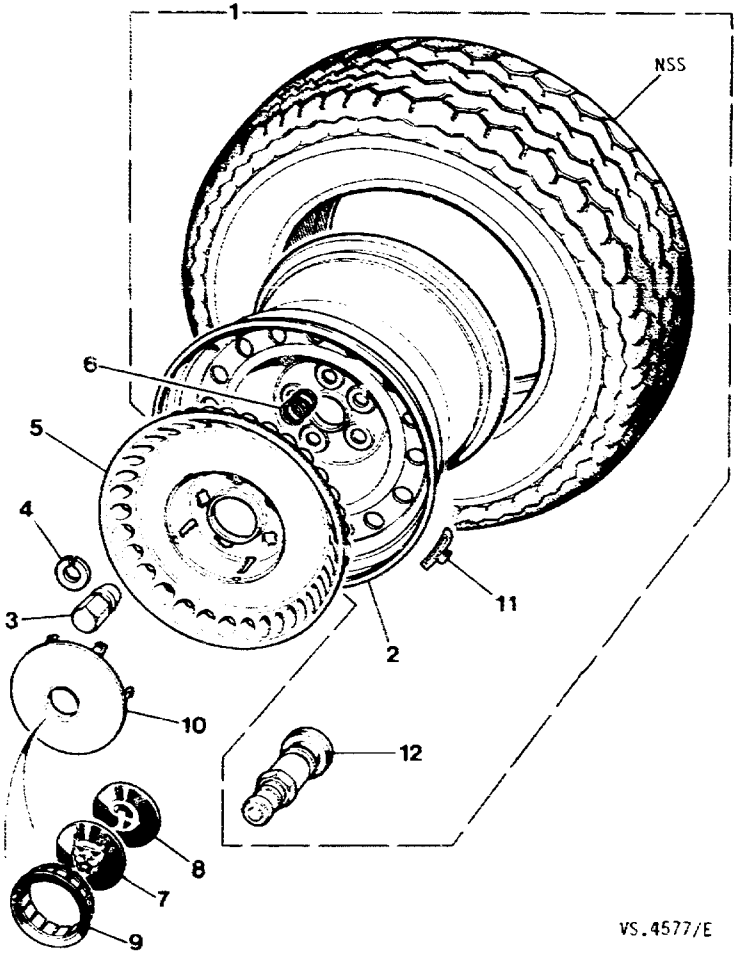

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 8971	Road wheel and tyre-assembly-Dunlop	NLA	(1)	
1	CBC 4554	Road wheel and tyre-assembly-Michelin	NLA	(1)	Use CBC9462
1	CBC 9462	Road wheel and tyre-assembly-Michelin	5	(1)	
2	CAC 8962	Road wheel-pressed spoke	5	(1)	
3	CAC 7370 1	Wheel nut	20	(1)	
4	CRC 1428	Nylon washer-wheel nut	20	(1)	
5	CBC 4973	Wheel trim	4	(1)	
6	CRC 1038	Spring	NLA	(1)	Use CRC1038J
6	CRC 1038 J	Spring	20		
7	CAC 6502	Road wheel badge-Jaguar-silver	4	(1)	
8	CBC 4515	Road wheel badge-Daimler	4	(1)	
9	CAC 6442	Badge retainer-Jaguar	4	(1)	
10	CBC 4974	Wheel nut cover	4	(1)	
11	CBC 1491	Balance weight	NLA	(1)	Use CBC4059
	CBC 4059	Balance weight strip -stick on	NLA		Use CBC5497
	CBC 5497	Balance weight strip	NLA		Use CBC549711
	CBC 549711	Wheel balance weight-60g	NLA		Use MMB6134AA
11	MMB 6134AA	Balance weight-self adhesive fixing	1		
12	CAC 8751	Tyre valve	5	(1)	Alternatives
12	CAC 6963	Tyre valve	5	(1)	Alternatives

CHANGE POINTS:
(1) From (V) 594576

ROAD WHEEL AND TYRE-ROULETTE

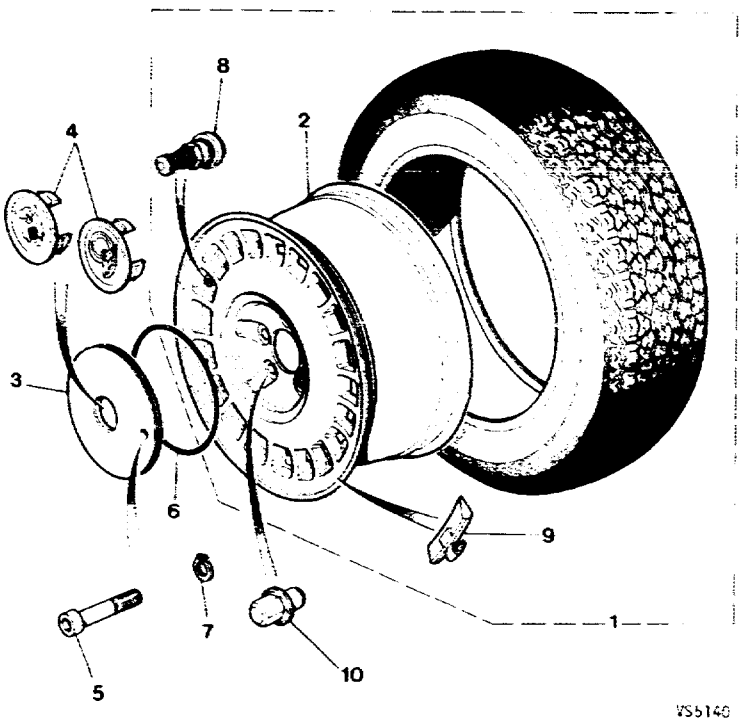


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CCC 2706	Road wheel and tyre-assembly	NLA	(1)	Except USA
1	CCC 2707	Road wheel and tyre-assembly	NLA	(1)	USA
2	CCC 2708	Alloy road wheel-roulette	5	(1)	
3	CCC 2711	Alloy hub cap	5	(1)	
4	CBC 9923	Road wheel badge-Daimler-Grey	NLA	(1)	Use CCC6348
4	CCC 6348	Road wheel badge-Daimler-silver/black	4		
4	CBC 9907 1	Road wheel badge-Jaguar-silver/grey-with retainer	NLA	(1)	Use CCC63471
4	CCC 6347 1	Road wheel badge-Jaguar-with retainer	NLA		Use CCC6347
4	CCC 6347	Road wheel badge-Jaguar-with retainer-silver/grey	NLA		Use MNA6249GA
4	MNA 6249GA	Road wheel badge-Jaguar silver/grey	4		
5	CCC 2712	Hub cap screw	NLA	(1)	Use CCC4608
	CCC 4608	Screw	4		
6	CCC 2713	O-ring	4	(1)	
7	CCC 2714	Circlip	4	(1)	
8	CAC 4123	Tyre valve-short	5	(1)	
8	CAC 7218	Tyre valve-long	5	(1)	

CHANGE POINTS

(1) From (V) 629286

ROAD WHEEL AND TYRE-ROULETTE

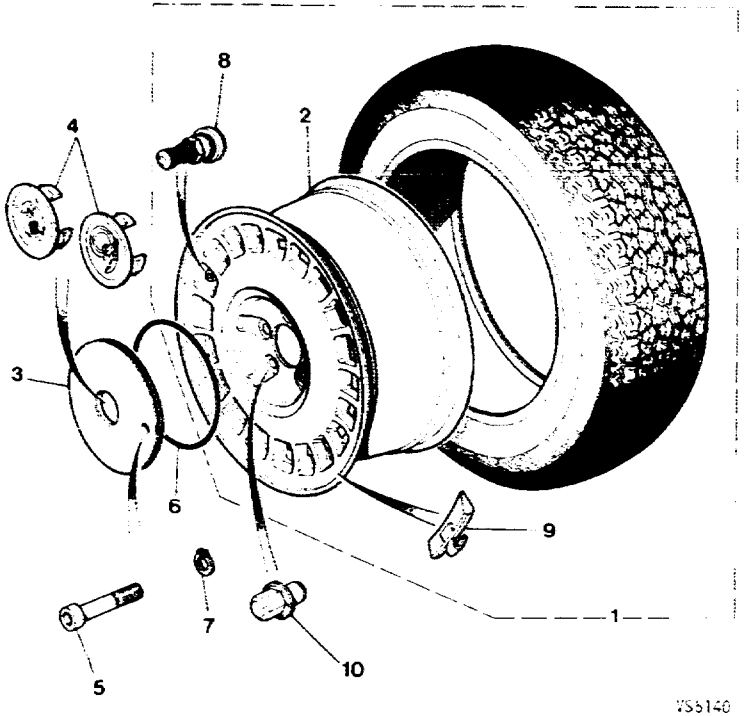


YS5140

Illus	Part Number		Description	Quantity	Change Point	Remarks
9	CBC	90391	Balance weight-5g-knock on fixing	NLA	(1)	Use CCC68901
9	CBC	90392	Balance weight-10g-knock on fixing	NLA	(1)	Use CCC68902
9	CBC	90393	Balance weight-15g-knock on fixing	A/R	(1)	
9	CBC	90394	Balance weight-20g -knock on fixing	A/R	(1)	
9	CBC	90395	Balance weight-25g-knock on fixing	A/R	(1)	
9	CBC	90396	Balance weight-30g-knock on fixing	NLA	(1)	Use CCC68906
9	CBC	90397	Balance weight-35g -knock on fixing	NLA	(1)	Use CCC68907
9	CBC	90398	Balance weight-40g-knock on fixing	NLA	(1)	Use CCC68908
9	CBC	90399	Balance weight-45g-knock on fixing	NLA	(1)	Use CCC68909
9	CBC	903910	Balance weight-50g-knock on fixing	NLA	(1)	Use CCC689010
9	CBC	903911	Balance weight-55g-knock on fixing	NLA	(1)	Use CCC689011
9	CBC	903912	Balance weight-60g-knock on fixing	NLA	(1)	Use CCC689012
9	CCC	68901	Balance weight-5g-2 piece fixing	A/R		
9	CCC	68902	Balance weight-10g-2 piece fixing	NLA		Use XR86354
9	CCC	68906	Balance weight-30g-2 piece fixing	A/R		
9	CCC	68907	Balance weight-35g -2 piece fixing	NLA		Use XR86359
9	CCC	68908	Balance weight-40g-2 piece fixing	A/R		
9	CCC	68909	Balance weight-45g-2 piece fixing	NLA		Use XR86361
9	CCC	689010	Balance weight-50g-2 piece fixing	A/R		
9	CCC	689011	Balance weight-55g-2 piece fixing	NLA		Use XR86363
9	CCC	689012	Balance weight-60g-2 piece fixing	A/R		
	XR8	6354	Wheel balance weight-clip on fixing-10g	A/R		
	XR8	6359	Wheel balance weight-clip on fixing-35g	A/R		
	XR8	6363	Wheel balance weight-clip on fixing-55g	A/R		
10	CBC	1262	Wheel nut-domed	NLA	(1)	Use CCC7028
10	CCC	7028	Wheel nut-domed-stainless steel	20		
	CCC	2900	Allen key-hub cap removal	1	(1)	

CHANGE POINTS

(1) From (V) 629286

ROAD WHEEL AND TYRE-SOVEREIGN-CANADA/USA

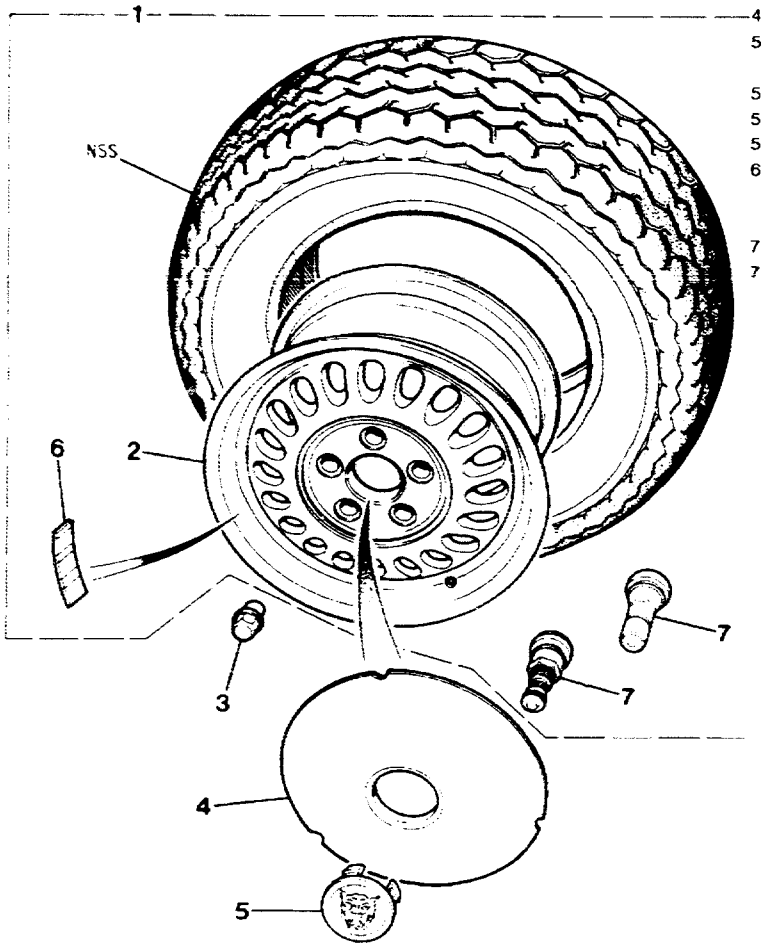


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9269	Road wheel and tyre-assembly-Pirelli	NLA	(1)	Canada;USA,Sovereign (USA)
2	CBC 4688	Alloy road wheel-tear drop	5	(1)	Canada;USA,Sovereign (USA)
3	CAC 4547 2	Wheel nut	NLA	(1)	Use CCC7030.
					Canada;USA,Sovereign (USA)
	CCC 7030	Domed wheel nut-black	20		
4	CAC 6439 1	Hub cap-flush nave-plastic	4	(1)	Canada,USA;Sovereign (USA)
5	CBC 9907 1	Road wheel badge-Jaguar-silver/grey-with retainer	NLA	(1)	Use CCC63471.
					Canada;USA;Sovereign (USA)
5	CCC 6347 1	Road wheel badge-Jaguar-with retainer	NLA		Use CCC6347.
5	CCC 6347	Road wheel badge-Jaguar-with retainer-silver/grey	NLA		Use MNA6249GA.
5	MNA 6249GA.	Road wheel badge-Jaguar-silver/grey	4		
6	CBC 5497 11	Wheel balance weight-60g	NLA	(1)	Use MMB6134AA.
					Canada,USA,Sovereign (USA)
	MMB 6134AA	Balance weight-self adhesive fixing	A/R		
7	CAC 4123	Tyre valve-short	5	(1)	Canada;USA,Sovereign (USA)
7	CAC 7218	Tyre valve-long	5	(1)	Canada;USA,Sovereign (USA)

CHANGE POINTS.

(1) From (V) 629286

ROAD WHEEL AND TYRE-SOVEREIGN/VDP-USA

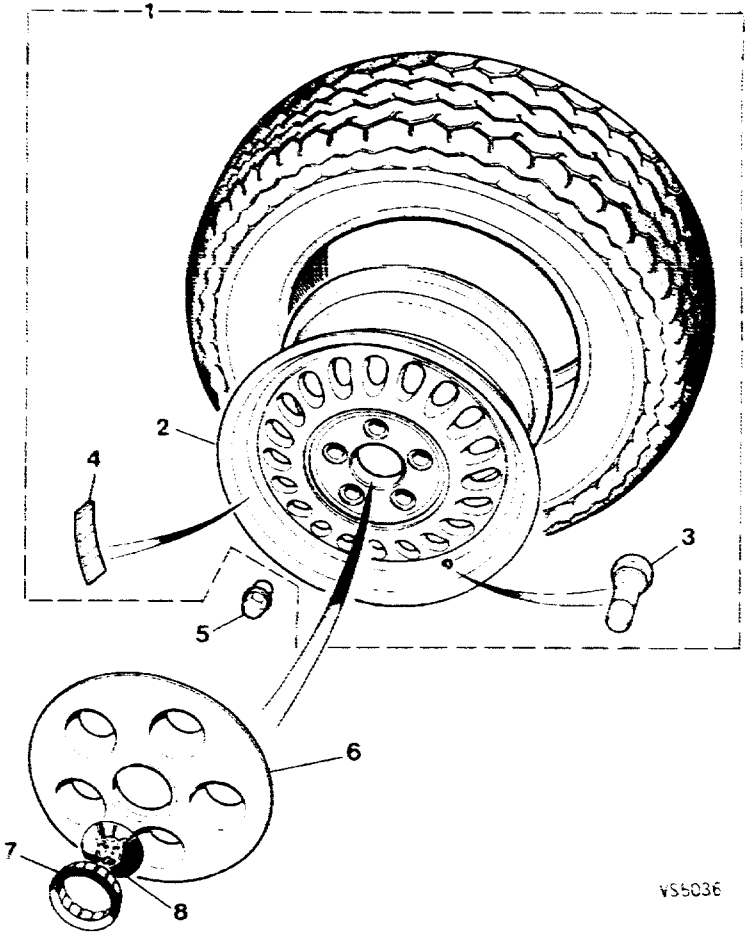


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	4689	Road wheel and tyre-assembly-Pirelli	NLA	(1)	USA,Vanden Plas
1	CBC	4689	Road wheel and tyre-assembly-Pirelli	NLA	(1)	USA,Sovereign (USA)
2	CBC	4688	Alloy road wheel-tear drop	5	(1)	USA,Vanden Plas
2	CBC	4688	Alloy road wheel-tear drop	5	(1)	USA,Sovereign (USA)
3	CBC	5005	Snap-in valve	5		
4	CBC	5497 11	Wheel balance weight-60g	NLA		Use MMB6134AA
	MMB	6134AA	Balance weight-self adhesive fixing	A/R		
5	CAC	4547 2	Wheel nut	NLA		Use CCC7030
	CCC	7030	Domed wheel nut-black	20		
6	CAC	6438	Hub cap-holed	4	(1)	
7	CAC	6442	Badge retainer-Jaguar	4	(1)	
8	CAC	6502	Road wheel badge-Jaguar-silver	4	(1)	

CHANGE POINTS


(1) From (V) 594576

ROAD WHEEL AND TYRE-SPECIAL EDITION-USA

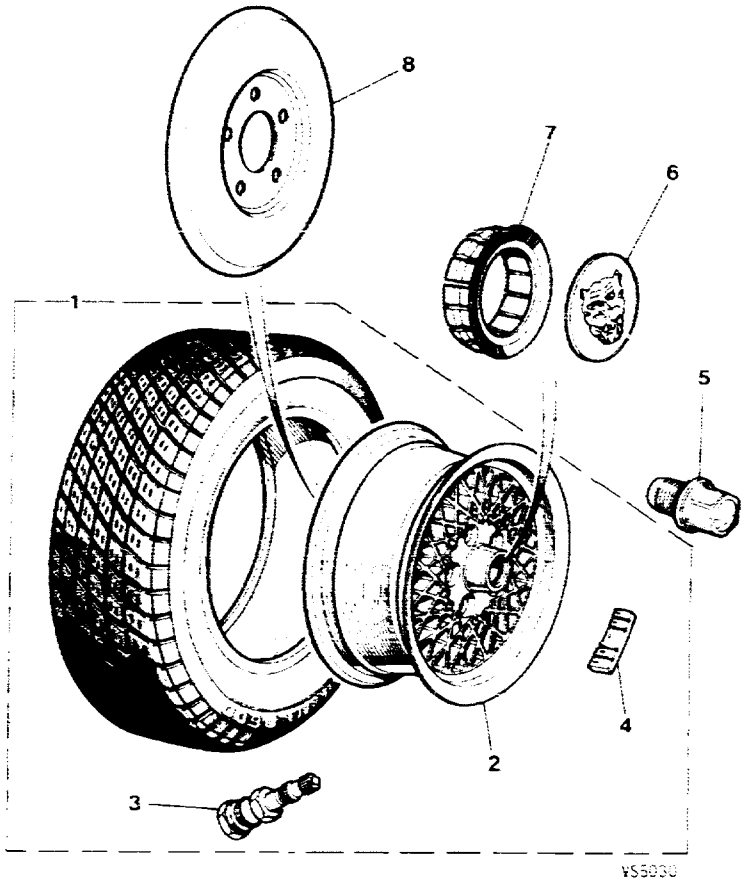

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9031	Road wheel and tyre-assembly-Pirelli-Regency red	NLA		USA
2	CBC 24693	Road wheel-Regency red	NLA		USA
1	CBC 9788	Road wheel and tyre-assembly-Pirelli-Gunmetal grey	NLA		USA
2	CBC 24695	Road wheel-Gunmetal grey	NLA		USA
3	CAC 7218	Tyre valve-long	5		
	CBC 4059	Balance weight strip -stick on	NLA		Use CBC5497
	CBC 5497	Balance weight strip	NLA		Use CBC549711
	CBC 549711	Wheel balance weight-60g	NLA		Use MMB6134AA
4	MMB 6134AA	Balance weight-self adhesive fixing	A/R		
4	CBC 90391	Balance weight-5g-knock on fixing	NLA		Use CCC68901
4	CBC 90392	Balance weight-10g-knock on fixing	NLA		Use CCC68902
4	CBC 90393	Balance weight-15g-knock on fixing	A/R		
4	CBC 90394	Balance weight-20g -knock on fixing	A/R		
4	CBC 90395	Balance weight-25g-knock on fixing	A/R		
4	CBC 90396	Balance weight-30g-knock on fixing	NLA		Use CCC68906
4	CBC 90397	Balance weight-35g -knock on fixing	NLA		Use CCC68907
4	CBC 90398	Balance weight-40g-knock on fixing	NLA		Use CCC68908
4	CBC 90399	Balance weight-45g-knock on fixing	NLA		Use CCC68909
4	CBC 903910	Balance weight-50g-knock on fixing	NLA		Use CCC689010
4	CBC 903911	Balance weight-55g-knock on fixing	NLA		Use CCC689011
4	CBC 903912	Balance weight-60g-knock on fixing	NLA		Use CCC689012
4	CCC 68901	Balance weight-5g-2 piece fixing	A/R		
4	CCC 68902	Balance weight-10g-2 piece fixing	NLA		Use XR86354
4	CCC 68906	Balance weight-30g-2 piece fixing	A/R		
4	CCC 68907	Balance weight-35g -2 piece fixing	NLA		Use XR86359
4	CCC 68908	Balance weight-40g-2 piece fixing	A/R		
4	CCC 68909	Balance weight-45g-2 piece fixing	NLA		Use XR86361
4	CCC 68909	Balance weight-45g-2 piece fixing	NLA		Use XR86361
4	CCC 689010	Balance weight-50g-2 piece fixing	A/R		
4	CCC 689011	Balance weight-55g-2 piece fixing	NLA		Use XR86363
4	CCC 689012	Balance weight-60g-2 piece fixing	A/R		
	XR8 6354	Wheel balance weight-clip on fixing-10g	A/R		
	XR8 6359	Wheel balance weight-clip on fixing-35g	A/R		
	XR8 6363	Wheel balance weight-clip on fixing-55g	A/R		
5	CBC 1262	Wheel nut-domed	NLA		Use CCC7028
5	CCC 7028	Wheel nut-domed-stainless steel	20		
6	CBC 9032	Road wheel badge-silver	4		
7	CBC 9033	Badge retainer-aluminium	NLA		Use CCC63471
	CCC 63471	Road wheel badge-Jaguar-with retainer	NLA		Use CCC6347
	CCC 6347	Road wheel badge-Jaguar-with retainer-silver/grey	NLA		Use MNA6249GA
	MNA 6249GA	Road wheel badge-Jaguar-silver/grey	4		
	CBC 9037	Brake dust shield	4		

ROAD WHEEL AND TYRE-SPORTSPACK

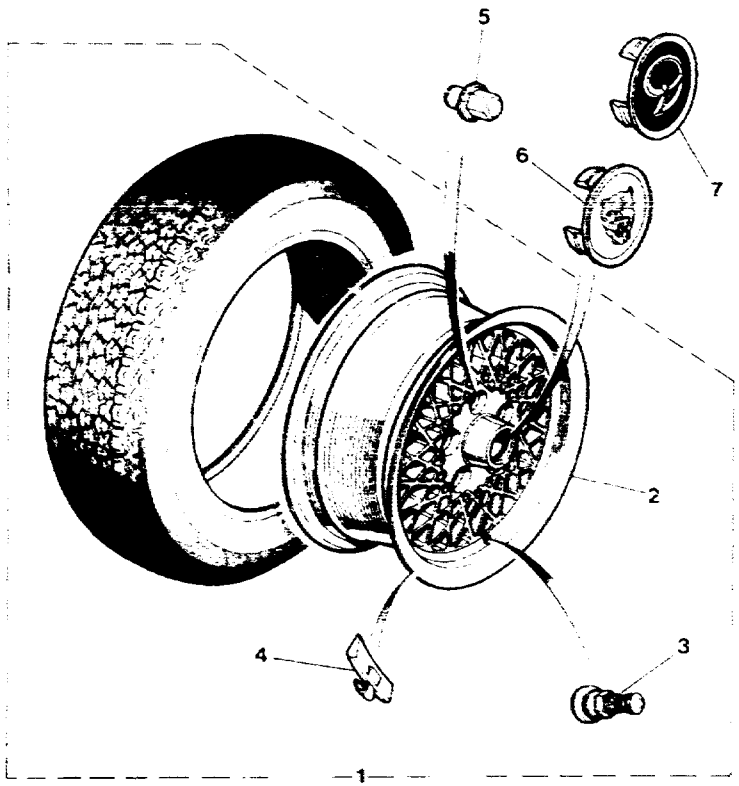


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9644	Alloy wheel and tyre assembly	NLA	(1)	Sportspack,except Australia and Canada and Korea and USA
2	CBC 9643	Alloy road wheel-forged	NLA	(1)	Use MMB6115AA Sportspack,except Australia and Canada and Korea and USA
	MMB 6115AA	Roao wheel-alloy-8J x 16"-forged lattice	5		
3	CAC 4123	Tyre valve-short	5		
3	CAC 7218	Tyre valve-long	5		
4	CBC 90391	Balance weight-5g-knock on fixing	NLA		Use CCC68901
4	CBC 90392	Balance weight-10g-knock on fixing	NLA		Use CCC68902
4	CBC 90393	Balance weight-15g-knock on fixing	A/R		
4	CBC 90394	Balance weight-20g -knock on fixing	A/R		
4	CBC 90395	Balance weight-25g-knock on fixing	A/R		
4	CBC 90396	Balance weight-30g-knock on fixing	NLA		Use CCC68906
4	CBC 90397	Balance weight-35g -knock on fixing	NLA		Use CCC68907
4	CBC 90398	Balance weight-40g-knock on fixing	NLA		Use CCC68908
4	CBC 90399	Balance weight-45g-knock on fixing	NLA		Use CCC68909
4	CBC 903910	Balance weight-50g-knock on fixing	NLA		Use CCC689010
4	CBC 903911	Balance weight-55g-knock on fixing	NLA		Use CCC689011
4	CBC 903912	Balance weight-60g-knock on fixing	NLA		Use CCC689012
4	CCC 68901	Balance weight-5g-2 piece fixing	A/R		
4	CCC 68902	Balance weight-10g-2 piece fixing	NLA		Use XR86354
4	CCC 68906	Balance weight-30g-2 piece fixing	A/R		
4	CCC 68907	Balance weight-35g -2 piece fixing	NLA		Use XR86359
4	CCC 68908	Balance weight-40g-2 piece fixing	A/R		
4	CCC 68909	Balance weight-45g-2 piece fixing	NLA		Use XR86361
4	CCC 689010	Balance weight-50g-2 piece fixing	A/R		
4	CCC 689011	Balance weight-55g-2 piece fixing	NLA		Use XR86363
4	CCC 689012	Balance weight-60g-2 piece fixing	A/R		
	XR8 6354	Wheel balance weight-clip on fixing-10g	A/R		
	XR8 6359	Wheel balance weight-clip on fixing-35g	A/R		
	XR8 6363	Wheel balance weight-clip on fixing-55g	A/R		
5	CBC 1262	Wheel nut-domed	NLA		Use CCC7028
5	CCC 7028	Wheel nut-domed-stainless steel	20		
6	CBC 99071	Road wheel badge-Jaguar-silver/grey-with retainer	NLA	(1)	Use CCC63471
6	CCC 63471	Road wheel badge-Jaguar-with retainer	NLA		Use CCC6347
6	CCC 6347	Road wheel badge-Jaguar-with retainer-silver/grey	NLA		Use MNA6249GA
6	MNA 6249GA	Road wheel badge-Jaguar-silver/grey	4		
7	CBC 9923	Road wheel badge-Daimler-Grey	NLA	(1)	Use CCC6348
7	CCC 6348	Road wheel badge-Daimler-silver/black	4		

CHANGE POINTS

(1) From (V) 629286


ROAD WHEEL AND TYRE-STEEL

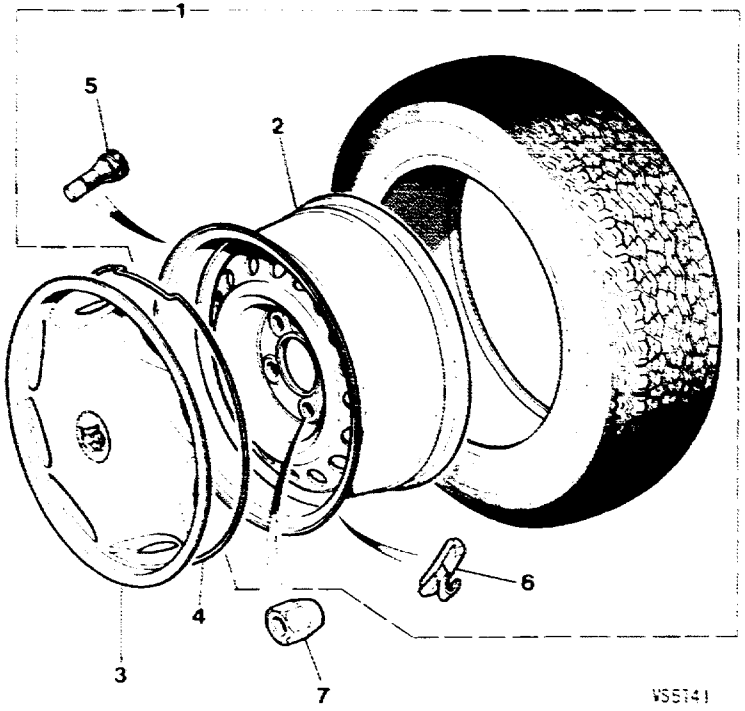

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9262	Road wheel and tyre-assembly	NLA	(1)	Jaguar,Sovereign,except Canada and USA
2	CBC 9263	Road wheel-assembly	5	(1)	Jaguar,Sovereign,except Canada and USA
3	CBC 8873	Plastic trim	4	(1)	Jaguar,Sovereign,except Canada and USA
4	CBC 8875	Retaining ring-wire	4		
5	CBC 5005	Snap-in valve	5		
6	CBC 9587 1	Balance weight-10g	NLA		Use MMB6134BA2.
6	MMB 6134BA 2	Balance weight-10g	A/R		
6	CBC 9587 2	Balance weight-15g	NLA		Use MMB6134BA3.
6	MMB 6134BA 3	Balance weight-15g	A/R		
6	CBC 9587 3	Balance weight-20g	NLA		Use MMB6134BA4.
6	MMB 6134BA 4	Balance weight-20g	A/R		
6	CBC 9587 4	Balance weight-25g	NLA		Use MMB6134BA5.
6	MMB 6134BA 5	Balance weight-25g	A/R		
6	CBC 9587 5	Balance weight-30g	NLA		Use MMB6134BA6.
6	MMB 6134BA 6	Balance weight-30g	A/R		
6	CBC 9587 6	Balance weight-35g	NLA		Use MMB6134BA7.
6	MMB 6134BA 7	Balance weight-35g	A/R		
6	CBC 9587 7	Balance weight-40g	NLA		Use MMB6134BA8.
6	MMB 6134BA 8	Balance weight-40g	A/R		
6	CBC 9587 8	Balance weight-45g	NLA		Use MMB6134BA9.
6	MMB 6134BA 9	Balance weight-45g	A/R		
6	CBC 9587 9	Balance weight-50g	NLA		Use MMB6134BA10.
6	MMB 6134BA 10	Balance weight-50g	A/R		
6	CBC 9587 10	Balance weight-55g	NLA		Use MMB6134BA11.
6	MMB 6134BA 11	Balance weight-55g	A/R		
6	CBC 9587 11	Balance weight-60g	NLA		Use MMB6134BA12.
6	MMB 6134BA 12	Balance weight-60g	A/R		
6	CBC 9587 12	Balance weight-70g	NLA		
6	CBC 9587 13	Balance weight-80g	NLA		
6	CBC 9587 14	Balance weight-90g	NLA		
7	CCC 2576	Wheel nut-steel wheel	NLA		Use MMB6260AA.
	MMB 6260AA	Open end wheel nut-steel wheel	20		

CHANGE POINTS
(1) From (V) 629286


ROAD WHEEL AND TYRE-TEARDROP

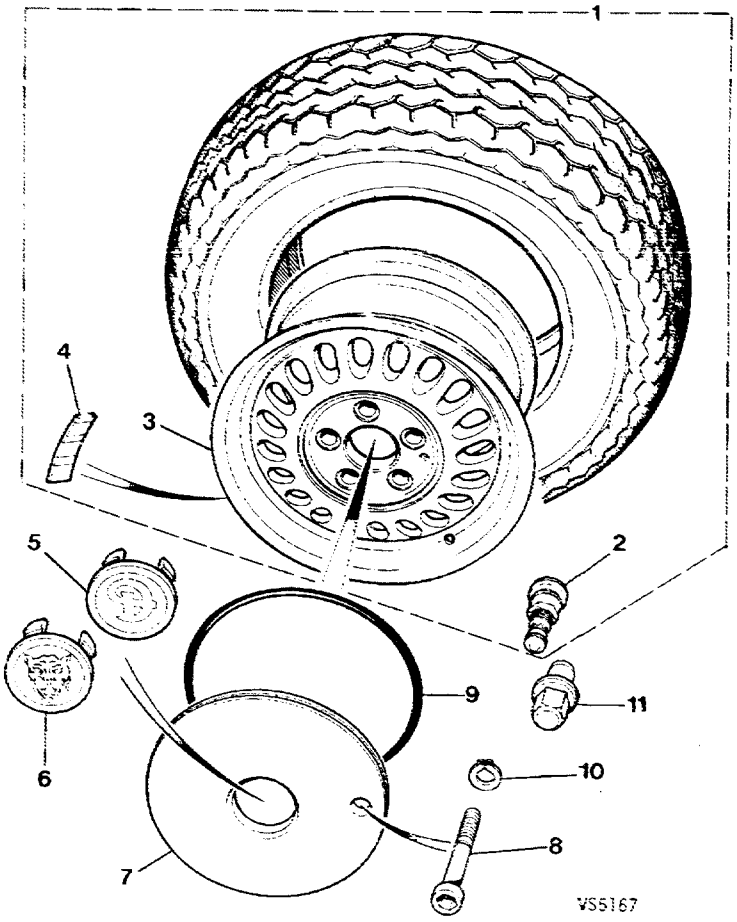

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CCC 3520	Road wheel and tyre-assembly	NLA	(1)	Use MMB6140AA.
					Except Canada and USA
1	MMB 6140AA	Road wheel and tyre-assembly	NLA		Except Canada and USA
2	CAC 4123	Tyre valve-short	5		
2	CAC 7218	Tyre valve-long	5		
3	CBC 7996	Alloy road wheel-tear drop	5	(1)	Except Canada and USA
4	CBC 5497 11	Wheel balance weight-60g	NLA		Use MMB6134AA.
	MMB 6134AA	Balance weight-self adhesive fixing	A/R		
5	CBC 9923	Road wheel badge-Daimler-Grey	NLA	(1)	Use CCC6348.
					Except Canada and USA
5	CCC 6348	Road wheel badge-Daimler-silver/black	4		
6	CBC 9907 1	Road wheel badge-Jaguar-silver/grey-with retainer	NLA	(1)	Use CCC63471.
6	CCC 6347 1	Road wheel badge-Jaguar-with retainer	NLA		Use CCC6347.
6	CCC 6347	Road wheel badge-Jaguar-with retainer-silver/grey	NLA		Use MNA6249GA.
6	MNA 6249GA	Road wheel badge-Jaguar-silver/grey	4		
7	CCC 2711	Alloy hub cap	4		
8	CCC 2712	Hub cap screw	NLA		Use CCC4608.
	CCC 4608	Screw	4		
9	CCC 2713	O-ring	4		
10	CCC 2714	Circlip	4		
11	CBC 1262	Wheel nut-domed	NLA		Use CCC7028.
11	CCC 7028	Wheel nut-domed-stainless steel	20		
	CCC 2900	Allen key-hub cap removal	1		

CHANGE POINTS:
(1) From (V) 629286

SPARE WHEEL MOUNTING BRACKET

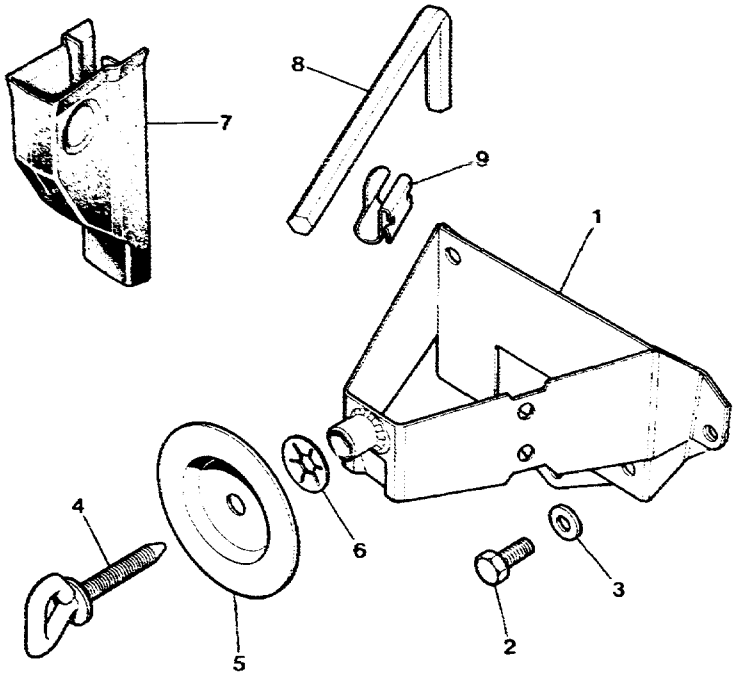

VS4947/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4168	Mounting bracket-spare wheel	1		
2	SH 108161 J	Setscrew-M8 x 16mm	3		
3	FW 105 E	Plain washer	3		
4	CAC 9304 2	Spare wheel clamp screw	1		Except Majestic
	CBC 9034 3	Clamp screw-standard wheel	1		Majestic
5	C 44667	Spare wheel clamp washer	NLA		Use MMB6192AA
5	MMB 6192AA	Spare wheel clamp washer-standard wheel	NLA		Use MMD6192AA
5	MMD 6192AA	Spare wheel clamp washer-sports wheel	1		Except Majestic
5	CAC 6434	Spare wheel clamp washer-sports wheel	1		Majestic
6	AGU 2001	Push nut	1		
7	CBC 4170	Protection cover-jack probe	1		
8	CCC 2900	Allen key-hub cap removal	1		
9	BDC 3751	Clip	1		

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

ANTI LOCK BRAKING SYSTEM ..... 2. N 07
BRAKE DISC AND CALIPERS ..... 2. N 02
BRAKE FLUID RESERVOIR ..... 2. M 07
HANDBRAKE MECHANISM ..... 2. M 14
HYDRAULIC PIPES ..... 2. M 02
MASTER CYLINDER/POWER SERVO ..... 2. M 08
SHOES AND PADS ..... 2. M 18

ACCUMULATOR AND PUMP ..... 2. N 07
ACTUATION ASSEMBLY AND RESERVOIR- ..... 2. M 12
ANTI LOCK BRAKING SYSTEM ELECTRICS- ..... 2. N 08
ANTI LOCK BRAKING SYSTEM ELECTRICS- ..... 2. N 09
BRAKE BOOSTER AND PEDAL HOUSING-UP ..... 2. M 08
BRAKE BOOSTER AND PEDAL HOUSING- ..... 2. M 09
BRAKE BOOSTER AND PEDAL HOUSING- ..... 2. M 10
BRAKE DISC AND CALIPER-FRONT-FROM ..... 2. N 03
BRAKE DISC AND CALIPER-FRONT-UP TO ..... 2. N 02
BRAKE DISC AND CALIPER-REAR-ANTI ..... 2. N 05
BRAKE DISC AND CALIPER-REAR ..... 2. N 04
BRAKE PAD LINK LEAD KIT ..... 2. M 18
BRAKE PIPES-FRONT-ANTI LOCK BRAKE ..... 2. M 02
BRAKE PIPES-FRONT-ANTI LOCK BRAKE ..... 2. M 03
BRAKE PIPES-REAR-ANTI LOCK BRAKE ..... 2. M 04
BRAKE PIPES-REAR-ANTI LOCK BRAKE ..... 2. M 05
BRAKE PIPES-REAR-NON ANTI LOCK ..... 2. M 06
Brake pad set-rear axle-Jurid-518 ..... 2. N 04
Brake pad set-rear axle ..... 2. N 04
Brake pedal microswitch ..... 2. M 08
Brake pedal pad-rubber ..... 2. M 08
Brake pedal pad-rubber ..... 2. M 09
Brake pedal switch ..... 2. M 09

Brake pedal-assembly ..... 2. M 08
Brake pedal ..... 2. M 09
Brake pedal ..... 2. M 10
Brake shoe kit-axle set ..... 2. N 04
Clutch pedal ..... 2. M 10
Clutch switch-assembly ..... 2. M 08
FLUID RESERVOIR AND HOSES ..... 2. M 07
HANDBRAKE ASSEMBLY AND CABLES-UP ..... 2. M 14
HANDBRAKE ASSEMBLY AND CABLES- ..... 2. M 16
HANDBRAKE SWITCH ASSEMBLY ..... 2. M 17
MASTER CYLINDER AND POWER SERVO ..... 2. M 13
Master cylinder reservoir filter ..... 2. M 13
Master cylinder service kit ..... 2. M 13
Pressure delay valve ..... 2. M 03
Stoplight switch ..... 2. M 08


BRAKE PIPES-FRONT-ANTI LOCK BRAKE SYSTEM-UP TO (V)594575

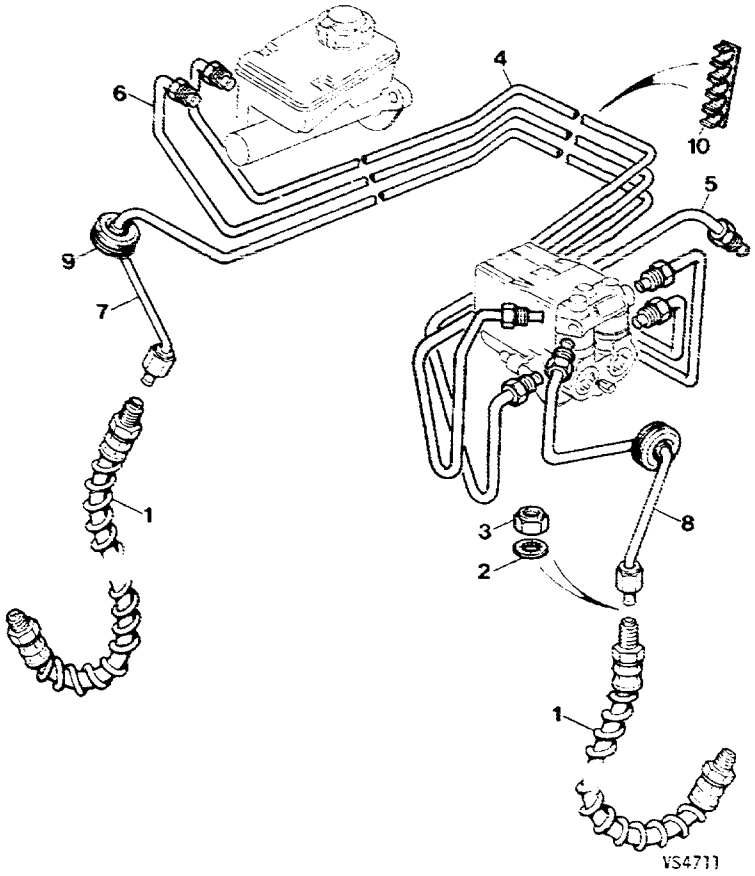

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 8196	Armoured hose	2		
2	WF 110001 J	Washer-metric	2		
3	C 41712	Locknut	2		
4	CAC 9906	Hydraulic pipe-primary master cylinder to modulator	1		RHD
4	CAC 9123	Hydraulic pipe-primary master cylinder to modulator	1		LHD
5	CBC 2012	Hydraulic pipe-assembly-modulator to connector	1		RHD
5	CAC 9124	Hydraulic pipe-assembly-modulator to connector	NLA		LHD
6	CAC 9907	Hydraulic pipe-assembly-secondary master cylinder to modulator	1		RHD
6	CAC 9524	Hydraulic pipe-assembly-secondary master cylinder to modulator	NLA		LHD
7	CAC 9114	Hydraulic pipe-assembly-modulator to RH front hose	NLA		RHD
7	CAC 9117	Hydraulic pipe-assembly-modulator to RH front hose	1		LHD
8	CAC 9115	Hydraulic pipe-assembly-modulator to LH front hose	1		RHD
8	CAC 9118	Hydraulic pipe-assembly-modulator to LH front hose	1		LHD
9	CAC 7783	Grommet	2		
	CAC 8715	Plug	1		
10	CAC 8753	Pipe clip-6/way	4		
10	CAC 9251	Pipe clip-3/way	NLA		Use CBC4987.
	CBC 4987	Brake pipe clip-3/way	2	(1)	
	CAC 9252	Double clip	2		


CHANGE POINTS:
(1) To (V) 594575

BRAKE PIPES-FRONT-ANTI LOCK BRAKE SYSTEM-FROM (V)594576

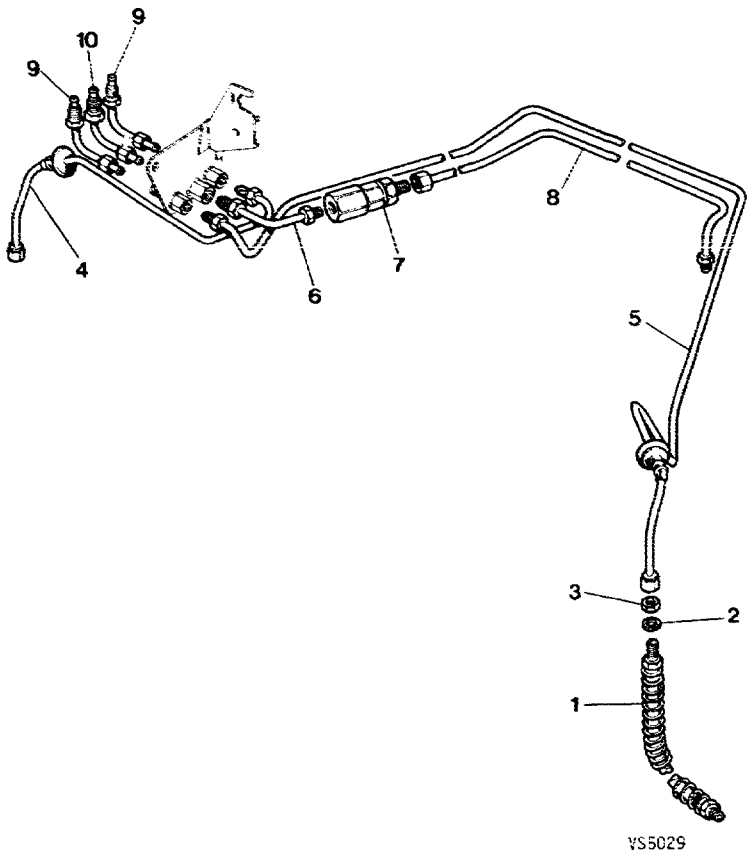

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8209	Armoured hose -front	NLA		Use MNA5680AA.
1	MNA 5680AA	Armoured hose -assembly-front	2		
2	WF 110001J	Washer-metric	2		
3	C 41712	Locknut	2		
		HYDRAULIC PIPE ASSEMBLY			
4	CBC 9003	Hydraulic pipe-assembly	1		RHD
4	CBC 9005	Hydraulic pipe-assembly	NLA		Use CBC9623.
4	CBC 9623	Hydraulic pipe-assembly	1		LHD
5	CBC 9002	Hydraulic pipe-assembly	NLA		Use CBC9622.
5	CBC 9622	Hydraulic pipe-assembly	NLA		Use CCC3513.
5	CCC 3513	Hydraulic pipe-assembly	1		RHD
5	CBC 9004	Hydraulic pipe-assembly	1		LHD
6	CBC 9073	Hydraulic pipe-assembly-anti lock brake unit to delay valve	1		
7	CBC 4233	Pressure delay valve	1		
		HYDRAULIC PIPE ASSEMBLY			
8	CBC 9006	Hydraulic pipe-assembly	1		RHD
8	CBC 9007	Hydraulic pipe-assembly	1		LHD
9	CBC 6615	Hydraulic pipe-anti lock brake unit to connector block	2		
10	CBC 4392	Brake pipe-anti lock brake unit to bracket	1		
	CBC 9550	Pipe damper	1		

BRAKE PIPES-REAR-ANTI LOCK BRAKE SYSTEM-UP TO (V)594575

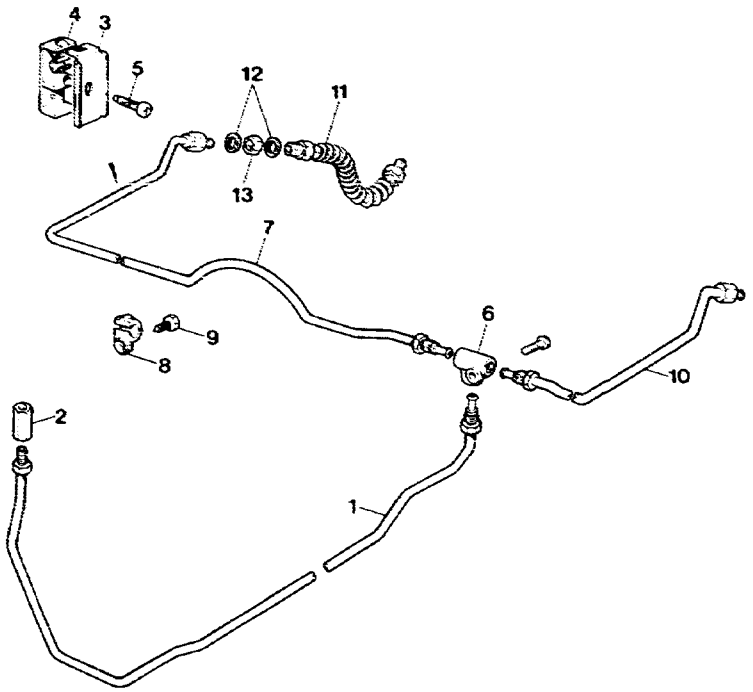


VS4678

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 5621	Hydraulic pipe	NLA		
2	C 42150	Connector	NLA		Use MJA5813BA.
2	MJA 5813BA	Connector	7		
3	CAC 7053	Pipe clip	7		
4	CAC 7162	Clip bracket	1		
5	AGU 2206	Paint clearing screw	1		
6	FAM 8908 J	Connector-3 way	1		
7	CAC 7790	Hydraulic pipe-assembly-3 way connector to RH rear hose	1	(1)	
7	CBC 7408	Hydraulic pipe-assembly-3 way connector to RH rear hose	1	(2)	
8	CAC 8220 1	P-clip-pipe to heelboard	2		
9	AGU 2203 J	Self tapping screw	NLA		Use AGU2201.
9	AGU 2201	Self tapping screw	2		
10	CAC 7791	Hydraulic pipe-assembly-3 way connector to LH rear hose	1		
11	CAC 8199	Armoured hose	2		
12	WF 110001 J	Washer-metric	4		
13	C 41712	Locknut	4		
	CAC 7160	Pipe clip insert	NLA		

CHANGE POINTS:
(1) To (V) 524374
(2) From (V) 524375

BRAKE PIPES-REAR-ANTI LOCK BRAKE SYSTEM-FROM (V)594576

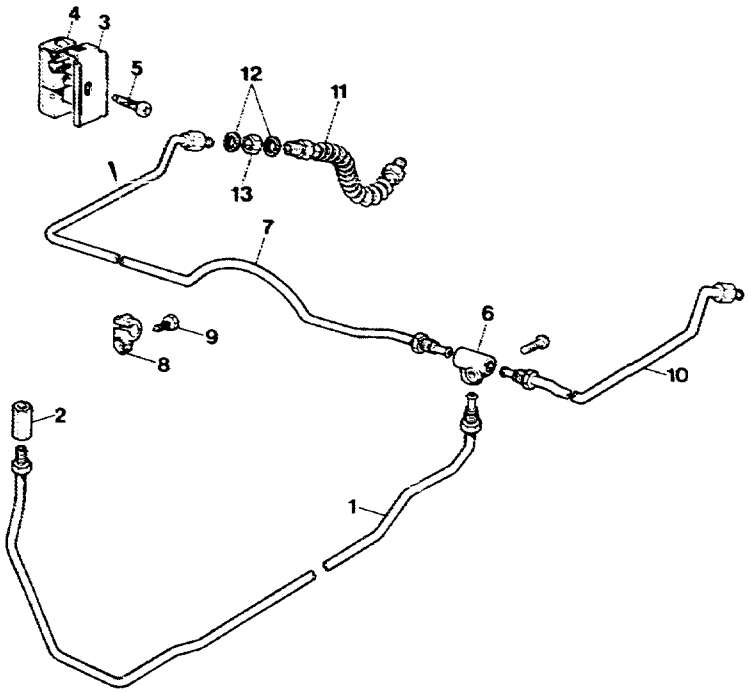

VS4678


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAC 6554	Hydraulic pipe	NLA	(1)	Use CBC5621.
1	CBC 5621	Hydraulic pipe	NLA		
1	CCC 2794	Hydraulic pipe	1	(2)	
2	C 42150	Connector	NLA		Use MJA5813BA.
2	MJA 5813BA	Connector	1		
3	CAC 7053	Pipe clip	1		Hydraulic pipe to side frame
4	CAC 7162	Clip bracket	1		
5	AGU 2207	Screw-paint clearing	1		
	WA 106041J	Plain washer-0.25" i/d	1		
6	FAM 8908J	Connector-3 way	1		
7	CBC 7408	Hydraulic pipe-assembly-3 way connector to RH rear hose	1		
8	CAC 82201	P-clip-pipe to heelboard	2		
9	AGU 2201	Self tapping screw	2		
10	CAC 7791	Hydraulic pipe-assembly-3 way connector to LH rear hose	1	(1)	
10	CBC 8948	Hydraulic pipe-assembly-3 way connector to LH rear hose	1	(2)	
11	CBC 7640	Brake hose-rear	2		
12	WF 110001J	Washer-metric	2		
13	C 41712	Locknut	2		

CHANGE POINTS:

(1) From (V) 594576 To (V) 629361


(2) From (V) 629362

BRAKE PIPES-REAR-NON ANTI LOCK BRAKE SYSTEM-FROM (V)594576

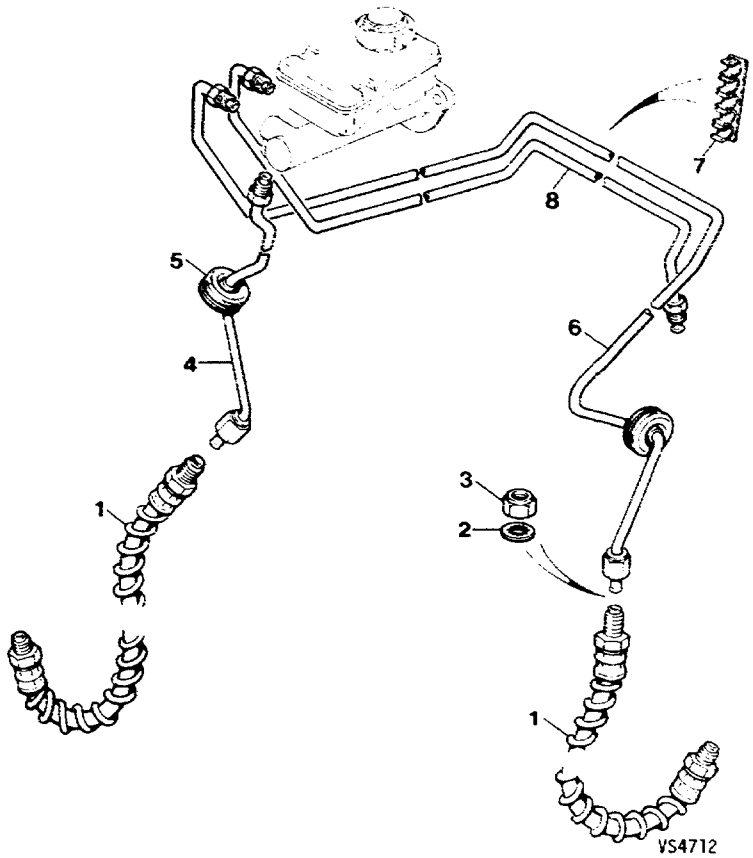

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	8196	Armoured hose	2		
2	WF	110001 J	Washer-metric	2		
3	C	41712	Locknut	2		
4	CAC	9109	Hydraulic pipe	1		RHD
4	CAC	9112	Hydraulic pipe	1		LHD
5	CAC	7783	Grommet	2		
6	CAC	9110	Hydraulic pipe	1		RHD
6	CAC	9111	Hydraulic pipe	1		LHD
7	CAC	8753	Pipe clip-6/way	4		
8	CAC	9905	Hydraulic pipe-assembly-primary master cylinder to connector	1		RHD
8	CAC	9120	Hydraulic pipe-assembly-primary master cylinder to connector	1		LHD
	CBC	4987	Brake pipe clip-3/way	2		
	CAC	9252	Doubie clip	2		


FLUID RESERVOIR AND HOSES

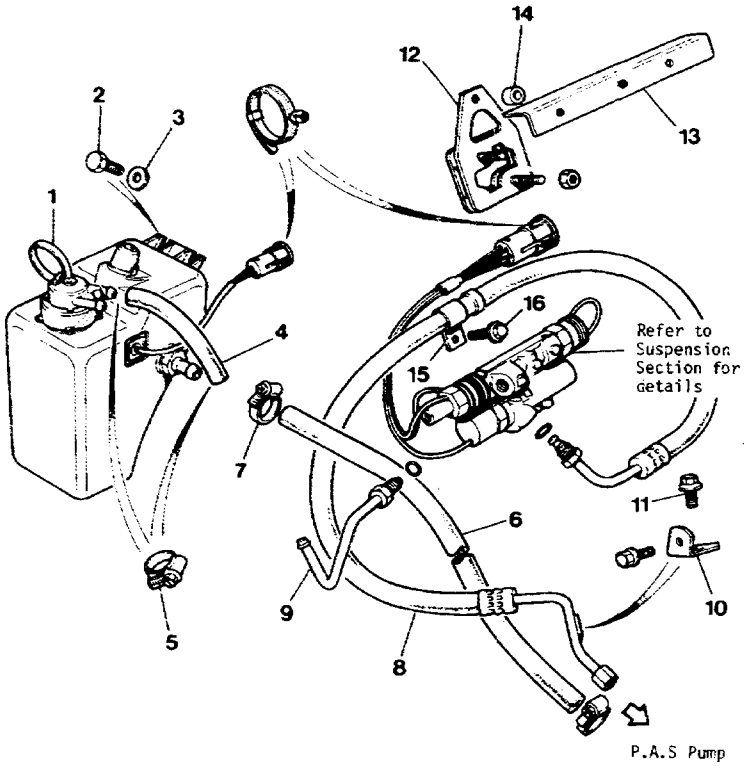

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	6952	Brake fluid reservoir-assembly	1	(1)	
2	GL	106181 J	Hexagon head setscrew-M6	2		
3	WJ	106001 J	Plain washer-M6	2	.....	Reservoir to body
	CAC	9645	Grommet	1		
4	CBC	63131	Hose	1		
5	CBC	64481	Hose clip	2		
6	CBC	5152	Hose	1		
7	EAC	32154	Worm drive hose clip	NLA	.....	Use JHC200101.
7	JHC	200101	Worm drive hose clip-steel	1		
8	CBC	8673	High pressure hose	NLA	.....	Use CCC2637 qty 1 with
					.....	DBC6768 qty 1.
8	CCC	2637	High pressure hose	1		
	DBC	6768	Ride level sensor	1		
	FS	106101 J	Setscrew	2		
3	WC	106041 J	Plain washer	NLA	.....	Pump to valve block
9	CBC	6106	Pipe-assembly-block to hose	NLA		
	NY	106041 J	Nyloc nut	4		
10	CBC	1670	Hose mounting bracket	1		
11	FS	106101	Flange screw	NLA	.....	Use FS106101J.
	FS	106101 J	Setscrew	2		
12	CBC	1669	Valve block mounting	2		
13	DBC	3062	Cable protection cover	NLA		
14	BD	17648	Spacer-0.13"	1		
	FS	106251 J	Flange head screw	1		
15	C	10405	P-clip	1		
16	AZ	610041 J	Self tapping screw	1		
	DBC	3299	Connector clip	2		

CHANGE POINTS:
(1) To (V) 594575


BRAKE BOOSTER AND PEDAL HOUSING-UP TO (V)594575

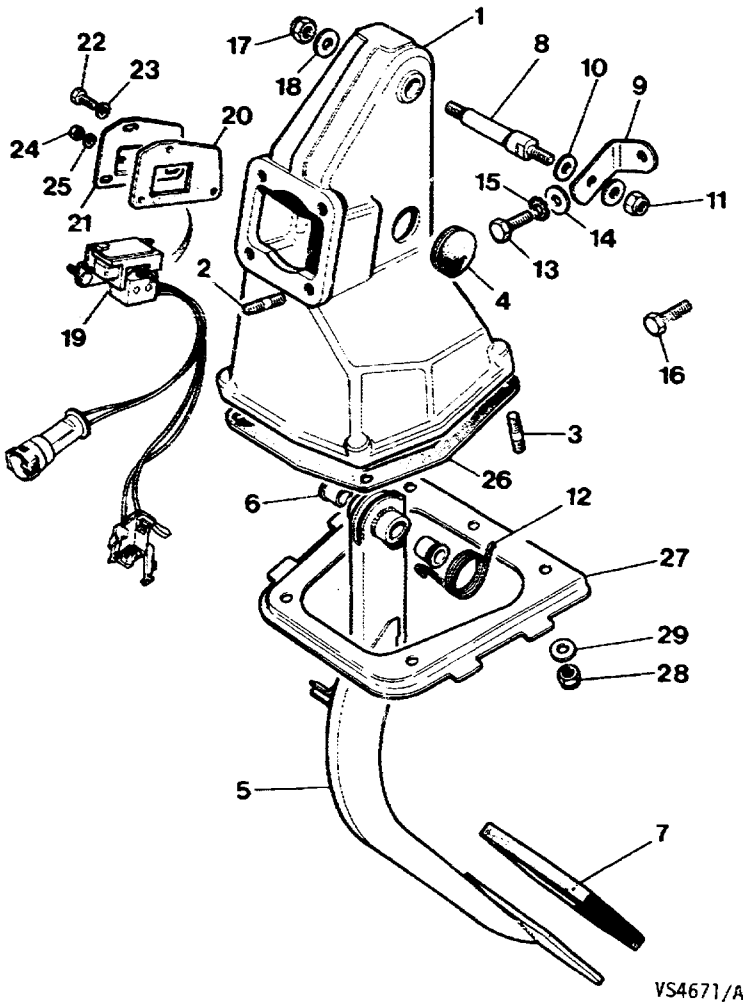

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAC	9766	Brake servo and pedal housing	1	(1)	Automatic
1	CAC	9767	Brake servo and pedal housing	NLA	(1)	Manual
2	TE	108041 J	Stud	2		
3	TE	108051 J	Stud	7		
4	C	22603	Rubber grommet	1		
5	CAC	9768	Brake pedal-assembly	1	(1)	Automatic
5	CAC	9769	BRAKE PEDAL-ASSEMBLY	NLA	(1)	Manual
6	CAC	1742	• Pivot bush	2		
7	C	21515	Brake pedal pad-rubber	1		Automatic
	CAC	9760	Pedal pad rubber-brake	1		Manual
8	CAC	4883	Brake pedal pivot pin	1		
9	CAC	4919	Steady bracket	1		
10	WJ	108001 J	Plain washer	2		
11	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B.
	CBC	5255	Return spring-brake pedal	1		
13	GL	109251 J	Setscrew	NLA		Bracket to body
	WA	108051 J	Washer	NLA		Use WA108051.
						Bracket to body
14	WA	108051	Plain washer-0.3125" diameter	1		
15	WE	108001 J	Serrated washer	1		Bracket to body
16	GL	108251 J	Setscrew	1		
17	NY	110041 J	Locknut	NLA		Use NY110041.
18	WA	110061 J	Plain washer	1		
19	DBC	2959	Clutch switch-assembly	1	(1)	Manual
	DBC	2960	Brake pedal microswitch	1	(1)	
	DBC	3092	Stoplight switch	NLA	(1)	Except speed control
20	CAC	8081	Gasket	1		
21	CAC	8080	Cover plate	1		
22	SH	105101 J	Screw	3		
23	WA	105001 J	Plain washer-M5	3		
24	NH	104041 J	Nut-M4	1		
25	WA	104001 J	Plain washer	1		
26	CAC	4918	Base joint gasket	1		
27	CAC	5074	Reinforcing plate	NLA		
28	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B.
29	FW	105 E	Plain washer	8		

CHANGE POINTS:
(1) To (V) 594575

BRAKE BOOSTER AND PEDAL HOUSING-AUTOMATIC

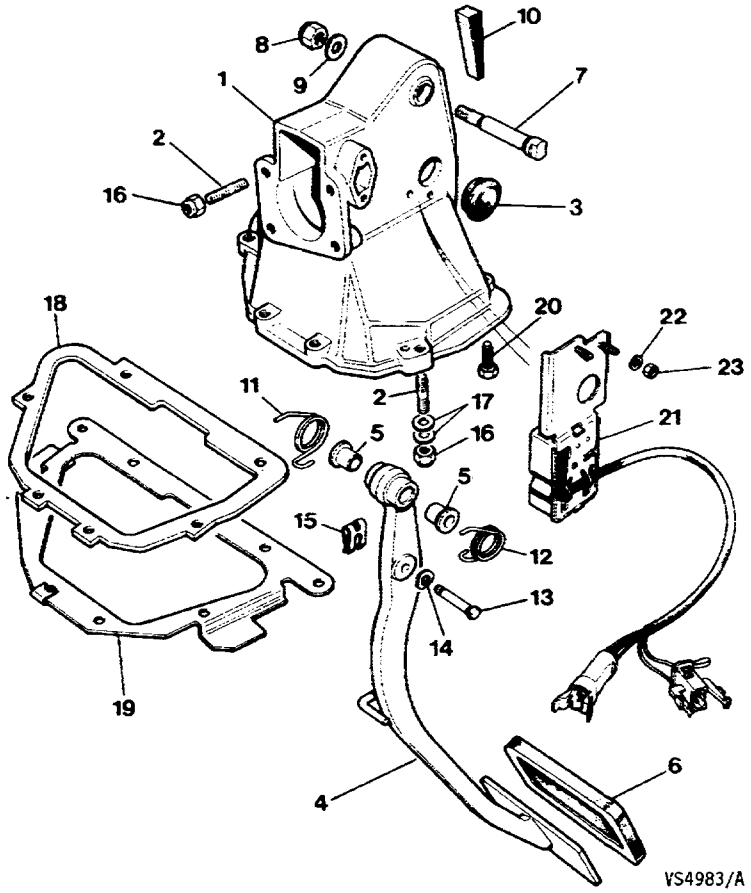


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 7864	Pedal housing	1	(1)	
1	CBC 7342	Pedal housing	NLA	(2)	Use CBC7864.
1	CBC 7864	Pedal housing	1		
2	TE 108051 J	Stud	9		
3	C 22603	Rubber grommet	1		
4	CBC 6588	Brake pedal	1		RHD
4	CBC 6589	Brake pedal	1		LHD
5	CAC 1742	Pivot bush	2		
6	C 21515	Brake pedal pad-rubber	1		
7	CBC 4681	Brake pedal pivot pin	1		
8	NY 110041 J	Locknut	NLA		Use NY110041.
9	WJ 108001 J	Plain washer	1		
10	CBC 6873	Rubber buffer	1		
11	CBC 5202	Return spring-brake pedal	1		
12	CBC 7356	Return spring-brake pedal	1		
13	CBC 2600	Joint pin	NLA		Use CCC2847.
13	CCC 2847	Joint pin	1		
14	WW 108001 J	Wave spring washer	1		
15	C 27328 3Z	Safety clip	1		
16	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B.
	WA 108051 J	Washer	NLA		Use WA108051.
17	WA 108051	Plain washer-0.3125" diameter	8		
18	CBC 5160	Reinforcement plate gasket	1		
19	CBC 9352	Reinforcing plate	NLA	(3)	Use CCC3637.
19	CCC 3637	Reinforcing plate	NLA		Use CCC3638.
19	CCC 3638	Reinforcing plate	1	(4)	
20	GL 106401 J	Bolt	1		
21	DBC 5869	Brake pedal switch	1		Except speed control
21	DBC 5870	Brake pedal switch	1		Speed control
22	NY 104041 J	Nut	2		
23	WA 104001 J	Plain washer	2		
	BD 48967	Grip nut -M6	1		

CHANGE POINTS:

(1) From (V) 594576 To (V) 629285
(2) From (V) 629286
(3) From (V) 594576 To (V) 626160
(4) From (V) 626161


BRAKE BOOSTER AND PEDAL HOUSING-MANUAL

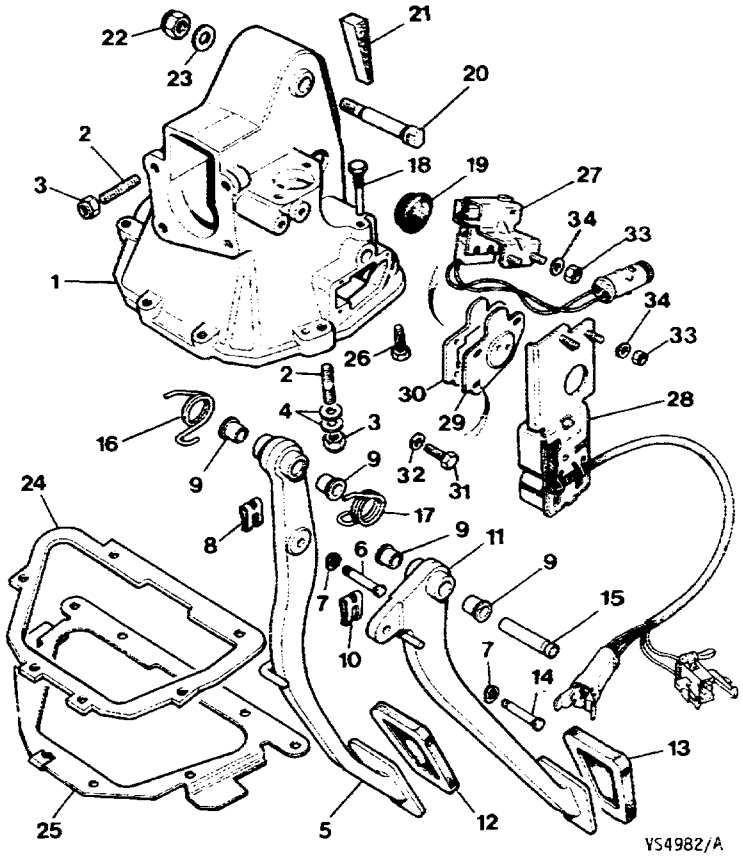

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 7865	Pedal housing	1	(1)	
1	CBC 7344	Pedal housing	1	(2)	
2	TE 108051 J	Stud	9		
3	NY 108051 J	Nyloc nut	NLA		
	WA 108051 J	Washer	NLA		Use WA108051
4	WA 108051	Plain washer-0.3125" diameter	10		
5	CBC 6586	Brake pedal	1		RHD
5	CBC 6587	Brake pedal	1		LHD
6	CBC 2600	Joint pin	NLA		Use CCC2847
6	CCC 2847	Joint pin	1		
7	WW 108001 J	Wave spring washer	1		
8	C 27328 3	Safety clip	NLA		
9	CAC 1742	Pivot bush	4		
10	C 27328 3Z	Safety clip	1		
11	CBC 7592	Clutch pedal	1	(1)	RHD
11	CBC 7593	Clutch pedal	NLA	(1)	LHD
11	CBC 8594	Clutch pedal	1	(2)	RHD
11	CBC 8595	Clutch pedal	1	(2)	LHD
12	CAC 9760	Pedal pad rubber-brake	1		
13	CAC 9759	Pedal pad rubber-clutch	1		
14	J 205 8S	Joint pin	NLA		
15	CAC 4995	Clutch pedal pivot pin	1		
16	CBC 7356	Return spring-brake pedal	1		
17	CBC 5202	Return spring-brake pedal	1		
17	CBC 9843	Return spring-clutch pedal	1		
18	CAC 8451	Locking pin	1		
19	C 22603	Rubber grommet	2		
20	CBC 4681	Brake pedal pivot pin	1		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

BRAKE BOOSTER AND PEDAL HOUSING-MANUAL

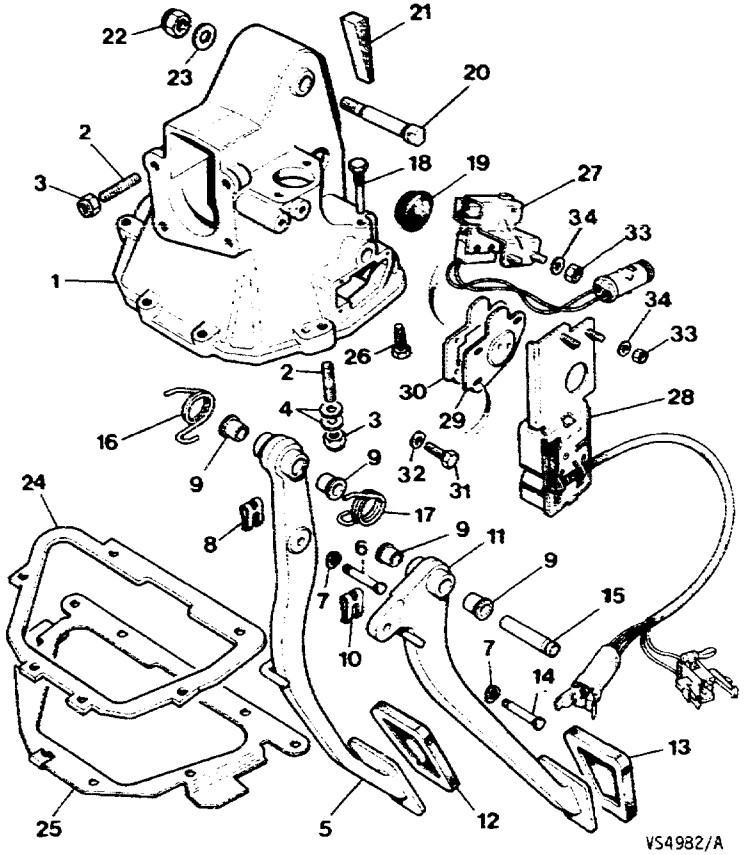

Illus	Part Number	Description	Quantity	Change Point	Remarks
21	CBC 6873	Rubber buffer	1		
21	CBC 9458	Rubber buffer-pedal housing to body	NLA		Use CBC6873
22	NY 110041	Nut	1		
23	WJ 108001 J	Plain washer	2		
24	CBC 5160	Reinforcement plate gasket	1		
25	CBC 9352	Reinforcing plate	NLA	(1)	Use CCC3637
25	CCC 3637	Reinforcing plate	NLA		Use CCC3638
25	CCC 3638	Reinforcing plate	1	(2)	
26	GL 106401 J	Bolt	1		
27	DBC 2959	Clutch switch-assembly	1	(3)	
	CBC 7571	Clutch microswitch mounting plate	NLA	(4)	Use DBC10356
27	DBC 10356	Clutch switch-speed control	1	(4)	
28	DBC 5869	Brake pedal switch	1		Manual;except speed control
28	DBC 5870	Brake pedal switch	1		Speed control;manual
29	CBC 6288	Cover plate	1		
30	CBC 6289	Gasket	1		
31	SH 105101 J	Screw	3		
32	WA 105001 J	Plain washer-M5	3		Mounting plate to cover
33	NH 104041 J	Nut-M4	2		Mounting plate to cover
34	WA 104001 J	Plain washer	2		Mounting plate to cover
	DAC 1906	Ring	1		
	BD 48967	Grip nut -M6	1		

CHANGE POINTS:


(1) From (V) 594576 To (V) 626160

(2) From (V) 626161

(3) From (V) 594576

(4) From (V) 629286


ACTUATION ASSEMBLY AND RESERVOIR-2.9/4.0 LITRE

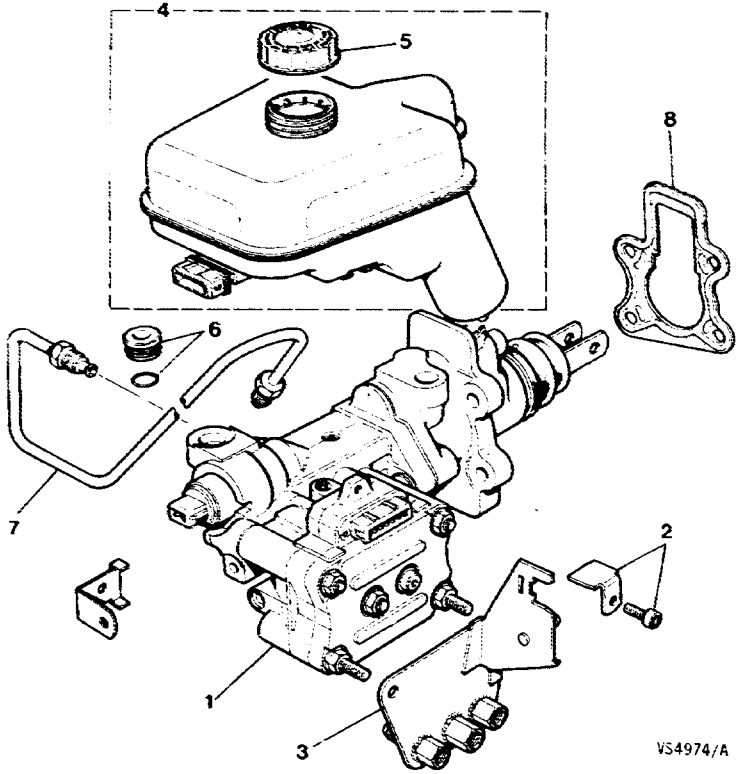

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1882	ACTUATION KIT	1	(1)	RHD
1	JLM	1883	ACTUATION KIT	1	(1)	LHD
2	JLM	1891	• Bracket kit	1		
3	CBC	7508	Mounting bracket	1	(2)	RHD
3	CBC	7509	Mounting bracket	NLA	(2)	LHD
4	JLM	1889	RESERVOIR KIT	1		RHD
4	JLM	1890	RESERVOIR KIT	1		LHD
5	JLM	1469	• Reservoir filler cap	1		
6	JLM	1477	O-ring and seal kit	1		
7	CBC	7875	Hydraulic pipe-pump unit to anti skid unit	1		RHD
7	CBC	6562	Hydraulic pipe-pump unit to anti skid unit	NLA		Use CCC5020
						LHD
7	CCC	5020	Hydraulic pipe-pump unit to anti skid unit	1		LHD
8	CCC	2776	Seal	1		
	C	19706	Distance piece	1		Replaces Washer-WA108051


CHANGE POINTS:
(1) From (V) 594576
(2) From (V) 594576 To (V) 629285

MASTER CYLINDER AND POWER SERVO

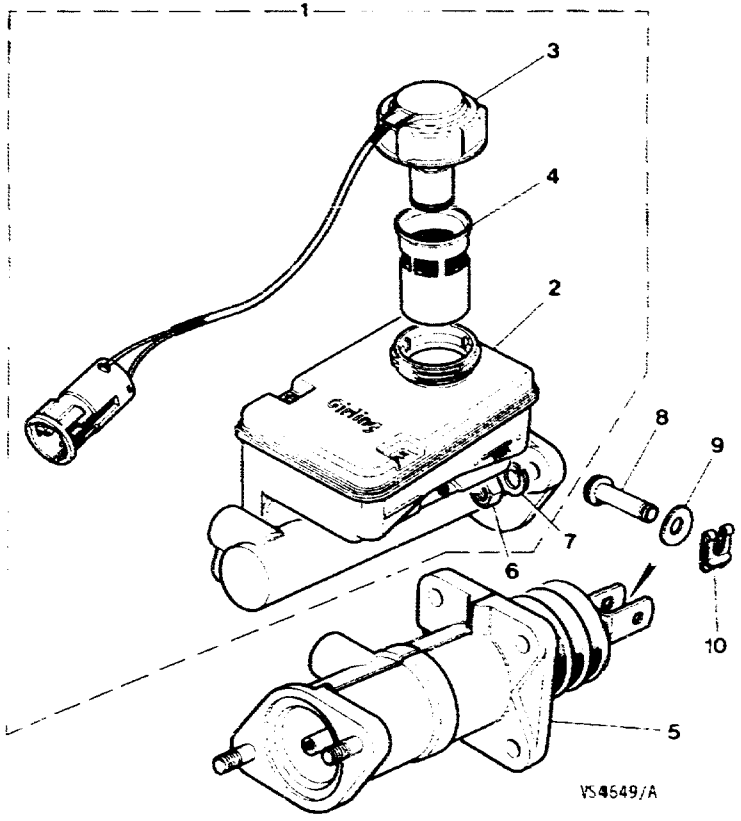

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	805	Master cylinder/reservoir-assembly	1		
2	JLM	807	Reservoir	1		
3	JLM	808	Fluid level warning indicator	NLA		Use DBC2241
3	DBC	2241	Fluid level warning indicator	1		
4	JLM	1021	Master cylinder reservoir filter	1		
5	JLM	804	Power brake servo	NLA		Use JLM1556
5	JLM	1556	Power brake servo	1		
5	JLM	1556	Power brake servo	1		
	JLM	806	Master cylinder service kit	1		
6	NH	108041 J	Flanged nut -M8	NLA		Use FN108041J. Brake servo to housing
6	FN	108041 J	Flanged nut -M8	4		
7	WL	108001 J	Spring washer-M8	4		Brake servo to housing
8	CBC	2600	Joint pin	NLA		Use CCC2847 Brake servo to pedal
8	CCC	2847	Joint pin	1		
9	WW	108001 J	Wave spring washer	1		Brake servo to pedal
10	C	27328 3Z	Safety clip	1		Brake servo to pedal

HANDBRAKE ASSEMBLY AND CABLES-UP TO (V)594575

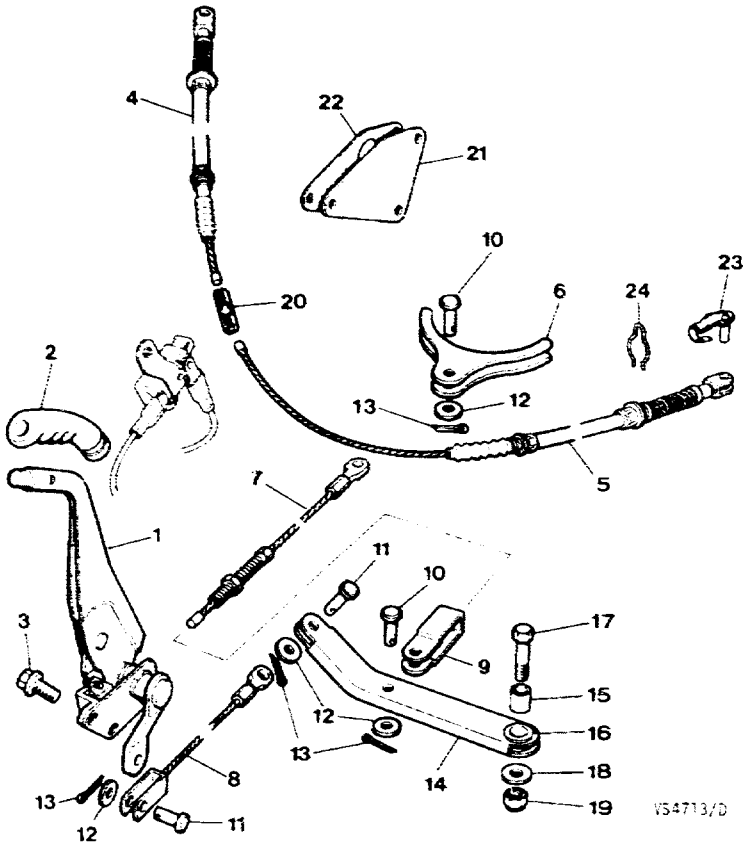

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 1608	Handbrake lever-sub assembly	NLA	(1)	Use CBC9525
1	CBC 9525	Handbrake lever-sub assembly	NLA		Use CCC3511
1	CCC 3511	Handbrake lever-sub assembly	1		RHD
1	CBC 7349	Handbrake lever-sub assembly	NLA	(1)	Use CBC9486
1	CBC 9486	Handbrake lever-sub assembly	1		LHD
2	CBC 412[illegible]	Parkbrake handgrip-leather	NLA	(2)	Use CBC7796
2	CBC 7796	Parkbrake handgrip-leather	1	(3)	Vanden Plas
2	CAC 9926	Parkbrake handgrip-rubber	1	(1)	Except Vanden Plas
2	CBC 2829	Parkbrake handgrip	NLA		Use CBC4127
3	FS 108201 J	Washer faced setscrew-M8 x 20mm	3	(1)	RHD
	JLM 9679	Hexagon head setscrew-coarse	1		LHD
3	FS 108201 J	Washer faced setscrew-M8 x 20mm	2		
4	CAC 8601 1	Handbrake cable-RH rear	1		
5	CAC 8601 2	Handbrake cable-LH rear	1		
6	CAC 8712	Handbrake cable equaliser	1		
7	CAC 8602 1	Intermediate handbrake cable	NLA		Use MMD5151AA
7	MMD 5151AA	Intermediate handbrake cable	1		
8	CAC 8749	Handbrake cable-front	NLA		Use CAC87491
8	CAC 8749 1	Handbrake cable-front	1		
9	CAC 8494	Fork end-assembly	1		
10	PC 108201 J	Clevis pin	2		
11	PC 108291 J	Clevis pin	2		
12	FW 105 EJ	Plain washer	4		
13	PS 104121 J	Split pin	4		
14	CBC 5296	Handbrake lever	1		


CHANGE POINTS

(1) To (V) 594575

(2) To (V) 524374

(3) From (V) 524375 To (V) 594575


HANDBRAKE ASSEMBLY AND CABLES-UP TO (V)594575

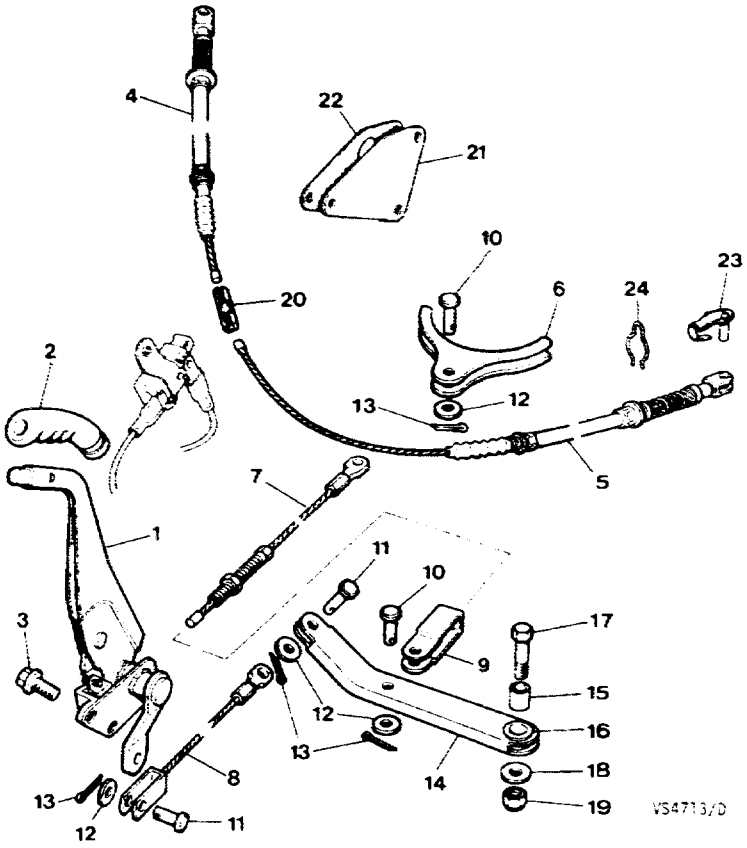

Illus	Part Number		Description	Quantity	Change Point	Remarks
15	CAC	8533	Spacer	1		
16	C	43995	Washer	1		
17	BH	108081 J	Bolt	1		
18	FW	105 E	Plain washer	1		
19	NY	108041 J	Locking nut-M8	NLA		Use JFY10804B
20	CAC	8603	In-line connector	1		
21	CAC	7640	Handbrake blanking plate	1		
22	CAC	8667	Gasket-LH	1	(1)	RHD
22	CAC	8666	Gasket-RH	1		LHD
	SH	108161 J	Setscrew-M8 x 16mm	3		
	WL	108001 J	Spring washer-M8	3		
23	AGU	1393	Spring fix pin	2		
24	AGU	1859 1	Wire clip	2		
	13H	9056 J	Handbrake cable circlip	2		
	CBC	9325	Clip	NLA		Use CCC5644
	CCC	5644	Clip	2		

CHANGE POINTS
(1) To (V) 594575

HANDBRAKE ASSEMBLY AND CABLES-FROM (V) 594576

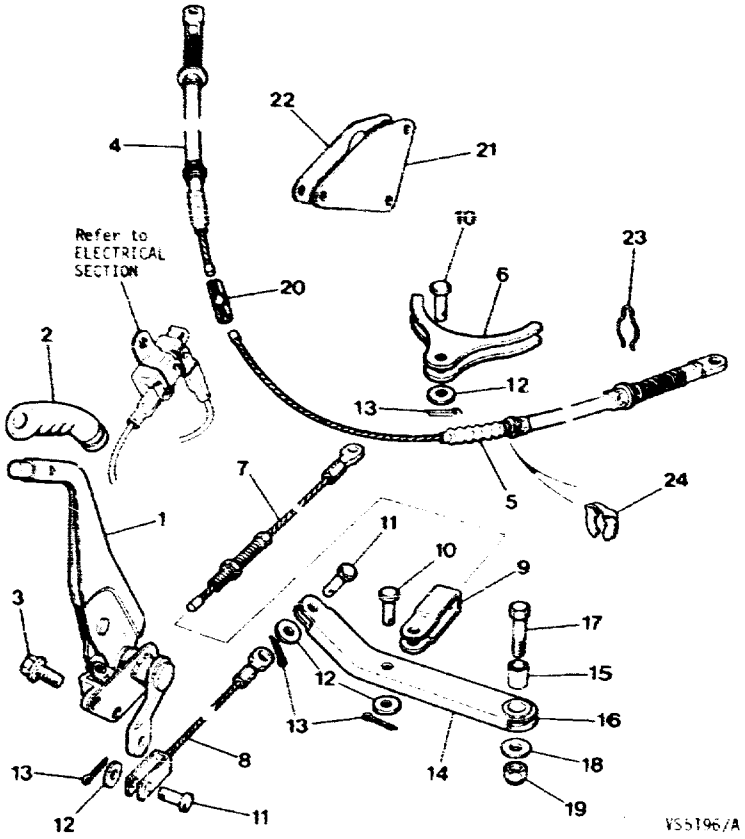


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 9525	Handbrake lever sub assembly	NLA	(1)	Use CCC3511
1	CCC 3511	Handbrake lever sub assembly	1		RHD
1	CBC 9486	Handbrake lever-sub assembly	1		LHD
1	CBC 9950	Handbrake lever-sub assembly	1	(2)	RHD
1	CBC 9951	Handbrake lever-sub assembly	1		LHD
2	CBC 9038	Parkbrake handgrip-assembly-trimmed	NLA		Vanden Plas
2	CCC 3956 SDC	Parkbrake handgrip-assembly-trimmed	NLA	(3)	Majestic
2	CAC 9926	Parkbrake handgrip-rubber	1		Except Vanden Plas
3	FS 108201 J	Washer faced setscrew-M8 x 20mm	2		
	JLM 9679	Hexagon head setscrew-coarse	1		
4	CAC 9498 1	Handbrake cable-RH rear	NLA		Use MMD2742AA
4	MMD 2742AA	Handbrake cable-RH rear	NLA		Use MNA2742AA
4	MNA 2742AA	Handbrake cable-RH rear	1		
5	CAC 9498 2	Handbrake cable-LH rear	NLA		Use MMD2743AA
5	MMD 2743AA	Handbrake cable-LH rear	NLA		Use MNA2743AA
5	MNA 2743AA	Handbrake cable-LH rear	1		
6	CAC 8712	Handbrake cable equaliser	1		
7	CAC 8602 1	Intermediate handbrake cable	NLA		Use MMD5151AA
7	MMD 5151AA	Intermediate handbrake cable	1		
8	CBC 9531	Handbrake cable-front	1		
9	CAC 8494	Fork end-assembly	1		
10	PC 108201 J	Clevis pin	2		
11	PC 108291 J	Clevis pin	2		
12	FW 105 E	Plain washer	4		
13	PS 104 21 J	Split pin	4		
14	CBC 5968	Relay lever-assembly	1		
15	CAC 8533	Spacer	1		
16	C 43995	Washer	1		
17	BH 108081 J	Bolt	1		
18	FW 105 E	Plain washer	1		
19	NY 108041 J	Locking nut-M8	NLA		Use JFY10804B
20	CAC 8603	In-line connector	1		
21	CAC 7640	Handbrake blanking plate	1		
22	CAC 8667	Gasket-LH	1	(4)	RHD
22	CAC 8666	Gasket-RH	1		LHD
	SH 108161 J	Setscrew M8 x 16mm	3		

CHANGE POINTS

(1) From (V) 594576 To (V) 629285
(2) From (V) 629286
(3) From (V) 656799
(4) From (V) 594576


HANDBRAKE SWITCH ASSEMBLY

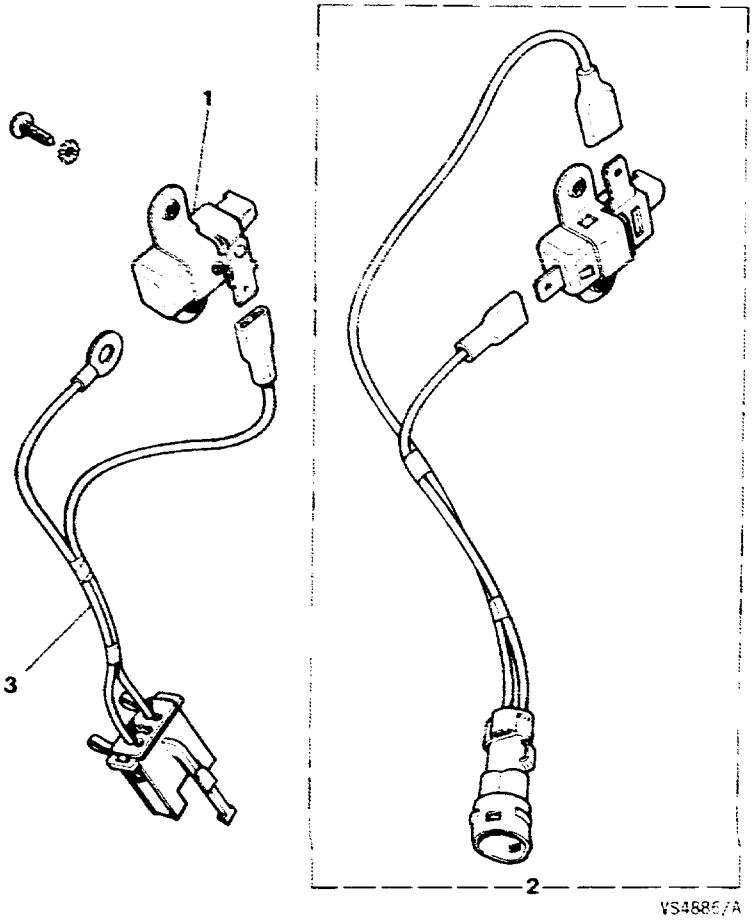

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 1818	Handbrake switch -assembly-RH	1	(1)	Part of Handbrake lever
2	DBC 6292	Handbrake switch/harness-assembly-RH	1	(2)	assembly;RHD
1	DBC 1819	Handbrake switch -assembly-LH	1	(1)	Part of Handbrake lever
2	DBC 6293	Handbrake switch/harness-assembly-LH	1	(2)	assembly;LHD
3	DBC 1735	Harness	NLA	(1)	Part of Handbrake lever assembly
	SE 104121J	Screw	2		
	WA 104001J	Plain washer	1		
	WE 104001J	Shakeproof washer-M4	1		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286


BRAKE PAD LINK LEAD KIT

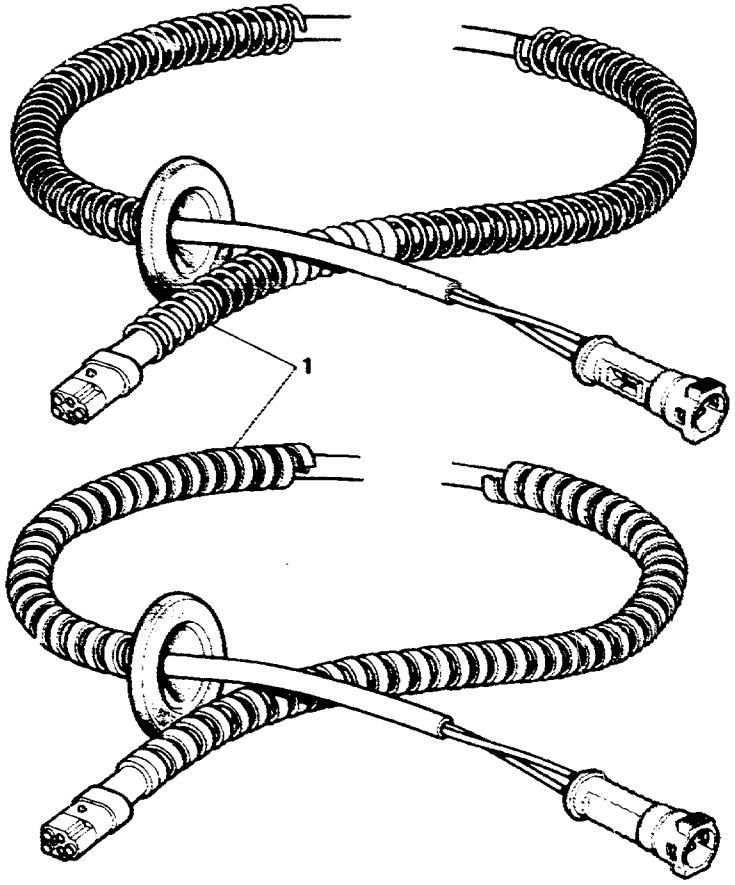

VS5341

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1415	LINK LEAD KIT	1		Ferodo to Jurid conversion;ride level system
	JLM	1704	• Brake pad sensor harness-RH rear axle	1		
	DBC	3435	Brake pad sensor harness-LH rear axle	1		Ferodo to Jurid conversion;ride level system
1	JLM	1416	LINK LEAD KIT	1		Ferodo to Jurid conversion;except ride level system
	JLM	1659	• Brake pad sensor harness-front axle	NLA		Use JLM1958.
	JLM	1656	• Brake pad sensor harness-RH rear axle	NLA		Use DBC3434.
	JLM	1657	• Brake pad sensor harness-LH rear axle	NLA		Use DBC3435.
	JLM	1958	Brake pad sensor harness-front axle	2		Ferodo to Jurid conversion
	DBC	3434	Brake pad sensor harness-RH rear axle	1		Ferodo to Jurid conversion;except ride level system
	DBC	3435	Brake pad sensor harness-LH rear axle	1		Ferodo to Jurid conversion


BRAKE DISC AND CALIPER-FRONT-UP TO (V)594575

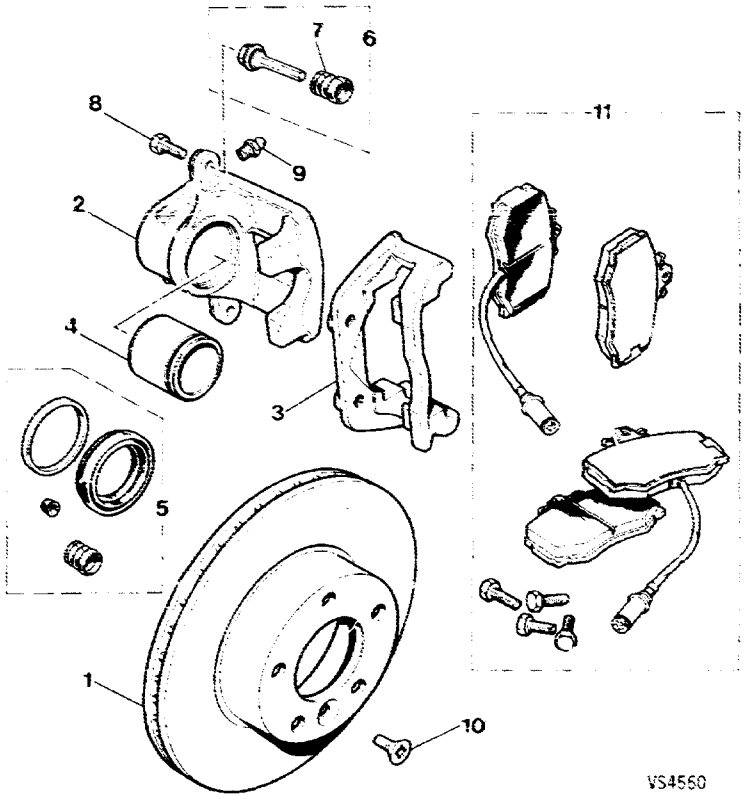

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1305	Brake disc kit-axle set	1	(1)	
2	JLM	783	Caliper housing-RH	1	(1)	
2	JLM	782	Caliper housing-LH	1	(1)	
3	JLM	784	Caliper carrier-assembly	2	(1)	
4	JLM	785	Caliper piston	2	(1)	
5	JLM	788	Caliper repair kit	1	(1)	
6	JLM	789	Guide pin kit	1	(1)	
7	JLM	790	Dust cover kit	1	(1)	
8	JLM	786	Bolt	2	(1)	
9	JLM	787	Bleed screw	2	(1)	
10	SF	605047J	Screw	2	(1)	
11	JLM	577	Brake pad kit-axle set-Ferodo	NLA	(1)	Use JLM11685
	JLM	11685	Brake pad set	1		
	CBC	1346	Special bolt-M12 x 32mm	NLA	(1)	Use CBC8905
						Caliper verticle link
	CBC	8905	Special bolt-M12 x 29.5m.m	NLA		Use JZB100010
						Caliper verticle link
	JZB	100010	Special bolt-caliper to vertical link	2		
	CBC	4588	Disc shield -RH	1	(1)	
	CBC	4589	Disc shield -LH	1	(1)	
	JLM	1281	Brake pad set-axle set-front-Jurid-518	1	(1)	
	JLM	1280	Brake pad set-car set Jurid-518	NLA	(1)	Use JLM1281 qty 1 with JLM1282 qty 1.
	JLM	1282	Brake pad set-rear axle-Jurid-518	1	(1)	

CHANGE POINTS:
(1) To (V) 594575


BRAKE DISC AND CALIPER-FRONT-FROM (V)594576

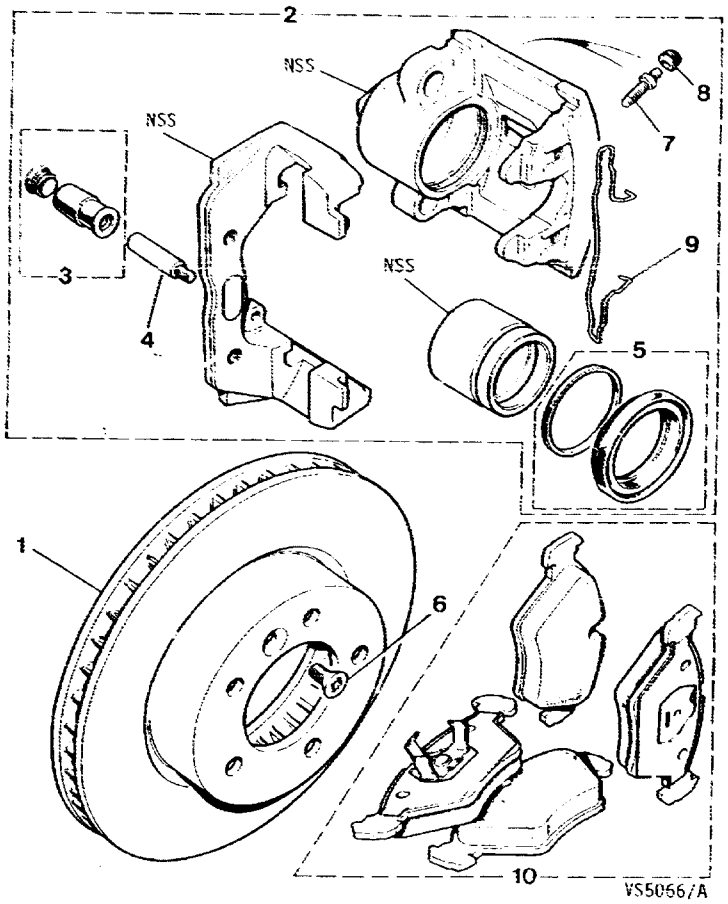

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 1826	Brake disc kit-axle set	NLA	(1)	Use JLM12304.
1	JLM 12304	Brake disc kit	NLA		Use JLM20341.
1	JLM 20341	BRAKE DISC KIT	1	(1)	
	JZB 100010	• Special bolt-caliper to vertical link	4		
	CBC 5248	Disc shield -RH	1	(1)	
	CBC 5249	Disc shield -LH	1	(1)	
2	JLM 1827	Brake caliper-RH front	NLA	(1)	Use JLM11716.
2	JLM 1828	Brake caliper-LH front	NLA	(1)	Use JLM11717.
2	JLM 11716	BRAKE CALIPER-ASSEMBLY-RH FRONT-305MM BRAKE DISC	NLA		Use JLM21469.
2	JLM 11717	BRAKE CALIPER-ASSEMBLY-LH FRONT-305MM BRAKE DISC	NLA		Use JLM21470.
3	JLM 2194	• Bushing kit	1		
4	JLM 2249	• Guiding pin	2		
5	JLM 12123	• Brake caliper seal kit	1		
7	JLM 2192	• Bleed screw	1		
8	JLM 2193	• Dust cap	1		
9	JLM 2196	• Housing clip	1		
	JLM 2191	Brake caliper seal kit	1		
6	SF 605047 J	Screw	2	(1)	Disc to hub
10	JLM 1829	Brake pad kit-front-Jurid	1	(1)	
	DBC 6595	Brake pad wear sensor-LH rear	2		

CHANGE POINTS:
(1) From (V) 594576


BRAKE DISC AND CALIPER-REAR

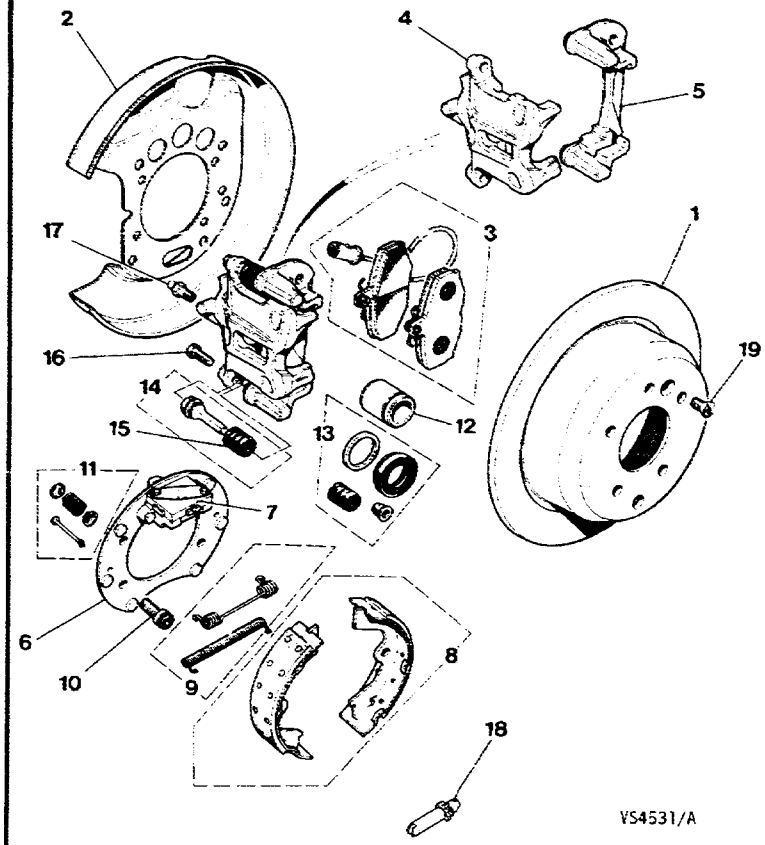

Illus	Part Number		Description	Quantity	Change Point	Remarks
	JLM	1450	Brake disc kit-rear	NLA	(1)	Use JLM12429.
1	JLM	12429	BRAKE KIT	1	(1)	
	CAC	5567	• Brake disc	2		
	JZB	100060	• Bolt and washer	4		
2	CAC	5834	Brake disc cover -RH	NLA		
2	CAC	5835	Brake disc cover -LH	NLA		
3	JLM	603	Brake pad set-rear axle	NLA		Use JLM11686.
4	JLM	791	Caliper housing-assembly-LH	1		
3	JLM	11686	Brake pad set-rear axle-Lucas	1		
4	JLM	792	Caliper housing-assembly-RH	1		
5	JLM	793	Caliper carrier-assembly	NLA		Use JLM11686.
6	JLM	798	TORQUE PLATE-ASSEMBLY	2		
7	JLM	802	• Expander kit	2		
8	JLM	800	Brake shoe kit-axle set	1		
9	JLM	801	Brake shoe return spring kit-axle set	1		
10	SS	110251 PJ	Socket head cap screw	4		Handbrake to hub carrier
	SS	110161 PJ	Socket head bolt	4		Handbrake to hub carrier
11	JLM	799	Shoe hold down kit -axle set	1		
12	JLM	794	Caliper piston	2		
13	JLM	795	Piston service kit-axle set	1		
14	JLM	796	Guide pin kit-axle set	1		
15	JLM	797	Dust cover kit-guide pin	1		
16	JLM	786	Bolt	2		
17	JLM	787	Bleed screw	2		
18	JLM	803	Parkbrake adjuster-assembly	2		
19	SF	605047 J	Screw	2		
3	JLM	1282	Brake pad set-rear axle-Jurid-518	1		

CHANGE POINTS:
(1) To (V) 594575


BRAKE DISC AND CALIPER-REAR-ANTI LOCK BRAKE SYSTEM

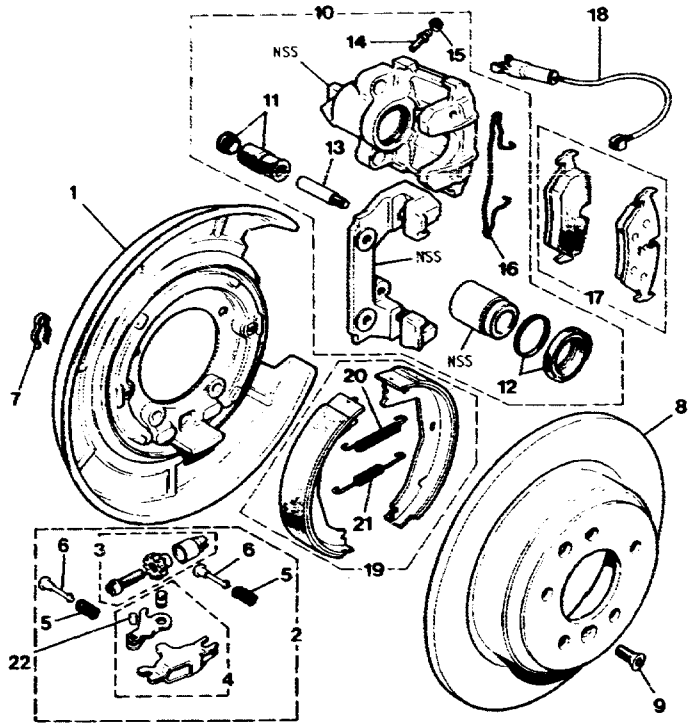

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 2248	Splash shield backplate -RH	NLA	(1)	Use JLM11900 qty 1 with JLM11901 qty 1.
1	JLM 2207	Splash shield backplate -LH	NLA	(1)	Use JLM11901 qty 1 with JLM11900 qty 1.
1	JLM 11900	Splash shield backplate -RH	NLA		Use JLM12338. For early cars, increase 6mm holes to 10mm
1	JLM 11901	Splash shield backplate -LH	NLA		Use JLM12339. For early cars, increase 6mm holes to 10mm
1	JLM 12338	Splash shield backplate -RH	1		
1	JLM 12339	Splash shield backplate -LH	1		
2	JLM 2250	PARKING BRAKE REPAIR KIT	2	(1)	
3	JLM 2201	• Parkbrake adjuster-assembly	2		
4	JLM 2206	• Parking brake lever	2		
5	JLM 2202	• Compression spring	2		
6	JLM 2205	• Parking brake pin	2		
7	JLM 2208	Clip	NLA	(1)	Use CCC5644.
7	CCC 5644	Clip	2		
	CAC 9498 1	Handbrake cable-RH rear	NLA	(1)	Use MMD2742AA.
	CAC 9498 2	Handbrake cable-LH rear	NLA	(1)	Use MMD2743AA.
	MMD 2742AA	Handbrake cable-RH rear	NLA		Use MNA2742AA.
	MMD 2743AA	Handbrake cable-LH rear	NLA		Use MNA2743AA.
	MNA 2742AA	Handbrake cable-RH rear	1		
	MNA 2743AA	Handbrake cable-LH rear	1		
8	JLM 1830	Brake disc kit-axle set	NLA	(1)	Use JLM10601
8	JLM 10601	Brake disc kit-axle set	NLA		Use JLM12424. From axle number 494249; use with Hub-CCC2913
8	JLM 12424	Brake disc kit	1		
9	SF 605047 J	Screw	2		From axle number 494249

CHANGE POINTS:
(1) From (V) 594576


BRAKE DISC AND CALIPER-REAR-ANTI LOCK BRAKE SYSTEM

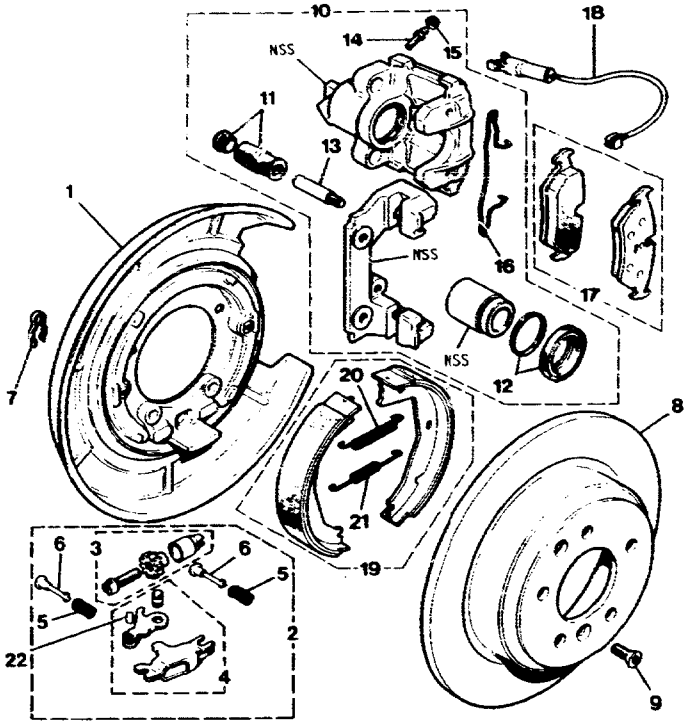

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	JLM 1831	BRAKE CALIPER-ASSEMBLY-RH REAR	NLA	(1)	Use JLM11254 qty 1 with CCC7228 qty 1.
10	JLM 1832	BRAKE CALIPER-ASSEMBLY-LH REAR	NLA	(1)	Use JLM11255 qty 1 with CCC7228 qty 1.
10	JLM 11254	BRAKE CALIPER-ASSEMBLY-RH REAR	NLA		Use JLM12422.
10	JLM 11255	BRAKE CALIPER-ASSEMBLY-LH REAR	NLA		Use JLM12423.
10	JLM 12422	BRAKE CALIPER-KIT-RH REAR	1		
10	JLM 12423	BRAKE CALIPER-KIT-LH REAR	1		
11	JLM 2194	• Bushing kit	2		Part of JLM1831, JLM1832.
12	JLM 2200	• Brake caliper seal kit	2		Part of JLM1831, JLM1832.
13	JLM 2249	• Guiding pin	2		Part of JLM1831, JLM1832.
14	JLM 2192	• Bleed screw	2		Part of JLM1831, JLM1832.
15	JLM 2193	• Dust cap	2		Part of JLM1831, JLM1832.
16	JLM 2196	• Housing clip	2		Part of JLM1831, JLM1832.
	CCC 7228	Brake hose-rear	1		
17	JLM 1833	Brake pad -axle set	1		
18	DBC 5043	Brake pad wear sensor	NLA	(1)	Use DBC6596.
18	DBC 6596	Brake pad wear sensor-RH rear	2		
19	JLM 2209	BRAKE SHOE KIT-AXLE SET	1	(1)	
20	JLM 2204	• Tension spring	2		
21	JLM 2203	• Tension spring	2		
	SS 110251 PJ	Socket head cap screw	4	(1)	Handbrake to hub carrier
	JSS 110301 PJ	Hexagon socket cap screw	4	(1)	Handbrake to hub carrier
	WA 110061 J	Plain washer	4		For SS110251PJ
22	JLM 11004	Brake lever pin	1	(1)	

CHANGE POINTS:
(1) From (V) 594576


ACCUMULATOR AND PUMP

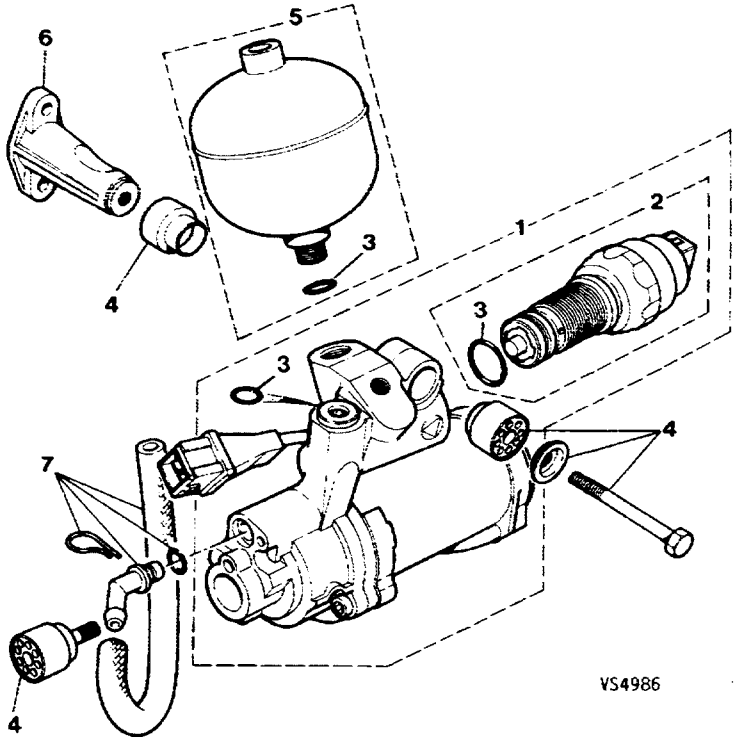

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1884	MOTOR AND PUMP-ASSEMBLY	1	(1)	2.9 Litre;RHD
1	JLM	1884	MOTOR AND PUMP-ASSEMBLY	1		3.6 Litre (XJ40);RHD
1	JLM	1885	MOTOR AND PUMP-ASSEMBLY	1	(2)	2.9 Litre;LHD
1	JLM	1885	MOTOR AND PUMP-ASSEMBLY	1		3.6 Litre (XJ40);LHD
2	JLM	1908	• Pressure and warning switch kit	1		
3	JLM	1477	O-ring and seal kit	1	(2; 1)	
4	JLM	1464	Insulator kit	1	(2; 1)	
5	JLM	1907	Accumulator kit	1	(2; 1)	
6	CBC	7673	Pump mounting bracket	1	(2)	LHD;manual
6	CBC	7673	Pump mounting bracket	1	(2)	LHD;automatic
6	CBC	7673	Pump mounting bracket	1	(1)	RHD;automatic
6	CBC	7674	Pump mounting bracket	NLA	(1)	RHD;manual
7	JLM	1892	Low pressure hose kit-low	1	(2; 1)	

CHANGE POINTS:
(1) From (B)2R 6408 RHD
(2) From (V) 619466 LHD


ANTI LOCK BRAKING SYSTEM ELECTRICS-UP TO (V)594575

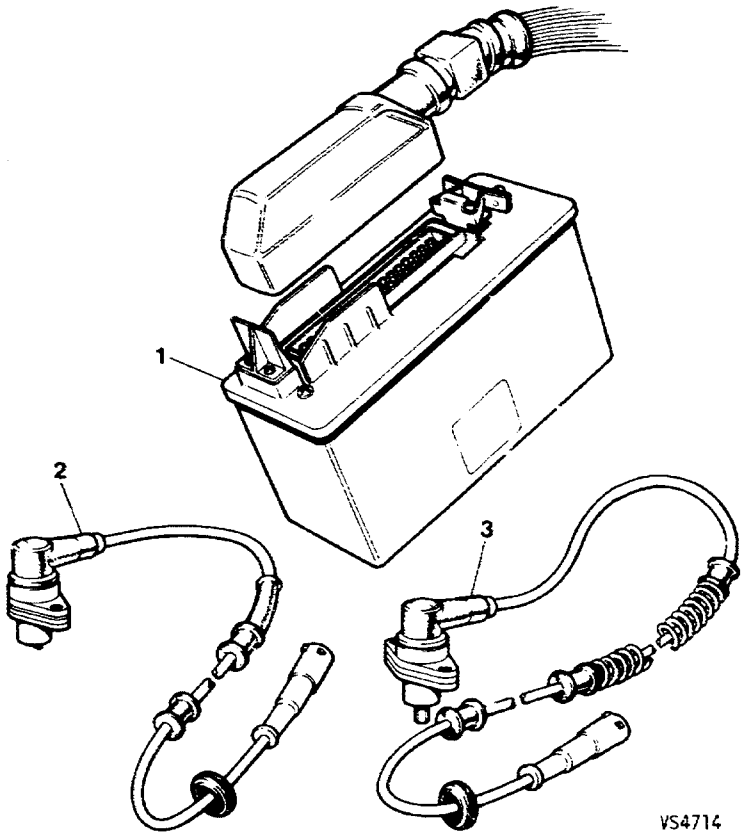

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 1545	Control module-anti lock brake system-new	1	(1)	
1	DBC 1545 E	Control module-anti lock brake system-exchange unit	NLA	(1)	
2	DBC 1546	Speed sensor-RH front	1	(1)	
2	DBC 1557	Speed sensor-LH front	1	(1)	
3	DBC 3647	Speed sensor-rear	2	(1)	
	DBC 2198	Module earth lead	1	(1)	
	DBC 1914	Harness grommet	1	(1)	
	SS 106121 J	Socket head screw -sensor to bracket	2	(1)	

CHANGE POINTS:
(1) To (V) 594575

ANTI LOCK BRAKING SYSTEM ELECTRICS-FROM (V)594576

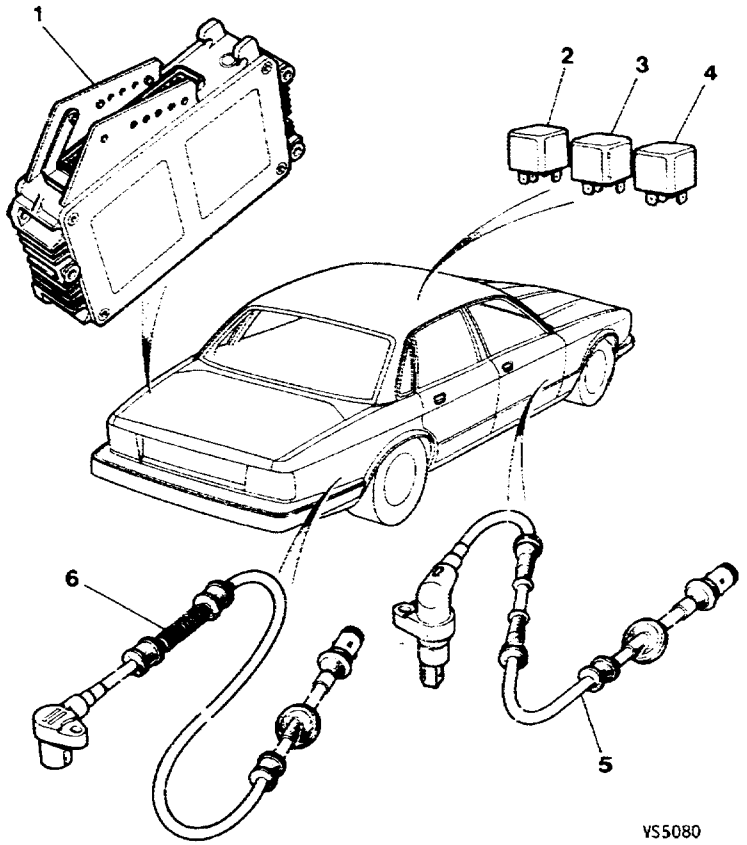

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5422	Control module-anti lock brake system	1	(1)	
2	DBC 2483	Reverse inhibit relay-green	1	(1)	
3	DAC 7151	Main relay-rear seat pan-white.	1	(1)	
4	DAC 4506	Relay-yellow	1	(1)	
5	DBC 5370	Speed sensor-anti lock brake system-RH front	1	(1)	
5	DBC 5371	Speed sensor-anti lock brake system-LH front	1	(1)	
6	DBC 6246	Speed sensor-anti lock brake system-RH rear	1	(1)	
6	DBC 6247	Speed sensor-anti lock brake system-LH rear	1	(1)	
	DBC 6649	Connector bracket	1	(1)	LHD
	SS 106121 J	Socket head screw -sensor to bracket	2	(1)	

CHANGE POINTS:
(1) From (V) 594576

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 J
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 F


GROUP INDEX

AIR CONDITIONING AND HEATER ..... 3. C 02
AIR CONDITIONING VACUUM SYSTEMS ..... 3. D 08
AIR DISTRIBUTION/DUCTING ..... 3. C 08
BLOWER MOTOR ASSEMBLIES ..... 3. C 06
CONDENSER AND RECEIVER DRIER ..... 3. D 07
CONTROL PANEL AND SENSORS ..... 3. D 09
ENGINE BAY COMPONENTS ..... 3. C 09
EVAPORATOR AND HEATER MATRIX ..... 3. D 13
PIPES AND HOSES ..... 3. D 14
AIR CONDITIONING AND HEATER SENSOR ..... 3. D 10
AIR CONDITIONING BLOWER MOTOR ..... 3. C 06
AIR CONDITIONING ELECTRONIC ..... 3. D 11
AIR CONDITIONING UNIT ..... 3. C 02
AIR CONDITIONING VACUUM TANK AND ..... 3. D 08
BLOWER MOTOR ASSEMBLY ..... 3. C 07
COMPRESSOR ADJUSTMENT-2.9 LITRE-UP ..... 3. D 02
COMPRESSOR ADJUSTMENT-2.9 LITRE- ..... 3. D 03
COMPRESSOR ADJUSTMENT-3.2/4.0 LITRE ..... 3. D 06
COMPRESSOR ADJUSTMENT-3.6 LITRE-UP ..... 3. D 04
COMPRESSOR MOUNTING-2.9 LITRE-FROM ..... 3. C 14
COMPRESSOR MOUNTING-2.9 LITRE-FROM ..... 3. C 15
COMPRESSOR MOUNTING-2.9 LITRE-UP TO ..... 3. C 13
COMPRESSOR MOUNTING-3.2/4.0 LITRE ..... 3. C 12
COMPRESSOR MOUNTING-3.6 LITRE-FROM ..... 3. C 16
COMPRESSOR MOUNTING-3.6 LITRE-FROM ..... 3. C 17
COMPRESSOR MOUNTING-3.6 LITRE-UP TO ..... 3. C 18
COMPRESSOR-2.9/3.2/4.0 LITRE ..... 3. C 10
COMPRESSOR-2.9/3.6 LITRE ..... 3. C 11
COMPRESSOR ..... 3. C 09
CONDENSER AND RECEIVER DRIER ..... 3. D 07
CONSOLE CONTROL PANEL ..... 3. D 09
Condenser ..... 3. D 07
Drier bottle-assembly ..... 3. D 07
Electronic control module ..... 3. C 04
Expansion valve ..... 3. D 14
HEATER ASSEMBLY ..... 3. C 03
HEATER MATRIX AND EVAPORATOR ..... 3. D 13
HEATER MATRIX ..... 3. C 05
HEATER VALVE AND HOSES ..... 3. D 15
Heater matrix ..... 3. C 05
REFRIGERANT HOSES ..... 3. D 14
Servo motor-upper and lower ..... 3. C 04
VACUUM HOSES ..... 3. D 16
VENTILATION CONSOLE-REAR ..... 3. C 08
Water temperature switch-black ..... 3. C 05

AIR CONDITIONING/HEATING/VENTILATION

AIR CONDITIONING AND HEATER ASSEMBLIES

AIR CONDITIONING UNIT

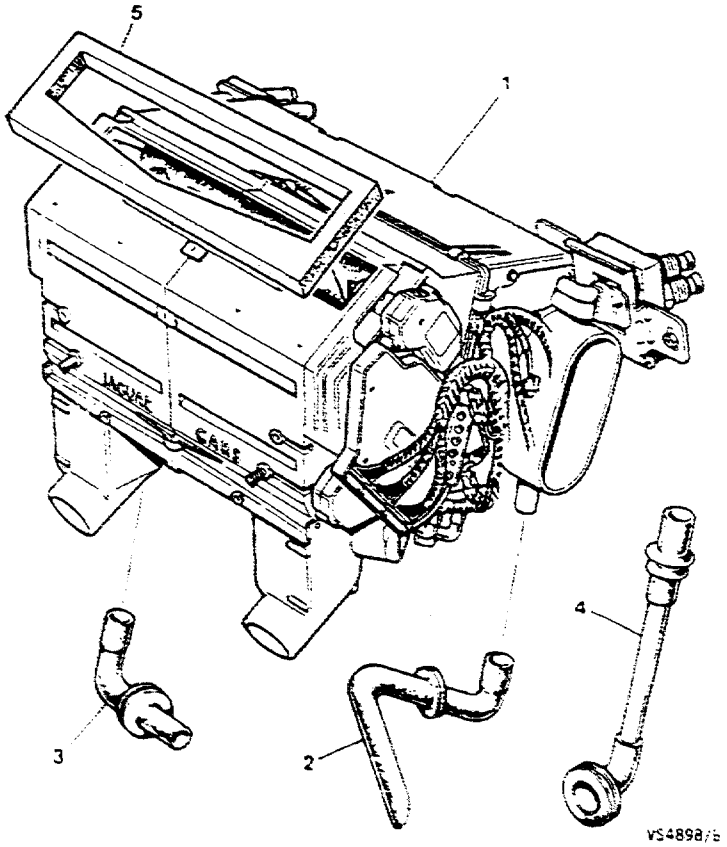

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 2898	Air conditioning unit	NLA	(1)	Use CBC5950
1	CBC 5950	Air conditioning unit	NLA		Use CBC5426
1	CBC 5426	Air conditioning unit	1	(2, 3)	
2	CBC 2239	Evaporator drain tube -RH	1	(2, 3)	
2	CBC 2327	Evaporator drain tube -LH	1	(2, 3)	
3	CBC 7404	Evaporator drain tube -RH	1	(2, 3)	
3	CBC 7405	Evaporator drain tube -LH	NLA	(2, 3)	Use CBC7325
4	CBC 7325	Evaporator drain tube	2	(2, 3)	
	JLM 1806	Air duct foot outlet -RH	1	(2, 3)	
	JLM 1807	Air duct foot outlet -LH	1	(2, 3)	
	CBC 6921	Deflector shield	1	(2, 3)	
	CAC 9716	Air duct seal-duct to facia	1	(2, 3)	
1	CBC 8719	Air conditioning unit	NLA	(4)	
1	CCC 2719	Air conditioning unit	1	(4)	
2	CBC 7325	Evaporator drain tube	2	(4)	
	CAC 9716	Air duct seal-duct to facia	1	(4)	
	BCC 6742	Collar-flexible	2	(4)	
	CAC 8679	Seal	1	(4)	

CHANGE POINTS

(1) To (V) 556850


(2) From (V) 556851

(3) To (V) 594575

(4) To (V) 605856

HEATER ASSEMBLY


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 5425	Heater assembly	1	(1)	
1	CBC 8721	Heater assembly	1	(2)	
1	CCC 2720	Heater assembly	1	(3)	
	JLM 1837	Heater harness	1	(1)	
	CCC 2722	Heater harness	1	(4)	
2	CAC 9716	Air duct seal duct to facia	1		

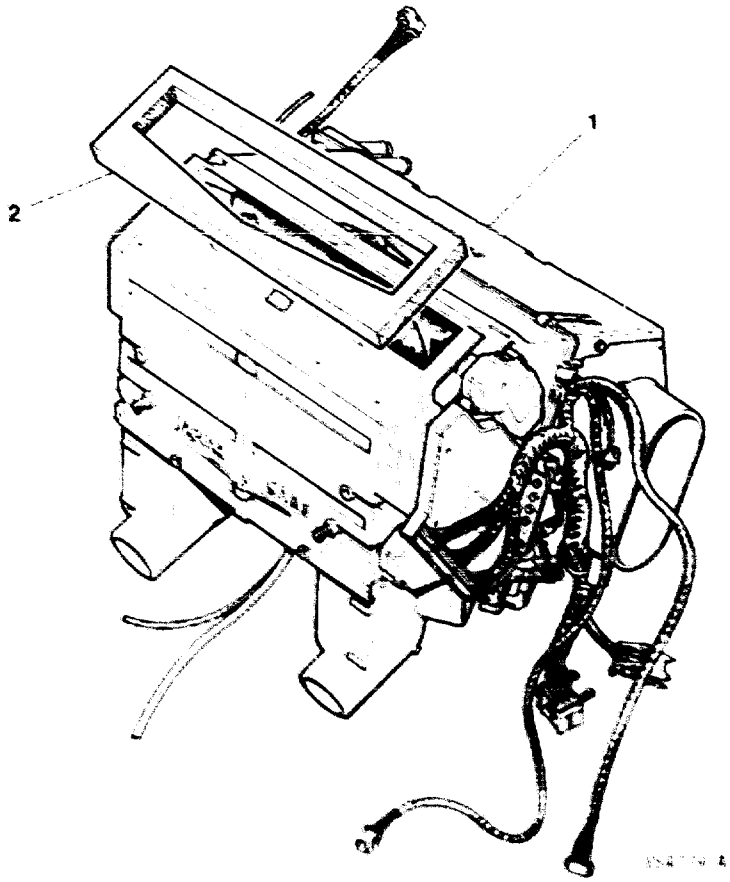


CHANGE POINTS
(1) To (V) 5945?5
(2) From (V) 5945?6 To (V) 607110
(3) From (V) 607111
(4) From (V) 5945?6

HEATER UNIT ELECTRONIC COMPONENTS

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 752	Electronic control module	NLA		Use DBC4309
1	DBC 4309	Electronic control module	NLA		Use JLM2211
1	JLM 2211	Electronic control module air conditioning	1		
2	JLM 11209	Servo motor upper and lower	NLA		
3	CBC 5659	Upper potentiometer	1		
4	CBC 5660	Lower feed potentiometer	1		

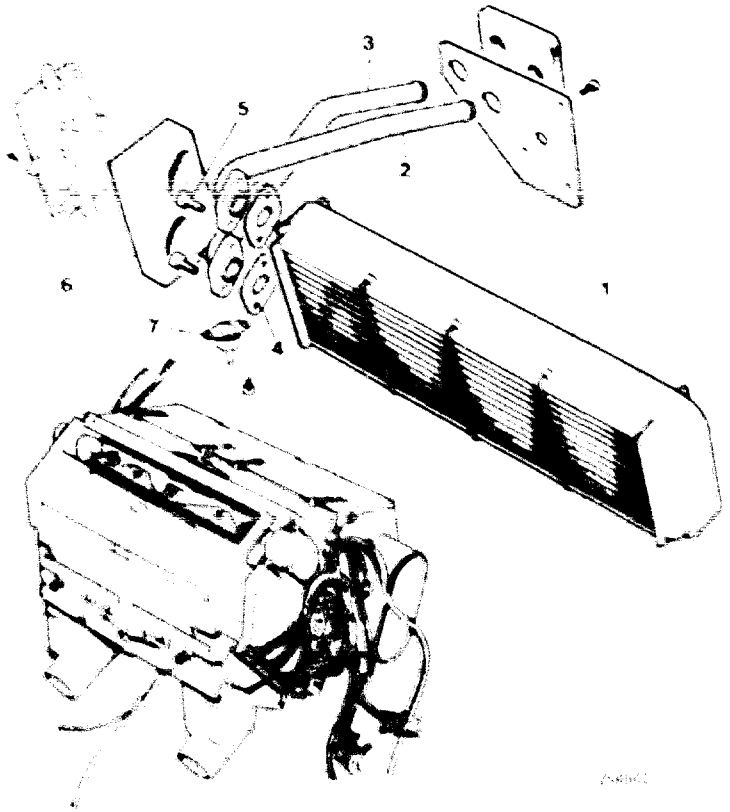


HEATER MATRIX

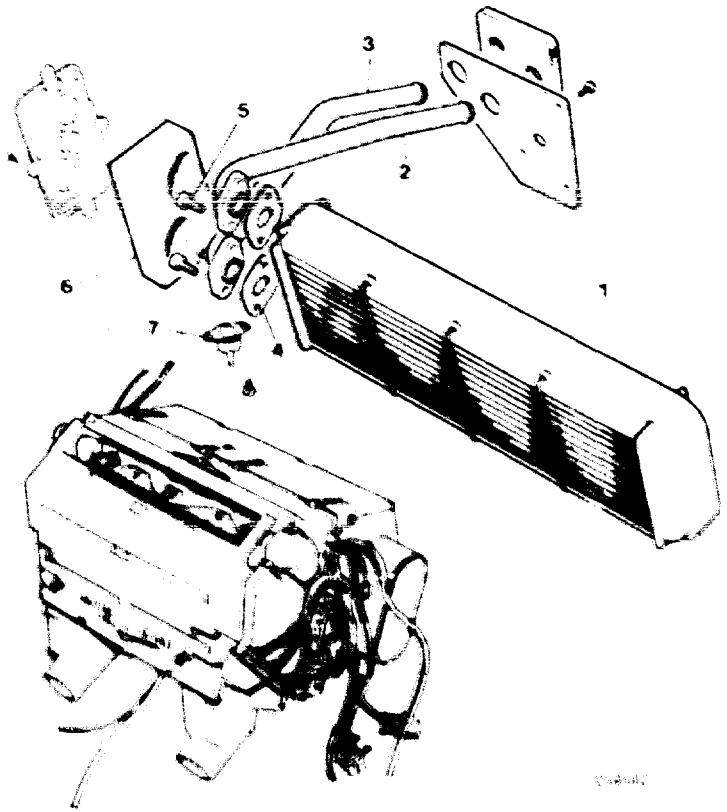

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	756	Heater matrix	NLA		Use JLM11343.
1	JLM	11343	Heater matrix	1		
2	JLM	757	Inlet pipe-gasket sealing	1		
3	JLM	758	Outlet pipe-gasket sealing	1		
2	CBC	4965	Inlet pipe-O-ring sealing	1		
3	CBC	4966	Outlet pipe-O-ring sealing	1		
4	JLM	759	Gasket	2		
	CBC	4967	O-ring	2		
5	JLM	760	Screw	4		
6	JLM	761	Seal	1		
7	JLM	763	Water temperature switch-red	1	(1)	
7	JLM	2121	Water temperature switch-black	1	(2)	

AIR CONDITIONING BLOWER MOTOR

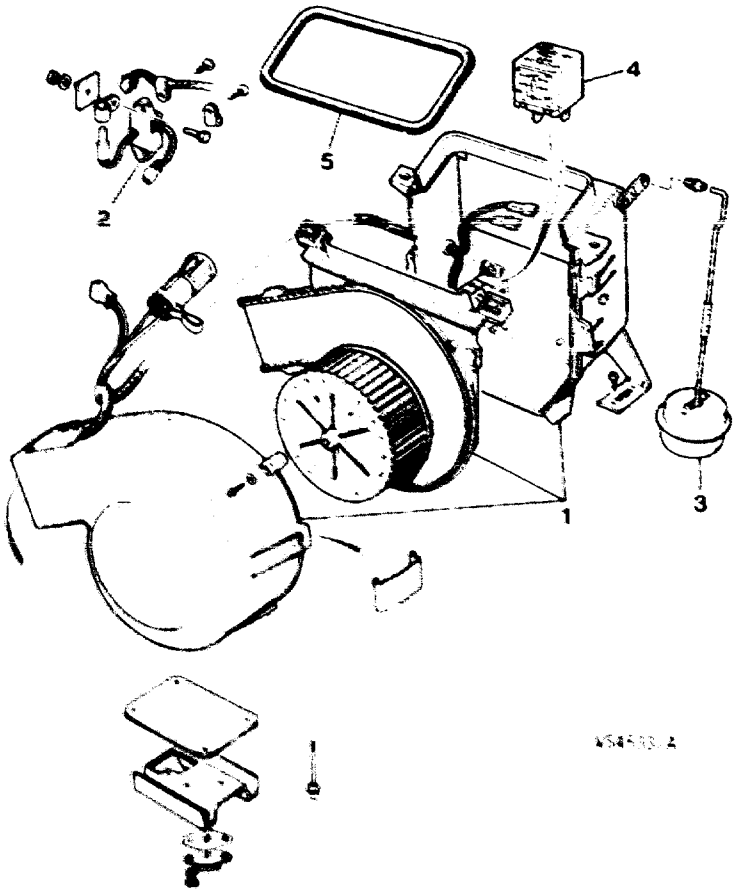


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	2695	Air conditioning blower motor-assembly-RH	NLA	(1)	Use CBC5498K.
1	CBC	5498 K	Air conditioning blower motor	NLA		Use CBC5498.
1	CBC	5498	Air conditioning blower motor-assembly-RH	NLA	(2)	Use CBC8966.
1	CBC	8966	Air conditioning blower motor-assembly-RH	1	(3)	
1	CCC	2856	Air conditioning blower motor-assembly-RH	NLA	(4)	Use CCC5400.
1	CCC	5400	Air conditioning blower motor-assembly-RH	1	(5)	
1	CBC	2696	Air conditioning blower motor-assembly-LH	NLA	(1)	Use CBC2696K.
1	CBC	2696 K	Air conditioning blower motor	NLA		Use CBC5499K.
1	CBC	5499 K	Air conditioning blower motor-assembly-LH	NLA		Use CBC5499.
1	CBC	5499	Air conditioning blower motor-assembly-LH	NLA	(2)	Use CBC8967.
1	CBC	8967	Air conditioning blower motor-assembly-LH	1	(3)	
1	CCC	2857	Air conditioning blower motor-assembly-LH	NLA	(4)	Use CCC5401.
1	CCC	5401	Air conditioning blower motor-assembly-LH	1	(5)	
	JLM	1131	Air temperature sensor	1		
	JLM	770	Vacuum actuator	1	(1)	
	JLM	1955	Vacuum actuator	1	(6)	
	JLM	771	Air conditioning relay	2		
	CAC	8001	Seal	2		
	CBC	5724	Bolt	NLA		
	BD	542 13	Washer	NLA		

CHANGE POINTS

(1) To (V) 556850
(2) From (V) 556851 To (V) 591101
(3) From (V) 591102 To (V) 629285
(4) From (V) 629286 To (V) 657854
(5) From (V) 657855
(6) From (V) 556851

BLOWER MOTOR ASSEMBLY

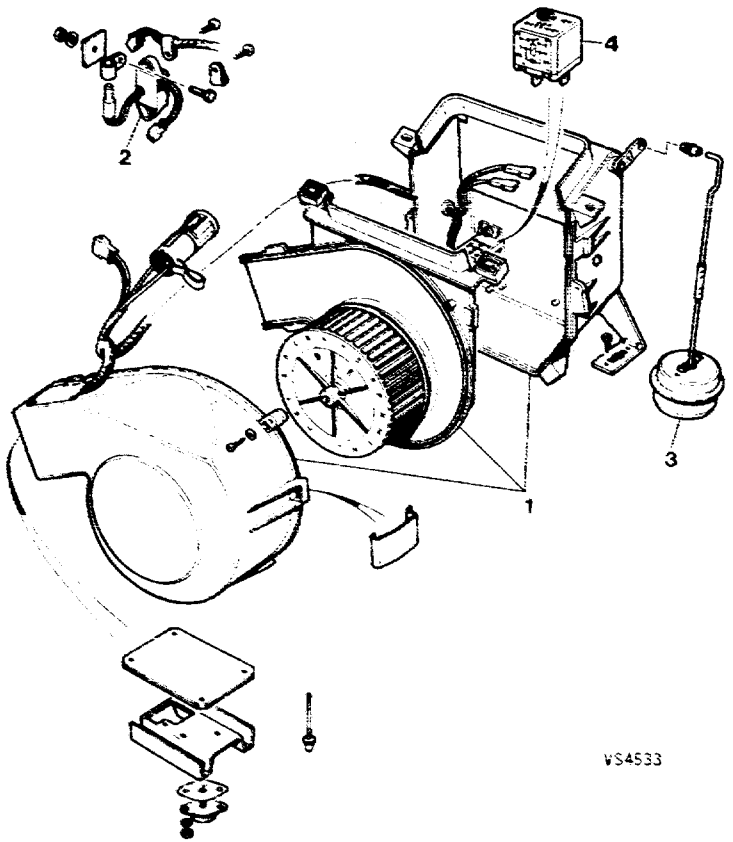


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 2697	Heater blower motor-assembly-RH	NLA	(1)	Use CBC5500.
1	CBC 5500	Heater blower motor-assembly-RH	NLA	(2)	Use CBC8968.
1	CBC 8968	Heater blower motor-assembly-RH	1	(3)	
1	CCC 5398	Heater blower motor-assembly-RH	1	(4)	
1	CBC 2698	Heater blower motor-assembly-LH	NLA	(1)	Use CBC5501.
1	CBC 5501	Heater blower motor-assembly-LH	NLA	(2)	Use CBC8969.
1	CBC 8969	Heater blower motor-assembly-LH	1	(3)	
1	CCC 5399	Heater blower motor-assembly-LH	1	(4)	
2	JLM 1131	Air temperature sensor	1		
3	JLM 770	Vacuum actuator	2	(1)	
3	JLM 1955	Vacuum actuator	2	(5)	
4	JLM 771	Air conditioning relay	2		
	CAC 8001	Seal	2		
	CBC 5724	Bolt	NLA		
	BD 542 13	Washer	NLA		

CHANGE POINTS.

(1) To (V) 556850
(2) From (V) 556851 To (V) 591101
(3) From (V) 591102 To (V) 629285
(4) From (V) 629286
(5) From (V) 556851

VENTILATION CONSOLE-REAR

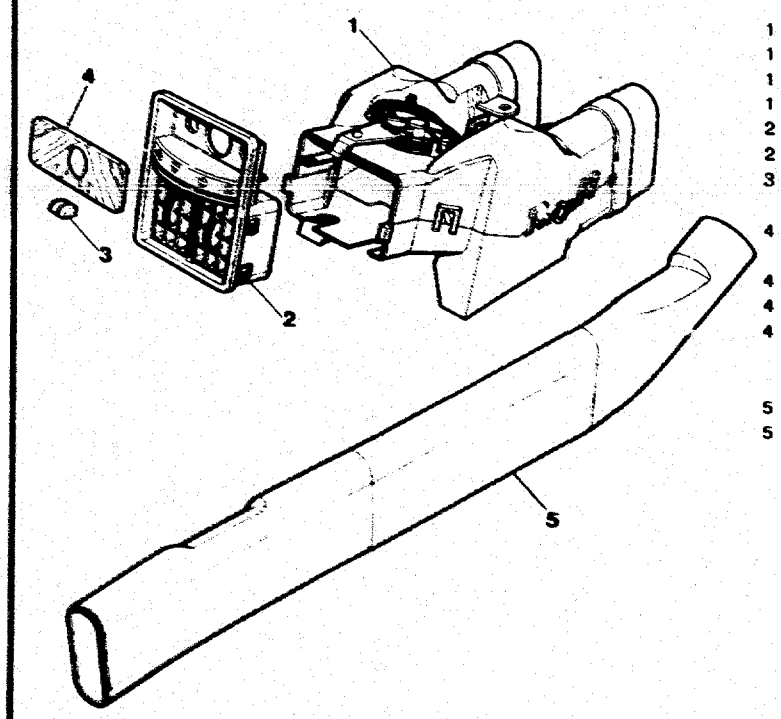


VS4781

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BBC 5154	Air distribution box	NLA	(1)	Use MMB6831AA qty 1 Authority 206116 - Use CCC 6864 for RH or CCC 6865 for LH with CCC6864 qty 1 or CCC6865 qty 1 Authority 206116 - Use CCC 6864 for RH or CCC 6865 for LH..
1	MMB 6831AA	Air distribution box	1		
	CCC 6864	Console air duct-RH rear	1		
	CCC 6865	Console air duct-LH rear	1		
1	BEC 1348	Air distribution box	NLA	(2)	Use CBC9370.
1	CBC 9370	Air distribution box	NLA		Use CCC6683.
1	CCC 6683	Air distribution box	NLA		Use MMB6831AA.
1	MMB 6831AA	Air distribution box	1		
2	BBC 7940	Air distribution box vent	1		Except Canada and USA
2	BEC 7716 LEG	Air distribution box vent	1		Canada;USA;XJ6
3	BBC 5172 LEG	Vent operating knob	1		
	BEC 9502 LEG	Blanking panel	NLA	(3)	
4	BBC 6050	Vent finisher-figured walnut	NLA		Use GMB7880BA.
					XJ6;except Canada and USA
4	GMB 7880BA	Vent finisher-figured walnut	1		XJ6;except Canada and USA
4	BEC 8368	Vent finisher-figured walnut	1		Canada;USA;XJ6
4	BBC 6054	Vent finisher-burr walnut	NLA		
	JLM 1244	Veneer kit-console extension/rear vent finishers-burr walnut	1		Daimler/VDP
5	BBC 9188	Ventilation air duct -RH	1		
5	BBC 9189	Ventilation air duct -LH	1		
	AGU 2091	Push on fix	2		


CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286
(3) From (V) 633171

COMPRESSOR

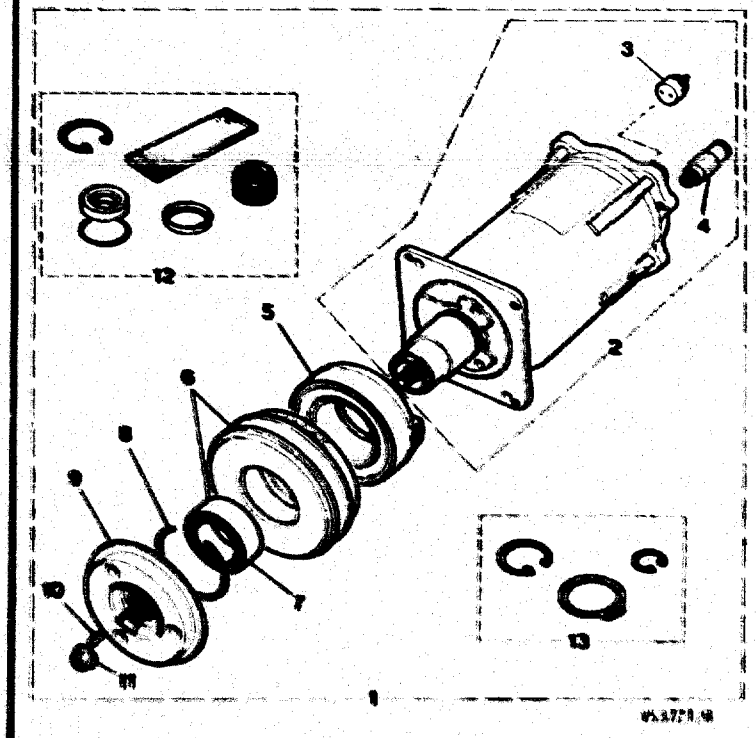

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	3386	COMPRESSOR-ASSEMBLY	1	(1; 2).....	Except Canada and USA
2	AEU	1698	• Compressor	NLA		
	AEU	1690 J	• O-ring	1		
3	AEU	1688 J	• High side low pressure switch	1		
4	AEU	1689 J	• Pressure relief valve	1		
5	AEU	1695	Clutch housing	1	(1; 2).....	Except Canada and USA
6	AEU	1696	PULLEY-ASSEMBLY	1	(1; 2).....	Except Canada and USA
7	AEU	1687	• Compressor clutch bearing	1		
8	AEU	1858	Retaining ring	1	(1; 2).....	Except Canada and USA
9	AEU	1692	Drive clutch	1	(1; 2).....	Except Canada and USA
10	AEU	1694 J	Key	1	(1; 2).....	Except Canada and USA
11	AEU	1693	Nut	1	(1; 2).....	Except Canada and USA
12	AEU	1699	Seal kit	1	(1; 2).....	Except Canada and USA
13	AEU	1697	Retaining ring kit	1	(1; 2).....	Except Canada and USA
	AEU	1691 J	Compressor oil-1 quart bottle	NLA	(1; 2).....	Use JLM1428.
					.....	Except Canada and USA
	JLM	1428	Compressor oil-250ml bottle	1		


CHANGE POINTS
(1) To (E) 1018578 2.9 Litre
(2) To (E) 1088888 3.6 Litre (XJ40)

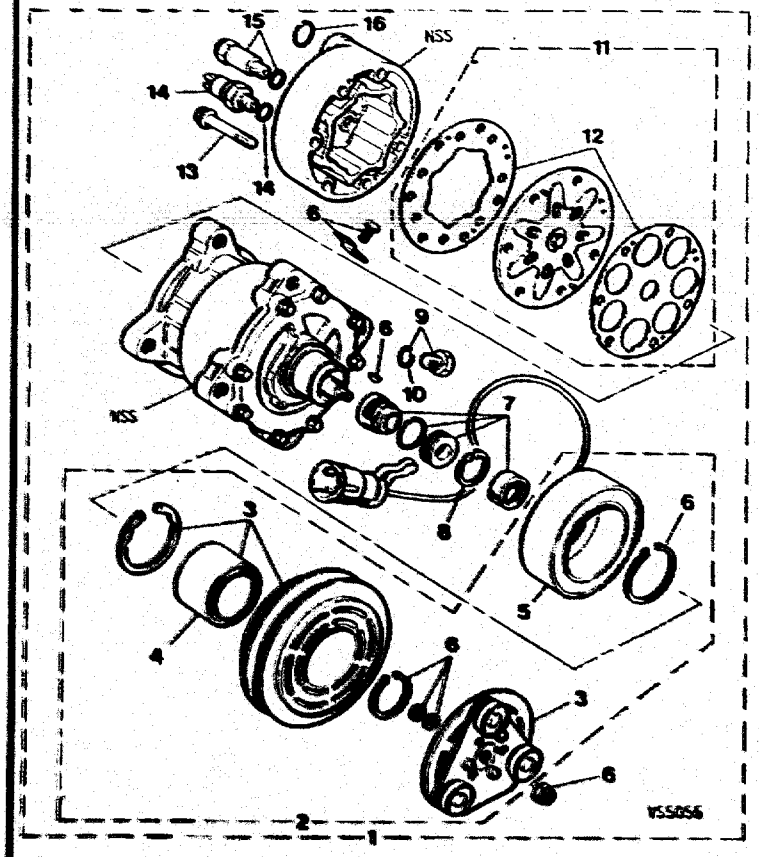

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 6522	COMPRESSOR AND CLUTCH	1	(1)	
1	CBC 9845	COMPRESSOR AND CLUTCH -ASSEMBLY	NLA	(2)	Use CCC4929.
1	CCC 4929	COMPRESSOR AND CLUTCH -ASSEMBLY	1	(3)	
2	JLM 2131	• COMPRESSOR CLUTCH-ASSEMBLY	1		
3	JLM 2132	• • Armature and rotor	1		
4	JLM 2134	• • Compressor clutch bearing	1		
5	JLM 2133	• • Field coil	1		
6	JLM 2135	• Clutch service kit	1		
7	JLM 2137	• Seal service kit	1		
8	JLM 2138	• Snap ring	1		
9	JLM 2140	• Oil filler plug	NLA		
10	JLM 1256	• O-ring	1		
11	JLM 2136	• Valve plate-assembly	1		
12	JLM 2139	• Gasket kit	1		
13	JLM 2141	• Screw	NLA		
14	JLM 1260	• Cut out switch	1		
15	JLM 2142	• High pressure relief valve	1		
16	C 35864	• O-ring	2		
	JLM 1428	Compressor oil-250ml bottle	A/R	(4)	

CHANGE POINTS
(1) From (V) 594576 To (V) 629285
(2) From (V) 629286 To (E) 155335
(3) From (E) 155336
(4) From (V) 594576

COMPRESSOR-2.9/3.6 LITRE

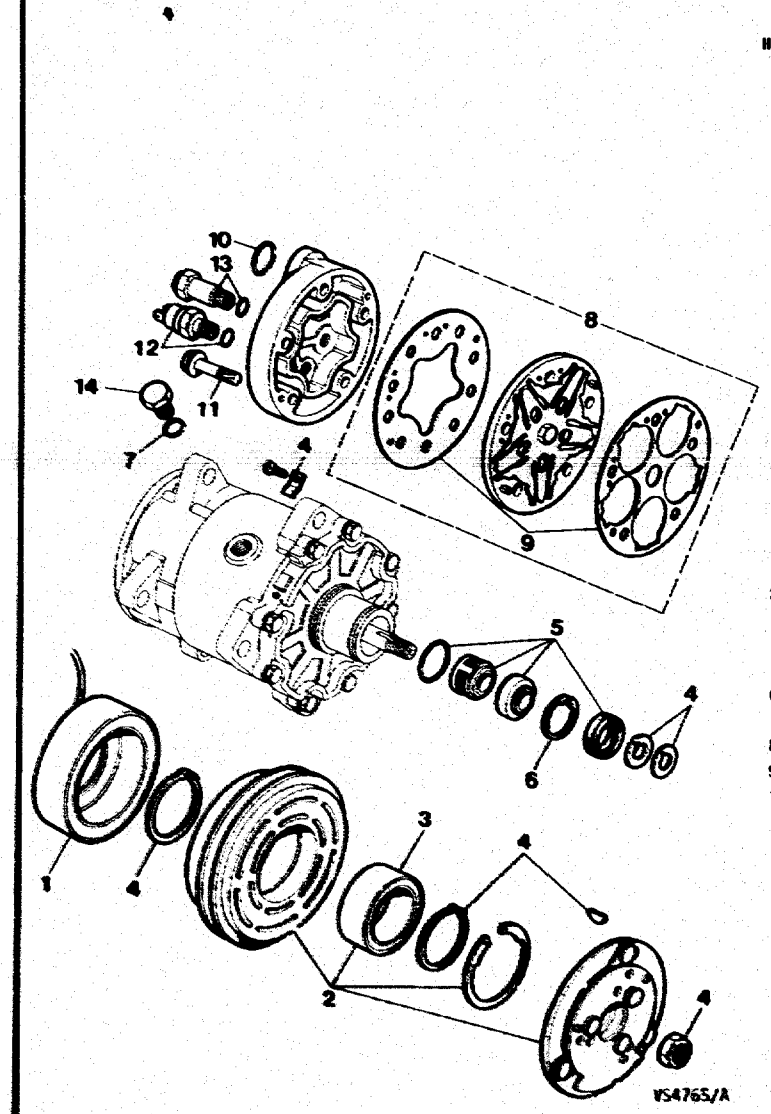

Illus	Part Number		Description	Quantity	Change Point	Remarks
	EAC	7698	COMPRESSOR AND CLUTCH	NLA	(1; 2; 3)..	Use CBC6522.
						Part of-EAC7698
	CBC	6522	COMPRESSOR AND CLUTCH	1		Part of-CBC6522
	JLM	1174	• Clutch-assembly	1		Part of EAC7698.
1	JLM	1177	• Coil	1		Part of EAC7698.
2	JLM	1259	• Rotor-assembly	1		Part of EAC7698.
3	JLM	1176	• Compressor clutch bearing	NLA		Part of EAC7698.
4	JLM	1175	• Clutch accessory kit	1		Part of EAC7698.
5	JLM	1178	• Seal kit	1		Part of EAC7698.
6	JLM	1255	• Snap ring	NLA		Part of EAC7698.
7	JLM	1256	• O-ring	1		
8	JLM	1257	• Valve plate-assembly	1		Part of EAC7698.
9	JLM	1258	• Gasket kit	1		Part of EAC7698.
10	C	35864	• O-ring	2		
11	JLM	1328	• Screw	5		Part of EAC7698.
12	JLM	1260	• Cut out switch	1		
13	JLM	1261	• Compressor relief valve	1		Part of EAC7698.
14	JLM	2129	• Oil filter plug	1		Part of EAC7698.
	JLM	2131	• COMPRESSOR CLUTCH-ASSEMBLY	1		Part of CBC6522.
	JLM	2132	• • Armature and rotor	1		
3	JLM	2134	• • Compressor clutch bearing	1		
	JLM	2133	• • Field coil	1		
	JLM	2135	• Clutch service kit	1		Part of CBC6522.
	JLM	2137	• Seal service kit	1		Part of CBC6522.
6	JLM	2138	• Snap ring	1		Part of CBC6522.
	JLM	2140	• Oil filler plug	NLA		Part of CBC6522.
8	JLM	213	• Valve plate-assembly	1		Part of CBC6522.
9	JLM	2139	• Gasket kit	1		Part of CBC6522.
11	JLM	2141	• Screw	NLA		Part of CBC6522.
	JLM	2142	• High pressure relief valve	1		Part of CBC6522.
	JLM	1428	Compressor oil-250ml bottle	1	(1; 2; 3)	

CHANGE POINTS:

(1) To (V) 594575

(2) From (E) 101880 2.9 Litre; Canada; USA


(3) From (E) 109970 3.6 Litre (XJ40); Canada; USA

AIR CONDITIONING/HEATING/VENTILATION

ENGINE BAY COMPONENTS

COMPRESSOR MOUNTING-3.2/4.0 LITRE

Illus	Part Number	Description	Quantit,	Change Point	Remarks
1	EAC 9503	Mounting bracket	1	(1; 2)	
2	FB 108061 J	Washer faced bolt	2	(1; 2)	
3	FB 110071 J	Washer faced bolt-M10 x 35mm-lower	4	(1; 2)	
4	BH 110301 J	Bolt	1	(1; 2)	
5	FB 108081 J	Bolt	2	(1; 2)	
6	EAC 9717	Pivot bracket	2	(1; 2)	
7	WA 110061 J	Plain washer	4	(1; 2)	
8	NH 110041 J	Nut-M10	4	(1; 2)	
9	WA 110061 J	Plain washer	1	(1; 2)	
10	NY 110041 J	Locknut	NLA	(1; 2)	Use NY110041.

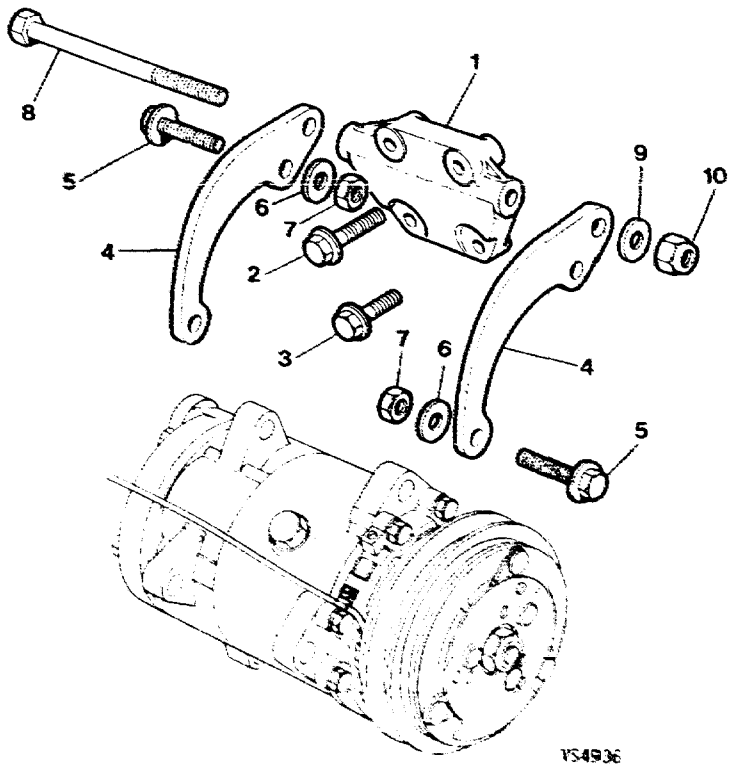


CHANGE POINTS

(1) From (E) 107821

(2) From (E) 166424


COMPRESSOR MOUNTING-2.9 LITRE-UP TO (E)101879

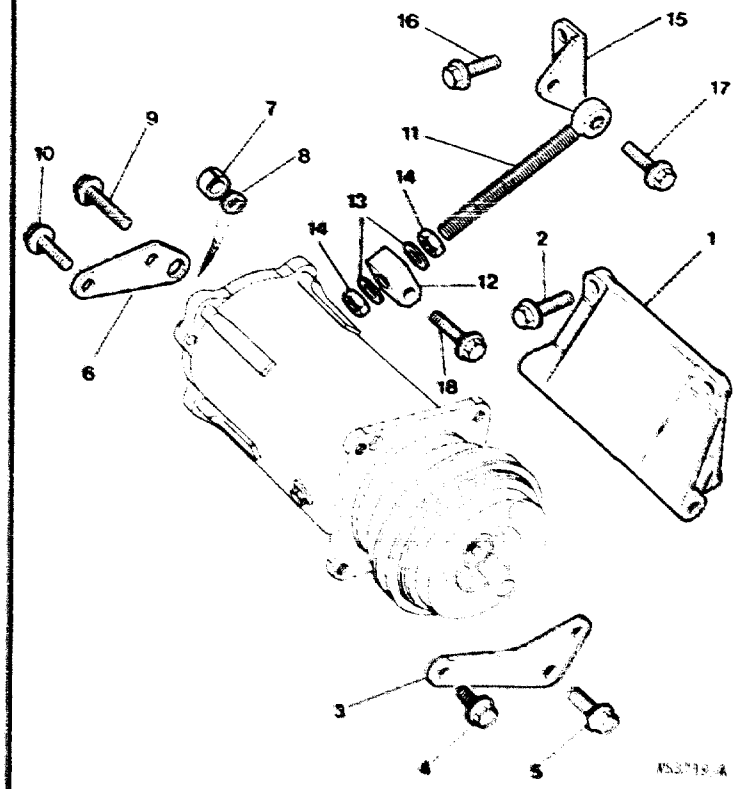

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 6601	Mounting bracket	NLA	(1; 2)	Except Canada and USA
2	FB 108061J	Washer faced bolt	4	(1; 2)	Except Canada and USA
3	EAC 3864	Pivot bracket	1	(1; 2)	Except Canada and USA
4	FS 110301J	Setscrew	1	(1; 2)	Except Canada and USA
5	FS 108121J	Flange screw	2	(1; 2)	Except Canada and USA
6	EAC 6642	Pivot bracket-rear	1	(1; 2)	Except Canada and USA
7	EAC 3866	Distance tube-pivot bracket to mounting bracket	1	(1; 2)	Except Canada and USA
	WB 110061J	Washer	1	(1; 2)	Except Canada and USA
8	EAC 3867	Clamp washer-pivot bracket to mounting bracket	1	(1; 2)	Except Canada and USA
9	FS 110351J	Setscrew	1	(1; 2)	Except Canada and USA
10	FS 110251J	Setscrew	2	(1; 2)	Except Canada and USA
11	EAC 7301	Adjustment bolt	1	(1; 2)	Except Canada and USA
12	C 36120	Adjustment block	1	(1; 2)	Except Canada and USA
13	JLM 304	Lock washer-0.375" i/d	NLA	(1, 2)	Use FG106X.
					Except Canada and USA
13	FG 106X	Lock washer-0.375" i/d -imperial	2		
14	NH 606041J	Hexagonal nut	NLA	(1, 2)	Use JLM9685.
					Except Canada and USA
14	JLM 9685	Hexagonal nut-0.375" unf	2		
15	EAC 7786	Adjustment bolt bracket	NLA	(1, 2)	Except Canada and USA
16	FS 108201J	Washer faced setscrew-M8 x 20mm	2	(1; 2)	Except Canada and USA
17	FB 108071J	Washer faced bolt	1	(1, 2)	Except Canada and USA
18	FS 108251J	Washer faced setscrew-M8 x 25mm	1	(1, 2)	Except Canada and USA

CHANGE POINTS
(1) To (E) 101879 2.9 Litre
(2) To (E) [illegible] 3.6 Litre (Canada)

COMPRESSOR MOUNTING-2.9 LITRE-FROM (E)101880 UP TO (E)107820

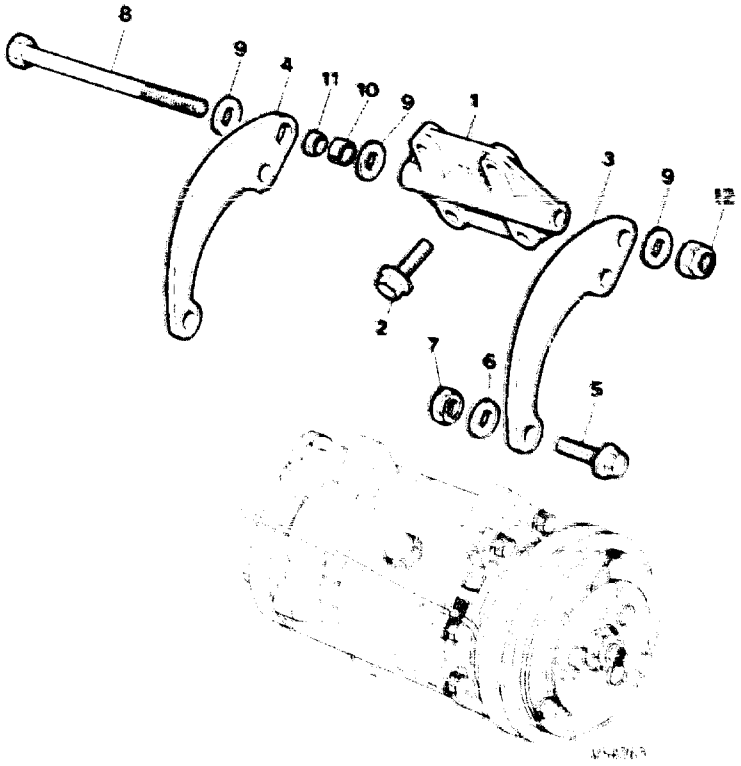

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9703	Mounting bracket	NLA	(1, 2)	
2	FB	108061 J	Washer faced bolt	4	(1, 2)	
3	EAC	9626	Pivot bracket-front	1	(1, 2)	
4	EAC	9625	Pivot bracket-rear	NLA	(1, 2)	
5	FB	110071 J	Washer faced bolt-M10 x 35mm-lower	4	(1, 2)	
6	WA	110061 J	Plain washer	4	(1, 2)	
7	NH	110041 J	Nut-M10	4	(1, 2)	
8	BH	110301 J	Bolt	1	(1, 2)	
9	WA	110061 J	Plain washer	3	(1, 2)	
10	EAC	3866	Distance tube pivot bracket to mounting bracket	1	(1, 2)	
11	EAC	3867	Clamp washer pivot bracket to mounting bracket	1	(1, 2)	
12	NY	110041 J	Locknut	NLA	(1, 2)	Use NY110041


CHANGE POINTS:

(1) From (E) [illegible] to (E) [illegible] Except Canada, USA

(2) From (E) [illegible] to (E) [illegible] Canada, USA

COMPRESSOR MOUNTING-2.9 LITRE-FROM (E)107821

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 9503	Mounting bracket	1	(1; 2)	
2	FB 108061 J	Washer faced bolt	2	(1; 2)	
3	FB 108081 J	Bolt	2	(1; 2)	
4	EAC 9717	Pivot bracket	2	(1; 2)	
5	FB 110071 J	Washer faced bolt-M10 x 35mm-lower	4	(1; 2)	
6	WA 110061 J	Plain washer	4	(1; 2)	
7	NH 110041 J	Nut-M10	4	(1; 2)	
8	BH 110301 J	Bolt	1	(1; 2)	
9	WA 110061 J	Plain washer	1	(1; 2)	
	NY 110041 J	Locknut	NLA	(1; 2).....	Use NY110041.
10	NY 110041	Nut	1		

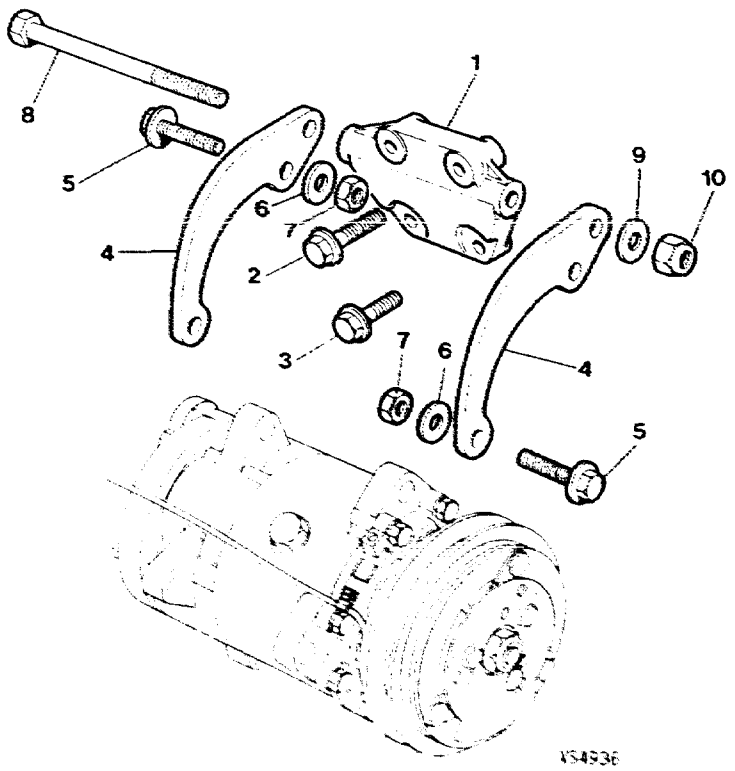


CHANGE POINTS

(1) From (E) 107821

(2) From (E) 166424


COMPRESSOR MOUNTING-3.6 LITRE-FROM (E)109970 UP TO (E)166423

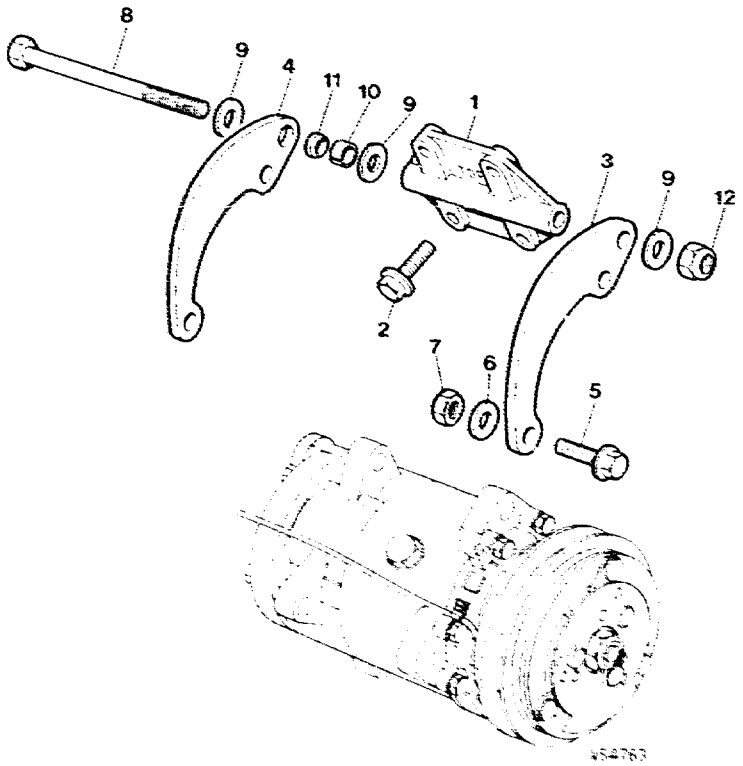

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	FB	110071 J	Washer faced bolt-M10 x 35mm-lower	4	(1; 2)	
2	BH	110301 J	Bolt	1	(1; 2)	
3	EAC	9703	Mounting bracket	NLA	(1; 2)	
4	FB	108061 J	Washer faced bolt	4	(1; 2)	
5	EAC	9626	Pivot bracket-front	1	(1; 2)	
6	EAC	9625	Pivot bracket-rear	NLA	(1; 2)	
7	WA	110061 J	Plain washer	3	(1; 2)	
8	NH	110041 J	Nut-M10	4	(1; 2)	
9	WA	110061 J	Plain washer	4	(1; 2)	
10	EAC	3866	Distance tube-pivot bracket to mounting bracket	1	(1; 2)	
11	EAC	3867	Clamp washer-pivot bracket to mounting bracket	1	(1; 2)	
12	NY	110041 J	Locknut	NLA	(1; 2)	Use NY110041.

CHANGE POINTS
(1) From (E) 101880 To (E) 107820 2.9 Litre Canada USA
(2) From (E) 109970 To (E) 166423 3.6 Litre (XJ40) Canada USA


COMPRESSOR MOUNTING-3.6 LITRE-FROM (E)165424

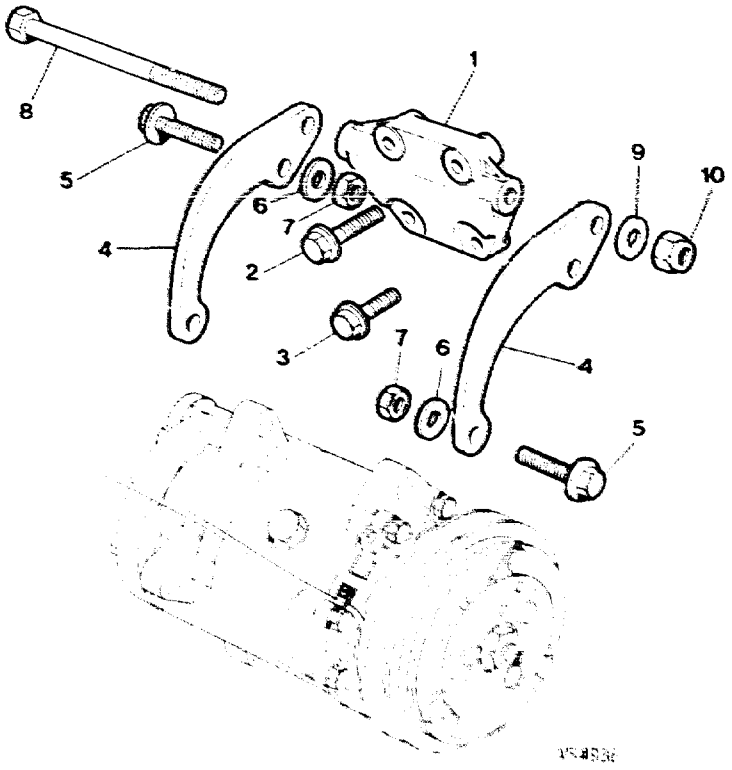

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9503	Mounting bracket	1	(1; 2)	
2	FB	108061 J	Washer faced bolt	2	(1; 2)	
3	FB	108081 J	Bolt	2	(1; 2)	
4	EAC	9717	Pivot bracket	2	(1; 2)	
5	FB	110071 J	Washer faced bolt-M10 x 35mm-lower	4	(1; 2)	
6	WA	110061 J	Plain washer	4	(1; 2)	
7	NH	110041 J	Nut-M10	4	(1; 2)	
8	BH	110301 J	Bolt	1	(1; 2)	
9	WA	110061 J	Plain washer	1	(1; 2)	
	NY	110041 J	Locknut	NLA	(1; 2).....	Use NY110041.
10	NY	110041	Nut	1		

CHANGE POINTS

COMPRESSOR MOUNTING-3.6 LITRE-UP TO (E)109969

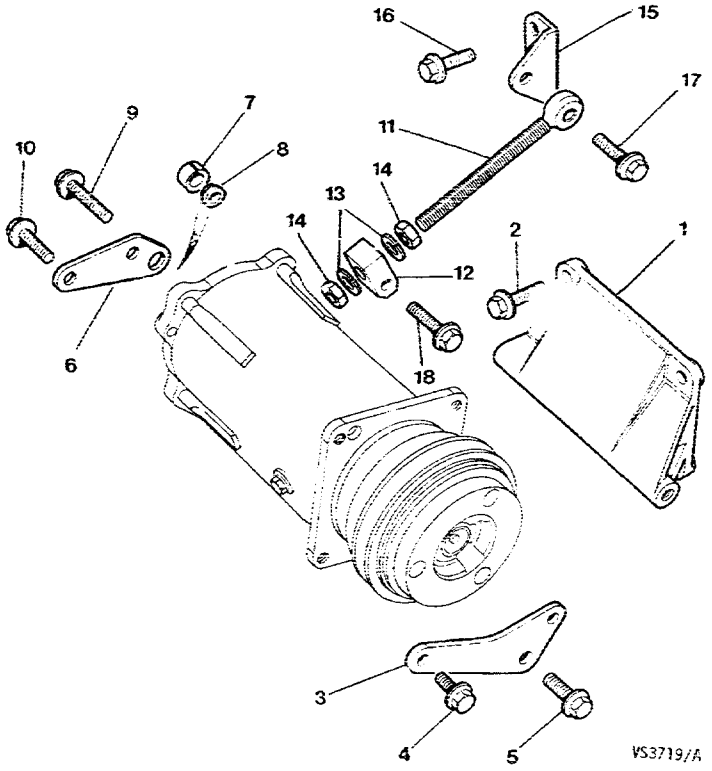

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	6601	Mounting bracket	NLA	(1; 2)	Except Canada and USA
2	FB	108061 J	Washer faced bolt	4	(1; 2)	Except Canada and USA
3	EAC	3864	Pivot bracket	1	(1; 2)	Except Canada and USA
4	FS	110301 J	Setscrew	1	(1; 2)	Except Canada and USA
5	FS	108121 J	Flange screw	2	(1; 2)	Except Canada and USA
6	EAC	6642	Pivot bracket-rear	1	(1; 2)	Except Canada and USA
7	EAC	3866	Distance tube-pivot bracket to mounting bracket	1	(1; 2)	Except Canada and USA
	WB	110061 J	Washer	1	(1; 2)	Except Canada and USA
8	EAC	3867	Clamp washer-pivot bracket to mounting bracket	1	(1; 2)	Except Canada and USA
9	FS	110351 J	Setscrew	1	(1; 2)	Except Canada and USA
10	FS	110251 J	Setscrew	2	(1; 2)	Except Canada and USA
11	EAC	7301	Adjustment bolt	1	(1; 2)	Except Canada and USA
12	C	36120	Adjustment block	1	(1; 2)	Except Canada and USA
13	FG	106 X	Lock washer-0.375" i/d -imperial	2		
14	NH	606041 J	Hexagonal nut	NLA	(1; 2)	Use JLM9685.
						Except Canada and USA
14	JLM	9685	Hexagonal nut-0.375" unf	2		
15	EAC	7786	Adjustment bolt bracket	NLA	(1; 2)	Except Canada and USA
16	FS	108201 J	Washer faced setscrew-M8 x 20mm	2	(1; 2)	Except Canada and USA
17	FB	108071 J	Washer faced bolt	1	(1; 2)	Except Canada and USA
18	FS	108251 J	Washer faced setscrew-M8 x 25mm	1	(1; 2)	Except Canada and USA

CHANGE POINTS:
(1) To (E) 101879 2.9 Litre
(2) To (E) 109969 3.6 Litre (XJ40)


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

AIR CONDITIONING AND HEATER ..... 3. C 02
AIR CONDITIONING VACUUM SYSTEMS ..... 3. D 08
AIR DISTRIBUTION/DUCTING ..... 3. C 08
BLOWER MOTOR ASSEMBLIES ..... 3. C 06
CONDENSER AND RECEIVER DRIER ..... 3. D 07
CONTROL PANEL AND SENSORS ..... 3. D 09
ENGINE BAY COMPONENTS ..... 3. C 09
EVAPORATOR AND HEATER MATRIX ..... 3. D 13
PIPES AND HOSES ..... 3. D 14
AIR CONDITIONING AND HEATER SENSOR ..... 3. D 10
AIR CONDITIONING BLOWER MOTOR ..... 3. C 06
AIR CONDITIONING ELECTRONIC ..... 3. D 11
AIR CONDITIONING UNIT ..... 3. C 02
AIR CONDITIONING VACUUM TANK AND ..... 3. D 08
BLOWER MOTOR ASSEMBLY ..... 3. C 07
COMPRESSOR ADJUSTMENT-2.9 LITRE-UP ..... 3. D 02
COMPRESSOR ADJUSTMENT-2.9 LITRE- ..... 3. D 03
COMPRESSOR ADJUSTMENT-3.2/4.0 LITRE ..... 3. D 06
COMPRESSOR ADJUSTMENT-3.6 LITRE-UP ..... 3. D 04
COMPRESSOR MOUNTING-2.9 LITRE-FROM ..... 3. C 14
COMPRESSOR MOUNTING-2.9 LITRE-FROM ..... 3. C 15
COMPRESSOR MOUNTING-2.9 LITRE-UP TO ..... 3. C 13
COMPRESSOR MOUNTING-3.2/4.0 LITRE ..... 3. C 12
COMPRESSOR MOUNTING-3.6 LITRE-FROM ..... 3. C 16
COMPRESSOR MOUNTING-3.6 LITRE-FROM ..... 3. C 17
COMPRESSOR MOUNTING-3.6 LITRE-UP TO ..... 3. C 18
COMPRESSOR-2.9/3.2/4.0 LITRE ..... 3. C 10
COMPRESSOR-2.9/3.6 LITRE ..... 3. C 11
COMPRESSOR ..... 3. C 09
CONDENSER AND RECEIVER DRIER ..... 3. D 07
CONSOLE CONTROL PANEL ..... 3. D 09
Condenser ..... 3. D 07
Drier bottle-assembly ..... 3. D 07
Electronic control module ..... 3. C 04
Expansion valve ..... 3. D 14
HEATER ASSEMBLY ..... 3. C 03
HEATER MATRIX AND EVAPORATOR ..... 3. D 13
HEATER MATRIX ..... 3. C 05
HEATER VALVE AND HOSES ..... 3. D 15
Heater matrix ..... 3. C 05
REFRIGERANT HOSES ..... 3. D 14
Servo motor-upper and lower ..... 3. C 04
VACUUM HOSES ..... 3. D 16
VENTILATION CONSOLE-REAR ..... 3. C 08
Water temperature switch-black ..... 3. C 05

COMPRESSOR ADJUSTMENT-2.9 LITRE-UP TO (E)107820

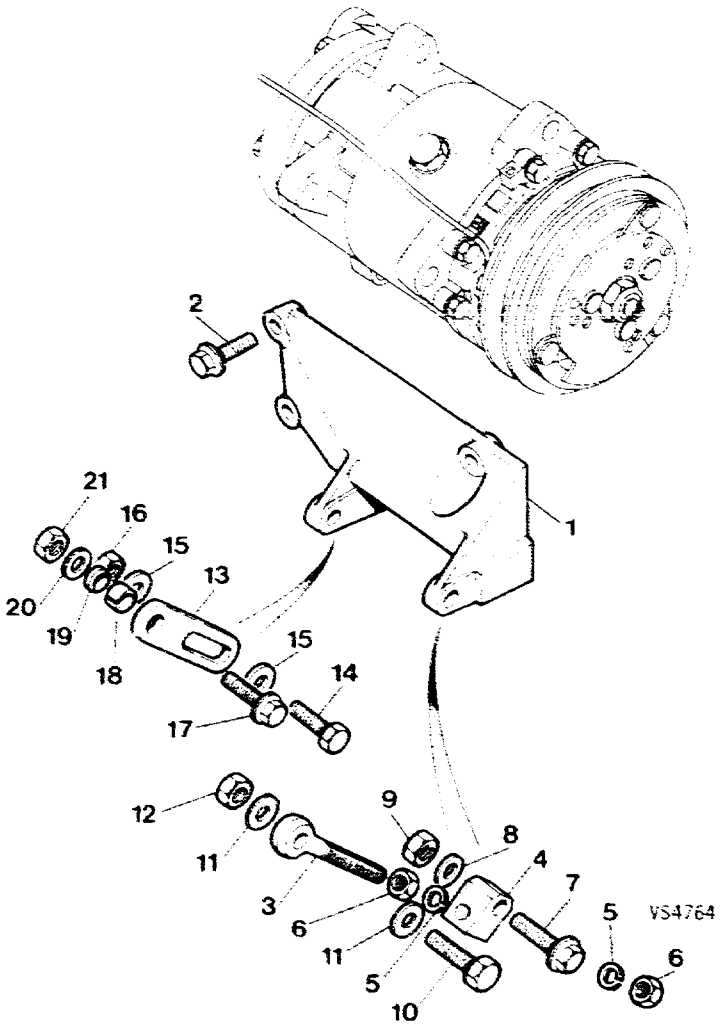


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9704	Mounting bracket	1	(1, 2)	
2	FB	108061 J	Washer faced bolt	4	(1, 2)	
3	EAC	7811	Adjustment bolt	1	(1, 2)	
4	EAC	7133	Adjustment sleeve	1	(1, 2)	
5	WM	600061 J	Spring washer	2	(1, 2)	
6	NH	606041 J	Hexagonal nut	NLA	(1, 2)	Use JLM9685
6	JLM	9685	Hexagonal nut-0 375" unf	2		
7	FB	110091 J	Bolt	NLA	(1, 2)	
8	WA	110061 J	Plain washer	1	(1, 2)	
9	NH	110041 J	Nut-M10	1	(1, 2)	
10	BH	110081 J	Bolt	1	(1, 2)	
11	WA	110061 J	Plain washer	2	(1, 2)	
12	NH	110041 J	Nut-M10	1	(1, 2)	
13	EAC	9366	Stabilising link	1	(1, 2)	
14	SH	110301 J	Bolt	1	(1, 2)	
15	WJ	110001 J	Washer	2	(1, 2)	
16	NH	110041 J	Nut-M10	1	(1, 2)	
17	FB	110091 J	Bolt	NLA	(1, 2)	
18	EAC	3866	Distance tube-pivot bracket to mounting bracket	1	(1, 2)	
19	EAC	3867	Clamp washer-pivot bracket to mounting bracket	1	(1, 2)	
20	WA	110061 J	Plain washer	2	(1, 2)	
21	NY	110041 J	Locknut	NLA	(1, 2)	Use NY110041

CHANGE POINTS

(1) From (E) 101880 To (E) 107820 2 9 Litre, Canada, USA

(2) From (E) 109970 To (E) 166423 3 6 Litre (XJ40), Canada, USA


COMPRESSOR ADJUSTMENT-2.9 LITRE-FROM (E)107821

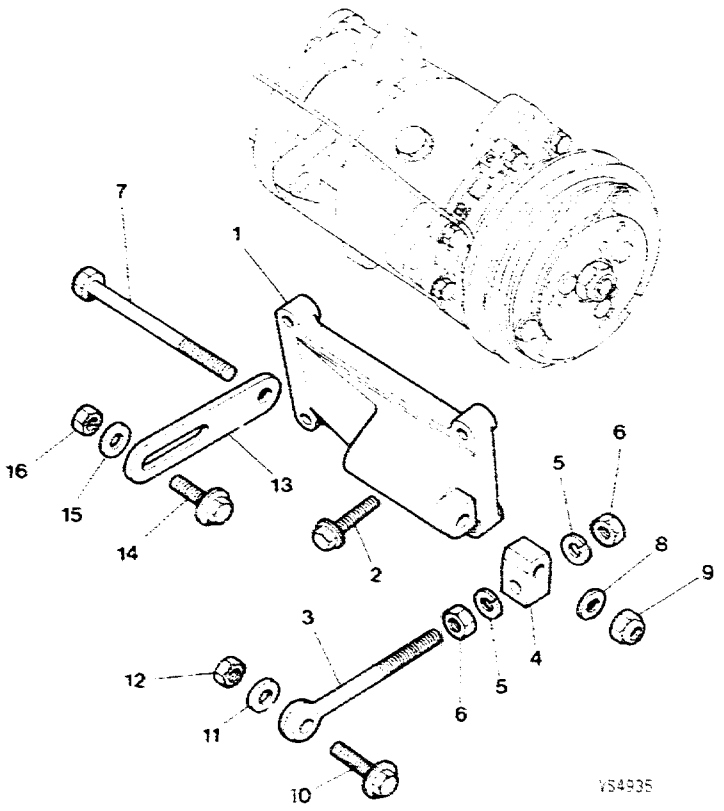

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 9691	Mounting bracket	1	(1; 2)	
2	FB 108061 J	Washer faced bolt	4	(1; 2)	
3	EAC 9719	Adjustment bolt	1	(1; 2)	
4	EAC 7133	Adjustment sleeve	1	(1; 2)	
5	W/M 600061 J	Spring washer	2	(1; 2)	
6	NH 606041 J	Hexagonal nut	NLA	(1; 2)	Use JLM9685
6	JLM 9685	Hexagonal nut-0.375" unf	2		
7	BH 110261 J	Bolt	1	(1; 2)	
8	WA 110061 J	Plain washer	1	(1; 2)	
9	NY 110041 J	Locknut	NLA	(1; 2)	Use NY110041
10	FB 110081 J	Bolt	1	(1; 2)	
11	WA 110061 J	Plain washer	1	(1; 2)	
12	NH 110041 J	Nut-M10	1	(1; 2)	
13	EAC 9718	Stabilising link	1	(1; 2)	
14	FB 110071 J	Washer faced bolt-M10 x 35mm-lower	1	(1; 2)	
15	WA 110061 J	Plain washer	2	(1; 2)	
16	NH 110041 J	Nut-M10	1	(1; 2)	

CHANGE POINTS
(1) From (E) 107821
(2) From (E) 156424

COMPRESSOR ADJUSTMENT-3.6 LITRE-UP TO (E)166423

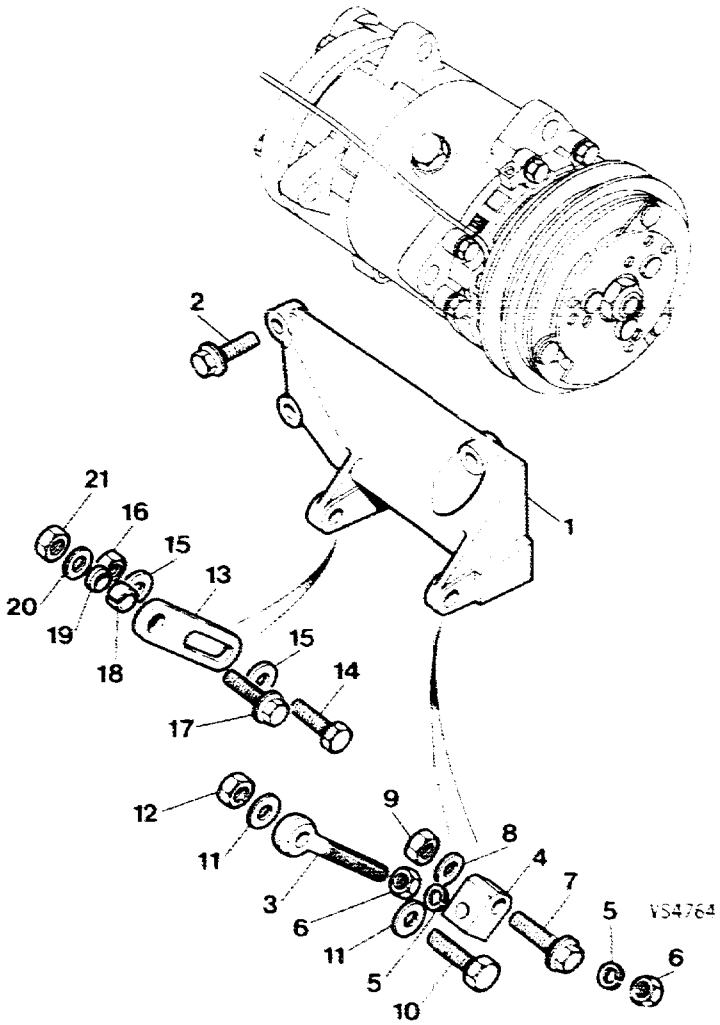


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9704	Mounting bracket	1	(1, 2)	
2	FB	108061 J	Washer faced bolt	4	(1, 2)	
3	EAC	7811	Adjustment bolt	1	(1, 2)	
4	EAC	7133	Adjustment sleeve	1	(1, 2)	
5	WM	600061 J	Spring washer	2	(1, 2)	
6	NH	606041 J	Hexagonal nut	NLA	(1, 2)	Use JLM9685
6	JLM	9685	Hexagonal nut-0 375" unf	2		
7	FB	110091 J	Bolt	NLA	(1, 2)	
8	WA	110061 J	Plain washer	1	(1, 2)	
9	NH	110041 J	Nut-M10	1	(1, 2)	
10	BH	110081 J	Bolt	1	(1, 2)	
11	WA	110061 J	Plain washer	2	(1, 2)	
12	NH	110041 J	Nut-M10	1	(1, 2)	
13	EAC	9366	Stabilising link	1	(1, 2)	
14	SH	110301 J	Bolt	1	(1, 2)	
15	WJ	110061 J	Washer	2	(1, 2)	
16	NH	110041 J	Nut-M10	1	(1, 2)	
17	FB	110091 J	Bolt	NLA	(1, 2)	
18	EAC	3866	Distance tube-pivot bracket to mounting bracket	1	(1, 2)	
19	EAC	3867	Clamp washer-pivot bracket to mounting bracket	1	(1, 2)	
20	WA	110061 J	Plain washer	2	(1, 2)	
21	NY	110041 J	Locknut	NLA	(1, 2)	Use NY110041

CHANGE POINTS

(1) From (E) 101880 To (E) 107820 2 9 Litre Canada USA

(2) From (E) 109970 To (E) 166423 3 5 Litre (XJ40) Canada USA


COMPRESSOR ADJUSTMENT-3.6 LITRE-FROM (E)166424

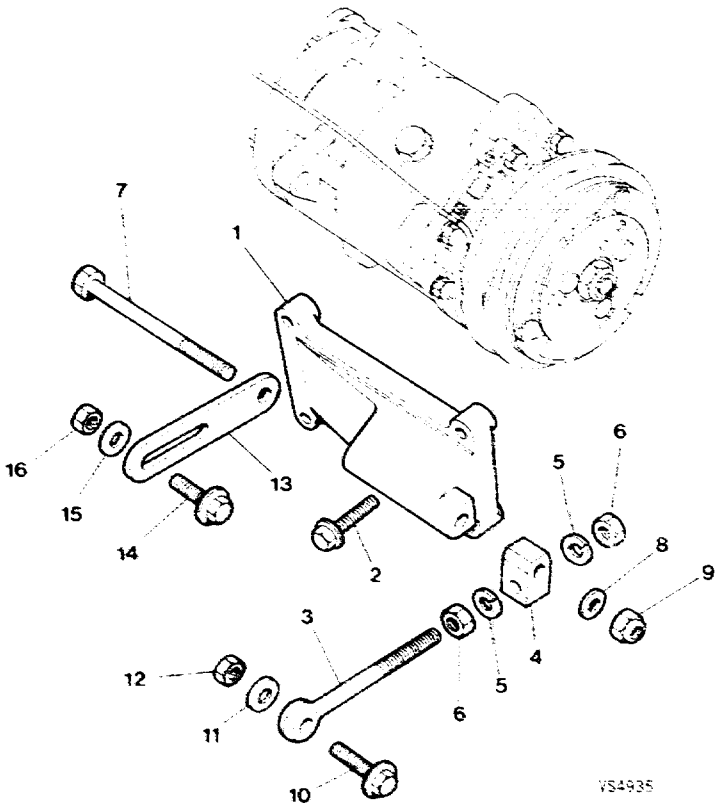

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 9691	Mounting bracket	1	(1, 2)	
2	FB 108061 J	Washer faced bolt	4	(1, 2)	
3	EAC 9719	Adjustment bolt	1	(1, 2)	
4	EAC 7133	Adjustment sleeve	1	(1, 2)	
5	WM 600061 J	Spring washer	2	(1, 2)	
6	NH 606041 J	Hexagonal nut	NLA	(1, 2)	Use JLM9685.
6	JLM 9685	Hexagonal nut-0.375" unf	2		
7	BH 110261 J	Bolt	1	(1, 2)	
8	WA 110061 J	Plain washer	1	(1, 2)	
9	NY 110041 J	Locknut	NLA	(1, 2)	Use NY110041.
10	FB 110081 J	Bolt	1	(1, 2)	
11	WA 110061 J	Plain washer	2	(1, 2)	
12	NH 110041 J	Nut-M10	1	(1, 2)	
13	EAC 9718	Stabilising link	1	(1, 2)	
14	FB 110071 J	Washer faced bolt-M10 x 35mm-lower	1	(1, 2)	
15	WA 110061 J	Plain washer	1	(1, 2)	
16	NH 110041 J	Nut-M10	1	(1, 2)	

CHANGE POINTS
(1) From (E) 107821
(2) From (E) 166424


COMPRESSOR ADJUSTMENT-3.2/4.0 LITRE

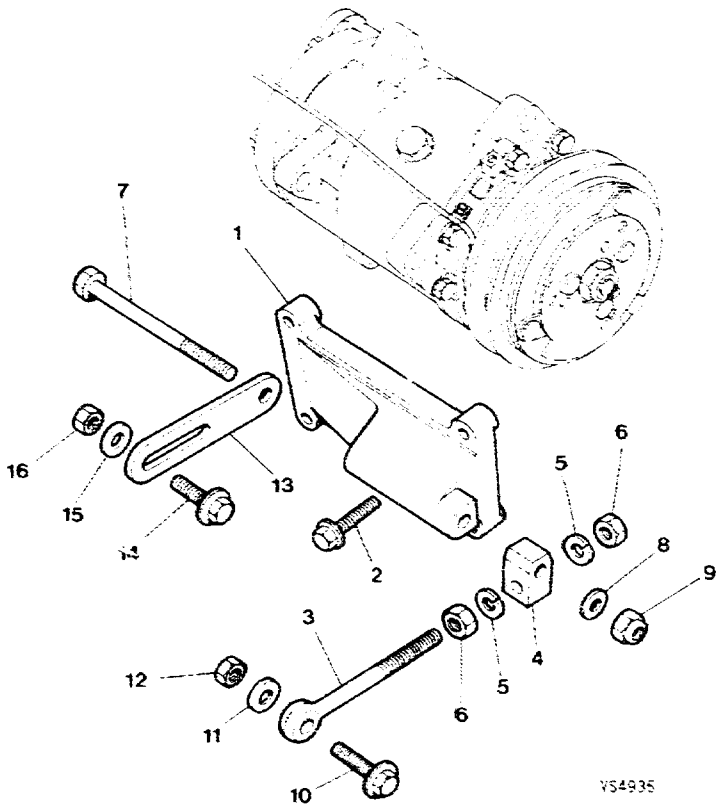

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	EAC	9691	Mounting bracket	1	(1, 2)	
2	FB	108061 J	Washer faced bolt	4	(1, 2)	
3	EAC	9719	Adjustment bolt	1	(1, 2)	
4	EAC	7133	Adjustment sleeve	1	(1, 2)	
5	WM	600061 J	Spring washer	2	(1, 2)	
6	NH	606041 J	Hexagonal nut	NLA	(1, 2)	Use JLM9685
6	JLM	9685	Hexagonal nut-0.375" unf	2		
7	BH	110261 J	Bolt	1	(1, 2)	
8	WA	110061 J	Plain washer	1	(1, 2)	
9	NY	110041 J	Locknut	NLA	(1, 2)	Use NY110041
10	FB	110081 J	Bolt	1	(1, 2)	
11	WA	110061 J	Plain washer	2	(1, 2)	
12	NH	110041 J	Nut-M10	1	(1, 2)	
13	EAC	9718	Stabilising link	1	(1, 2)	
14	FB	110071 J	Washer faced bolt-M10 x 35mm-lower	1	(1, 2)	
15	WA	110061 J	Plain washer	1	(1, 2)	
16	NH	110041 J	Nut-M10	1	(1, 2)	


CHANGE POINTS
(1) From (E) 107821
(2) From (E) 166424

CONDENSER AND RECEIVER DRIER

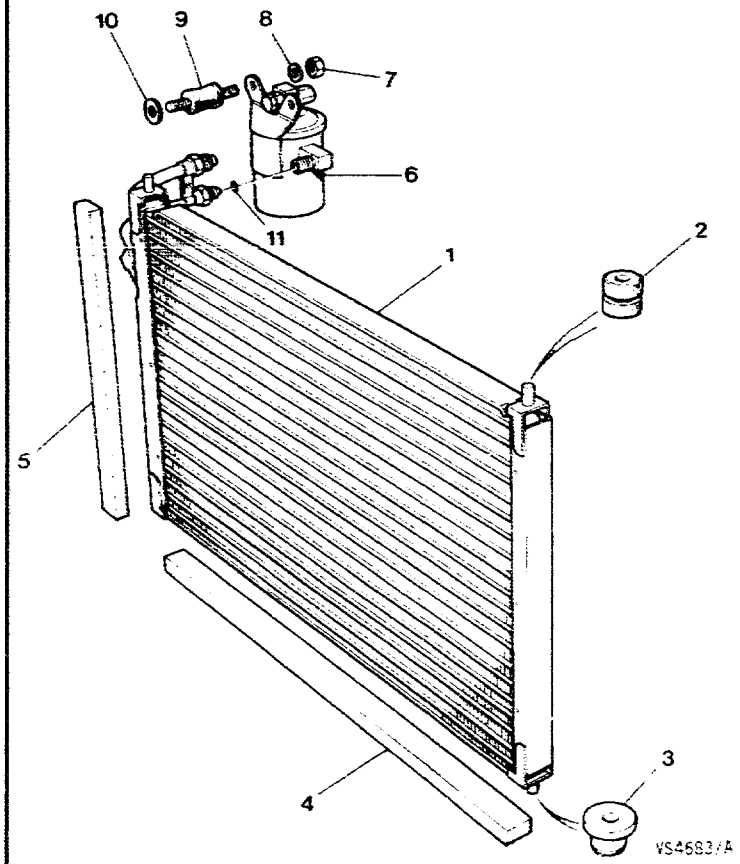

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 8074	Condenser	1		
2	CBC 1448	Grommet-lower	1		
3	CBC 1788	Grommet-bottom	2		
4	CAC 7522 2	Seal-upper and lower	2		
5	CAC 7522 1	Side seal	2		
6	CBC 2319	Drier bottle-assembly	1		
7	JLM 9687	Nut	NLA		Use NH106041J.
7	NH 106041 J	Nut-M6	3		
8	WL 106001 J	Plain washer-M6	3		
9	EAC 6805	Instrumount	3		
10	WC 106001 J	Washer	NLA		
11	KRC 1154	O-ring-0.375" diameter	1		
	JLM 11610	Air conditioning retrofit kit-CFC free	1		
	MMA 7410AA	Receiver drier bottle-CFC free	1		
	JLM 11605	Ester oil-500ml-RL100	1		

AIR CONDITIONING VACUUM TANK AND HOSES

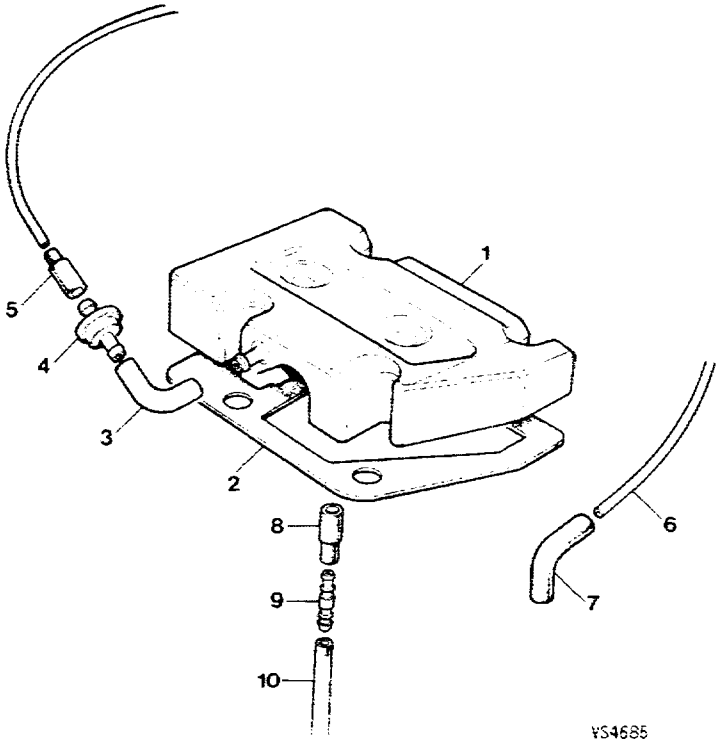


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 5762	Vacuum tank	1	(1)	
2	CBC 1978	Seal	1		
3	CAC 9880	Elbow	1		
4	CAC 4188	Non return valve	1		
5	C 39520	Stepped hose	1		
6	CAC 8051 4	Vacuum hose	1		
7	CAC 8050	Elbow	NLA		Use CBC8859.
7	CBC 8859	Elbow	1		
8	C 39520	Stepped hose	1		
9	CAC 8544	Stepped connector	1		
10	CBC 2590 8	Vacuum pipe	1		
1	CBC 8699	Vacuum tank	NLA	(2)	Use CCC2877 qty 1 with CBC8859 qty 1 with DAC1853 qty 1.
1	CCC 2877	Vacuum tank	1	(3)	
2	CBC 8958	Seal	1	(4)	RHD
2	CBC 8959	Seal	1	(4)	LHD
3	CAC 9880	Elbow	1	(4)	
4	CAC 4188	Non return valve	1	(2)	
4	DAC 1853	Non return valve	1	(3)	
5	C 39520	Stepped hose	1	(4)	
6	CAC 8051 4	Vacuum hose	1	(4)	
7	CBC 8859	Elbow	1	(4)	
8	C 39520	Stepped hose	1	(4)	
9	CAC 8544	Stepped connector	1	(4)	
10	CBC 2590 8	Vacuum pipe	1	(4)	

CHANGE POINTS

(1) To (V) 594575
(2) From (V) 594576 To (V) 629285
(3) From (V) 629286
(4) From (V) 594576

CONSOLE CONTROL PANEL

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5825	Heater control panel	NLA	(1)	Use DBC5845
1	DBC 5845	Heater control panel	1	(2)	
2	DBC 5844	Air conditioning control panel	1		
3	JLM 500	Control knob -fan select	1		
4	JLM 501	Control knob -temperature select	1		
5	JLM 499	Switch knob-control panel	1		

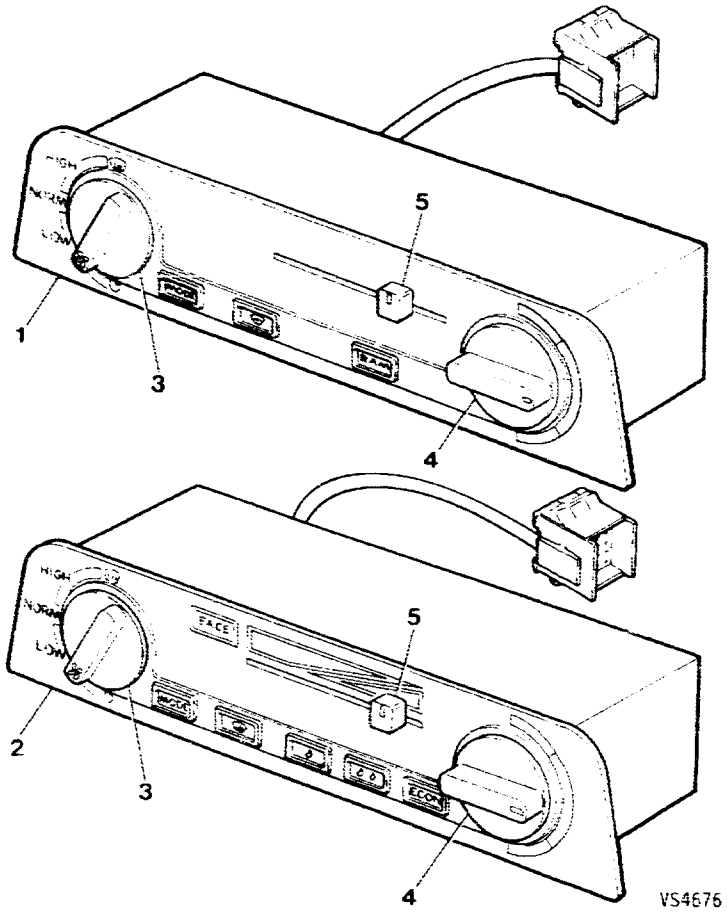


CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

AIR CONDITIONING/HEATING/VENTILATION

CONTROL PANEL AND SENSORS

AIR CONDITIONING AND HEATER SENSOR

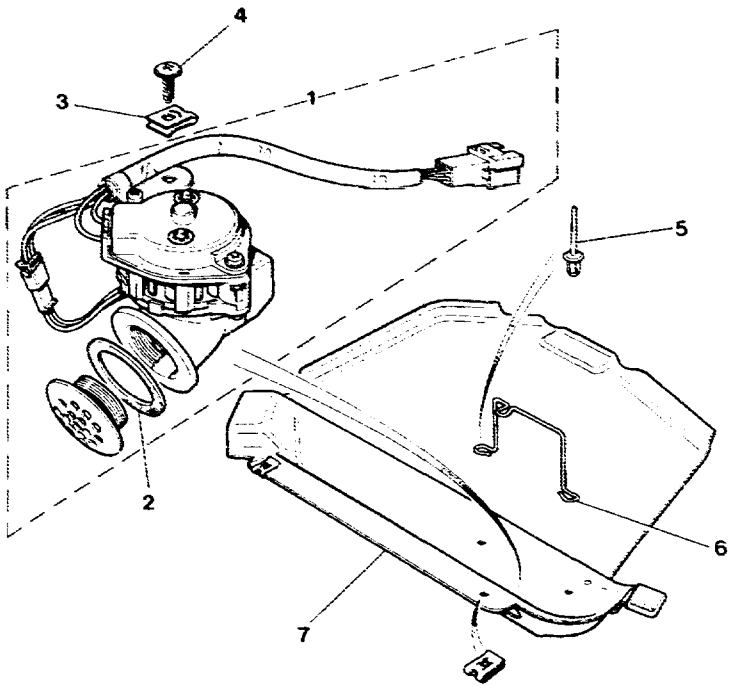

VS5084/A


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1947	Sensor fixing kit	NLA		Use DBC6372.
	DBC	6372	Aspirator motor sensor	1		
2	DBC	5724	Sensor	1		
3	CBC	8844	Sealing washer	1		
4	AK	608141 J	Captive nut-no.8	2		
5	AA	608045 J	Screw	1		
6	RY	612285 J	Rivet	2		
	CCC	2628	Aspirator mounting bracket	1		
	BCC	4254	Cover	NLA	(1)	LHD
	BCC	4255	Cover	NLA	(1)	RHD
7	CCC	2633	Module cover-RH	1	(2)	
7	CCC	2634	Module cover-LH	1	(2)	

CHANGE POINTS:

(1) To (V) 605856

(2) From (V) 605857

AIR CONDITIONING ELECTRONIC COMPONENTS

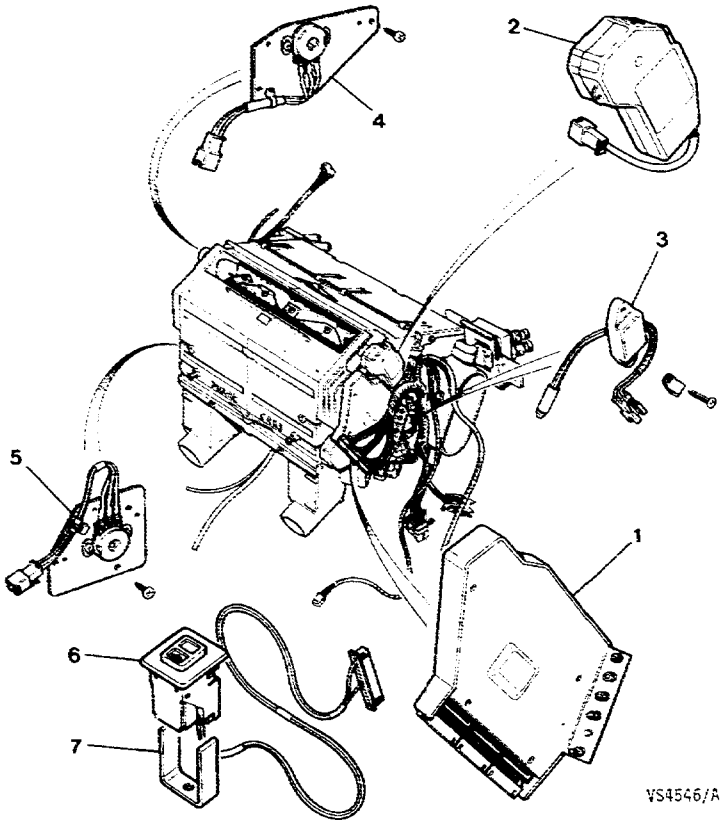


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 752	Electronic control module	NLA	.....	Use DBC4309.
1	DBC 4309	Electronic control module	NLA	.....	Use JLM2211.
1	JLM 2211	Electronic control module-air conditioning	1	(1)	
1	JLM 2212	Electronic control module-air conditioning	1	(2)	
1	DBC 5722	Electronic control module-air conditioning	1	(3)	
2	JLM 11556	Servo vacuum motor-upper and lower	2		
3	JLM 748	Evaporator sensor	1		
4	CBC 5659	Upper potentiometer	1		
5	CBC 5660	Lower feed potentiometer	1		
	JLM 1836	Air conditioning harness	1		
	JLM 10437	Air conditioning harness	NLA	(4)	
	JLM 10562	Air conditioning harness	1		
6	DBC 4778	Air conditioning recirculation switch	1		
7	DBC 4916	Clamp bracket	1		

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 605856
(3) From (V) 605857
(4) From (V) 594576

AIR CONDITIONING AND HEATER SENSORS

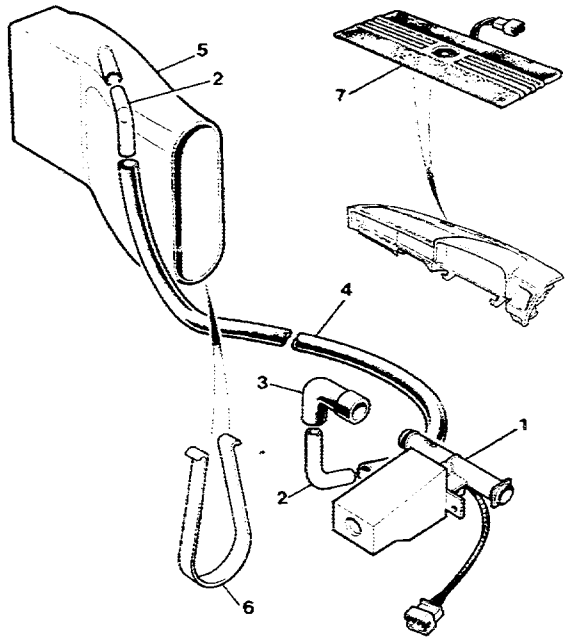

SK4889A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 1248	In car sensor	1	(1)	RHD
1	CBC 5952	In car sensor -air conditioning	1	(2)	RHD
1	CBC 5952	In car sensor -air conditioning	1	(3)	RHD
	CCC 2636	Module cover and sensor-assembly	NLA	(4)	Use CCC2634 qty 1 with
					DBC5724 qty 1.
					RHD;except air conditioning
	CCC 2636	Module cover and sensor-assembly	NLA	(5)	Use CCC2634 qty 1 with
					DBC5724 qty 1.
					Air conditioning ;RHD
	CCC 2634	Module cover-LH	1		
	DBC 5724	Sensor	1		
1	CAC 9249	In car sensor	NLA	(1)	LHD
1	CBC 5953	In car sensor -air conditioning	NLA	(2)	Use JLM1617.
					LHD;except air conditioning
1	CBC 5953	In car sensor -air conditioning	NLA	(3)	Use JLM1617.
					Air conditioning ;LHD
	JLM 1617	SENSOR FIXING KIT	1		LHD;except air conditioning
	JLM 1617	SENSOR FIXING KIT	1		Air conditioning ;LHD
1	CBC 5953	• In car sensor -air conditioning	NLA		Use JLM1617.
	AGU 2481	• Pipe clip	2		
	AAU 4931	• Rawl nut	2		
	SE 105161 J	• Screw-M5 x 16mm	2		
	CCC 2635	Module cover and sensor	NLA	(4)	Use CCC2633 qty 1 with
					DBC6372 qty 1.
					Heater;LHD
	CCC 2635	Module cover and sensor	NLA	(5)	Use CCC2633 qty 1 with
					DBC6372 qty 1.
					Air conditioning ;LHD
	CCC 2633	Module cover-RH	1		
	DBC 6372	Aspirator motor sensor	1		
7	CAC 9246	Solar sensor	1		
2	CAC 3398	Tube	NLA		
3	CBC 1835	Rubber elbow	NLA		Use BDC6802.
3	BDC 6802	Rubber elbow	NLA		
4	C 151508	Hose-140°	1		
5	CAC 48661	Air duct-RH	1		RHD
5	CBC 5939	Air duct-LH	1		RHD
5	CAC 48661	Air duct-RH	1		LHD
5	CBC 59391	Air duct-LH	1		LHD
6	CAC 9676	Air duct clip	2		
	JLM 1947	Sensor fixing kit	NLA		Use DBC6372.

CHANGE POINTS:

(1) To (V) 540085


(2) From (V) 540086 To (V) 607110

(3) From (V) 540086 To (V) 605856

(4) From (V) 607111

(5) From (V) 605857


HEATER MATRIX AND EVAPORATOR

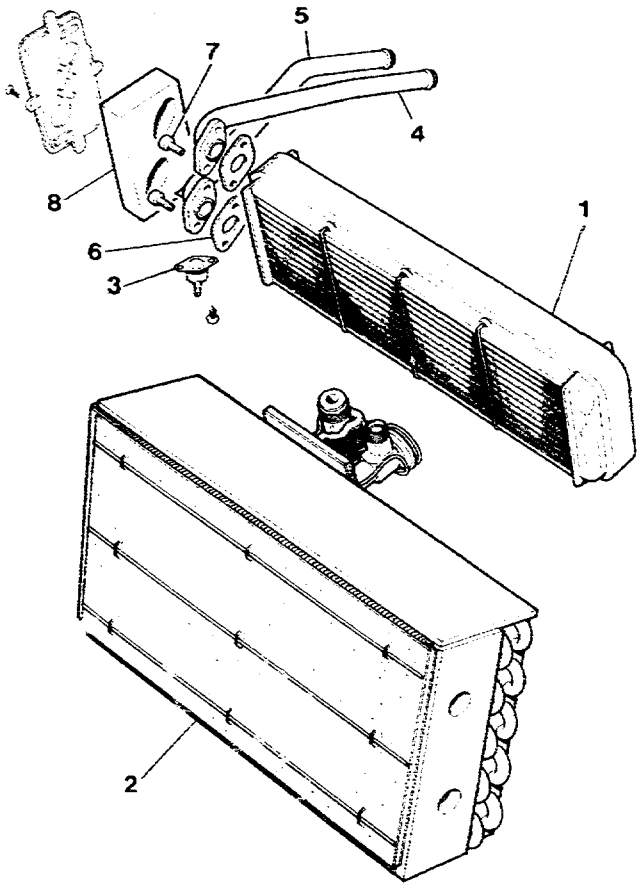

VS4833

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1407	Evaporator and seal-assembly	1	(1)	
1	JLM	2161	Evaporator and seal-assembly	1	(2)	
2	JLM	11343	Heater matrix	1		
3	JLM	757	Inlet pipe-gasket sealing	1		
4	JLM	758	Outlet pipe-gasket sealing	1		
3	CBC	4965	Inlet pipe-O-ring sealing	1		
4	CBC	4966	Outlet pipe-O-ring sealing	1		
	JLM	759	Gasket	2		
5	CBC	4967	O-ring	2		
6	JLM	760	Screw	4		
7	JLM	761	Seal	1		
8	JLM	763	Water temperature switch-red	1	(1)	
8	JLM	2121	Water temperature switch-black	1	(2)	

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

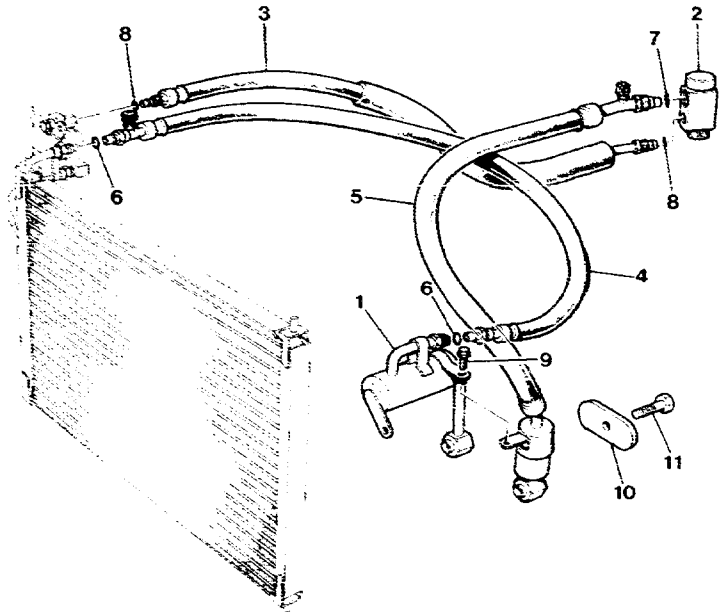

VS5085/A


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 2366	Air conditioning muffler-assembly	1	(1; 2)	
	FS 110251	Setscrew	1	(1; 2)	
3	CBC 1591	Hose	1	(1; 2)	
4	CBC 1590	Hose	1	(1; 2)	
5	CBC 1589	Hose	1	(1; 2)	
2	CAC 8169	Expansion valve	1	(1; 2)	
1	CBC 4594	Air conditioning muffler	1	(3; 4)	
1	CBC 6544	Air conditioning muffler	1	(5; 6; 7)	
1	CBC 8169	Air conditioning muffler	1	(8)	
1	CBC 9974	Air conditioning muffler	1	(9)	
2	CAC 8169	Expansion valve	1	(5)	
3	CBC 4597	Hose	1	(10)	
3	CBC 8023	Hose	1	(11)	
3	CCC 5504	Hose	1	(12)	
4	CBC 4598	Hose	1	(12)	
4	CCC 2846	Hose	1	(9)	
5	CBC 4596	Hose	1	(5)	Except with muffler
5	CBC 6299	Hose	1	(5)	With muffler
6	CBC 8022	Hose	1	(13)	
6	CCC 5505	Hose	1	(14)	
7	AGU 1386J	O-ring	NLA		Use AGU1386.
7	AGU 1386	O-ring	2		
8	KRC 1158	O-ring	2		
9	CAC 89682	O-ring	NLA		Use KSR605002.
9	KSR 605002	O-ring	1		
10	FS 105101J	Flange screw-M5	1		
11	CBC 5097	Clamp plate	1		
12	SH 606146J	Screw	1		
13	CBC 2881	Protection cap	2		
14	KRC 1156	O-ring-0.5" diameter	1		
	AGU 2692	Double clip	1		

CHANGE POINTS:

(1) To (E) 101879 2.9 Litre
(2) To (E) 109969 3.6 Litre (XJ40)
(3) To (E) 107820 2.9 Litre
(4) To (E) 166423 3.6 Litre (XJ40)
(5) To (V) 594575
(6) From (E) 107821 2.9 Litre
(7) From (E) 166424 3.6 Litre (XJ40)
(8) From (V) 594576 To (V) 629285
(9) From (V) 629286
(10) From (V) 594576 To (V) 661684
(11) From (V) 661685
(12) To (V) 629285
(13) From (V) 594576 To (V) 657854
(14) From (V) 657855


HEATER VALVE AND HOSES

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 2536	Heater valve	1		
2	CBC 1857	Heater feed hose	1		2.9 Litre
2	CBC 1857	Heater feed hose	1		3.2 Litre
2	CBC 4723	Heater feed hose	1		3.6 Litre (XJ40)
2	CBC 4723	Heater feed hose	1		4.0 Litre
3	EAC 32156	Hose clip	NLA		Use JHC200401.
3	JHC 200401	Hose clip	4		
4	CAC 9278	Hose	1		
5	C 427991	Vacuum hose	1		
	CBC 25908	Vacuum pipe	1		

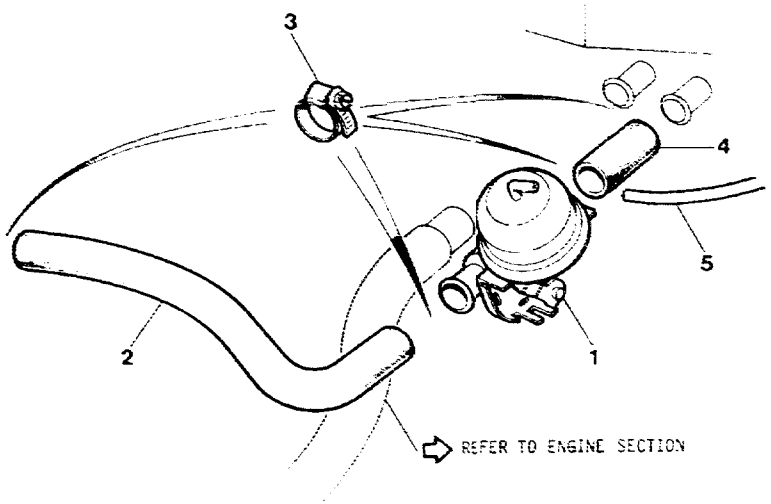

VS4701

VACUUM HOSES

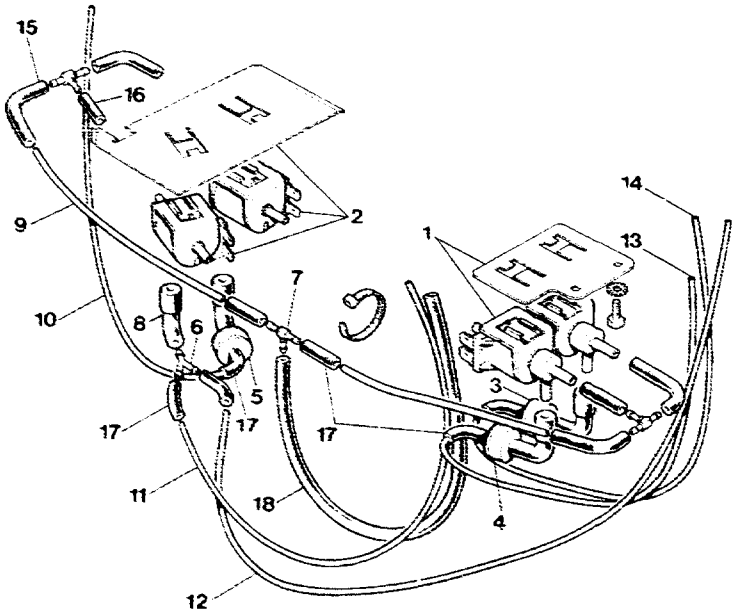

VS4545

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1125	Vacuum solenoid-assembly-RH	1		
2	JLM	1126	Vacuum solenoid-assembly-LH	1		
3	JLM	751	Restrictor-red	1		
4	JLM	750	Vacuum restrictor-blue	NLA	.....	Use CAC9205.
4	CAC	9205	Vacuum restrictor-black	1		
5	JLM	749	Restrictor	1		
6	JLM	1237	Y-piece connector	1		
7	JLM	1236	T-connector	1		
8	JLM	1238	Vacuum elbow	4		
9	JLM	1231	Vacuum pipe-White	1		
10	JLM	1234	Vacuum pipe-blue	1		
11	JLM	1235	Vacuum pipe-red	1		
12	JLM	1303	Vacuum pipe-yellow	1		
13	JLM	1235	Vacuum pipe-red	1		
13	JLM	1232	Vacuum pipe-green	1		
14	JLM	1233	Vacuum pipe-black	1		
15	JLM	1357	Vacuum elbow	NLA	.....	Use JLM1132.
	JLM	1132	Vacuum stepped hose	4		
16	JLM	1358	Rubber connector	2		
17	JLM	1133	Vacuum hose	7		
18	JLM	1127	Vacuum pipe	1		
4	JLM	1164	Vacuum restrictor-brown	1		
3	CCC	3537	Restrictor-yellow	1		

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

HEADLAMP WASHERS ..... 3. E 07
WINDSCREEN WASHERS ..... 3. E 02
WIPER MOTOR, ARMS AND BLADES ..... 3. E 05

HEADLAMP WASH SYSTEM ..... 3. E 07
HEATED JET SENSOR ..... 3. E 03
SCREENWASH SYSTEM ..... 3. E 02
WINDSCREEN WASHER RESERVOIR ..... 3. E 04
WINDSCREEN WIPER MOTOR ..... 3. E 05
WIPER ARM AND BLADE ..... 3. E 06

SCREENWASH SYSTEM

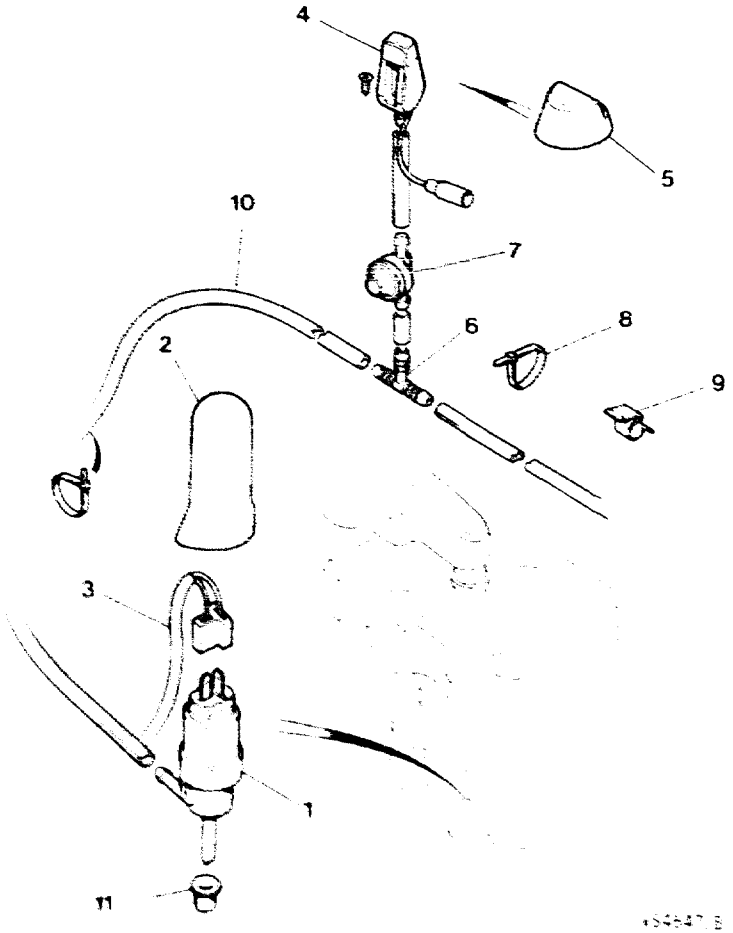


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	1989	Washer pump-screenwash	NLA		Use JLM20122
	JLM	20122	Washer pump-assembly	1		
2	DAC	2877	Protective boot	1		
3	JLM	1723	Screenwash pump link lead	1	(1)	
3	JLM	10518	Screenwash pump link lead	1	(2)	
4	DBC	3068	Heated screenwash jet	2	(3)	
4	DBC	4997	Heated screenwash jet	2	(4)	
4	DBC	5157	Heated screenwash jet	2	(5)	
5	DBC	3781	Screenwash jet cover	2	(3)	
5	DBC	3784	Screenwash jet cover	2	(6)	
	AC	604035J	Countersunk self tapping screw	2		
6	DBC	1541	T-connector	1	(1)	
6	DBC	6616	T-connector	1	(2)	
7	DBC	1543	Non return valve	2		
8	C	45099	Tie strap-4"	3		
9	BD	28562	Pipe clip metal-0.5" diameter	1		
10	DBC	18551	Washer tube -2265mm-T-piece connector to bottle	NLA		Use DBC18556
10	DBC	18558	Tube-2500mm	A/R	(1)	
10	DBC	6567	Washer tube -2262mm	A/R	(2)	
	JLM	1276	Weldnut-pump bracket	2		
	JLM	1277	Pump bracket screw	2		
11	BAU	2043	Grommet	1		

*554547 B

CHANGE POINTS
(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 556850
(4) From (V) 556851 To (V) 594575
(5) From (V) 594576
(6) From (V) 556851

HEATED JET SENSOR


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2640	Heated jet sensor	1	(1)	
1	DBC 5551	Heated jet sensor	1	(2)	

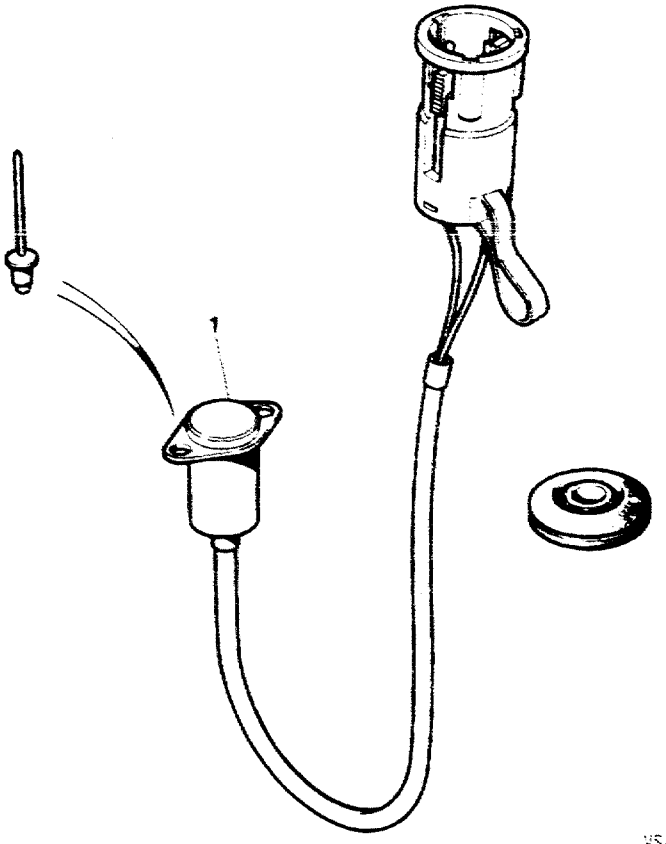

VS4740

CHANGE POINTS
(1) To (V) 629285
(2) From (V) 629286


WINDSCREEN WASHER RESERVOIR

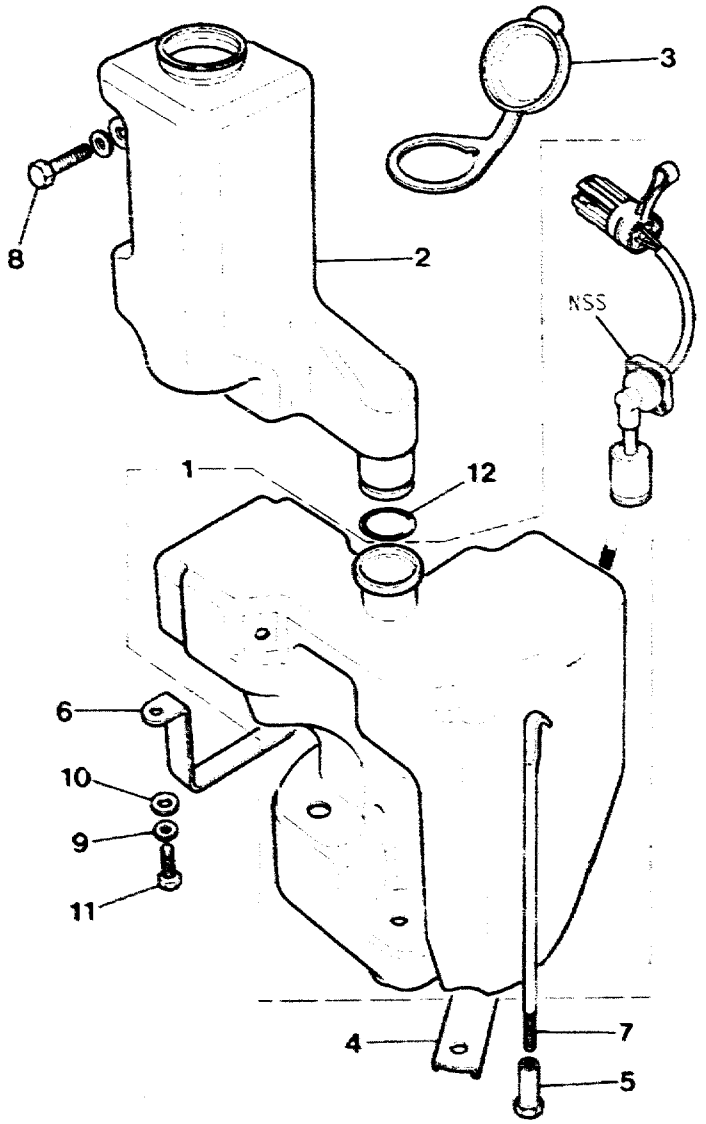

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	2261	Screenwash reservoir -7 litre	1	(1)	Except headlamp powerwash
1	JLM	10512	Screenwash reservoir -7 litre	1	(2)	Except headlamp powerwash
1	JLM	1761	Screenwash reservoir -4 litre	NLA		Use JLM2261 with DBC[illegible]31 x1, DBC2732 x1, JLM1242 x1 and FS106201J x1. Except headlamp powerwash
1	JLM	1762	Screenwash reservoir	1	(1)	Headlamp powerwash
1	JLM	10513	Screenwash reservoir	1	(2)	Headlamp powerwash
	JLM	1242	Weld nut-reservoir	1		
	FS	106201J	Flange head screw	1		
2	DBC	6113	Reservoir filler neck-assembly	1		
3	JLM	205	Reservoir filler cap	NLA		Use DAC4888
3	DAC	4888	Reservoir filler cap	1		
4	DBC	2443	Reservoir clamp	1		
5	DBC	2444	Clamp nut	2		
6	DBC	2730	Reservoir mounting bracket	1		
7	DBC	2731	Reservoir support rod -plain-7 litre	1		
7	DBC	2732	Reservoir support rod -angled-7 litre	1		
7	DBC	3295	Reservoir support rod -plain-4 litre	1		
7	DBC	3296	Reservoir support rod -angled-4 litre	1		
8	SH	106161J	Setscrew-imperial fixing	2		
9	WE	106001J	Washer	2		
10	WJ	106001J	Plain washer-M6	2		
11	SH	106201J	Setscrew	2		
12	JLM	1243	Filler neck O-ring-assembly	1		
	JLM	10150	Windscreen washer fluid -Trico-100ml	NLA		Use JLM11259.
	DBC	5178	Windscreen washer fluid -500ml bottle	NLA		Use JLM11259
	JLM	10152	Windscreen washer fluid -5 litre container	NLA		Use JLM11259
	JLM	11259	Windscreen washer fluid -1 Litre container	NLA		Use JLM11518
	JLM	11518	Windscreen washer fluid -500ml	NLA		Use JLM21228
	JLM	21228	Windscreen washer fluid -sachet	A/R		
	DBC	5676	Screen clean paste -100ml	A/R		

CHANGE POINTS
(1) To (V) 629285
(2) From (V) 629286


WINDSCREEN WIPER MOTOR

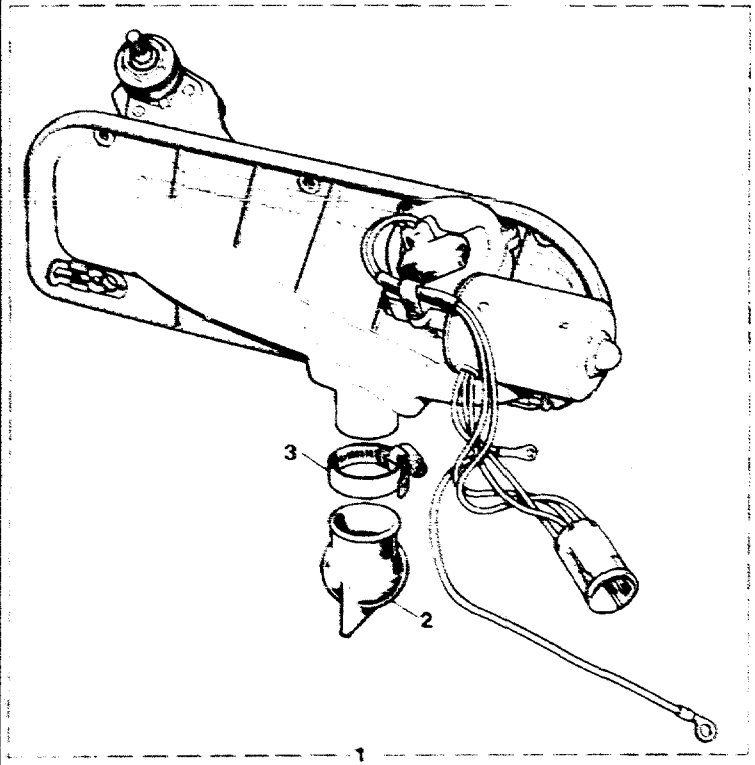

VS456J

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 4938	Wiper motor and mechanism -assembly	1		RHD
1	DBC 49[illegible]3	Wiper motor and mechanism -assembly	1		LHD
	JLM 11332	Wiper motor microswitch	1		
2	DBC 3755	Plenum chamber drain valve	NLA		Use LMB7000BA
2	LMB 7000BA	Plenum chamber drain valve	1		
3	C 34646 19	Mono clamp	1		
	DBC 2932	Wiper motor gasket kit	1		
	DBC [illegible]039	Screw-M6	NLA		Use JZS100063
	JZS 100063	Screw-M6	3		
	SH 108161 J	Setscrew-M8 x 16mm	1		Wiper motor earth to bulkhead
	WF 108001 J	Washer	2		
	FW 105 E	Plain washer	1		
	FS 106251 J	Flange head screw	3		Harness to wiper motor mounting
	C 39377	P-clip	1		plate
	C 4999	Spacer washer	1		
	ADU 9028	Tie strap-7.75" long	1		


WIPER ARM AND BLADE

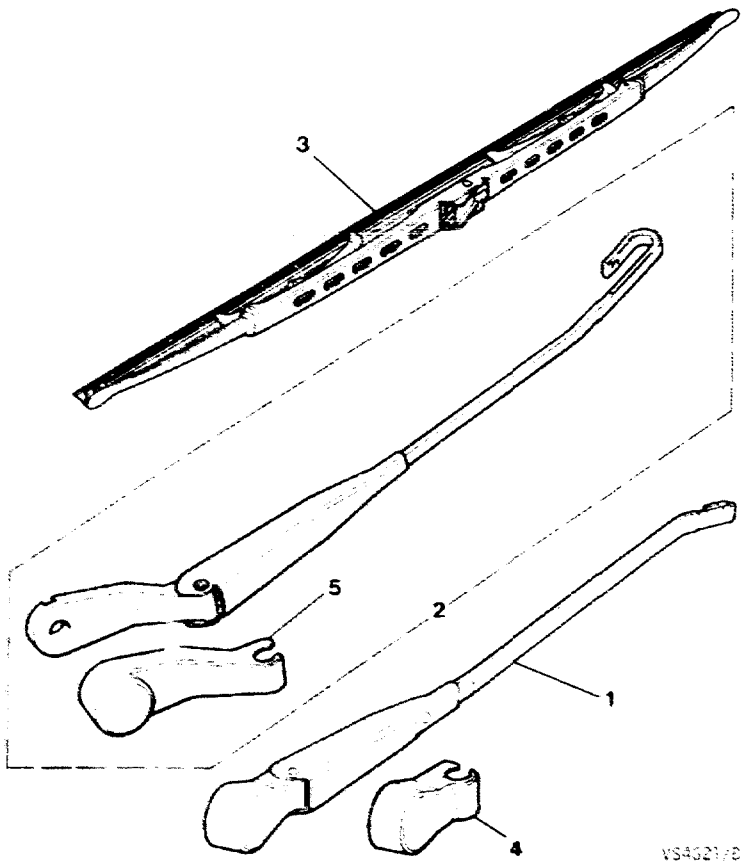

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 1918	Wiper arm	NLA	(1)	Use LMD7004AA qty 1 with GNA8960AA qty 1 RHD
1	DBC 1919	Wiper arm	NLA	(1)	Use GNC8955AA qty 1 with GNA8960AA qty 1 LHD
1	LMD 7004AA	WIPER ARM	1	(1)	RHD
5	JLM 11005	• Wiper arm nut cover	1		
	NH 110041J	• Nut-M10	1		
1	GNC 8955AA	Wiper arm	1	(1)	LHD
2	DBC 10809	Wiper arm	NLA	(2)	Use LMB7004AB qty 1 or LMC7005AB qty 1
2	LMB 7004AB	Wiper arm	1	(2)	RHD
2	LMB 7005AB	Wiper arm	NLA	(2)	LHD
3	DBC 1917	Wiper blade-all season	1	(1)	
3	DBC 10808	Wiper blade-all season	NLA	(2)	Use GNA8960AA
3	GNA 8960AA	Wiper blade-all season	1	(2)	
3	DBC 3972	Wiper blade-winter	1		Canada,UK,Europe
4	DBC 3679	Wiper blade cap nut	1		
	NH 110041J	Nut-M10	1		

CHANGE POINTS
(1) To (V) 657729
(2) From (V) 657730

HEADLAMP WASH SYSTEM

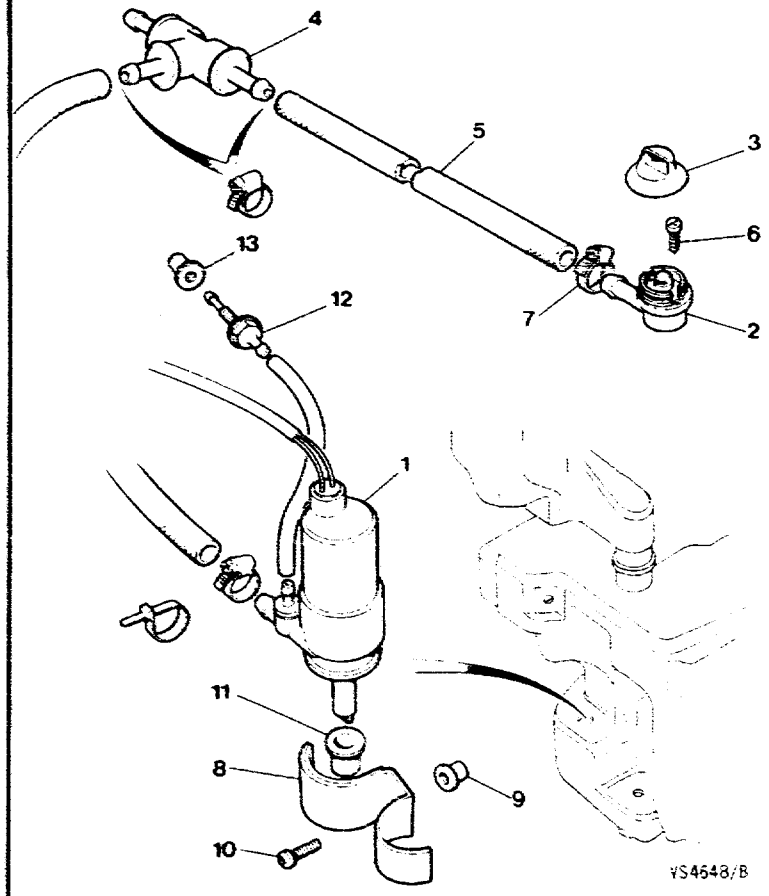


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2146	Headlamp powerwash pump	NLA	(1)	Use DBC5758.
1	DBC 5758	Headlamp powerwash pump	NLA	(2)	Use JLM20123
1	JLM 20123	Headlamp powerwash pump	1		
2	DBC 212?	Heated powerwash jet -assembly-RH-quad lamp	1	(3)	Quad lamps
2	DBC 2125	Heated powerwash jet -assembly-RH	1	(4)	Quad lamps
2	DBC 6280	Heated powerwash jet -assembly-RH-quad lamp	NLA	(5)	Use DBC10372
2	DBC 10372	Heated powerwash jet -assembly-RH-quad lamp	1	(6)	Quad lamps
2	DBC 2128	Heated powerwash jet -assembly-LH-quad lamp	1	(3)	Quad lamps
2	DBC 2126	Heated powerwash jet -assembly-LH	1	(4)	Quad lamps
2	DBC 6279	Heated powerwash jet -assembly-LH-quad lamp	NLA	(5)	
2	DBC 10373	Heated powerwash jet -assembly-LH-quad lamp	1	(6)	Quad lamps
2	DBC 2125	Heated powerwash jet -assembly-RH	1	(7)	Styled lamp
2	DBC 4350	Heated powerwash jet -assembly-RH-styled lamp	NLA	(5)	Use DBC10370.
2	DBC 10370	Heated powerwash jet -assembly-RH-styled lamp	1	(6)	Styled lamp
2	DBC 2126	Heated powerwash jet -assembly-LH	1	(7)	Styled lamp
2	DBC 4349	Heated powerwash jet -assembly-LH-styled lamp	NLA	(5)	Use DBC10371.
2	DBC 10371	Heated powerwash jet -assembly-LH-styled lamp	1	(6)	Styled lamp
	DBC 2738	Powerwash jet -centre	2	(3)	

CHANGE POINTS:

(1) To (V) 629361
(2) From (V) 629362
(3) To (V) 556850
(4) From (V) 556851 To (V) 594575
(5) From (V) 594576 To (V) 647489
(6) From (V) 647490
(7) To (V) 594575

HEADLAMP WASH SYSTEM

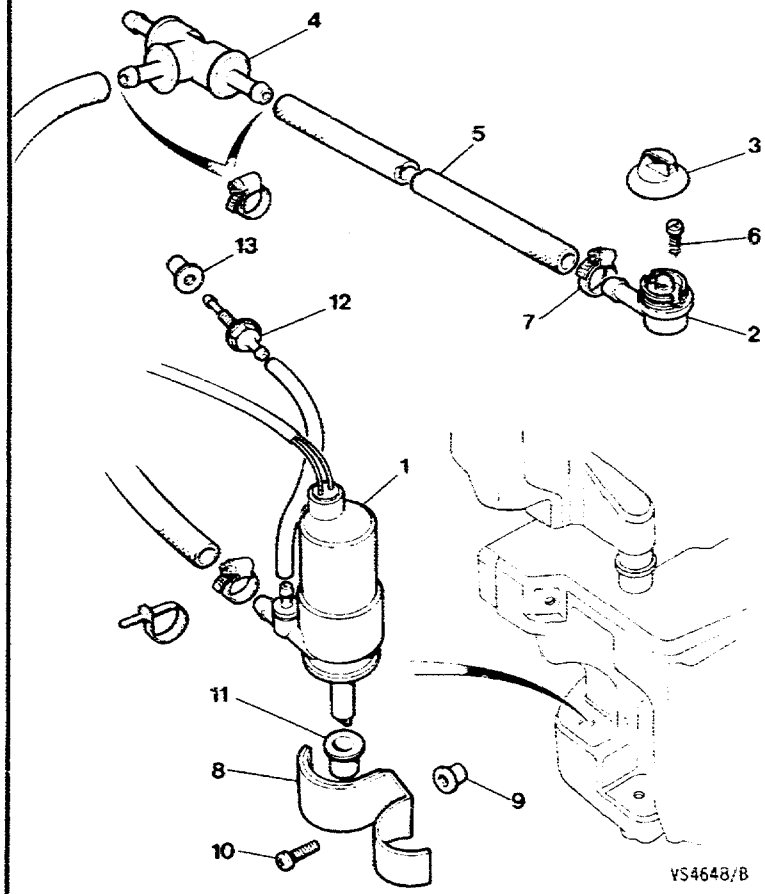

Illus	Part Number	Description	Quantity	Change Point	Remarks
3	DBC 2326	Jet cover	2/4		
4	JRC 1492J	T-valve	NLA		Use JLM20429.
4	JLM 20429	T-valve	NLA		Use DBC12082.
	DBC 12082	J-connector	1		
5	DBC 10186	Powerwash hose-823mm	AR		
6	AR 606021J	Self tapping screw	4/8	(1)	
	JLM 10630	Screw	4/8	(2)	
7	DBC 2024	Hose clip	NLA	(3)	Use EAC32154.
	EAC 32154	Worm drive hose clip	NLA	(4)	Use JHC200101
	JHC 200101	Worm drive hose clip-steel	5/9		
8	JLM 1482	Pump bracket	1		
9	JLM 1276	Weldnut-pump bracket	1		
10	JLM 1277	Pump bracket screw	1		
11	JLM 1240	Powerwash grommet	1		
12	JLM 1241	Reservoir connector	1		
13	JLM 1242	Weld nut-reservoir	1		
	UKC 6683J	Tie strap-15.75"	1		

CHANGE POINTS

(1) To (V) 638680
(2) From (V) 638681
(3) To (V) 556850
(4) From (V) 556851

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

FUSEBOXES ..... 3. F 18
MAIN VEHICLE HARNESSES ..... 3. F 02
OCCUPANT COMPARTMENT HARNESSES ..... 3. F 15
RELAYS ..... 3. G 02

ACCESSORY FUSEBOX ..... 3. F 18
HARNESS SHIELDS AND GROMMETS ..... 3. F 02
HARNESS-ALTERNATOR/FRONT AXLE ..... 3. F 04
HARNESS-BULKHEAD ..... 3. F 05
HARNESS-DOOR ..... 3. F 15
HARNESS-REAR AXLE ..... 3. F 14
HARNESS-SEAT ..... 3. F 16
HARNESS-TRANSMISSION ..... 3. F 07
SIDE HARNESS-LH ..... 3. F 08
SIDE HARNESS-RH ..... 3. F 09
TERMINATED CABLE AND DIODES ..... 3. F 11
TRUNK COMPARTMENT RELAY ..... 3. G 02

HARNESS SHIELDS AND GROMMETS

COMPONENTS NOT DRAWN


Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2634	B/C-post harness shield-RH	1		Except passive belt
	DBC 2635	B/C-post harness shield-LH	1		Except passive belt
	DBC 10044	A-post harness shield -RH	1		RHD
	DBC 10045	A-post harness shield -LH	1		LHD
	BCC 5752	Socket stowage box-RH front door	NLA		Use BEC11294
	BEC 11294	Socket stowage box-RH front door	1		
	BCC 5753	Socket stowage box-LH front door	NLA		Use BEC11295
	BEC 11295	Socket stowage box-LH front door	1		
	BCC 5756	Socket stowage box-RH rear door	NLA		Use BEC5296
	BEC 5296	Socket stowage box-RH rear door	1		
	BCC 5757	Socket stowage box-LH rear door	NLA		Use BEC5297
	BEC 5297	Socket stowage box-LH rear door	NLA		Use BEC11297
	BEC 11297	Socket stowage box-LH rear door	1		
	DBC 3169	Connector tray	1		Manual seat
	DBC 4991 1	Cable armouring-positive/negative cable	1		Wiper harness
	AA 610051 J	Flanged head screw-no.10 x 0.625"	4		
	DAC 2381 1	Insulation sleeve	2		
	DBC 1093	Convoluted sleeve -front door	2		
	DBC 1094	Convoluted sleeve -rear door	2		
	DBC 1909	Heelboard harness tube	NLA		Use DBC4940
	DBC 4940	Heelboard harness tube	2		
	DBC 1940	Grommet-side harness to body side -RH	1		
	DBC 1941	Grommet-side harness to body side -LH	NLA		
	DBC 1098	Side harness and bulkhead grommet	NLA		
	DBC 1097	Harness grommet	NLA		Use DBC1914
	DBC 1914	Harness grommet	2		

HARNESS SHIELDS AND GROMMETS

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	AGU 1866	Axle harness grommet	NLA		
	DBC 1566	Differential speed sensor grommet	NLA		
	DBC 2694	Harness grommet	NLA		
	DBC 2694	Harness grommet	NLA		
	DAC 40273	Edge protection strip-241mm	NLA		Use DAC40271F
	DAC 40271F	Edge protection strip	A/R		Bonnet release bracket
	DBC 1160	Seal-RH	NLA		
	DBC 1161	Seal-LH	NLA		
	DBC 1156	Seat pan seal-RH rear	NLA		
	DBC 1157	Seat pan seal-LH rear	1		
	BBC 48611	Sealing strip-1250mm	2		A-post and lower windscreen
	BD 459092	Flange finisher	A/R		Facia support bracket
	DBC 3077	Foam block-side harness packing-PVC	NLA		Use DBC5273
	DBC 5273	Foam block	NLA		Use DBC5347
	DBC 5347	Foam block	NLA		Use BEC12564
	BEC 12564	Foam block-rear longitudinal	2		Heelboard harness tube
	BDC 5020	Foam insert	3		
	DBC 5848	A-post harness shield	1		
	BD 338003	Push fix	5		

HARNESS-ALTERNATOR/FRONT AXLE

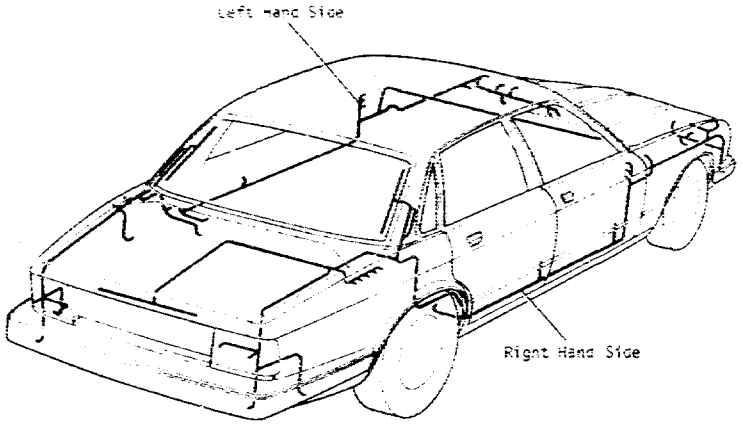


VS4773

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DAC 8558	Engine and body earth lead	NLA	(1)	Use DBC5050
	DBC 5050	Engine and body earth lead	NLA	(2)	Use DBC10684
	DBC 10684	Engine earth lead	NLA		Use LNB3740AA
	LNB 3740AA	Engine earth lead	1		
	DBC 1044	Terminal post lead	1		
	DBC 2174	Alternator cable	NLA	(1)	
	DBC 2175	Alternator link lead-90 amp alternator	1	(1)	
	DAC 6142	Alternator link lead-115 amp alternator -starter motor to alternator	1	(2)	
	DAC 6075	P-clip	1		
	DBC 2077	Starter solenoid link lead-Lucas	1		
	DBC 2076	Starter solenoid link lead-Bosch	1	(3)	
	DBC 6308	Starter solenoid link lead	1	(4)	
	DBC 2313	Bonnet lamp link harness	1		
	DBC 2066	Brake pad sensor harness-front axle	2	(5)	
	JLM 1659	Brake pad sensor harness-front axle	NLA	(6)	Use JLM1958
	JLM 1958	Brake pad sensor harness-front axle	2	(7)	
	DBC 6309	Brake pad sensor harness-front axle	2	(4)	

CHANGE POINTS.

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 629285
(4) From (V) 629286
(5) To (V) 533360
(6) From (V) 533361 To (V) 556850
(7) From (V) 556851 To (V) 629285

HARNESS-BULKHEAD

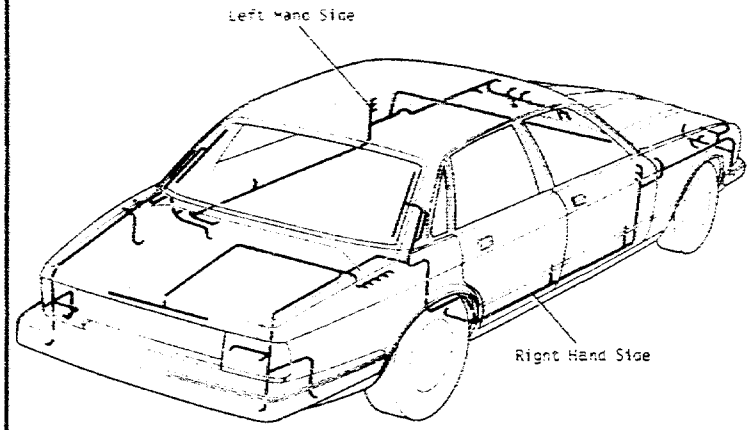


VS4773

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 4150	Bulkhead harness	NLA	(1)	RHD
	DBC 3208	Bulkhead harness	NLA	(2)	RHD
	DBC 5378	Bulkhead harness	1	(3)	RHD
	DBC 5646	Bulkhead harness	NLA	(4)	RHD
	DBC 5922	Bulkhead harness	NLA	(5)	RHD
	DBC 6871	Bulkhead harness	1	(6)	RHD
	DBC 4151	Bulkhead harness	1	(7, 8)	LHD;except passive restraint
	DBC 3207	Bulkhead harness	NLA	(9, 10)	LHD;except passive restraint
	DBC 5077	Bulkhead harness	NLA	(3)	Use DBC5377.
	DBC 5377	Bulkhead harness	1		LHD;except passive restraint
	DBC 5645	Bulkhead harness	1	(11)	LHD;except passive restraint
	DBC 5923	Bulkhead harness	1	(12)	LHD;except passive restraint
	DBC 10188	Bulkhead harness	1	(6)	LHD;except passive restraint
	DBC 5079	Bulkhead harness	1	(13)	Passive restraint;LHD
	DBC 5647	Bulkhead harness	1	(14)	Passive restraint;LHD
	DBC 5921	Bulkhead harness	1	(15)	Passive restraint;LHD
	DBC 6872	Bulkhead harness	1	(6)	Passive restraint;LHD

CHANGE POINTS

(1) To (V) 506663
(2) From (V) 506664 To (V) 556850
(3) From (V) 556851 To (V) 583946
(4) From (V) 583947 To (V) 611703
(5) From (V) 611704 To (V) 629361
(6) From (V) 629362
(7) To (V) 542207 2.9 Litre
(8) To (V) 541364 3.6 Litre (XJ40)
(9) From (V) 542208 To (V) 556850 2.9 Litre
(10) From (V) 541365 To (V) 556850 Except 2.9 Litre
(11) From (V) 583947 To (V) 614742
(12) From (V) 614743 To (V) 629361
(13) To (V) 583946
(14) From (V) 583947 To (V) 613336
(15) From (V) 613337 To (V) 629361

HARNESS-BULKHEAD

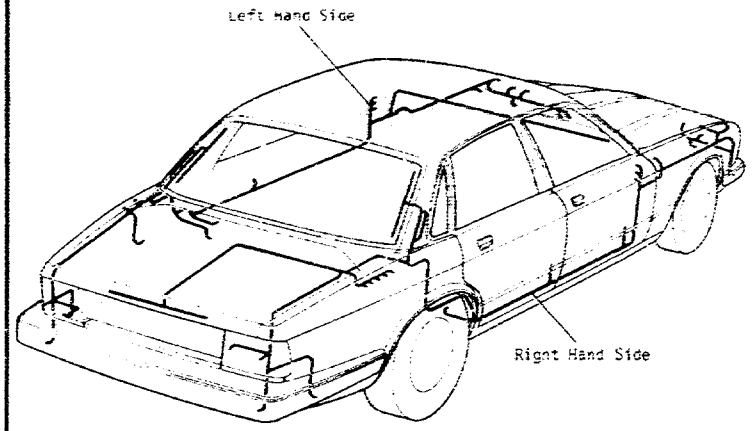


VS4773

Illus	Part Number		Description	Quantity	Change Point	Remarks
	DBC	2325	Harness link	1		2.9 Litre,except passive restraint
	DBC	2074	Harness link	1		Passive restraint
	DBC	3282	Blanking plug-LH side harness	NLA		Passive restraint
	DBC	5933	Shorting plug-5 pin diagnostic	1		
	DBC	3944	Shorting plug	NLA		Saudi Arabia,discontinued LH front axle harnesses
	AGU	2016	Blanking socket	NLA		Saudi Arabia,discontinued LH front axle harnesses
	EAC	24213	Edge clip	1		Saudi Arabia,discontinued LH front axle harnesses
	ADU	9028	Tie strap-7.75" long	1		Saudi Arabia,discontinued LH front axle harnesses


HARNESS-TRANSMISSION

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 5913	Transmission harness	1	(1)	4.0 Litre,LHD,automatic
	DBC 6889	Transmission harness	1	(2)	4.0 Litre,LHD,automatic
	DBC 5914	Transmission harness	1	(1)	4.0 Litre,RHD,automatic
	DBC 6888	Transmission harness	1	(2)	4.0 Litre,RHD,automatic
	DBC 5349	Transmission harness	1	(1)	Manual
	DBC 6891	Transmission harness	1	(2)	Manual
	DBC 6807	Transmission harness	1		3.2 Litre,automatic,except speed control
	DBC 6890	Transmission harness	1		3.2 Litre,speed control,automatic
	DBC 4727	Earth braid-LH bonnet hinge	1		

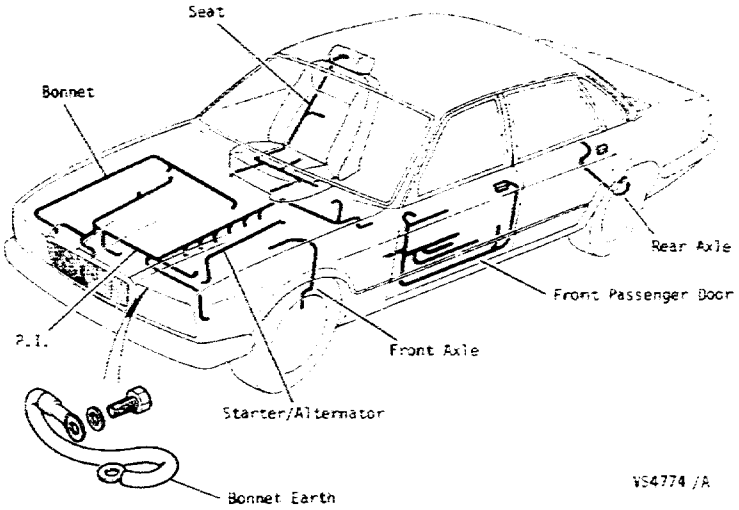

CHANGE POINTS:
(1) To (V) 629361
(2) From (V) 629362

SIDE HARNESS-LH

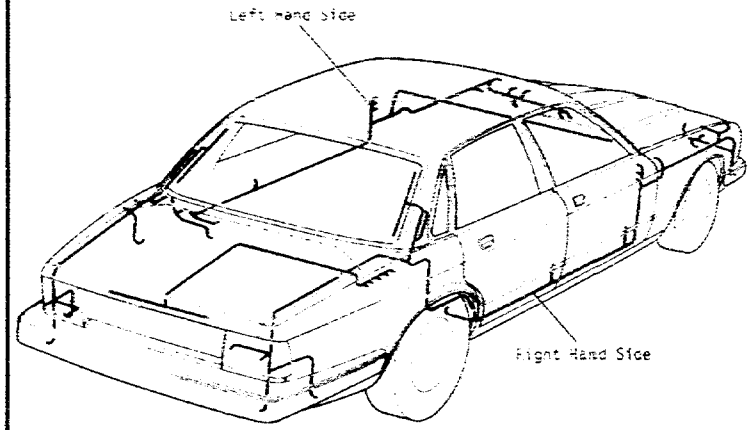


YS4773

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2417	Side harness-LH	NLA	(1)	Use DBC2517.
	DBC 2517	Side harness-LH	NLA	(1)	Use DBC3215 qty 1 with DBC3238 qty 1 or DBC3363 qty 1.
	DBC 3362	Side harness-LH	NLA	(2)	Except anti lock brake system
	DBC 3215	Side harness-LH	1	(3)	Except anti lock brake system
	DBC 4873	Side harness-LH	1	(4)	Except anti lock brake system
	DBC 5447	Side harness-LH	NLA	(5)	Except anti lock brake system
	DBC 2515	Side harness-LH	NLA	(1)	Anti lock brake system;LHD
	DBC 3361	Side harness-LH	1	(2)	Anti lock brake system;LHD
	DBC 3217	Side harness-LH	NLA	(3)	Anti lock brake system;LHD
	DBC 4875	Side harness-LH	NLA	(4)	Anti lock brake system;LHD
	DBC 5449	Side harness-LH	1	(5)	Anti lock brake system;LHD
	DBC 2516	Side harness-LH	NLA	(1)	Anti lock brake system;RHD
	DBC 3360	Side harness-LH	1	(2)	Anti lock brake system;RHD
	DBC 3213	Side harness-LH	NLA	(3)	Anti lock brake system;RHD
	DBC 4876	Side harness-LH	1	(4)	Anti lock brake system;RHD
	DBC 5450	Side harness-LH	1	(5)	Anti lock brake system;RHD
	DBC 5924	Side harness-LH	1	(6)	LHD
	DBC 6876	Side harness-LH	NLA	(7)	Use DBC10940.
	DBC 10940	Side harness-LH	1		LHD
	DBC 5927	Side harness-LH	NLA	(6)	RHD
	DBC 6875	Side harness-LH	NLA	(7)	Use DBC10939.
	DBC 10939	Side harness-LH	1		RHD
	DBC 3998	Fuel filler flap link harness	1		
	DBC 5928	Catalyst link harness	1		

CHANGE POINTS:

(1) To (V) 506033
(2) From (V) 506034 To (V) 524374
(3) From (V) 524375 To (V) 556850
(4) From (V) 556851 To (V) 583946
(5) From (V) 583947 To (V) 594575
(6) From (V) 594576 To (V) 629285
(7) From (V) 629286

SIDE HARNESS-RH

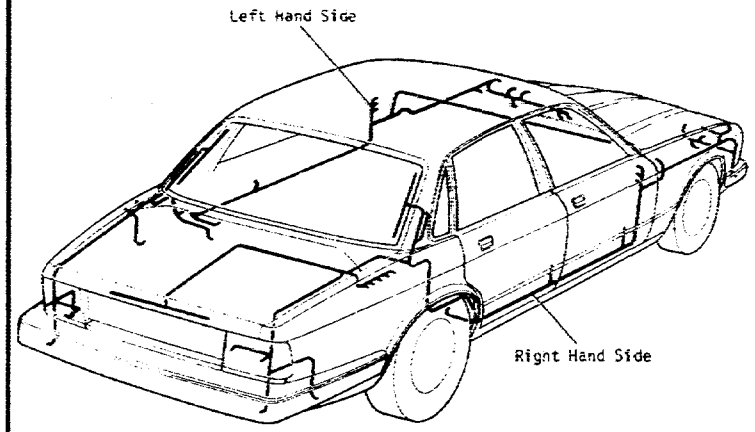

¥S4773


Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2418	Side harness-RH	NLA	(1)	Japan;except 3.2 Litre and 4.0 Litre
	DBC 3090	Side harness-RH	1	(2)	Japan;except 3.2 Litre and 4.0 Litre
	DBC 3214	Side harness-RH	NLA	(3)	Japan;except 3.2 Litre and 4.0 Litre
	DBC 4872	Side harness-RH	NLA	(4)	Japan;except 3.2 Litre and 4.0 Litre
	DBC 5602	Side harness-RH	NLA	(5; 6)	Japan;except 3.2 Litre and 4.0 Litre
	DBC 2508	Side harness-RH	NLA	(7)	Use DBC3216.
					USA;except 3.2 Litre and 4.0 Litre
	DBC 3216	Side harness-RH	NLA	(8)	USA;except 3.2 Litre and 4.0 Litre
	DBC 2416	Side harness-RH	NLA	(1)	Except 3.2 Litre and 4.0 Litre and Japan and USA
	DBC 2508	Side harness-RH	NLA	(2)	Use DBC3216.
					Except 3.2 Litre and 4.0 Litre and Japan and USA
	DBC 3216	Side harness-RH	NLA	(3)	Except 3.2 Litre and 4.0 Litre and Japan and USA
	DBC 4874	Side harness-RH	NLA	(4)	Except 3.2 Litre and 4.0 Litre and Japan
	DBC 5604	Side harness-RH	1	(5; 6)	Except 3.2 Litre and 4.0 Litre and Japan

CHANGE POINTS:

(1) To (V) 507393
(2) From (V) 507394 To (V) 524374
(3) From (V) 524375 To (V) 556850
(4) From (V) 556851 To (V) 583946
(5) From (V) 583947 To (V) 611594 RHD
(6) From (V) 583947 To (V) 612832 LHD
(7) To (V) 506663
(8) From (V) 506664 To (V) 556850

SIDE HARNESS-RH

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 5926	Side harness-RH	1	(1)	3.6 Litre (XJ40);RHD
	DBC 6874	Side harness-RH	NLA	(2)	Use DBC10938
	DBC 10938	Side harness-RH	1		3.6 Litre (XJ40);RHD
	DBC 5925	Side harness-RH	1	(3)	3.6 Litre (XJ40);LHD
	DBC 6873	Side harness-RH	NLA	(2)	Use DBC10937
	DBC 10937	Side harness-RH	1		3.6 Litre (XJ40);LHD
	DBC 1883	Catalyst warning light link harness	1	(4)	Japan
	DBC 1884	Catalyst warning light link harness	1	(5)	Japan
	DBC 5929	Catalyst warning light link harness	1	(6, 7)	Japan

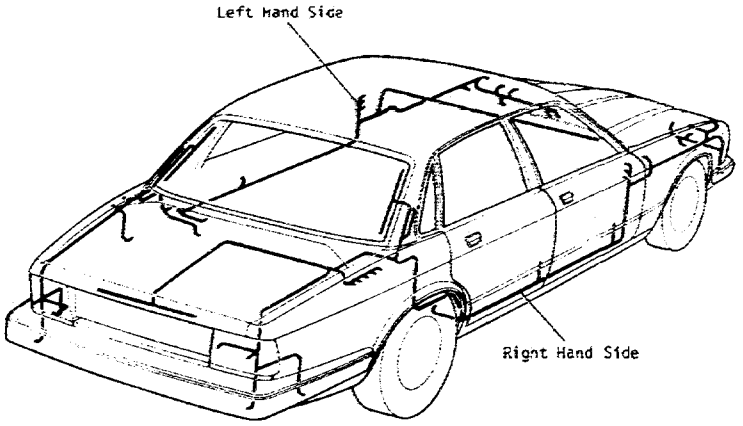

VS4773

CHANGE POINTS:

(1) From (V) 611595 To (V) 629285
(2) From (V) 629286
(3) From (V) 612833 To (V) 629285
(4) To (V) 611594 RHD
(5) To (V) 612832 LHD
(6) From (V) 611595
(7) From (V) 612833

TERMINATED CABLE AND DIODES

ILLUSTRATION TO FOLLOW

Illus	Part Number		Description	Quantity	Change Point	Remarks
	DBC	3561	Pin-0.5mm white cable-PMHD socket connector	NLA		
	DBC	3562	Socket-0.5mm white cable-PMHD socket connector	A/R		
	DBC	3645	Pin-0.5mm white cable-Packard connector	NLA		
	DBC	3565	Pin-0.5mm white cable-PM4 connector	A/R		
	DBC	3567	Pin-1mm blue cable-PM4 connector	NLA		
	DBC	3569	Pin-2mm yellow cable-PM4 connector	NLA		
	DBC	3571	Pin-3mm green cable-PM4 connector	NLA		
	DBC	3566	Socket-0.5mm white cable-PM4 connector	A/R		
	DBC	3568	Socket-1mm blue cable-PM4 connector	A/R		
	DBC	3570	Socket-2mm yellow cable-PM4 connector	A/R		
	DBC	3572	Socket-3mm green cable-PM4 connector	A/R		
	DBC	3612	Socket-0.5mm white cable-TTS socket	NLA		
	DBC	3613	Socket-brass finish-2mm yellow cable-TTS socket	NLA		
	DBC	3614	Socket-brass finish-3mm green cable-TTS socket	NLA		
	DBC	3601	Module contact-0.5mm white cable-Bosch -25 way	NLA		
	DBC	3604	Module contact-2mm yellow cable-Bosch -25 way	A/R		
	DBC	3599	Multi plug contact-type one -0.5mm white cable-MIC 5 way	NLA		
	DBC	3600	Multi plug contact-type two-0.5mm white cable-MIC 5 way	NLA		
	DBC	3608	Multi plug contact-2mm yellow cable-MIC 5 way	NLA		
	DBC	3579	Female lucar connector-0.5mm white cable-relay base	NLA		
	DBC	3580	Female lucar connector-2mm yellow cable-relay base	A/R		
	DBC	3581	Female lucar connector-3mm green cable-relay base	A/R		
	DBC	3575	Female connector-0.5mm white cable-AMP timer	NLA		
	DBC	3576	Female connector-2mm yellow cable-AMP timer	NLA		
	DBC	3551	Pin-0.5mm white cable-AMP Econoseal Series E	A/R		
	DBC	3553	Pin-2mm yellow cable-AMP Econoseal Series E	NLA		
	DBC	3552	Socket-0.5mm white cable-AMP Econoseal Series E	NLA		
	DBC	3554	Socket-2mm yellow cable-AMP Econoseal Series E	NLA		

ILLUSTRATION TO FOLLOW


Illus	Part Number		Description	Quantity	Change Point	Remarks
	DBC	3617	Female connector-Bosch -0.5mm white cable	NLA		
	DBC	3618	Female connector-Bosch -1mm blue cable	NLA		
	DBC	3557	Socket-0.5mm white cable-AMP Econoseal Series J	NLA		
	DBC	3558	Socket-1mm blue cable-AMP Econoseal Series J	NLA		
	DBC	3603	Flag connector-non Kiekert-0.5mm white cable	NLA		
	DBC	3621	Flag connector-Kiekert -0.5mm white cable	NLA		
	DBC	3622	Flag connector-Kiekert -1mm blue cable	NLA		
	DBC	3602	Flag connector-brass finish-0.5mm white cable-AMP connector	NLA		
	DBC	3596	Female lucar connector-brass finish-0.5mm white cable-250 blade Fastin receptable	NLA		
	DBC	3595	Female lucar connector-non brass finish-0.5mm white cable-250 blade Fastin receptable	NLA		
	DBC	3606	Female lucar connector-brass finish-1mm blue cable-250 blade Fastin receptable	NLA		
	DBC	3605	Female lucar connector-non brass finish-1mm blue cable-250 blade Fastin receptable	NLA		
	JLM	1454	Female connector-4 way-0.5mm white cable-ITT Cannon	NLA		
	JLM	1453	Male connector-4 way-0.5mm white cable-ITT Cannon	A/R		
	JLM	1452	Female connector-2 way-0.5mm white cable-ITT Cannon	NLA		
	JLM	1451	Male connector-2 way-0.5mm white cable-ITT Cannon	NLA		
	DBC	3594	Female lucar connector-brass finish-0.5mm white cable-187 blade receptable	NLA		
	DBC	3598	Female lucar connector-non brass finish-0.5mm white cable-187 blade receptable	NLA		
	JLM	1669	Female lucar connector-1mm blue cable-187 blade receptable	NLA		
	DBC	3597	Flag connector-brass finish-0.5mm white cable-250 blade receptable	NLA		
	DGC	1553	Connector-instrument pack	A/R		

TERMINATED CABLE AND DIODES

Illus	Part Number		Description	Quantity	Change Point	Remarks
	JLM	1611	Shrink seal -0.5mm-pink	NLA		
	JLM	1612	Shrink seal -1mm/2mm-blue	NLA		
	JLM	1613	Shrink seal -3mm-yellow	NLA		
	DAC	8782	Diode pack -black	NLA		Use DBC5471
	DBC	5471	Diode pack -black	A/R		
	DAC	8783	Diode pack -red	NLA		Use DBC5472
	DBC	5472	Diode pack -red	A/R		
	DAC	8784	Diode pack -yellow	NLA		Use DBC5471 qty 1 with DBC5472 qty 1.
	DAC	8793	Diode pack -blue	NLA		Use DBC5476
	DBC	5476	Diode pack -blue	A/R		

ILLUSTRATION TO FOLLOW

HARNESS-REAR AXLE

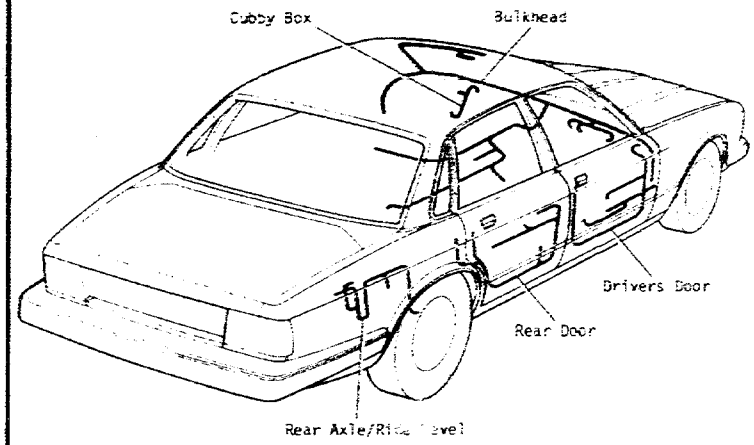


Y54772

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2402	Brake pad sensor harness-RH rear axle	1	(1)	Ride level system
	JLM 1658	Brake pad sensor harness-RH rear axle	NLA	(2)	Use JLM1704
	JLM 1704	Brake pad sensor harness-RH rear axle	1	(2)	Ride level system
	DBC 2362	Brake pad sensor harness-RH rear axle	1	(1)	Except ride level system
	JLM 1656	Brake pad sensor harness-RH rear axle	NLA	(2)	Use DBC3434
	DBC 3434	Brake pad sensor harness-RH rear axle	1	(2)	Except ride level system
	DBC 2403	Brake pad sensor harness-LH rear axle	1	(1)	
	JLM 1657	Brake pad sensor harness-LH rear axle	NLA	(2)	Use DBC3435
	DBC 3435	Brake pad sensor harness-LH rear axle	1	(2)	
	DBC 6595	Brake pad wear sensor-LH rear	1	(3)	
	DBC 6596	Brake pad wear sensor-RH rear	1	(3)	
	DAC 8782	Diode pack -black	NLA		Use DBC5471
	DBC 5471	Diode pack -black	A/R		
	DAC 8783	Diode pack -red	NLA		Use DBC5472
	DBC 5472	Diode pack -red	A/R		
	DAC 8784	Diode pack -yellow	NLA		Use DBC5471 qty 1 with DBC5472 qty 1
	DAC 8793	Diode pack -blue	NLA		Use DBC5476
	DBC 5476	Diode pack -blue	A/R		

CHANGE POINTS:
(1) To (V) 533360
(2) From (V) 533361
(3) From (V) 594576

HARNESS-DOOR

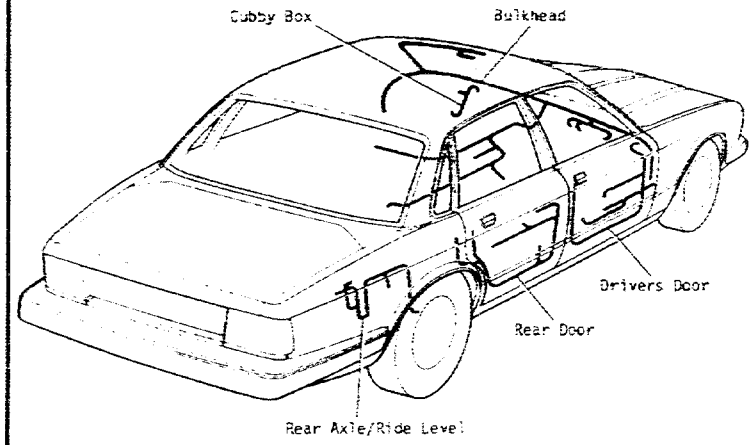

VS4772


Illus	Part Number	Description	Quantity	Change Point	Remarks
DBC	2311	Driver's door harness	NLA	(1; 2)	
DBC	3148	Driver's door harness	NLA	(3; 4)	
DBC	5201	Driver's door harness	NLA	(5)	
DBC	5669	Driver's door harness	NLA	(6)	
DBC	6165	Driver's door harness	1	(7)	
DBC	2310	Door harness-front passenger	1	(1; 2)	
DBC	3149	Door harness-front passenger	1	(8; 9)	
DBC	5670	Door harness-front passenger	1	(6)	
DBC	5531	Door harness-front passenger	1	(7)	
DBC	2063	Door harness-rear passenger	2	(1; 2)	
DBC	3150	Door harness-rear passenger	2	(8; 9)	
DBC	5778	Door harness-rear passenger	2	(6)	
DBC	6126	Door harness-rear passenger	2	(7)	
DBC	1737	Link harness	1	(10)	Manual
DBC	2001	Door harness retaining clip	NLA		Use DBC5417
DBC	5417	Door harness retaining clip	4		
DBC	1729	Cubby box lamp harness	1		

CHANGE POINTS:

(1) To (V) 506664 USA
(2) To (V) 524374 Except USA
(3) From (V) 506665 To (V) 556850 USA
(4) From (V) 524375 To (V) 556850 Except USA
(5) From (V) 556851 To (V) 594575
(6) From (V) 594576 To (V) 629361
(7) From (V) 629362
(8) From (V) 506665 To (V) 594575 USA
(9) From (V) 524375 To (V) 594575 Except USA
(10) To (V) 594575

HARNESS-SEAT

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2512	Seat harness-electric adjust	NLA	(1)	
	DBC 4174	Seat harness-electric adjust	2	(2)	
	DBC 5774	Seat harness-electric adjust	2	(3)	
	DBC 6130	Seat harness-driver's side	1	(4)	
	DBC 6166	Seat harness-passenger side	1	(4)	
	DBC 2414	Link lead-power seat	NLA	(5)	Use DBC5930
	DBC 5930	Link lead-power seat	2	(3)	
	DBC 6913	Link lead-RH	1	(4)	
	DBC 6914	Link lead-LH	1	(4)	
	DBC 3286	Shorting link-power seat	NLA		Use DBC3946
	DBC 3946	Shorting link-trunk	2		
	DBC 2415	Heated seat and interior light harness	NLA	(6)	Use DBC2514
	DBC 2514	Heated seat and interior light harness	NLA	(7)	
	DBC 4780	Heated seat and interior light harness	2	(2)	
	DBC 5931	Heated seat and interior light harness	2	(3)	
	DBC 6134	Heated seat and interior light harness	2	(4)	

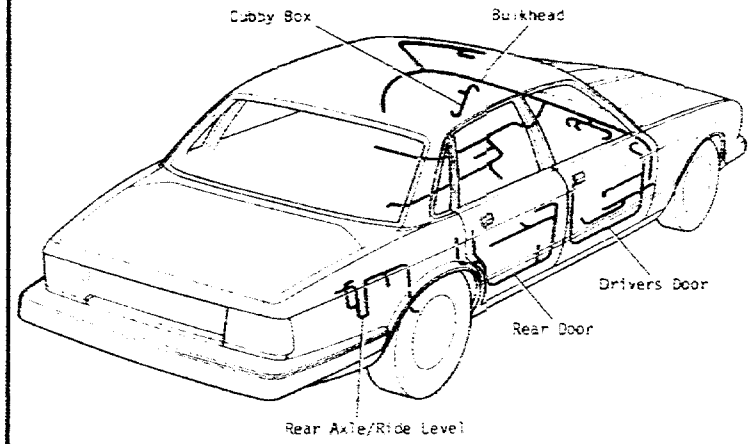


WS4772

CHANGE POINTS.

(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286
(5) To (V) 594575
(6) To (V) 524374
(7) From (V) 524375 To (V) 556850

HARNESS-SEAT

Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 4408	Interior reading lamp link harness	2	(1)	
	DBC 5212	Headrest lamp harness	NLA	(2)	Use DBC6794.
	DBC 6794	Headrest lamp harness	2	(3)	
	DBC 5213	Headrest lamp link harness	NLA	(2)	Use DBC6878.
	DBC 6878	Headrest lamp link harness	2	(3)	Except USA
	DBC 5213	Headrest lamp link harness	NLA	(4)	Use DBC6878.
	DBC 5330	Headrest lamp link harness	NLA	(5)	Use DBC6795.
	DBC 6795	Headrest lamp link harness	2	(3)	USA
	DBC 2408	Fuel pump link harness	1	(6)	

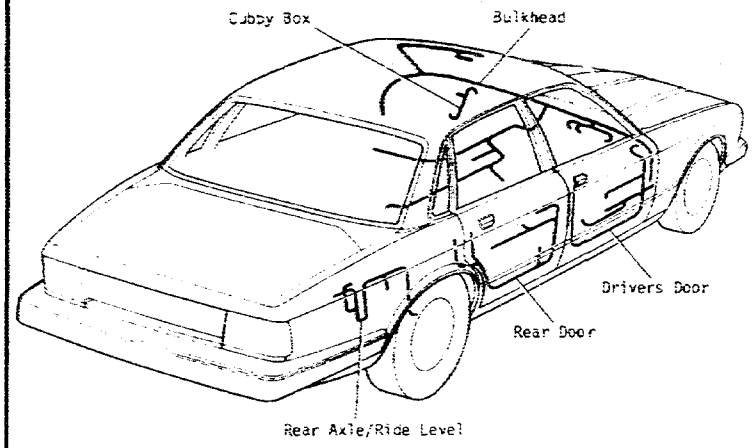


VS4772

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 629285
(3) From (V) 629286
(4) From (V) 556851 To (V) 594575
(5) From (V) 594576 To (V) 629285
(6) To (V) 629285

ACCESSORY FUSEBOX

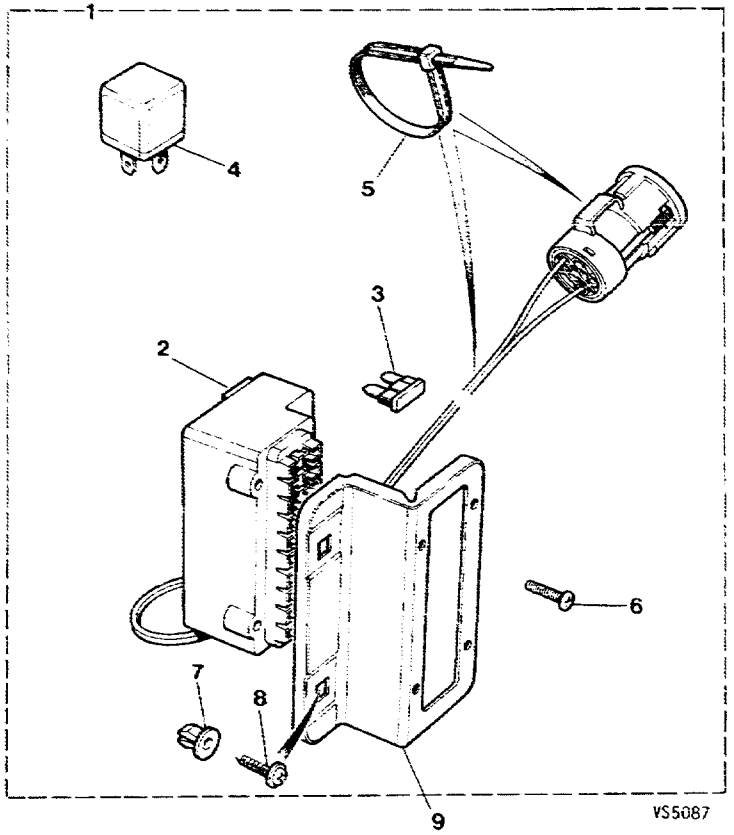

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 1800	ACCESSORY FUSEBOX KIT-10 WAY	NLA		Use JLM2098
2	DBC 3387	• Accessory fusebox-6 way	1		
2	DBC 6751	• Accessory fusebox-10 way	1		
3	DGC 2491	• Fuse-3 amp-violet	NLA		Use LST8724AA
4	DBC 2484	• Relay-black	1		
5	ADU 9028	• Tie strap-7.75" long	2		
6	SE 103084 J	• Screw	4		
7	BBC 3242	• Lokut nut-RH/LH	2		
8	AA 610051 J	• Flanged head screw-no.10 x 0.625"	2		
9	DBC 5982	• Accessory fusebox bracket	1		
1	JLM 2098	ACCESSORY FUSEBOX KIT	1		
2	DBC 6751	• Accessory fusebox-10 way	1		
9	DBC 5982	• Accessory fusebox bracket	1		
6	SE 103084 J	• Screw	4		
7	CZK 3264 J	• Lokut nut-RH/LH	NLA		Use BBC3242
5	ADU 9028	• Tie strap-7.75" long	2		
	C 41014	• Foam pad	2		
	DGC 2658	• Connector-block connector A	1		
	DGC 2660	• Connector-block connector B	1		
4	DBC 2484	• Relay-black	1		
8	AA 610051 J	• Flanged head screw-no.10 x 0.625"	2		
3	LST 8724AA	Fuse-3 amp-violet	A/R		
	C 41014	Foam pad	2		
	DBC 3761	Cubby box fuse label	NLA		

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

FUSEBOXES ..... 3. F 18
MAIN VEHICLE HARNESSES ..... 3. F 02
OCCUPANT COMPARTMENT HARNESSES ..... 3. F 15
RELAYS ..... 3. G 02

ACCESSORY FUSEBOX ..... 3. F 18
HARNESS SHIELDS AND GROMMETS ..... 3. F 02
HARNESS-ALTERNATOR/FRONT AXLE ..... 3. F 04
HARNESS-BULKHEAD ..... 3. F 05
HARNESS-DOOR ..... 3. F 15
HARNESS-REAR AXLE ..... 3. F 14
HARNESS-SEAT ..... 3. F 16
HARNESS-TRANSMISSION ..... 3. F 07
SIDE HARNESS-LH ..... 3. F 08
SIDE HARNESS-RH ..... 3. F 09
TERMINATED CABLE AND DIODES ..... 3. F 11
TRUNK COMPARTMENT RELAY ..... 3. G 02

TRUNK COMPARTMENT RELAY

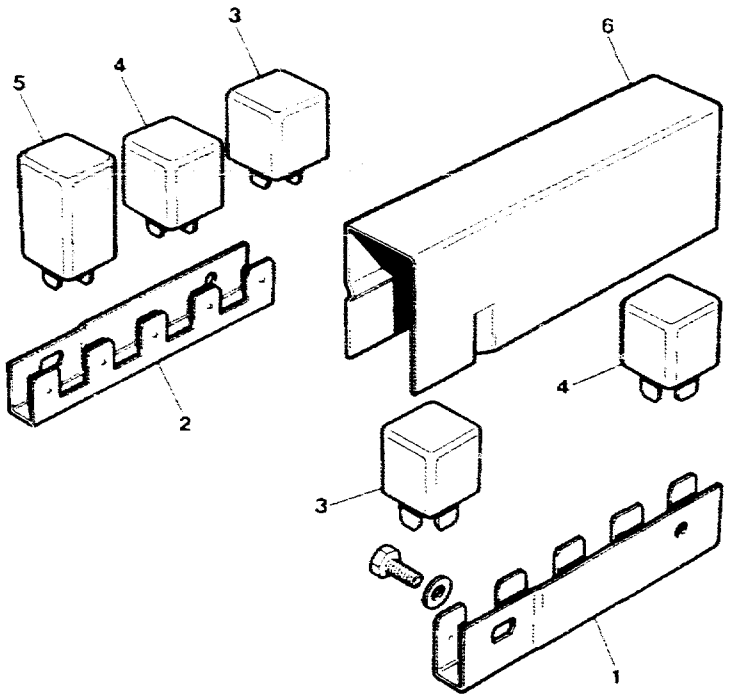

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2672	Relay mounting bracket-RH	1		
2	DBC	2671	Relay mounting bracket-LH	NLA		Use DBC5605
2	DBC	5605	Relay mounting bracket-LH	1		
3	DBC	2483	Reverse inhibit relay-green	2		Trunk release
3	DBC	2483	Reverse inhibit relay-green	2		Electric aerial
3	DBC	2483	Reverse inhibit relay-green	1		Filler flap lock
4	DBC	2484	Relay-black	1		Rear screen heater
4	DBC	2484	Relay-black	1		Brake light simulator
5	DBC	2477	Relay-anti lock brake system	NLA		Use DBC4282
5	DBC	4282	Relay-anti lock brake system	1		
7	DBC	2486	Relay-yellow	1		Suspension
6	DBC	2662	Relay cover-RH	NLA		
6	DBC	2663	Relay cover-LH	1		
	DBC	3946	Shorting link-trunk	1		

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

INSTRUMENT PACK ..... 3. H 02
INSTRUMENT PACK SENSORS ..... 3. H 06
SWITCHES AND CIGAR-LIGHTERS ..... 3. H 07
CONSOLE PANEL ASSEMBLY ..... 3. H 09
CONSOLE SWITCH AND CIGAR-LIGHTER ..... 3. H 07
FACIA SWITCH PANEL-FROM (V)594576 ..... 3. H 12
FACIA SWITCH PANEL-UP TO (V)594575 ..... 3. H 10
INSTRUMENT DISPLAY MODULE-FROM ..... 3. H 03
INSTRUMENT DISPLAY MODULE-FROM ..... 3. H 04
INSTRUMENT DISPLAY MODULE-UP TO ..... 3. H 02
LINEAR GEARBOX INDICATOR SWITCH ..... 3. H 15
SPEED SENSOR ..... 3. H 06
STEERING COLUMN SWITCH-FROM ..... 3. H 14
STEERING COLUMN SWITCH-UP TO ..... 3. H 13
TRUNK LID RELEASE SWITCH ..... 3. H 16

INFORMATION SYSTEMS AND CONTROLS

INSTRUMENT PACK

INSTRUMENT DISPLAY MODULE-UP TO (V)594575

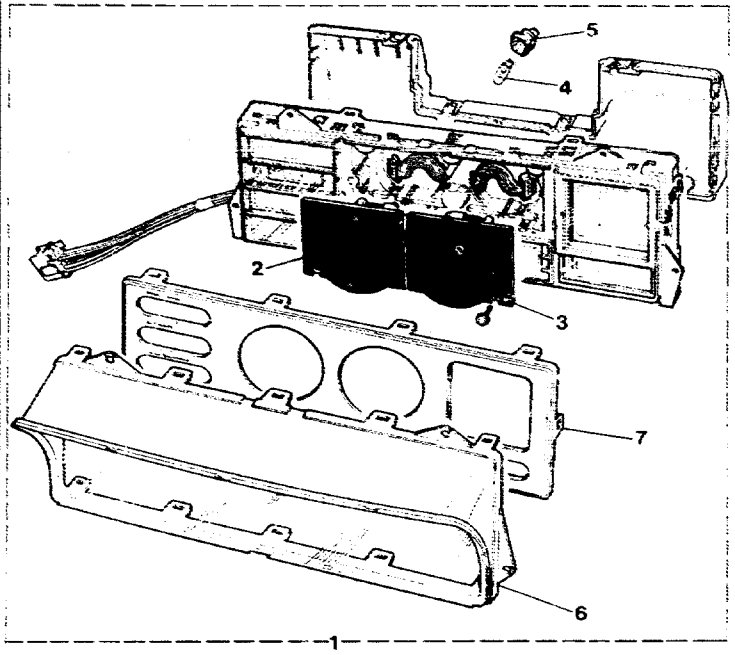


VS4423/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	4835 E	Instrument pack-Mph-remanufactured unit	1	(1)	Except USA
1	DBC	4835	Instrument pack-Mph-new	NLA	(1)	Use DBC4835E
1	DBC	4835 E	Instrument pack-Mph-remanufactured unit	1	(1)	Except USA
1	DBC	4839	Instrument pack-Mph-new	NLA	(1)	USA
1	DBC	4837	Instrument pack-Kph-new	NLA	(1)	Use DBC4837E
1	DBC	4837 E	Instrument pack-Kph-remanufactured unit	1		Except Japan
1	DBC	4840	Instrument pack-Kph-new	NLA	(1)	Use DBC4840E
1	DBC	4840 E	Instrument pack-Kph-remanufactured unit	1		Japan
2	JLM	1571	Speedometer-Mph	NLA	(1)	Use JLM1571E
2	JLM	1571 E	Speedometer-Mph-remanufactured unit	1		
2	JLM	1572	Speedometer-Kph	1	(1)	
3	JLM	1573	Tachometer	1	(1)	
4	JLM	646	Bulb	4	(1)	
5	JLM	647	Bulb holder	4	(1)	
6	JLM	642	Lens-assembly-front	1	(1)	Except USA
6	JLM	1668	Lens-assembly-front	1	(1)	USA
7	JLM	645	Facing plate-assembly-non veneer	NLA	(1)	
7	DBC	3402	Facing plate-assembly-veneer	1	(1)	
	SE	105161 J	Screw-M5 x 16mm	4	(1)	
	AGU	1415	Nut	4	(1)	

CHANGE POINTS.

(1) To (V) 594575

INSTRUMENT DISPLAY MODULE-FROM (V)594576 TO 629285

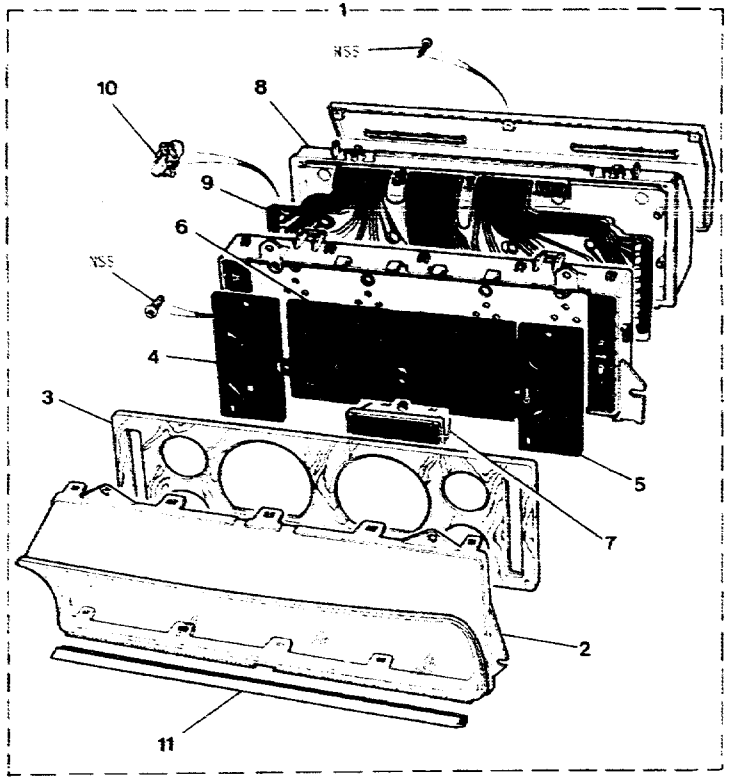

VS4973/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	5392	Instrument display module-Mph	1	(1)	Jaguar,except USA
1	DBC	5398	Instrument display module-Mph	1	(1)	USA,Jaguar
1	DBC	5394	Instrument display module-Kph	1	(1)	Jaguar,except Japan
1	DBC	5396	Instrument display module-Kph	NLA	(1)	Japan,Jaguar
1	DBC	5393	Instrument display module-Mph	1	(1)	Jaguar,Sovereign,except USA
1	DBC	5393	Instrument display module-Mph	1	(1)	Daimler
1	DBC	5395	Instrument display module-Kph	1	(1)	Jaguar,Sovereign,except Japan
1	DBC	5395	Instrument display module-Kph	1	(1)	Daimler,except Japan
1	DBC	5397	Instrument display module-Kph	NLA	(1)	Japan,Jaguar,Sovereign
1	DBC	5397	Instrument display module-Kph	NLA	(1)	Japan,Daimler
2	JLM	1930	Cowl and lens-instrument display module	1	(1)	
3	JLM	1939	Instrument display mask -figured walnut	1	(1)	Jaguar
3	JLM	1940	Instrument display mask -burr walnut	1	(1)	Jaguar,Sovereign,except USA
3	JLM	1940	Instrument display mask -burr walnut	1	(1)	Daimler
3	JLM	1941	Instrument display mask -burr walnut	1	(1)	USA,Jaguar
4	JLM	1933	Battery/fuel gauge-assembly	1	(1)	
5	JLM	1934	Oil/temperature gauge-assembly	1	(1)	
6	JLM	1935	Speedometer/tachometer gauge-Mph	NLA	(1)	Use DBC5392 qty 1 or DBC5393 qty 1 or DBC5398 qty 1
6	JLM	1936	Speedometer/tachometer gauge-Kph	NLA	(1)	Use DBC5394 qty 1 or DBC5395 qty 1 or DBC5396 qty 1 or DBC5397 qty 1
7	JLM	1932	Instrument display module	1	(1)	
8	JLM	2176	Rear electronic pack -imperial	NLA	(1)	Use DBC5392 qty 1 or DBC5393 qty 1 Except USA
8	JLM	2177	Rear electronic pack -metric	NLA	(1)	Use DBC5394 qty 1 or DBC5395 qty 1. Except Japan
8	JLM	2178	Rear electronic pack -imperial	NLA	(1)	Use DBC 5398 USA
8	JLM	2179	Rear electronic pack -metric	NLA	(1)	Use DBC5396 qty 1 or DBC5397 qty 1. Japan
9	JLM	1931	Flexible printed circuit	1	(1)	
10	JLM	1928	Bulb and holder-orange	24	(1)	
10	JLM	1929	Bulb and holder-white	8	(1)	
11	JLM	1937	Trim strip	1	(1)	


CHANGE POINTS.

(1) From (V) 594576 To (V) 629285

INFORMATION SYSTEMS AND CONTROLS

INSTRUMENT PACK

INSTRUMENT DISPLAY MODULE-FROM (V)629286

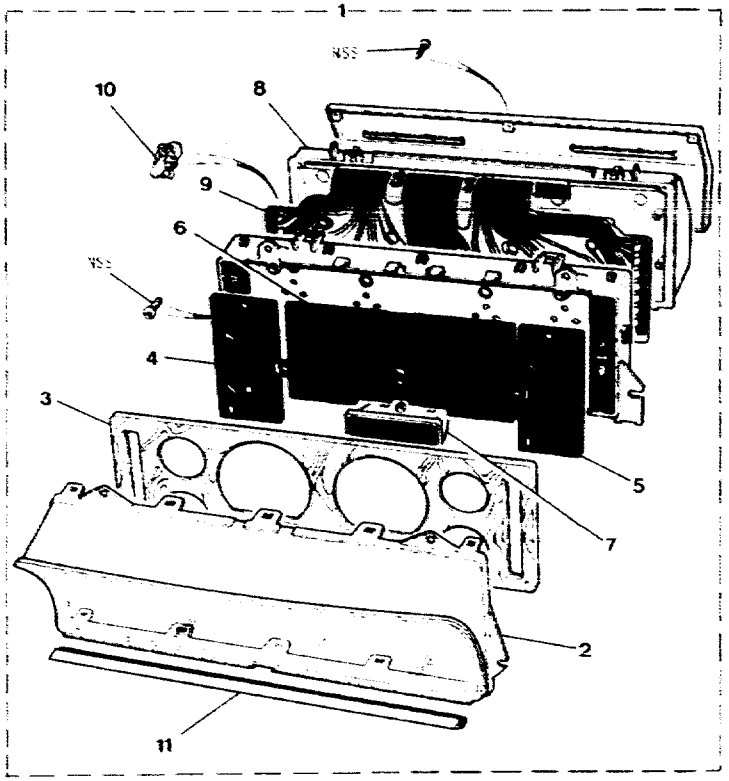


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	6262	Instrument display module-Mph	1	(1)	Jaguar,except USA
1	DBC	6268	Instrument display module-Mph	NLA	(1)	USA,Jaguar
1	DBC	6264	Instrument display module-Kph	1	(1)	Jaguar,except Japan
1	DBC	6266	Instrument display module-Kph	1	(1)	Japan,Jaguar
1	DBC	6263	Instrument display module-Mph	1	(1)	Jaguar,Sovereign,except USA
1	DBC	6263	Instrument display module-Mph	1	(1)	Daimler
1	DBC	6265	Instrument display module-Kph	1	(1)	Jaguar,Sovereign,except Japan
1	DBC	6265	Instrument display module-Kph	0	(1)	Daimler,except Japan
1	DBC	6267	Instrument display module-Kph	1	(1)	Japan,Jaguar,Sovereign
1	DBC	6267	Instrument display module-Kph	1	(1)	Japan,Daimler
2	JLM	1930	Cowl and lens-instrument display module	1	(1)	
3	JLM	1939	Instrument display mask-figured walnut	1	(1)	Jaguar
3	JLM	1940	Instrument display mask-burr walnut	1	(1)	Jaguar,Sovereign,except USA
3	JLM	1940	Instrument display mask-burr walnut	1	(1)	Daimler
3	JLM	1941	Instrument display mask-burr walnut	1	(1)	USA,Jaguar
4	JLM	10535	Battery/fuel gauge-assembly	1	(1)	
5	JLM	10534	Oil/temperature gauge-assembly	NLA	(1)	Use JLM11275.
5	JLM	11275	Oil/temperature gauge-assembly	1		

CHANGE POINTS

(1) From (V) 629286

INSTRUMENT DISPLAY MODULE-FROM (V)629286

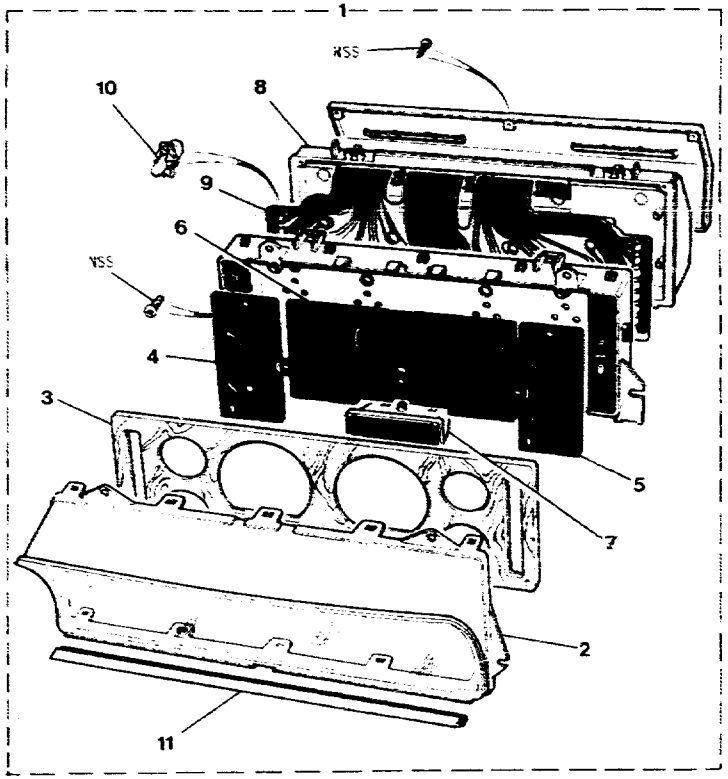


VS4975/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
6	JLM	10536	Speedometer/tachometer gauge-assembly-Mph	NLA	(1)	Use DBC6262 qty 1 or DBC6263 qty 1 or DBC6268 qty 1 or DPP102201 qty 1 or DPP102202 qty 1 or DPP102301 qty 1 or DPP102302 qty 1 or DPP102601 qty 1 or DPP108001 qty 1
6	JLM	10537	Speedometer/tachometer gauge-assembly-Kph	NLA	(1)	Use DBC6264 qty 1 or DBC6265 qty 1 or DBC6266 qty 1 or DBC6267 qty 1 or DPP102401 qty 1 or DPP102402 qty 1 or DPP102403 qty 1 or DPP102404 qty 1 or DPP102501 qty 1 or DPP102502 qty 1 or DPP102503 qty 1 or DPP102504 qty 1 or DPP108101 qty 1
7	JLM	1932	Instrument display module	1	(1)	
8	JLM	10538	Rear electronic pack -Mph	NLA	(1)	Use DBC6262 qty 1 or DBC6263 qty 1
						UK
8	JLM	10541	Rear electronic pack -Mph	NLA	(1)	USA
8	JLM	10540	Rear electronic pack -Kph	NLA	(1)	Use DBC6266 qty 1 or DBC6267 qty 1
						Japan
8	JLM	10539	Rear electronic pack -Kph	NLA	(1)	Use DBC6264 qty 1 or DBC6265 qty 1
						Except Japan
9	JLM	10533	Flexible printed circuit	1	(1)	
10	JLM	1928	Bulb and holder-orange	24	(1)	
10	JLM	1929	Bulb and holder-white	8	(1)	
11	JLM	1937	Trim strip	1	(1)	


CHANGE POINTS.
(1) From (V) 629286

SPEED SENSOR

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3093	Speedometer sensor	NLA		Use DBC6296.
1	DBC 6296	Speedometer sensor	1		
2	CAC 9884	Sensor mounting bracket	1		
3	SH 106161 J	Setscrew-imperial fixing	2		Sensor to bracket
4	WL 106001 J	Plain washer-M6	2		Sensor to bracket
5	BH 108081 J	Bolt	2		
6	WL 108001 J	Spring washer-M8	2		
7	CAC 876725	Speed sensor shim	A/R		
8	JLM 1313	O-ring	1		

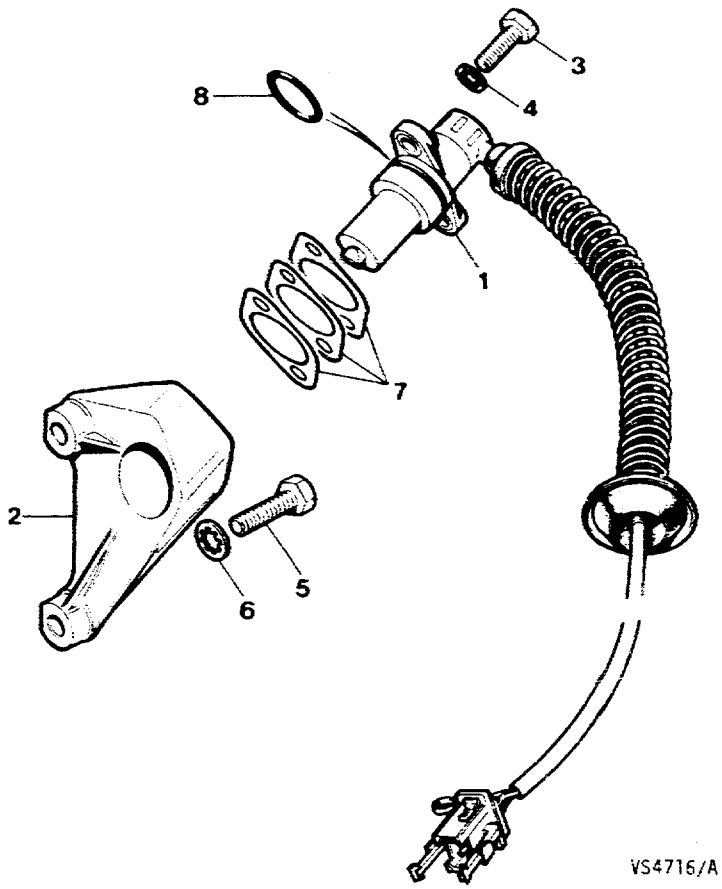

CONSOLE SWITCH AND CIGAR-LIGHTER

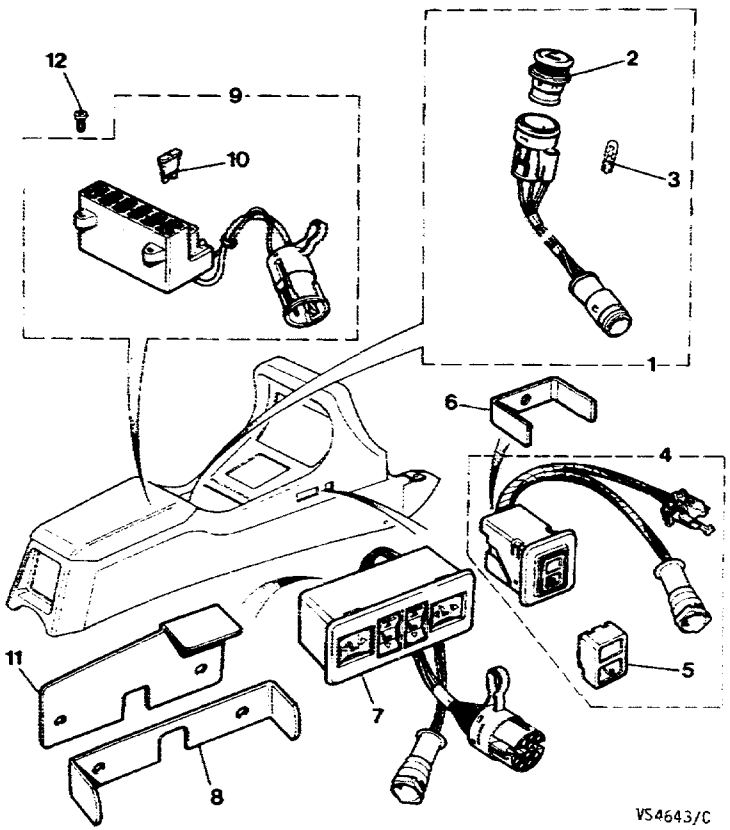


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	860	CIGAR-LIGHTER-ASSEMBLY	2/1	(1)	
2	DBC	3045	• Cigar-lighter element	NLA		Use DBC6677.
3	C	38966	• Bulb-wedge base	1		
1	DBC	6675	CIGAR-LIGHTER-ASSEMBLY	NLA	(2)	Use DBC11342.
2	DBC	6677	• Cigar-lighter element	1		
3	C	38966	• Bulb-wedge base	1		
1	DBC	11342	Cigar-lighter-assembly	NLA	(2)	Use DBC12118.
1	DBC	12118	Cigar-lighter-assembly-rear	NLA	(2)	Use JLM21178.
	DBC	6642	Cigar-lighter link lead -rear	1	(2)	
	DAC	1836	Lighter adaptor plug	NLA		
4	DBC	2962	Seat heater switch -assembly-RH	NLA	(3)	Use DBC4870.
						2.9 Litre
4	DBC	2962	Seat heater switch -assembly-RH	NLA	(9)	Use DBC4870.
						3.6 Litre (XJ40)
4	DBC	2961	Seat heater switch -assembly-LH	NLA	(3)	Use DBC4871.
						2.9 Litre
4	DBC	2961	Seat heater switch -assembly-LH	NLA	(9)	Use DBC4871.
						3.6 Litre (XJ40)
4	DBC	4870	Seat heater switch -assembly-RH	1	(4)	2.9 Litre
4	DBC	4870	Seat heater switch -assembly-RH	1	(10)	3.6 Litre (XJ40)
4	DBC	4870	Seat heater switch -assembly-RH	1	(6)	4.0 Litre
4	DBC	4871	Seat heater switch -assembly-LH	1	(4)	2.9 Litre
4	DBC	4871	Seat heater switch -assembly-LH	1	(10)	3.6 Litre (XJ40)
4	DBC	4871	Seat heater switch -assembly-LH	1	(6)	4.0 Litre
4	DBC	6458	Seat heater switch -assembly-RH	1	(2)	3.2 Litre
						4.0 Litre
4	DBC	6457	Seat heater switch -assembly-LH	1	(2)	3.2 Litre
						4.0 Litre
5	JLM	1220	Seat heater dolly switch -RH	1		
5	JLM	1221	Seat heater dolly switch -LH	1		
6	DBC	2299	Clamp bracket-assembly	2		
	BD	44643 1	Edge strip-35.75"	A/R		
7	DBC	3444	Power seat switch-assembly-RH	NLA	(5)	Use DBC4974.
7	DBC	4974	Power seat switch-assembly-RH	1	(6)	

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 542207
(4) From (V) 542208 To (V) 629285
(5) To (V) 594575
(6) From (V) 594576 To (V) 629285
(7) To (V) 524374
(8) From (V) 524375 To (V) 594575
(9) To (V) 541364
(10) From (V) 541365 To (V) 594575

CONSOLE SWITCH AND CIGAR-LIGHTER

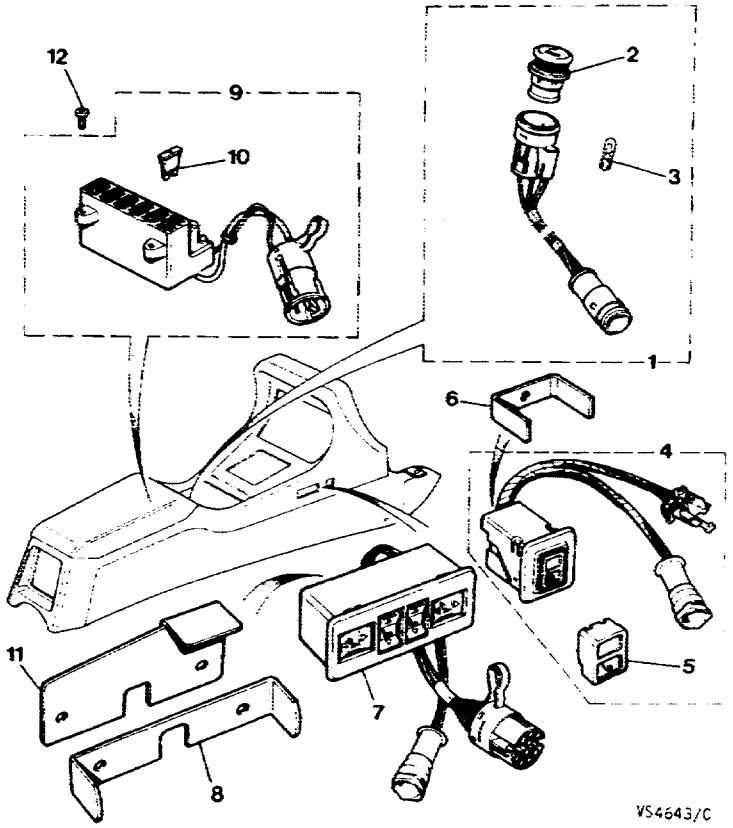


Illus	Part Number	Description	Quantity	Change Point	Remarks
	BD 44643 1	Edge strip-35.75"	A/R		
	DBC 2564	Cable clip attachment bracket	NLA		
	DBC 2471	Cable clip	NLA		
	DBC 2934	Switch mounting bracket	NLA		
	DBC 2980	Cable clip	NLA		Use DBC12117.
	DBC 12117	Cable clip	6		
	DBC 2984	Clip	8		
	AC 606031 J	Countersunk self tapping screw	4		
9	DBC 3981	Cubby box fusebox-assembly	1	(1)	
9	DBC 5573	Cubby box fusebox-assembly	1	(2)	
10	DGC 2491	Fuse-3 amp-violet	NLA		Use LST8724AA.
10	LST 8724AA	Fuse-3 amp-violet	4		
10	DGC 2493	Fuse-5 amp -tan	NLA		Use LST8725AA.
10	LST 8725AA	Fuse-5 amp -tan	1		
10	DGC 2494	Fuse-7.5 amp -brown	1		
11	DBC 6646	Console cable cover -RH	1	(3)	
11	DBC 6647	Console cable cover -LH	1	(3)	
	DBC 2339	Cubby box fuse label	NLA	(1)	Use DBC3761.
					Alternatives
	DBC 3761	Cubby box fuse label	NLA	(1)	Alternatives
	DBC 5713	Cubby box fuse label	1	(4)	
	DBC 6529	Cubby box fuse label	1	(3)	
12	SE 103084 J	Screw	4		

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) From (V) 629286
(4) From (V) 594576 To (V) 629285

CONSOLE PANEL ASSEMBLY

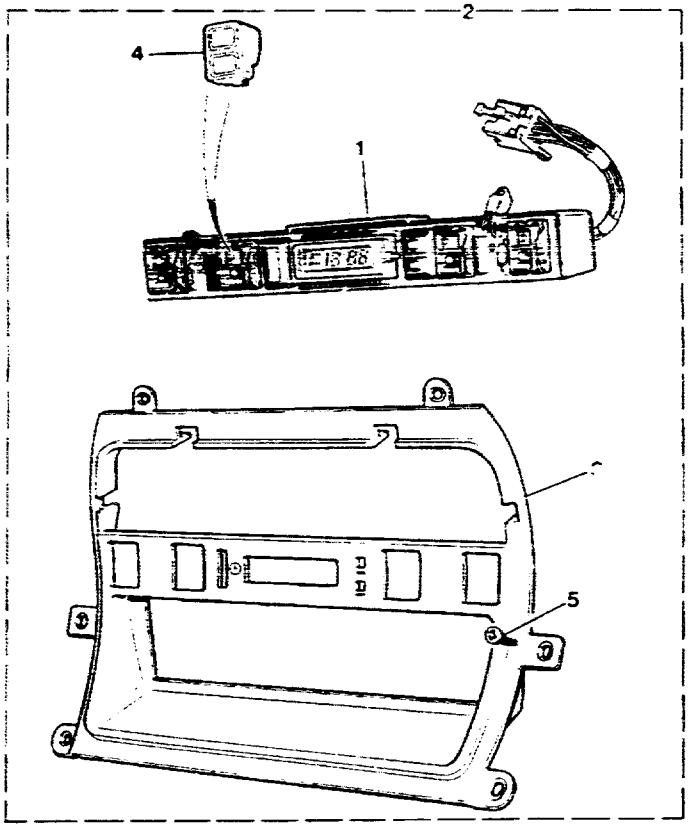


VS4627/B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1457	Console switch module	1	(1)	
1	JLM	1456	Console switch module	NLA	(2)	Use JLM1457
1	JLM	1730	Console switch module	1	(3)	
2	DBC	6161	Switchpack and clock module-assembly	1	(4)	
	JLM	2175	Clock module bulb	A/R		
3	JLM	1215	Console panel moulding	1	(5)	
3	JLM	2229	Console panel moulding	NLA	(3)	Use JLM2260
3	JLM	2260	Console panel moulding	1	(4)	
4	JLM	1216	Switch dolly-heated rear window	1		
4	JLM	1217	Switch dolly-central locking switch	1		
4	JLM	1218	Switch dolly-map lamp	1		
4	JLM	1219	Switch dolly-interior light	1		
5	AR	608051J	Screw	6		

CHANGE POINTS:

(1) To (V) 521286
(2) From (V) 521287 To (V) 556850
(3) From (V) 556851 To (V) 629361
(4) From (V) 629362
(5) To (V) 556850


FACIA SWITCH PANEL-UP TO (V)594575

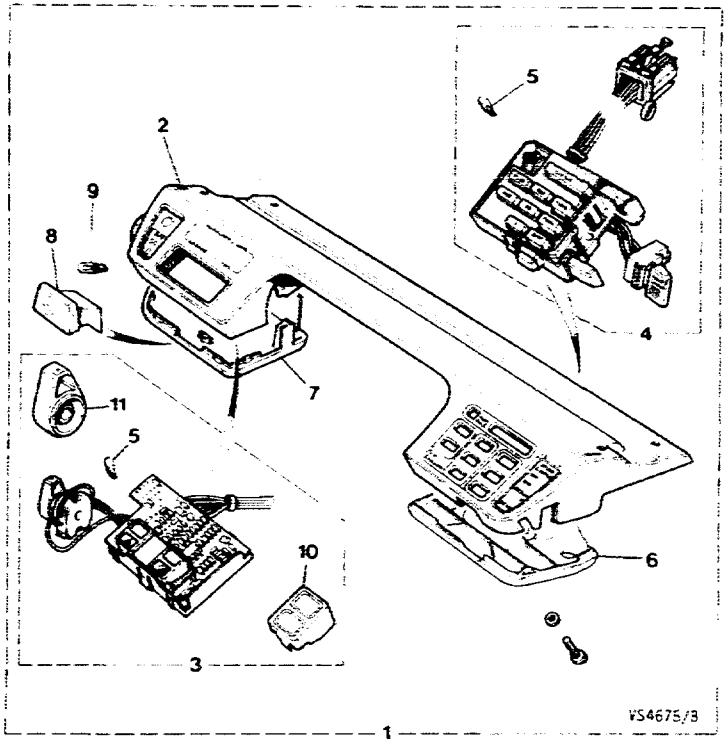

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2286	Facia switch panel-assembly	1	(1)	Rear fog guard;speed control;except Japan and USA
1	DBC 2286	Facia switch panel-assembly	1	(2)	Rear fog guard;USA;speed control
1	DBC 3785	Facia switch panel-assembly	1	(3)	Rear fog guard;USA;speed control
1	DBC 2287	Facia switch panel-assembly	1	(1)	Except rear fog guard and Canada and Japan and USA and speed control
1	DBC 2289	Facia switch panel-assembly	NLA	(1)	Use JLM1896. Japan;speed control;except rear fog guard
1	JLM 1896	Facia switch panel-assembly	1		Japan;speed control;except rear fog guard
1	DBC 2290	Facia switch panel-assembly	NLA	(1)	Use JLM1897. Japan except rear fog guard and speed control
1	JLM 1897	Facia switch panel-assembly	1		Japan;except rear fog guard and speed control
2	JLM 1199	Facia moulding	NLA	(1)	Use JLM2125. Speed control;except Japan and USA
2	JLM 2125	Facia moulding-kit	1		Speed control;except Japan and USA
2	JLM 1200	Facia moulding	1	(1)	Except Japan and USA and speed control
2	JLM 1199	Facia moulding	NLA	(2)	Use JLM2125. USA
2	JLM 2125	Facia moulding-kit	1	(2)	USA
2	JLM 1749	Facia moulding	1	(3)	USA
2	JLM 2000	Facia moulding	1	(1)	Japan;speed control
2	JLM 1202	Facia moulding	NLA	(1)	Use JLM1898. Japan,except speed control
2	JLM 1898	Facia moulding	NLA		Japan;except speed control

CHANGE POINTS:
(1) To (V) 594575
(2) To (V) 556850
(3) From (V) 556851 To (V) 594575


FACIA SWITCH PANEL-UP TO (V)594575

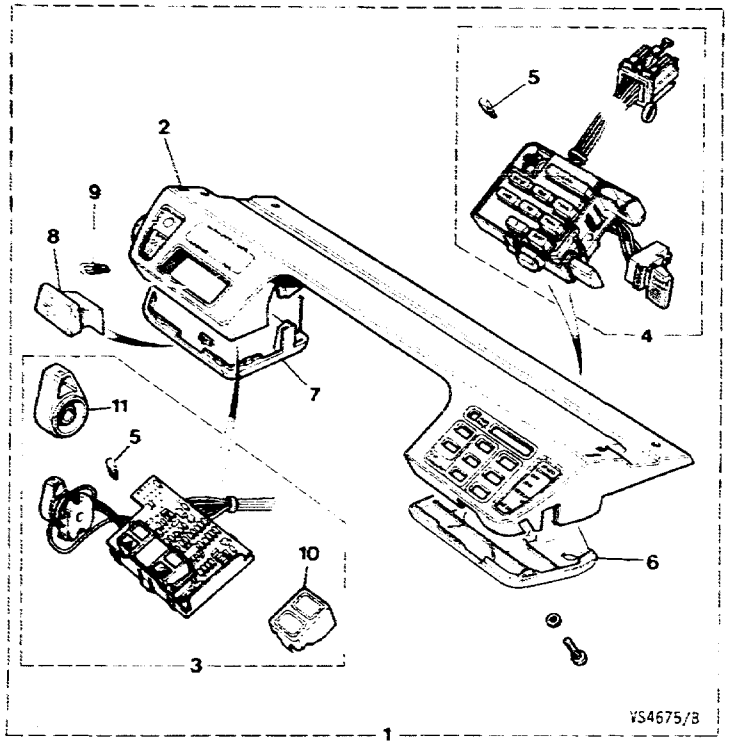

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	JLM	1207	Lighting logic module-facia switch panel	NLA	(1)	Use JLM1899.
						Japan
3	JLM	1899	Lighting logic module	1		Japan
3	JLM	1208	Lighting logic module-facia switch panel	1	(1)	Except Japan and USA
3	JLM	1208	Lighting logic module-facia switch panel	1	(2)	USA
3	JLM	1751	Lighting logic module	1	(3)	USA
4	JLM	1205	Trip computer keyboard-assembly	1	(1)	Except speed control
4	JLM	1206	Trip computer keyboard-assembly	1	(1)	Speed control
5	JLM	1223	Bulb-clear-bayonet	A/R	(1)	
5	JLM	1224	Bulb-12v 1.2w-Green	A/R	(1)	
5	JLM	1225	Bulb-clear-low profile-twistlock	A/R	(1)	
6	JLM	1203	Undertray-RH	NLA	(1)	
7	JLM	1204	Undertray-LH	1	(1)	Except Japan and USA
7	JLM	1204	Undertray-LH	1	(1)	USA
7	JLM	1752	Undertray-LH	1	(3)	USA
7	JLM	1286	Undertray-LH	1	(1)	Japan
8	JLM	1285	Lens-exhaust temperature indicator	1	(1)	Japan
8	JLM	1750	Lens-seatbelt warning	1	(3)	USA
9	JLM	1709	Bulb	NLA	(1)	Japan;USA
10	JLM	1209	Switch dolly-fog lamps-front	1	(1)	
10	JLM	1210	Switch dolly-fog lamps-rear	1	(1)	
10	JLM	1211	Switch dolly-hazard warning	1	(1)	
10	JLM	1212	Switch dolly-lighting logic module-blank	1	(1)	
11	JLM	1213	Rotary lamp switch knob	1	(1)	
	DBC	2013	Spire clip	4	(1)	

CHANGE POINTS:
(1) To (V) 594575
(2) To (V) 556850
(3) From (V) 556851 To (V) 594575

FACIA SWITCH PANEL-FROM (V)594576

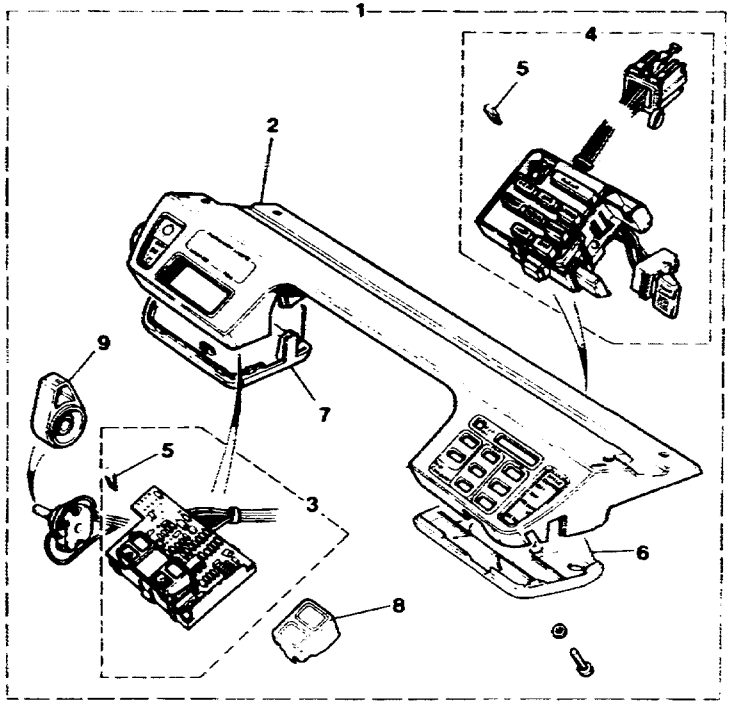


VS5369

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 4855	Facia switch panel-assembly-speed control	1	(1)	Except USA
1	DBC 4856	Facia switch panel-assembly-non speed control	1	(1)	Except Canada and USA
1	DBC 5235	Facia switch panel-assembly-non speed control	1	(1)	USA
2	JLM 1991	Facia moulding	1	(1)	Speed control,except USA
2	JLM 1992	Facia moulding	1	(1)	Except Canada and USA and speed control
2	JLM 1993	Facia moulding	1	(1)	USA
3	JLM 1208	Lighting logic module-facia switch panel	1	(1)	Except USA
3	JLM 2067	Lighting logic module	NLA	(1)	Use JLM10992
					USA
3	JLM 10992	LIGHTING LOGIC MODULE-KIT	1		USA
3	JLM 2067	• Lighting logic module	NLA		Use JLM10992
4	JLM 1952	Trip computer-assembly	1	(1)	Speed control
	JLM 11479	Trip computer module	1	(1)	Speed control switch
4	JLM 2045	Trip computer-assembly	1	(1)	Except speed control
5	JLM 1223	Bulb-clear-bayonet	A/R	(1)	
5	JLM 1224	Bulb-12v 1.2w-Green	A/R	(1)	
5	JLM 1225	Bulb-clear-low profile-twistlock	A/R	(1)	
6	JLM 2126	Undertray-RH	1	(1)	
7	JLM 1204	Undertray-LH	1	(1)	
8	JLM 1209	Switch dolly-fog lamps-front	1	(1)	
8	JLM 1210	Switch dolly-fog lamps-rear	1	(1)	
8	JLM 1211	Switch dolly-hazard warning	1	(1)	
8	JLM 1212	Switch dolly-lighting logic module-blank	1	(1)	
9	JLM 1213	Rotary lamp switch knob	1	(1)	
	DBC 2013	Spire clip	4	(1)	
	JLM 10589	Screw	1	(2)	

CHANGE POINTS:
(1) From (V) 594576
(2) From (V) 629286

STEERING COLUMN SWITCH-UP TO (V)594575

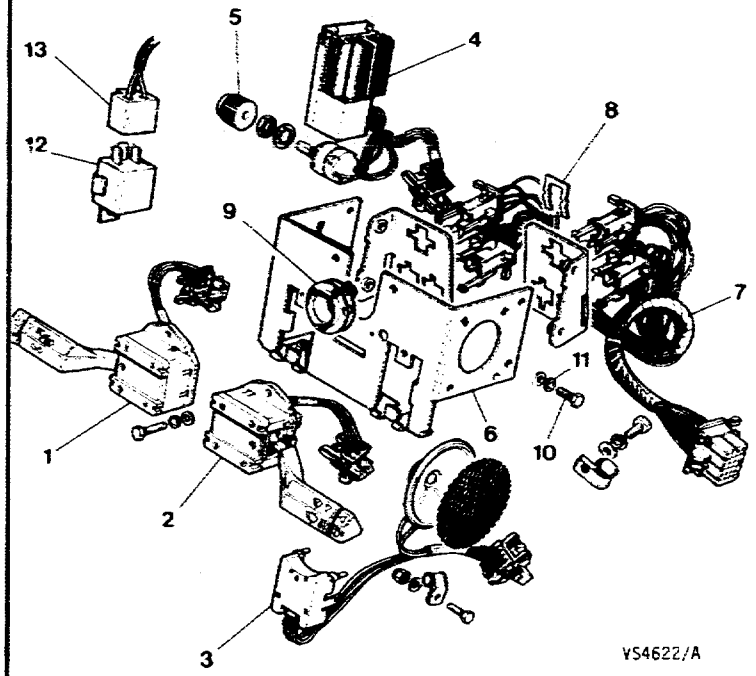


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	504	Direction indicator switch-assembly	1	(1)	
2	JLM	505	Windscreen wiper switch-assembly	1	(1)	
3	JLM	506	Cancellation module-direction indicator	1	(1)	
4	JLM	507	Dimmer switch-assembly	NLA	(1)	Use DBC5404
4	DBC	5404	Dimmer switch-assembly	NLA		Use JLM1996
4	JLM	1996	Dimmer switch-assembly	1		
5	DBC	2650	Dimmer control knob-assembly	1	(1)	
6	JLM	509	Main bracket-assembly	1	(1)	
7	JLM	510	Column switch harness-assembly	1	(1)	
8	JLM	511	Connector retention clip	6	(1)	
9	DAC	8372	Cancellation ring	NLA	(2)	Use DBC3750
9	DBC	3750	Cancellation ring	1	(3)	
10	SH	104081 J	Screw	2	(1)	
11	WE	104001 J	Shakeproof washer-M4	2	(1)	
12	DBC	5166	Lights on warning module	1	(1)	
13	DBC	5167	Link lead	NLA	(1)	

CHANGE POINTS:

(1) To (V) 594575
(2) To (V) 524374
(3) From (V) 524375 To (V) 594575

STEERING COLUMN SWITCH-FROM (V)594576

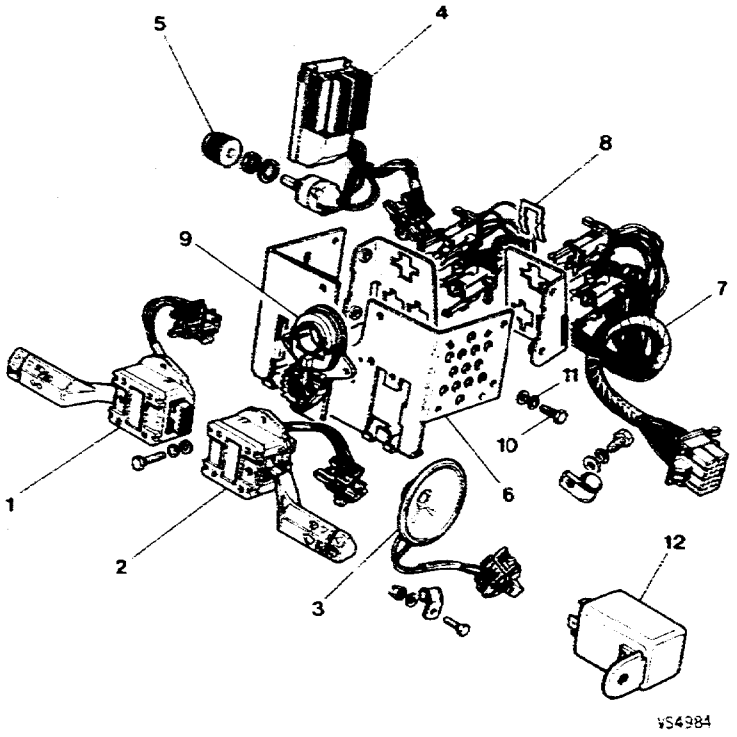

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1997	Direction indicator switch-assembly	1	(1)	
2	JLM	505	Windscreen wiper switch-assembly	1	(1)	
3	JLM	1990	Direction indicator speaker-assembly-64 ohm	1	(1)	
4	JLM	1996	Dimmer switch-assembly	1	(2)	
4	JLM	10554	Dimmer switch-assembly	1	(3)	
5	DBC	2650	Dimmer control knob-assembly	1	(1)	
6	JLM	509	Main bracket-assembly	1	(1)	
7	JLM	1994	Column switch harness-assembly	1	(1)	
8	JLM	511	Connector retention clip	6	(1)	
9	JLM	1995	Cancellation ring	1	(1)	
10	SH	04081	Screw	2	(1)	
11	WE	04001	Shakeproof washer	2	(1)	
12	DBC	5453	Lights on warning module	1	(1)	

CHANGE POINTS

(1) From (V) 594576

(2) From (V) 594576 To (V) 629285


(3) From (V) 629286

INFORMATION SYSTEMS AND CONTROLS

SWITCHES AND CIGAR-LIGHTERS

LINEAR GEARBOX INDICATOR SWITCH-AUTOMATIC

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2684	Linear switch	1	(1)	2.9 Litre
2	CBC 1564	J-plate side mounting plate	NLA		
3	WA 104001 J	Plain washer	2		
4	SB 104124 J	Setscrew	2		
5	SL 104121 J	Taptite screw	3		
6	SM 104121 J	Screw	1		
7	DBC 5733	Harness shield	1		
8	DBC 5465	Harness shield clip	1		

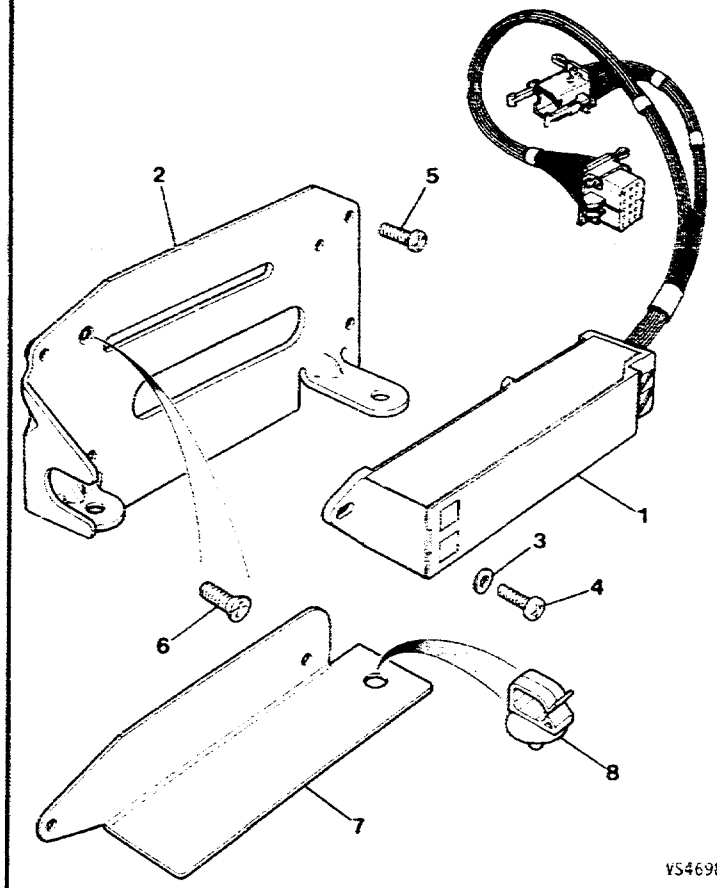


VS4698/A

CHANGE POINTS:

(1) To (V) 594575

TRUNK LID RELEASE SWITCH

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5028	RELEASE SWITCH	1	(1)	
2	DBC 5030	• Switch	NLA		Use DBC5028
3	BEC 2433	Switchpack housing	NLA	(1)	RHD
3	BEC 2432	Switchpack housing	1	(1)	LHD
4	AGU 2439J	Screw	2	(1)	

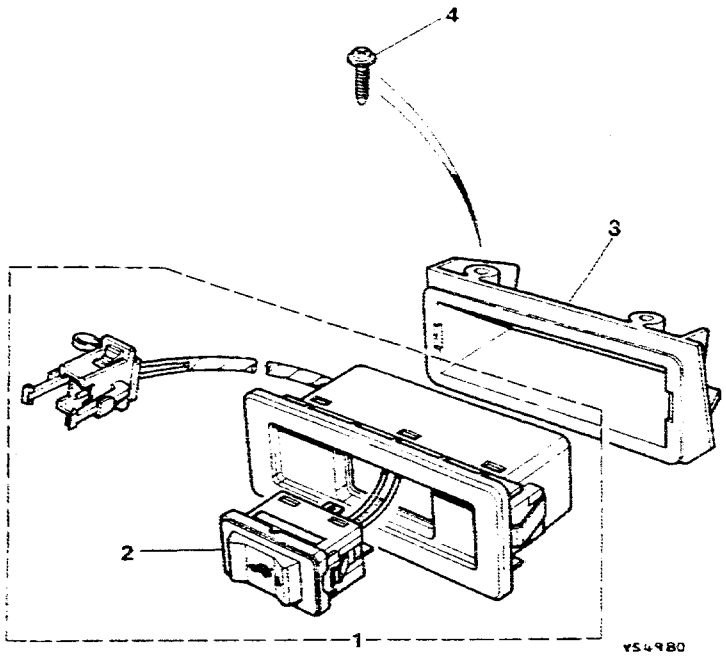

CHANGE POINTS
(1) From (V) 594576


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

BATTERY AND FIXINGS 3. I02
IGNITION SWITCH 3. I11
STARTER MOTOR 3. I07
ALTERNATOR AND MOUNTING-TO 3. I09
ALTERNATOR MOUNTING-FROM (V)507394 ..... 3. I10
ALTERNATOR-FROM (V)507394 ..... 3. I08
BATTERY FIXINGS AND HEATSHIELD-UP TO 3. I02
BATTERY FIXINGS AND HEATSHIELD- 3. I03
BATTERY ISOLATION SWITCH 3. I04
BATTERY LEADS AND TERMINAL POST 3. I05
STARTER MOTOR 3. I07
STEERING COLUMN LOCK AND COVERS 3. I12
STEERING COLUMN LOCK 3. I11

BATTERY FIXINGS AND HEATSHIELD-UP TO (V)594575

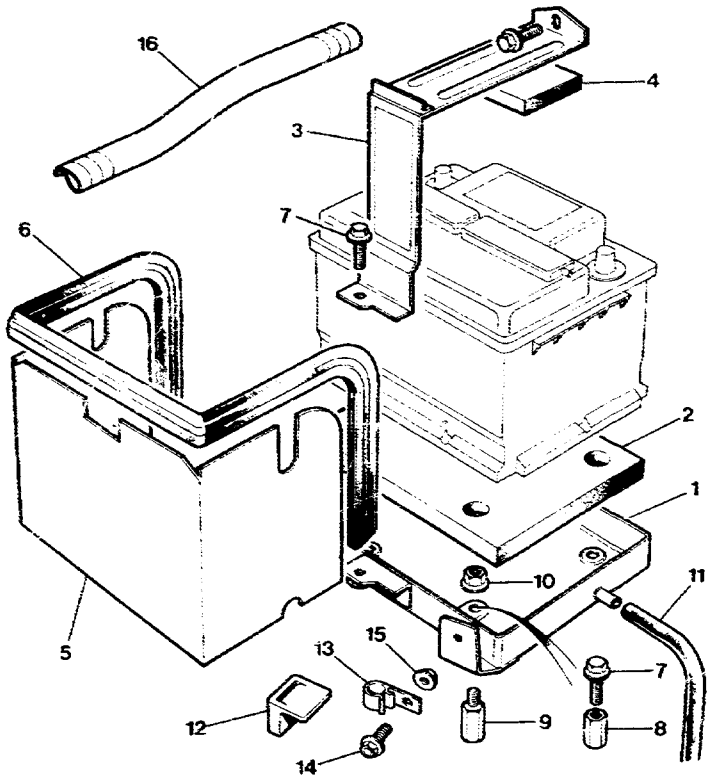

VS4919/3

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2957	Battery tray-non vented battery	NLA	(1)	RHD
1	DBC 3448	Battery tray-non vented battery	NLA	(2)	RHD
1	DBC 3424	Battery tray-vented battery	1	(3)	RHD
1	DBC 2958	Battery tray-non vented battery	NLA	(1)	LHD
1	DBC 3449	Battery tray-non vented battery	NLA	(2)	LHD
1	DBC 3425	Battery tray-vented battery	1	(3)	LHD
2	DBC 3281	Battery spacer	1		
3	DBC 2933	Clamp bracket-assembly	1		
4	DBC 3401	Adhesive pad-non vented battery	1		
4	DBC 3795	Adhesive pad-vented battery	2		
5	DBC 3049	Battery heatshield	NLA	(1)	RHD
5	DBC 3273	Battery heatshield	1	(2)	RHD
5	DBC 3050	Battery heatshield	NLA	(1)	LHD
5	DBC 3107	Battery heatshield	1	(2)	LHD
6	DBC 4252	Heatshield edge strip	1		
7	FS 108141 J	Setscrew	6		
8	CAC 71014	Battery tray pillar nut	NLA	(1)	Except vented battery
8	CAC 71015	Battery tray pillar nut	NLA	(1)	Except vented battery
8	CAC 710110	Battery tray pillar nut-short	NLA	(2)	Except vented battery
8	CAC 710111	Battery tray pillar nut-long	2	(2)	Except vented battery
9	DBC 39141	Battery tray pillar nut-long	2	(3)	Vented battery
9	DBC 39142	Battery tray pillar nut-short	2	(3)	Vented battery
10	DBC 2664	Flanged nut -8mm	NLA	(3)	Use JFD10806E.
					Vented battery
10	JFD 10806E	Flanged nut -8mm	4		Vented battery
11	CBC 259110	Battery tray drain tube	NLA	(3)	Use CBC259113.
					RHD
	CBC 259113	Hose	1		RHD
12	DBC 2580	Protective sleeve	1		
13	ADU 8951 J	P-clip-0.5" diameter	1		
14	FS 105121 J	Flanged head screw-M5	1		
15	FN 105045 J	Nut-M5	1		
16	DBC 49911	Cable armouring-positive/negative cable	2		


CHANGE POINTS:

(1) To (V) 506033

(2) From (V) 506034 To (V) 594575

(3) To (V) 594575

BATTERY FIXINGS AND HEATSHIELD-FROM(V)594576

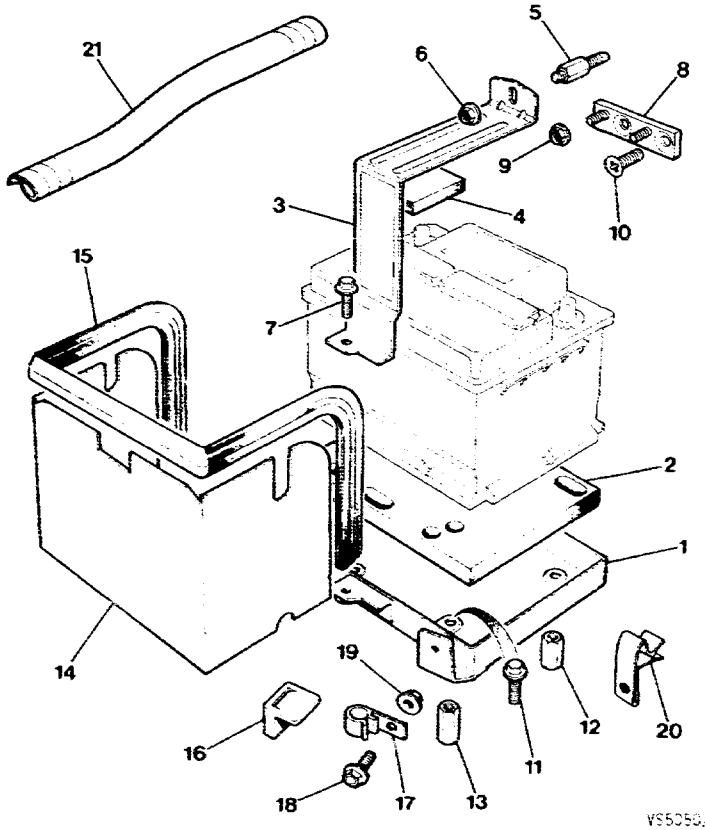

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5641	Battery tray-assembly	1	(1)	RHD
1	DBC 5640	Battery tray-assembly	1	(2)	LHD
1	DBC 10489	Battery tray-assembly	1	(3)	LHD
2	DBC 5989	Battery spacer	NLA		Use DBC6643
2	DBC 6643	Battery spacer	NLA		
3	DBC 5841	Clamp bracket-assembly	1		RHD
3	DBC 5841	Clamp bracket-assembly	1	(2)	LHD
3	DBC 10491	Clamp bracket-assembly	1	(3)	LHD
4	DBC 5823	Adhesive pad	NLA	(2)	Use DBC6171
4	DBC 6171	Adhesive pad	NLA		
4	DBC 10506	Adhesive pad	1	(3)	
5	DBC 56662	Pillar stud-41.5mm length	1	(2)	
6	FN 108041J	Flanged nut -M8	1		
	SH 108121J	Setscrew	1	(2)	
7	FS 108161J	Flange screw-M8	2	(3)	LHD
8	DBC 10492	Clamping bracket spacer	1	(3)	LHD
9	FN 106041J	Flange nut-M6	2	(3)	LHD
10	JZS 100016	Countersunk screw	2	(3)	LHD
11	FS 108121J	Flange screw	4		
12	CAC 7101 10	Battery tray pillar nut-short	NLA		
13	CAC 7101 11	Battery tray pillar nut-long	2		
14	DBC 3273	Battery heatshield	1	(1)	RHD
14	DBC 3107	Battery heatshield	1	(2)	LHD
14	DBC 10697	Battery heatshield	1	(3)	LHD
15	DBC 4252	Heatshield edge strip	1		
16	DBC 2580	Protective sleeve	1		
17	ADU 8951J	P-clip-0.5" diameter	1		
18	FS 105121J	Flanged head screw-M5	1		
19	FN 105045J	Nut-M5	1		
20	DBC 3797	Vent/drain tube support	1		
21	DBC 4991 1	Cable armouring-positive/negative cable	2		
	CAC 9314	Battery acid warning label	1		

CHANGE POINTS:

(1) From (V) 594576

(2) From (V) 594576 To (V) 653467


(3) From (V) 653468

BATTERY/STARTER MOTOR/ALTERNATOR

BATTERY AND FIXINGS

BATTERY ISOLATION SWITCH

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 10778	BATTERY ISOLATION SWITCH KIT	1		Note (1)
1	DBC 10618	• Battery isolation switch	NiA		Use JLM10778.

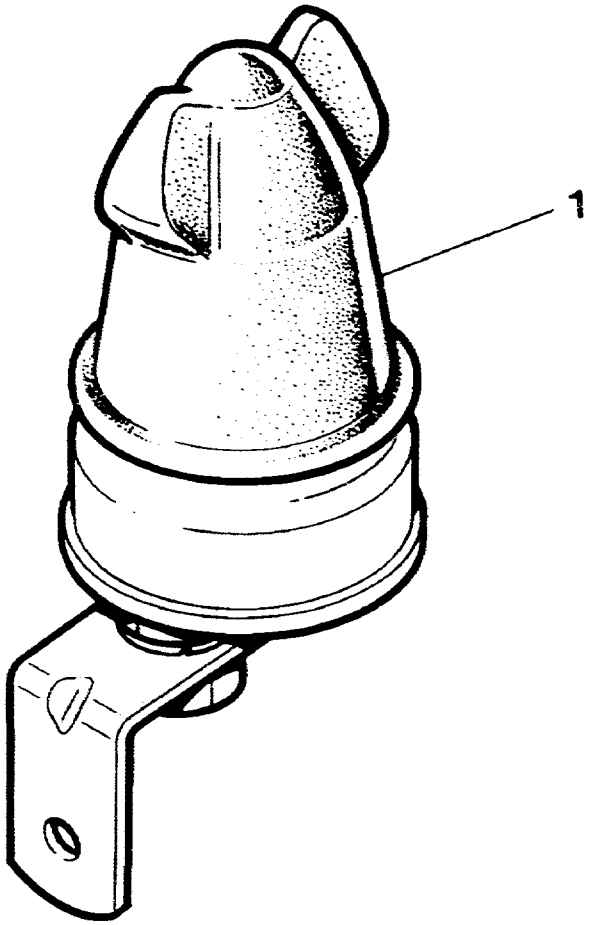


VS5161

Remarks

(1) Service Bulletin JD 06/91 item 44

BATTERY LEADS AND TERMINAL POST

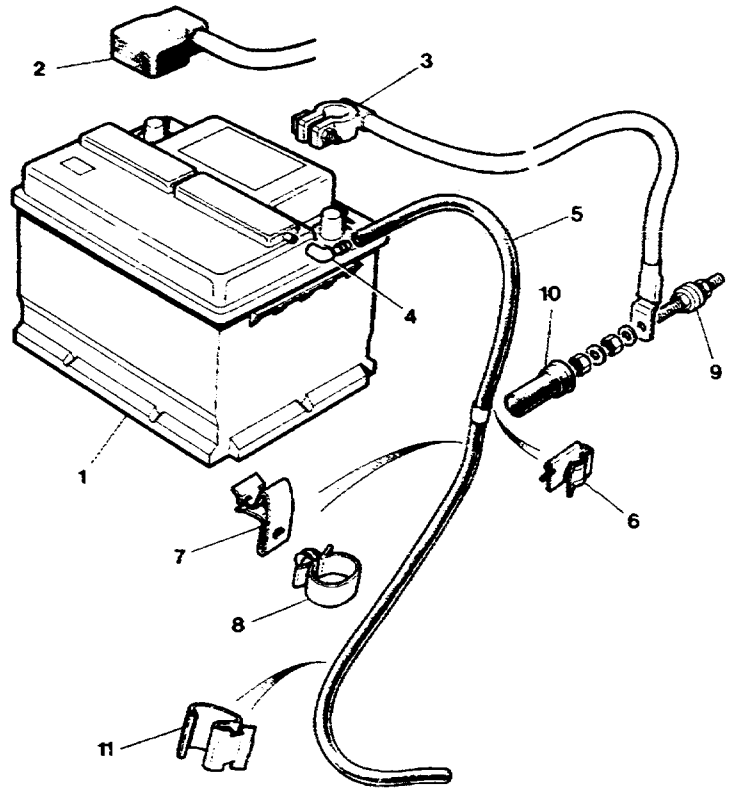


VS4918/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3135	Battery-dry	NLA		Use JLM9992 qty 1 with DBC3694 qty 1 with DBC3796 qty 1 with DBC3797 qty 1 with AGU1085 qty 1 with DBC3798 qty 1
1	DAC 4545	Battery-wet	NLA	(1)	Use DBC5994
1	JLM 9992	Battery-dry	NLA	(1)	Use DBC5995.
1	DBC 5994	Battery-wet	NLA	(2)	Use DBC6427.
1	DBC 5995	Battery-dry	NLA	(2)	Use JLM10453.
1	DBC 6427	Battery-52 amp/hr-wet	1	(3)	
1	JLM 10453	Battery-dry	1	(3)	LHD
1	DBC 6429	Battery-72 amp/hr-wet	NLA	(4)	Use LNA1250BA.
1	LNA 1250BA	Battery-72 amp/hr-wet	NLA	(4)	Use LNA1250BB.
1	LNA 1250BB	Battery-72 amp/hr-wet	NLA	(4)	Use LNC1250AA.
1	LNC 1250AA	Battery-72 amp/hr-wet	1	(4)	RHD
1	JLM 10455	Battery-dry	NLA	(4)	Use LNA1250BA1.
1	LNA 1250BA 1	Battery-72 amp/hr-dry	NLA	(4)	Use LNA1250BB1.
1	LNA 1250BB 1	Battery-72 amp/hr-dry	NLA	(4)	Use LNC1250AA1.
1	LNC 1250AA 1	Battery-72 amp/hr-dry	1	(4)	LHD
2	DBC 3205	Battery cable-assembly-positive	NLA	(5)	
2	DBC 5292	Battery cable-assembly-positive	1	(6)	
2	DBC 10686	Battery cable-assembly-positive	1	(4)	
3	DBC 2899	Battery cable-assembly-negative	1	(1)	RHD
3	DBC 5736	Battery cable-assembly-negative	1	(7)	RHD
3	DBC 2900	Battery cable-assembly-negative	1	(1)	LHD
3	DBC 5737	Battery cable-assembly-negative	1	(8)	LHD
3	DBC 10650	Battery cable-assembly-negative	1	(4)	LHD

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 629285
(3) From (V) 629286 To (V) 653467
(4) From (V) 653468
(5) To (V) 591101
(6) From (V) 591102
(7) From (V) 594576
(8) From (V) 594576 To (V) 653467

BATTERY LEADS AND TERMINAL POST

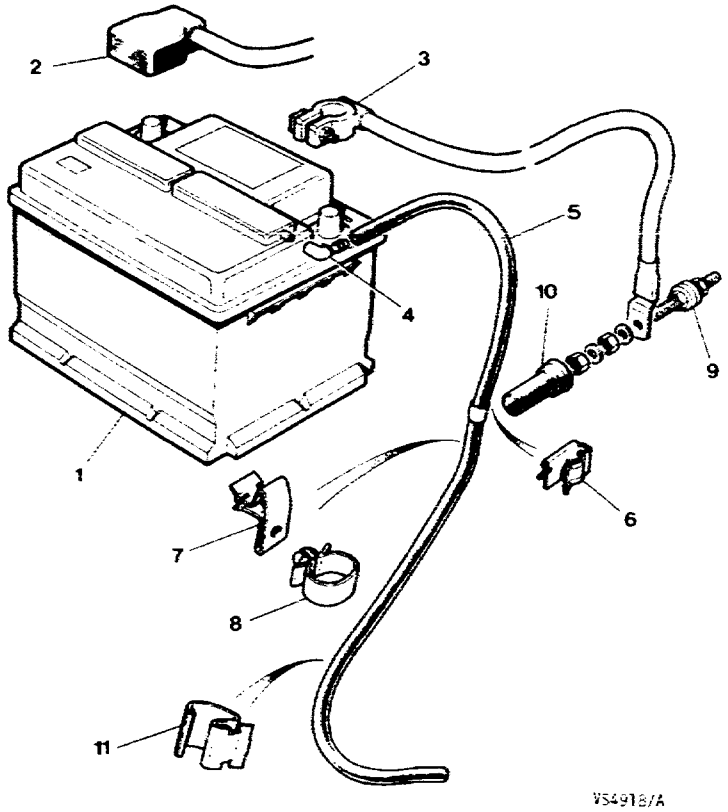


Illus	Part Number		Description	Quantity	Change Point	Remarks
	DBC	2905	Positive terminal cover	NLA		
	DBC	2898	Battery cable grommet	1		
4	DBC	3694	Battery vent elbow	1	(1)	
4	DBC	6621	Battery vent elbow	1	(2)	
5	DBC	3796	Battery vent tube	NLA	(3)	Use DBC56432 LHD
5	DBC	4776	Battery vent tube	NLA	(3)	Use DBC56432 RHD
5	DBC	56432	Battery vent tube-920/926mm	A/R	(4)	
5	DBC	66793	Battery vent tube-1170/1180mm	A/R	(2)	
6	AGU	1085	Edge clip	1		
7	DBC	3797	Vent/drain tube support	1		
8	DBC	37981	Clip	1		
	JLM	2236	Vent tube conversion kit	1		LHD
	JLM	10747	Vent tube conversion kit	1		RHD
	JLM	10460	Battery hose kit	1	(5)	
	JLM	10461	Battery hose kit	1	(6)	
9	C	45021	Terminal post -assembly	2	(7)	Alternatives
9	DBC	3159	Terminal post -assembly	NLA	(7)	Use DBC5097 Alternatives
9	DBC	5097	Terminal post -assembly	NLA	(8)	Use DBC6167
9	DBC	6167	Terminal post -assembly	NLA	(9)	Use DBC6877
9	DBC	6877	Terminal post -assembly	2	(2)	
10	DBC	2647	Terminal post sleeve	2		
11	DBC	6680	Battery vent tube edge clip	2	(2)	
	WE	110001J	Shakeproof washer-earth stud	4		
	NH	110110J	Brass nut	4		
	DBC	49911	Cable armouring-positive/negative cable	2	(1)	
	C	37330	Spring clip	1		

CHANGE POINTS

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 591101
(4) From (V) 591102 To (V) 629285
(5) From (V) 580083 To (V) 594575
(6) From (V) 594576 To (V) 620136
(7) To (V) 556850
(8) From (V) 556851 To (V) 600435
(9) From (V) 600436 To (V) 629285


STARTER MOTOR

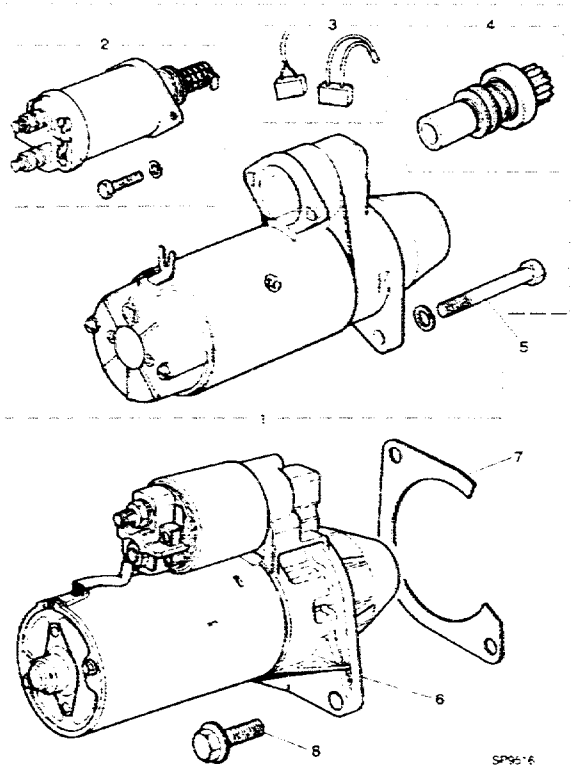

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	1939 N	Starter motor-new	NLA	(1; 2)	
1	DBC	1939 E	STARTER MOTOR-REMANUFACTURED UNIT	NLA	(1; 2)	
2	JLM	159	• Solenoid	1		
3	JLM	9654	• Brush set	1		
4	JLM	160	• Starter motor drive-assembly	NLA		Use 37H8362J.
4	37H	8362 J	Starter motor drive-assembly	NLA	(1, 2)	Use RTC1324.
4	RTC	1324	Starter motor drive-assembly	1	(1; 2)	
5	AEU	1119	Washer headed bolt	NLA	(1; 2)	
6	DBC	2937 N	STARTER MOTOR-ASSEMBLY-NEW	1	(3; 4)	
6	DBC	2937 N	STARTER MOTOR-ASSEMBLY-NEW	1		3.2 Litre
6	DBC	2937 N	STARTER MOTOR-ASSEMBLY-NEW	1		4.0 Litre
6	DBC	2937 E	STARTER MOTOR-REMANUFACTURED UNIT	1	(3; 4)	
6	DBC	2937 E	STARTER MOTOR-REMANUFACTURED UNIT	1		3.2 Litre
6	DBC	2937 E	STARTER MOTOR-REMANUFACTURED UNIT	1		4.0 Litre
2	JLM	1312	• Solenoid	1		
7	EBC	1632	Shim	1		
8	FB	110071 J	Washer faced bolt-M10 x 35mm-lower	1		
	FB	110171 J	Bolt -M10 x 85mm-upper	1		
	SC	105081 J	Slotted cheese head screw-M5	1		
	SE	104061 J	Recessed pan head screw-M4	1		
	WL	105001 J	Spring washer-M5	1		
	WL	104001 J	Lock washer-M4	1		
	JLM	9574	Spring washer-M8	NLA		Use WL108001J
	WL	108001 J	Spring washer-M8	1		

CHANGE POINTS


(1) To (E) 101579 2.9 Litre
(2) To (E) 108284 3.6 Litre (XJ40)
(3) From (E) 101580 2.9 Litre
(4) From (E) 108285 3.6 Litre (XJ40)

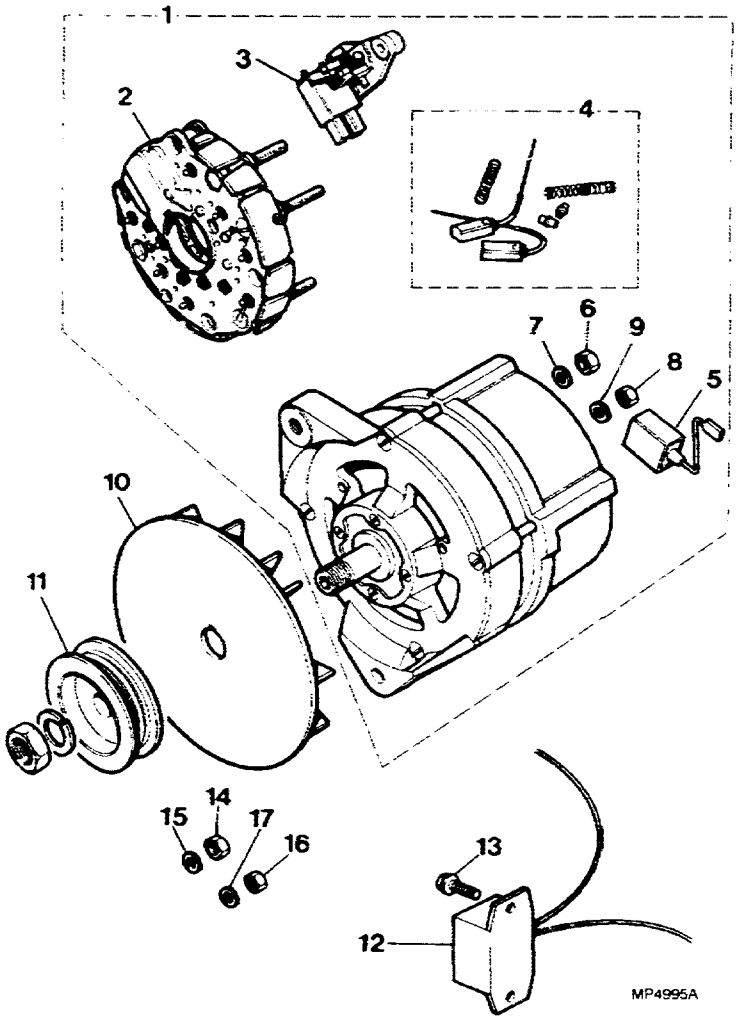

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3102	ALTERNATOR-ASSEMBLY-90 AMP-NEW	NLA	(1)	Use DBC3102E.
1	DBC 3102 E	ALTERNATOR-ASSEMBLY-90 AMP-REMANUFACTURED UNIT	NLA		Use DBC3067E.
1	DBC 3067 E	ALTERNATOR-ASSEMBLY-90 AMP-REMANUFACTURED UNIT	1	(1)	
2	JLM 1300	• Alternator rectifier-90 amp	1		
3	JLM 1301	• Alternator regulator	1		
4	JLM 1302	• Alternator brush set	1		
5	DBC 3232	• Alternator suppressor-90 amp alternator	1		
6	JLM 9688	• Nut-M8	1		
7	JLM 9574	• Spring washer-M8	NLA		Use WL108001J.
8	NH 105041 J	• Nyloc nut-M5	NLA		Use NH105061J.
9	WL 105001 J	• Spring washer-M5	1		
1	DAC 5224 N	ALTERNATOR-ASSEMBLY-115 AMP -NEW	NLA	(1)	Use DAC5224E.
1	DAC 5224 E	ALTERNATOR-ASSEMBLY-115 AMP -EXCHANGE UNIT	1		
5	DBC 3232	• Alternator suppressor-90 amp alternator	1		~~Part of DAC5224N~~
3	JLM 1301	• Alternator regulator	1		
4	JLM 1302	• Alternator brush set	1		
2	JLM 1609	• Alternator rectifier-115 amp	1		
	AEU 1672	• End cover	NLA		Part of DAC5224N.
10	DBC 3230	Alternator cooling fan	NLA	(2)	Use JLM2252.
10	JLM 2252	Alternator cooling fan-90 amp alternator	1	(3)	
11	DBC 3231	Pulley	1	(1)	
12	DBC 4267	Load dump/resistor module	1	(4)	
12	DBC 5553	Load dump/resistor module	1	(5)	
13	FS 105101 J	Flange screw-M5	1		Module to bracket
14	JLM 9688	Nut-M8	1		
15	JLM 9574	Spring washer-M8	NLA		Use WL108001J.
15	WL 108001 J	Spring washer-M8	1		
16	NH 105041 J	Nyloc nut-M5	NLA		Use NH105061J.
16	NH 105061 J	Nyloc nut-M5	1		
17	WL 105001 J	Spring washer-M5	1		

CHANGE POINTS:
(1) From (V) 507394
(2) From (V) 507394 To (V) 594575
(3) From (V) 594576
(4) From (V) 507394 To (V) 629285
(5) From (V) 629286

ALTERNATOR AND MOUNTING-TO (V)507393

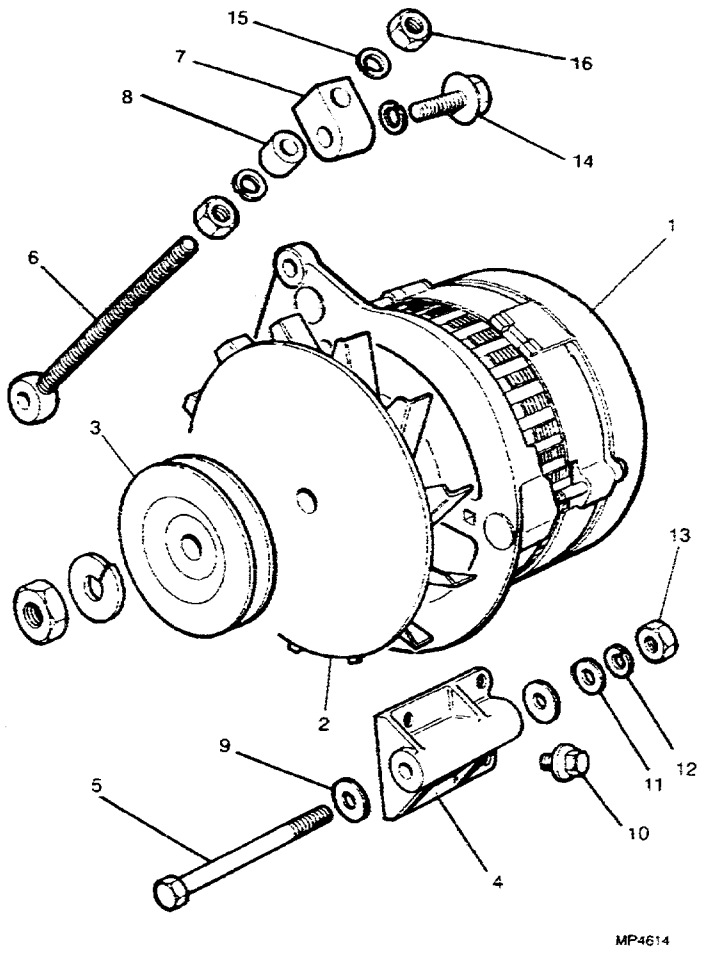


MP4614

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	153	Alternator-new	NLA	(1)	Use JLM153E.
1	JLM	153 E	ALTERNATOR-REMANUFACTURED UNIT	1	(1)	
	JLM	157	• Regulator	NLA		
	JLM	158	• Alternator rectifier	NLA		
	JLM	9555	• Alternator brush set-75 amp	1		
	AEU	1672 J	• Cover	1		
	AEU	1616 J	Alternator suppressor-75 amp alternator	1	(1)	
2	JLM	154	Alternator cooling fan	NLA	(1)	
3	JLM	335	Pulley	1	(1)	
	DBC	2181	Load dump/resistor module	NLA	(1)	Use DBC4267.
	DBC	4267	Load dump/resistor module	1		
	TBA		Headlamp fusebox bracket	1	(1)	
	FS	105101 J	Flange screw-M5	2		
4	EAC	3385	Alternator pivot bracket	NLA	(1)	
5	BH	108261 J	Pivot bolt-90 amp alternator	1		
6	C	34241	Adjustment bolt	1		
7	C	36120	Adjustment block	1	(1)	
8	EAC	4542	Adjustment bolt spacer	1	(1)	
9	C	15183	Plain washer	2		
10	FS	108251 J	Washer faced setscrew-M8 x 25mm	4		
11	WA	108051	Plain washer-0.3125" diameter	1		
12	WL	108001 J	Spring washer-M8	1		
13	NH	108041 J	Flanged nut -M8	NLA		Use FN108041J.
13	FN	108041 J	Flanged nut -M8	1		
14	FB	108061 J	Washer faced bolt	1		
15	WM	600061 J	Spring washer	2		
16	NH	606041 J	Hexagonal nut	NLA		Use JLM9685.
16	JLM	9685	Hexagonal nut-0.375" unf	2		

CHANGE POINTS:
(1) To (V) 507393


ALTERNATOR MOUNTING-FROM (V)507394

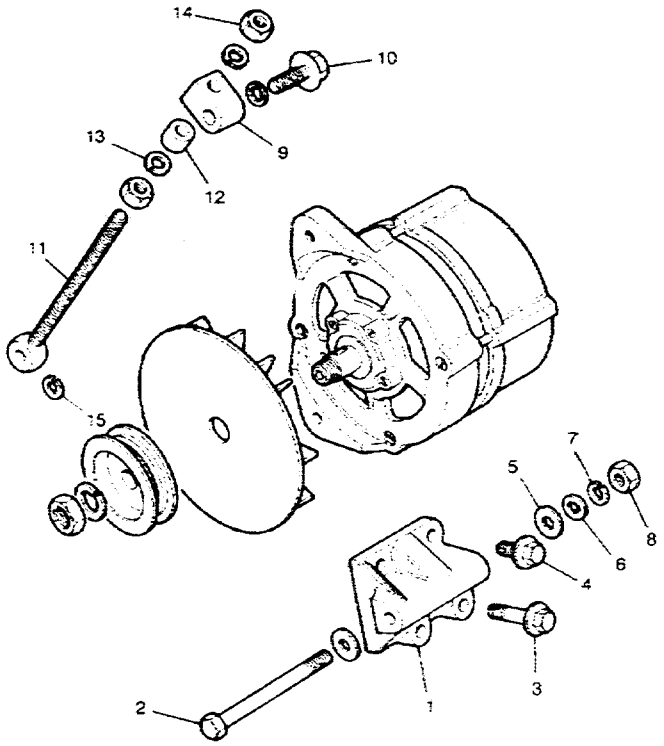

M4P4931B

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	EAC 9510	Alternator pivot bracket-90 amp alternator	1	(1)	
1	EBC 1052	Alternator pivot bracket-115 amp alternator	1	(1)	
2	BH 108261 J	Pivot bolt-90 amp alternator	1	(1)	
2	BH 110281 J	Pivot bolt-115 amp alternator	1	(1)	
3	FB 108091 J	Washer faced bolt-M8 x 9mm	2	(1)	
4	FS 108251 J	Washer faced setscrew-M8 x 25mm	2	(1)	
5	C 15183	Plain washer	2	(1)	90 amp alternator
6	WA 108051	Plain washer-0.3125" diameter	1		90 amp alternator
6	WC 110061 J	Plain washer-115 amp alternator	3	(1)	115 amp alternator
7	WL 108001 J	Spring washer-M8	1	(1)	
8	NY 108041 J	Locking nut-M8	NLA	(1)	Use JFY10804B
8	JFY 10804B	Locking nut	1		
9	C 36120	Adjustment block	1	(1)	
10	FB 108071 J	Washer faced bolt	1	(1)	
11	C 34241	Adjustment bolt	1	(1)	
12	EAC 4542	Adjustment bolt spacer	1	(1)	
13	WM 600061 J	Spring washer	2	(1)	
14	NH 606041 J	Hexagonal nut	NLA	(1)	Use JLM9685
14	JLM 9685	Hexagonal nut-0.375" unf	2		
	JLM 9688	Nut-M8	1	(1)	115 amp alternator
15	WL 108001 J	Spring washer-M8	1	(1)	115 amp alternator

CHANGE POINTS:
(1) From (V) 507394

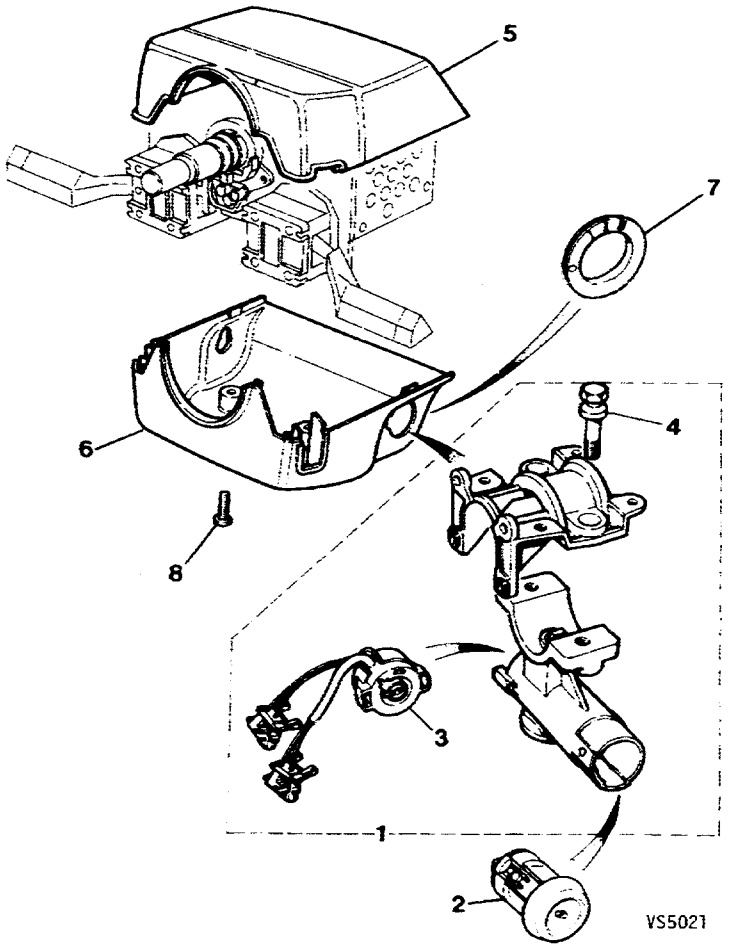

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	8404	STEERING COLUMN LOCK-ASSEMBLY	NLA	(1)	Use BEC10283 qty 1 with JLM1982 qty 1.
3	JLM	1982	• Ignition switch-assembly	1		
4	JLM	2066	• Shear head bolt	2		
1	BEC	10283	STEERING COLUMN LOCK-ASSEMBLY	1	(2)	
3	DBC	5675	• Ignition switch-assembly	1		
4	JLM	2066	• Shear head bolt	2		
2	JLM	1983	Steering column lock barrel -assembly	1	(3)	DFS-quote key number
	JLM	2145	Ignition lock slave barrel	1	(3)	
5	CAC	6198	Steering column cover-upper	1		
6	CBC	6421	Steering column cover-lower	1		
7	CBC	6483	Escutcheon ring	1		
8	SE	104081 J	Setscrew	6		
	SN	105121 J	Thread forming screw	4		


CHANGE POINTS:

(1) From (V) 594576 To (V) 629285

(2) From (V) 629286

(3) From (V) 594576

STEERING COLUMN LOCK AND COVERS

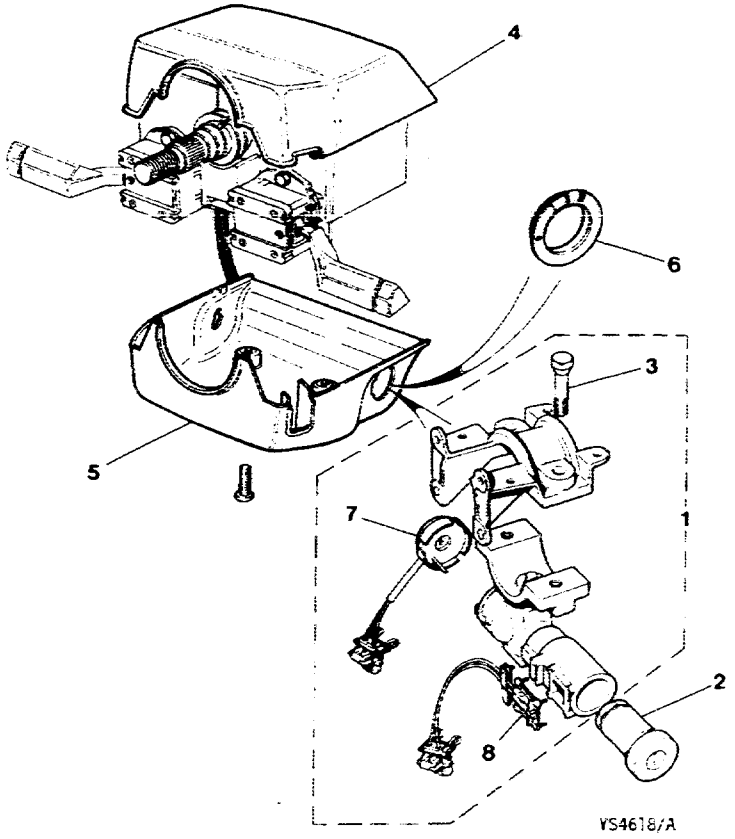

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4167	STEERING COLUMN LOCK-ASSEMBLY	1	(1)	
2	JLM 1701	• Lock barrel-assembly	1		
3	JLM 1250	• Shear head bolt	2		
4	CAC 6198	Steering column cover-upper	1	(1)	
5	CAC 6199	Steering column cover-lower	NLA	(1)	Use CBC6421
5	CBC 6421	Steering column cover-lower	1		
6	CAC 7250	Escutcheon ring	1	(1)	
7	DBC 2392	Ignition column lock switch	1	(1)	
8	DBC 2018	Steering column lock/switch-assembly	1	(1)	
	SN 105101 J	Screw-M5 x 10mm	4	(1)	
	SE 104081 J	Setscrew	6	(1)	


CHANGE POINTS:
(1) To (V) 594575

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

COMPACT DISC AUTOCHANGER ..... 3. J 06
RADIO ..... 3. J 02
RADIO ELECTRIC AERIAL ..... 3. J 05
ELECTRIC AERIAL AND FIXINGS ..... 3. J 05
LOUDSPEAKER ..... 3. J 07
RADIO/CASSETTE PLAYER ..... 3. J 03
RADIO ..... 3. J 02

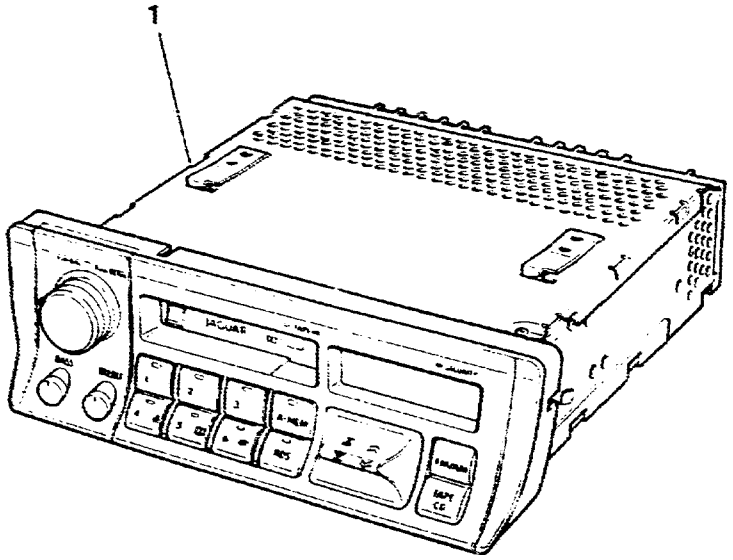


VS5169

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	6437	Radio	1	(1)	Austria;Belgium;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;-Malta;Norway;Sweden;Switzerland;Canary Islands;UK;Portugal;Spain;Jaguar
1	DBC	6487	Radio	1	(1)	Austria;Belgium;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;-Malta;Norway;Sweden;Switzerland;Canary Islands;UK;Portugal;Spain;Daimler
1	DBC	6438	Radio	NLA	(1)	Australia;China;Hong Kong;Indonesia;Korea;Malaysia;-Phillipines;Singapore;Sri Lanka;Thailand;Vietnam;Abu Dhabi;Bahrain;Dubai;Kuwait;Oman;Qatar;Saudi Arabia
1	DBC	6436	Radio	1	(1)	Canada;USA
1	DBC	6439	Radio	1	(1)	Japan;Jaguar
1	DBC	6488	Radio	NLA	(1)	Japan;Daimler
	DBC	6801	Radio mounting bracket	1	(1)	
	DBC	5312	Instruction tape	NLA	(1)	
	DBC	6311	Radio earth lead	1	(1)	

CHANGE POINTS:
(1) From (V) 629286

RADIO/CASSETTE PLAYER

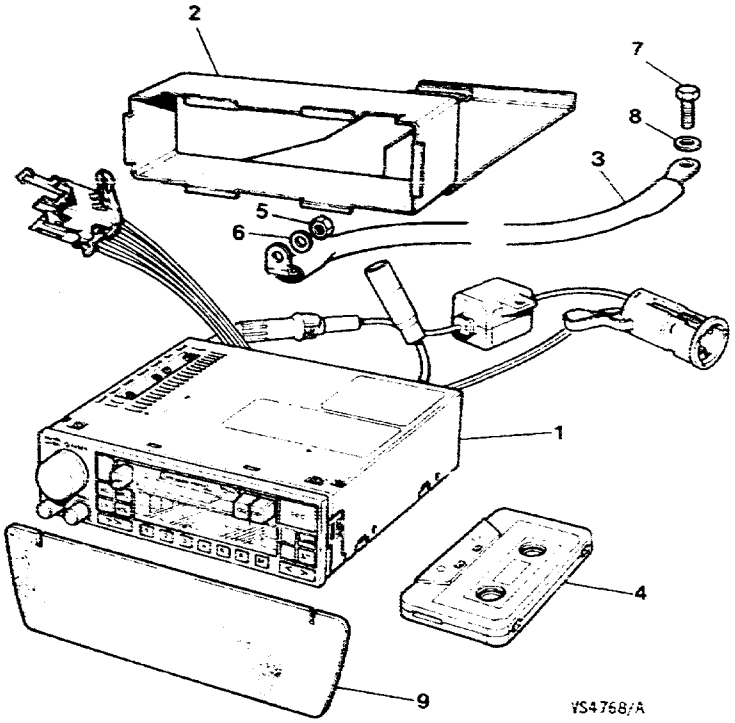


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2707	Radio/cassette player	NLA	(1)	Use DBC2172. UK
1	DBC	2172	Radio/cassette player	NLA	(2; 3)	Use DBC3976. UK;Sovereign
1	DBC	2172	Radio/cassette player	NLA	(2; 3)	Use DBC3976. UK;Jaguar;optional;except Sovereign
1	DBC	3976	Radio/cassette player	NLA	(4; 5)	UK;Jaguar
1	DBC	2459	Radio/cassette player	NLA	(6)	Argentina;Canada;Chile;Paraguay-;USA
1	DBC	3233	Radio/cassette player	NLA	(6)	Standard ;world audio;Cyprus;Egypt;Israel;Jordan-;Lebanon;Morocco;Syria;Turkey;-UK
1	DBC	3233	Radio/cassette player	NLA		Option;world audio;Belgium;Canary Islands;Denmark;Eire;France;Gibraltar;Greece;Holland;Italy;Malta;Norway;Spain;Sweden
1	DBC	3234	Radio/cassette player	NLA	(6)	World audio;Japan
1	DBC	3235	Radio/cassette player-world audio	NLA	(6)	Option;world audio;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Sweden;Switzerland;UK

CHANGE POINTS:

(1) To (V) 524374
(2) To (V) 542207 2.9 Litre
(3) To (V) 541364 3.6 Litre (XJ40)
(4) From (V) 542208 To (V) 629285 2.9 Litre
(5) From (V) 541365 To (V) 629285 3.6 Litre (XJ40)
(6) To (V) 629285


RADIO/CASSETTE PLAYER

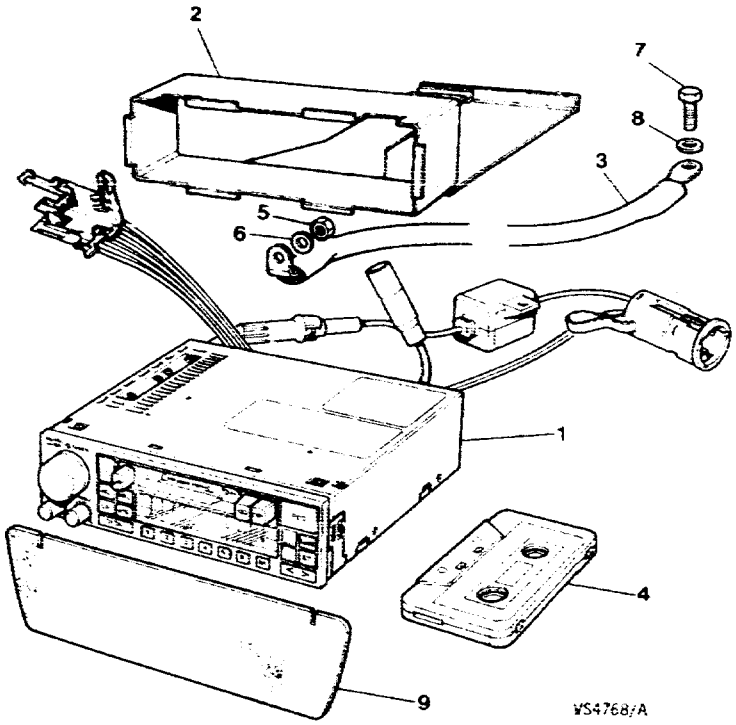

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	3236	Radio/cassette player	1	(1)	World audio;Abu Dhabi;Australia;Brunei;China;Dubai;Hong Kong;Indonesia;Korea;Kuwait;Malaysia;Oman;Phillipines;Qatar;Saudi Arabia;Singapore;New Zealand;Sri Lanka;Thailand;Vietnam
1	JLM	1160	Radio/cassette player-Clarion 949HP	NLA	(1)	Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK
	JLM	9898	Interface connector kit	1	(1)	
2	DBC	4342	Radio support bracket-assembly	NLA	(1)	
3	DBC	2015	Radio earth strap	NLA	(1)	Use DBC3952
	DBC	3952	Earth strap	1		
	JLM	1249	Harness kit	1	(1)	
4	DBC	3302	Instruction tape	1	(1)	For radio DBC2707
4	DBC	3303	Instruction tape	1	(1)	For radio DBC2172
4	DBC	4810	Instruction tape	1	(1)	For radio DBC3976
4	DBC	4361	Instruction tape	NLA	(1)	For radio DBC3233
5	NH	105041J	Nyloc nut-M5	NLA	(1)	Use NH105061J
5	NH	105061J	Nyloc nut-M5	1		
6	WE	105001J	Serrated washer-console extension	1	(1)	
7	SH	106121J	Setscrew-M6 x 12mm	1	(1)	
8	WE	106001J	Washer	1	(1)	
9	DBC	3355	Radio blanking panel-assembly	1	(1)	

CHANGE POINTS
(1) To (V) 629285

ELECTRIC AERIAL AND FIXINGS

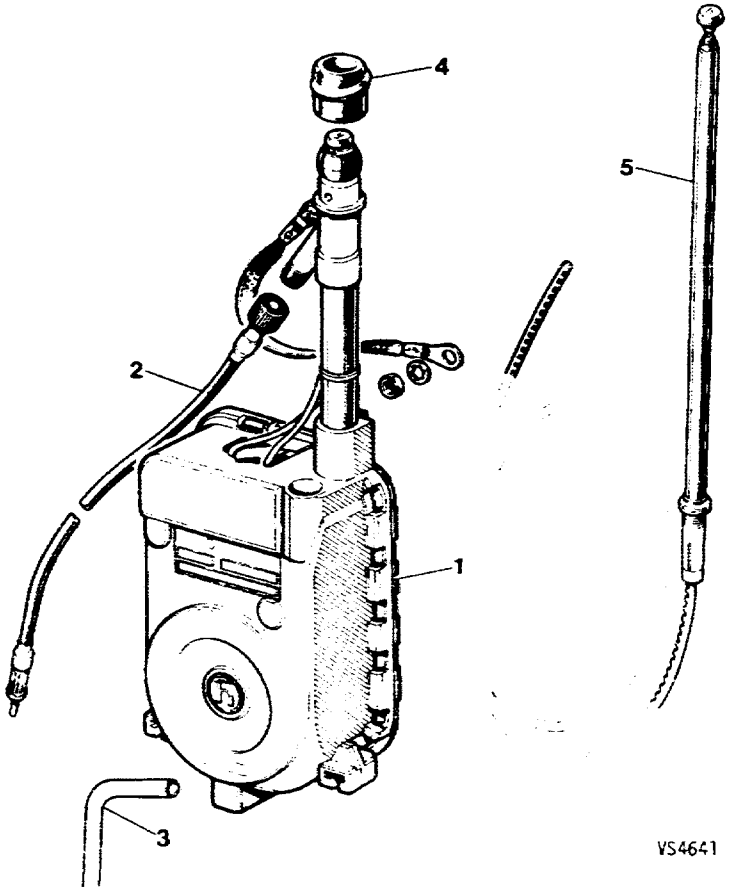

VS4641


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 1868	Electric aerial-assembly	NLA		Use DBC5101.
1	DBC 5101	Electric aerial-assembly	NLA	(1)	Use LMB4120AA.
1	DBC 5554	Electric aerial-assembly	NLA	(2)	Use LMB4120AA.
	DBC 1620	Aerial mounting bracket	NLA	(3)	Use DBC5651.
	DBC 5651	Aerial mounting bracket	1	(4)	
	DBC 1621	Aerial support bracket	1		
2	DBC 2659	Aerial extension lead	1		
3	DAC 32553	Aerial drain tube -500mm	NLA		Use DAC32555.
	NSP	Aerial drain hose	NLA		
4	DBC 2246	Aerial sealing grommet	1		
5	DBC 2200	Aerial mast	1		
	C 8016	Drain hose grommet	1		
	C 17432	Pipe grommet	1		
	SH 105161 J	Aerial screw	2		
	WJ 105001 J	Plain washer	2		
	NY 105041 J	Nyloc nut-M5	2		
	AR 612051 J	Paint clearing screw	1		
	BD 54134	Plain washer	1		
	BD 86331	Spire nut	1		
	AGU 1085	Edge clip	1		
	ADU 9028	Tie strap-7.75" long	1		
	WF 106001 J	Shakeproof washer-M6	1		
	NH 106041 J	Nut-M6	1		

CHANGE POINTS:


(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 604458
(4) From (V) 604459

COMPACT DISC PLAYER

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 10432	Compact disc autochanger-less magazine	NLA		Use LXF4160CA qty 1 with JLM12228 qty 1
1	LXF 4160CA	COMPACT DISC AUTOCHANGER-WITH MAGAZINE	1		
	LXF 4161AA	• Compact disc autochanger magazine-6 disc	1		
	DBC 5132	Compact disc player link lead	NLA		Use LJA4162AA.
	LJA 4162AA	Compact disc player link lead	NLA		Use JLM21507.
	DBC 6971	Mounting bracket	NLA		Use JLM10998. Canada;USA
	JLM 10998	KIT	1		Canada;USA
	DBC 6971	• Mounting bracket	NLA		Use JLM10998.
	JLM 2301	Compact disc autochanger fitting kit	NLA		Use JLM10997. Except Canada and USA
	JLM 10997	Compact disc autochanger fitting kit	1		

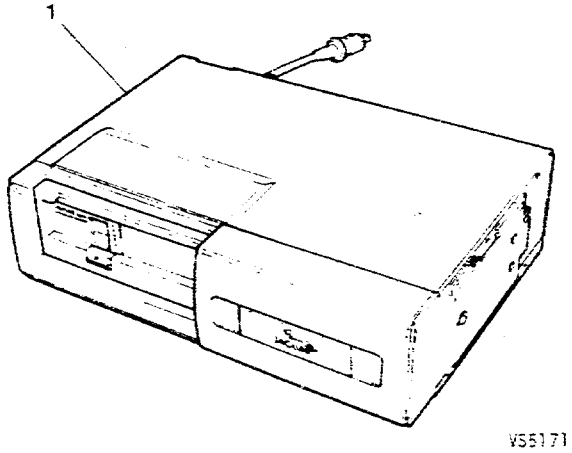

LOUDSPEAKER

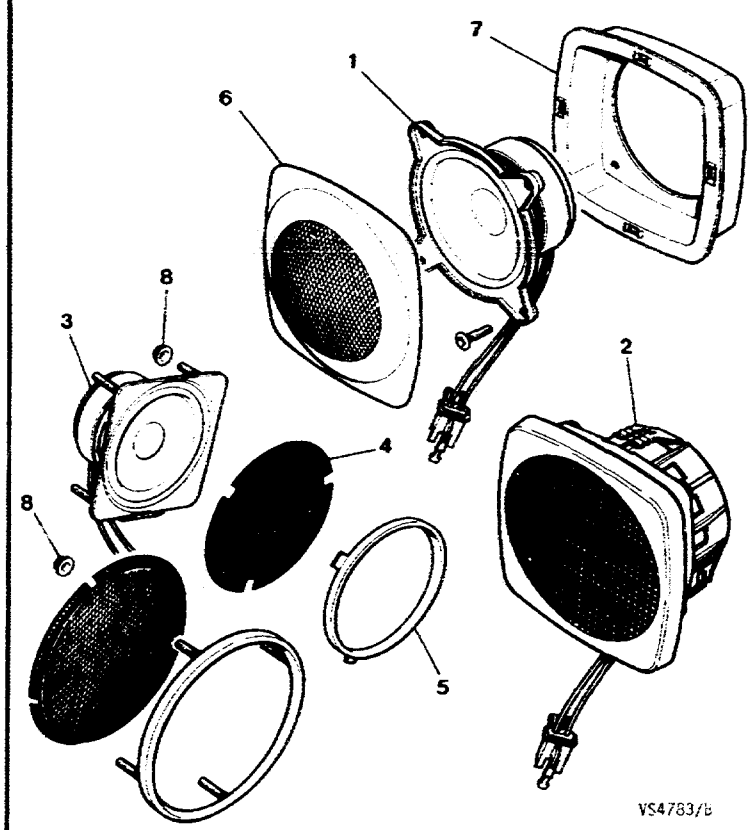

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5743	Loudspeaker-heelboard	2	(1)	
2	DBC 6435	Loudspeaker-heelboard	2	(2)	
2	DBC 10597	Loudspeaker-heelboard	2	(3)	
3	DBC 1720	Multi loudspeaker	2		UK;2 door speaker system;except world audio
3	DBC 1649	Multi loudspeaker	4		4 door speaker system;except world audio and Canada and USA
3	DBC 2734	Multi loudspeaker	4	(1)	World audio
	DBC 5309	Loudspeaker coaxial cable-100mm	4	(4)	World audio
4	BCC 1014	Loudspeaker grille	4		Except Daimler/VDP
4	BCC 1017	Loudspeaker grille	4		Daimler/VDP
5	BBC 5250	Loudspeaker bezel	4		Except Daimler/VDP
5	BCC 6251	Loudspeaker bezel	4		Daimler/VDP
6	BCC 8670	Loudspeaker grille-assembly-heelboard	2	(1)	
6	DBC 6926	Loudspeaker grille-assembly-heelboard	2	(4)	
7	BBC 1543	Speaker moulding	2		
	AB 610041 J	Self tapping screw	8		
8	AGU 1534	Nut-M4	A/R		
	DBC 5273	Foam block	NLA	(5)	Use DBC5347.
	DBC 5347	Foam block	NLA	(6)	Use BEC12564.
	BEC 12564	Foam block-rear longitudinal	2	(7)	

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286 To (V) 657854
(3) From (V) 657855
(4) From (V) 629286
(5) To (V) 596400
(6) From (V) 596401 To (V) 643619
(7) From (V) 643620

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

AUXILIARY EXTERIOR LIGHTS ..... 3. K 17
COURTESY AND INTERIOR LIGHTS ..... 3. L 03
DIRECTION INDICATORS AND HAZARD ..... 3. K 11
HEADLAMPS ..... 3. K 02
LIGHTING CONTROL MODULE ..... 3. L 07
REAR LIGHTS ..... 3. K 13
SIDE MARKERS ..... 3. K 10


BONNET/TRUNK LAMP AND SWITCH ..... 3. L 03
BULB FAILURE MODULE-FRONT LAMP ..... 3. L 07
CARAVAN/TRAILER MODULE ..... 3. L 12
DIRECTION INDICATOR LAMP-FRONT ..... 3. K 11
DIRECTION INDICATOR SIDE REPEATER ..... 3. K 12
FOG LAMP-FRONT ..... 3. K 17
FOG REAR GUARD LAMP AND REFLEX ..... 3. K 18
GEAR SELECTOR ILLUMINATION MODULE ..... 3. L 11
HEADLAMP ASSEMBLY-QUAD ..... 3. K 02
HEADLAMP ASSEMBLY-STYLED-NOT USA ..... 3. K 04
HEADLAMP ASSEMBLY-STYLED-USA ..... 3. K 09
HEADLAMP BULB FAILURE MODULE ..... 3. L 10
HIGH MOUNTED STOP LAMP ..... 3. K 13
INTERIOR LAMP ..... 3. L 04
LAMP ASSEMBLY-REAR-DAIMLER/VDP ..... 3. K 14
LAMP ASSEMBLY-REAR-JAGUAR ..... 3. K 15
NUMBER PLATE LAMP ASSEMBLY ..... 3. L 02
SIDE MARKER AND REFLEX LAMP ..... 3. K 10

HEADLAMP ASSEMBLY-QUAD

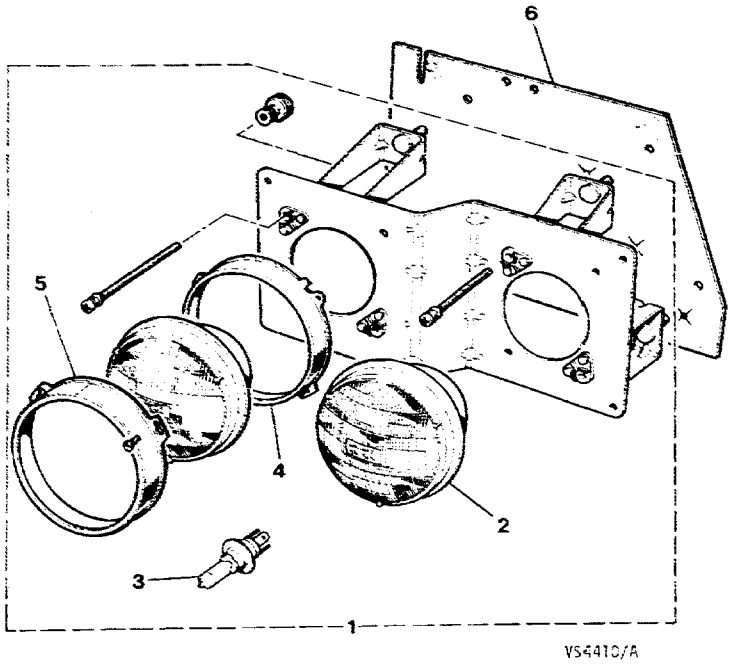

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	3036	QUAD HEADLAMP-ASSEMBLY-RH-QUAD LAMP	1		Canada;USA
1	DBC	3037	QUAD HEADLAMP-ASSEMBLY-LH-QUAD LAMP	1		Canada;USA
1	DBC	3034	QUAD HEADLAMP-ASSEMBLY-RH-QUAD LAMP	1		Japan
1	DBC	3035	QUAD HEADLAMP-ASSEMBLY-LH-QUAD LAMP	1		Japan
2	JLM	215	• Headlamp-inner-quad lamp	NLA		Use DAC3468.
						Part of DBC3036, DBC3037.
2	JLM	216	• Headlamp-outer-quad lamp	NLA		Part of DBC3036, DBC3037.
3	DBC	11405	• Long life bulb-H4 60/55w-halogen-yellow	NLA		Use DBC11404 x 2.
4	AEU	1364	• Headlamp rim seat-RH-inner	1		
4	AEU	1365	• Headlamp rim seat-RH-outer	1		
4	JLM	178	• Headlamp rim seat-LH-inner	1		
4	JLM	179	• Headlamp rim seat-LH-outer	1		
	JLM	181	• Headlamp trimmer screw kit	2		
2	JLM	844	• Headlamp-inner-quad lamp	2		Part of DBC3034, DBC3035.
2	JLM	845	• Headlamp-outer-quad lamp	2		Part of DBC3034, DBC3035.
1	DBC	2874	Quad headlamp-assembly-RH-quad lamp	NLA		Use DBC11766.
						France
1	DBC	2875	Quad headlamp-assembly-LH-quad lamp	NLA		Use DBC11767.
						France
1	DBC	2872	Quad headlamp-assembly-RH-quad lamp	NLA		Use DBC11762.
						RHD;except Japan
1	DBC	2873	Quad headlamp-assembly-LH-quad lamp	NLA		Use DBC11763.
						RHD;except Japan
1	DBC	2876	Quad headlamp-assembly-RH-quad lamp	NLA		Use DBC11764.
						LHD;except Canada and France
						and Japan and USA
1	DBC	2877	Quad headlamp-assembly-LH-quad lamp	NLA		Use DBC11765.
						LHD;except Canada and France
						and Japan and USA

HEADLAMP ASSEMBLY-QUAD

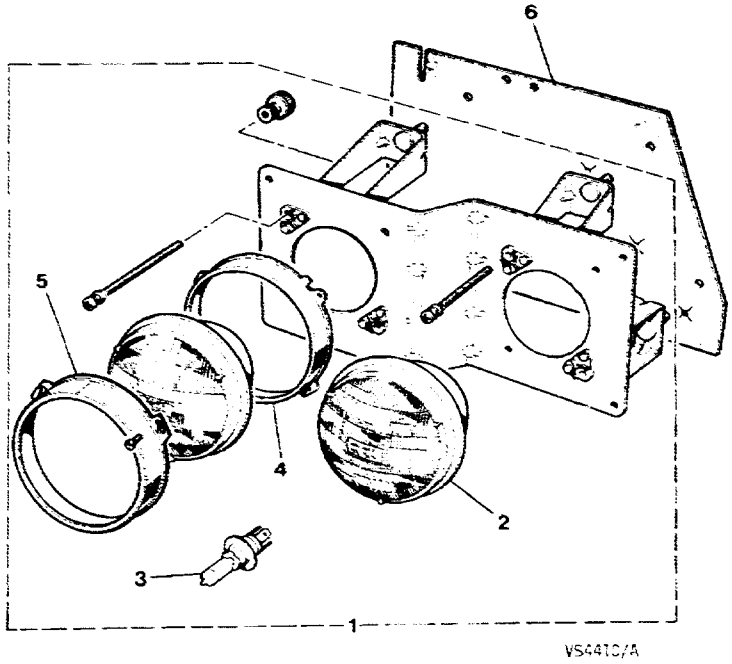


VS4410/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 11766	QUAD HEADLAMP-ASSEMBLY-RH	1		France;LHD
1	DBC 11767	QUAD HEADLAMP-ASSEMBLY-LH	1		France;LHD
1	DBC 11762	QUAD HEADLAMP-ASSEMBLY-RH	1		RHD;except Japan
1	DBC 11763	QUAD HEADLAMP-ASSEMBLY-LH	1		RHD;except Japan
1	DBC 11764	QUAD HEADLAMP-ASSEMBLY-RH	1		LHD;except Canada and France and Japan and USA
1	DBC 11765	QUAD HEADLAMP-ASSEMBLY-LH	1		LHD;except Canada and France and Japan and USA
2	JLM 173	• Headlamp-inner-quad lamp	2		
2	JLM 174	• Headlamp-outer-quad lamp	2		Part of DBC11766, DBC11767, DBC11764, DBC11765
3	DBC 11405	• Long life bulb-H4 60/55w-halogen-yellow	NLA		Use DBC11404 x 2
4	AEU 1364	• Headlamp rim seat-RH-inner	1		Part of DBC11766, DBC11767, DBC11764, DBC11765
4	AEU 1365	• Headlamp rim seat-RH-outer	1		
4	JLM 178	• Headlamp rim seat-LH-inner	1		
4	JLM 179	• Headlamp rim seat-LH-outer	1		
5	511598	• Headlamp retainer	4		
	JLM 180	• Bulb cover	4		
	JLM 181	• Headlamp trimmer screw kit	2		
2	JLM 175	• Headlamp-outer-quad lamp	2		Part of DBC11762, DBC11763
3	DBC 11404	• Long life bulb-H4 60/55w-halogen	4		Part of DBC11762, DBC11763
	JLM 180	Bulb cover	4		Except Canada and Japan and USA
	JLM 181	Headlamp trimmer screw kit	2		
	DBC 2664	Flanged nut -8mm	NLA		Use JFD10806E
	JFD 10806E	Flanged nut -8mm	8		
6	DBC 1602	Headlamp shield	NLA	(1)	Use DBC10736
6	DBC 10736	Headlamp shield-rubber	2	(2)	
	BMK 2117J	Socket-plastic	NLA		Use AGU2388J
	AGU 2388J	Friction bush-short	8		
	BD 86333	Spring nut	8		
	AA 608031J	Self tapping screw	NLA		Use AA608038J
	AA 608038J	Self tapping screw	8		
	JLM 2169	Styled headlamp kit	1		USA

CHANGE POINTS:
(1) To (V) 657318
(2) From (V) 657319


HEADLAMP ASSEMBLY-STYLED-NOT USA

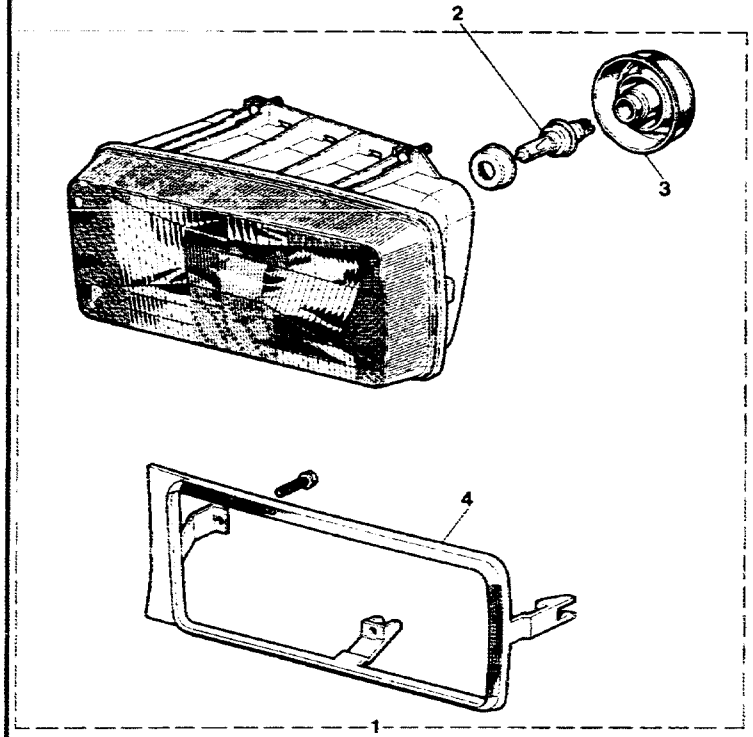

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 1015	Headlamp-assembly-LH-styled lamp	NLA	(1)	Use JLM10457 Styled lamp Austria,Belgium,Canary Islands,Denmark,Eire,Finland,France,Germany,Gibraltar,Greece,Holland,Italy,Luxembourg,Malta,Norway,Portugal,Spain,Sweden,Switzerland,UK,LHD,Europe
1	JLM 10873	Headlamp-assembly-LH-styled lamp	1	(2)	Styled lamp,Austria,Belgium,Canary Islands,Denmark,Eire,Finland,France,Germany,Gibraltar,Greece,Holland,Italy,Luxembourg,Malta,Norway,Portugal,Spain,Sweden,Switzerland,UK,LHD,Europe
1	JLM 1016	Headlamp-assembly-RH-styled lamp	NLA	(1)	Use JLM10456 Styled lamp,Austria,Belgium,Canary Islands,Denmark,Eire,Finland,France,Germany,Gibraltar,Greece,Holland,Italy,Luxembourg,Malta,Norway,Portugal,Spain,Sweden,Switzerland,UK,LHD,Europe
1	JLM 10872	Headlamp-assembly-RH-less bulb	1	(2)	Styled lamp,Austria,Belgium,Canary Islands,Denmark,Eire,Finland,France,Germany,Gibraltar,Greece,Holland,Italy,Luxembourg,Malta,Norway,Portugal,Spain,Sweden,Switzerland,UK,LHD,Europe

CHANGE POINTS:
(1) To (V) 619276
(2) From (V) 619277


HEADLAMP ASSEMBLY-STYLED-NOT USA

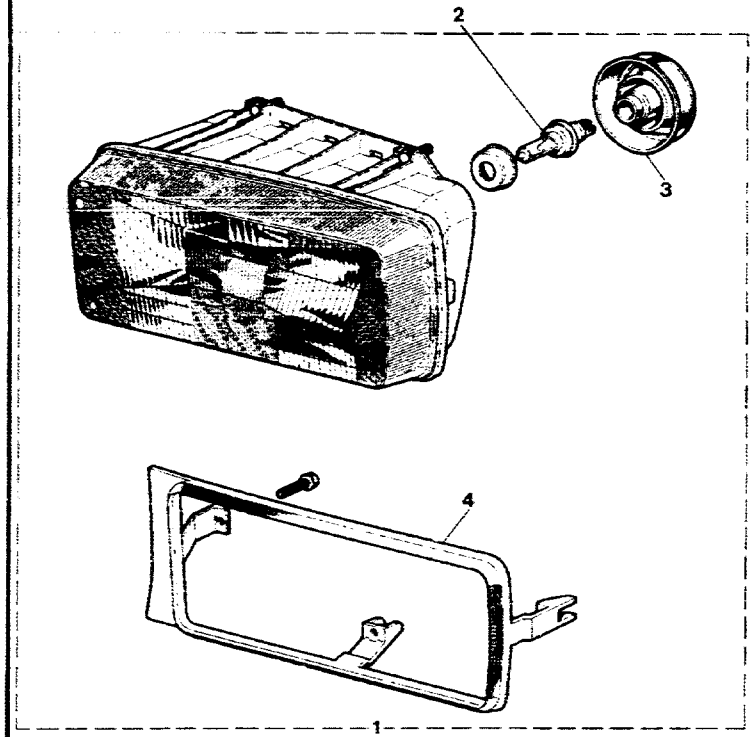

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1017	Headlamp-assembly-LH	NLA	(1)	Use JLM10459. Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe
1	JLM	10875	Headlamp-assembly-LH	1	(2)	Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe
1	JLM	1018	Headlamp-assembly-RH	NLA	(1)	Use JLM10458. Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe
1	JLM	10874	Headlamp-assembly-RH	1	(2)	Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe


CHANGE POINTS:
(1) To (V) 615357
(2) From (V) 615358

HEADLAMP ASSEMBLY-STYLED-NOT USA

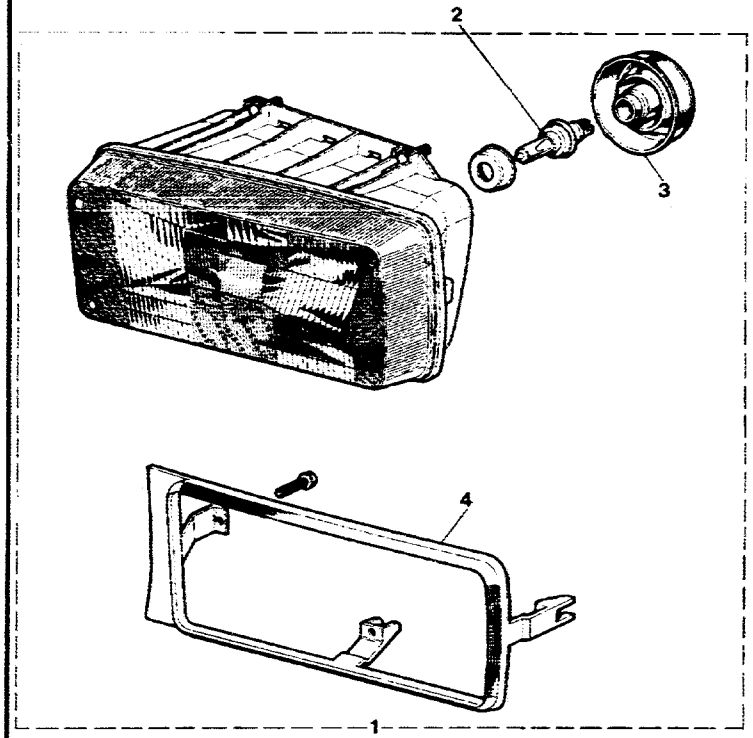


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 10457	Headlamp	NLA		Use DBC10557. Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe
1	JLM 10456	Headlamp	NLA		Use DBC10556. Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe
1	JLM 10459	Headlamp	NLA		Use DBC10555. Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe
1	JLM 10458	Headlamp	NLA		Use DBC10554. Styled lamp;Austria;Belgium;Canary Islands;Denmark;Eire;Finland;France;Germany;Gibraltar;Greece;Holland;Italy;Luxembourg;Malta;Norway;Portugal;Spain;Sweden;Switzerland;UK;LHD;Europe

HEADLAMP ASSEMBLY-STYLED-NOT USA

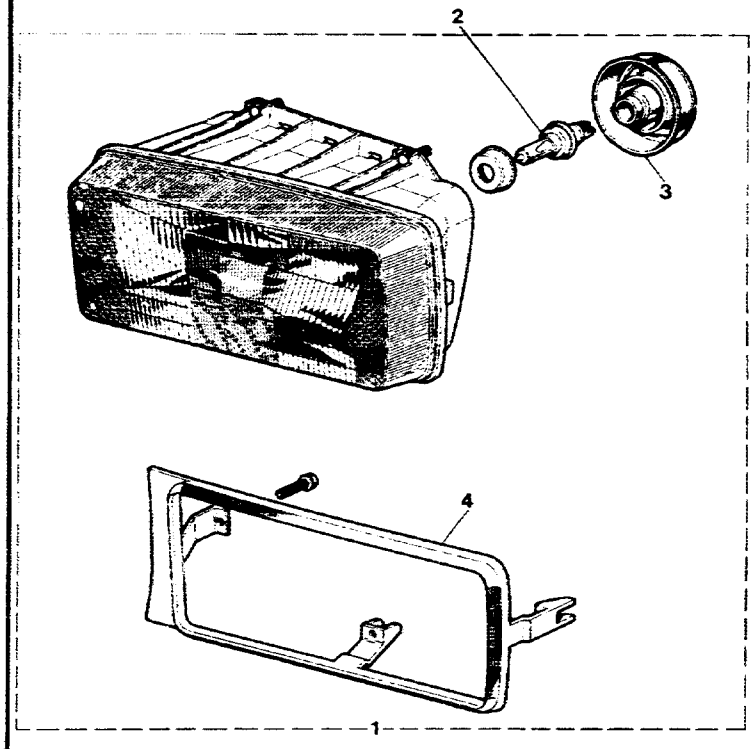


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 10557	HEADLAMP-ASSEMBLY-LH-LESS BULB	NLA		Use JLM10873.
					Styled
					lamp;Austria;Belgium;Canary
					Islands;Denmark;Eire;Finland;Fran-
					ce;Germany;Gibraltar;Greece;Holl-
					and;Italy;Luxembourg;Malta;Nor-
					way;Portugal;Spain;Sweden;Swit-
					zerland;UK;LHD;Europe
1	DBC 10556	HEADLAMP-ASSEMBLY-RH-LESS BULB	NLA		Use JLM10872.
					UK;Germany;France;Austria;Swit-
					zerland;Finland;Malta;Belgium;Ca-
					nary
					Islands;Denmark;Eire;Greece;Italy-
					;Luxembourg;Norway;Portugal;S-
					pain;Sweden;Gibraltar;Holland;L-
					HD;Europe
1	DBC 10555	HEADLAMP-ASSEMBLY-LH-LESS BULB	NLA		~~Use JLM10875.~~
					Styled
					lamp;Austria;Belgium;Canary
					Islands;Denmark;Eire;Finland;Fran-
					ce;Germany;Gibraltar;Greece;Holl-
					and;Italy;Luxembourg;Malta;Nor-
					way;Portugal;Spain;Sweden;Swit-
					zerland;UK;LHD;Europe
1	DBC 10554	HEADLAMP-ASSEMBLY-RH-LESS BULB	NLA		Use JLM10874.

HEADLAMP ASSEMBLY-STYLED-NOT USA

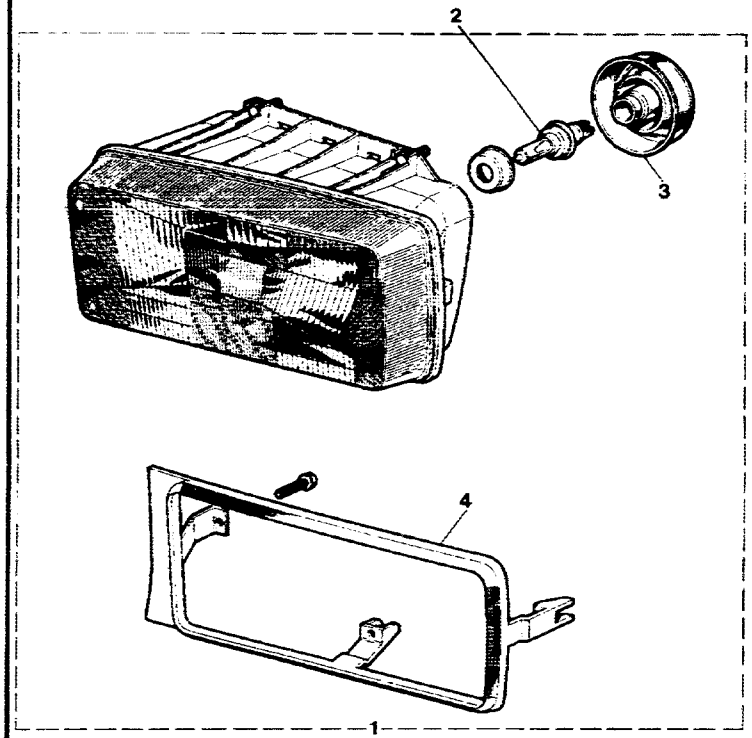

Illus	Part Number		Description	Quantity	Change Point	Remarks
2	DBC	11405	• Long life bulb-H4 60/55w-halogen-yellow	NLA		Use DBC11404 x 2.
						Part of DBC10557.
3	JLM	1326	• Bulb cover	2		Part of DBC10557, DBC10555, DBC10554.
	DBC	2664	• Flanged nut -8mm	NLA		Use JFD10806E.
						Part of DBC10557, DBC10555, DBC10554.
4	JLM	1324	• Headlamp bezel-LH	1		Part of DBC10557, DBC10555, DBC10554.
4	JLM	1325	• Headlamp bezel-RH	1		Part of DBC10557, DBC10555, DBC10554.
2	DBC	11405	• Long life bulb-H4 60/55w-halogen-yellow	NLA		Use DBC11404 x 2.
						Part of DBC10556.
						;Except USA
3	JLM	1326	• Bulb cover	2		Part of DBC10556.
						;Except USA
	DBC	2684	• Flanged nut -8mm	NLA		Use JFD10806E.
						Part of DBC10556.
						;Except USA
4	JLM	1324	• Headlamp bezel-LH	1		Part of DBC10556.
						;Except USA
4	JLM	1325	• Headlamp bezel-RH	1		Part of DBC10556.
						;Except USA
2	DBC	11404	• Long life bulb-H4 60/55w-halogen	2		Part of DBC10555, DBC10554.

HEADLAMP ASSEMBLY-STYLED-USA

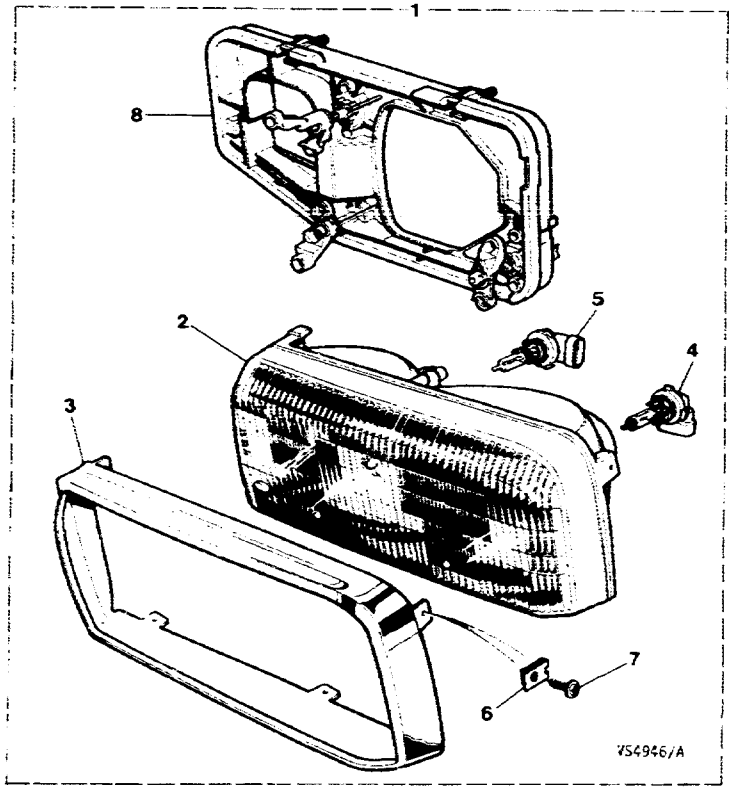


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5442	Headlamp-assembly-RH-styled	NLA	(1)	Use DBC11464. USA
1	DBC 5441	Headlamp-assembly-LH-styled	NLA	(1)	Use DBC6879. USA
1	DBC 6880	HEADLAMP-ASSEMBLY-RH-STYLED	NLA	(2)	Use DBC11464. USA
1	DBC 6879	HEADLAMP-ASSEMBLY-LH-STYLED	NLA	(2)	Use DBC11465. USA
1	DBC 11464	HEADLAMP-ASSEMBLY-RH-STYLED	1		USA
1	DBC 11465	HEADLAMP-ASSEMBLY-LH-STYLED	NLA		Use LMB4511AA. USA
1	LMB 4511AA	HEADLAMP-ASSEMBLY-LH-STYLED	1		USA
2	JLM 2012	• Headlamp-RH	1		Part of DBC6880, DBC11464.
3	JLM 2014	• Headlamp surround -RH	1		Part of DBC6880, DBC11464.
5	DBC 11313	• Headlamp bulb-65 amp-halogen-low beam	1		
5	DBC 11314	• Headlamp bulb-65w-halogen-high beam	1		
6	JLM 2018	• Spire fastener-surround	NLA		
7	JLM 2019	• Screw	A/R		
8	JLM 2020	• Support frame-lamp-RH	1		Part of DBC6880, DBC11464.
	FN 108041	• Nut-M8	8		
2	JLM 2013	• Headlamp-LH	1		Part of DBC6879, DBC11465, LMB4511AA.
3	JLM 2015	• Headlamp surround -LH	1		Part of DBC6879, DBC11465, LMB4511AA.
8	JLM 2021	• Support frame-lamp-LH	1		Part of DBC6879, DBC11465, LMB4511AA.
4	JLM 2016	Low beam bulb-white cap	1		USA
5	JLM 2017	Headlamp bulb-main beam-black cap	1		USA

CHANGE POINTS:

(1) From (V) 594576 To (V) 649029

(2) From (V) 649030

SIDE MARKER AND REFLEX LAMP

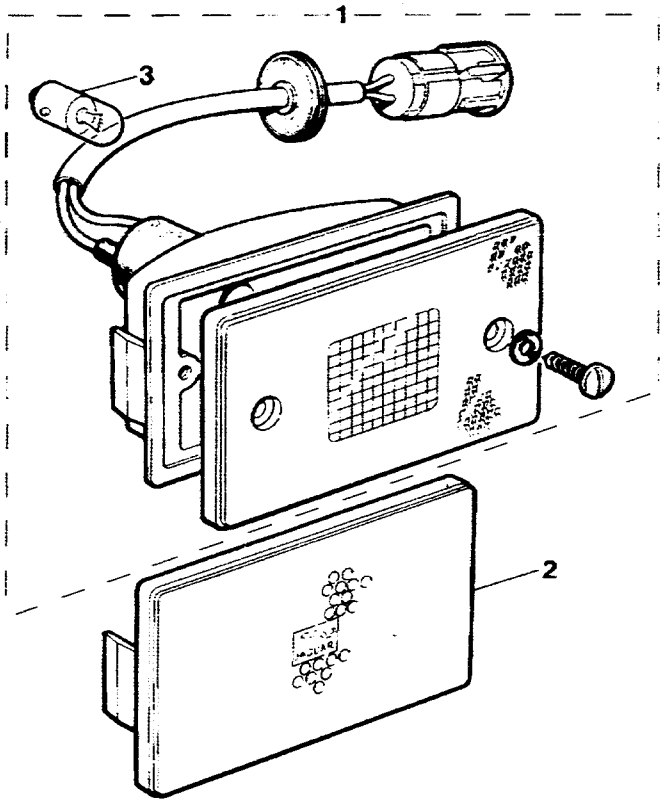


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	4944	Side marker lamp-assembly-RH front	1	(1)	Canada;USA
1	DBC	5560	Side marker lamp-assembly-RH front	NLA	(2)	Use DBC11654.
						Canada;USA
1	DBC	2041	Side marker lamp-assembly-LH front	NLA	(3)	Use DBC4945.
1	DBC	4945	Side marker lamp-assembly-LH front	1	(4)	Canada;USA
1	DBC	5559	Side marker lamp-assembly-LH front	NLA	(2)	Use DBC11665.
						Canada;USA
1	DBC	2042	Side marker lamp-assembly-RH front	NLA	(1)	Use DBC4946.
1	DBC	4946	Side marker lamp-assembly-RH rear	NLA	(5)	Use DBC6448.
1	DBC	6448	Side marker lamp-assembly-RH rear	1	(6)	
1	DBC	4947	Side marker lamp-assembly-LH rear	NLA	(5)	Use DBC6449.
1	DBC	6449	Side marker lamp-assembly-LH rear	1	(6)	
1	DBC	11654	Side marker lamp-assembly-RH front	NLA		Use DBC11664.
						Canada;USA
	DBC	11664	LAMP-ASSEMBLY-RH FRONT	1		Canada;USA
	DBC	11665	LAMP-ASSEMBLY-LH FRONT	1		Canada;USA
3	DBC	11380	• Bulb-bayonet-12v 4w	4		
2	DBC	4789	Reflex-assembly-amber-RH front/LH rear	1		
2	DBC	4788	Reflex-assembly-amber-LH front/RH rear	1		
2	DBC	3901	Reflex-assembly-LH rear-red	1		
2	DBC	3900	Reflex-assembly-RH rear-red	1		
3	JLM	9589	Bulb-bayonet-12v 4w	NLA		Use JLM186.
						Except Canada and USA
3	JLM	186	Bulb-bayonet-12v 4w	NLA		Use DBC11380.
						Canada;USA
	JLM	10866	Side marker lamp lens -RH front	1	(2)	
	JLM	10867	Side marker lamp lens -LH front	1	(2)	
	JLM	10868	Side marker lamp lens -RH rear	1	(6)	
	JLM	10869	Side marker lamp lens -LH rear	1	(6)	

VS4629

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 594575
(4) From (V) 594576 To (V) 629285
(5) From (V) 629286 To (V) 657854
(6) From (V) 657855


DIRECTION INDICATOR LAMP-FRONT

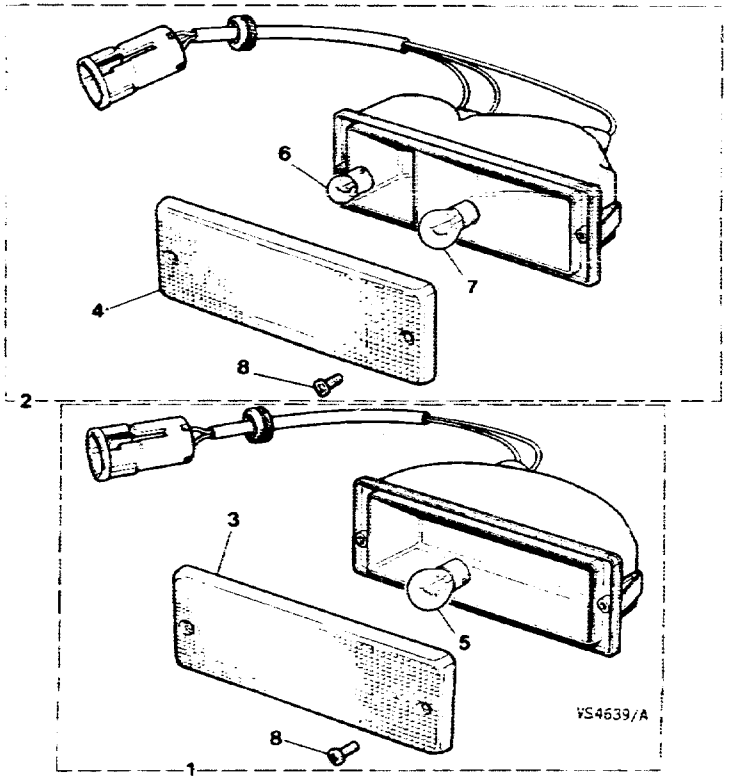

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2046	Direction indicator lamp-RH front	1	(1)	Canada;USA
1	DBC	5558	Direction indicator lamp-RH front	1	(2)	Canada;USA
1	DBC	2047	Direction indicator lamp-LH front	1	(1)	Canada;USA
1	DBC	5557	Direction indicator lamp-LH front	1	(2)	Canada;USA
2	DBC	2044	Direction indicator lamp-RH front	1	(1)	Except Canada and USA
2	DBC	5556	Direction indicator lamp-assembly-RH	NLA	(2)	Use DBC11658.
						Except Canada and USA
2	DBC	2045	Direction indicator lamp-LH front	1	(1)	Except Canada and USA
2	DBC	5555	Direction indicator lamp-assembly-LH	NLA	(2)	Use DBC11659.
						Except Canada and USA
2	DBC	11658	DIRECTION INDICATOR LAMP-ASSEMBLY-RH	1		Except Canada and USA
2	DBC	11659	DIRECTION INDICATOR LAMP-ASSEMBLY-LH	1		Except Canada and USA
4	JLM	1819	• Lens	2		
6	DBC	11711	• Bulb-bayonet-5w	2		
7	DBC	11382	• Bulb-bayonet-21w	2		
8	JLM	1822	• Screw	4		
	JLM	1821	• Washer	4		
3	JLM	1820	Lens	2		Canada;USA
5	JLM	9594	Bulb-5/21w-stop lamp	NLA		Use DBC11383.
						Canada;USA
5	DBC	11383	Bulb-bayonet-21w/5w	2		Canada;USA
6	JLM	9587	Bulb-bayonet-5w	NLA		Use DBC11711.
						Canada;USA
7	C	9126	Bulb-bayonet-21w	NLA		Use DBC11382.
8	JLM	1822	Screw	4		Canada;USA
	JLM	1821	Washer	4		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286


DIRECTION INDICATOR SIDE REPEATER LAMP

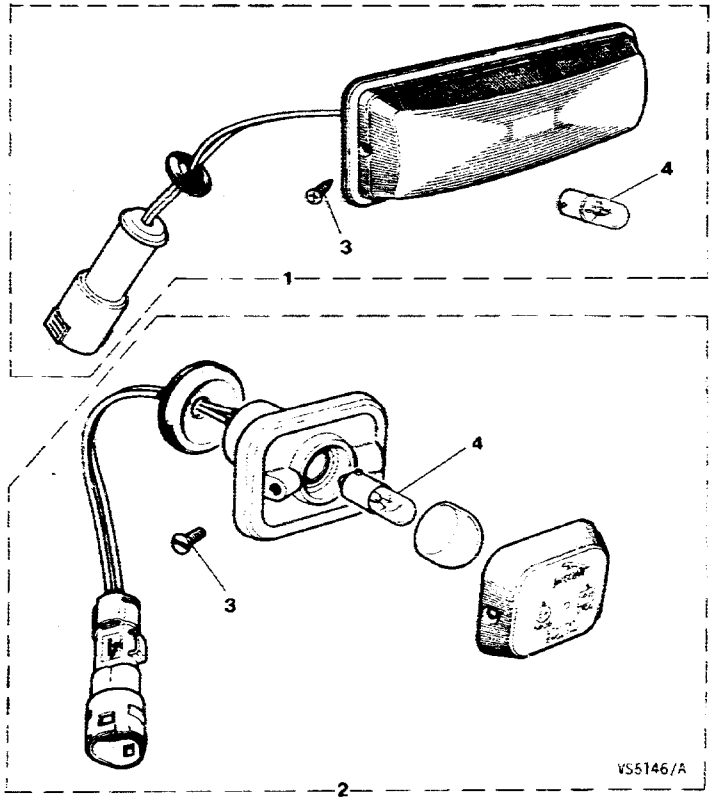

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3323	Direction indicator side lamp	2	(1)	Except Canada and USA
2	DBC 6591	Direction indicator side lamp	NLA	(2)	Use DBC12304.
					Except Canada and USA
2	DBC 12304	Direction indicator side lamp	2		Except Canada and USA
3	JLM 848	Screw	4	(1)	Except Canada and USA
3	JLM 10585	Screw	4	(2)	Except Canada and USA
4	JLM 9589	Bulb-bayonet-12v 4w	NLA		Use JLM186.
4	JLM 186	Bulb-bayonet-12v 4w	NLA		Use DBC11380.
4	DBC 11380	Bulb-bayonet-12v 4w	2		
	C 18066	Grommet	2		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

HIGH MOUNTED STOP LAMP

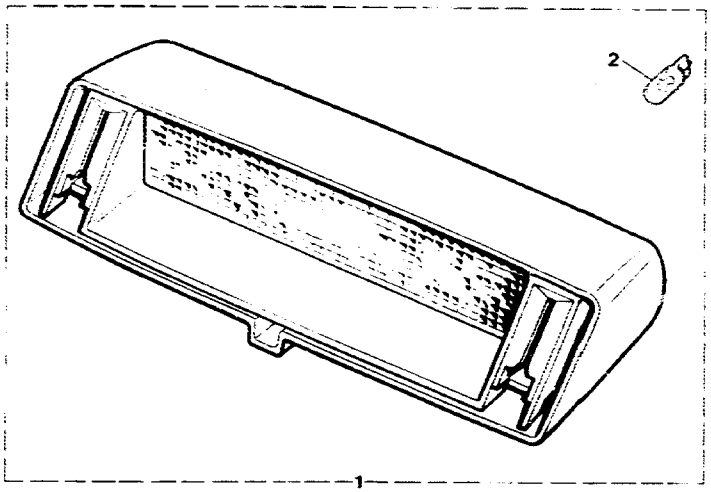


VS4610

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DAC 4817	HIGH MOUNTED STOP LAMP-ASSEMBLY-WARM CHARCOAL	1	(1)	
1	DBC 3291 LZ	HIGH MOUNTED STOP LAMP-ASSEMBLY-WARM CHARCOAL	NLA		Use DBC11653LEG.
1	DBC 3291 XE	HIGH MOUNTED STOP LAMP-ASSEMBLY-DOESKIN	NLA		Use DBC11653AEE.
1	DBC 3291 AR	HIGH MOUNTED STOP LAMP-ASSEMBLY-BUCKSKIN	NLA		Use DBC11653AFR.
1	DBC 3291 LY	HIGH MOUNTED STOP LAMP-ASSEMBLY-SAVILE GREY	NLA		Use DBC11653LDY.
1	DBC 3120 JF	HIGH MOUNTED STOP LAMP-ASSEMBLY-ISIS BLUE	NLA	(2)	Use DBC3291JF.
1	DBC 3291 JF	HIGH MOUNTED STOP LAMP-ASSEMBLY-ISIS BLUE	NLA	(3)	Use DBC11653JEF.
1	DBC 3120 CM	HIGH MOUNTED STOP LAMP-ASSEMBLY-MULBERRY	NLA	(2)	Use DBC3291CM.
1	DBC 3291 CM	HIGH MOUNTED STOP LAMP-ASSEMBLY-MULBERRY	NLA	(3)	Use DBC11653CEM.
1	DBC 3291 AW	HIGH MOUNTED STOP LAMP-ASSEMBLY-BARLEY	NLA		Use DBC11653AFW.
1	DBC 3120 ZM	HIGH MOUNTED STOP LAMP-ASSEMBLY-MAGNOLIA	NLA	(2)	Use DBC11653AEM.
1	DBC 3291 ZM	HIGH MOUNTED STOP LAMP-MAGNOLIA-ASSEMBLY	NLA	(3)	Use DBC11653AEM.
1	DBC 3291 HZ	HIGH MOUNTED STOP LAMP-ASSEMBLY-PARCHMENT	NLA	(4)	Use DBC11653HEZ.
1	DBC 3291 NDR	HIGH MOUNTED STOP LAMP-ASSEMBLY-CREAM	NLA	(5)	Use DBC11653NDR. USA,Majestic
1	DBC 11653 LEG	HIGH MOUNTED STOP LAMP-ASSEMBLY-WARM CHARCOAL	1	(6)	
1	DBC 11653 AEE	HIGH MOUNTED STOP LAMP-ASSEMBLY-DOESKIN	1		
1	DBC 11653 AFR	HIGH MOUNTED STOP LAMP-ASSEMBLY-BUCKSKIN	1		
1	DBC 11653 LDY	HIGH MOUNTED STOP LAMP-ASSEMBLY-SAVILE GREY	1		
1	DBC 11653 JEF	HIGH MOUNTED STOP LAMP-ASSEMBLY-ISIS BLUE	1		
1	DBC 11653 AEM	HIGH MOUNTED STOP LAMP-ASSEMBLY-MAGNOLIA	1		
1	DBC 11653 HEZ	HIGH MOUNTED STOP LAMP-ASSEMBLY-PARCHMENT	1		
1	DBC 11653 NDR	HIGH MOUNTED STOP LAMP-ASSEMBLY-CREAM	1		USA,Majestic
1	DBC 11653 CEM	HIGH MOUNTED STOP LAMP-ASSEMBLY-MULBERRY	NLA		Use LMB5000AACEM.
1	LMB 5000AA CEM	HIGH MOUNTED STOP LAMP-ASSEMBLY-MULBERRY	1		
2	DBC 11381	• Bulb-wedge base -5w	NLA		Use XR811819.
2	JLM 9600	Bulb-5w	NLA		Use DBC1 ,331
	DBC 3136	Link harness	1	(7)	
	DBC 5533	Link harness	1	(8)	
	JLM 1660	Installation kit-high mounted stop lamp	1		

CHANGE POINTS.

(1) To (V) 524374
(2) To (V) 556850
(3) From (V) 556851
(4) From (V) 594576
(5) From (V) 633352
(6) From (V) 524375
(7) To (V) 629285
(8) From (V) 629286


LAMP ASSEMBLY-REAR-DAIMLER/VDP

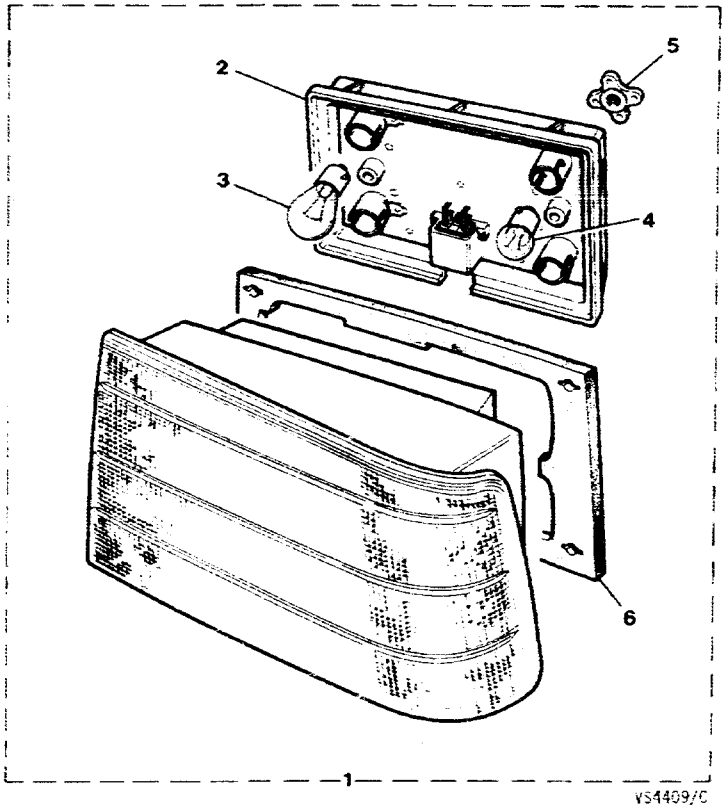

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1529	Lens and base-assembly-RH rear	1	(1)	Canada;USA;Daimler/VDP
1	JLM	1530	Lens and base-assembly-LH rear	1		
1	DBC	5006	Lens and base-assembly-RH rear	1		Daimler/VDP;except Canada and
1	DBC	5007	Lens and base-assembly-LH rear	1		USA
1	DBC	3396	Lens and base-assembly-RH-chrome	NLA	(2)	Use DBC11640.
1	DBC	3397	Lens and base-assembly-LH-chrome	1	(2)	Canada;USA;Daimler/VDP
1	DBC	3392	Lens and base-assembly-RH-chrome	1	(2)	Daimler/VDP;except Canada and
1	DBC	3393	Lens and base-assembly-LH-chrome	1	(2)	USA
2	JLM	561	Lamp cluster-assembly-RH	1		Canada;USA;Daimler/VDP
2	JLM	562	Lamp cluster-assembly-LH	1		
2	JLM	16	Lamp cluster-assembly-RH	1		Daimler/VDP;except Canada and
2	JLM	170	Lamp cluster-assembly-LH	1		USA
3	C	9126	Bulb-bayonet-21w	NLA		Use DBC11382.
3	DBC	11382	Bulb-bayonet-21w	6		
4	JLM	9587	Bulb-bayonet-5w	NLA		Use DBC11711.
4	DBC	11711	Bulb-bayonet-5w	2		
5	BBC	1614	Fixing knob	4		
6	JLM	1969	Lamp gasket -rear	1		
	DBC	5593	Durlock nut	8		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576


LAMP ASSEMBLY-REAR-JAGUAR

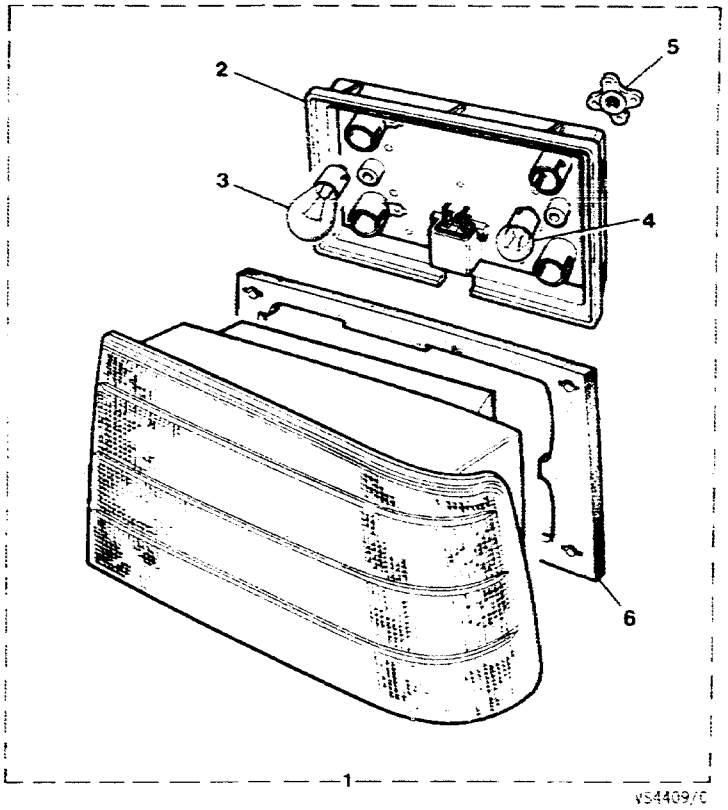

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5008	Lamp cluster-assembly-RH rear	NLA		Use DBC11646 Canada,USA,Jaguar
1	DBC 5009	Lamp cluster-assembly-LH rear	NLA		Use DBC11647 Canada,USA,Jaguar
1	DBC 5004	Lamp cluster-assembly-RH rear	NLA		Use DBC11642 Jaguar,except Canada and USA
1	DBC 5005	Lamp cluster-assembly-LH rear	NLA		Use DBC11643 Jaguar,except Canada and USA
1	JLM 1525	Lamp cluster-assembly-RH rear	NLA	(1)	Use DBC5008 Canada;USA;Jaguar;Sovereign
1	JLM 1526	Lamp cluster-assembly-LH rear	NLA	(1)	Use DBC5009 Canada;USA;Jaguar;Sovereign
1	DBC 3394	Lamp cluster-assembly-RH rear	NLA	(2)	Use DBC11638 Canada;USA;Jaguar;Sovereign
1	DBC 3395	Lamp cluster-assembly-LH rear	NLA	(2)	Use DBC11639 Canada;USA;Jaguar;Sovereign
1	DBC 3394	Lamp cluster-assembly-RH rear	NLA	(3)	Use DBC11638 USA;Jaguar;Majestic
1	DBC 3395	Lamp cluster-assembly-LH rear	NLA	(3)	Use DBC11639 USA;Jaguar;Majestic
1	DBC 3390	Lamp cluster-assembly-RH rear-chrome	NLA	(3)	Use DBC12196 Canada;USA;Jaguar;Sovereign
1	DBC 3391	Lamp cluster-assembly-LH rear-chrome	NLA	(3)	Use DBC12197 Canada;USA;Jaguar;Sovereign

CHANGE POINTS:
(1) From (V) 594576 To (V) 629285
(2) From (V) 629286
(3) From (V) 594576


LAMP ASSEMBLY-REAR-JAGUAR

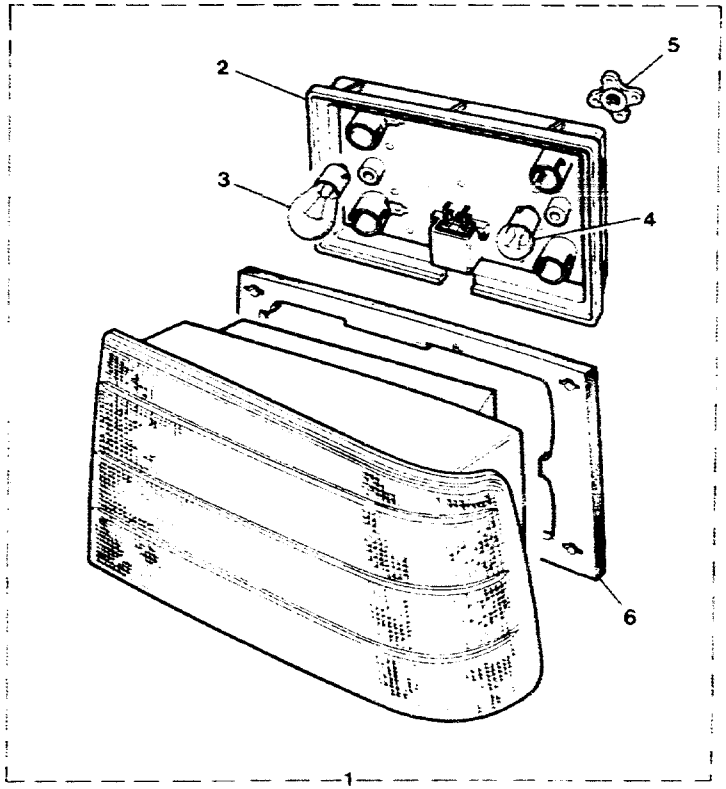

VS4409/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	11646	LAMP CLUSTER-ASSEMBLY-RH REAR	1		Canada,USA,Jaguar
1	DBC	11647	LAMP CLUSTER-ASSEMBLY-LH REAR	1		Canada,USA,Jaguar
1	DBC	11642	LAMP CLUSTER-ASSEMBLY-RH REAR-RED LENS	1		Jaguar,except Canada and USA
1	DBC	11643	LAMP CLUSTER-ASSEMBLY-LH REAR-RED LENS	1		Jaguar,except Canada and USA
1	DBC	11638	LAMP CLUSTER-ASSEMBLY-RH REAR	NLA		Use DBC11646 qty 1 with JLM20340 qty 1
						Canada,USA,Jaguar,Sovereign
1	DBC	11639	LAMP CLUSTER-ASSEMBLY-LH REAR	NLA		Use DBC11647 qty 1 with JLM20339 qty 1
						Canada,USA,Jaguar,Sovereign
1	DBC	12196	LAMP CLUSTER-ASSEMBLY-RH REAR-RED LENS-CHROME	NLA		Use DBC11642 qty 1 with JLM20340 qty 1
						Canada,USA,Jaguar,Sovereign
1	DBC	12197	LAMP CLUSTER-ASSEMBLY-LH REAR-RED LENS-CHROME	NLA		Use DBC11643 qty 1 with JLM20339 qty 1
						Canada,USA,Jaguar,Sovereign
2	JLM	561	• Lamp cluster-assembly-RH	1		Part of DBC11646, DBC11647, DBC11638, DBC11639
2	JLM	562	• Lamp cluster-assembly-LH	1		Part of DBC11646, DBC11647, DBC11638, DBC11639
3	DBC	11382	• Bulb-bayonet-21w	6		
4	JLM	9587	• Bulb-bayonet-5w	NLA		Use DBC11711
5	BBC	1614	• Fixing knob	4		
6	JLM	1969	• Lamp gasket -rear	1		
	DBC	5593	• Durlock nut	8		
2	JLM	169	• Lamp cluster-assembly-RH	1		Part of DBC11642, DBC11643, DBC12196, DBC12197
2	JLM	170	• Lamp cluster-assembly-LH	1		Part of DBC11642, DBC11643, DBC12196, DBC12197
	JLM	20340	Rear lamp bezel-RH	1		
	JLM	20339	Rear lamp bezel-LH	1		
3	C	9126	Bulb-bayonet-21w	NLA		Use DBC11382
						Jaguar
4	JLM	9587	Bulb-bayonet-5w	NLA		Use DBC11711
						Jaguar
4	DBC	11711	Bulb-bayonet-5w	2		
	DBC	5593	Durlock nut	8		Jaguar

FOG LAMP-FRONT

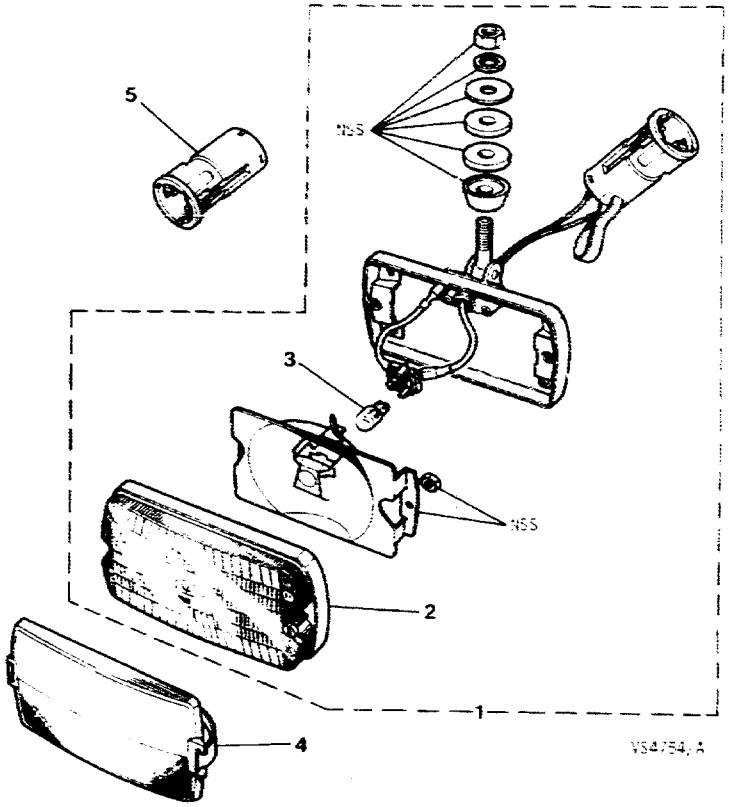


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	3753	Fog lamp-clear lens	2	(1)	Except France and Spain
1	DBC	2129	Fog lamp-yellow lens	2	(1)	France;Spain
2	JLM	1012	Fog lamp lens/reflector -clear lens	1	(1)	
2	JLM	1011	Fog lamp lens/reflector -yellow lens	1	(1)	
3	JLM	9588	Fog lamp bulb-H2 12v-55w-halogen	1	(1)	
4	JS	728	Lens cover	2	(1)	
	JLM	1337	Fog lamp kit-clear lens	1	(1)	
	JLM	9895	Fog lamp fitting kit-front	1	(2)	
	JLM	1906	Fog lamp fitting kit-front	1	(3)	
5	DBC	1845	Harness resistive plug	2	(1)	Except front fog lamps
1	DBC	4320	Fog lamp-clear lens	2	(4)	
1	DBC	4321	Fog lamp-yellow lens-front	2	(4)	
3	JLM	9588	Fog lamp bulb-H2 12v-55w halogen	2	(4)	
2	JLM	1378	Fog lamp lens/reflector -assembly-white lens	2	(4)	
2	JLM	1379	Fog lamp lens/reflector -assembly-yellow lens	2	(4)	
4	JLM	1410	Lens cover	2	(4)	
	JLM	1906	Fog lamp fitting kit-front	1	(4)	
5	DBC	1845	Harness resistive plug	2	(4)	Except front fog lamps
	C	388272	Retaining clip	2	(4)	
	JLM	10993	Bulb holder-fog lamp	2	(4)	

CHANGE POINTS:

(1) To (V) 594575
(2) To (V) 556850
(3) From (V) 556851 To (V) 594575
(4) From (V) 594576

FOG REAR GUARD LAMP AND REFLEX

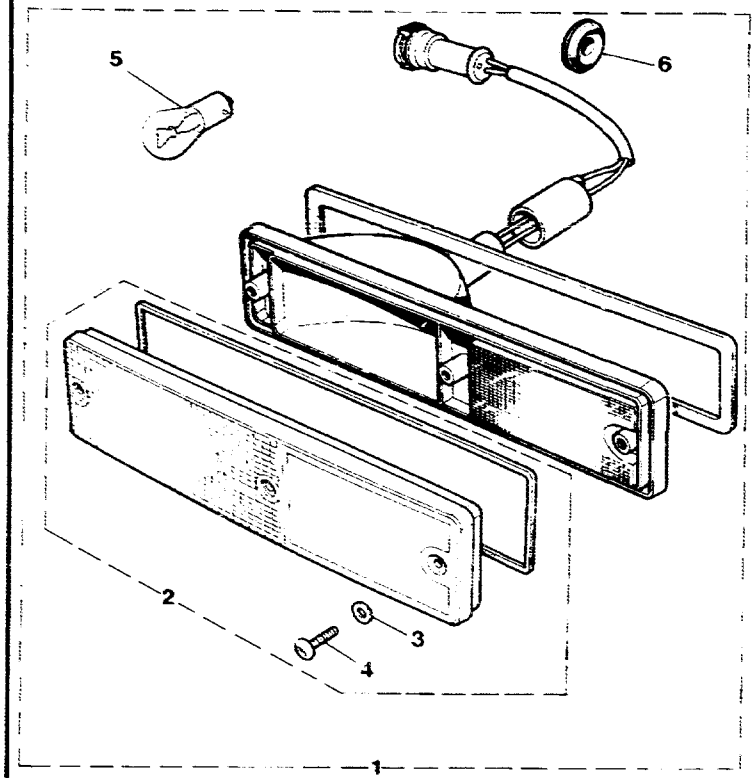

VS4547/8

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2594	Fog/reflex lamp-assembly-rear -plain lens	A/R		
1	DBC	6802	Fog/reflex lamp-assembly-rear -patterned lens	A/R	(1)	
1	DBC	10070	Fog/reflex lamp-assembly-rear -patterned lens	NLA	(2)	Use DBC11663
1	DBC	11663	Fog/reflex lamp-assembly-rear -patterned lens	A/R	(2)	
1	DBC	2595	Fog/reflex lamp-assembly-rear -plain lens	A/R		
	DBC	6803	Reflex-assembly-rear -patterned lens	A/R		
2	JLM	1059	Fog guard lamp lens-assembly-plain lens	1		
2	JLM	2146	Fog guard lamp lens-assembly-patterned lens	1		
	JLM	1060	Reflex lens-assembly-plain lens	1		
	JLM	2147	Reflex lens-assembly-patterned lens	1		
3	JLM	1061	Retension washer-rubber	3		
4	JLM	1062	Screw	3		
5	C	126	Bulb-bayonet-21w	NLA		Use DBC11382
5	DBC	11382	Bulb-bayonet-21w	1		
6	C	18066	Grommet	2	(1)	
	DBC	10306	Fog guard lamp grommet	2	(2)	
	RFN	216	Blanking plug-alternative	1		

CHANGE POINTS
(1) To (V) 657854
(2) From (V) 657855

MASTER INDEX


ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

AUXILIARY EXTERIOR LIGHTS ..... 3. K 17
COURTESY AND INTERIOR LIGHTS ..... 3. L 03
DIRECTION INDICATORS AND HAZARD ..... 3. K 11
HEADLAMPS ..... 3. K 02
LIGHTING CONTROL MODULE ..... 3. L 07
REAR LIGHTS ..... 3. K 13
SIDE MARKERS ..... 3. K 10

BONNET/TRUNK LAMP AND SWITCH ..... 3. L 03
BULB FAILURE MODULE-FRONT LAMP ..... 3. L 07
CARAVAN/TRAILER MODULE ..... 3. L 12
DIRECTION INDICATOR LAMP-FRONT ..... 3. K 11
DIRECTION INDICATOR SIDE REPEATER ..... 3. K 12
FOG LAMP-FRONT ..... 3. K 17
FOG REAR GUARD LAMP AND REFLEX ..... 3. K 18
GEAR SELECTOR ILLUMINATION MODULE ..... 3. L 11
HEADLAMP ASSEMBLY-QUAD ..... 3. K 02
HEADLAMP ASSEMBLY-STYLED-NOT USA ..... 3. K 04
HEADLAMP ASSEMBLY-STYLED-USA ..... 3. K 09
HEADLAMP BULB FAILURE MODULE ..... 3. L 10
HIGH MOUNTED STOP LAMP ..... 3. K 13
INTERIOR LAMP ..... 3. L 04
LAMP ASSEMBLY-REAR-DAIMLER/VDP ..... 3. K 14
LAMP ASSEMBLY-REAR-JAGUAR ..... 3. K 15
NUMBER PLATE LAMP ASSEMBLY ..... 3. L 02
SIDE MARKER AND REFLEX LAMP ..... 3. K 10


NUMBER PLATE LAMP ASSEMBLY

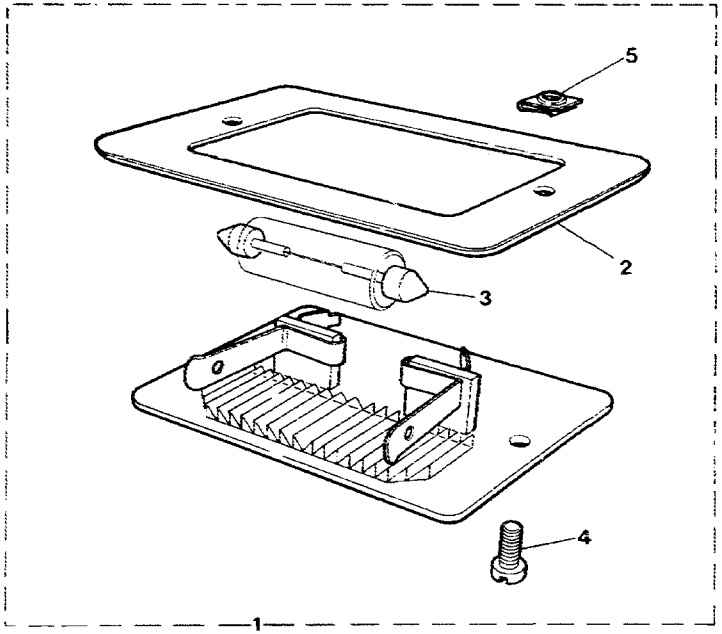

VS4507/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2673	Number plate lamp-assembly	NLA		Use DBC12441.
					Except Japan
1	DBC 12441	Number plate lamp-assembly	2		Except Japan
1	DBC 2860	Number plate lamp-assembly	NLA		Use DBC12442.
					Japan
1	DBC 12442	Number plate lamp-assembly	2		Japan
2	DAC 8633	Gasket	NLA		Use DBC3256.
2	DBC 3256	Gasket	NLA		Use DBC12469.
2	DBC 12469	Gasket	1		
3	JLM 9590	Bulb-festoon.-5w	NLA		Use LNA5180AA.
					Except Japan
3	LNA 5180AA	Bulb-festoon.-5w	1		
3	JLM 9591	Bulb-10w	1		Japan
4	DBC 2322	Screw-silver finish	NLA		
4	AB 606045 J	Screw-black finish-no.6 x 1.5	4		
5	AJ 606021 J	Spring nut	4		

BONNET/TRUNK LAMP AND SWITCH

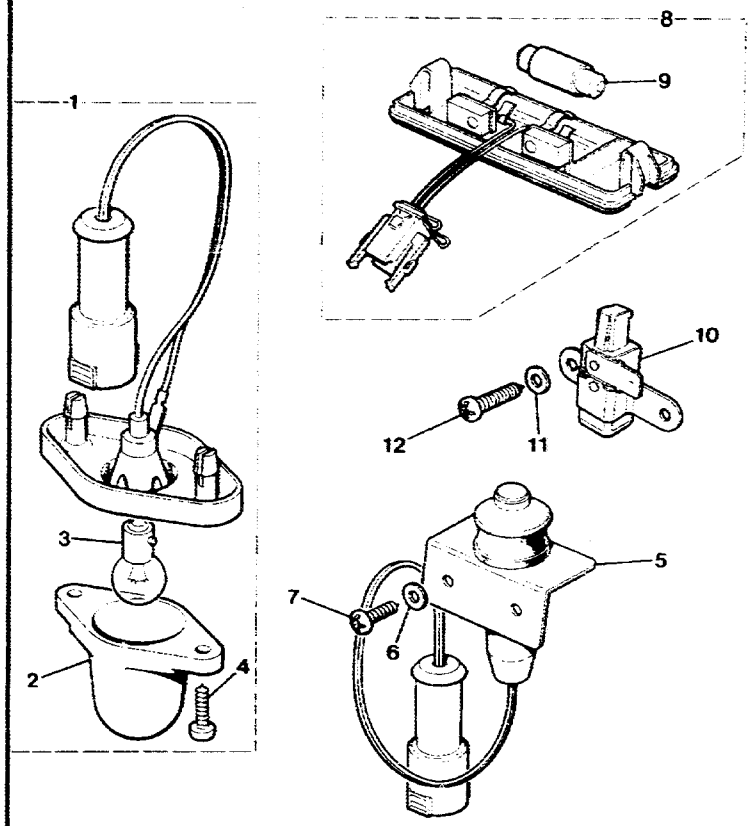


VS4609/B

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DAC 8585	UNDER BONNET LAMP-ASSEMBLY	2		
2	JLM 1013	• Lamp lens-under bonnet	NLA	.....	Use DAC8585.
3	JLM 9601	• Bulb	1		
4	AB 606088 J	Self tapping screw-no.6 x 25mm	4		
5	DBC 2016	Lamp switch-under bonnet	1		
6	WE 104001 J	Shakeproof washer-M4	2		
7	SE 104081 J	Setscrew	2		
8	DBC 2132	TRUNK LAMP-ASSEMBLY	1	(1)	
8	DBC 5013	TRUNK LAMP-ASSEMBLY	1	(2)	
9	JLM 9590	• Bulb-festoon.-5w	NLA	.....	Use LNA5180AA.
9	LNA 5180AA	Bulb-festoon.-5w	1		
10	ADU 2888 J	Trunk lamp switch	1		
	DBC 4822	Insulation sleeve	1		
11	WE 104001 J	Shakeproof washer-M4	2		
12	SE 104121 J	Screw	2		

CHANGE POINTS:
(1) To (V) 551239
(2) From (V) 551240

INTERIOR LAMP

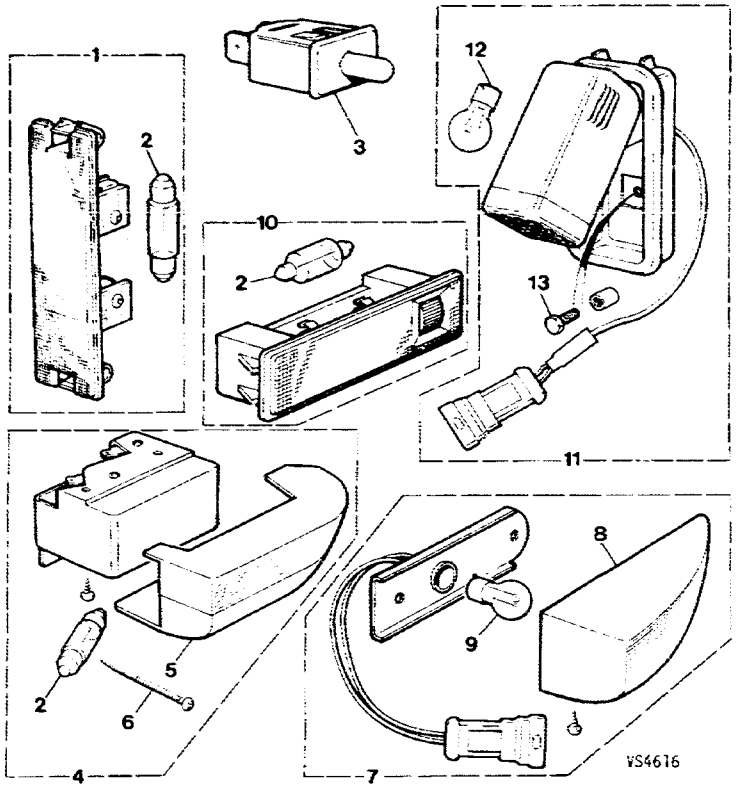


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DAC 8490	CUBBY BOX LAMP-ASSEMBLY	1		
2	JLM 9590	• Bulb-festoon.-5w	NLA		Use LNA5180AA.
2	LNA 5180AA	Bulb-festoon.-5w	1		
3	DBC 2660	Cubby box lamp switch	1		
4	DAC 8470	Door hazard and courtesy lamp switch -RH	2		Except Vanden Plas
4	DAC 8469	Door hazard and courtesy lamp switch -LH	2		Except Vanden Plas
5	JLM 826	Lens-RH outer	1		Except Vanden Plas
5	JLM 824	Lens-LH outer	1		Except Vanden Plas
5	JLM 827	Lens-RH inner	1		Except Vanden Plas
5	JLM 825	Lens-LH inner	1		Except Vanden Plas
6	AB 606021 J	Screw	8		Except Vanden Plas
7	DBC 2572	DOOR HAZARD/COURTESY LAMP -RH	1		1st type;Vanden Plas
7	DBC 2571	DOOR HAZARD/COURTESY LAMP -LH	1		1st type;Vanden Plas
7	DAC 7554	DOOR HAZARD/COURTESY LAMP -ASSEMBLY-RH	NLA		Use DAC10076.
					2nd type;Vanden Plas
7	DAC 7553	DOOR HAZARD/COURTESY LAMP -ASSEMBLY-LH	NLA		Use DAC10077
					2nd type;Vanden Plas
8	DBC 2534	• Lens-assembly-RH	1		Part of DBC2572, DAC7554.
9	JLM 9600	• Bulb-5w	NLA		Use DBC11381.
8	DBC 2535	• Lens-assembly-LH	1		Part of DBC2571, DAC7553.
7	DAC 10077	DOOR HAZARD/COURTESY LAMP -ASSEMBLY-LH	1		2nd type;Vanden Plas
8	DBC 2535	• Lens-assembly-LH	1		
9	DBC 11381	• Bulb-wedge base -5w	NLA		Use XR811819
9	DBC 11380	Bulb-bayonet-12v 4w	1		Vanden Plas
6	AB 606041 J	Screw	4		Vanden Plas

LIGHTING - EXTERIOR/INTERIOR

COURTESY AND INTERIOR LIGHTS

INTERIOR LAMP

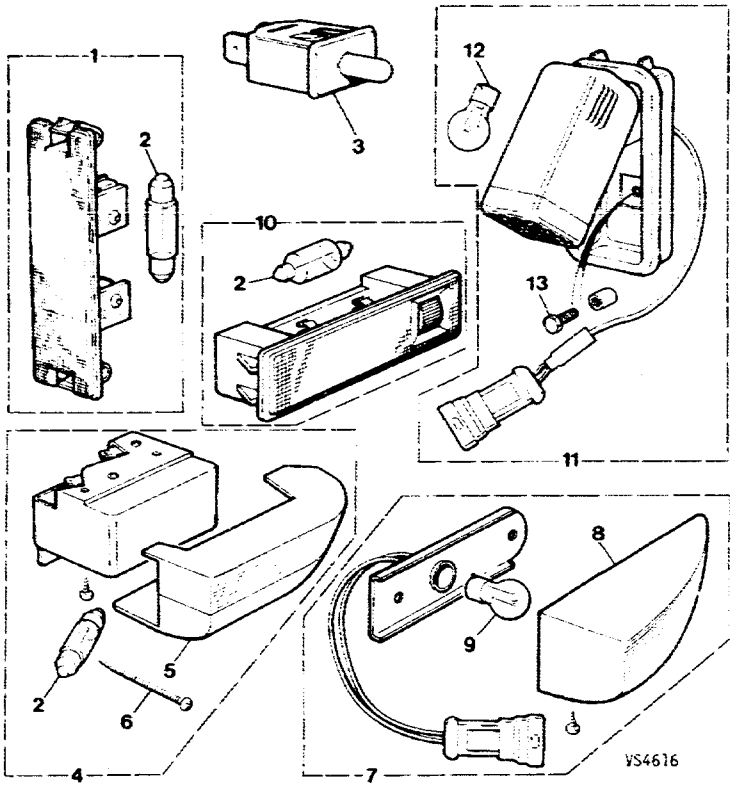


Illus	Part Number		Description	Quantity	Change Point	Remarks
10	DBC	3168	Headrest lamp-assembly	2		USA
10	DBC	3168	Headrest lamp-assembly	2	(1)	Except USA
10	DBC	5269	Headrest lamp-assembly	2	(2)	
	JLM	828	Lamp lens-assembly-headrest	1		
11	DBC	4771 XE	Quarter lamp-Doeskin	2		Except Majestic
11	DBC	4771 LY	Quarter lamp-Savile grey	2		Except Majestic
11	DBC	4771 SDC	Quarter lamp-Coffee	1	(3)	USA;Majestic
12	JLM	9589	Bulb-bayonet-12v 4w	NLA		Use JLM186.
12	JLM	186	Bulb-bayonet-12v 4w	NLA		Use DBC11380.
12	DBC	11380	Bulb-bayonet-12v 4w	1		
13	SE	105203J	Screw	2		
	AAU	4931	Rawl nut	2		
	DAC	19541	Finisher-166mm	A/R		

CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576

(3) From (V) 633352

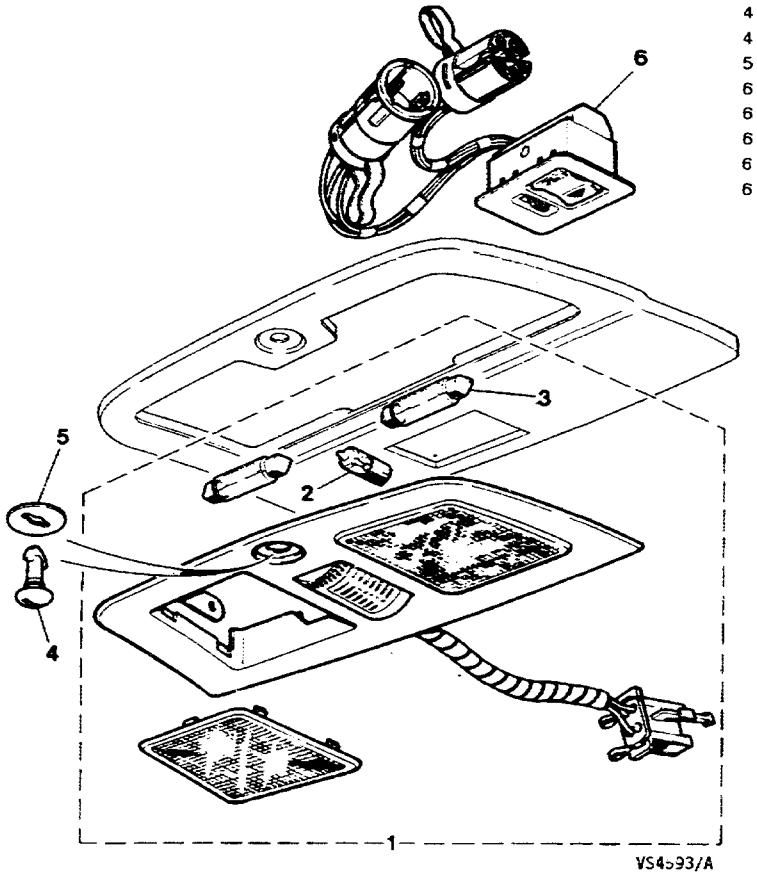


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2644 XE	Map/courtesy lamp-assembly-Doeskin	1		Except Vanden Plas
1	DBC	2644 LY	Map/courtesy lamp-assembly-Savile grey	1		Except Vanden Plas
1	DBC	2643	Map/courtesy lamp-assembly	1		Vanden Plas
2	JLM	846	Map light bulb	1		
3	JLM	9591	Bulb-10w	2		
4	BBC	7222 XE	Console stud-Doeskin	1	(1)	
4	BEC	3950 AEE	Console stud-Doeskin	1	(2)	
4	BEC	3950 LDY	Console stud-Savile grey	1	(2)	
5	SD	461403	Dished washer	1		
6	DBC	2653	Sunroof switch module-assembly-Doeskin	1	(3)	Square profile
6	DBC	3252	Sunroof switch module-assembly-Doeskin	1	(3)	Round profile
6	DBC	4372	Sunroof switch module-assembly-Doeskin	1	(4)	
6	DBC	4372 XE	Sunroof switch module-assembly-Doeskin	1	(2)	
6	DBC	4372 LY	Sunroof switch module-assembly-Savile grey	1	(2)	

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 556850
(4) From (V) 556851 To (V) 594575

BULB FAILURE MODULE-FRONT LAMP

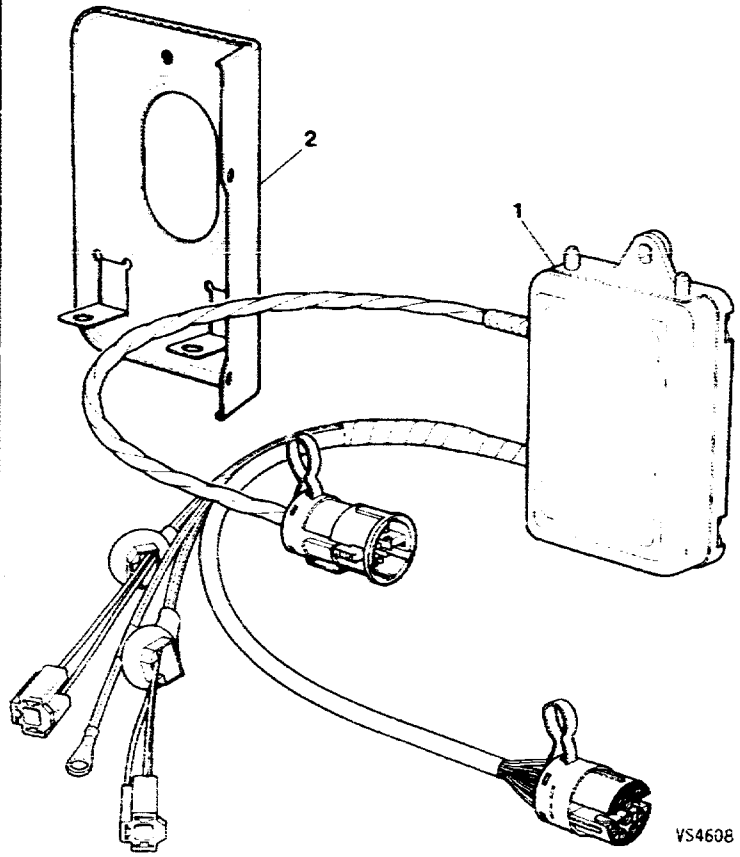


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	4328	Bulb failure module-styled headlamp	NLA	(1)	Use DBC5247.
						Canada
1	DBC	5247	Bulb failure module-styled headlamp	2	(2)	Canada
1	DBC	4371	Bulb failure module-styled headlamp	NLA	(1)	Use DBC5246.
						USA
1	DBC	5246	Bulb failure module-styled headlamp	2	(2)	USA
1	DBC	3180	Bulb failure module-styled headlamp	NLA	(3)	Use DBC3266.
						Except Canada and Norway and Sweden and UK and USA
1	DBC	3266	Bulb failure module-styled headlamp	NLA	(4)	Use DBC5240.
						Except Canada and Norway and Sweden and UK and USA
1	DBC	5240	Bulb failure module-styled headlamp	2	(2)	Except Canada and Norway and Sweden and UK and USA
1	DBC	3185	Bulb failure module-styled headlamp	NLA	(3)	Use DBC3271.
						UK
1	DBC	3271	Bulb failure module-styled headlamp	NLA	(4)	Use DBC5245.
						UK
1	DBC	5245	Bulb failure module-styled headlamp	2	(2)	UK
1	DBC	3740	Bulb failure module-styled headlamp	NLA	(1)	Use DBC5243.
						Norway;Sweden
1	DBC	5243	Bulb failure module-styled headlamp	2	(2)	Norway;Sweden
	JLM	1253	Electrolube grease-2 GX-200ml aerosol	NLA		Use JLM11472.
						Except USA
	JLM	1494	Electrolube grease-100ml tube	NLA		Use JLM11472.
	JLM	11472	Contact grease	NLA		Use JLM20054.
	JLM	20054	Contact grease	NLA		Use JLM20426.
	JLM	20426	Contact grease-250ml container	1		

CHANGE POINTS:

(1) To (V) 643649
(2) From (V) 643650
(3) To (V) 524374
(4) From (V) 524375 To (V) 643649

BULB FAILURE MODULE-REAR LAMP

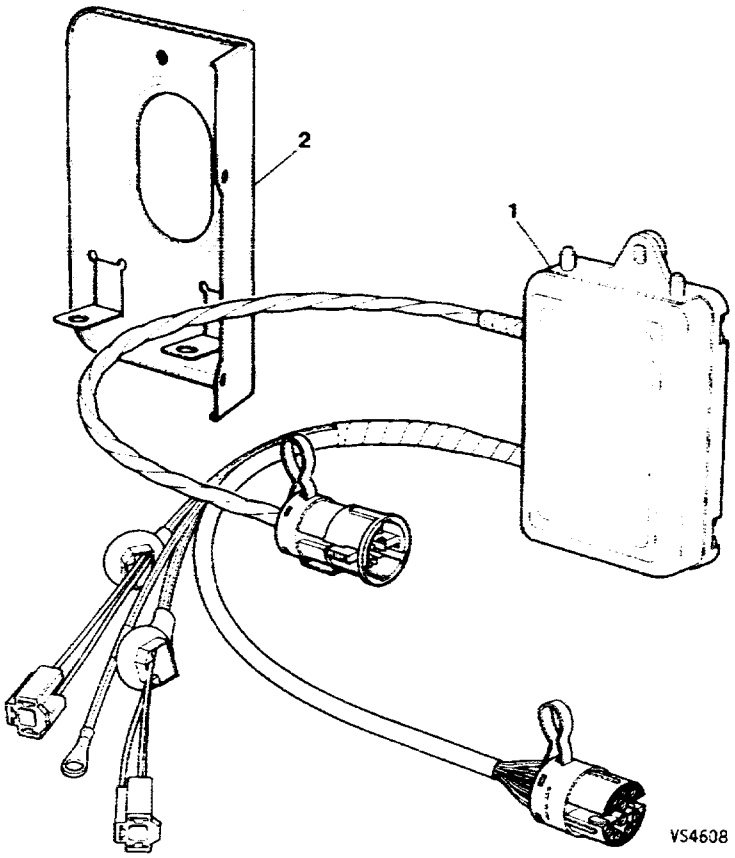


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5249	Bulb failure module	NLA	(1)	Use DBC10183.
					USA
1	DBC 10183	Bulb failure module	NLA		Use DBC10919.
					USA
1	DBC 10919	Bulb failure module	2	(2)	USA
1	DBC 5249	Bulb failure module	NLA	(1)	Use DBC10183.
					Canada;except daytime running lamps
1	DBC 10183	Bulb failure module	NLA		Use DBC10919.
					Canada;except daytime running lamps
1	DBC 10919	Bulb failure module	2	(1)	Canada;except daytime running lamps
1	DBC 4343	Bulb failure module	NLA	(1)	Use DBC5250.
					Canada;daytime running lamps
1	DBC 10920	Bulb failure module	2	(1)	Canada;daytime running lamps
1	DBC 5250	Bulb failure module	NLA	(3)	Use DBC10374.
					Canada;daytime running lamps
1	DBC 10374	Bulb failure module	NLA		Use DBC10920.
					Canada;daytime running lamps
1	DBC 2262	Bulb failure module	2	(4)	Japan
1	DBC 5328	Bulb failure module	NLA	(5)	Use DBC10924.
					Japan
1	DBC 10924	Bulb failure module	1	(6)	Japan
1	DBC 2265	Bulb failure module	NLA	(7)	Use DBC4273.
					Singapore
1	DBC 4273	Bulb failure module	NLA	(8)	Use DBC5327.
					Singapore
1	DBC 5327	Bulb failure module	NLA	(9)	Use DBC10923.
					Singapore
1	DBC 10923	Bulb failure module	2	(10)	Singapore
1	DBC 5251	Bulb failure module	NLA	(11)	Use DBC10921.
					Norway;Sweden
1	DBC 10921	Bulb failure module	2	(12)	Norway;Sweden

CHANGE POINTS:

(1) To (V) 655579
(2) From (V) 655580
(3) From (V) 627400 To (V) 655799
(4) To (V) 627399
(5) From (V) 627400 To (V) 655045
(6) From (V) 655046
(7) To (V) 556850
(8) From (V) 556851 To (V) 627399
(9) From (V) 627400 To (V) 658264
(10) From (V) 658265
(11) To (V) 658340
(12) From (V) 658341


BULB FAILURE MODULE MOUNTING BRACKET

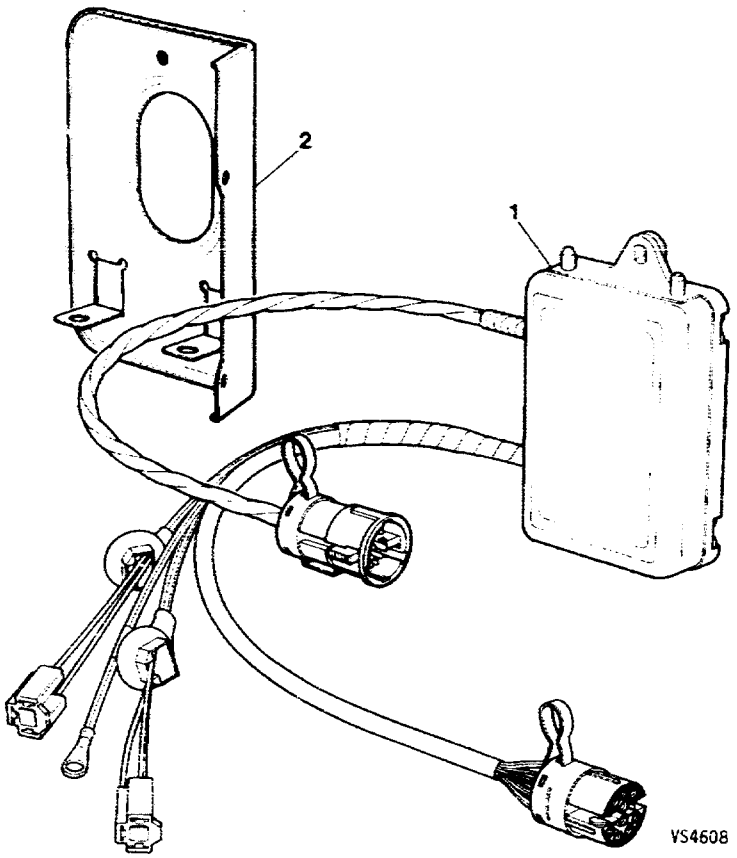

Illus	Part Number	Description	Quantity	Change Point	Remarks
2	DBC 5114	Mounting bracket-assembly-RH rear	1	(1)	
2	DBC 5986	Mounting bracket-assembly-RH rear	1	(2)	
2	DBC 5707	Mounting bracket-assembly-LH rear	1	(1)	
2	DBC 5987	Mounting bracket-assembly-LH rear	1	(2)	
	JLM 1253	Electrolube grease-2 GX-200ml aerosol	NLA		Use JLM11472. For front bulb failure module replacement
	JLM 1494	Electrolube grease-100ml tube	NLA		Use JLM11472. For front bulb failure module replacement
	JLM 11472	Contact grease	NLA		Use JLM20054. For front bulb failure module replacement
	JLM 20054	Contact grease	NLA		Use JLM20426.
	JLM 20426	Contact grease-250ml container	1		
	DRC 1449	Grommet-0.125" bsp	12		
	FS 106161 J	Flange head screw-M6	NLA		Use FS106165P.
	FS 106165 P	Flange head screw	8		
	WE 108001 J	Serrated washer	2		Earth fixings
	GL 108251 J	Setscrew	2		Earth fixings

CHANGE POINTS:
(1) To (V) 622719
(2) From (V) 622720

HEADLAMP BULB FAILURE MODULE

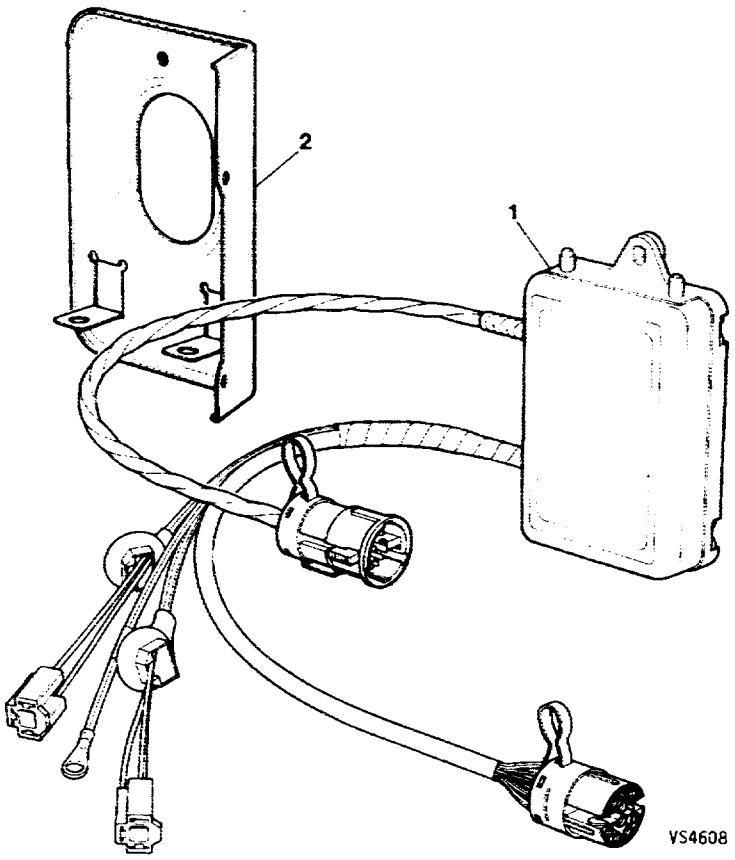


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3179	Bulb failure module-quad headlamp	NLA	(1)	Use DBC3265.
					Canada;USA
1	DBC 3265	Bulb failure module-quad headlamp	NLA	(2)	Use DBC5239.
					USA
1	DBC 5239	Bulb failure module-quad headlamp	2		USA
1	DBC 3265	Bulb failure module-quad headlamp	NLA	(3)	Use DBC5239.
					Canada
1	DBC 5239	Bulb failure module-quad headlamp	2	(3)	Canada
1	DBC 4329	Bulb failure module-quad headlamp	NLA	(4)	Use DBC5248.
					Canada
1	DBC 5248	Bulb failure module-quad headlamp	2	(5)	Canada
1	DBC 3183	Bulb failure module-quad headlamp	NLA	(6)	Use DBC3269.
					Japan
1	DBC 3269	Bulb failure module-quad headlamp	NLA	(6)	Use DBC5241.
					Japan
1	DBC 5241	Bulb failure module-quad headlamp	2	(6)	Japan
1	DBC 3178	Bulb failure module-quad headlamp	NLA	(7)	Use DBC3264.
					Except Canada and Japan and
					Norway and Sweden and UK and
					USA
1	DBC 3264	Bulb failure module-quad headlamp	NLA	(7)	Use DBC5238.
					Except Canada and Japan and
					Norway and Sweden and UK and
					USA
1	DBC 5238	Bulb failure module-quad headlamp	2	(7)	Except Canada and Japan and
					Norway and Sweden and UK and
					USA
1	DBC 3184	Bulb failure module-quad headlamp	NLA	(7)	Use DBC3270.
					UK
1	DBC 3270	Bulb failure module-quad headlamp	NLA	(7)	Use DBC5244.
					UK
1	DBC 5244	Bulb failure module-quad headlamp	2	(7)	UK
1	DBC 3739	Bulb failure module-quad headlamp	NLA	(8)	Use DBC5242.
					Norway;Sweden
	DBC 5242	Quad headlamp	2		Norway;Sweden
	JLM 1253	Electrolube grease-2 GX-200ml aerosol	NLA		Use JLM11472.
					Except USA
	JLM 1494	Electrolube grease-100ml tube	NLA		Use JLM11472.

CHANGE POINTS:

(1) To (V) 551721
(2) From (V) 551722 To (V) 643649
(3) From (V) 551722 To (V) 594575
(4) From (V) 594576 To (V) 643649
(5) From (V) 643650
(6) From (V) 524375 To (V) 643649
(7) To (V) 524374
(8) To (V) 643649

GEAR SELECTOR ILLUMINATION MODULE


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2441	Gear selector illumination module-assembly	1	(1)	Automatic
1	DBC 6433	Gear selector illumination module-assembly	1	(2)	Automatic
2	JLM 1223	Bulb-clear-bayonet	1		

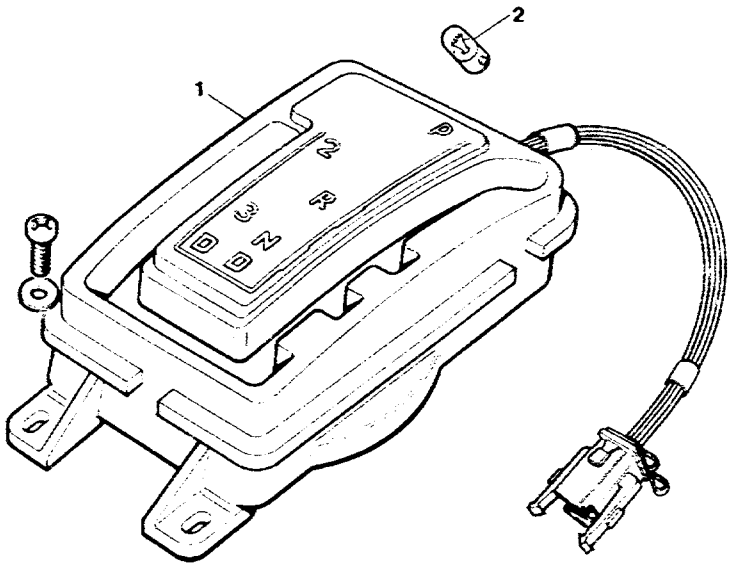

VS4657

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

CARAVAN/TRAILER MODULE

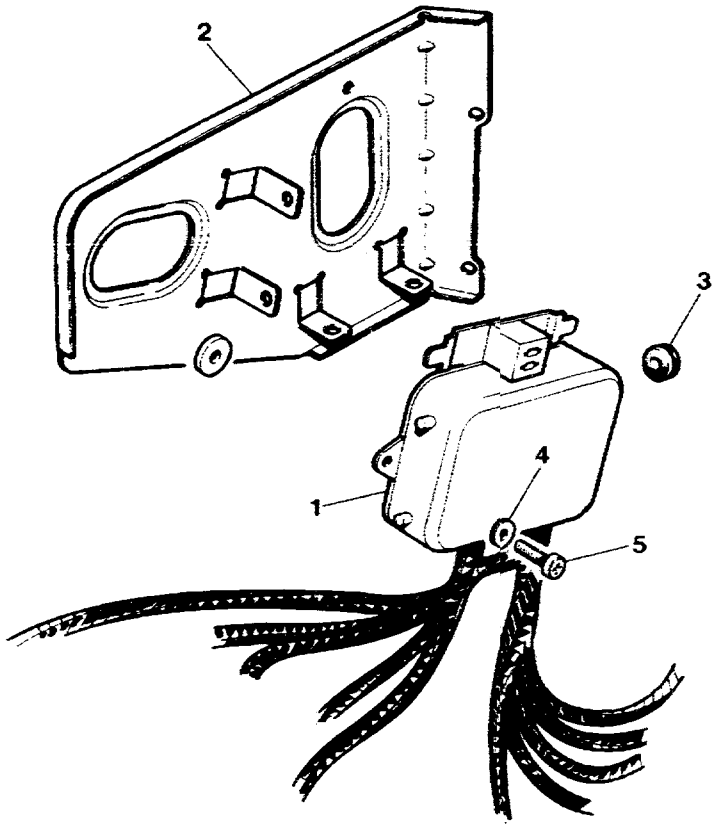

VS4830

Illus	Part Number		Description	Quantity	Change Point	Remarks
	DBC	3280	Fused link lead	1		
2	DBC	2427	Module mounting bracket-RH	NLA	(1)	Use DBC3999.
2	DBC	3999	Module mounting bracket-RH	1		
	DBC	6224	Link lead	1	(2)	LHD
3	DRC	1449	Grommet-0.125" bsp	4		
4	WC	106041 J	Plain washer	NLA		
5	SH	106121 J	Setscrew-M6 x 12mm	1		
	JLM	9852	Caravan and trailer electrics kit	NLA		Use JLM2091.
	JLM	2091	Caravan and trailer electrics kit	NLA		Use JLM10894.
	JLM	10894	TOW BAR KIT	1		LHD
	JLM	2087	TOW BAR KIT	1		RHD
	ACU	1511	• Panel grommet	1		
	C	1042	• Module grommet	NLA		Use CZK4308J
1	DBC	10537	• Caravan/trailer module	1		Part of JLM10894.
	DBC	2227	• Connector	1		
	DBC	2228	• Connector	1		
	DBC	3280	• Fused link lead	1		
	DBC	3401	• Adhesive pad-non vented battery	2		
	DBC	3430	• Rubber seal	NLA		
2	DBC	6241	• Module mounting bracket-LH	1		Part of JLM10894.
1	DBC	2428	• Caravan/trailer module	NLA		Use DBC10537.
						Part of JLM2087.
	DBC	6224	• Link lead	1		Part of JLM2087.
2	DBC	6242	• Module mounting bracket-LH	1		Part of JLM2087.
	NH	105041 J	• Nyloc nut-M5	NLA		Use NH105061J.
						Part of JLM2087.
5	SH	106141 J	• Setscrew-M6 x 14mm	1		Part of JLM2087.
4	WA	105001 J	• Plain washer-M5	6		Part of JLM2087.
	WC	106041	• Washer-0.25" diameter	1		Part of JLM2087.
4	WC	106041 J	• Plain washer	NLA		Part of JLM2087.
	WF	105001 J	• Shakeproof washer	6		Part of JLM2087.
	WL	105001 J	• Spring washer-M5	6		Part of JLM2087.
	BAC	6525	Fuel tank insulation pad-anti rattle	1		

CHANGE POINTS

(1) To (V) 594575

(2) From (D) 1990MY

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

HORNS ..... 3. M 03
VEHICLE SECURITY SYSTEMS ..... 3. M 02

HORN AND MOUNTING ..... 3. M 03
INFRA RED LOCKING SYSTEM ..... 3. M 02


INFRA RED LOCKING SYSTEM

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 11494	INFRA RED LOCKING SYSTEM KIT	1		
2	JLM 1727	• Battery pack	1		
3	JLM 1953	• Battery cover	NLA		Use DBC10536.
3	DBC 10536	Battery cover			

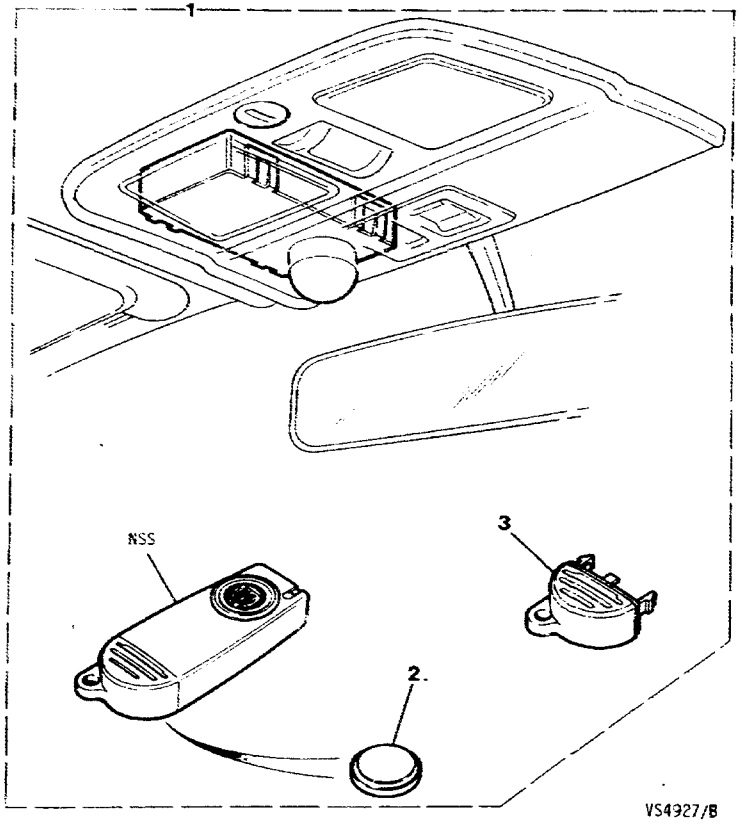


HORN AND MOUNTING

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 3358	Horn-high tone	1	(1)	Except Abu Dhabi and Bahrain and
1	DBC 3359	Horn-low tone	1		Canada and Dubai and Kuwait and
2	DBC 2646	Horn mounting bracket-assembly	1		Oman and Qatar and Saudi Arabia
3	DBC 3363	Horn link harness	1		and USA
4	GL 108251 J	Setscrew	2		
5	FN 108041 J	Flanged nut -M8	1		
	JLM 9688	Nut-M8	1		
	WE 108001 J	Serrated washer	1		

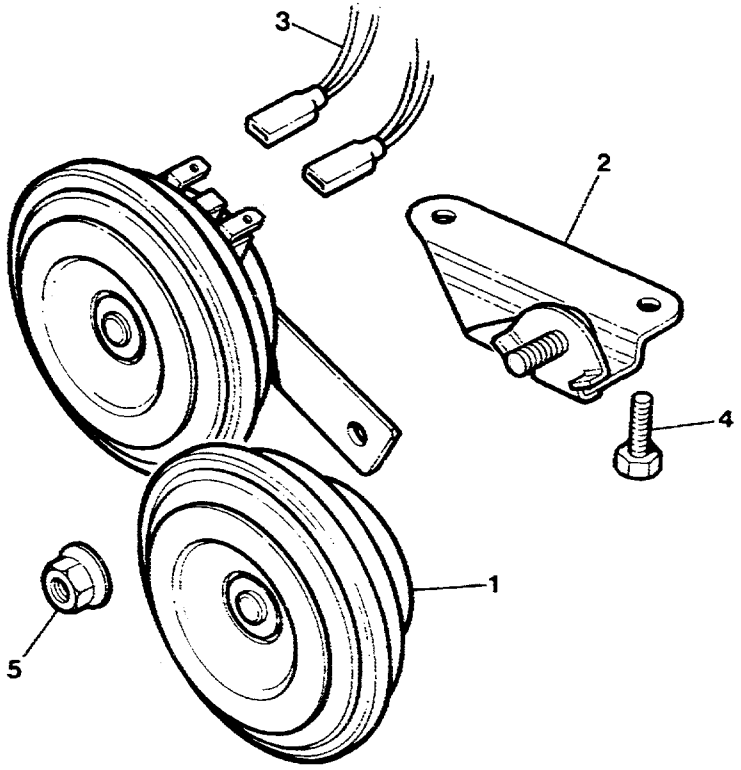

CHANGE POINTS:
(1) To (V) 544387

HORN AND MOUNTING

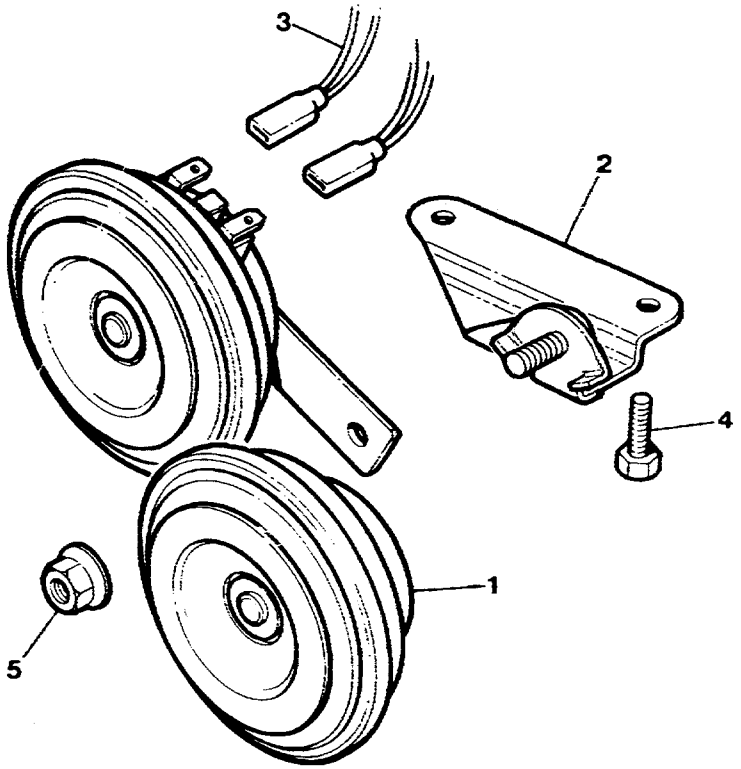


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	3746	Horn-assembly-low tone	1	(1)	Abu Dhabi;Bahrain;Brunei;Canada;Dubai;Kuwait;Oman;Qatar;Saudi Arabia;USA
1	DBC	3745	Horn-assembly-high tone	NLA	(1)	Abu Dhabi;Bahrain;Brunei;Canada;Dubai;Kuwait;Oman;Qatar;Saudi Arabia;USA
2	DBC	3684	Horn mounting bracket	2	(1)	Abu Dhabi;Bahrain;Brunei;Canada;Dubai;Kuwait;Oman;Saudi Arabia;USA;Qatar
3	DBC	3238	Horn link harness	1	(1)	Abu Dhabi;Bahrain;Brunei;Canada;Dubai;Kuwait;Oman;Qatar;Saudi Arabia;USA
5	FN	108041 J	Flanged nut -M8	2	(1)	Abu Dhabi;Bahrain;Brunei;Canada;Dubai;Kuwait;Oman;Qatar;Saudi Arabia;USA

CHANGE POINTS:
(1) To (V) 532088

HORN AND MOUNTING-KLAXON

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 4803	Horn-assembly-high tone	1	(1)	
1	DBC 4817	Horn-high tone	NLA	(2)	Use DAC7986.
1	DBC 4802	Horn-assembly-low tone	1	(1)	
1	DBC 4816	Horn-assembly-low tone	1	(2)	
3	DBC 4794	Horn mounting bracket-assembly	1	(1)	
3	DBC 4819	Horn mounting bracket-assembly	1	(2)	
4	DBC 4797	Horn link harness	1	(1)	
4	DBC 4965	Horn link harness	2	(3)	
5	FN 108041 J	Flanged nut -M8	2		
	GL 108251 J	Setscrew	2		
	JLM 1722	Horn kit	1	(4)	
	BCC 8005	Paint clearing screw	NLA		Use JHG10825EM.
1	DAC 7986	Horn-high tone	1		
	JHG 10825E M	Paint clearing screw	2		

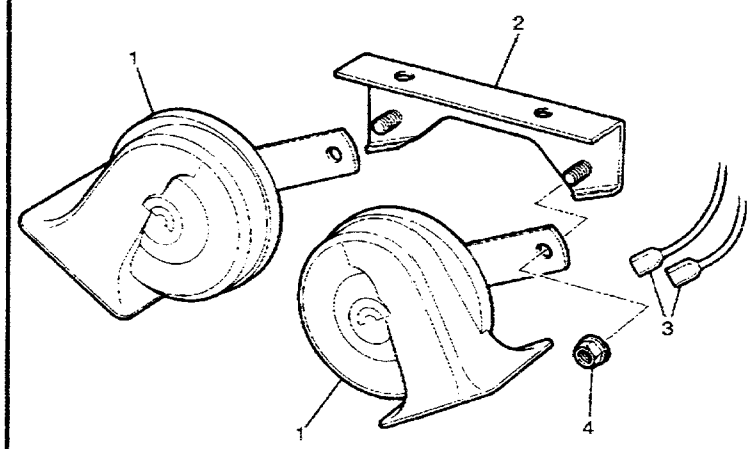

SS4905

CHANGE POINTS:

(1) From (V) 532089 To (V) 544387
(2) From (V) 544388
(3) From (V) 544388 To (V) 594575
(4) To (V) 544387


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

FRONT SEATS, TRIM AND FITTINGS ..... 4. C 02
MISCELLANEOUS ELECTRICAL ..... 4. E 04
REAR SEATS, TRIM AND FITTINGS ..... 4. D 04
SEAT SLIDES AND ADJUSTERS ..... 4. D 16
SEAT SWITCHES ..... 4. E 02

ARMREST/CUBBY BOX-REAR-DAIMLER/VDP ..... 4. D 13
BENCH SEAT ASSEMBLY-REAR-DAIMLER ..... 4. D 14
DOOR CONTROL PANEL ..... 4. E 02
DRIVER'S SEAT ENTRY SWITCH ..... 4. E 03
SEAT ADJUSTER-FRONT-ELECTRIC ..... 4. D 18
SEAT ASSEMBLY-REAR-MAJESTIC ..... 4. D 15
SEAT SENSOR ..... 4. E 04
SEAT SLIDE-FRONT-MANUAL ..... 4. D 16
SEAT-FRONT-DAIMLER/VDP ..... 4. C 14
SEAT-FRONT-MAJESTIC ..... 4. D 03
SEAT-FRONT-SOVEREIGN ..... 4. C 08
SEAT-FRONT-XJ6 ..... 4. C 02
SEAT-REAR-DAIMLER/VDP ..... 4. D 10
SEAT-REAR-SOVEREIGN ..... 4. D 07
SEAT-REAR-XJ6 ..... 4. D 04

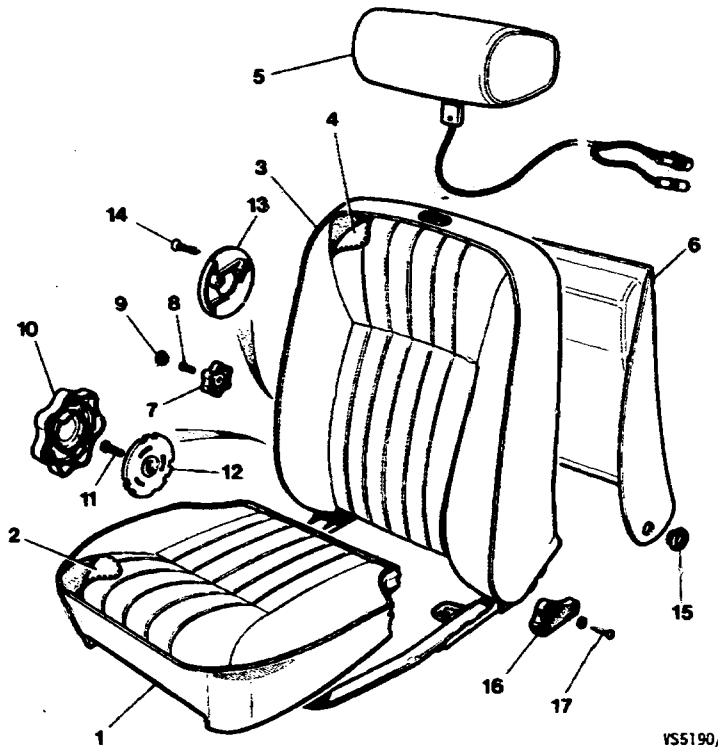


VS5190/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	4878 *A*	Seat cushion-assembly-cloth-RH/LH	2	(1)	XJ6
1	BDC	8480 *B*	Seat cushion-assembly-cloth-RH	1	(2)	XJ6
1	BEC	9138 *B*	Seat cushion-assembly-cloth-RH	1	(3)	XJ6
1	BEC	6190 *B*	Seat cushion-assembly-cloth-RH	1	(4)	XJ6
1	BEC	10646 *B*	Seat cushion-assembly-cloth-RH	1	(5)	XJ6
1	BDC	8481 *B*	Seat cushion-assembly-cloth-LH	1	(2)	XJ6
1	BEC	9139 *B*	Seat cushion-assembly-cloth-LH	1	(3)	XJ6
1	BEC	6191 *B*	Seat cushion-assembly-cloth-LH	1	(4)	XJ6
1	BEC	10647 *B*	Seat cushion-assembly-cloth-LH	1	(5)	XJ6
1	BCC	4880 *C*	Seat cushion-assembly-leather-RH/LH	2	(1)	XJ6
1	BDC	8484 *D*	Seat cushion-assembly-leather-RH	1	(2)	XJ6
1	BEC	9136 *E*	Seat cushion-assembly-leather-RH	1	(3)	XJ6
1	BEC	6188 *E*	Seat cushion-assembly-leather-RH	1	(4)	XJ6
1	BEC	10650 *G*	Seat cushion-assembly-leather-RH	1	(5)	XJ6
1	BEC	17644 *G*	Seat cushion-assembly-leather-RH	1	(6)	XJ6
1	BDC	8485 *D*	Seat cushion-assembly-leather-LH	1	(2)	XJ6
1	BEC	9137 *E*	Seat cushion-assembly-leather-LH	1	(3)	XJ6
1	BEC	6189 *E*	Seat cushion-assembly-leather-LH	1	(4)	XJ6
1	BEC	10651 *G*	Seat cushion-assembly-leather-LH	1	(5)	XJ6
1	BEC	17645 *G*	Seat cushion-assembly-leather-LH	1	(6)	XJ6
2	BCC	3841 *A*	Cushion cover-cloth-RH/LH	2	(1)	XJ6
2	BDC	8452 *B*	Cushion cover-cloth-inner piping-RH	1	(2)	XJ6
2	BEC	9160 *B*	Cushion cover-cloth-no inner piping-RH	1	(3)	XJ6
2	BEC	4762 *B*	Cushion cover-cloth-RH	1	(4)	XJ6
2	BEC	7450 *B*	Cushion cover-cloth-RH	1	(5)	XJ6

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 606739
(4) From (V) 606740 To (V) 629285
(5) From (V) 629286
(6) From (V) 657336

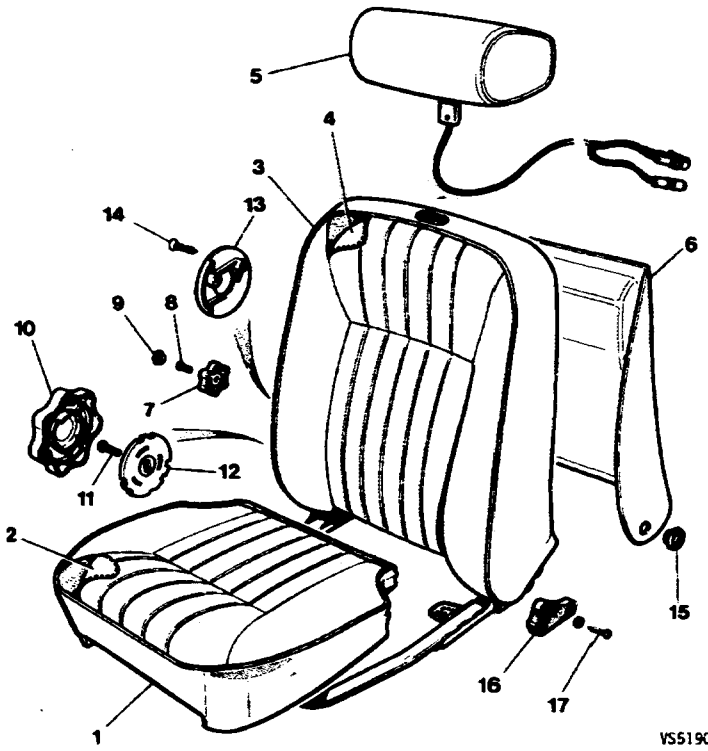


VS5190/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
2	BDC	8453 *B*	Cushion cover-cloth-inner piping-LH	1	(1)	XJ6
2	BEC	9161 *B*	Cushion cover-cloth-no inner piping-LH	1	(2)	XJ6
2	BEC	4763 *B*	Cushion cover-cloth-LH	1	(3)	XJ6
2	BEC	7451 *B*	Cushion cover-cloth-LH	1	(4)	XJ6
2	BCC	3840 *C*	Cushion cover-leather-RH/LH	2	(5)	XJ6
2	BDC	8442 *C*	Cushion cover-leather-RH	1	(1)	XJ6
2	BDC	3540 *C*	Cushion cover-leather-inner piping-RH	1	(1)	XJ6
2	BEC	9162 *E*	Cushion cover-leather-no inner piping-RH	1	(2)	XJ6
2	BEC	4764 *E*	Cushion cover-leather-RH	1	(6)	XJ6
2	BEC	17648 *G*	Cushion cover-leather-RH	1	(7)	XJ6
2	BDC	8443 *C*	Cushion cover-leather-LH	1	(1)	XJ6
2	BDC	3541 *C*	Cushion cover-leather-inner piping-LH	1	(1)	XJ6
2	BEC	9163 *E*	Cushion cover-leather-no inner piping-LH	1	(2)	XJ6
2	BEC	4765 *E*	Cushion cover-leather-LH	1	(6)	XJ6
2	BEC	17649 *G*	Cushion cover-leather-LH	1	(7)	XJ6
3	BCC	4766 *A*	Seat squab-assembly-cloth-inner piping-RH	1	(5)	Manual adjust;XJ6
3	BDC	7426 *B*	Seat squab-assembly-cloth-no inner piping-RH	1	(5)	Manual adjust;XJ6
3	BEC	1658 *A*	Seat squab-assembly-cloth-RH	1	(1)	Manual adjust;XJ6
3	BEC	6148 *B*	Seat squab-assembly-cloth-RH	1	(8)	Manual adjust;XJ6
3	BEC	5802 *B*	Seat squab-assembly-cloth-RH	1	(9)	Manual adjust;XJ6
3	BEC	13404 *B*	Seat squab-assembly-cloth-RH	1	(10)	Manual adjust;XJ6

CHANGE POINTS:


(1) From (V) 556851 To (V) 575488
(2) From (V) 575489 To (V) 606739
(3) From (V) 606740 To (V) 629285
(4) From (V) 629286
(5) To (V) 556850
(6) From (V) 606740
(7) From (V) 657336
(8) From (V) 575489 To (V) 629285
(9) From (V) 629286 To (V) 634175
(10) From (V) 634176

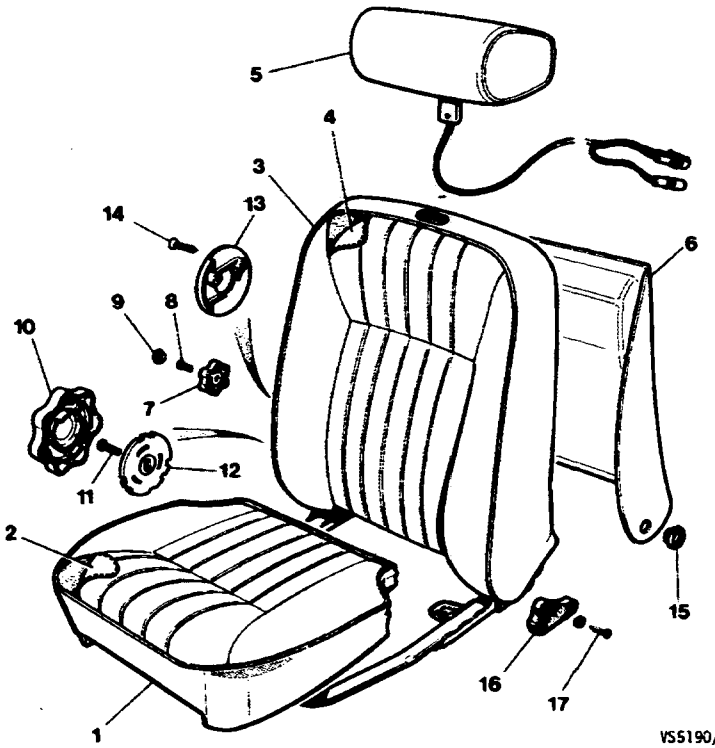

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BCC	4767*A*	Seat squab-assembly-cloth-inner piping-LH	1	(1)	Manual adjust;XJ6
3	BDC	7427*B*	Seat squab-assembly-cloth-no inner piping-LH	1	(1)	Manual adjust;XJ6
3	BEC	1659*A*	Seat squab-assembly-cloth-LH	1	(2)	Manual adjust;XJ6
3	BEC	6149*B*	Seat squab-assembly-cloth-LH	1	(3)	Manual adjust;XJ6
3	BEC	5803*B*	Seat squab-assembly-cloth-LH	1	(4)	Manual adjust;XJ6
3	BEC	13405*B*	Seat squab-assembly-cloth-LH	1	(5)	Manual adjust;XJ6
3	BCC	4770*A*	Seat squab-assembly-cloth-inner piping-RH	1	(1)	Electric adjust;XJ6
3	BDC	7430*A*	Seat squab-assembly-cloth-no inner piping-RH	1	(1)	Electric adjust;XJ6
3	BEC	1666*A*	Seat squab-assembly-cloth-RH	1	(2)	Electric adjust;XJ6
3	BEC	6164*B*	Seat squab-assembly-cloth-RH	1	(3)	Electric adjust;XJ6
3	BEC	5796*B*	Seat squab-assembly-cloth-RH	1	(4)	Electric adjust;XJ6
3	BEC	13398*B*	Seat squab-assembly-cloth-RH	1	(5)	Electric adjust;XJ6
3	BCC	4771*A*	Seat squab-assembly-cloth-inner piping-LH	1	(1)	Electric adjust;XJ6
3	BDC	7431*A*	Seat squab-assembly-cloth-no inner piping-LH	1	(1)	Electric adjust;XJ6
3	BEC	1667*A*	Seat squab-assembly-cloth-LH	1	(2)	Electric adjust;XJ6
3	BEC	6165*B*	Seat squab-assembly-cloth-LH	1	(3)	Electric adjust;XJ6
3	BEC	5797*B*	Seat squab-assembly-cloth-LH	1	(4)	Electric adjust;XJ6
3	BEC	13399*B*	Seat squab-assembly-cloth-LH	1	(5)	Electric adjust;XJ6
3	BCC	4768*C*	Seat squab-assembly-leather-inner piping-RH	1	(1)	Manual adjust;XJ6
3	BDC	7428*C*	Seat squab-assembly-leather-no inner piping-RH	1	(1)	Manual adjust;XJ6
3	BDC	9152*C*	Seat squab-assembly-leather-RH	1	(2)	Manual adjust;XJ6
3	BEC	6146*E*	Seat squab-assembly-leather-RH	1	(3)	Manual adjust;XJ6
3	BEC	5806*G*	Seat squab-assembly-leather-RH	1	(4)	Manual adjust;XJ6
3	BEC	13874*G*	Seat squab-assembly-leather-RH	1	(5)	Manual adjust;XJ6
3	BCC	4769*C*	Seat squab-assembly-leather-inner piping-LH	1	(1)	Manual adjust;XJ6
3	BDC	7429*C*	Seat squab-assembly-leather-no inner piping-LH	1	(1)	Manual adjust;XJ6
3	BDC	9153*C*	Seat squab-assembly-leather-LH	1	(2)	Manual adjust;XJ6
3	BEC	6147*E*	Seat squab-assembly-leather-LH	1	(3)	Manual adjust;XJ6
3	BEC	5807*G*	Seat squab-assembly-leather-LH	1	(4)	Manual adjust;XJ6
3	BEC	13875*G*	Seat squab-assembly-leather-LH	1	(5)	Manual adjust;XJ6

CHANGE POINTS:


(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 629285
(4) From (V) 629286 To (V) 634175
(5) From (V) 634176

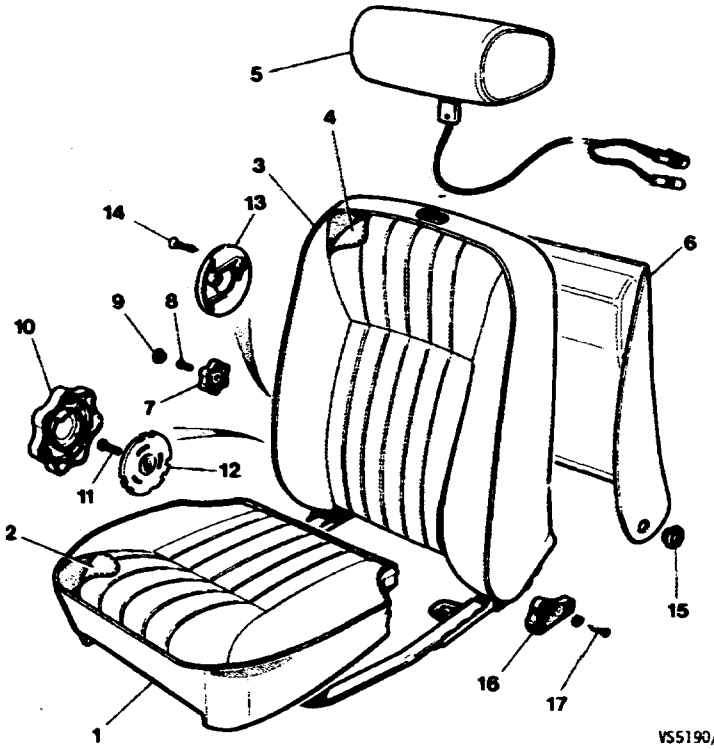

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BCC	4772 *C*	Seat squab-assembly-leather-inner piping-RH	1	(1)	Electric adjust;XJ6
3	BDC	7432 *C*	Seat squab-assembly-leather-no inner piping-RH	1	(1)	Electric adjust;XJ6
3	BDC	9160 *C*	Seat squab-assembly-leather-RH	1	(2)	Electric adjust;XJ6
3	BEC	6162 *E*	Seat squab-assembly-leather-RH	1	(3)	Electric adjust;XJ6
3	BEC	5790 *G*	Seat squab-assembly-leather-RH	1	(4)	Electric adjust;XJ6
3	BEC	13392 *G*	Seat squab-assembly-leather-RH	1	(5)	Electric adjust;XJ6
3	BEC	16034 *9*	Seat squab-assembly-leather-passive restraint-RH	1	(5)	Electric adjust;XJ6
3	BEC	17630 *G*	Seat squab-assembly-all leather-RH	1	(6)	Electric adjust;XJ6
3	BCC	4773 *C*	Seat squab-assembly-leather-inner piping-LH	1	(1)	Electric adjust;XJ6
3	BDC	7433 *C*	Seat squab-assembly-leather-no inner piping-LH	1	(1)	Electric adjust;XJ6
3	BDC	9161 *C*	Seat squab-assembly-leather-LH	1	(2)	Electric adjust;XJ6
3	BEC	6163 *E*	Seat squab-assembly-leather-LH	1	(3)	Electric adjust;XJ6
3	BEC	5791 *G*	Seat squab-assembly-leather-LH	1	(4)	Electric adjust;XJ6
3	BEC	13393 *G*	Seat squab-assembly-leather-LH	1	(5)	Electric adjust;XJ6
3	BEC	16035 *9*	Seat squab-assembly-leather-passive restraint-LH	1	(5)	Electric adjust;XJ6
3	BEC	17631 *G*	Seat squab-assembly-all leather-LH	1	(6)	Electric adjust;XJ6
4	BCC	3869 *A*	Squab cover-front-cloth-inner piping	2	(1)	XJ6
4	BDC	7291 *A*	Squab cover-front-cloth-inner piping	2	(2)	XJ6
4	BEC	4761 *B*	Squab cover-front-cloth	2	(3)	XJ6
4	BEC	7448 *B*	Squab cover-front-cloth	2	(7)	XJ6
4	BCC	3868 *C*	Squab cover-front-leather-inner piping	2	(1)	XJ6
4	BDC	7290 *C*	Squab cover-front-leather-inner piping	2	(2)	XJ6
4	BEC	4760 *E*	Squab cover-front-leather	2	(3)	XJ6
4	BEC	4760 *G*	Squab cover-front-leather	2	(7)	XJ6
4	BEC	17632 *G*	Squab cover-front-all leather	2	(6)	XJ6
	JLM	1787	Mechanical fix fitting kit-front	A/R		

CHANGE POINTS:


(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 629285
(4) From (V) 629286 To (V) 634175
(5) From (V) 634176
(6) From (V) 657336
(7) From (V) 629286

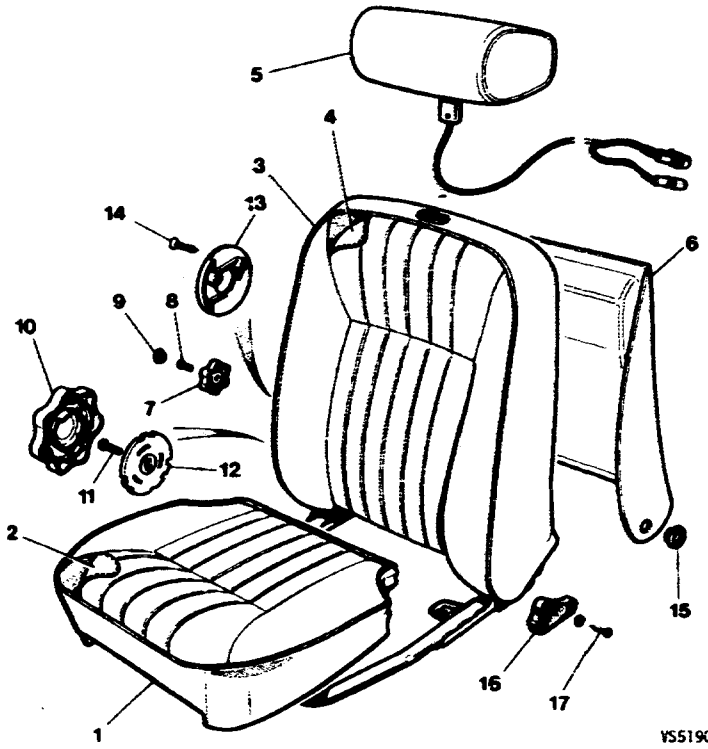

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	BBC	6166 *A*	Headrest-cloth-front	2	(1; 2)	XJ6;escutcheon
5	BDC	5711 *A*	Headrest-cloth-front	2	(1; 2)	XJ6;no escutcheon
5	BDC	7420 *A*	Headrest-cloth-front	2	(3)	XJ6;no escutcheon
5	BEC	6131 *B*	Headrest-cloth-front	2	(3; 4)	XJ6;escutcheon
5	BDC	5710 *C*	Headrest-leather-front	2	(1; 2)	XJ6;no escutcheon
5	BBC	6165 *C*	Headrest-leather-front	2	(1; 2)	XJ6;escutcheon
5	BEC	6130 *E*	Headrest-leather-front	2	(3)	XJ6;escutcheon
5	BEC	6130 *G*	Headrest-leather-front	2	(4)	XJ6;escutcheon
6	BCC	5464 *C*	Squab backcover-ABS moulding-RH	1	(1; 2; 3)	XJ6
6	BEC	9244 *D*	Squab backcover-ABS moulding-RH	1	(4)	XJ6
6	BEC	17594 *D*	Squab backcover-all leather-RH	1	(5)	XJ6
6	BCC	5465 *C*	Squab backcover-ABS moulding-LH	1	(1; 2; 3)	XJ6
6	BEC	9245 *D*	Squab backcover-ABS moulding-LH	1	(4)	XJ6
6	BEC	17595 *D*	Squab backcover-all leather-LH	1	(5)	XJ6
	BBC	6175 *C*	Headrest escutcheon/fixing bracket-cloth trim	1		XJ6
	BBC	6174 *C*	Headrest escutcheon/fixing bracket-leather trim	1		XJ6
	DAC	706 J	Self tapping screw-backcover to squab	2		
7	BAC	4520	Lumbar adjust hand wheel	1		
8	BD	433671	Taptite screw-lumbar adjustment handwheel	1		
9	BAC	2698	Plug-lumbar adjustment handwheel	1		
10	BBC	6521 LZ	Hand wheel-recline mechanism	1		
9	BAC	6758	Plug-recline mechanism hand wheel	1		
11	SE	106101 J	Screw-M6	1		
12	BBC	6810	Insert-recline mechanism hand wheel	1		


CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336

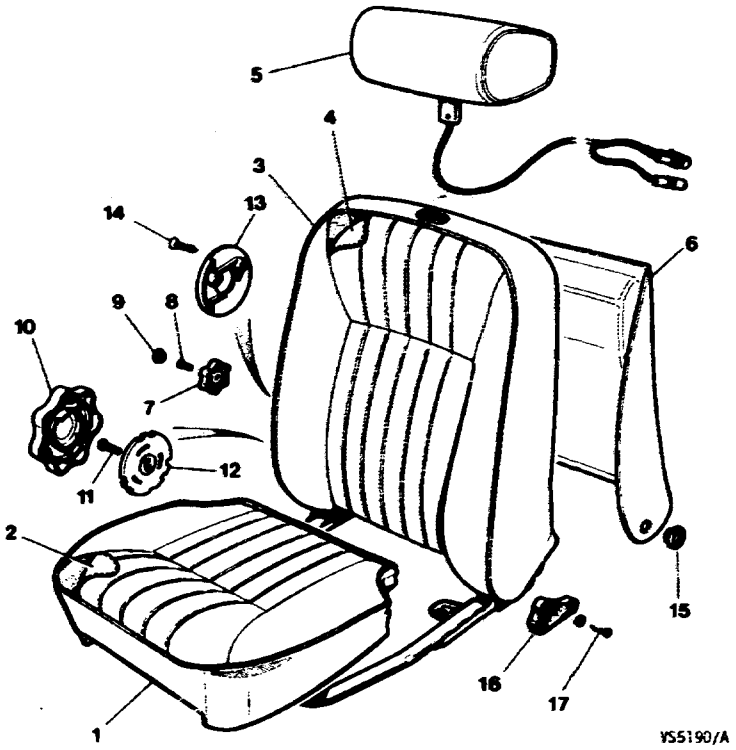

Illus	Part Number	Description	Quantity	Change Point	Remarks
13	BCC 5274 LZ	Handwheel escutcheon -lumbar support adjust-RH	1	(1)	XJ6
13	BCC 5275 LZ	Handwheel escutcheon -lumbar support adjust-LH	1	(1)	XJ6
13	BEC 10972	Handwheel escutcheon -lumbar support adjust-RH	NLA	(2)	Use BCC5274LZ
13	BEC 10973	Handwheel escutcheon -lumbar support adjust-LH	NLA	(2)	Use BCC5275LZ
14	AC 608051 J	Screw-escutcheon to squab	NLA	(1)	Use AC608074J
14	AC 608074 J	Screw-escutcheon to squab	1	(2)	
15	BBC 4798	Backcover attachment cap	2		
	SE 106121 J	Recessed pan head screw	2		
16	BCC 6248	Squab cushion/frame cover-RH	1		
16	BCC 6249	Squab cushion/frame cover-LH	1		
17	SE 105104 J	Pan head screw-M5	2		
	BCC 2082	Seat pan bracket	4		
	BD 86338	Caged nut	4		
	WC 702101 J	Plain washer-no.10	4		
	AB 608061 J	Self tapping screw	4		
	AGU 1467	Carpet fastener	6		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

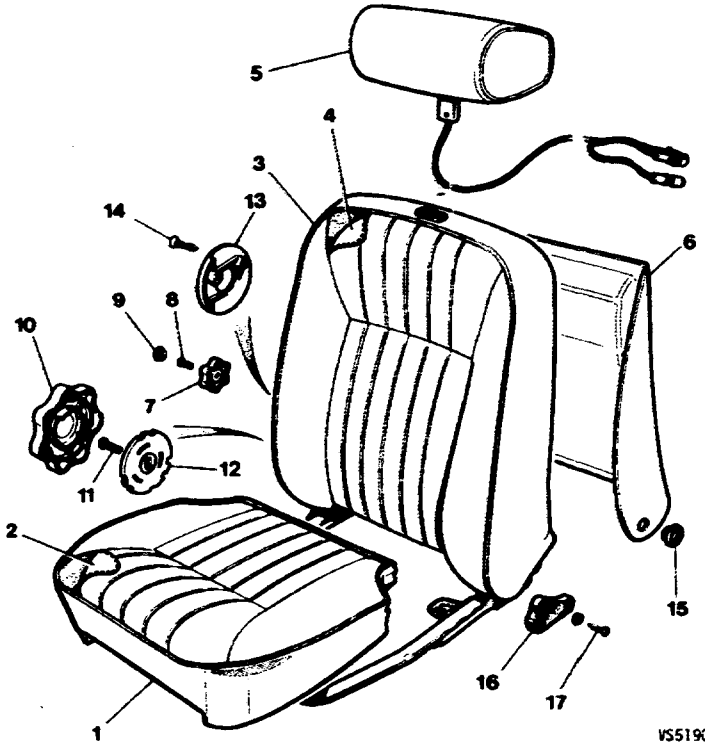


VS5190/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	4878 *A*	Seat cushion-assembly-cloth-RH/LH	2	(1)	Sovereign
1	BDC	8480 *B*	Seat cushion-assembly-cloth-RH	1	(2)	Sovereign
1	BEC	9138 *B*	Seat cushion-assembly-cloth-RH	1	(3)	Sovereign
1	BEC	6190 *B*	Seat cushion-assembly-cloth-RH	1	(4)	Sovereign
1	BEC	10646 *B*	Seat cushion-assembly-cloth-RH	1	(5)	Sovereign
1	BDC	8481 *B*	Seat cushion-assembly-cloth-LH	1	(2)	Sovereign
1	BEC	9139 *B*	Seat cushion-assembly-cloth-LH	1	(3)	Sovereign
1	BEC	6191 *B*	Seat cushion-assembly-cloth-LH	1	(4)	Sovereign
1	BEC	10647 *B*	Seat cushion-assembly-cloth-LH	1	(5)	Sovereign
1	BCC	4880 *C*	Seat cushion-assembly-leather-RH/LH	2	(1)	Sovereign
1	BDC	8484 *D*	Seat cushion-assembly-leather-RH	1	(2)	Sovereign
1	BEC	9136 *E*	Seat cushion-assembly-leather-RH	1	(3)	Sovereign
1	BEC	6188 *E*	Seat cushion-assembly-leather-RH	1	(4)	Sovereign
1	BEC	10650 *G*	Seat cushion-assembly-leather-RH	1	(5)	Sovereign
1	BEC	17644 *G*	Seat cushion-assembly-leather-RH	1	(6)	Sovereign
1	BDC	8485 *D*	Seat cushion-assembly-leather-LH	1	(2)	Sovereign
1	BEC	9137 *E*	Seat cushion-assembly-leather-LH	1	(3)	Sovereign
1	BEC	6189 *E*	Seat cushion-assembly-leather-LH	1	(4)	Sovereign
1	BEC	10651 *G*	Seat cushion-assembly-leather-LH	1	(5)	Sovereign
1	BEC	17645 *G*	Seat cushion-assembly-leather-LH	1	(6)	Sovereign
2	BCC	3841 *A*	Cushion cover-cloth-RH/LH	2	(1)	Sovereign
2	BDC	8452 *B*	Cushion cover-cloth-inner piping-RH	1	(2)	Sovereign
2	BEC	9160 *B*	Cushion cover-cloth-no inner piping-RH	1	(3)	Sovereign
2	BEC	4762 *B*	Cushion cover-cloth-RH	1	(4)	Sovereign
2	BEC	7450 *B*	Cushion cover-cloth-RH	1	(5)	Sovereign

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 606739
(4) From (V) 606740 To (V) 629285
(5) From (V) 629286
(6) From (V) 657336

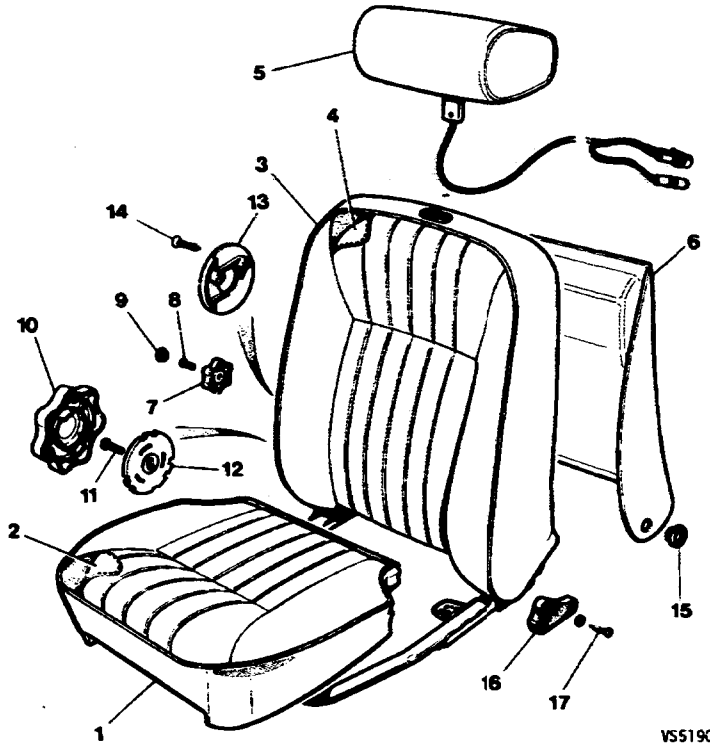


VS5190/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
2	BDC	8453 *B*	Cushion cover-cloth-inner piping-LH	1	(1)	Sovereign
2	BEC	9161 *B*	Cushion cover-cloth-no inner piping-LH	1	(2)	Sovereign
2	BEC	4763 *B*	Cushion cover-cloth-LH	1	(3)	Sovereign
2	BEC	7451 *B*	Cushion cover-cloth-LH	1	(4)	Sovereign
2	BCC	3840 *C*	Cushion cover-leather-RH/LH	2	(5)	Sovereign
2	BDC	8442 *C*	Cushion cover-leather-RH	1	(1)	Sovereign
2	BDC	3540 *C*	Cushion cover-leather-inner piping-RH	1	(1)	Sovereign
2	BEC	9162 *E*	Cushion cover-leather-no inner piping-RH	1	(2)	Sovereign
2	BEC	4764 *E*	Cushion cover-leather-RH	1	(6)	Sovereign
2	BEC	17648 *G*	Cushion cover-leather-RH	1	(7)	Sovereign
2	BDC	8443 *C*	Cushion cover-leather-LH	1	(1)	Sovereign
2	BDC	3541 *C*	Cushion cover-leather-inner piping-LH	1	(1)	Sovereign
2	BEC	9163 *E*	Cushion cover-leather-no inner piping-LH	1	(2)	Sovereign
2	BEC	4765 *E*	Cushion cover-leather-LH	1	(6)	Sovereign
2	BEC	17649 *G*	Cushion cover-leather-LH	1	(7)	Sovereign
3	BCC	4766 *A*	Seat squab-assembly-cloth-inner piping-RH	1	(5)	Manual adjust;Sovereign
3	BDC	7426 *B*	Seat squab-assembly-cloth-no inner piping-RH	1	(5)	Manual adjust;Sovereign
3	BEC	1658 *A*	Seat squab-assembly-cloth-RH	1	(1)	Manual adjust;Sovereign
3	BEC	6148 *B*	Seat squab-assembly-cloth-RH	1	(8)	Manual adjust;Sovereign
3	BEC	5802 *B*	Seat squab-assembly-cloth-RH	1	(9)	Manual adjust;Sovereign
3	BEC	13404 *B*	Seat squab-assembly-cloth-RH	1	(10)	Manual adjust;Sovereign

CHANGE POINTS:

(1) From (V) 556851 To (V) 575488
(2) From (V) 575489 To (V) 606739
(3) From (V) 606740 To (V) 629285
(4) From (V) 629286
(5) To (V) 556850
(6) From (V) 606740
(7) From (V) 657336
(8) From (V) 575489 To (V) 629285
(9) From (V) 629286 To (V) 634175
(10) From (V) 634176

SEAT-FRONT-SOVEREIGN

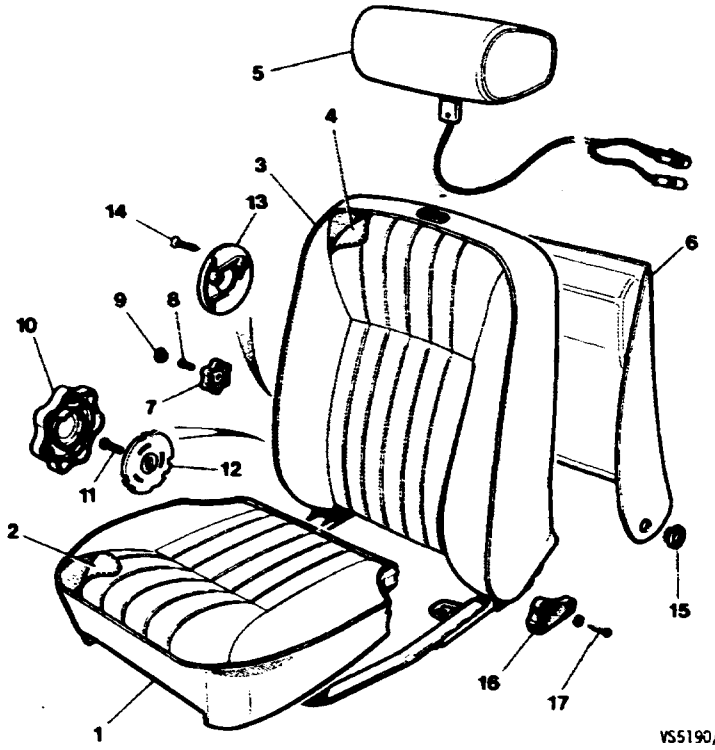


VS5190/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BCC	4767 *A*	Seat squab-assembly-cloth-inner piping-LH	1	(1)	Manual adjust;Sovereign
3	BDC	7427 *B*	Seat squab-assembly-cloth-no inner piping-LH	1	(1)	Manual adjust;Sovereign
3	BEC	1659 *A*	Seat squab-assembly-cloth-LH	1	(2)	Manual adjust;Sovereign
3	BEC	6149 *B*	Seat squab-assembly-cloth-LH	1	(3)	Manual adjust;Sovereign
3	BEC	5803 *B*	Seat squab-assembly-cloth-LH	1	(4)	Manual adjust;Sovereign
3	BEC	13405 *B*	Seat squab-assembly-cloth-LH	1	(5)	Manual adjust;Sovereign
3	BCC	4770 *A*	Seat squab-assembly-cloth-inner piping-RH	1	(1)	Electric adjust;Sovereign
3	BDC	7430 *A*	Seat squab-assembly-cloth-no inner piping-RH	1	(1)	Electric adjust;Sovereign
3	BEC	1666 *A*	Seat squab-assembly-cloth-RH	1	(2)	Electric adjust;Sovereign
3	BEC	6164 *B*	Seat squab-assembly-cloth-RH	1	(3)	Electric adjust;Sovereign
3	BEC	5796 *B*	Seat squab-assembly-cloth-RH	1	(4)	Electric adjust;Sovereign
3	BEC	13398 *B*	Seat squab-assembly-cloth-RH	1	(5)	Electric adjust;Sovereign
3	BCC	4771 *A*	Seat squab-assembly-cloth-inner piping-LH	1	(1)	Electric adjust;Sovereign
3	BDC	7431 *A*	Seat squab-assembly-cloth-no inner piping-LH	1	(1)	Electric adjust;Sovereign
3	BEC	1667 *A*	Seat squab-assembly-cloth-LH	1	(2)	Electric adjust;Sovereign
3	BEC	6165 *B*	Seat squab-assembly-cloth-LH	1	(3)	Electric adjust;Sovereign
3	BEC	5797 *B*	Seat squab-assembly-cloth-LH	1	(4)	Electric adjust;Sovereign
3	BEC	13399 *B*	Seat squab-assembly-cloth-LH	1	(5)	Electric adjust;Sovereign
3	BCC	4768 *C*	Seat squab-assembly-leather-inner piping-RH	1	(1)	Manual adjust;Sovereign
3	BDC	7428 *C*	Seat squab-assembly-leather-no inner piping-RH	1	(1)	Manual adjust;Sovereign
3	BDC	9152 *C*	Seat squab-assembly-leather-RH	1	(2)	Manual adjust;Sovereign
3	BEC	6146 *E*	Seat squab-assembly-leather-RH	1	(3)	Manual adjust;Sovereign
3	BEC	5806 *G*	Seat squab-assembly-leather-RH	1	(4)	Manual adjust;Sovereign
3	BEC	13874 *G*	Seat squab-assembly-leather-RH	1	(5)	Manual adjust;Sovereign
3	BCC	4769 *C*	Seat squab-assembly-leather-inner piping-LH	1	(1)	Manual adjust;Sovereign
3	BDC	7429 *C*	Seat squab-assembly-leather-no inner piping-LH	1	(1)	Manual adjust;Sovereign
3	BDC	9153 *C*	Seat squab-assembly-leather-LH	1	(2)	Manual adjust;Sovereign
3	BEC	6147 *E*	Seat squab-assembly-leather-LH	1	(3)	Manual adjust;Sovereign
3	BEC	5807 *G*	Seat squab-assembly-leather-LH	1	(4)	Manual adjust;Sovereign
3	BEC	13875 *G*	Seat squab-assembly-leather-LH	1	(5)	Manual adjust;Sovereign

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 629285
(4) From (V) 629286 To (V) 634175
(5) From (V) 634176


SEAT-FRONT-SOVEREIGN

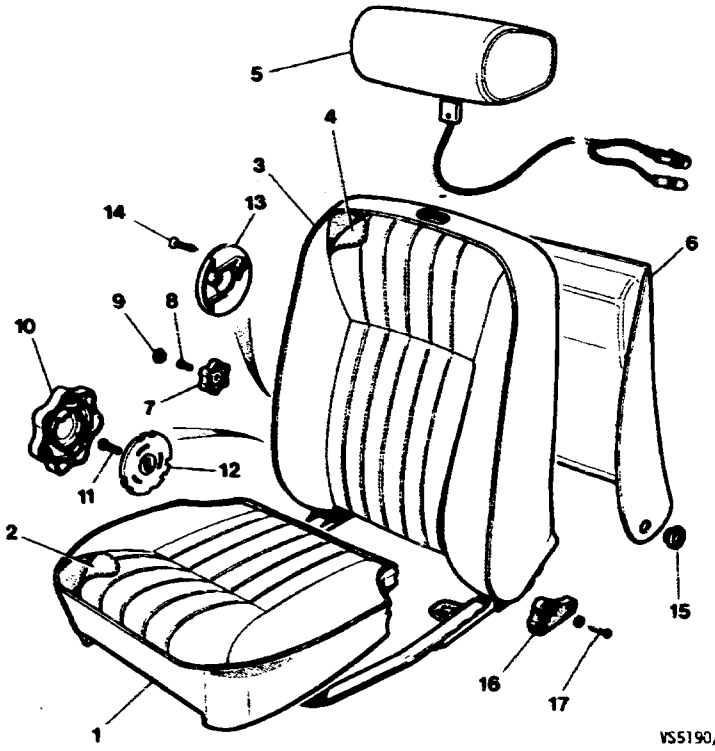

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BCC	4772 *C*	Seat squab-assembly-leather-inner piping-RH	1	(1)	Electric adjust;Sovereign
3	BDC	7432 *C*	Seat squab-assembly-leather-no inner piping-RH	1	(1)	Electric adjust;Sovereign
3	BDC	9160 *C*	Seat squab-assembly-leather-RH	1	(2)	Electric adjust;Sovereign
3	BEC	6162 *E*	Seat squab-assembly-leather-RH	1	(3)	Electric adjust;Sovereign
3	BEC	5790 *G*	Seat squab-assembly-leather-RH	1	(4)	Electric adjust;Sovereign
3	BEC	13392 *G*	Seat squab-assembly-leather-RH	1	(5)	Electric adjust;Sovereign
3	BEC	16034 *G*	Seat squab-assembly-leather-passive restraint-RH	1	(5)	Electric adjust;Sovereign
3	BEC	17630 *G*	Seat squab-assembly-all leather-RH	1	(6)	Electric adjust;Sovereign
3	BCC	4773 *C*	Seat squab-assembly-leather-inner piping-LH	1	(1)	Electric adjust;Sovereign
3	BDC	7433 *C*	Seat squab-assembly-leather-no inner piping-LH	1	(1)	Electric adjust;Sovereign
3	BDC	9161 *C*	Seat squab-assembly-leather-LH	1	(2)	Electric adjust;Sovereign
3	BEC	6163 *E*	Seat squab-assembly-leather-LH	1	(3)	Electric adjust;Sovereign
3	BEC	5791 *G*	Seat squab-assembly-leather-LH	1	(4)	Electric adjust;Sovereign
3	BEC	13393 *G*	Seat squab-assembly-leather-LH	1	(5)	Electric adjust;Sovereign
3	BEC	16035 *G*	Seat squab-assembly-leather-passive restraint-LH	1	(5)	Electric adjust;Sovereign
3	BEC	17631 *G*	Seat squab-assembly-all leather-LH	1	(6)	Electric adjust;Sovereign
4	BCC	3869 *A*	Squab cover-front-cloth-inner piping	2	(1)	Sovereign
4	BDC	7291 *A*	Squab cover-front-cloth-inner piping	2	(2)	Sovereign
4	BEC	4761 *B*	Squab cover-front-cloth	2	(3)	Sovereign
4	BEC	7448 *B*	Squab cover-front-cloth	2	(7)	Sovereign
4	BCC	3868 *C*	Squab cover-front-leather-inner piping	2	(1)	Sovereign
4	BDC	7290 *C*	Squab cover-front-leather-inner piping	2	(2)	Sovereign
4	BEC	4760 *E*	Squab cover-front-leather	2	(3)	Sovereign
4	BEC	4760 *G*	Squab cover-front-leather	2	(7)	Sovereign
4	BEC	17632 *G*	Squab cover-front-all leather	2	(6)	Sovereign
	JLM	1787	Mechanical fix fitting kit-front	A/R		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 629285
(4) From (V) 629286 To (V) 634175
(5) From (V) 634176
(6) From (V) 657336
(7) From (V) 629286

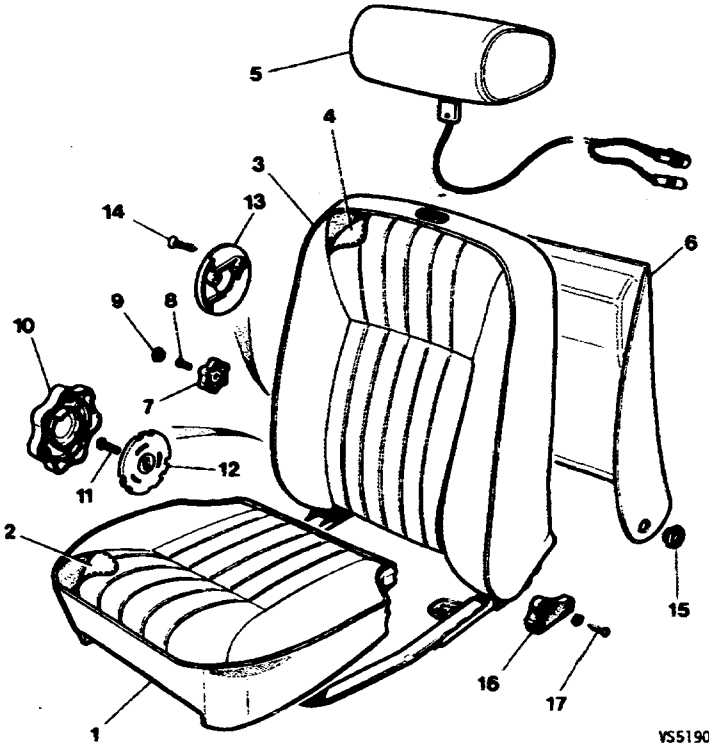


VS5190/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	BBC	6166*A*	Headrest-cloth-front	2	(1; 2)	Sovereign;escutcheon
5	BDC	5711*A*	Headrest-cloth-front	2	(1; 2)	Sovereign;no escutcheon
5	BDC	7420*A*	Headrest-cloth-front	2	(3)	Sovereign;no escutcheon
5	BEC	6131*B*	Headrest-cloth-front	2	(4; 3)	Sovereign;escutcheon
5	BDC	5710*C*	Headrest-leather-front	2	(1; 2)	Sovereign;no escutcheon
5	BBC	6165*C*	Headrest-leather-front	2	(1; 2)	Sovereign;escutcheon
5	BEC	6130*E*	Headrest-leather-front	2	(3)	Sovereign;escutcheon
5	BEC	6130*G*	Headrest-leather-front	2	(4)	Sovereign;escutcheon
6	BCC	5464*C*	Squab backcover-ABS moulding-RH	1	(1; 2; 3)	Sovereign
6	BEC	9244*D*	Squab backcover-ABS moulding-RH	1	(4)	Sovereign
6	BEC	17594*D*	Squab backcover-all leather-RH	1	(5)	Sovereign
6	BCC	5465*C*	Squab backcover-ABS moulding-LH	1	(1; 2; 3)	Sovereign
6	BEC	9245*D*	Squab backcover-ABS moulding-LH	1	(4)	Sovereign
6	BEC	17595*D*	Squab backcover-all leather-LH	1	(5)	Sovereign
	BBC	6175*C*	Headrest escutcheon/fixing bracket-cloth trim	1		Sovereign
	BBC	6174*C*	Headrest escutcheon/fixing bracket-leather trim	1		Sovereign
	DAC	706J	Self tapping screw-backcover to squab	2		
7	BAC	4520	Lumbar adjust hand wheel	1		
8	BD	43367 1	Taptite screw-lumbar adjustment handwheel	1		
9	BAC	2698	Plug-lumbar adjustment handwheel	1		
10	BBC	6521 LZ	Hand wheel-recline mechanism	1		
9	BAC	6758	Plug-recline mechanism hand wheel	1		
11	SE	106101 J	Screw-M6	1		
12	BBC	6810	Insert-recline mechanism hand wheel	1		


CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336

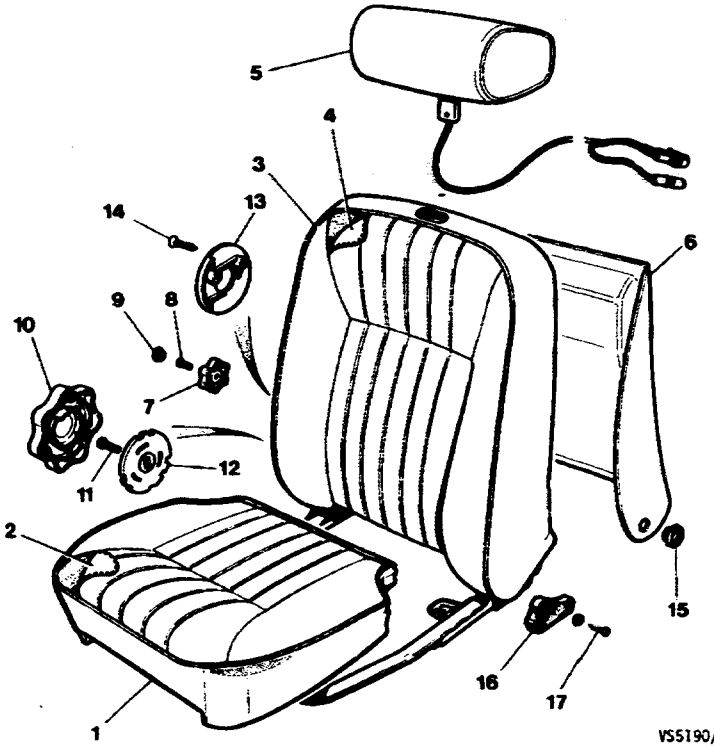

Illus	Part Number	Description	Quantity	Change Point	Remarks
13	BCC 5274 LZ	Handwheel escutcheon -lumbar support adjust-RH	1	(1)	Sovereign
13	BCC 5275 LZ	Handwheel escutcheon -lumbar support adjust-LH	1	(1)	Sovereign
13	BEC 10972	Handwheel escutcheon -lumbar support adjust-RH	NLA	(2)	Use BCC5274LZ.
13	BEC 10973	Handwheel escutcheon -lumbar support adjust-LH	NLA	(2)	Use BCC5275LZ.
14	AC 608051 J	Screw-escutcheon to squab	NLA	(1)	Use AC608074J.
14	AC 608074 J	Screw-escutcheon to squab	1	(2)	
15	BBC 4798	Backcover attachment cap	2		
	SE 106121 J	Recessed pan head screw	2		
16	BCC 6248	Squab cushion/frame cover-RH	1		
16	BCC 6249	Squab cushion/frame cover-LH	1		
17	SE 105104 J	Pan head screw-M5	2		
	BCC 2082	Seat pan bracket	4		
	BD 86338	Caged nut	4		
	WC 702101 J	Plain washer-no.10	4		
	AB 608061 J	Self tapping screw	4		
	AGU 1467	Carpet fastener	6		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

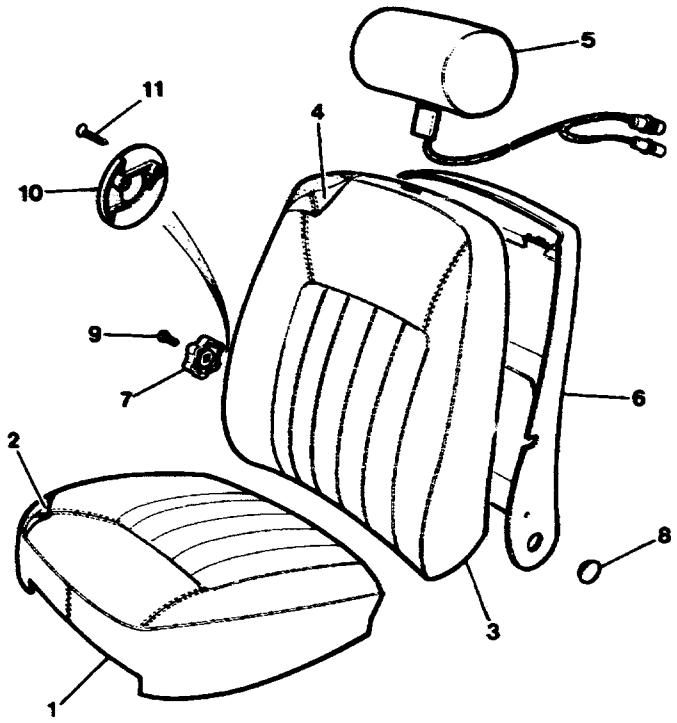


VS5148/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	8160 *A*	Seat cushion-assembly-cloth-inner piping-RH/LH	2	(1)	Daimler/VDP
1	BDC	8476 *A*	Seat cushion-assembly-cloth-inner piping-RH	1	(2)	Daimler/VDP
1	BEC	9146 *B*	Seat cushion-assembly-cloth-no inner piping-mitred corners-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
1	BEC	6204 *B*	Seat cushion-assembly-cloth-no inner piping-mitred corners-RH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
1	BEC	10656 *B*	Seat cushion-assembly-cloth-no inner piping-mitred corners-RH	1	(4)	Daimler/VDP
1	BDC	8477 *A*	Seat cushion-assembly-cloth-inner piping-LH	1	(2)	Daimler/VDP
1	BEC	9147 *B*	Seat cushion-assembly-cloth-no inner piping-mitred corners-LH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
1	BEC	6205 *B*	Seat cushion-assembly-cloth-no inner piping-mitred corners-LH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
1	BEC	10657 *B*	Seat cushion-assembly-cloth-no inner piping-mitred corners-LH	1	(4)	Daimler/VDP
1	BCC	4884 *C*	Seat cushion-assembly-leather-inner piping-RH/LH	2	(1)	Daimler/VDP
1	BDC	8464 *C*	Seat cushion-assembly-leather-inner piping-RH	1	(2)	Daimler/VDP
1	BDC	9566 *D*	Seat cushion-assembly-leather-inner piping-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
1	BEC	9148 *E*	Seat cushion-assembly-leather-no inner piping-mitred corners-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
1	BEC	6206 *E*	Seat cushion-assembly-leather-no inner piping-mitred corners-RH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
1	BEC	10654 *G*	Seat cushion-assembly-leather-no inner piping-mitred corners-RH	1	(4)	Daimler/VDP
1	BEC	16566 *H*	Seat cushion-assembly-autolux leather-no inner piping-mitred corners-RH	1	(5)	Daimler/VDP

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 580227
(3) From (V) 580228 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336

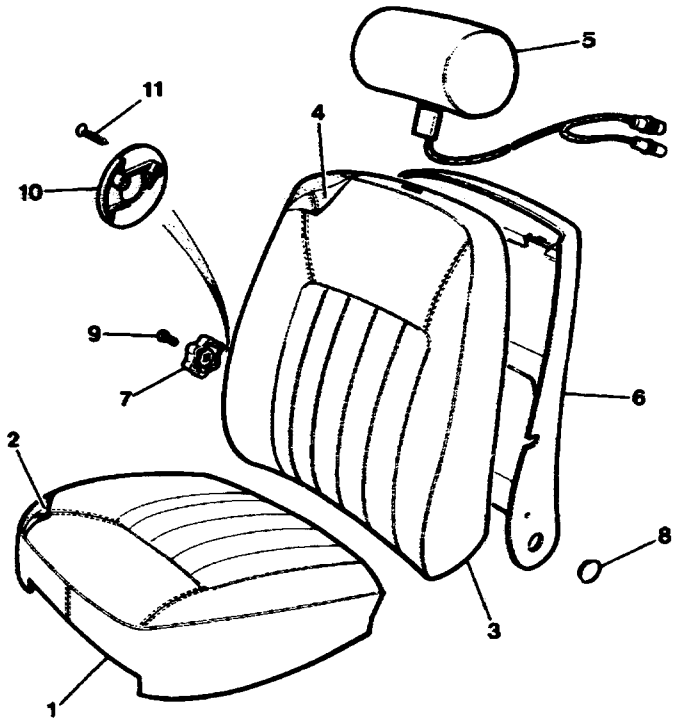


VS5148/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BDC	8465 *C*	Seat cushion-assembly-leather-inner piping-LH	1	(1)	Daimler/VDP
1	BDC	9567 *D*	Seat cushion-assembly-leather-inner piping-LH	1	(2)	Daimler/VDP;except fully mechanical-fix cover
1	BEC	9149 *E*	Seat cushion-assembly-leather-no inner piping-mitred corners-LH	1	(2)	Daimler/VDP;except fully mechanical-fix cover
1	BEC	6207 *E*	Seat cushion-assembly-leather-no inner piping-mitred corners-LH	1	(2)	Fully mechanical-fix cover;Daimler/VDP
1	BEC	10655 *G*	Seat cushion-assembly-leather-no inner piping-mitred corners-LH	1	(3)	Daimler/VDP
1	BEC	16567 *H*	Seat cushion-assembly-autolux leather-no inner piping-mitred corners-LH	1	(4)	Daimler/VDP
2	BCC	8161 *A*	Cushion cover-cloth-inner piping-RH/LH	2	(5)	Daimler/VDP
2	BDC	8470 *B*	Cushion cover-cloth-inner piping-RH	1	(1)	Daimler/VDP
2	BDC	8184 *A*	Cushion cover-cloth-inner piping-RH	1	(2)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	9166 *B*	Cushion cover-cloth-no inner piping-mitred corners-RH	1	(2)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	4758 *B*	Cushion cover-cloth-no inner piping-mitred corners-RH	1	(2; 3)	Fully mechanical-fix cover;Daimler/VDP
2	BDC	8471 *B*	Cushion cover-cloth-inner piping-LH	1	(1)	Daimler/VDP
2	BDC	8185 *A*	Cushion cover-cloth-inner piping-LH	1	(2)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	9167 *B*	Cushion cover-cloth-no inner piping-mitred corners-LH	1	(2)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	4759 *B*	Cushion cover-cloth-no inner piping-mitred corners-LH	1	(2; 3)	Fully mechanical-fix cover;Daimler/VDP

CHANGE POINTS:

(1) From (V) 556851 To (V) 580227
(2) From (V) 580228 To (V) 629285
(3) From (V) 629286
(4) From (V) 657336
(5) To (V) 556850

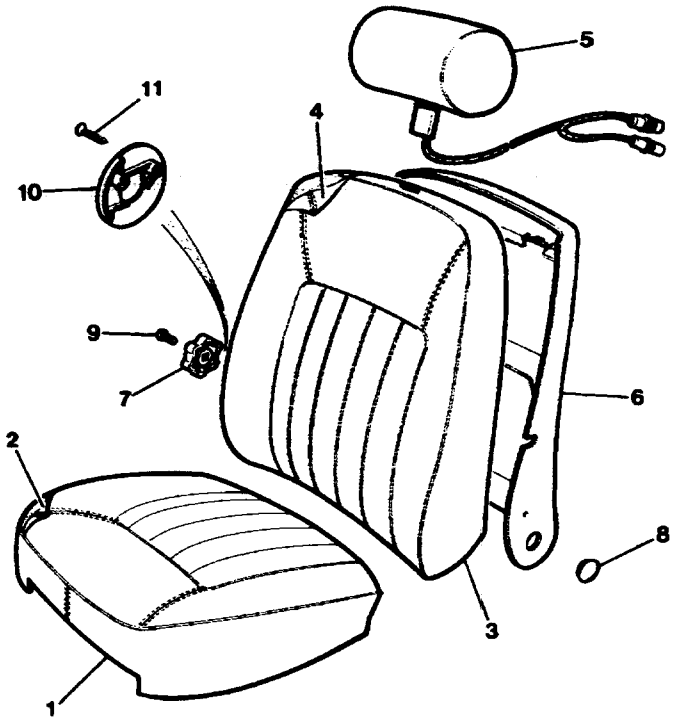


VS5148/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
2	BCC	4900*C*	Cushion cover-leather-inner piping-RH/LH	2	(1)	Daimler/VDP
2	BDC	8432*D*	Cushion cover-leather-inner piping-RH	1	(2)	Daimler/VDP
2	BDC	4380*C*	Cushion cover-leather-inner piping-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	9164*E*	Cushion cover-leather-no inner piping-mitred corners-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	4756*E*	Cushion cover-leather-no inner piping-mitred corners-RH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
2	BEC	4756*G*	Cushion cover-leather-no inner piping-mitred corners-RH	1	(4)	Daimler/VDP
2	BEC	6916*H*	Cushion cover-autolux leather-no inner piping-mitred corners-RH	1	(5)	Daimler/VDP
2	BDC	8433*D*	Cushion cover-leather-inner piping-LH	1	(2)	Daimler/VDP
2	BDC	4381*C*	Cushion cover-leather-inner piping-LH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	9165*E*	Cushion cover-leather-no inner piping-mitred corners-LH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
2	BEC	4757*E*	Cushion cover-leather-no inner piping-mitred corners-LH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
2	BEC	4757*G*	Cushion cover-leather-no inner piping-mitred corners-LH	1	(4)	Daimler/VDP
2	BEC	6917*H*	Cushion cover-autolux leather-no inner piping-mitred corners-LH	1	(5)	Daimler/VDP
3	BCC	7760*A*	Seat squab-assembly-cloth-RH	1	(6; 7)	Daimler/VDP
3	BEC	9112*B*	Seat squab-assembly-cloth-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
3	BEC	6410*B*	Seat squab-assembly-cloth-RH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
3	BEC	13396*B*	Seat squab-assembly-cloth-RH	1	(4)	Daimler/VDP

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 580227
(3) From (V) 580228 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336
(6) To (V) 528523
(7) From (V) 528524 To (V) 580227

SEAT-FRONT-DAIMLER/VDP

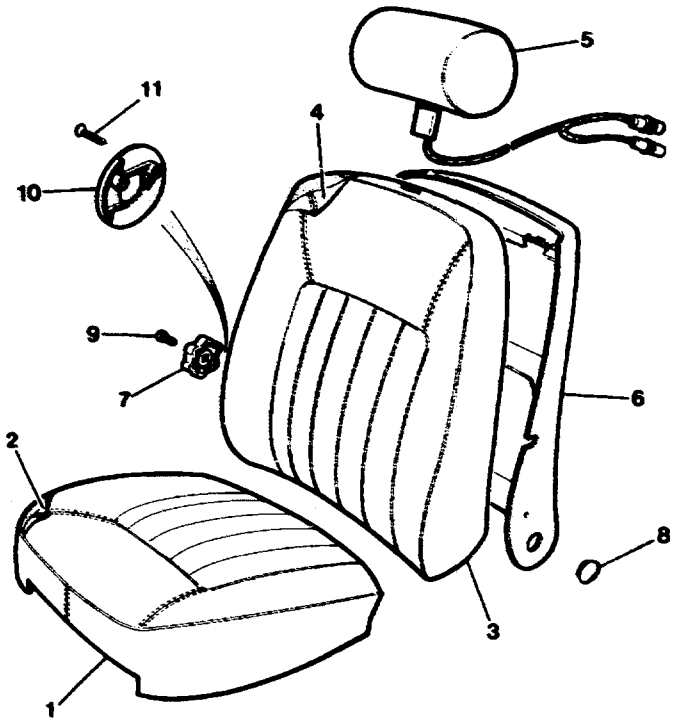


VS5148/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BCC	7761 *A*	Seat squab-assembly-cloth-LH	1	(1; 2)	Daimler/VDP
3	BEC	9113 *B*	Seat squab-assembly-cloth-LH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
3	BEC	6411 *B*	Seat squab-assembly-cloth-LH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
3	BEC	13397 *B*	Seat squab-assembly-cloth-LH	1	(4)	Daimler/VDP
3	BCC	4116 *C*	Seat squab-assembly-leather-RH	1	(1)	Daimler/VDP
3	BCC	4760 *C*	Seat squab-assembly-leather-RH	1	(2)	Daimler/VDP
3	BEC	9110 *E*	Seat squab-assembly-leather-RH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
3	BEC	6408 *E*	Seat squab-assembly-leather-RH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
3	BEC	13390 *G*	Seat squab-assembly-leather-RH	1	(4)	Daimler/VDP;except passive belt
3	BEC	16032 *G*	Seat squab-assembly-leather-RH	1	(4)	Daimler/VDP;passive belt
3	BEC	18860 *G*	Seat squab-assembly-leather-electric adjust-RH	1	(5)	USA;Daimler/VDP;passive belt
3	BEC	18866 *G*	Seat squab-assembly-leather-electric adjust-RH	1	(5)	Daimler/VDP;passive belt;except USA
3	BEC	16622 *H*	Seat squab-assembly-autolux leather-RH	1	(5)	Daimler/VDP
3	BCC	4117 *C*	Seat squab-assembly-leather-LH	1	(1)	Daimler/VDP
3	BCC	4761 *C*	Seat squab-assembly-leather-LH	1	(2)	Daimler/VDP
3	BEC	9111 *E*	Seat squab-assembly-leather-LH	1	(3)	Daimler/VDP;except fully mechanical-fix cover
3	BEC	6409 *E*	Seat squab-assembly-leather-LH	1	(3)	Fully mechanical-fix cover;Daimler/VDP
3	BEC	13391 *G*	Seat squab-assembly-leather-LH	1	(4)	Daimler/VDP;except passive belt
3	BEC	16033 *G*	Seat squab-assembly-leather-LH	1	(4)	Daimler/VDP;passive belt
3	BEC	18861 *G*	Seat squab-assembly-leather-electric adjust-LH	1	(5)	USA;Daimler/VDP;passive belt
3	BEC	18867 *G*	Seat squab-assembly-leather-electric adjust-LH	1	(5)	Daimler/VDP;passive belt;except USA
3	BEC	16623 *H*	Seat squab-assembly-autolux leather-LH	1	(5)	Daimler/VDP

CHANGE POINTS:

(1) To (V) 528523
(2) From (V) 528524 To (V) 580227
(3) From (V) 580228 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336

SEAT-FRONT-DAIMLER/VDP

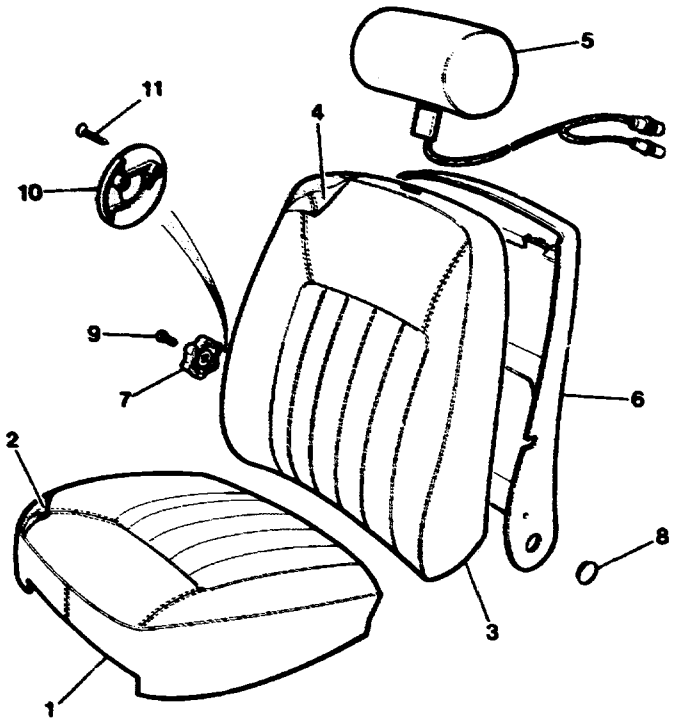


VS5148/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
4	BCC 8167 *A*	Squab cover-cloth	2	(1; 2)	Daimler/VDP
4	BEC 9159 *B*	Squab cover-cloth	2	(3)	Daimler/VDP;except fully mechanical-fix cover
4	BEC 4755 *B*	Squab cover-cloth	2	(3; 4)	Fully mechanical-fix cover;Daimler/VDP
4	BCC 2946 *C*	Squab cover-leather	2	(1; 2)	Daimler/VDP
4	BEC 9158 *E*	Squab cover-leather	2	(3)	Daimler/VDP;except fully mechanical-fix cover
4	BEC 4754 *E*	Squab cover-leather	2	(3)	Fully mechanical-fix cover;Daimler/VDP
4	BEC 4754 *G*	Squab cover-leather	2	(4)	Daimler/VDP
4	BEC 6876 *H*	Squab cover-autolux leather	2	(5)	Daimler/VDP
5	BCC 8166 *A*	Headrest-cloth-front	2	(1; 2)	Daimler/VDP
5	BEC 6131 *B*	Headrest-cloth-front	2	(3, 4)	Daimler/VDP
5	BBC 6165 *C*	Headrest-leather-front	2	(1)	Daimler/VDP;escutcheon
5	BDC 5710 *C*	Headrest-leather-front	2	(1)	Daimler/VDP;no escutcheon
5	BDC 7419 *C*	Headrest-leather-front	2	(2)	Daimler/VDP
5	BEC 6800 *E*	Headrest-leather-front	2	(3)	Daimler/VDP
5	BEC 6800 *G*	Headrest-leather-front	2	(4)	Daimler/VDP
5	BEC 6896 *H*	Headrest-all leather-front	2	(5)	Daimler/VDP
6	BCC 5462 *C*	Squab backcover-RH	1	(6)	Daimler/VDP
6	BEC 18500 *J*	Squab backcover-all leather-RH	1	(5)	Daimler/VDP
6	BEC 6906 AEE	Squab backcover-autolux leather-RH-Doeskin	1	(5)	Daimler/VDP
6	BEC 6906 AEM	Squab backcover-autolux leather-RH-Magnolia	1	(5)	Daimler/VDP
6	BEC 6906 LDY	Squab backcover-autolux leather-RH-Savile grey	1	(5)	Daimler/VDP

CHANGE POINTS:


(1) To (V) 528523
(2) From (V) 528524 To (V) 580227
(3) From (V) 580228 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336
(6) To (V) 657335

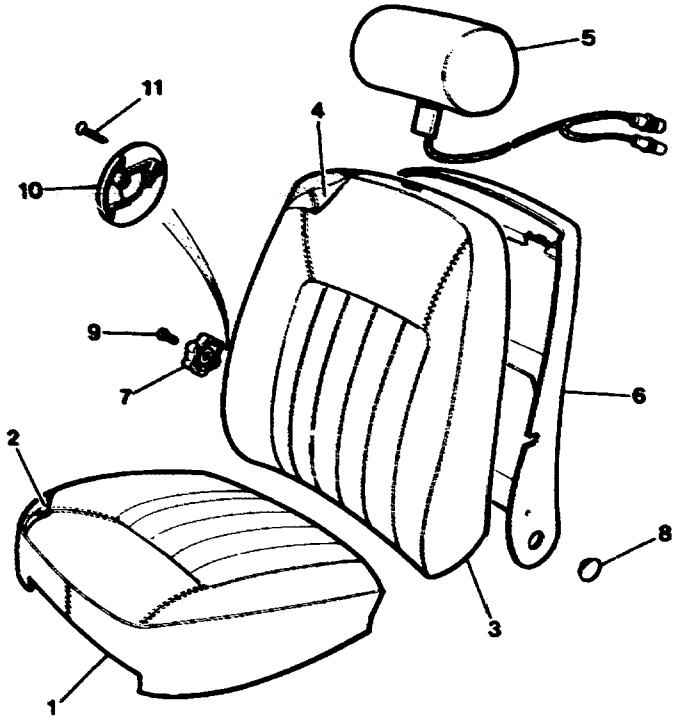

VS5148/A


Illus	Part Number		Description	Quantity	Change Point	Remarks
6	BCC	5463 *C*	Squab backcover-LH	1	(1)	Daimler/VDP
6	BEC	18501 *J*	Squab backcover-all leather-LH	1	(2)	Daimler/VDP
6	BEC	6907 AEE	Squab backcover-autolux leather-LH-Doeskin	1	(2)	Daimler/VDP
6	BEC	6907 AEM	Squab backcover-autolux leather-LH-Magnolia	1	(2)	Daimler/VDP
6	BEC	6907 LDY	Squab backcover-autolux leather-LH-Savile grey	1	(2)	Daimler/VDP
	BBC	6174 *C*	Headrest escutcheon/fixing bracket-leather trim	2		Daimler/VDP
	BBC	6175 *C*	Headrest escutcheon/fixing bracket-cloth trim	2		Daimler/VDP
7	BAC	4520	Lumbar adjust hand wheel	1		
	BAC	2698	Plug-lumbar adjustment handwheel	1		
8	BBC	4798	Backcover attachment cap	1		
	BAC	6758	Plug-recline mechanism hand wheel	2		
9	BD	43367 1	Taptite screw-lumbar adjustment handwheel	1		
	BBC	4761	Backcover spacer	1		
	BCC	6248	Squab cushion/frame cover-RH	1		
	BCC	6249	Squab cushion/frame cover-LH	1		
	AD	608052 J	Screw	NLA		
	AB	608122	Screw	2		
	SE	106121 J	Recessed pan head screw	2		
	DAC	706 J	Self tapping screw-backcover to squab	2		
	AC	608011 J	Spring nut	NLA		
	AC	606064 J	Screw	4		
	BBC	9137	Headrest retaining clip	1		
10	BCC	5274 LZ	Handwheel escutcheon -lumbar support adjust-RH	1		Daimler/VDP
10	BCC	5275 LZ	Handwheel escutcheon -lumbar support adjust-LH	1		Daimler/VDP
11	SE	105104 J	Pan head screw-M5	2		

CHANGE POINTS:
(1) To (V) 657335
(2) From (V) 657336

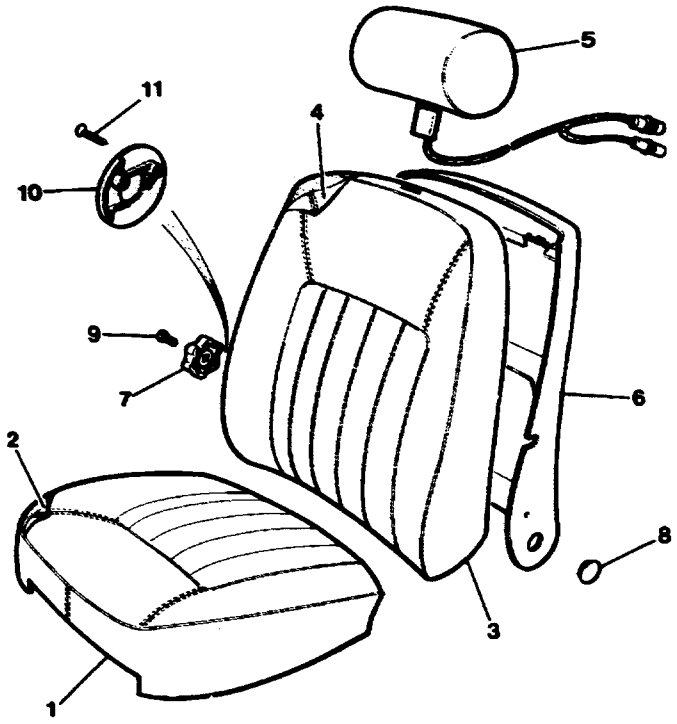

VS5148/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	6914 RNR	Seat cushion-assembly-RH	1		
1	BEC	6915 RNR	Seat cushion-assembly-LH	1		
2	BEC	6916 RNR	Cushion cover-RH	1		
2	BEC	6917 RNR	Cushion cover-LH	1		
3	BEC	13414 RNR	Seat squab-assembly-RH	1		
3	BEC	13415 RNR	Seat squab-assembly-LH	1		
4	BEC	6876 RNR	Squab cover	2		
5	BEC	6896 RNR	Headrest	2		
6	BEC	6906 NDR	Squab backcover-RH	1		
6	BEC	6907 NDR	Squab backcover-LH	1		
7	BAC	4520	Lumbar adjust hand wheel	2		
	BAC	2698	Plug-lumbar adjustment handwheel	2		
8	BBC	4798	Backcover attachment cap	2		
	BAC	6758	Plug-recline mechanism hand wheel	2		
9	BD	43367 1	Taptite screw-lumbar adjustment handwheel	2		
	BBC	4761	Backcover spacer	2		
10	BCC	5274 LZ	Handwheel escutcheon -lumbar support adjust-RH	1		Majestic
10	BCC	5275 LZ	Handwheel escutcheon -lumbar support adjust-LH	1		
11	SE	105104 J	Pan head screw-M5	2		
	AGU	1467	Carpet fastener	6		

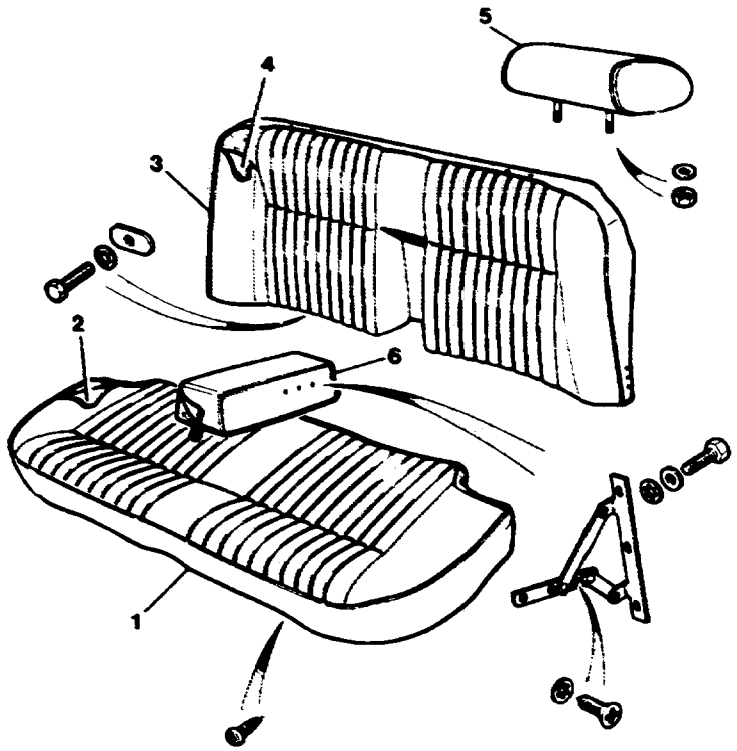


Illus	Part Number		Description	Quantity	Change Unit	Remarks
1	BBC	7913 *A*	Seat cushion-assembly-cloth	1	(1)	XJ6;except fully mechanical-fix cover
1	BCC	9211 *A*	Seat cushion-assembly-cloth	1	(1)	Fully mechanical-fix cover;XJ6
1	BEC	6240 *A*	Seat cushion-assembly-cloth	1	(2)	XJ6
1	BEC	9465 *A*	Seat cushion-assembly-cloth	1	(3)	XJ6
1	BBC	7912 *C*	Seat cushion-assembly-leather	1	(1)	XJ6;except fully mechanical-fix cover
1	BCC	9210 *C*	Seat cushion-assembly-leather	1	(1)	Fully mechanical-fix cover;XJ6
1	BEC	6241 *E*	Seat cushion-assembly-leather	1	(2)	XJ6
1	BEC	6241 *G*	Seat cushion-assembly-leather	1	(3)	XJ6
1	BEC	17622 *G*	Seat cushion-assembly-all leather	1	(4)	XJ6
2	BBC	7916 *A*	Cushion cover-cloth-rear	1	(1)	XJ6;except fully mechanical-fix cover
2	BCC	9192 *A*	Cushion cover-cloth-rear	1	(1)	Fully mechanical-fix cover;XJ6
2	BEC	4780 *A*	Cushion cover-cloth-rear	1	(2)	XJ6
2	BEC	7460 *A*	Cushion cover-cloth-rear	1	(3)	XJ6
2	BBC	7915 *C*	Cushion cover-leather-rear	1	(1)	XJ6;except fully mechanical-fix cover
2	BCC	9191 *C*	Cushion cover-leather-rear	1	(1)	Fully mechanical-fix cover;XJ6
2	BEC	4781 *E*	Cushion cover-leather-rear	1	(2)	XJ6
2	BEC	4781 *G*	Cushion cover-leather-rear	1	(3)	XJ6
2	BEC	17623 *G*	Cushion cover-all leather-rear	1	(4)	XJ6
3	BBC	7885 *A*	Seat squab-assembly-cloth-rear	1	(1)	XJ6;except fully mechanical-fix cover
3	BCC	8343 *A*	Seat squab-assembly-cloth-rear	1	(1)	Fully mechanical-fix cover;XJ6
3	BEC	6420 *A*	Seat squab-assembly-cloth-rear	1	(2)	XJ6
3	BEC	9464 *A*	Seat squab-assembly-cloth-rear	1	(3)	XJ6

CHANGE POINTS:

(1) To (V) 575488
(2) From (V) 575489 To (V) 629285
(3) From (V) 629286
(4) From (V) 657336


SEAT-REAR-XJ6

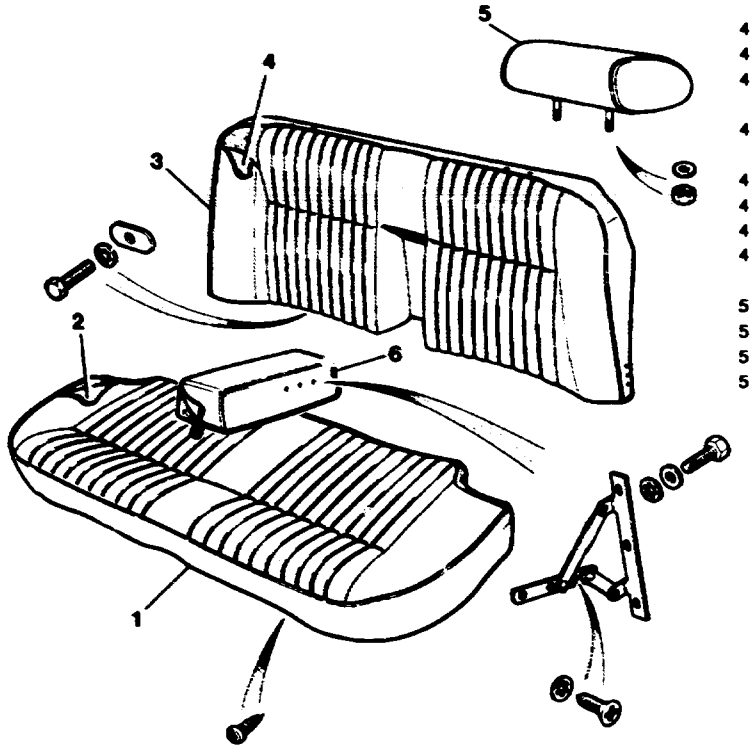

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	7884 *C*	Seat squab-assembly-leather-rear	1	(1)	XJ6;except fully mechanical-fix cover
3	BCC	8342 *C*	Seat squab-assembly-leather-rear	1	(1)	Fully mechanical-fix cover;XJ6
3	BEC	6421 *E*	Seat squab-assembly-leather-rear	1	(2)	XJ6
3	BEC	6421 *G*	Seat squab-assembly-leather-rear	1	(3)	XJ6
3	BEC	17656 *G*	Seat squab-assembly-all leather-rear	1	(4)	XJ6
4	BBC	7891 *A*	Squab cover-cloth-rear	1	(1)	XJ6;except fully mechanical-fix cover
4	BCC	8349 *A*	Squab cover-cloth-rear	1	(1)	Fully mechanical-fix cover;XJ6
4	BEC	4778 *A*	Squab cover-cloth-rear	1	(2)	XJ6
4	BEC	7454 *A*	Squab cover-cloth-rear	1	(3)	XJ6
4	BBC	7890 *C*	Squab cover-leather-rear	1	(1)	XJ6;except fully mechanical-fix cover
4	BCC	8348 *C*	Squab cover-leather-rear	1	(1)	Fully mechanical-fix cover;XJ6
4	BEC	4779 *E*	Squab cover-leather-rear	1	(2)	XJ6
4	BEC	4779 *G*	Squab cover-leather-rear	1	(3)	XJ6
4	BEC	17657 *G*	Squab cover-all leather-rear	1	(4)	XJ6
5	BBC	9334 *A*	Headrest-cloth-rear	2	(5)	XJ6
5	BCC	6245 *A*	Headrest-cloth-rear	2	(6)	XJ6
5	BDC	8823 *B*	Headrest-cloth-rear	2	(7)	XJ6
5	BEC	6209 *B*	Headrest-cloth-rear	2	(8; 3)	XJ6

CHANGE POINTS:


(1) To (V) 575488
(2) From (V) 575489 To (V) 629285
(3) From (V) 629286
(4) From (V) 657336
(5) To (V) 556850
(6) From (V) 556851 To (V) 575488
(7) From (V) 575489 To (V) 594575
(8) From (V) 594576 To (V) 629285

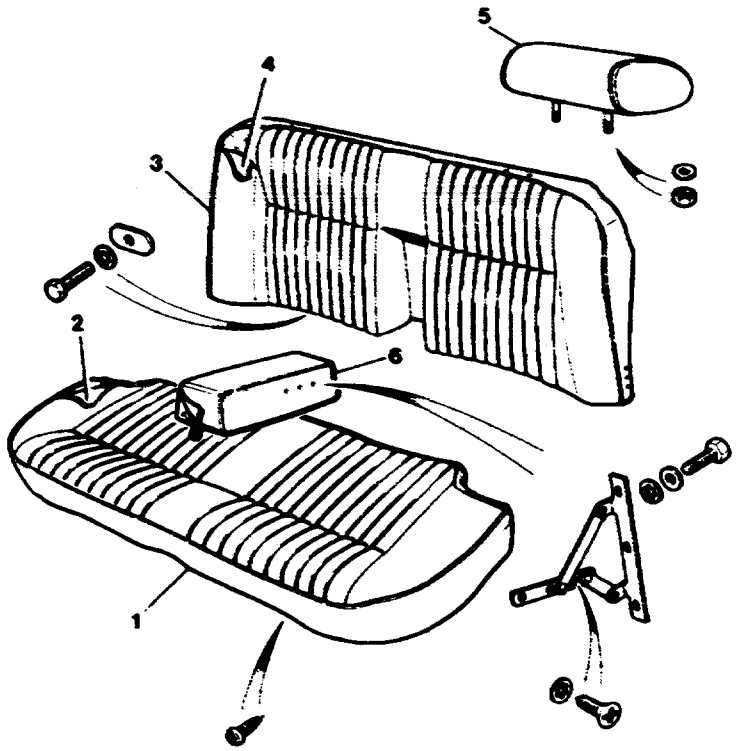

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	BBC	9333 "C"	Headrest-leather-rear	2	(1)	XJ6
5	BCC	6244 "C"	Headrest-leather-rear	2	(2)	XJ6
5	BDC	8824 "D"	Headrest-leather-rear	2	(3)	XJ6
5	BEC	6208 "E"	Headrest-leather-rear	2	(4)	XJ6
5	BEC	6208 "G"	Headrest-leather-rear	2	(5)	XJ6
5	BEC	6804 "G"	Headrest-all leather-rear	2	(6)	XJ6
6	BBC	7894 "A"	Door armrest-cloth-rear	1	(1; 2)	XJ6
6	BCC	8351 "A"	Door armrest-cloth-rear	1	(3)	XJ6
6	BEC	1818 "B"	Door armrest-cloth-rear	1	(4)	XJ6
6	BEC	9486 "B"	Door armrest-cloth-rear	1	(5)	XJ6
6	BBC	7893 "C"	Door armrest-leather-rear	1	(1; 2)	XJ6
6	BCC	8350 "C"	Door armrest-leather-rear	1	(3)	XJ6
6	BCC	8350 "E"	Door armrest-leather-rear	1	(4)	XJ6
6	BCC	8350 "G"	Door armrest-leather-rear	1	(5)	XJ6

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 594575
(4) From (V) 594576 To (V) 629285
(5) From (V) 629286
(6) From (V) 657336

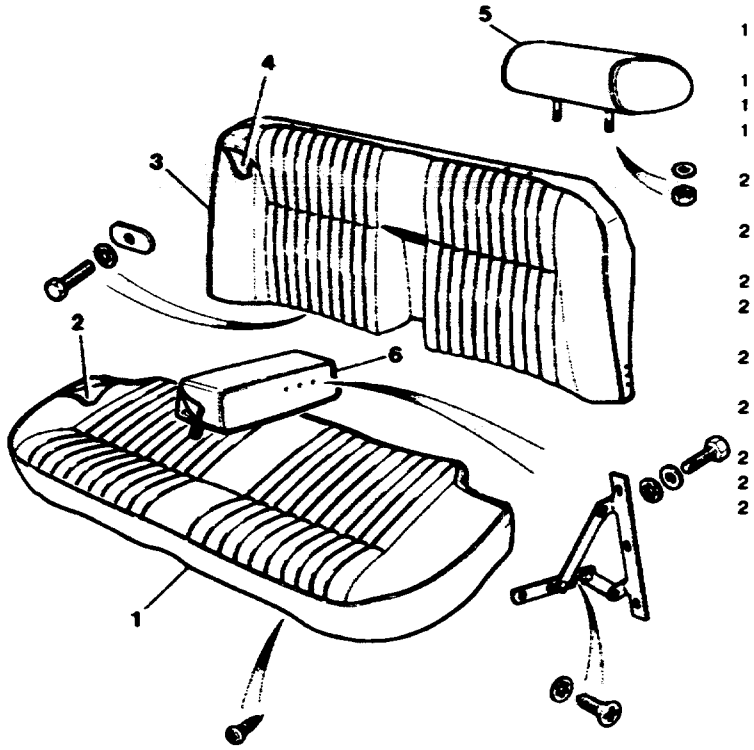

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	7913 *A*	Seat cushion-assembly-cloth	1	(1)	Sovereign;except fully mechanical-fix cover
1	BCC	9211 *A*	Seat cushion-assembly-cloth	1	(1)	Fully mechanical-fix cover;Sovereign
1	BEC	6240 *A*	Seat cushion-assembly-cloth	1	(2)	Sovereign
1	BEC	9465 *A*	Seat cushion-assembly-cloth	1	(3)	Sovereign
1	BBC	7912 *C*	Seat cushion-assembly-leather	1	(1)	Sovereign;except fully mechanical-fix cover
1	BCC	9210 *C*	Seat cushion-assembly-leather	1	(1)	Fully mechanical-fix cover;Sovereign
1	BEC	6241 *E*	Seat cushion-assembly-leather	1	(2)	Sovereign
1	BEC	6241 *G*	Seat cushion-assembly-leather	1	(3)	Sovereign
1	BEC	17622 *G*	Seat cushion-assembly-all leather	1	(4)	Sovereign
2	BBC	7916 *A*	Cushion cover-cloth-rear	1	(1)	Sovereign;except fully mechanical-fix cover
2	BCC	9192 *A*	Cushion cover-cloth-rear	1	(1)	Fully mechanical-fix cover;Sovereign
2	BEC	4780 *A*	Cushion cover-cloth-rear	1	(2)	Sovereign
2	BEC	7460 *A*	Cushion cover-cloth-rear	1	(3)	Sovereign
2	BBC	7915 *C*	Cushion cover-leather-rear	1	(1)	Sovereign;except fully mechanical-fix cover
2	BCC	9191 *C*	Cushion cover-leather-rear	1	(1)	Fully mechanical-fix cover;Sovereign
2	BEC	4781 *E*	Cushion cover-leather-rear	1	(2)	Sovereign
2	BEC	4781 *G*	Cushion cover-leather-rear	1	(3)	Sovereign
2	BEC	17623 *G*	Cushion cover-all leather-rear	1	(4)	Sovereign

CHANGE POINTS:


(1) To (V) 575488

(2) From (V) 575489 To (V) 629285

(3) From (V) 629286

(4) From (V) 657336

SEAT-REAR-SOVEREIGN

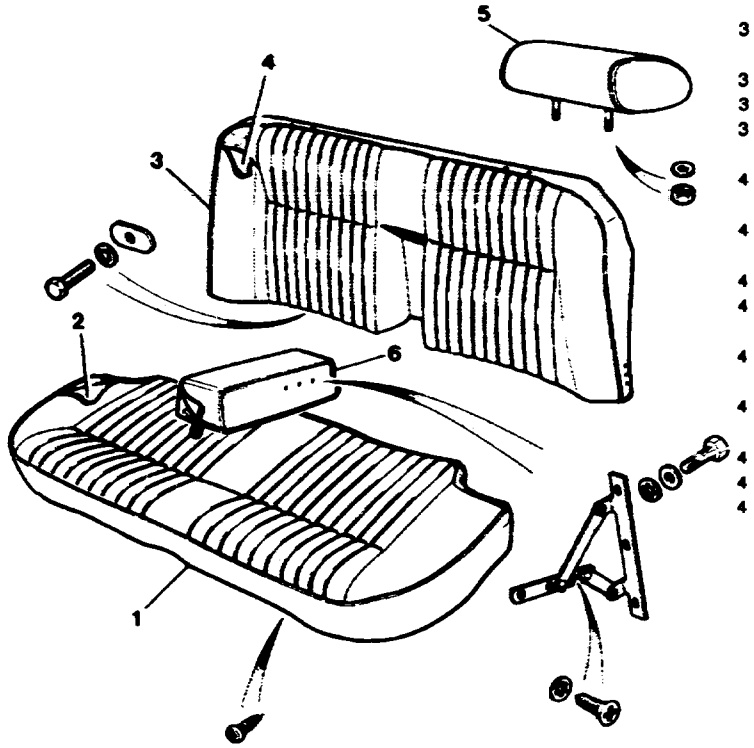


Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	7885 *A*	Seat squab-assembly-cloth-rear	1	(1)	Sovereign;except fully mechanical-fix cover
3	BCC	8343 *A*	Seat squab-assembly-cloth-rear	1	(1)	Fully mechanical-fix cover;Sovereign
3	BEC	6420 *A*	Seat squab-assembly-cloth-rear	1	(2)	Sovereign
3	BEC	9464 *A*	Seat squab-assembly-cloth-rear	1	(3)	Sovereign
3	BBC	7884 *C*	Seat squab-assembly-leather-rear	1	(1)	Sovereign;except fully mechanical-fix cover
3	BCC	8342 *C*	Seat squab-assembly-leather-rear	1	(1)	Fully mechanical-fix cover;Sovereign
3	BEC	6421 *E*	Seat squab-assembly-leather-rear	1	(2)	Sovereign
3	BEC	6421 *G*	Seat squab-assembly-leather-rear	1	(3)	Sovereign
3	BEC	17656 *G*	Seat squab-assembly-all leather-rear	1	(4)	Sovereign
4	BBC	7891 *A*	Squab cover-cloth-rear	1	(1)	Sovereign;except fully mechanical-fix cover
4	BCC	8349 *A*	Squab cover-cloth-rear	1	(1)	Fully mechanical-fix cover;Sovereign
4	BEC	4778 *A*	Squab cover-cloth-rear	1	(2)	Sovereign
4	BEC	7454 *A*	Squab cover-cloth-rear	1	(3)	Sovereign
4	BBC	7890 *C*	Squab cover-leather-rear	1	(1)	Sovereign;except fully mechanical-fix cover
4	BCC	8348 *C*	Squab cover-leather-rear	1	(1)	Fully mechanical-fix cover;Sovereign
4	BEC	4779 *E*	Squab cover-leather-rear	1	(2)	Sovereign
4	BEC	4779 *G*	Squab cover-leather-rear	1	(3)	Sovereign
4	BEC	17657 *G*	Squab cover-all leather-rear	1	(4)	Sovereign

CHANGE POINTS:

(1) To (V) 575488
(2) From (V) 575489 To (V) 629285
(3) From (V) 629286
(4) From (V) 657336


SEAT-REAR-SOVEREIGN

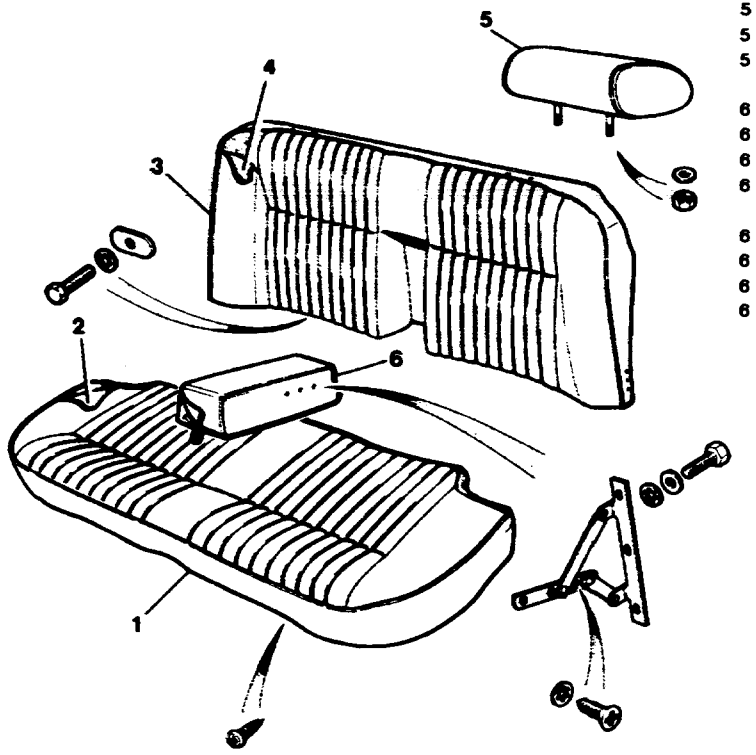

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	BBC	9334 *A*	Headrest-cloth-rear	2	(1)	Sovereign
5	BCC	6245 *A*	Headrest-cloth-rear	2	(2)	Sovereign
5	BDC	8823 *B*	Headrest-cloth-rear	2	(3)	Sovereign
5	BEC	6209 *B*	Headrest-cloth-rear	2	(4; 5)	Sovereign
5	BBC	9333 *C*	Headrest-leather-rear	2	(1)	Sovereign
5	BCC	6244 *C*	Headrest-leather-rear	2	(2)	Sovereign
5	BDC	8824 *D*	Headrest-leather-rear	2	(3)	Sovereign
5	BEC	6208 *E*	Headrest-leather-rear	2	(4)	Sovereign
5	BEC	6208 *G*	Headrest-leather-rear	2	(5)	Sovereign
5	BEC	6804 *G*	Headrest-all leather-rear	2	(6)	Sovereign
6	BBC	7894 *A*	Door armrest-cloth-rear	1	(1; 2)	Sovereign
6	BCC	8351 *A*	Door armrest-cloth-rear	1	(3)	Sovereign
6	BEC	1818 *B*	Door armrest-cloth-rear	1	(4)	Sovereign
6	BEC	9466 *B*	Door armrest-cloth-rear	1	(5)	Sovereign
6	BBC	7893 *C*	Door armrest-leather-rear	1	(1; 2)	Sovereign
6	BCC	8350 *C*	Door armrest-leather-rear	1	(3)	Sovereign
6	BCC	8350 *E*	Door armrest-leather-rear	1	(4)	Sovereign
6	BCC	8350 *G*	Door armrest-leather-rear	1	(5)	Sovereign

CHANGE POINTS:


(1) To (V) 556850
(2) From (V) 556851 To (V) 575488
(3) From (V) 575489 To (V) 594575
(4) From (V) 594576 To (V) 629285
(5) From (V) 629286
(6) From (V) 657336

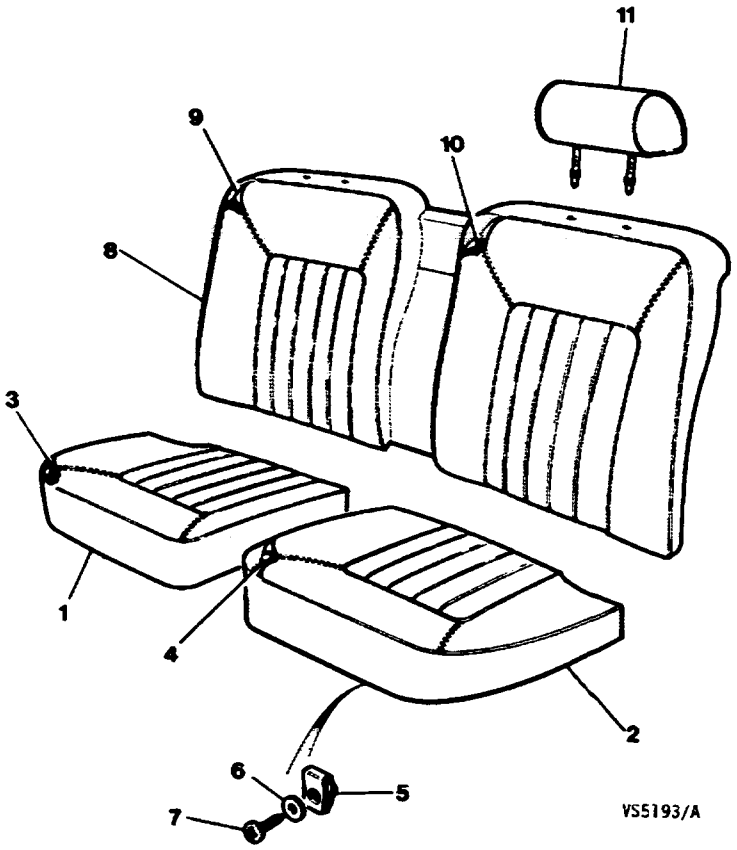

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	1676 *B*	Seat cushion-assembly-cloth-RH rear	1	(1)	Daimler/VDP
1	BEC	9156 *B*	Seat cushion-assembly-cloth-RH rear	1	(2)	Daimler/VDP
1	BEC	6784 *B*	Seat cushion-assembly-cloth-RH rear	1	(3; 4)	Daimler/VDP
2	BEC	1677 *B*	Seat cushion-assembly-cloth-LH rear	1	(1)	Daimler/VDP
2	BEC	9157 *B*	Seat cushion-assembly-cloth-LH rear	1	(2)	Daimler/VDP
2	BEC	6785 *B*	Seat cushion-assembly-cloth-LH rear	1	(3; 4)	Daimler/VDP
1	BBC	7808 *C*	Seat cushion-assembly-leather-RH rear	1	(1)	Daimler/VDP
1	BEC	9154 *E*	Seat cushion-assembly-leather-RH rear	1	(2)	Daimler/VDP
1	BEC	6782 *E*	Seat cushion-assembly-leather-RH rear	1	(3)	Daimler/VDP
1	BEC	6782 *G*	Seat cushion-assembly-leather-RH rear	1	(4)	Daimler/VDP
1	BEC	7008 *H*	Seat cushion-assembly-autolux leather-RH rear	1	(5)	Daimler/VDP
2	BBC	7807 *C*	Seat cushion-assembly-leather-LH rear	1	(1)	Daimler/VDP
2	BEC	9155 *E*	Seat cushion-assembly-leather-LH rear	1	(2)	Daimler/VDP
2	BEC	6783 *E*	Seat cushion-assembly-leather-LH rear	1	(3)	Daimler/VDP
2	BEC	6783 *G*	Seat cushion-assembly-leather-LH rear	1	(4)	Daimler/VDP
2	BEC	7009 *H*	Seat cushion-assembly-autolux leather-LH rear	1	(5)	Daimler/VDP
3	BDC	8288 *B*	Cushion cover-cloth-RH rear	1	(1)	Daimler/VDP
3	BEC	9168 *B*	Cushion cover-cloth-RH rear	1	(2)	Daimler/VDP
3	BEC	4770 *B*	Cushion cover-cloth-RH rear	1	(3; 4)	Daimler/VDP
4	BDC	8289 *B*	Cushion cover-cloth-LH rear	1	(1)	Daimler/VDP
4	BEC	9169 *B*	Cushion cover-cloth-LH rear	1	(2)	Daimler/VDP
4	BEC	4771 *B*	Cushion cover-cloth-LH rear	1	(3; 4)	Daimler/VDP
3	BBC	7948 *C*	Cushion cover-leather-RH rear	1	(1)	Daimler/VDP
3	BEC	9170 *E*	Cushion cover-leather-RH rear	1	(2)	Daimler/VDP
3	BEC	4772 *E*	Cushion cover-leather-RH rear	1	(3)	Daimler/VDP
3	BEC	4772 *G*	Cushion cover-leather-RH rear	1	(4)	Daimler/VDP
3	BEC	7012 *H*	Cushion cover-autolux leather-RH rear	1	(5)	Daimler/VDP

CHANGE POINTS:


(1) To (V) 580227
(2) From (V) 580228 To (V) 599602
(3) From (V) 599603 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336

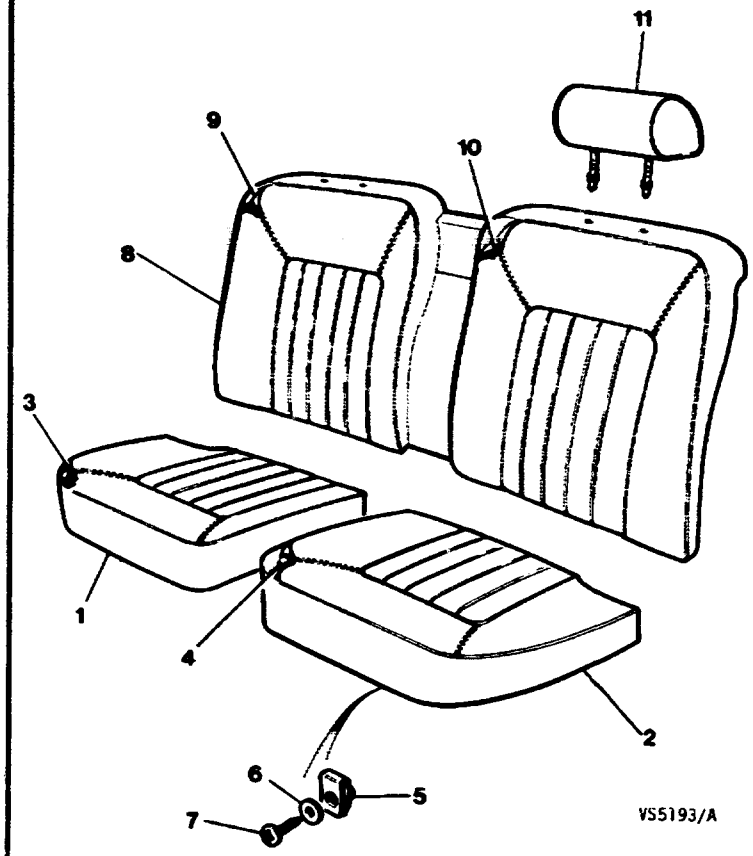

Illus	Part Number	Description	Quantity	Change Point	Remarks
4	BBC 7949 *C*	Cushion cover-leather-LH rear	1	(1)	Daimler/VDP
4	BEC 9171 *E*	Cushion cover-leather-LH rear	1	(2)	Daimler/VDP
4	BEC 4773 *E*	Cushion cover-leather-LH rear	1	(3)	Daimler/VDP
4	BEC 4773 *G*	Cushion cover-leather-LH rear	1	(4)	Daimler/VDP
4	BEC 7013 *H*	Cushion cover-autolux leather-LH rear	1	(5)	Daimler/VDP
5	AK 610021 J	Spire nut	4		Daimler/VDP
6	WJ 105001 J	Plain washer	4		Daimler/VDP
7	AB 610051 J	Flanged head screw	4		Daimler/VDP
8	BDC 8249 *B*	Seat squab-assembly-cloth-rear	1	(1)	Daimler/VDP;except fully mechanical-fix cover
8	BEC 4239 *B*	Seat squab-assembly-cloth-rear	1	(1)	Fully mechanical-fix cover;Daimler/VDP
8	BEC 6237 *B*	Seat squab-assembly-cloth-rear	1	(6; 4)	Daimler/VDP
8	BBC 7831 *C*	Seat squab-assembly-leather-rear	1	(1)	Daimler/VDP;except fully mechanical-fix cover
8	BDC 8248 *C*	Seat squab-assembly-leather-rear	1	(1)	Fully mechanical-fix cover;Daimler/VDP
8	BEC [illegible]236 *E*	Seat squab-assembly-leather-rear	1	(6)	Daimler/VDP
8	BEC 62[illegible] *G*	Seat squab-assembly-leather-rear	1	(4)	Daimler/VDP
8	BEC 6948 *H*	Seat squab-assembly-autolux leather-rear	1	(5)	Daimler/VDP
9	BDC 7368 *B*	Squab cover-cloth-RH rear	1	(1)	Daimler/VDP
9	BEC 4774 *B*	Squab cover-cloth-RH rear	1	(6; 4)	Daimler/VDP

CHANGE POINTS:

(1) To (V) 580227
(2) From (V) 580228 To (V) 599602
(3) From (V) 599603 To (V) 629285
(4) From (V) 629286
(5) From (V) 657336
(6) From (V) 580228 To (V) 629285

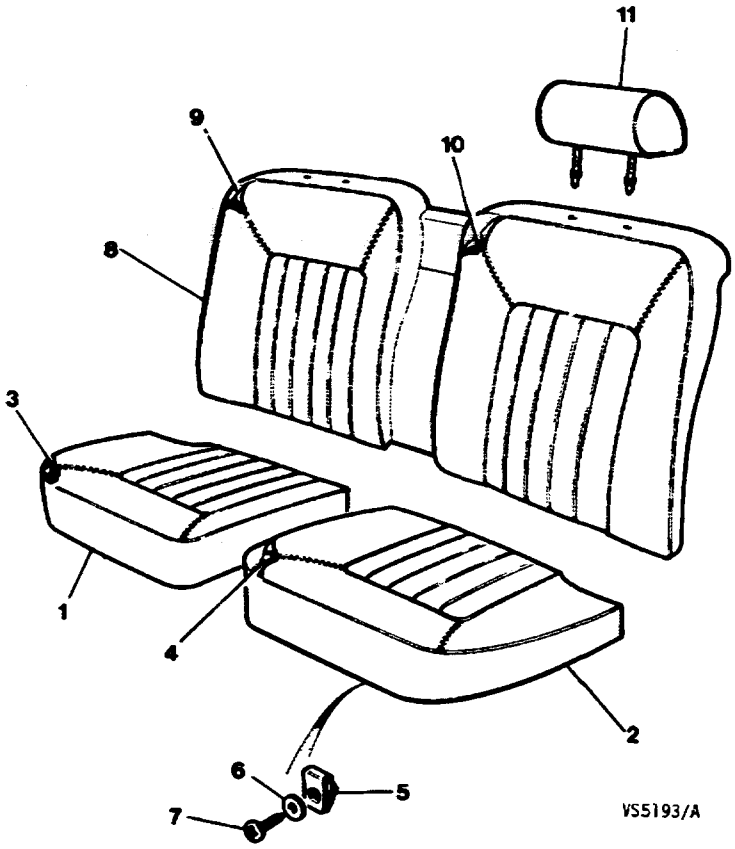


Illus	Part Number		Description	Quantity	Change Point	Remarks
9	BBC	7840 *C*	Squab cover-leather-RH rear	1	(1)	Daimler/VDP;except fully mechanical-fix cover
9	BDC	7366 *D*	Squab cover-leather-RH rear	1	(1)	Fully mechanical-fix cover;Daimler/VDP
9	BEC	4776 *E*	Squab cover-leather-RH rear	1	(2)	Daimler/VDP
9	BEC	4776 *G*	Squab cover-leather-RH rear	1	(3)	Daimler/VDP
9	BEC	6950 *H*	Squab cover-autolux leather-RH rear	1	(4)	Daimler/VDP
10	BDC	7369 *B*	Squab cover-cloth-LH rear	1	(1)	Daimler/VDP
10	BEC	4775 *B*	Squab cover-cloth-LH rear	1	(2; 3)	Daimler/VDP
10	BBC	7841 *C*	Squab cover-leather-LH rear	1	(1)	Daimler/VDP;except fully mechanical-fix cover
10	BDC	7367 *D*	Squab cover-leather-LH rear	1	(1)	Fully mechanical-fix cover;Daimler/VDP
10	BEC	4777 *E*	Squab cover-leather-LH rear	1	(2)	Daimler/VDP
10	BEC	4777 *G*	Squab cover-leather-LH rear	1	(3)	Daimler/VDP
10	BEC	6951 *H*	Squab cover-autolux leather-LH rear	1	(4)	Daimler/VDP
11	BCC	6245 *A*	Headrest-cloth-rear	2	(1; 5)	Daimler/VDP
11	BDC	8823 *B*	Headrest-cloth-rear	2	(6)	Daimler/VDP;Daimler/VDP
11	BEC	6209 *B*	Headrest-cloth-rear	2	(3)	Daimler/VDP;Daimler/VDP
11	BBC	9333 *C*	Headrest-leather-rear	2	(1)	Daimler/VDP
11	BCC	6244 *C*	Headrest-leather-rear	2	(5)	Daimler/VDP
11	BDC	8824 *D*	Headrest-leather-rear	2	(6)	Daimler/VDP;Daimler/VDP
11	BEC	6208 *G*	Headrest-leather-rear	2	(3)	Daimler/VDP;Daimler/VDP
11	BEC	6997 *H*	Headrest-autolux leather-rear	2	(4)	Daimler/VDP

CHANGE POINTS:

(1) To (V) 580227
(2) From (V) 580228 To (V) 629285
(3) From (V) 629286
(4) From (V) 657336
(5) From (V) 580228 To (V) 599602
(6) From (V) 599603 To (V) 629285

ARMREST/CUBBY BOX-REAR-DAIMLER/VDP

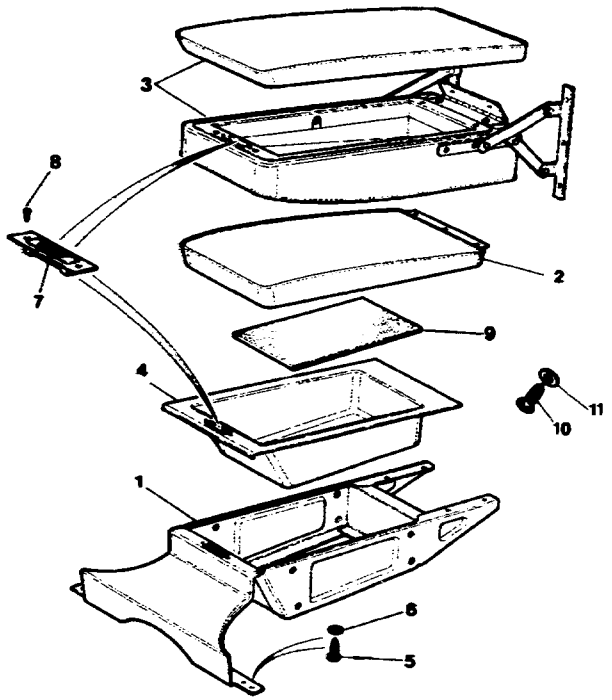

MT4729B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	7803 *5*	Seat console-assembly-rear	1	(1)	Except Majestic
1	BEC	7011 NDR	Seat console-assembly-autolux leather-Cream	1	(2)	Majestic
1	BEC	7011 AEE	Seat console-assembly-autolux leather-Doeskin	1	(3)	
1	BEC	7011 AEM	Seat console-assembly-autolux leather-Magnolia	1	(3)	
1	BEC	7011 LDY	Seat console-assembly-autolux leather-Savile grey	1	(3)	
2	BBC	7808 *5*	Console lid -assembly-rear	1	(1)	Except Majestic
2	BEC	7054 NDR	Console lid -assembly-autolux leather-Cream	1	(2)	Majestic
2	BEC	7054 AEE	Console lid -assembly-autolux leather-Doeskin	1	(3)	
2	BEC	7054 AEM	Console lid -assembly-autolux leather-Magnolia	1	(3)	
2	BEC	7054 LDY	Console lid -assembly-autolux leather-Savile grey	1	(3)	
3	BBC	7835 *5*	Seat squab armrest-rear	1	(1)	Except Majestic
3	BEC	6986 NDR	Seat squab armrest-rear -autolux-Cream	1	(2)	Majestic
3	BEC	6986 AEE	Seat squab armrest-rear -autolux-Doeskin	1	(3)	
3	BEC	6986 AEM	Seat squab armrest-rear -autolux-Magnolia	1	(3)	
3	BEC	6986 LDY	Seat squab armrest-rear -autolux-Savile grey	1	(3)	
	BBC	7809 *5*	Closing panel-lid/squab	1	(1)	Except Majestic
	BEC	6988 NDR	Armrest base-assembly-autolux leather-Cream	1	(2)	Majestic
	BEC	6988 AEE	Armrest base-assembly-autolux leather-Doeskin	1	(3)	
	BEC	6988 AEM	Armrest base-assembly-autolux leather-Magnolia	1	(3)	
	BEC	6988 LDY	Armrest base-assembly-autolux leather-Savile grey	1	(3)	
4	BBC	7825	Cubby box	1		
5	AZ	614041 J	Self tapping screw	8		
6	WA	106041 J	Plain washer-0.25" i/d	8		
	RA	612207 J	Blind rivet	4		
10	AC	608044 J	Countersunk self tapping screw	2		
7	BBC	7828	Magnetic catch-assembly	2		
	BBC	7827	Magnetic catch plate	2		
8	AD	606043 J	Self tapping screw-magnetic catch	4		
11	WA	105001 J	Plain washer-M5	4		
	WE	105001 J	Serrated washer-console extension	4		
	NH	105041 J	Nyloc nut-M5	NLA		Use NH105061J.
	NH	105061 J	Nyloc nut-M5	4		
9	BBC	3054	Cubby box console carpet	1		

CHANGE POINTS:

(1) To (V) 657335

(2) From (V) 633352


(3) From (V) 657336

BENCH SEAT ASSEMBLY-REAR-DAIMLER

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 22957 *9*	Seat squab-assembly-rear	1		
2	BEC 22959 *9*	Seat squab cover-assembly-rear	1		
3	BEC 23122 *9*	Seat squab armrest-assembly-rear	1		
4	BEC 22961 *9*	Seat cushion-assembly-rear	1		
5	BEC 22962 *9*	Seat cushion cover-assembly-rear	1		


COMPONENTS NOT DRAWN

SEAT ASSEMBLY-REAR-MAJESTIC

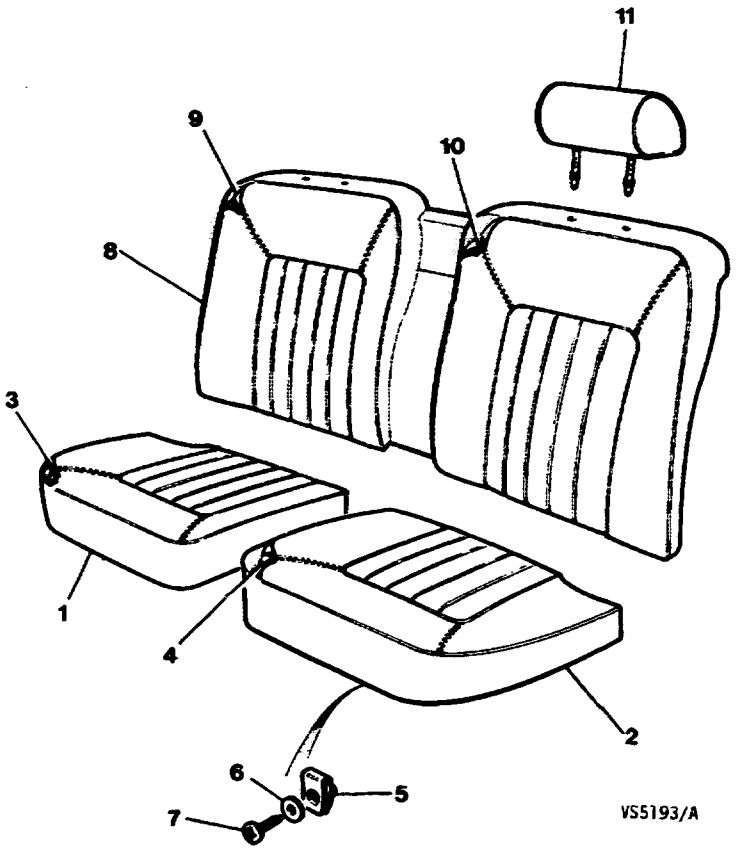

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	7008 RNR	Seat cushion-assembly-RH	1		
2	BEC	7009 RNR	Seat cushion-assembly-LH	1		
3	BEC	7012 RNR	Cushion cover-RH	1		
4	BEC	7013 RNR	Cushion cover-LH	1		
5	AK	610021 J	Spire nut	4		
6	WA	106041 J	Plain washer-0.25" i/d	4		
7	AB	610051 J	Flanged head screw	4		
8	BEC	6948 RNR	Seat squab-assembly	1		
9	BEC	6950 RNR	Squab cover-RH	1		
10	BEC	6951 RNR	Squab cover-LH	1		
11	BEC	6997 RNR	Headrest	2		

SEAT SLIDE-FRONT-MANUAL

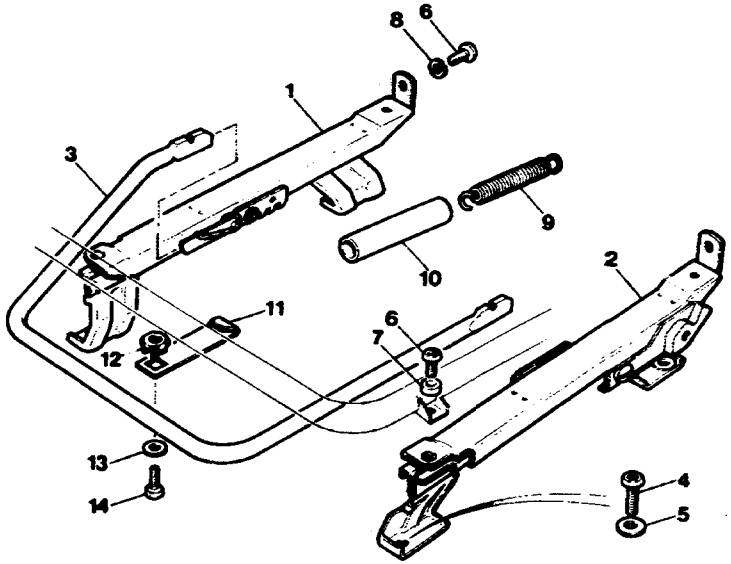


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	4076	Seat slide-RH outer	NLA	(1)	
1	BCC	4724	Seat slide-RH outer	1	(2)	
1	BCC	4079	Seat slide-LH inner	1	(1)	
1	BCC	4723	Seat slide-LH inner	1	(2)	
2	BCC	4078	Seat slide-RH inner	NLA	(1)	
2	BCC	4722	Seat slide-RH inner	1	(2)	
2	BCC	4077	Seat slide-LH outer	NLA	(1)	
2	BCC	4725	Seat slide-LH outer	1	(2)	
3	BCC	4080	Operating handle	NLA	(1)	
3	BCC	4721	Operating handle	NLA	(3)	Use BDC9239.
3	BDC	9239	Operating handle	2	(4)	
4	BCC	2164	Torx screw-M10 x 25mm	2		
4	BBC	4218	Torx screw-M10 x 30mm	NLA		
5	BBC	4583	Spacer-4mm	2		
5	BBC	1198	Spacer-8mm	NLA		
5	BCC	7834	Spacer-12mm	2		
5	BEC	6354	Spacer-21mm.	4		
5	BEC	6353	Spacer-25mm.	4		
6	BBC	4219	Torx screw-M8	4		
7	CAC	2469	Spacer-6.35mm	2		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851
(3) From (V) 556851 To (V) 580227
(4) From (V) 580228


SEAT SLIDE-FRONT-MANUAL

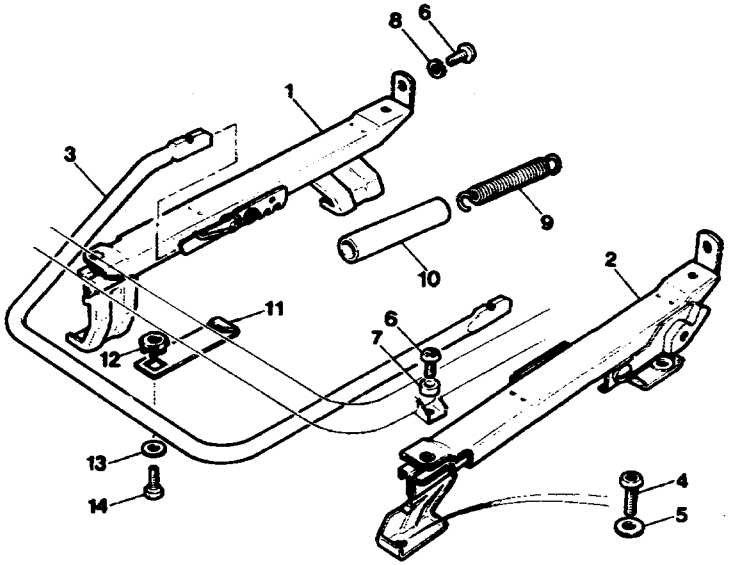

Illus	Part Number		Description	Quantity	Change Point	Remarks
8	JLM	9574	Spring washer-M8	NLA		Use WL108001J.
8	WL	108001 J	Spring washer-M8	2		
9	BD	29301	Spring	8		
10	BD	24629	Sleeve	NLA		
11	BCC	2082	Seat pan bracket	2	(1)	
11	BEC	10316	Seat pan bracket	2	(2)	
12	BD	86338	Caged nut	2		
13	WA	105001 J	Plain washer-M5	2		
14	SH	105101 J	Screw	2		
	BAC	3787	Spring clip	2		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

SEAT ADJUSTER-FRONT-ELECTRIC

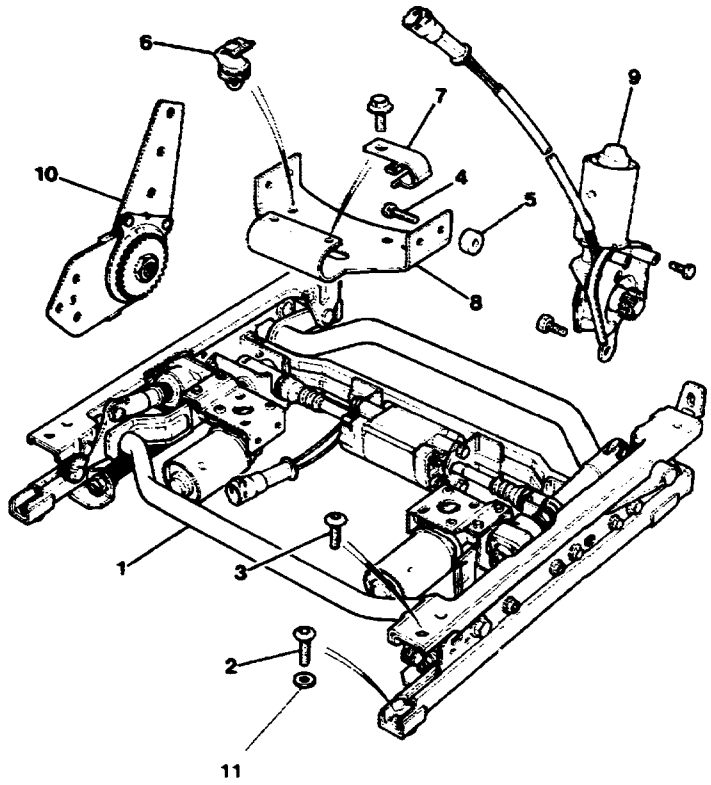


MT4770B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	8012	Six way seat adjuster-front seat	2	(1)	
1	BDC	8596	Six way seat adjuster-front seat	NLA	(2)	Use BEC2765.
1	BEC	2765	Six way seat adjuster	2	(3)	
2	BBC	4218	Torx screw-M10 x 30mm	NLA		
2	BCC	2164	Torx screw-M10 x 25mm	2		
3	BBC	4219	Torx screw-M8	4		
11	BBC	1198	Spacer-8mm	NLA		
	WL	108001 J	Spring washer-M8	4		
4	SH	104201 J	Setscrew	NLA		
	BEC	7719	Flat washer	2		
5	BD	17648	Spacer-0.13"	4		
6	DBC	2984	Clip	4		
7	ADU	8951 J	P-clip-0.5" diameter	2		
8	DBC	2934	Switch mounting bracket	NLA		
9	BBC	3036	Recline motor and gearbox -RH	NLA	(1)	Use BEC2170.
9	BEC	2170	Recline motor and gearbox -RH	1	(4)	
9	BBC	3037	Recline motor and gearbox -LH	NLA	(1)	Use BEC2171.
9	BEC	2171	Recline motor and gearbox -LH	1	(4)	
10	BBC	7032	Recline mechanism-RH	1		Driver's side
10	BBC	7033	Recline mechanism-LH	1		Driver's side
	BEC	11624	Rise and fall motor -front	1		
	BEC	11625	Rise and fall motor -rear	1		
	JLM	1729	Fore and aft motor	1		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 589690
(3) From (V) 589691
(4) From (V) 556851

DOOR CONTROL PANEL

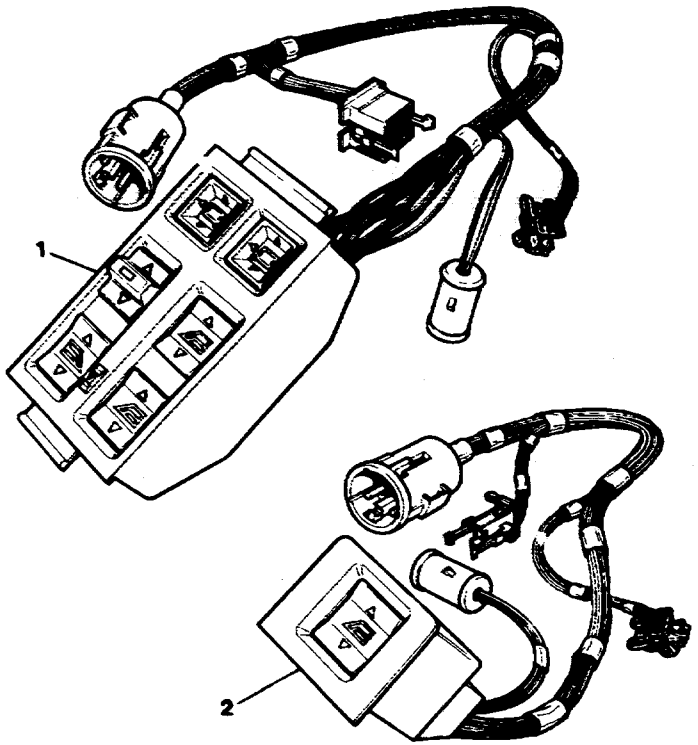


VS4702/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	DBC	2886	Switch panel-assembly-driver's door	1	(1; 2)	RHD
1	DBC	3210	Switch panel-assembly-driver's door	NLA	(3; 4)	Use DBC5136.
1	DBC	5136	Switch panel-assembly-driver's door	NLA		Use DBC12142.
1	DBC	12142	Switch panel-assembly-driver's door	1	(5)	RHD
1	DBC	2887	Switch panel-assembly-driver's door	1	(1; 2)	LHD
1	DBC	3211	Switch panel-assembly-driver's door	NLA	(3; 4)	Use DBC5137.
1	DBC	5137	Switch panel-assembly-driver's door	NLA		Use DBC12143.
1	DBC	12143	Switch panel-assembly-driver's door	1	(5)	LHD
	BD	486122	Foam strip	2		Daimler/VDP
2	DBC	3091	Passenger door switch-assembly	3	(1; 2)	
2	DBC	3212	Passenger door switch-assembly	3	(6; 7)	
	DBC	2421	Link harness-door lamp to panel	NLA	(1; 2)	
	DBC	3219	Link harness-door lamp to panel	4	(6; 7)	
	DBC	6244	Bulb-switchpack	6		

CHANGE POINTS:

(1) To (V) 542207 2.9 Litre
(2) To (V) 541364 3.6 Litre (XJ40)
(3) From (V) 542208 To (V) 594575 2.9 Litre
(4) From (V) 541365 To (V) 594575 3.6 Litre (XJ40)
(5) From (V) 594576
(6) From (V) 542208 2.9 Litre
(7) From (V) 541365 Except 2.9 Litre

DRIVER'S SEAT ENTRY SWITCH

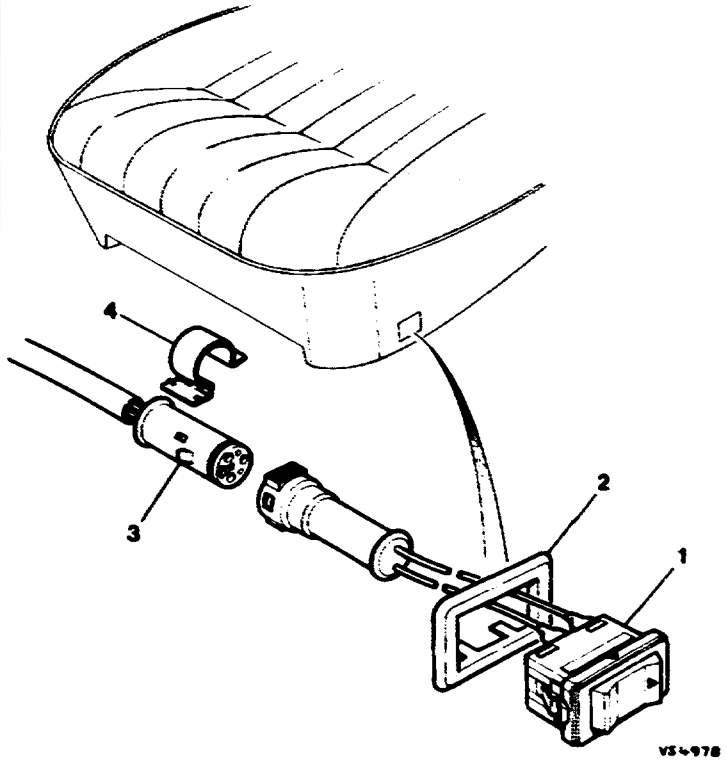


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 5138	Driver's seat entry switch	NLA	.....	Use LMA6060AA.
1	LMA 6060AA	.....	1		
2	BDC 9371	Entry switch escutcheon-chrome	NLA		
3	DBC 5525	Seat entry switch harness	1		
	DBC 5153	Entry switch link lead	1		
	DBC 2483	Reverse inhibit relay-green	1		
4	13H 9559	Edge clip	2		
	ADU 9028	Tie strap-7.75" long	3		

SEATING

MISCELLANEOUS ELECTRICAL COMPONENTS

SEAT SENSOR

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DAC 5515	Seat sensor switch-assembly	2/1	(1)	
1	DBC 4784	Seat sensor switch-assembly	2/1	(2)	

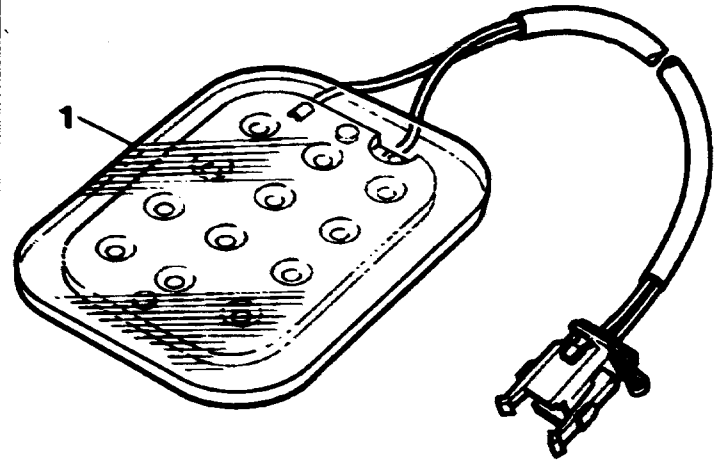

CHANGE POINTS:

(1) To (V) 556850

(2) From (V) 556851


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

FRONT SEATBELTS AND FIXINGS ..... 4. F 05
PASSIVE RESTRAINT SYSTEM ..... 4. F 02
REAR SEATBELTS AND FIXINGS ..... 4. F 08
PASSIVE RESTRAINT EQUIPMENT ..... 4. F 04
PASSIVE RESTRAINT MODULE ..... 4. F 03
SEATBELT-FRONT-AUSTRALIA ..... 4. F 05
SEATBELT-FRONT-NOT AUSTRALIA-FROM ..... 4. F 07
SEATBELT-FRONT-NOT AUSTRALIA-UP TO ..... 4. F 06
SEATBELT PASSIVE RESTRAINT ..... 4. F 02
SEATBELT-REAR-FROM (V)594576 ..... 4. F 09
SEATBELT-REAR-UP TO (V)594575 ..... 4. F 08

SEATBELT-PASSIVE RESTRAINT

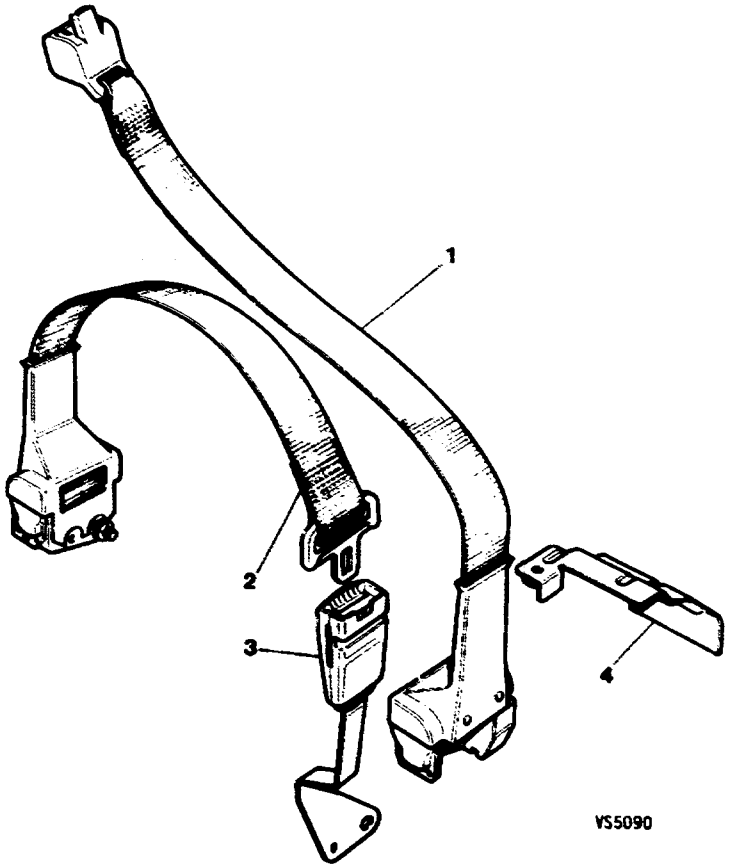


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 1990 *6*	Motorized seatbelt-RH	1	(1)	Passive belt
1	BEC 10256 *6*	Motorized seatbelt-RH	1	(2)	Passive belt
1	BEC 1989 *6*	Motorized seatbelt-LH	1	(1)	Passive belt
1	BEC 10257 *6*	Motorized seatbelt-LH	1	(2)	Passive belt
2	BEC 1988 *6*	Lapbelt-RH	1	(1)	Passive belt
2	BEC 10258 *6*	Lapbelt-RH	1	(2)	Passive belt
2	BEC 1987 *6*	Lapbelt-LH	1	(1)	Passive belt
2	BEC 10259 *6*	Lapbelt-LH	1	(2)	Passive belt
3	BDC 9204	Seatbelt buckle-RH	1	(1)	Passive belt
3	BEC 10260 *6*	Seatbelt buckle-RH	1	(2)	Passive belt
3	BDC 9203	Seatbelt buckle-LH	NLA	(1)	Use BEC10261PMA.
					Passive belt
3	BEC 10261 PMA	Seatbelt buckle-LH	1	(1)	Passive belt
3	BEC 10261 *6*	Seatbelt buckle-LH	1	(2)	Passive belt
4	BDC 7960	Inertia reel kick shield -RH	NLA		
4	BDC 7961	Inertia reel kick shield -LH	NLA		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

PASSIVE RESTRAINT MODULE

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2861	Passive restraint module	1	(1)	Passive belt
1	DBC 4982	Passive restraint module	NLA	(2)	Use DBC10729. Passive belt
1	DBC 10729	Passive restraint module	1	(3)	Passive belt
2	SE 105161 J	Screw-M5 x 16mm	2		
3	WJ 105001 J	Plain washer	2		

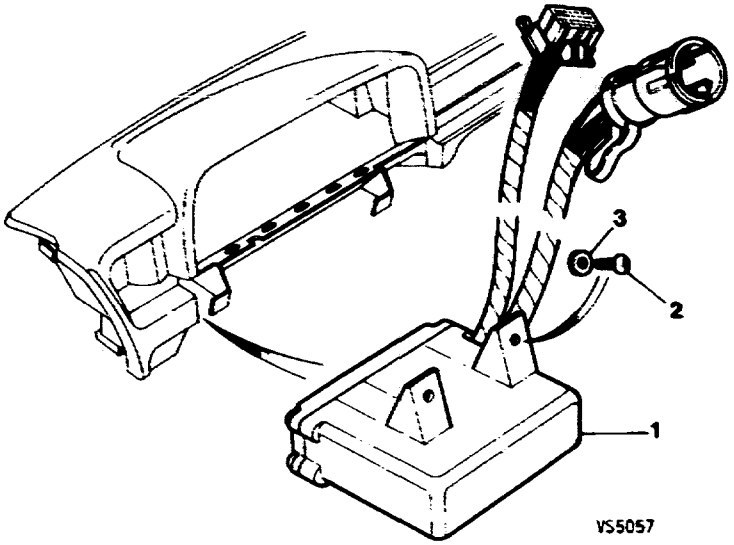


CHANGE POINTS:

(1) To (V) 582138

(2) From (V) 582139 To (V) 659028

(3) From (V) 659029

PASSIVE RESTRAINT EQUIPMENT

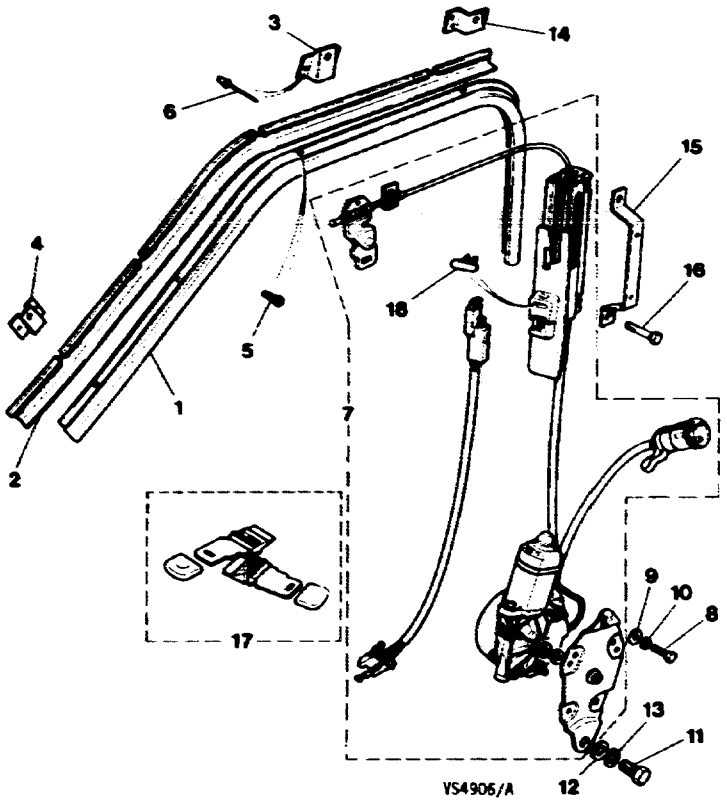


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BDC 9662	Rail and seal-assembly-RH-passive restraint	NLA	.....	Use BDC8960.
1	BDC 9663	Rail and seal-assembly-LH-passive restraint	NLA	.....	Use BDC8961.
1	BDC 8960	Rail and seal-assembly-RH-passive restraint	1		
1	BDC 8961	Rail and seal-assembly-LH	1		
2	BDC 9664	Rail seal -RH	1		
2	BDC 9665	Rail seal -LH	1		
3	BEC 1222	Rail mounting bracket	4		
4	BBC 1977	Rail mounting bracket	4	(1)	
4	BEC 1207	Rail mounting bracket	NLA	(2).....	Use BEC1889.
4	BEC 1889	Rail mounting bracket	4	(3)	
5	SE 105101 J	Screw-M5	NLA	.....	Use AGU2689J.
5	AGU 2689	Screw	8		
6	RH 612176	Rivet	16		
7	BDC 8570	Motor, cable and anchorage -RH	NLA	(1).....	Use BEC1956.
7	BEC 1956	Motor, cable and anchorage	NLA	.....	Use BEC4814.
7	BEC 4814	Motor, cable and anchorage -RH	NLA	(4).....	Use HMD1300AA.
7	HMD 1300AA	Motor, cable and anchorage -assembly-RH	1		
7	BEC 4815	Motor, cable and anchorage -LH	NLA	(5).....	Use HMD1301AA.
7	HMD 1301AA	Motor, cable and anchorage -LH	1		
8	SH 106101 J	Mounting plate bolt-upper	2		
9	WB 106041 J	Plain washer	NLA		
10	WL 106001 J	Plain washer-M6	2		
11	SH 607061 J	Setscrew	2		
12	WA 600071 J	Washer	2		
13	WL 600071 J	Lock washer-0.4375" i/d	2		
14	BDC 8590	B-post trim mounting bracket -RH	NLA		
14	BDC 8591	B-post trim mounting bracket -LH	1		
15	BEC 1252	Mounting bracket-upper	NLA	(5).....	Use BEC12794.
15	BEC 12794	Mounting bracket-upper	1	(6)	
16	BX 108081 J	Mounting bracket/anchorage bolt	4		
17	BDC 7785	Emergency tongue kit	1		
18	JLM 1823	Blanking plug	2		

CHANGE POINTS:

(1) To (V) 581304
(2) From (V) 581305 To (V) 592479
(3) From (V) 592480
(4) From (V) 581305 To (V) 657854
(5) To (V) 657854
(6) From (V) 657855

SEATBELT-FRONT-AUSTRALIA

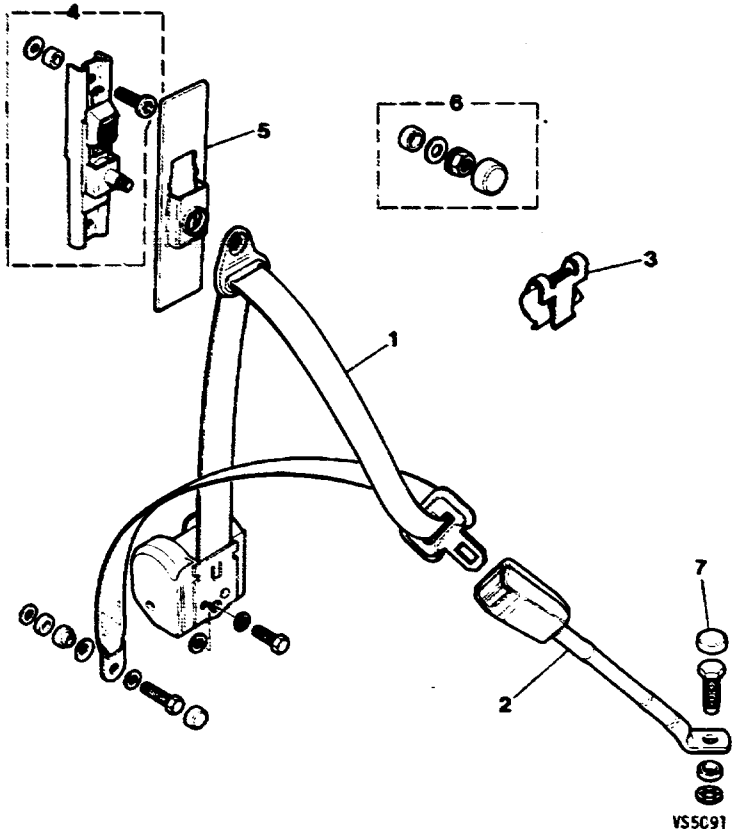


Illus	Part Number		Description	Quantity	Change Point	Remarks
	JLM	136	Seatbelt/buckle kit -RH-Black	1	(1)	Australia
	JLM	138	Seatbelt/buckle kit -LH-Black	1	(1)	Australia
	JLM	1624	Seatbelt/buckle kit -RH	NLA	(2)	Australia;manual seat slide;tongue type
	JLM	1628	Seatbelt/buckle kit -LH	NLA	(2)	Australia;electric seat slide;tongue type
	JLM	1625	Seatbelt/buckle kit -RH	NLA	(2)	Australia;manual seat slide;tongue type
	JLM	1629	Seatbelt/buckle kit -LH	NLA	(2)	Australia;electric seat slide;tongue type
1	BEC	10250 PMA	Seatbelt-RH front-Black	NLA	(3)	Use BEC11144PMA. Australia;tongue type
1	BEC	11144 PMA	Seatbelt-RH front-Black	1	(4)	Australia;tongue type
1	BEC	10251 PMA	Seatbelt-LH front-Black	NLA	(3)	Use BEC11145PMA. Australia;tongue type
1	BEC	11145 PMA	Seatbelt-LH front-Black	1	(4)	Australia;tongue type
2	BEC	10244 LEG	Seatbelt buckle-RH front-Warm charcoal	NLA	(5)	Use BEC21994LEG. Australia;manual seat slide
2	BEC	21994 LEG	Seatbelt buckle-RH front-Warm charcoal	1		Australia;manual seat slide
2	BEC	10246 LEG	Seatbelt buckle-RH front-Warm charcoal	NLA	(5)	Use BEC21992LEG. Australia;electric seat slide
2	BEC	21992 LEG	Seatbelt buckle-RH front-Warm charcoal	1		Australia;electric seat slide
2	BEC	10245 LEG	Seatbelt buckle-LH front-Warm charcoal	1	(5)	Australia;manual seat slide
2	BEC	10247 LEG	Seatbelt buckle-LH front-Warm charcoal	NLA	(5)	Use BEC21993LEG. Australia;electric seat slide
2	BEC	21993 LEG	Seatbelt buckle-LH front-Warm charcoal	1		Australia;electric seat slide
3	BBC	2875	B/C-post seatbelt guide	2		
4	BCC	2104	Adjustable anchor-B/C-post	2		
5	BCC	3691	Closing panel-adjustable anchorage	2		
6	BBC	2908	ADJUSTABLE ANCHORAGE FASTENER	2		
	BCC	9037 LEG	• Mounting bolt finisher cap-Warm charcoal	1		
7	BBC	2908 AGD	Adjustable anchorage fastener-Oatmeal	2		
7	BBC	2908 HEZ	Adjustable anchorage fastener-Parchment	2		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 629285
(3) From (V) 629286 To (V) 657854
(4) From (V) 657855
(5) From (V) 629286


SEATBELT-FRONT-NOT AUSTRALIA-UP TO (V)594575

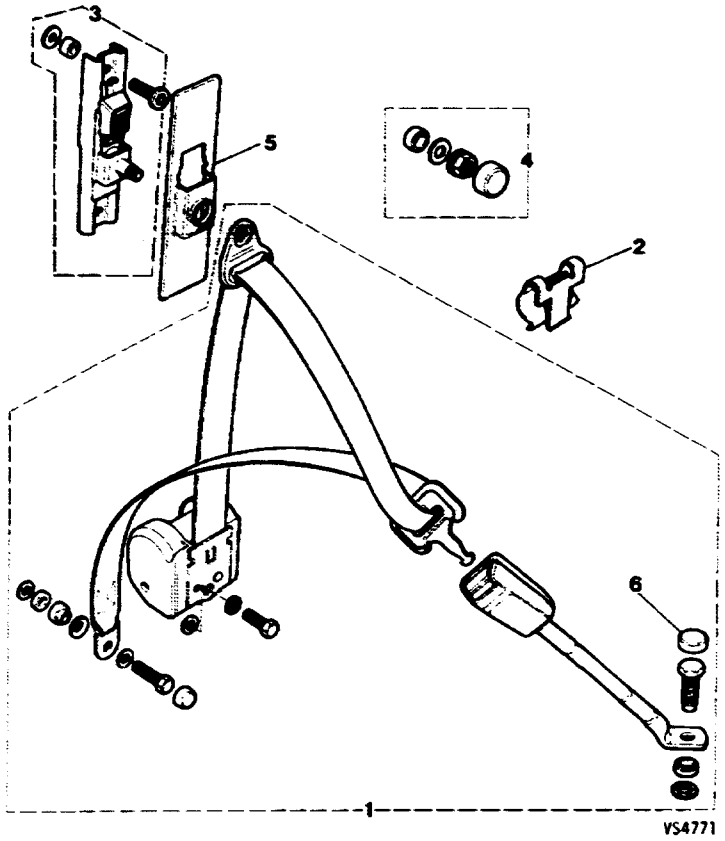

Illus	Part Number		Description	Quantity	Change Point	Remarks
	JLM	10509LEG	Seatbelt kit-front-Warm charcoal	1	(1)	
	JLM	10746	Seatbelt link lead	2		Use with JLM10509
	JLM	10509AEE	Seatbelt kit-front-Warm charcoal	1	(2)	
1	JLM	135LZ	Seatbelt buckle stalk-assembly-RH front-220mm-Warm charcoal	NLA	(2)	Use JLM1764LEG.
1	JLM	1764LEG	Seatbelt buckle stalk-assembly-RH front-290mm-Warm charcoal	1	(2)	
1	JLM	1622LEG	Seatbelt buckle stalk-assembly-RH front-Warm charcoal	NLA	(3)	Use JLM10509LEG qty 1 with JLM10746 qty 1. Manual seat slide;tongue type
1	JLM	1626LEG	Seatbelt buckle stalk-assembly-RH front-Warm charcoal	NLA	(3)	Use JLM10509LEG qty 1 with JLM10746 qty 1. Electric seat slide;tongue type
1	JLM	1765LEG	Seatbelt buckle stalk-assembly-LH front-290mm-Warm charcoal	NLA	(2)	Use JLM10509LEG qty 1 with JLM10746 qty 1.
1	JLM	1623LEG	Seatbelt buckle stalk-assembly-LH front-Warm charcoal	1	(3)	Manual seat slide;tongue type
1	JLM	1627LEG	Seatbelt buckle stalk-assembly-LH front-Warm charcoal	NLA	(3)	Use JLM10509LEG qty 1 with JLM10746 qty 1. Electric seat slide;tongue type
1	JLM	1622AEE	Seatbelt buckle stalk-assembly-RH front-Doeskin	NLA	(3)	Use JLM10509AEE qty 1 with JLM10746 qty 1. Manual seat slide;tongue type
1	JLM	1626AEE	Seatbelt buckle stalk-assembly-RH front-Doeskin	NLA	(3)	Use JLM10509AEE qty 1 with JLM10746 qty 1. Electric seat slide;tongue type
1	JLM	1623AEE	Seatbelt buckle stalk-assembly-LH front-Doeskin	NLA	(3)	Use JLM10509AEE qty 1 with JLM10746 qty 1. Manual seat slide;tongue type
1	JLM	1627AEE	Seatbelt buckle stalk-assembly-LH front-Doeskin	NLA	(3)	Use JLM10509AEE qty 1 with JLM10746 qty 1. Electric seat slide;tongue type

CHANGE POINTS:
(1) To (V) 556851
(2) To (V) 556850
(3) From (V) 556851 To (V) 594575

SEATBELT-FRONT-NOT AUSTRALIA-FROM (V)594576

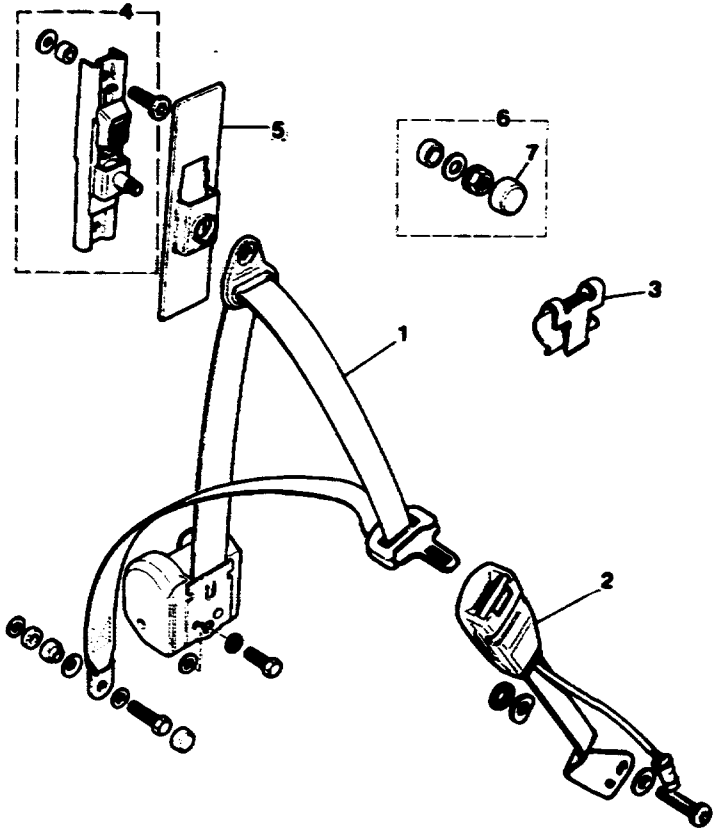


VS5047

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	1984 *8*	Seatbelt-RH front	1	(1)	
1	BEC	10240 *8*	Seatbelt-RH front	1	(2)	
1	BEC	11142 *8*	Seatbelt-RH front	1	(3)	
1	BEC	1983 *8*	Seatbelt-LH front	1	(1)	
1	BEC	10241 *8*	Seatbelt-LH front	1	(2)	
1	BEC	11143 *8*	Seatbelt-LH front	1	(3)	
2	BDC	7928	Seatbelt buckle-RH front	NLA	(1)	Use BEC10246PMA
						Electric seat slide
2	BDC	7976	Seatbelt buckle-RH front	NLA	(1)	Use BEC10244PMA
						Manual seat slide
2	BEC	10246 PMA	Seatbelt buckle-RH front-Black	NLA		Use BEC10246LEG
						Electric seat slide
2	BEC	10244 PMA	Seatbelt buckle-RH front-Black	NLA		Use BEC10244LEG
						Manual seat slide
2	BEC	10246 LEG	Seatbelt buckle-RH front-Warm charcoal	NLA		Use BEC21992LEG
						Electric seat slide
2	BEC	10244 LEG	Seatbelt buckle-RH front-Warm charcoal	NLA		Use BEC21994LEG
						Manual seat slide
2	BEC	21992 LEG	Seatbelt buckle-RH front-Warm charcoal	1		Electric seat slide
2	BEC	21994 LEG	Seatbelt buckle-RH front-Warm charcoal	1		Manual seat slide
2	BDC	7927	Seatbelt buckle-LH front	NLA	(1)	Use BEC10247PMA
						Electric seat slide
2	BDC	7977	Seatbelt buckle-LH front	NLA	(1)	Use BEC10245PMA
						Manual seat slide
2	BEC	10247 PMA	Seatbelt buckle-Black-LH front	NLA		Use BEC10247LEG
						Electric seat slide
2	BEC	10245 PMA	Seatbelt buckle-LH front-Black	NLA		Use BEC10245LEG
						Manual seat slide
2	BEC	10247 LEG	Seatbelt buckle-LH front-Warm charcoal	NLA		Use BEC21993LEG
						Electric seat slide
2	BEC	21993 LEG	Seatbelt buckle-LH front-Warm charcoal	1		Electric seat slide
2	BEC	10245 LEG	Seatbelt buckle-LH front-Warm charcoal	1		Manual seat slide
3	BBC	2875	B/C-post seatbelt guide	2		Except Australia
4	BCC	2104	Adjustable anchor-B/C-post	2		Except Australia
5	BBC	3691	Closing panel-adjustable anchorage	NLA		
6	BBC	2908	ADJUSTABLE ANCHORAGE FASTENER	2		Except Australia
	BCC	9037 LEG	• Mounting bolt finisher cap-Warm charcoal	1		
7	BCC	9037 *2*	Finisher cap	4		

CHANGE POINTS:

(1) From (V) 594576 To (V) 629285
(2) From (V) 629286 To (V) 657854
(3) From (V) 657855


SEATBELT-REAR-UP TO (V)594575

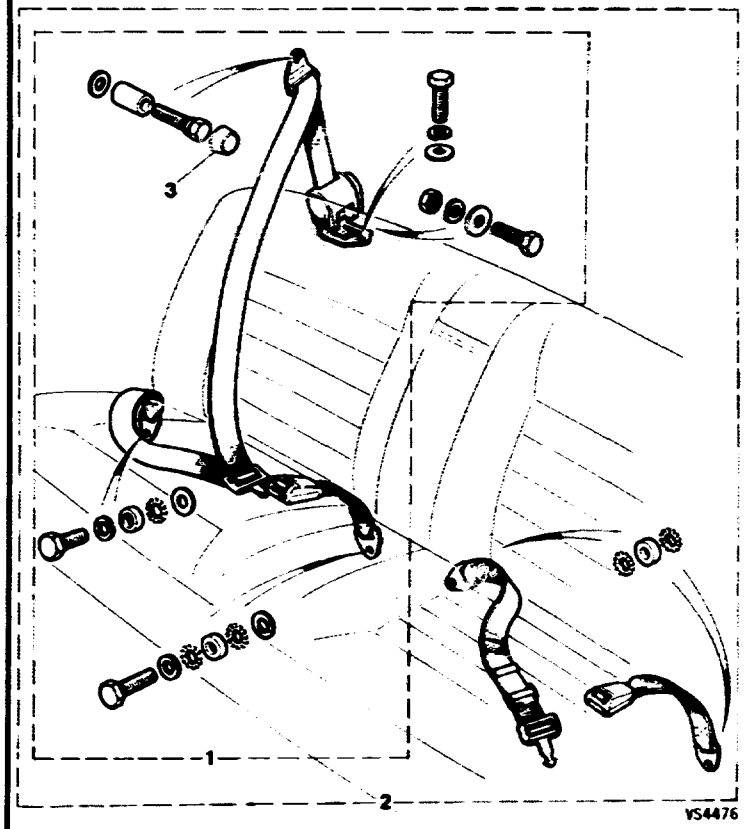

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	209XE	Seatbelt-assembly-RH rear-Doeskin	1	(1)	No inner belt;except Australia and Canada and USA
1	JLM	209LZ	Seatbelt-assembly-RH rear-Warm charcoal	1	(1)	No inner belt;except Australia and Canada and USA
1	JLM	210XE	Seatbelt-assembly-LH rear-Doeskin	1	(1)	No inner belt;except Australia and Canada and USA
1	JLM	210LZ	Seatbelt-assembly-LH rear-Warm charcoal	1	(1)	No inner belt;except Australia and Canada and USA
2	JLM	10511AEE	Seatbelt-assembly-rear -Doeskin	1	(2)	With inner belt
2	JLM	10511LEG	Seatbelt-assembly-rear -Warm charcoal	1	(2)	With inner belt
1	JLM	809LZ	Seatbelt-assembly-Warm charcoal -RH rear	1	(2)	With inner belt
1	JLM	211	Seatbelt-assembly-RH rear-Black	1	(2)	Australia;with inner belt
1	JLM	1632AEE	Seatbelt-assembly-RH rear-Doeskin	1	(3)	With inner belt
1	JLM	1632LEG	Seatbelt-assembly-RH rear-Warm charcoal	1	(3)	With inner belt
1	JLM	1630	Seatbelt-assembly-RH rear-Black	1	(4)	Australia
1	JLM	810LZ	Seatbelt-assembly-LH rear-Warm charcoal	1	(2)	With inner belt
1	JLM	212	Seatbelt-assembly-LH rear-Black	1	(2)	Australia;with inner belt
1	JLM	1633AEE	Seatbelt-assembly-LH rear-Doeskin	1	(3)	With inner belt
1	JLM	1633LEG	Seatbelt-assembly-LH rear-Warm charcoal	1	(3)	With inner belt
1	JLM	1631	Seatbelt-assembly-LH rear-Black	NLA	(4)	Use BEC7261PMA. Australia
3	BCC	9037"6"	Mounting bolt finisher cap	2		

CHANGE POINTS:
(1) To (V) 594575
(2) To (V) 556850
(3) From (V) 556851 To (V) 594575
(4) From (V) 556851 To (V) 629285

SEATBELT-REAR-FROM (V)594576

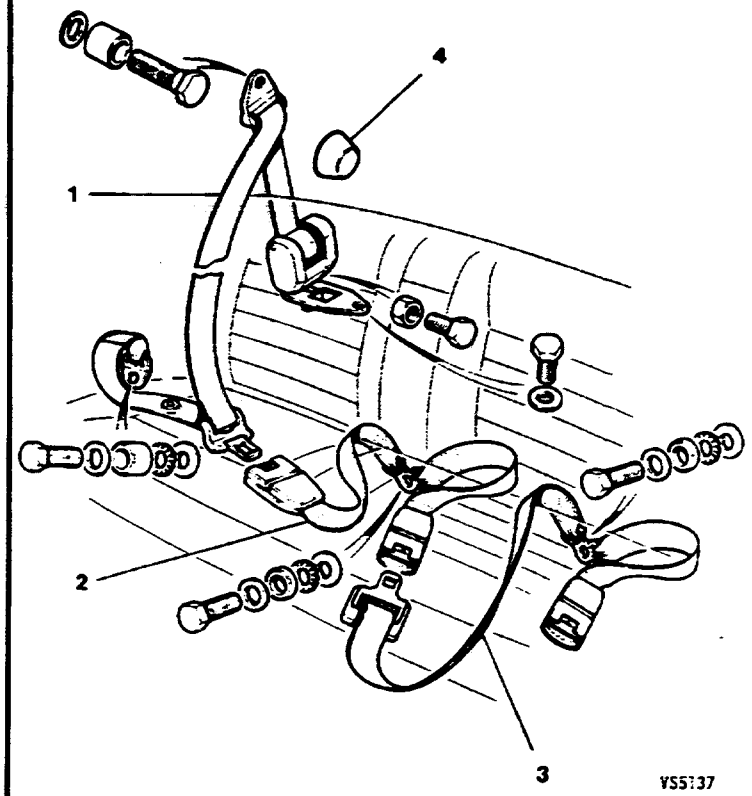

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	1986 *6*	Seatbelt-RH rear	1	(1)	Except Australia
1	BEC	10242 *6*	Seatbelt-RH rear	1	(3)	Except Australia
1	BEC	11138 *6*	Seatbelt-RH rear	1	(4)	Except Australia
1	BEC	10252 PMA	Seatbelt-RH rear	NLA	(1)	Use BEC11140PMA
						Australia
1	BEC	11140 PMA	Seatbelt-RH rear	1	(2)	Australia
1	BEC	1985 *6*	Seatbelt-LH rear	1	(1)	Except Australia
1	BEC	10243 *6*	Seatbelt-LH rear	1	(3)	Except Australia
1	BEC	11139 *6*	Seatbelt-LH rear	1	(4)	Except Australia
1	BEC	10253 PMA	Seatbelt-LH rear	NLA	(1)	Use BEC11141PMA
						Australia
1	BEC	11141 PMA	Seatbelt-LH rear	1	(2)	Australia
2	BEC	4825 *6*	Twin seatbelt buckle -assembly-rear	1	(1)	Except Australia
2	BEC	10249 *6*	Twin seatbelt buckle -assembly-rear	1	(2)	Except Australia
2	BEC	10254 PMA	Twin seatbelt buckle -assembly-rear	NLA	(2)	Australia
3	BEC	10255 PMA	Lap belt/buckle-assembly-rear	NLA	(2)	Australia
3	BEC	4826 *6*	Lap belt/buckle-assembly-rear	1	(1)	Except Australia
3	BEC	10248 *6*	Lap belt/buckle-assembly-rear	1	(2)	Except Australia
4	BCC	9037 *6*	Mounting bolt finisher cap	8		

CHANGE POINTS:

(1) From (V) 594576 To (V) 629285
(2) From (V) 629286
(3) From (V) 629286 To (V) 657854
(4) From (V) 657855

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

BODY INTERIOR FIXTURES AND FITTINGS .... 4. G 04
CENTRE CONSOLE ..... 4. H 03
DOOR INTERIOR TRIM AND FINISHERS ..... 4. H 10
FACIA ..... 4. I 03
FLOOR COVERINGS/CARPETS ..... 4. I 10
GLOVEBOX ..... 4. J 05
HEADLININGS AND SUNVISORS ..... 4. J 08
INSULATION/LINERS ..... 4. I 18
PARCEL SHELF AND SUNBLINDS ..... 4. J 15
REAR VIEW MIRRORS ..... 4. I 02
TREADPLATES ..... 4. G 02
VENEERS AND WOOD SETS ..... 4. I 09

A, B AND C-POST FINISHER ..... 4. G 07
A, B, C, AND D-POST FINISHER-MAJESTIC ..... 4. G 09
AIR DUCT/ECU COVER-SCUTTLE CASING ..... 4. G 05
BONNET AND TRUNK LID LINER ..... 4. J 04
CENTRE CONSOLE AND ARMREST-FRONT ..... 4. H 04
CENTRE CONSOLE REAR EXTENSION ..... 4. H 08
CENTRE CONSOLE-MAJESTIC ..... 4. H 03
D-POST FINISHER ..... 4. G 10
DOOR APERTURE EDGE FINISHER ..... 4. G 14
DOOR CASING-ARMREST/POCKET- ..... 4. H 10
DOOR CASING-FRONT/REAR-MAJESTIC ..... 4. H 16
DOOR CASING-FRONT ..... 4. H 14
DOOR CASING-REAR ..... 4. H 17
DOOR POCKET/ARMREST ..... 4. H 12
FACIA ASSEMBLY-MAJESTIC ..... 4. I 08
FACIA ASSEMBLY ..... 4. I 03
FLOOR CARPET FIXINGS ..... 4. I 14
FLOOR CARPET-MAJESTIC ..... 4. I 13
FLOOR CARPET ..... 4. I 10
GEARBOX COVER PLATES ..... 4. G 18
GEARSHIFT APERTURE FINISHER ..... 4. H 07
GLOVEBOX ASSEMBLY ..... 4. J 05
GOATSKIN RUG-SIMULATED ..... 4. I 17

HEADLINING AND CANTRAIL ..... 4. J 08
ILLUMINATED SUNVISOR ..... 4. J 13
INTERIOR REAR VIEW MIRROR ..... 4. I 02
PARCEL SHELF-REAR ..... 4. J 15
PICNIC TRAY-DAIMLER/VDP ..... 4. H 02
ROOF CONSOLE ..... 4. G 16
SCUTTLE SIDE CASING ..... 4. G 04
SOUND INSULATION ..... 4. I 18
SUNBLIND-REAR ..... 4. J 16
SUNVISOR ..... 4. J 12
TREADPLATE AND FINISHER ..... 4. G 02
TRUNK CARPET AND INSULATION ..... 4. I 15
UNDERSCUTTLE CASING-PASSIVE ..... 4. G 12
UPPER TRIM-PASSIVE RESTRAINT ..... 4. G 13
VENEER FACIA PANELS ..... 4. I 09

TREADPLATE AND FINISHER

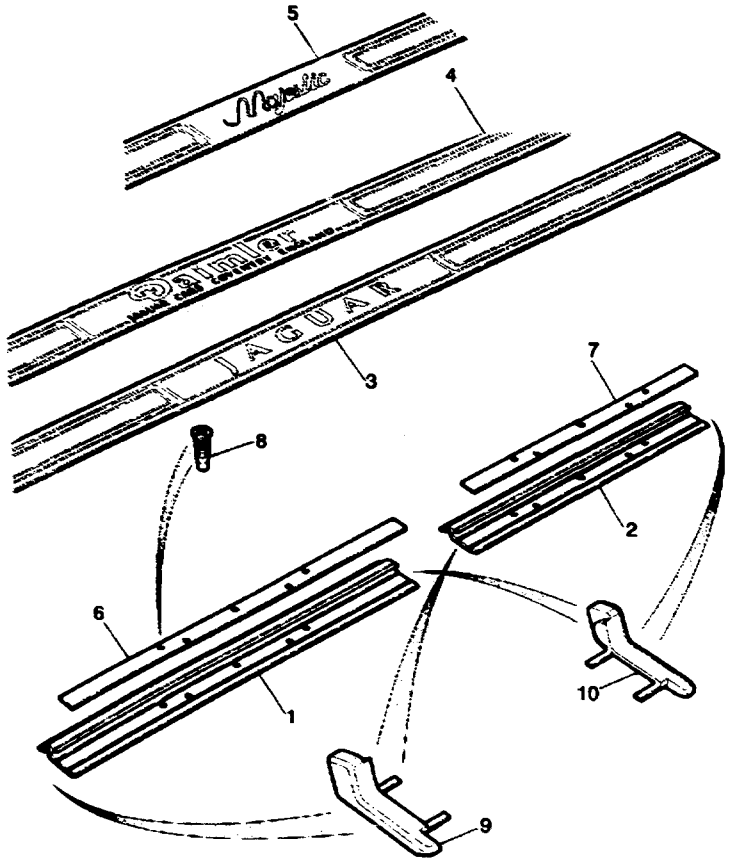


SV4535

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	9890	Treadplate-front	NLA	(1)	Use BDC7804.
1	BDC	7804	Treadplate-front	NLA	(2)	Use BEC21878.
1	BEC	21878	Treadplate-front	2	(3)	
2	BCC	3690	Treadplate-rear	NLA	(4)	Use BCC9891.
2	BCC	9891	Treadplate-rear	NLA	(5)	Use BDC7805.
2	BDC	7805	Treadplate-rear	NLA	(2)	Use BEC21879.
2	BEC	21879	Treadplate-rear	2	(3)	
3	BBC	5530	Treadplate insert-front-Jaguar	NLA	(6)	Use BEC21889.
3	BEC	21889	Treadplate insert-front-Jaguar	2	(7)	
3	BBC	4928	Treadplate insert-rear -Jaguar	NLA	(6)	Use BEC21888.
3	BEC	21888	Treadplate insert-rear -Jaguar	2	(7)	
4	BBC	5531	Treadplate insert-front-Daimler	NLA	(6)	Use BEC21887.
4	BEC	21887	Treadplate insert-front-Daimler	2	(7)	
4	BBC	4795	Treadplate insert-rear -Daimler	NLA	(6)	Use BEC21886.
4	BEC	21886	Treadplate insert-rear -Daimler	2	(7)	
5	BEC	8490	Treadplate insert-front-Majestic	2	(8)	
5	BEC	8491	Treadplate insert-rear -Majestic	2	(8)	

CHANGE POINTS:

(1) To (V) 552734
(2) From (V) 552735 To (V) 668099
(3) From (V) 668100
(4) To (V) 524374
(5) From (V) 524375 To (V) 552734
(6) To (V) 664999
(7) From (V) 665000
(8) From (V) 633352

TREADPLATE AND FINISHER

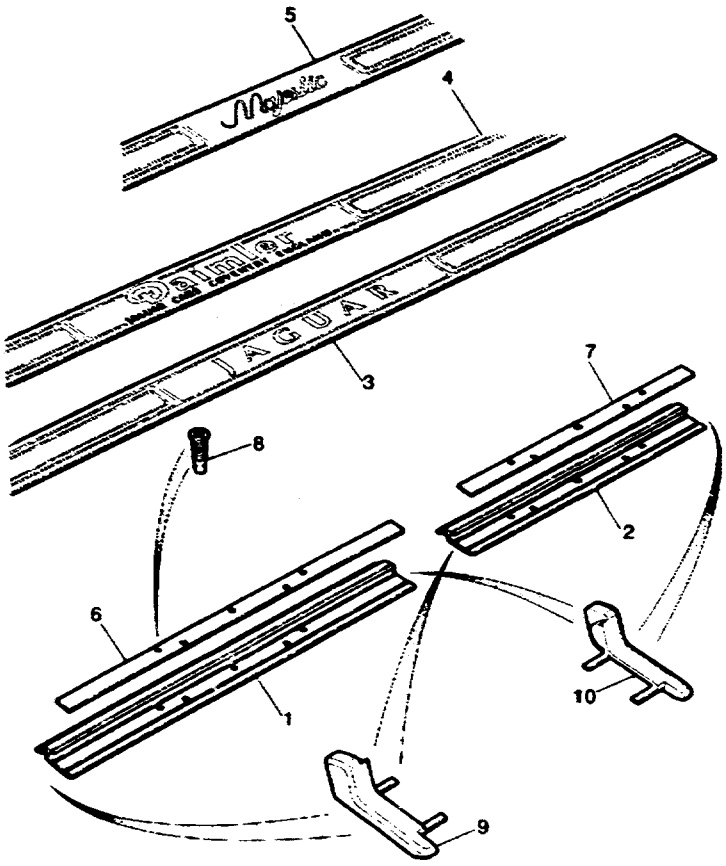

SV4535

Illus	Part Number		Description	Quantity	Change Point	Remarks
6	BCC	2690	Magnetic strip-front	2		
7	BCC	2691	Magnetic strip-rear	2		
8	BD	48977	Paint clearing screw-M6	20		
9	BBC	4842	Treadplate endcap -RH	NLA	(1)	Use BCC9680.
9	BCC	9680	Treadplate endcap -RH	NLA	(2)	Use BDC7808.
9	BDC	7808	Treadplate endcap -RH	NLA	(3)	Use BEC22404.
9	BEC	22404	Treadplate endcap -RH	4		
10	BBC	4843	Treadplate endcap -LH	NLA	(1)	Use BCC9681.
10	BCC	9681	Treadplate endcap -LH	NLA	(2)	Use BDC7809.
10	BDC	7809	Treadplate endcap -LH	NLA	(3)	Use BEC22405.
10	BEC	22405	Treadplate endcap -LH	4		


CHANGE POINTS:


(1) To (V) 524374

(2) From (V) 524375 To (V) 552734

(3) From (V) 552735

SCUTTLE SIDE CASING

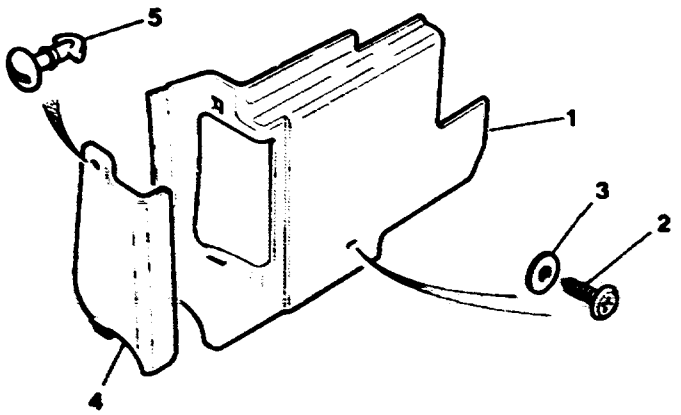

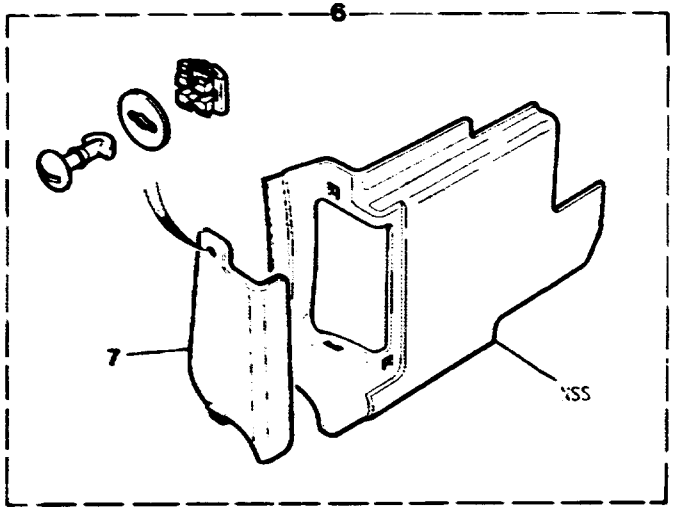


YS5342

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	9766 *4*	Scuttle side casing-RH	1	(1)	
1	BDC	6462 *4*	Scuttle side casing-RH	1	(2)	Except vertical slot
1	BDC	8060 *9*	Scuttle side casing-RH-for colour codes see front of fiche	1	(2)	Vertical slot
1	BDC	8060 AFR	Scuttle side casing-RH-Buckskin	NLA	(2)	Use JLM10684AFR.
1	JLM	10684 AFR	Scuttle side casing-RH	NLA		
1	BBC	9767 *4*	Scuttle side casing-LH	1	(1)	
1	BDC	6463 *4*	Scuttle side casing-LH	1	(2)	Except vertical slot
1	BDC	8061 *9*	Scuttle side casing-LH-for colour codes see front of fiche	1	(2)	Vertical slot
1	BDC	8061 AFR	Scuttle side casing-LH-Buckskin	NLA	(2)	Use JLM10685AFR.
1	JLM	10685 AFR	Scuttle side casing-LH	NLA		Vertical slot
2	AD	608053 J	Self tapping screw	1		
3	WK	608213 J	Cup washer	1		
	AK	608081 J	Spire nut	1		
4	BBC	4766 *4*	Cover-RH	1	(1)	
4	BDC	6498 *4*	Cover-RH	1	(2)	Except vertical slot
4	BDC	8056 *9*	Cover-RH-for colour codes see front of fiche	1	(2)	Vertical slot
4	BDC	8056 AFR	Cover-RH-Buckskin	1	(2)	Vertical slot
4	BBC	4767 *4*	Cover-LH	1	(1)	
4	BBC	6499 *4*	Cover-LH	1	(2)	Except vertical slot
4	BDC	8057 *9*	Cover-LH-for colour codes see front of fiche	1	(2)	Vertical slot
4	BDC	8057 AFR	Cover-LH-Buckskin	1	(2)	Vertical slot
	DBC	5943	Label-24 way	NLA		
5	AGU	1877 *4*	Turnbuckle stud-cover to scuttle side casing-for colour codes see front of fiche	2		
5	AGU	1877 HEZ	Turnbuckle stud-cover to scuttle side casing-Parchment	2		
6	JLM	10684 *9*	SCUTTLE SIDE CASING KIT -RH	1		
6	JLM	10685 *9*	SCUTTLE SIDE CASING KIT -LH	1		
7	BEC	9472 *9*	• Cover-RH	1		Part of JLM106849.
7	BEC	9473 *9*	• Cover-LH	1		Part of JLM106859.

CHANGE POINTS:
(1) To (V) 556850
(2) From (V) 556851

AIR DUCT/ECU COVER-SCUTTLE CASING

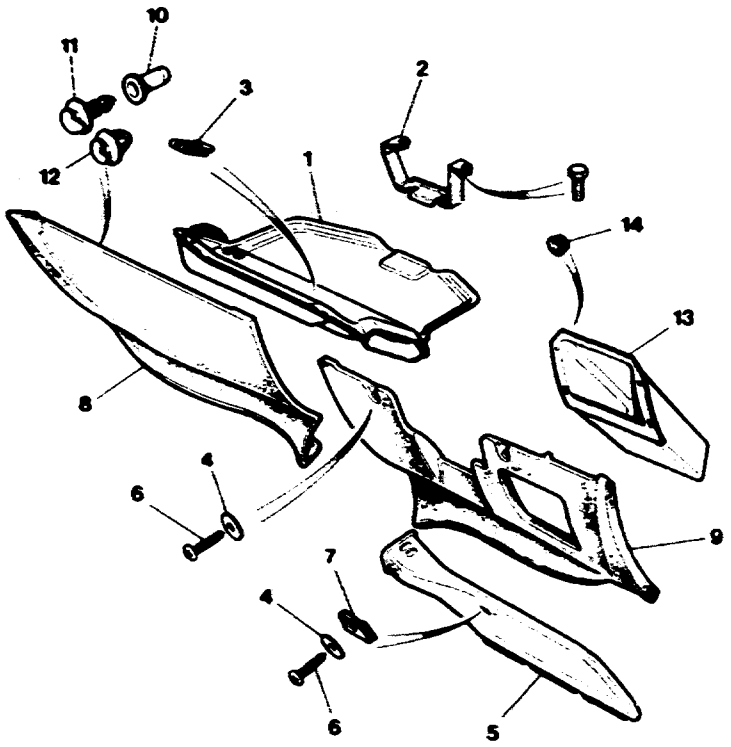


VS4753/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	MMB 6905AA	Air duct/control module cover	1		RHD
1	MMB 6905BA	Air duct/control module cover	1		LHD
2	BCC 5923	Air duct/cover support bracket-passenger side	NLA		Use BEC7851.
2	BEC 7851	Air duct/cover support bracket	NLA		
	BCC 5772	Support bracket-edge finisher	2		
3	AK 610021J	Spire nut	1		
	AB 610051J	Flanged head screw	2		
	AK 610051J	Captive spring nut -no.10	1		
4	WC 105001J	Plain washer	5		
	BBC 3934	Intermediate air duct -RH	NLA		Use BEC5220.
	BEC 5220	Intermediate air duct -RH	1		Passenger side;LHD
	BBC 3935	Intermediate air duct -LH	NLA		Use BEC5221.
	BEC 5221	Intermediate air duct -LH	1		Passenger side;RHD
5	BDC 9212	Air duct-RH	NLA		Use CCC4482.
5	CCC 4482	Air duct-RH	NLA		Use MMB6891AA.
5	MMB 6891AA	Air duct-RH	1		Driver's side;RHD
5	BDC 9213	Air duct-LH	1		Driver's side;LHD
6	AGU 1497	Sems screw-self tapping	NLA		Use JZH100005.
6	JZH 100005	Sems screw-self tapping	9		
7	AK 606141J	Captive nut-no.8	3		
	AGU 1498	Self tapping screw	NLA		Use JZH100006.
	JZH 100006	Self tapping screw	2		
	BCC 4798	Fastener	NLA		
	BBC 9988	Clip-console to underscuttle	2		

INTERIOR TRIM AND LININGS

BODY INTERIOR FIXTURES AND FITTINGS

AIR DUCT/ECU COVER-SCUTTLE CASING

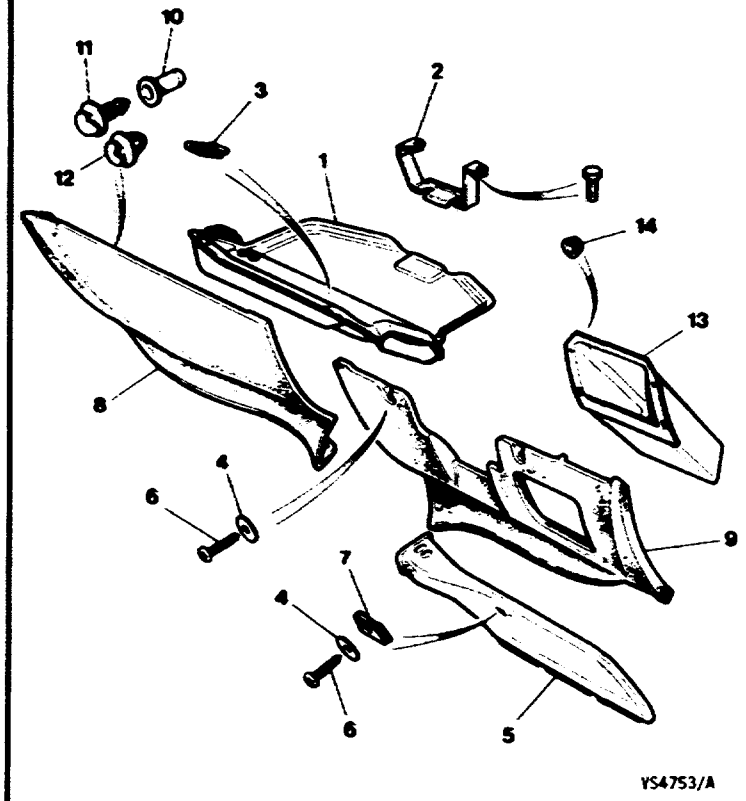


YS4753/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
8	BDC	3033 *1*	Underscuttle pad-LH	1	(1)	RHD
8	BEC	8415 *2*	Underscuttle pad-LH	1	(2)	RHD
9	BDC	3030 *1*	Underscuttle pad-RH	1		RHD
9	BDC	3032 *1*	Underscuttle pad-RH	1	(1)	LHD
9	BEC	8414 *2*	Underscuttle pad-RH	1	(2)	LHD
8	BDC	3031 *1*	Underscuttle pad-LH	1		LHD
10	AGU	2388 J	Friction bush-short	5		
	AGU	1498	Self tapping screw	NLA		Use JZH100006.
	JZH	100006	Self tapping screw	2		
11	AGU	1425 J	Fastner stud	5		
	KTP	100002	Trim clip-red	5		
12	BD	37071	Fastener stud	3		
	DRC	5582	Lokut nut	NLA		Use BD48954.
	BD	48954	Lokut nut	4		
13	BBC	1716	Driver's oddment box	1		
14	AGU	1534	Nut-M4	4		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

A, B AND C-POST FINISHER

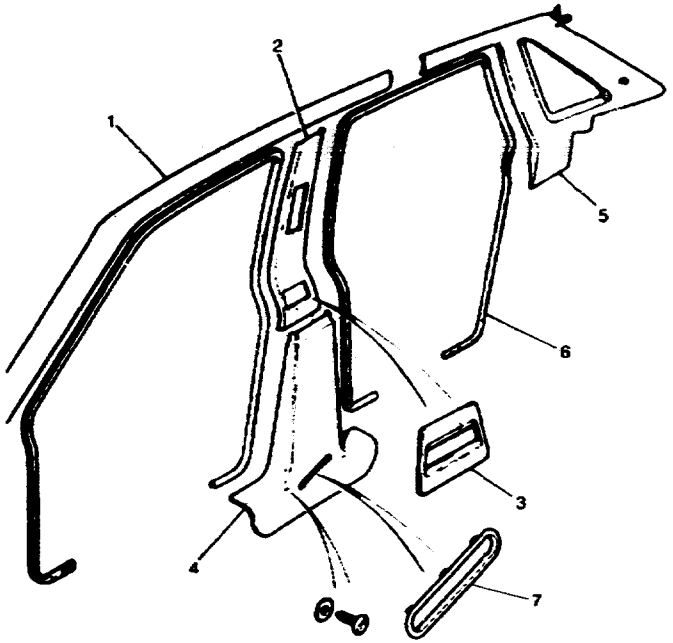


SV4600C

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BDC 5094	A-post and cantrail finisher-RH	NLA		Use BDC5094AEE.
1	BDC 5094 AEE	A-post and cantrail finisher-RH-Doeskin	NLA		Use BEC19056AEE.
1	BEC 19056 AEE	A-post and cantrail finisher-RH-Doeskin	1		
1	BDC 5094 LDY	A-post and cantrail finisher-RH-Savile grey	NLA	(1)	Use BEC19056LDY.
1	BEC 19056 LDY	A-post and cantrail finisher-RH-Savile grey	1		
1	BDC 5095	A-post and cantrail finisher-LH	NLA		Use BDC5095AEE.
1	BDC 5095 AEE	A-post and cantrail finisher-LH-Doeskin	NLA		Use BEC19057AEE.
1	BEC 19057 AEE	A-post and cantrail finisher-LH-Doeskin	1		
1	BDC 5095 LDY	A-post and cantrail finisher-LH-Savile grey	1	(1)	
2	BCC 7682 AEE	B/C-post finisher-RH upper	NLA		Use BEC16136AEE.
2	BEC 16136 AEE	B/C-post finisher-RH upper-Doeskin	NLA		Use BEC18256AEE.
2	BEC 18256 AEE	B/C-post finisher-RH upper-Doeskin	NLA		Use HMB1440AAAEE.
2	HMB 1440AA AEE	B/C-post finisher-RH upper-Doeskin	NLA		
2	BCC 7682 LDY	B/C-post finisher-RH upper	NLA	(1)	Use BEC16136LDY.
2	BEC 16136 LDY	B/C-post finisher-RH upper-Savile grey	NLA		Use BEC18256LDY.
2	BEC 18256 LDY	B/C-post finisher-RH upper-Savile grey	NLA		Use HMB1440AALDY.
2	HMB 1440AA LDY	B/C-post finisher-RH upper-Savile grey	1		
2	BCC 7683 AEE	B/C-post finisher-LH upper-Doeskin	1		
2	BCC 7683 LDY	B/C-post finisher-LH upper-Savile grey	NLA	(1)	Use BEC16137LDY.
2	BEC 16137 LDY	B/C-post finisher-LH upper-Savile grey	NLA		Use BEC18257LDY.
2	BEC 18257 LDY	B/C-post finisher-LH upper-Savile grey	NLA		Use HMB1441AALDY.
2	HMB 1441AA LDY	B/C-post finisher-LH upper-Savile grey	NLA		
3	BBC 2176 AEE	B/C-post bezel-RH upper-Doeskin	1		
3	BBC 2176 LDY	B/C-post bezel-RH upper-Savile grey	1	(1)	
3	BBC 2177 AEE	B/C-post bezel-LH upper-Doeskin	1		
3	BBC 2177 LDY	B/C-post bezel-LH upper-Savile grey	1	(1)	

CHANGE POINTS:
(1) From (V) 594576


A, B AND C-POST FINISHER

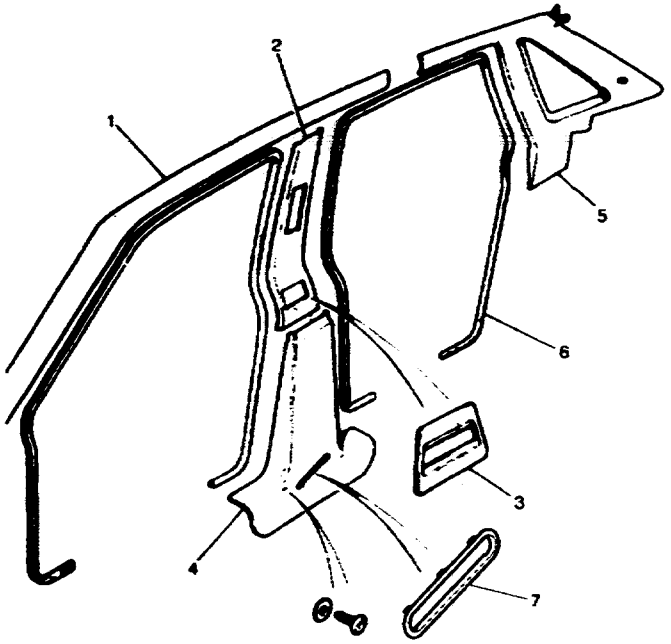

SV4600C

Illus	Part Number		Description	Quantity	Change Point	Remarks
	AGU	2388 J	Friction bush-short	12		
	AFU	4137 J	Finisher stud	12		
	BBC	9337	Seal-A-post-facia	NLA		
	BCC	5328 AEE	Cover-A-post to facia-Doeskin	2		
	BCC	5328 LDY	Cover-A-post to facia-Savile grey	2	(1)	
	BD	37523	Edge clip-A-post-facia	6		
4	BCC	4164 AE	B/C-post finisher-RH lower-Biscuit	NLA		
4	BCC	4684 *2*	B/C-post finisher-RH lower-colour keyed	1		
4	BCC	4165 AE	B/C-post finisher-LH lower-Biscuit	NLA		
4	BCC	4685 *2*	B/C-post finisher-LH lower-colour keyed	1		
	AGU	2229 *5*	Stud-colour keyed	2		
	AGU	1863	Fixing bush-stud	2		
7	BCC	3837	B/C-post bezel-lower -chrome	2		


CHANGE POINTS:
(1) From (V) 594576

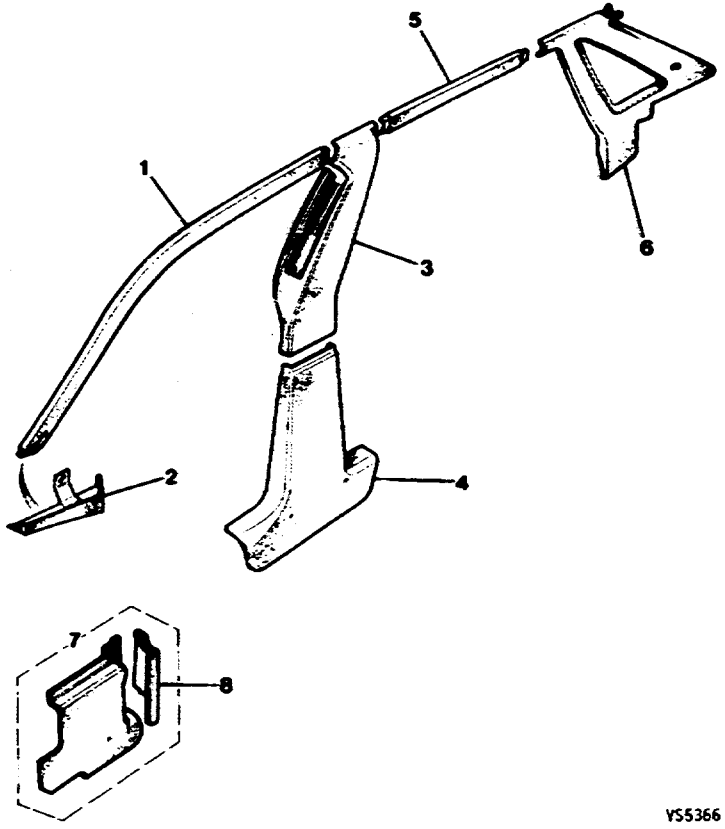

YS5366

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	3030 SDC	A-post finisher and cantrail -RH-Coffee	NLA		
1	BEC	3031 SDC	A-post finisher and cantrail -LH-Coffee	1		
2	BEC	1814 SDC	Finisher-A-post to facia-RH-Coffee	NLA		Use BEC15091SDC.
2	BEC	15091 SDC	Finisher-A-post to facia-RH-Coffee	1		
2	BEC	1813 SDC	Finisher-A-post to facia-LH-Coffee	NLA		Use BEC15090SDC.
2	BEC	15090 SDC	Finisher-A-post to facia-LH-Coffee	1		
3	BEC	5582 SDC	B/C-post finisher-RH upper-Coffee	NLA		
3	BEC	5583 SDC	B/C-post finisher-LH upper-Coffee	NLA		
4	BEC	8818 NDR	B/C-post finisher-RH lower-Cream	1		
4	BEC	8819 NDR	B/C-post finisher-LH lower-Cream	1		
5	BDC	9650 SDC	Cantrail finisher-RH rear-Coffee	1		
5	BDC	9651 SDC	Cantrail finisher-LH rear-Coffee	1		
6	BEC	8800 SDC	D-post finisher -RH-Coffee	NLA		Use BEC18044SDC.
6	BEC	18044 SDC	D-post finisher -RH-Coffee	1		
6	BEC	8801 SDC	D-post finisher -LH-Coffee	NLA		Use BEC18045SDC.
6	BEC	18045 SDC	D-post finisher -LH-Coffee	1		
7	JLM	10684 NDR	Scuttle side casing kit -RH-Cream	NLA		
7	JLM	10685 NDR	Scuttle side casing kit -LH-Cream	NLA		
8	BEC	9472 NDR	Module inspection cover-RH-Cream	1		
8	BEC	9473 NDR	Module inspection cover-LH-Cream	1		
	AGU	1877 NDR	Turnbuckle stud-cover to scuttle side casing-Cream	1		
	AGU	2229 NDR	Turn stud-Cream	2		

D-POST FINISHER

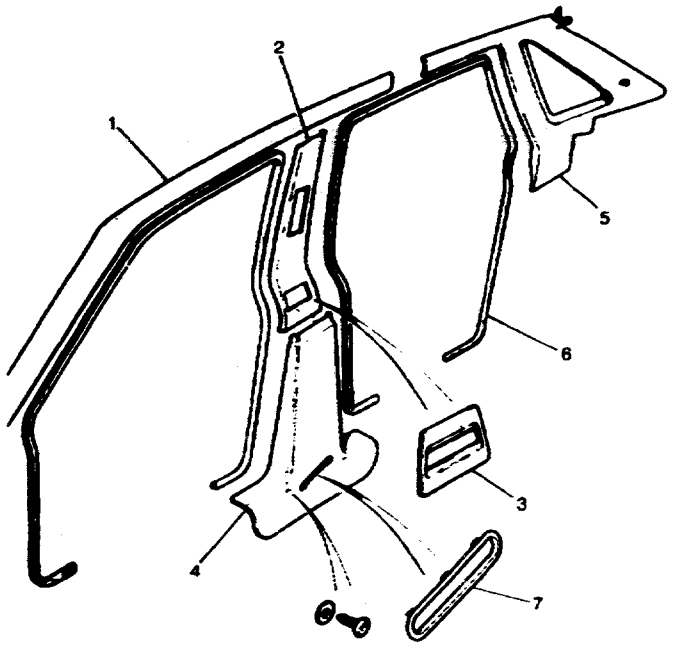

SV4600C


Illus	Part Number	Description	Quantity	Change Point	Remarks
5	BCC 3606 AEE	D-post finisher -RH-without lamp-Doeskin	NLA	(1)	Use BEC14940AEE.
5	BCC 3606 LDY	D-post finisher -RH-without lamp-Savile grey	NLA	(1)	Use BEC14940LDY.
5	BEC 14940 AEE	D-post finisher -RH-without lamp-Doeskin	NLA		Use BEC21790AEE.
5	BEC 14940 LDY	D-post finisher -RH-without lamp-Savile grey	NLA		Use BEC21790LDY.
5	BEC 18056 AEE	D-post finisher -RH-without lamp-Doeskin	NLA	(2)	Use BEC21790AEE.
5	BEC 18056 LDY	D-post finisher -RH-without lamp-Savile grey	NLA	(2)	Use BEC21790LDY.
5	BEC 21790 AEE	D-post finisher -RH-without lamp-Doeskin	1	(3)	
5	BEC 21790 LDY	D-post finisher -RH-without lamp-Savile grey	1	(3)	
5	BCC 3607 AEE	D-post finisher -LH-without lamp-Doeskin	NLA	(1)	Use BEC14941AEE.
5	BCC 3607 LDY	D-post finisher -LH-without lamp-Savile grey	NLA	(1)	Use BEC14941LDY.
5	BEC 14941 AEE	D-post finisher -LH-without lamp-Doeskin	NLA		Use BEC21791AEE.
5	BEC 14941 LDY	D-post finisher -LH-without lamp-Savile grey	NLA		Use BEC21791LDY.
5	BEC 18057 AEE	D-post finisher -LH-without lamp-Doeskin	NLA	(2)	Use BEC21791AEE.
5	BEC 18057 LDY	D-post finisher -LH-without lamp-Savile grey	NLA	(2)	Use BEC21791LDY.
5	BEC 21791 AEE	D-post finisher -LH-without lamp-Doeskin	1	(3)	
5	BEC 21791 LDY	D-post finisher -LH-without lamp-Savile grey	1	(3)	
5	BCC 3608 AEE	D-post finisher -RH-with lamp-Doeskin	NLA	(1)	Use BEC14938AEE.
5	BCC 3608 LDY	D-post finisher -RH-with lamp-Savile grey	NLA	(1)	Use BEC14938LDY.
5	BEC 14938 AEE	D-post finisher -RH-with lamp-Doeskin	NLA		Use BEC21788AEE.
5	BEC 14938 LDY	D-post finisher -RH-with lamp-Savile grey	NLA		Use BEC21788LDY.
5	BEC 18058 AEE	D-post finisher -RH-with lamp-Doeskin	NLA	(4)	Use BEC21788AEE.
5	BEC 18058 LDY	D-post finisher -RH-with lamp-Savile grey	NLA	(4)	Use BEC21788LDY.
5	BEC 21788 AEE	D-post finisher -RH-with lamp-Doeskin	1	(5)	
5	BEC 21788 LDY	D-post finisher -RH-with lamp-Savile grey	1	(5)	

CHANGE POINTS:

(1) From (V) 594576 To (V) 656798
(2) From (V) 656799 To (V) 661359
(3) From (V) 661360
(4) From (V) 656799 To (V) 659579
(5) From (V) 659580

D-POST FINISHER

Illus	Part Number	Description	Quantity	Change Point	Remarks
5	BCC 3609 AEE	D-post finisher -LH-with lamp-Doeskin	NLA	(1)	Use BEC14939AEE.
5	BCC 3609 LDY	D-post finisher -LH-with lamp-Savile grey	NLA	(1)	Use BEC14939LDY.
5	BEC 14939 AEE	D-post finisher -LH-with lamp-Doeskin	NLA		Use BEC21789AEE.
5	BEC 14939 LDY	D-post finisher -LH-with lamp-Savile grey	NLA		Use BEC21789LDY.
5	BEC 18059 AEE	D-post finisher -LH-with lamp-Doeskin	NLA	(2)	Use BEC21789AEE.
5	BEC 18059 LDY	D-post finisher -LH-with lamp-Savile grey	NLA	(2)	Use BEC21789LDY.
5	BEC 21789 AEE	D-post finisher -LH-with lamp-Doeskin	1	(3)	
5	BEC 21789 LDY	D-post finisher -LH-with lamp-Savile grey	1	(3)	
	AGU 2378	Trim fastener	12		
	BD 47802	Socket retainer	12		
	AV 606081 J	Self drilling screw-no.6	2		

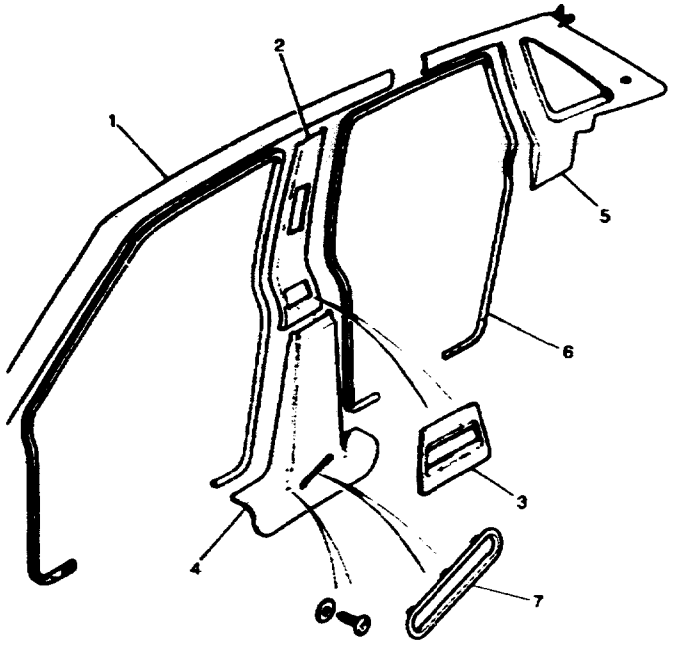

SV4600C


CHANGE POINTS:

(1) From (V) 594576 To (V) 656798

(2) From (V) 656799 To (V) 659579

(3) From (V) 659580

UNDERSCUTTLE CASING-PASSIVE RESTRAINT

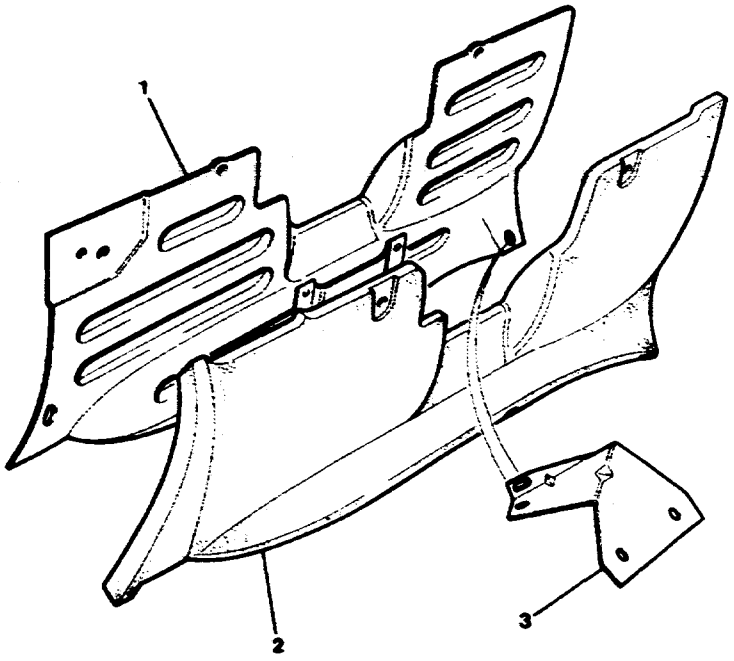


YS5405

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	1345	Steel armature/knee bolster -driver's side	1		
1	BEC	1342	Steel armature/knee bolster -passenger side	1		
2	BEC	1528 "2"	Underscuttle pad-driver's side	1		
2	BEC	10941 "9"	Underscuttle pad-driver's side	1		
2	BEC	1529 "2"	Underscuttle pad-passenger side	1		
2	BEC	10940 "9"	Underscuttle pad-passenger side	1		
	BD	48967	Grip nut -M6	3		
	AGU	2577	Pan head screw-M6 x 21mm	3		
	WA	106044 J	Washer-M6-black finish	3		
	BD	36292	Underscuttle pad steel armature washer -M6-black	1		
	WA	106041 J	Plain washer-0.25" i/d	3		
3	BEC	1352	Mounting bracket-underscuttle pad to tunnel -RH	1		
3	BEC	1353	Mounting bracket-underscuttle pad to tunnel -LH	1		
	AGU	1413 J	Self tapping screw-no.8 x 19mm	2		Underscuttle pad to mounting bracket
	AK	608161 J	Spire fastener-no.8	1		
	AGU	1425 J	Fastner stud	5		
	KTP	100002	Trim clip-red	5	(1)	
	AJU	1136	Stud retainer-fir tree	NLA		
	AGU	2388 J	Friction bush-short	5	(1)	
	DAC	40273	Edge protection strip-241mm	NLA		Use DAC402716.
	DAC	402716	Edge protection strip	A/R		
	FS	108201 J	Washer faced setscrew-M8 x 20mm	2		
	BD	48967	Grip nut -M6	1		

CHANGE POINTS:
(1) From (V) 662688

INTERIOR TRIM AND LININGS
BODY INTERIOR FIXTURES AND FITTINGS
UPPER TRIM-PASSIVE RESTRAINT

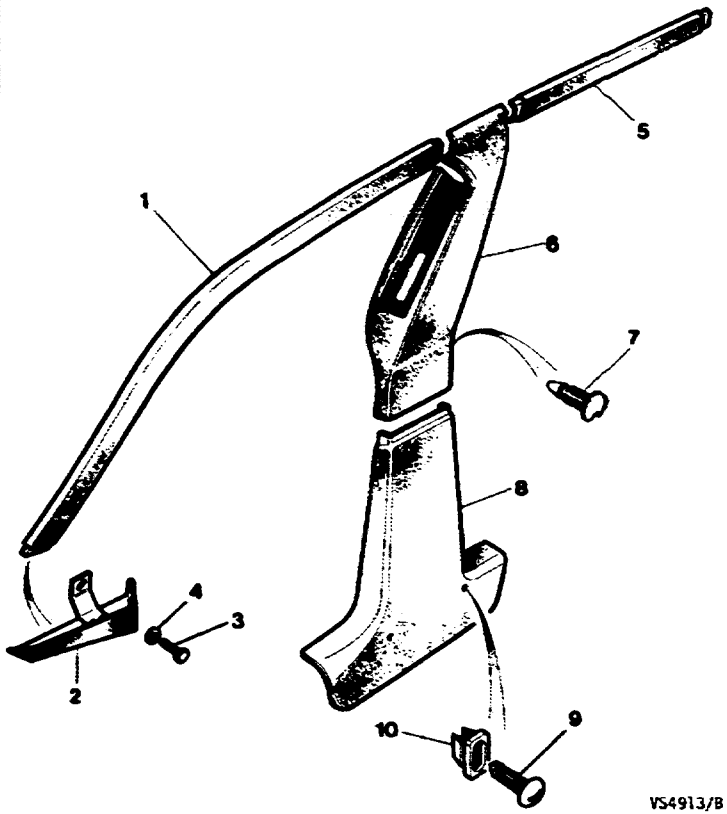

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 3030 AEE	A-post and cantrail finisher-RH-Doeskin	1		
1	BEC 3030 LDY	A-post and cantrail finisher-RH-Savile grey	1		
1	BEC 3031 AEE	A-post and cantrail finisher-LH-Doeskin	1		
1	BEC 3031 LDY	A-post and cantrail finisher-LH-Savile grey	1		
2	BDC 9400	Finisher-RH-Doeskin	NLA	(1)	Use BEC1814AEE.
2	BEC 1814 AEE	Finisher-RH-Doeskin	NLA	(2)	Use BEC15090AEE.
2	BEC 1814 LDY	Finisher-RH-Savile grey	NLA	(2)	Use BEC15090LDY.
2	BEC 15090 AEE	Finisher-RH-Doeskin	1	(3)	
2	BEC 15090 LDY	Finisher-RH-Savile grey	NLA	(3)	
2	BDC 9401	Finisher-LH-Doeskin	NLA	(1)	Use BEC1813AEE.
2	BEC 1813 AEE	Finisher-LH-Doeskin	NLA	(2)	Use BEC15091AEE.
2	BEC 1813 LDY	Finisher-LH-Savile grey	NLA	(2)	Use BEC15091LDY.
2	BEC 15091 AEE	Finisher-LH-Doeskin	1	(3)	
2	BEC 15091 LDY	Finisher-LH-Savile grey	NLA	(3)	
3	AZ 612064 J	Self tapping screw	NLA		
4	WA 106044 J	Washer-M6-black finish	2		
5	BDC 9650 AEE	Cantrail finisher-RH rear	1		
5	BDC 9651 AEE	Cantrail finisher-LH rear	1		
	AGU 2388 J	Friction bush-short	2		
	AFU 4137 J	Finisher stud	2		
6	BEC 5582 AEE	B/C-post finisher-RH upper-Doeskin	NLA		
6	BEC 5582 LDY	B/C-post finisher-RH upper-Savile grey	NLA		
6	BEC 5583 AEE	B/C-post finisher-LH upper-Doeskin	NLA		
6	BEC 5583 LDY	B/C-post finisher-LH upper-Savile grey	NLA		
7	AGU 2550 J	Stud-upper	3		
8	BDC 3156 *1*	B/C-post finisher-RH lower	1		
8	BDC 3157 *1*	B/C-post finisher-LH lower	1		
9	AGU 2229 *1*	B/C-post stud-lower	4		
10	AGU 1863 J	Bush-stud	4		


CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576 To (V) 656137

(3) From (V) 656138

DOOR APERTURE EDGE FINISHER

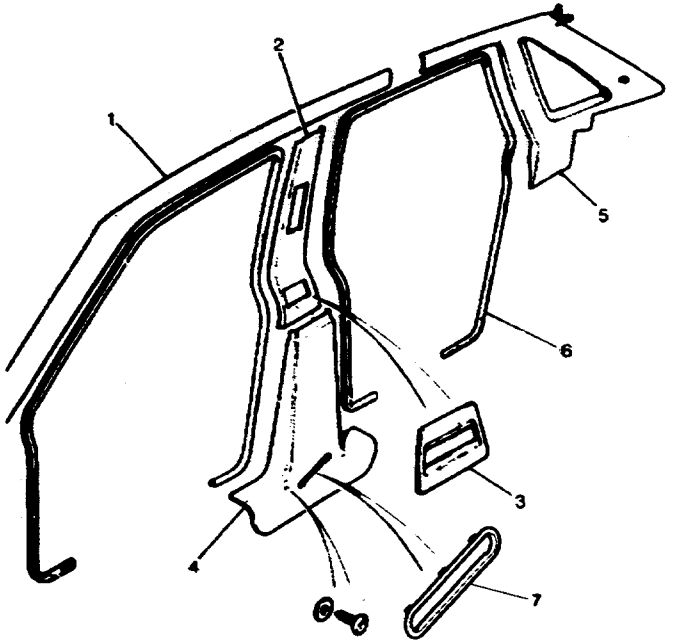

SV4600C

Illus	Part Number		Description	Quantity	Change Point	Remarks
6	BCC	5741 XE	Aperture edge finisher-front/rear door-Doeskin	4	(1)	
6	BCC	5741 LZ	Aperture edge finisher-front/rear door-Warm charcoal	NLA	(1)	Use BDC5508LZ qty 2 with BDC5509LZ qty 2.
6	BDC	5508 XE	Aperture edge finisher-RH front/LH rear door-Doeskin	NLA	(2)	Use BDC7806XE.
6	BDC	5508 LZ	Aperture edge finisher-RH front/LH rear door-Warm charcoal	NLA	(2)	Use BDC7806LZ.
6	BDC	5509 XE	Aperture edge finisher-LH front/RH rear door-Doeskin	NLA	(2)	Use BDC7807XE.
6	BDC	5509 LZ	Aperture edge finisher-LH front/RH rear door-Warm charcoal	NLA	(2)	Use BDC7807LZ.
6	BDC	7806 XE	Aperture edge finisher-RH front/LH rear door-Doeskin	NLA	(3)	
6	BDC	7806 LZ	Aperture edge finisher-RH front/LH rear door-Warm charcoal	NLA	(3)	
6	BDC	7807 XE	Aperture edge finisher-LH front/RH rear door-Doeskin	NLA	(3)	
6	BDC	7807 LZ	Aperture edge finisher-LH front/RH rear door-Warm charcoal	NLA	(3)	


CHANGE POINTS:

(1) To (V) 524374

(2) From (V) 524375 To (V) 552734

(3) From (V) 552735 To (V) 642199

DOOR APERTURE EDGE FINISHER

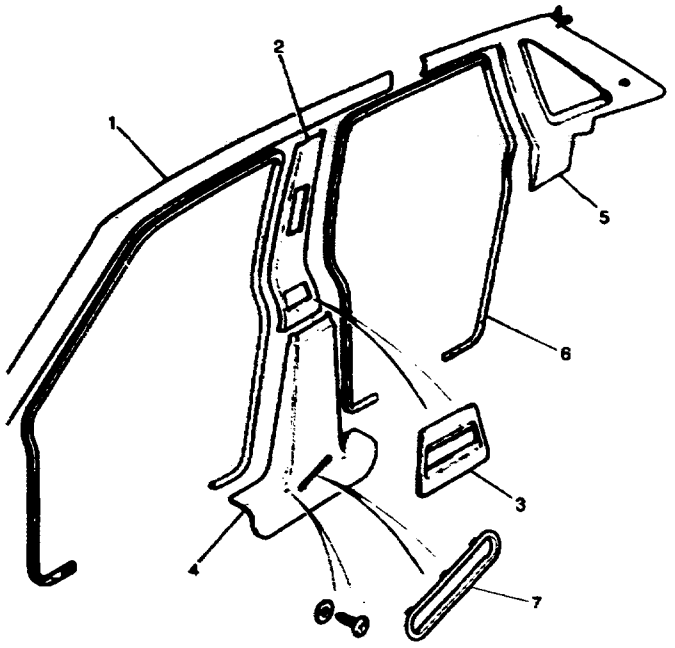

SV4600C


Illus	Part Number	Description	Quantity	Change Point	Remarks
6	BEC 12446 AEE	Aperture edge finisher-RH front/LH rear door-Doeskin	NLA	(1)	Use BEC16464AEE.
6	BEC 12446 LDY	Aperture edge finisher-RH front/LH rear door-Savile grey	NLA	(1)	Use BEC16464LDY.
6	BEC 12446 LEG	Aperture edge finisher-RH front/LH rear door-Warm charcoal	NLA	(1)	Use BEC16464LEG.
6	BEC 12447 AEE	Aperture edge finisher-LH front/RH rear door-Doeskin	NLA	(1)	Use BEC16465AEE.
6	BEC 12447 LDY	Aperture edge finisher-LH front/RH rear door-Savile grey	NLA	(1)	Use BEC16465LDY.
6	BEC 12447 LEG	Aperture edge finisher-LH front/RH rear door-Warm charcoal	NLA	(1)	Use BEC16465LEG.
6	BEC 16464 AEE	Aperture edge finisher-RH front/LH rear door-Doeskin	2	(2)	
6	BEC 16464 LDY	Aperture edge finisher-RH front/LH rear door-Savile grey	2	(2)	
6	BEC 16464 LEG	Aperture edge finisher-RH front/LH rear door-Warm charcoal	2	(2)	
6	BEC 16465 AEE	Aperture edge finisher-LH front/RH rear door-Doeskin	NLA	(2)	
6	BEC 16465 LDY	Aperture edge finisher-LH front/RH rear door-Savile grey	2	(2)	
6	BEC 16465 LEG	Aperture edge finisher-LH front/RH rear door-Warm charcoal	2	(2)	

CHANGE POINTS:

(1) From (V) 642200 To (V) 657854

(2) From (V) 657855

ROOF CONSOLE

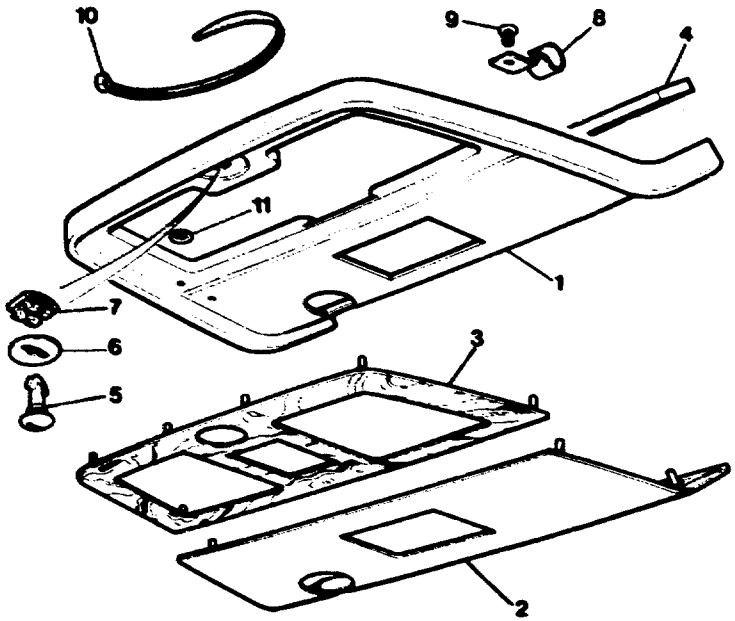


Illus	Part Number		Description	Quantity	Change Point	Remarks
	BCC	7883 ND	Roof console-assembly-Limestone	NLA	(1)	Use BDC4663.
	BDC	4663	Roof console-assembly-Limestone	NLA	(2)	Except sunroof
	BBC	7428 ND	Roof console-assembly-Limestone	NLA	(1)	Use BDC4661.
	BDC	4661	Roof console-assembly-Limestone	NLA	(2)	Sunroof
1	BEC	1920 NDD	Console-sub assembly-Limestone	1		Except infra red locking
1	BEC	1920 LDY	Console-sub assembly-Savile grey	1		Except infra red locking
1	BCC	9079	Console-sub assembly-Limestone	NLA	(1)	Use BEC1921NDD.
1	BEC	1921 NDD	Console-sub assembly-Limestone	1	(2)	Infra red locking
1	BEC	1921 LDY	Console-sub assembly-Savile grey	1		Infra red locking
1	BEC	8817 SDC	Console-sub assembly-Coffee	NLA	(3)	Majestic
2	BDC	4659 NDD	Roof console plate-without sunroof aperture-Limestone	1		Except infra red locking
2	BDC	4659 LDY	Roof console plate-leather-without sunroof aperture-Savile grey	1	(4)	Except infra red locking
2	BDC	4658 NDD	Roof console plate-with sunroof aperture-Limestone	1		Except infra red locking
2	BDC	4658 LDY	Roof console plate-cloth-with sunroof aperture-Savile grey	1		Except infra red locking
2	BEC	8815 SDC	Roof console plate-leather-with sunroof aperture-Coffee	1	(3)	Majestic;except infra red locking

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851
(3) From (V) 633352
(4) From (V) 594576

ROOF CONSOLE

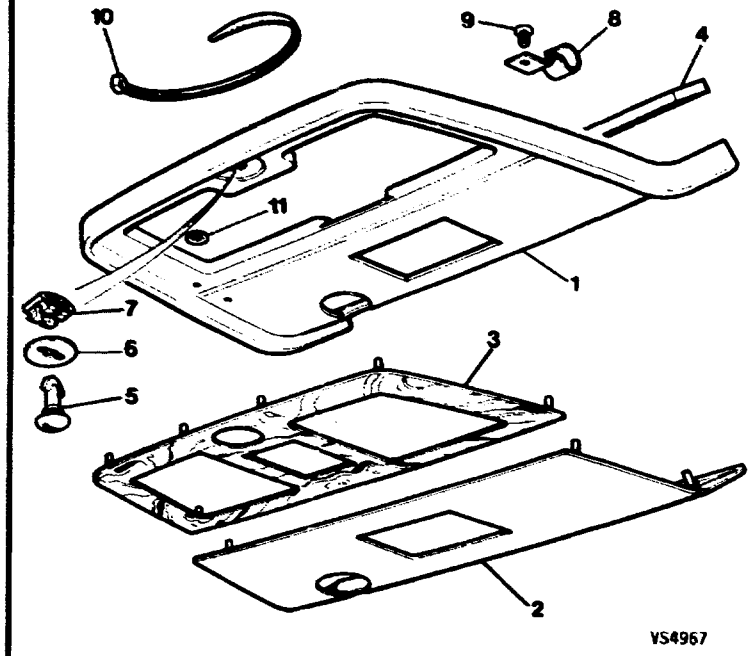


VS4967

Illus	Part Number		Description	Quantity	Change Point	Remarks
2	BCC	9080 NDD	Roof console plate-without sunroof aperture-Limestone	1	(1)	Infra red locking
2	BCC	9080 LDY	Roof console plate-cloth-without sunroof aperture-Savile grey	1	(1)	Infra red locking
2	BCC	9081 NDD	Roof console plate-with sunroof aperture-Limestone	1		Infra red locking
2	BCC	9081 LDY	Roof console plate-cloth-with sunroof aperture-Savile grey	1	(1)	Infra red locking
3	BBC	8620	Roof console veneer plate	1		Daimler/VDP
4	BBC	4861 1	Sealing strip-1250mm	1		Daimler/VDP
5	BBC	7531 PA	Console stud-Black	1		
5	BBC	7222 XE	Console stud-Doeskin	1		
5	BBC	7222 LDY	Console stud-Savile grey	NLA		
6	BD	461403	Dished washer	1		
7	BAC	2756	Clip	1		
8	BBC	4474	Spring clip	3		
9	AR	606021 J	Self tapping screw	3		
10	ADU	9028	Tie strap-7.75" long	1		
11	AN	103011 J	Push fix	10		
	BEC	3071	Roof seal strip	2		

CHANGE POINTS:
(1) From (V) 594576

GEARBOX COVER PLATES

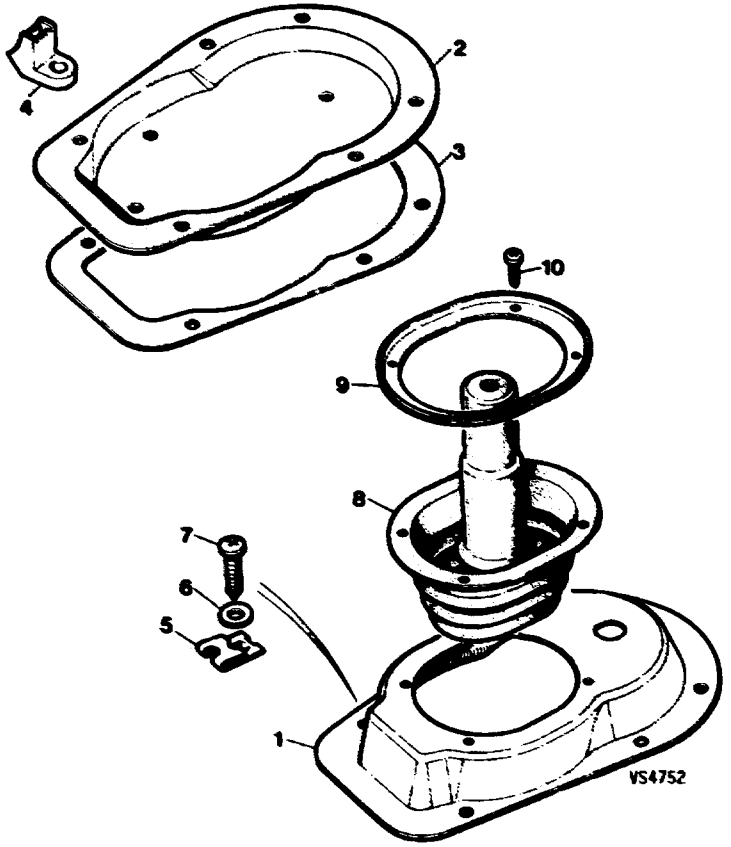


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BAC 3624	Gearbox cover plate	NLA	(1)	Use BCC7455.
1	BCC 7455	Gearbox cover plate	NLA	(2)	Manual
1	BEC 10969	Gearbox cover plate	NLA	(3)	Use HNA3490AA.
1	HNA 3490AA	Gearbox cover plate	1		Manual
2	BBC 8981	Gearbox cover plate	1		Automatic
3	BBC 1223	Gasket	1		
4	AGU 1548	Mounting cradle	1		
5	AJ 610011 J	Captive nut	NLA		
6	WC 702101 J	Plain washer-no.10	4	(4)	
7	AB 610051 J	Flanged head screw	6	(4)	
7	AA 610051 J	Flanged head screw-no.10 x 0.625"	6	(5)	
8	EAC 9997	Gear lever grommet	1		Manual
9	BAC 1215	Retaining ring	1		
10	JLM 307	Self tapping screw	NLA		Use DAZ4088C.
10	DAZ 4088C	Self tapping screw	4		
	BD 46958	Gearbox insulation pad	NLA		Use BEC21107.

CHANGE POINTS:


(1) To (V) 594575
(2) From (V) 594576 To (V) 629285
(3) From (V) 629286
(4) To (V) 589690
(5) From (V) 589691

PICNIC TRAY-DAIMLER/VDP

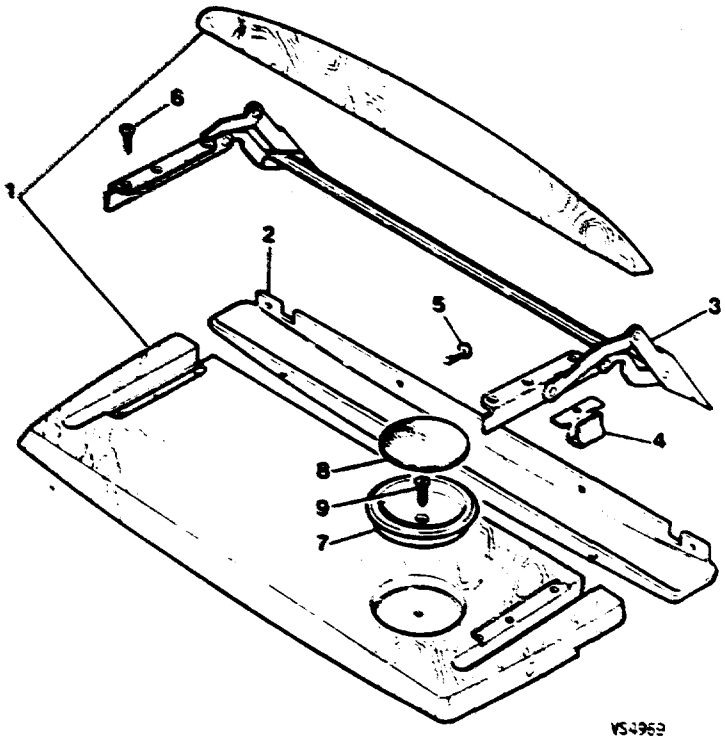

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1147	Picnic tray veneer kit	NLA		
1	JLM	1245	Picnic tray veneer kit-boxwood inlay	1	.....	Except Majestic
1	JLM	10863	Picnic tray veneer kit	1	.....	Majestic
2	BBC	7058 *1*	Picnic tray moulding-trimmed	2	(1)	
2	BEC	18503 *9*	Picnic tray moulding-trimmed	2	(2)	
2	BEC	8527 AEE	Picnic tray moulding-autolux leather-Doeskin	2	(2)	
2	BEC	8527 AEM	Picnic tray moulding-autolux leather-Magnolia	2	(2)	
2	BEC	8527 LDY	Picnic tray moulding-autolux leather-Savile grey	2	(2)	
2	BEC	8527 NDR	Picnic tray moulding-autolux leather-Cream	2	(3).....	Majestic
3	BBC	7054	Picnic tray hinge-assembly	1		
4	BBC	7062	Hinge stop clip	2		
5	AE	604033 J	Roundhead woodscrew -no.4	4		
6	AD	604033 J	Countersunk woodscrew-no.4	6		
7	BBC	7974	Dished tray cup holder	1		
8	BBC	7976	Dished tray -cloth	1		
9	AC	604021 J	Screw-self tapping-no.4	1		


CHANGE POINTS:
(1) To (V) 657335
(2) From (V) 657336
(3) From (V) 633352

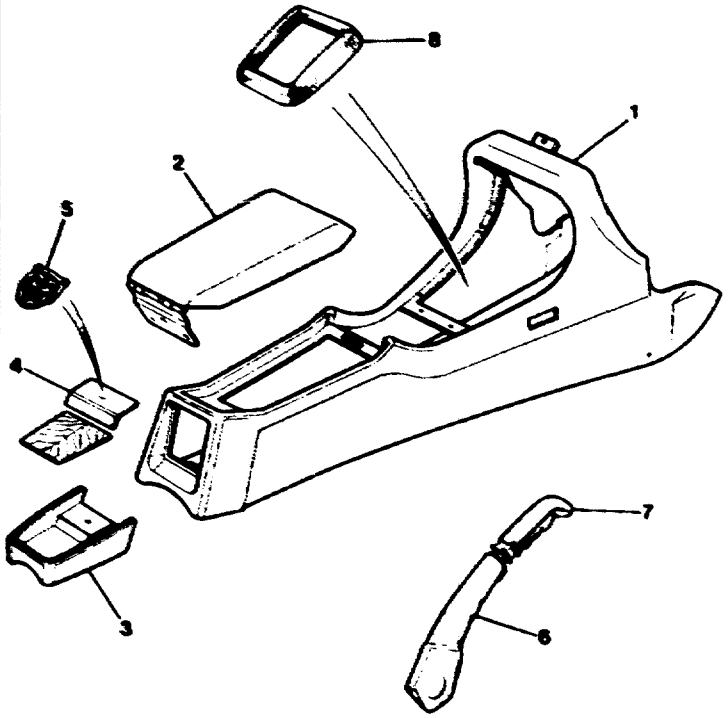

VS5367

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 12244 NDR	Centre console-Cream	1		
2	BEC 6729 NDR	Armrest lid-Cream	NLA		
3	BEC 5670 NDR	Centre console extension-rear -Cream	NLA		Use BEC16449NDR
3	BEC 16449 NDR	Centre console extension-assembly-rear -autolux leather-Cream	1		
4	BEC 9368 NDR	Cup tray finisher-autolux leather-Cream	1		
5	BEC 5669	Cup tray finisher badge -gold	1		
6	BEC 8797 NDR	Handbrake gaiter-Cream	NLA		
7	CCC 2641 SDC	Parkbrake handgrip-Coffee	1		
8	BEC 14886 SDC	Gearshift surround-Coffee	NLA		Use BEC15482SDC
8	BEC 15482 SDC	Gearshift surround-autolux leather-Coffee	1		

CENTRE CONSOLE AND ARMREST-FRONT

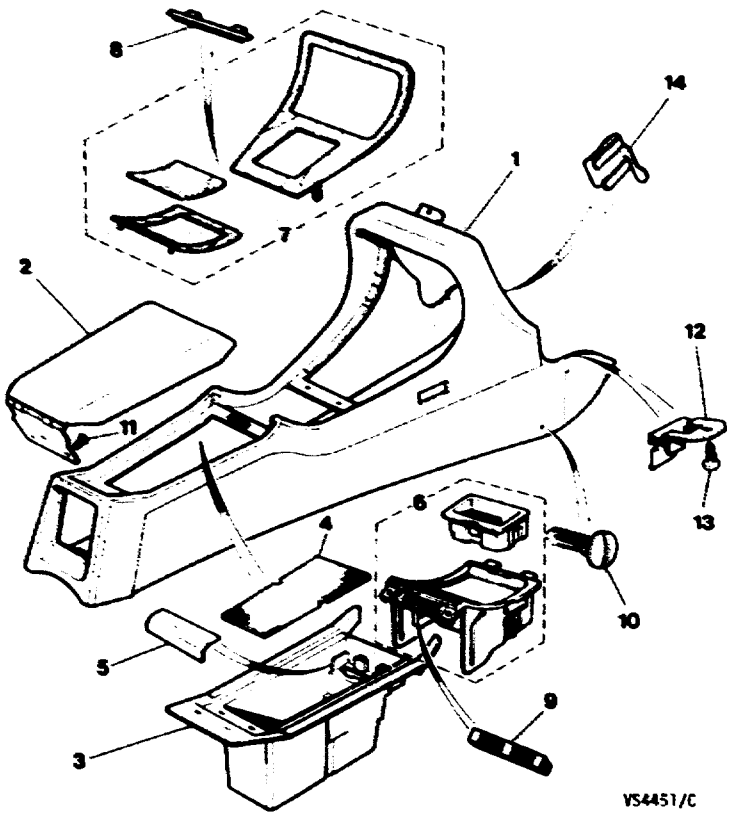


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	6098 *3*	Console-less armrest lid-ambla-not stitched	1	(1)	XJ6
1	BEC	4576 *2*	Console-less armrest lid-ambla-not stitched	1	(2)	XJ6
1	BCC	7560 *3*	Console-less armrest lid-ambla-stitched	1	(1)	XJ6;except seat heater
						Sovereign;except seat heater
1	BEC	4575 *2*	Console-less armrest lid-ambla-stitched	1	(2)	XJ6;except seat heater
						Sovereign;except seat heater
1	BCC	7559 *3*	Console-less armrest lid-ambla-stitched	1	(1)	XJ6;seat heater
						Sovereign;seat heater
1	BEC	4574 *2*	Console-less armrest lid-ambla-stitched	1	(2)	XJ6;seat heater
						Sovereign;seat heater
1	BCC	7484 *4*	Console-less armrest lid-leather-stitched	1	(1)	Daimler/VDP
						Sovereign
1	BEC	4572 *2*	Console-less armrest lid-leather-stitched	1	(2)	Daimler/VDP
						Sovereign
2	BBC	9308 *3*	Armrest lid-ambla	1	(3)	XJ6
2	BCC	6680 *3*	Armrest lid-ambla	1	(4)	XJ6
2	BCC	7561 *3*	Armrest lid-ambla-stitched	1		Sovereign
2	BCC	5595 *3*	Armrest lid-leather	1	(3)	Daimler/VDP
						Sovereign
2	BCC	6681 *3*	Armrest lid-leather	1	(4)	Daimler/VDP
						Sovereign
	BBC	8736 *3*	Telephone armrest lid -ambla	1		XJ6
	BBC	8735 *3*	Telephone armrest lid -leather	1		Daimler/VDP
						Sovereign

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 596955
(4) From (V) 596956

CENTRE CONSOLE AND ARMREST-FRONT

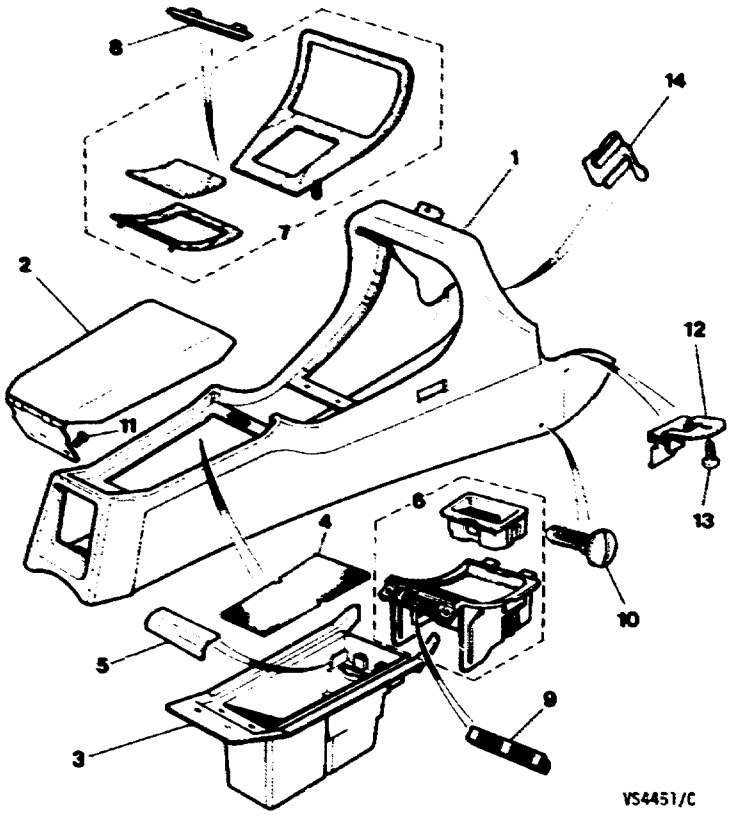


Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	9628	Armrest lid cubby box	NLA		Spring loaded cassette case;without stay
3	BDC	9630	Armrest lid cubby box	NLA		Use BDC9630LEG.
3	BDC	9630LEG	Armrest lid cubby box-Warm charcoal	1		Cassette rack
	BCC	2533	Armrest lid stay	1		
	BCC	2534	Friction bush stay	1		
	SE	104143J	Armrest lid stay screw			
	WA	104008J	Armrest lid stay washer	NLA		
4	BBC	4831	Cubby box carpet	NLA		Spring loaded cassette case
4	BCC	8034	Cubby box carpet	NLA		Cassette rack
5	BBC	4830LZ	Fusebox cover-Warm charcoal	NLA	(1)	
5	BDC	9634LEG	Fusebox cover-Warm charcoal	1	(2)	
6	BBC	6749	Ashtray-assembly	1	(1)	
6	BEC	17014	Ashtray-assembly	NLA	(2)	Use GMB7641AALEG.
6	GMB	7641AALEG	Ashtray-assembly-Warm charcoal	NLA	(2)	Use GMB7641ABLEG.
6	GMB	7641ABLEG	Ashtray-assembly-Warm charcoal	NLA	(2)	Use GMB7641ACLEG.
6	GMB	7641ACLEG	Ashtray-assembly-Warm charcoal	1	(2)	
7	JLM	1138	Centre console veneer kit-figured walnut	NLA	(1)	Use JLM12152 qty 1 with BEC14204 qty 1 with GNA7628BLEG qty 1 with GMB7662AALEG qty 1.
7	JLM	1970	Centre console veneer kit-figured walnut	NLA	(3)	Use JLM10469.
7	JLM	1972	Centre console veneer kit-figured walnut	NLA	(3)	Use JLM10472.
7	JLM	10469	Centre console veneer kit-figured walnut	1	(4)	XJ6;manual
7	JLM	10472	Centre console veneer kit-figured walnut	NLA	(4)	Use JLM12152 qty 1 with GMB7662AALEG qty 1.

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286

CENTRE CONSOLE AND ARMREST-FRONT

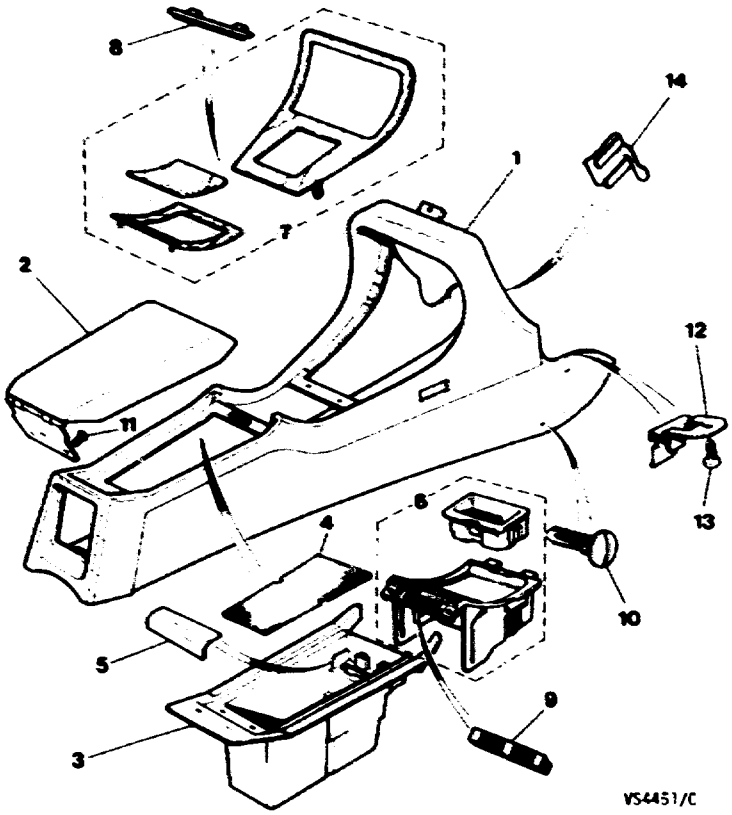

Illus	Part Number		Description	Quantity	Change Point	Remarks
7	JLM	1142	Centre console veneer kit-burr walnut	NLA	(1)	Use JLM12154 qty 1 with GNA782686LEG qty 1 with BEC14204 qty 1 with GMB7662AALEG qty 1.
7	JLM	1973	Centre console veneer kit-burr walnut	NLA	(2)	Use JLM10471.
7	JLM	1975	Centre console veneer kit-burr walnut	NLA	(2)	Use JLM10470.
7	JLM	10471	Centre console veneer kit-burr walnut	1	(3)	Daimler/VDP;manual
7	JLM	10470	Centre console veneer kit-burr walnut	NLA	(3)	Use JLM12154 qty 1 with GMB7662AALEG qty 1.
	BBC	9138	Console finisher fixing cup	2		
	AN	103011J	Push fix	8		
8	BBC	7314	Console edge finisher	1		
	BCC	5051	Stud-edge finisher/ski slope	2		
	BD	48989	Wing nut	2		
9	AGU	1529	Magnetic catch-assembly	1		
	BD	48049	Retainer clip-upper	1		
	SE	103101J	Screw-M3 x 10mm	4		
	AB	608051J	Self tapping screw	NLA		Use DA608051J.
	DA	608051J	Self tapping screw-no.8	2		
	AGU	2011	Push fix-rear vent	NLA		Use AGU2071.
	AGU	2071	Push fix	2		
10	AGU	2229*3*	Console stud	2		
	BBC	9868	Cam plate	2		
	BBC	6097	U-type spring nut	2		
	AB	612061J	Self drilling screw-no.10-console to facia	2		
	WJ	106001J	Plain washer-M6	2		
11	AB	608044J	Self tapping pan head screw-console to armrest lid	2		
12	BBC	4789	Captive nut-console to underscuttle	2		
13	AGU	1497	Sems screw-self tapping	NLA		Use JZH100005.
13	JZH	100005	Sems screw-self tapping	4		
14	BBC	9998	Clip	NLA		


CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576 To (V) 629285

(3) From (V) 629286

GEARSHIFT APERTURE FINISHER

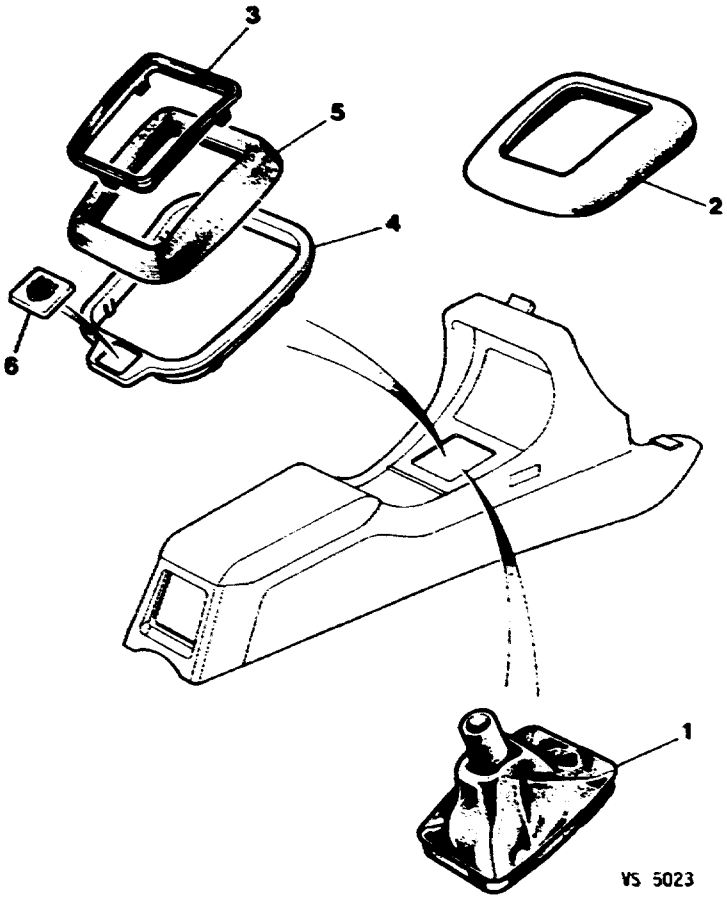


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 5036	Gear lever gaiter-manual	1	(1)	
1	BCC 7454	Gear lever gaiter-manual	1	(2)	
2	BCC 6239	J-gate finisher -rubber	NLA	(1)	
3	BBC 4689	Retaining ring-chrome	NLA		Use BEC10473.
3	BEC 10473	Retaining ring	1		
4	BEC 10060	Gearshift aperture finisher	NLA	(3)	Use BEC14378.
4	BEC 14378	Gearshift aperture finisher	1	(4)	Sport mode switch
4	BEC 9504	Gearshift aperture finisher	NLA	(5)	Use BEC9504LEG.
4	BEC 9504 LEG	Gearshift aperture finisher-Warm charcoal	NLA	(5)	Use GNA7826ABLEG.
4	GNA 7826AB LEG	Gearshift aperture finisher-Warm charcoal	NLA	(5)	Use GNA7826ACLEG.
4	GNA 7826AC LEG	Gearshift aperture finisher-Warm charcoal	1	(5)	Sport mode switch
4	BEC 10059	Gearshift aperture finisher	NLA	(3)	Use BEC9505.
4	BEC 9505	Gearshift aperture finisher	NLA	(5)	Use BEC9505LEG.
4	BEC 9505 LEG	Gearshift aperture finisher-Warm charcoal	NLA	(5)	Use GNA7826BBLEG.
4	GNA 7826BB LEG	Gearshift aperture finisher-Warm charcoal	NLA	(5)	Use GNA7826BCLEG.
4	GNA 7826BC LEG	Gearshift aperture finisher-Warm charcoal	1	(5)	Except sport mode switch
5	BEC 3066 LEG	Gearshift surround-leather-Warm charcoal	NLA	(2)	Use BEC10493LEG.
5	BEC 10493 LEG	Gearshift surround-leather-Warm charcoal	NLA		Use BEC14865LEG.
5	BEC 14865 LEG	Gearshift surround-leather-Warm charcoal	NLA		Use BEC15481LEG.
5	BEC 15481 LEG	Gearshift surround-leather-Warm charcoal	NLA		Use BEC15482LEG.
5	BEC 15482 LEG	Gearshift surround-autolux leather-Warm charcoal	1		
6	BEC 4643	Badge	NLA		Use BEC14204.
6	BEC 14204	Badge	1		Except sport mode switch

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) From (V) 594576 To (V) 637523
(4) To (V) 637523
(5) From (V) 637524

CENTRE CONSOLE REAR EXTENSION

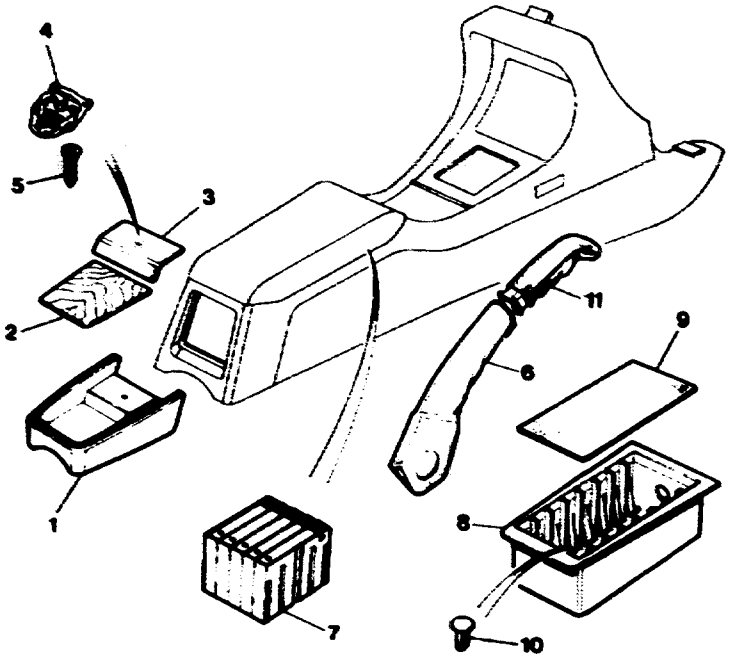


VS 4780/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	6591 *4*	Centre console extension-assembly-rear	1	(1)	Daimler/VDP
1	BDC	9384 *4*	Centre console extension-assembly-rear	1	(2)	
1	BEC	16448 *9*	Centre console extension-assembly-rear -for colour codes see front of fiche	1	(3)	
1	BEC	16449 AEE	Centre console extension-assembly-rear -autolux leather-Doeskin	1	(3)	
1	BEC	16449 AEM	Centre console extension-assembly-rear -autolux leather-Magnolia	1	(3)	
1	BEC	16449 LDY	Centre console extension-assembly-rear -autolux leather-Savile grey	1	(3)	
2	JLM	1244	Veneer kit-console extension/rear vent finishers-burr walnut	1		
3	BBC	8976 *5*	Cup tray finisher	1		Jaguar;Vanden Plas
3	BBC	8977 *5*	Cup tray finisher	1		Daimler;except Vanden Plas
4	BBC	8972	Cup tray finisher badge -silver-Jaguar	1		
4	BBC	8973	Cup tray finisher badge -silver-Daimler	1		
5	AC	606041 J	Self tapping screw	NLA		
	AGU	2096	Nut retainer-console extension	2		
	SE	105121 J	Screw-M5 x 12mm	2		
	WC	105001 J	Plain washer	2		
	WE	105001 J	Serrated washer-console extension	2		
6	BBC	7458 *5*	Handbrake gaiter-for colour codes see front of fiche	1		RHD
6	BEC	16968 AEE	Handbrake gaiter-autolux leather-Doeskin	1	(4)	RHD
6	BEC	16968 AEM	Handbrake gaiter-autolux leather-Magnolia	1	(4)	RHD
6	BEC	16968 LDY	Handbrake gaiter-autolux leather-Savile grey	1	(4)	RHD
6	BBC	7459 *5*	Handbrake gaiter-for colour codes see front of fiche	1		LHD
6	BEC	8797 AEE	Handbrake gaiter-autolux leather-Doeskin	1	(4)	LHD
6	BEC	8797 AEM	Handbrake gaiter-autolux leather-Magnolia	1	(4)	LHD
6	BEC	8797 LDY	Handbrake gaiter-autolux leather-Savile grey	1	(4)	LHD

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 662061
(3) From (V) 662062
(4) From (V) 657336

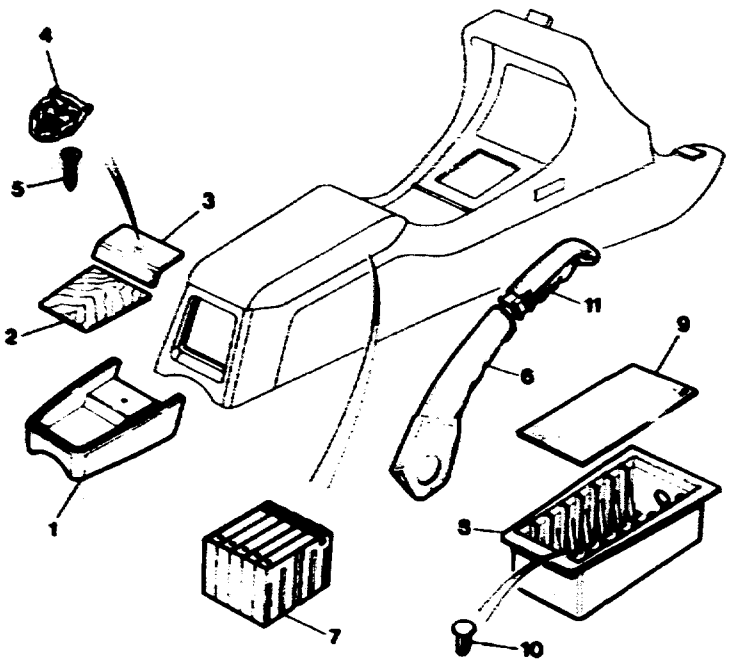


VS 4780/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
7	BCC	1002	Cassette case-spring loaded	1		
8	BCC	8290	Cassette rack	1	(1)	Except radiophone
8	BDC	9732 LEG	Cassette rack	1	(2)	Except radiophone
8	BCC	8292	Cassette rack	1	(1)	Radiophone
8	BEC	5624 LEG	Cassette rack	1	(2)	Radiophone
9	BDC	5020	Foam insert	1		
10	AGU	2530	Push in fastener-Black	2		
11	CAC	9928	Parkbrake handgrip-rubber	1		XJ6
						Sovereign
11	CBC	4127	Parkbrake handgrip-leather	NLA	(3)	Use CBC7796
11	CBC	7796	Parkbrake handgrip-leather	1	(4)	Daimler/VDP

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 556850
(4) From (V) 556851

DOOR CASING-ARMREST/POCKET-DAIMLER/VDP

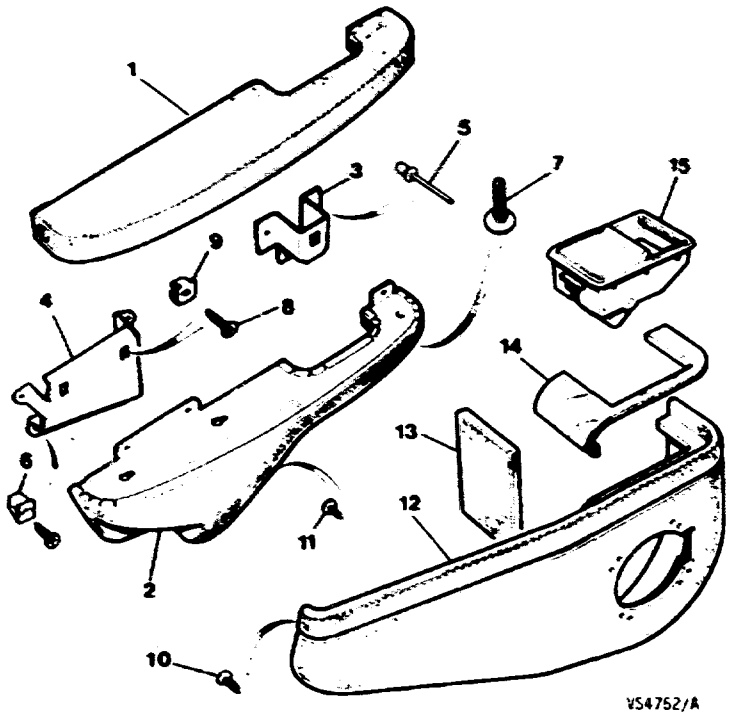


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	9884 *5*	Door armrest-assembly-RH top	2		
1	BBC	9885 *5*	Door armrest-assembly-LH top	2		
1	BCC	8498 *5*	Door armrest-assembly-RH bottom	2	(1)	
1	BCC	5944 *1*	Door armrest-assembly-RH bottom	2	(2)	
1	BEC	16684 *J*	Door armrest-assembly-RH bottom-leather	2	(3)	
1	BCC	8499 *5*	Door armrest-assembly-LH bottom	2	(1)	
1	BCC	5945 *1*	Door armrest-assembly-LH bottom	2	(2)	
1	BEC	16685 *J*	Door armrest-assembly-LH bottom-leather	2	(3)	
3	BBC	9485	Armrest mounting bracket-top	4		
4	BBC	9486	Armrest mounting bracket-RH	2		
4	BBC	9487	Armrest mounting bracket-LH	2		
	AJU	1136 J	Stud retainer	24		
6	DRC	5582	Lokut nut	NLA		Use BD48954
6	BD	48954	Lokut nut	8		
5	RU	612123 J	Pop rivet	12		
	WJ	105001 J	Plain washer	4		
6	ACU	4009 J	Lokut nut	NLA		Use BBC3242
6	BBC	3242	Lokut nut-RH/LH	4		
7	AGU	2229 *5*	Stud-colour keyed	8		
8	AB	610081 J	Screw-self tapping	12		
9	SJK	3039	Expansion nut	12		
10	DA	608051 J	Self tapping screw-no.8	8		
	BD	13102	Pronged button	2		
	AGU	1018	Casing clip	7		

CHANGE POINTS:

(1) To (V) 629285


(2) From (V) 629286 To (V) 657335

(3) From (V) 657336

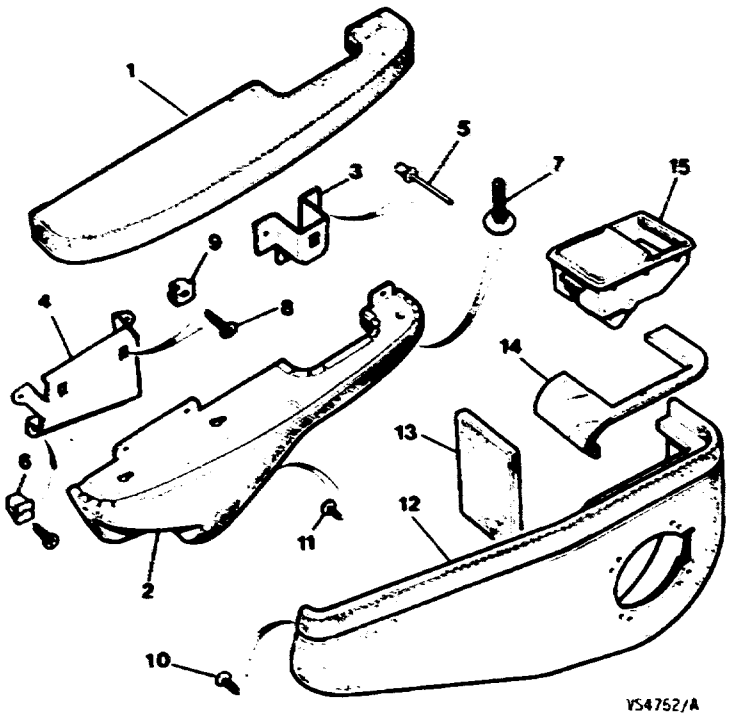

Illus	Part Number	Description	Quantity	Change Point	Remarks
11	AB 608041 J	Self tapping screw	NLA		Use AB608051J.
11	AB 608051 J	Self tapping screw	NLA		Use DA608051J.
11	DA 608051 J	Self tapping screw-no.8	2		
	WJ 105001 J	Plain washer	2		
12	BCC 6178 *4*	Door pocket -assembly-RH front	2		
12	BCC 6179 *4*	Door pocket -assembly-LH front	2		
13	BBC 6470 *4*	Door trim panel -assembly-RH	2		
13	BBC 6471 *4*	Door trim panel -assembly-LH	2		
14	BDC 6542	Switch mounting plate-veneer-RH	2		
14	BDC 6543	Switch mounting plate-veneer-LH	2		
15	BDC 8989	Door casing ashtray	3		

DOOR POCKET/ARMREST

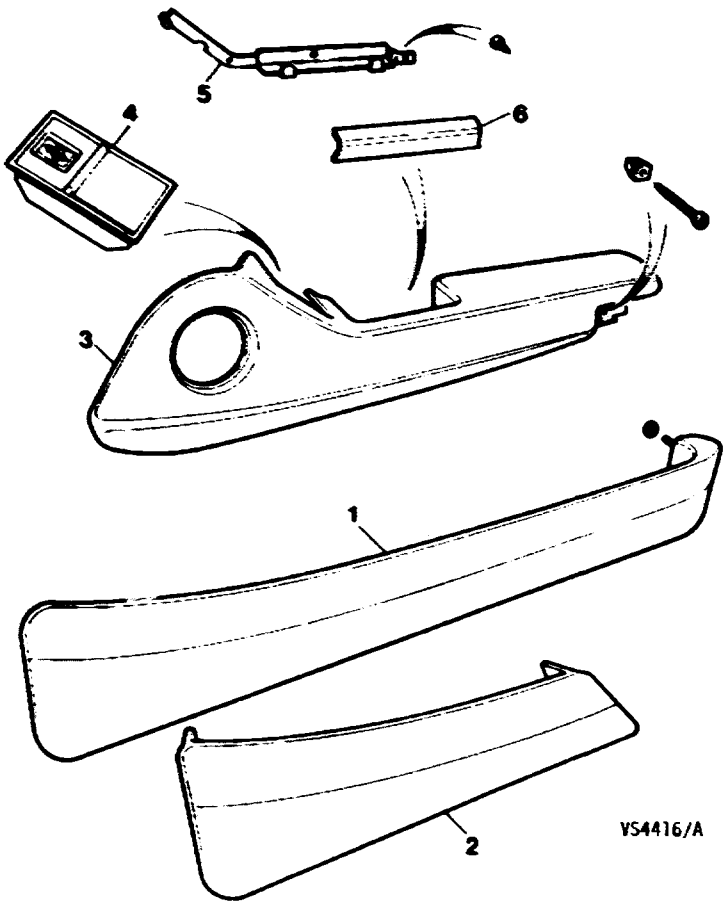


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	9912 *3*	Door pocket -RH front	1		XJ6;except USA and Canada
1	BCC	6752 *3*	Door pocket -RH front	1		Canada;USA;XJ6
1	BCC	6752 *3*	Door pocket -RH front	1	(1)	Sovereign;except Canada and USA
1	BEC	16586 *9*	Door pocket -RH front	1		Canada;USA;Sovereign
1	BEC	16586 *9*	Door pocket -RH front	1	(2)	Sovereign;except Canada and USA
1	BBC	9913 *3*	Door pocket -LH front	1		XJ6;except USA and Canada
1	BCC	6753 *3*	Door pocket -LH front	1		Canada;USA;XJ6
1	BCC	6753 *3*	Door pocket -LH front	1	(1)	Sovereign;except Canada and USA
1	BEC	16587 *9*	Door pocket -LH front	1		Canada;USA;Sovereign
1	BEC	16587 *9*	Door pocket -LH front	1	(2)	Sovereign;except Canada and USA
2	BBC	9918 *3*	Door pocket -RH rear	1		XJ6;except USA and Canada
2	BCC	6744 *3*	Door pocket -RH rear	1		Canada;USA;XJ6
2	BCC	6744 *3*	Door pocket -RH rear	1	(1)	Sovereign;except Canada and USA
2	BEC	16576 *9*	Door pocket -RH rear	1		Canada;USA;Sovereign
2	BEC	16576 *9*	Door pocket -RH rear	1	(2)	Sovereign;except Canada and USA
2	BBC	9919 *3*	Door pocket -LH rear	1		XJ6;except USA and Canada
2	BCC	6745 *3*	Door pocket -LH rear	1		Canada;USA;XJ6
2	BCC	6745 *3*	Door pocket -LH rear	1	(1)	Sovereign;except Canada and USA
2	BEC	16577 *9*	Door pocket -LH rear	1		Canada;USA;Sovereign
2	BEC	16577 *9*	Door pocket -LH rear	1	(2)	Sovereign;except Canada and USA

CHANGE POINTS:
(1) To (V) 657854
(2) From (V) 657855

INTERIOR TRIM AND LININGS

DOOR INTERIOR TRIM AND FINISHERS

DOOR POCKET/ARMREST

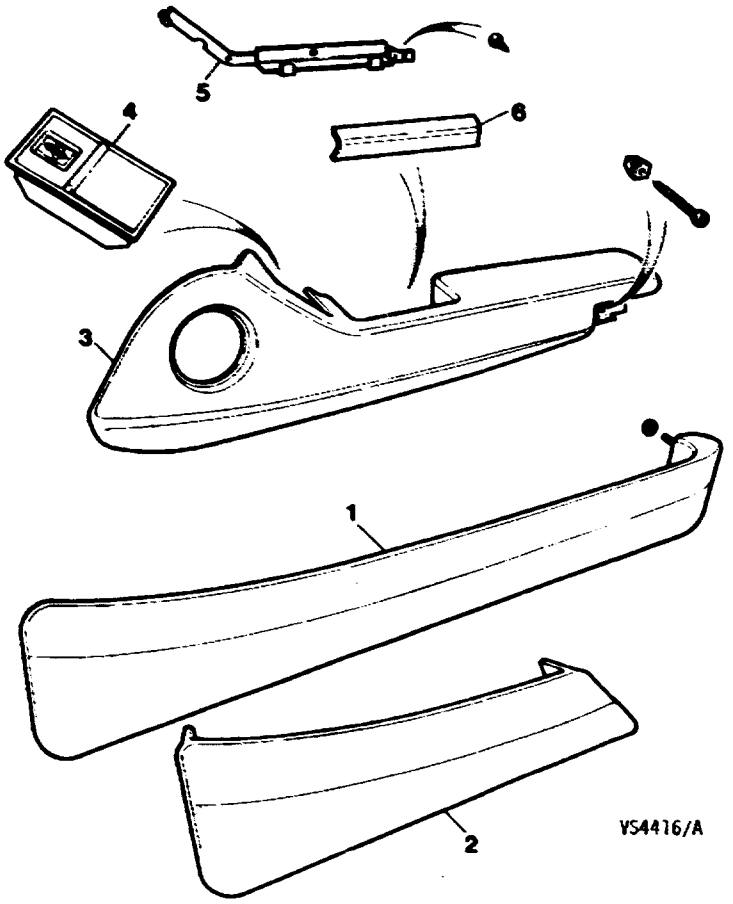


Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	9372*3*	Door armrest-RH front/rear	2	(1)	Jaguar;except USA and Canada
3	BCC	6764*3*	Door armrest-RH front/rear	2	(1)	Canada;USA;Jaguar
3	BEC	4346*2*	Door armrest-RH front/rear	2	(2)	Jaguar;except USA and Canada
3	BEC	2228*2*	Door armrest-RH front/rear	2	(2)	Canada;USA;Jaguar
3	BEC	16544*9*	Door armrest-RH front/rear	1	(3)	
3	BBC	9373*3*	Door armrest-LH front/rear	2	(1)	Jaguar;except USA and Canada
3	BCC	6765*3*	Door armrest-LH front/rear	2	(1)	Canada;USA;Jaguar
3	BEC	4347*2*	Door armrest-LH front/rear	2	(2)	Jaguar;except USA and Canada
3	BEC	2227*2*	Door armrest-LH front/rear	2	(2)	Canada;USA;Jaguar
3	BEC	16545*9*	Door armrest-LH front/rear	1	(3)	
4	BDC	8969	Door casing ashtray	3		
5	BDC	6524	Door support bracket -RH	NLA	(4)	Use BEC16192.
5	BEC	16192	Door support bracket -RH	2	(3)	
5	BDC	6525	Door support bracket -LH	NLA	(4)	Use BEC16193.
5	BEC	16193	Door support bracket -LH	2	(3)	
	AC	604021J	Screw-self tapping-no.4	5		
	BD	48954	Lokut nut	4		
	BHA	4359	Edge clip	2		
	BBC	8546*3*	Finger pull base plate	2	(4)	
	BEC	16539*9*	Finger pull base plate-leather	2	(3)	
6	BDC	6663*2*	Finger pull backplate -trimmed	2	(4)	
6	BEC	16540*9*	Finger pull backplate -assembly-leather	2	(3)	
	AB	608051J	Self tapping screw	NLA		Use DA608051J.
	DA	608051J	Self tapping screw-no.8	2		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) From (V) 657855
(4) To (V) 657854

DOOR CASING-FRONT

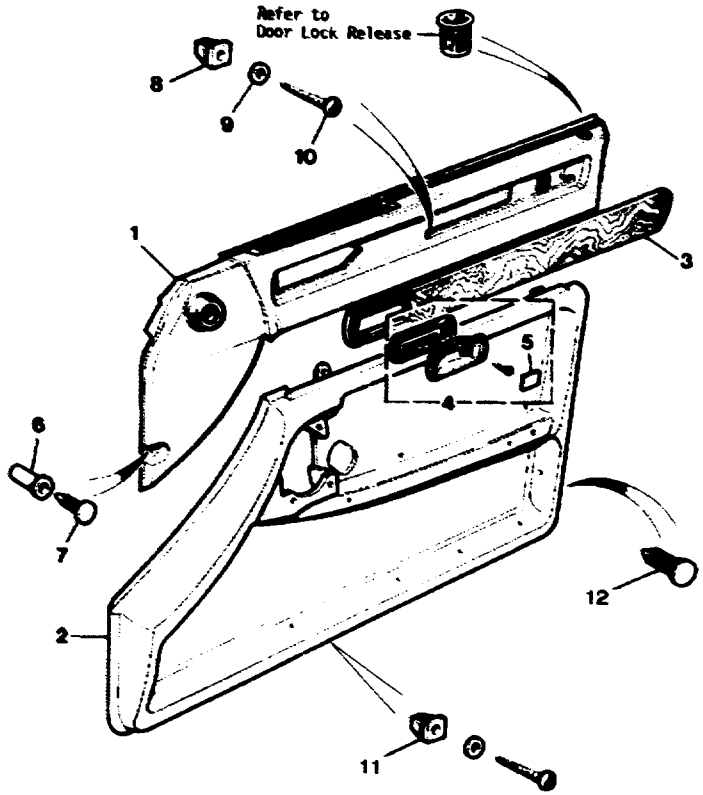


MV4414C

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	3942 *6*	Door crash roll-assembly-top -RH front	1	(1)	
1	BEC	10274 *7*	Door crash roll-assembly-top -RH front	1	(2)	
1	BEC	3943 *6*	Door crash roll-assembly-top -LH front	1	(1)	
1	BEC	10275 *7*	Door crash roll-assembly-top -LH front	1	(2)	
	BBC	9033	Lock button surround	1		
	BCC	7780	Nylon bush	1		
	BDC	5634	Door waist seal-inner-front	NLA	(3)	Use BEC14484 qty 1 or
						BEC14485 qty 1.
	BEC	14484	Door waist seal-RH front-inner	1	(4)	
	BEC	14485	Door waist seal-LH front-inner	1	(4)	
	BCC	8450 LEG	Window air demist intake grommet-Warm charcoal	2		
2	BBC	9338 *3*	Door casing-assembly-RH front	1	(1)	~~Except Daimler/VDP~~
2	BEC	2236 *2*	Door casing-assembly-RH front	1	(2)	Except Daimler/VDP
2	BEC	6630 *9*	Door casing-assembly-RH front-ambla	1	(5)	Daimler/VDP
2	BEC	11298 *9*	Door casing-assembly-RH front-ambla	1	(6)	Daimler/VDP
2	BCC	4180 *4*	Door casing-assembly-RH front-all leather	1	(5)	Daimler/VDP
2	BEC	16732 *J*	Door casing-assembly-RH front-all leather	1	(6)	Daimler/VDP
2	BBC	9339 *3*	Door casing-assembly-LH front	1	(1)	Except Daimler/VDP
2	BEC	2237 *2*	Door casing-assembly-LH front	1	(2)	Except Daimler/VDP
2	BEC	6629 *9*	Door casing-assembly-LH front-ambla	1	(5)	Daimler/VDP
2	BEC	11299 *9*	Door casing-assembly-LH front-ambla	1	(6)	Daimler/VDP
2	BCC	4181 *4*	Door casing-assembly-LH front-all leather	1	(5)	Daimler/VDP
2	BEC	16733 *J*	Door casing-assembly-LH front-all leather	1	(6)	Daimler/VDP
3	JLM	1137	Door insert veneer kit-figured walnut	1		
3	JLM	1141	Door insert veneer kit-burr walnut with inlay	1		
3	JLM	1145	Door insert veneer kit-burr walnut without inlay	1		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 659273
(4) From (V) 659274
(5) To (V) 657854
(6) From (V) 657855

DOOR CASING-FRONT

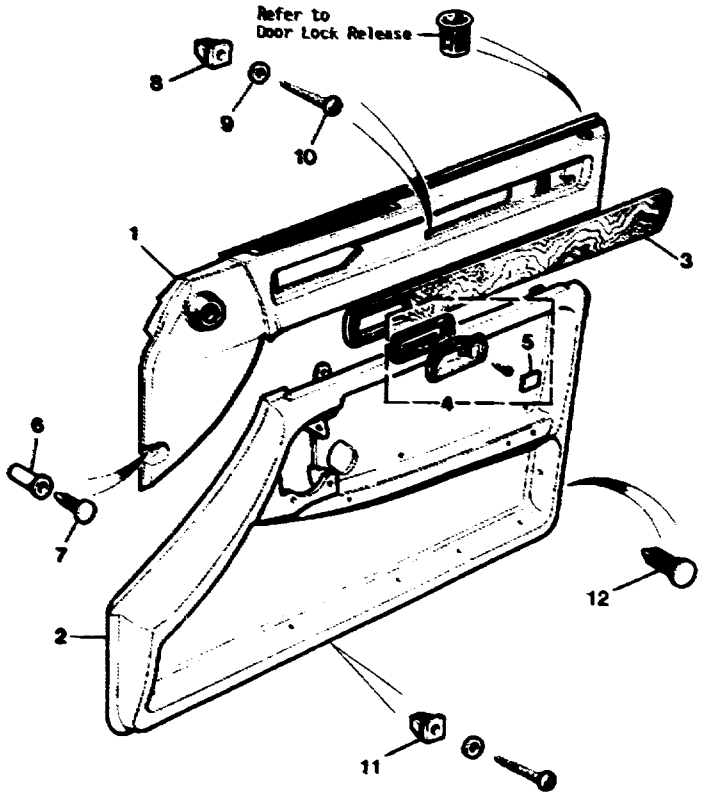


MV4414C

Illus	Part Number	Description	Quantity	Change Point	Remarks
4	BBC 8644	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use BEC15968.
4	BBC 8645	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use BEC15969.
4	BEC 15968	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use GNA1106AA.
4	BEC 15969	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use GNA1107AA.
5	BAC 6240	• Screw cover	NLA	.....	Use GNA1108AA.
4	GNA 1106AA	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use GNA1106AB.
4	GNA 1107AA	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use GNA1107AB.
5	GNA 1108AA	• Screw cover	1		
4	GNA 1106AB	Remote control escutcheon-RH front/rear	1		
4	GNA 1107AB	Remote control escutcheon-LH front/rear	1		
6	AJU 1136J	Stud retainer	12	(1)	
6	AJU 2388J	Stud retainer	12	(2)	
7	BBC 7525*6*	Fixing button-for colour codes see front of fiche	2		
7	BBC 7525 CEM	Fixing button-Mulberry	2		
8	BBC 3242	Lokut nut-RH/LH	6		
9	WC 702101J	Plain washer-no.10	4		
10	AB 608081J	Screw	6		
	SF 104101J	Self tapping screw-M4	2		
	AGU 2382	Self drilling screw	2		
11	DRC 5582	Lokut nut	NLA	.....	Use BD48954.
11	BD 48954	Lokut nut	2	.....	Casing to door
	AB 608051J	Self tapping screw	NLA	.....	Use DA608051J.
	DA 608051J	Self tapping screw-no.8	4	.....	Casing to door
11	BCC 2444	Lokut nut	NLA	.....	Use BD48954.
11	BD 48954	Lokut nut	2	.....	Casing to door
	AB 608141J	Self tapping pan head screw	NLA	.....	Casing to door
12	AGU 2230	Fastener-fir tree	NLA	(1).....	Use AGU2507.
12	AGU 2507	Fastener-fir tree	8	(2)	

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576


DOOR CASING-FRONT/REAR-MAJESTIC

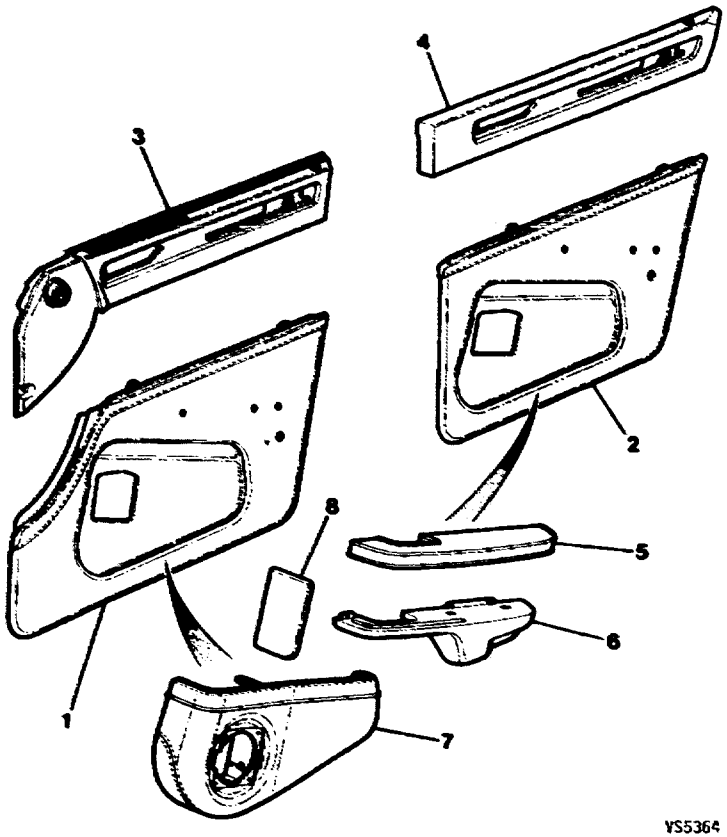

VS5364

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 15882 NDR	Door casing-RH front-Cream	1		
1	BEC 15883 NDR	Door casing-LH front-Cream	1		
2	BEC 15884 NDR	Door casing-RH rear-Cream	1		
2	BEC 15885 NDR	Door casing-LH rear-Cream	1		
3	BEC 14562 SDC	Door crash roll-RH front-Coffee	NLA		Use BEC13368SDC.
3	BEC 13368 SDC	Door crash roll-RH front-Coffee	NLA		Use BEC24914SDC.
3	BEC 24914 SDC	Door crash roll-assembly-RH front-Coffee	1		
3	BEC 14563 SDC	Door crash roll-LH front-Coffee	NLA		
4	BEC 14564 SDC	Door crash roll-RH rear-Coffee	NLA		
4	BEC 14565 SDC	Door crash roll-LH rear-Coffee	NLA		Use BEC13371SDC.
4	BEC 13371 SDC	Door crash roll-LH rear-Coffee	NLA		Use BEC24917SDC.
4	BEC 24917 SDC	Door crash roll-assembly-LH rear-Coffee	1		
5	BEC 6678 RNR	Door armrest-assembly-RH top-Cream/Coffee	NLA		Use BEC10278RNR.
5	BEC 10278 RNR	Door armrest-assembly-RH top-Cream/Coffee	NLA		Use BEC12078RNR.
5	BEC 12078 RNR	Door armrest-assembly-RH top-Cream/Coffee	NLA		
5	BEC 6679 RNR	Door armrest-assembly-LH top-Cream/Coffee	NLA		Use BEC10279RNR.
5	BEC 10279 RNR	Door armrest-assembly-LH top-Cream/Coffee	NLA		Use BEC12079RNR.
5	BEC 12079 RNR	Door armrest-assembly-LH top-Cream/Coffee	2		
6	BEC 6688 DR	Door armrest assembly -RH-bottom-Cream	2		
6	BEC 6689 DR	Door armrest assembly -LH-bottom-Cream	2		
7	BEC 6652 RNR	Door pocket -assembly-RH-Cream/Coffee	2		
7	BEC 6653 RNR	Door pocket -assembly-LH-Cream/Coffee	2		
8	BBC 6470 NDR	Trim panel-RH-Cream	2		
8	BBC 6471 NDR	Trim panel-LH-Cream	2		
	BBC 7525 SDC	Fixing button-Coffee	2		
	BBC 7525 NDR	Fixing button-Cream	2		

DOOR CASING-REAR

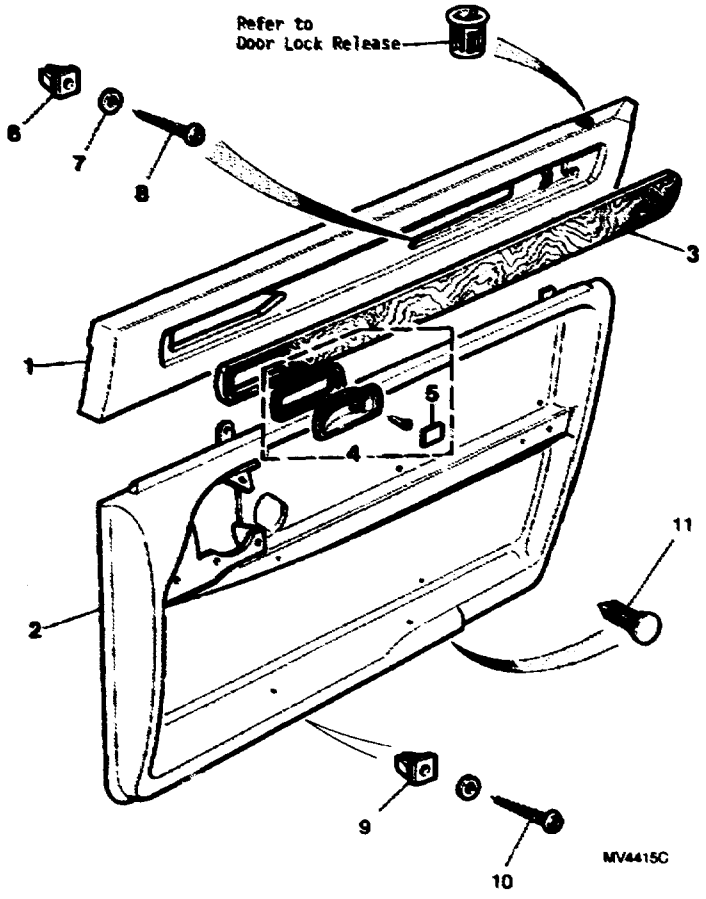


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	3946 *6*	Door crash roll-assembly-top -RH rear	1	(1)	
1	BEC	10276 *7*	Door crash roll-assembly-top -RH rear	1	(2)	
1	BEC	3947 *6*	Door crash roll-assembly-top -LH rear	1	(1)	
1	BEC	10277 *7*	Door crash roll-assembly-top -LH rear	1	(2)	
	BDC	5635	Door waist seal-rear -inner	NLA	(3)	Use BEC14486.
	BEC	14486	Door waist seal-rear -inner	2	(4)	
	BBC	9033	Lock button surround	2		
	BCC	7780	Nylon bush	2		
2	BBC	9340 *3*	Door casing-assembly-RH rear	1	(1)	Except Daimler/VDP
2	BEC	2238 *2*	Door casing-assembly-RH rear	1	(2)	Except Daimler/VDP
2	BEC	1788 *2*	Door casing-assembly-RH rear-ambla	1	(5)	Daimler/VDP
2	BEC	11300 *9*	Door casing-assembly-RH rear-ambla	1	(6)	Daimler/VDP
2	BCC	4186 *4*	Door casing-assembly-RH rear-all leather	1	(5)	Daimler/VDP
2	BEC	16680 *J*	Door casing-assembly-RH rear-all leather	1	(6)	Daimler/VDP
2	BBC	9341 *3*	Door casing-assembly-LH rear	1	(1)	Except Daimler/VDP
2	BEC	2239 *2*	Door casing-assembly-LH rear	1	(2)	Except Daimler/VDP
2	BEC	1789 *2*	Door casing-assembly-LH rear-ambla	1	(5)	Daimler/VDP
2	BEC	11301 *9*	Door casing-assembly-LH rear-ambla	1	(6)	Daimler/VDP
2	BCC	4187 *4*	Door casing-assembly-LH rear-all leather	1	(5)	Daimler/VDP
2	BEC	16681 *J*	Door casing-assembly-LH rear-all leather	1	(6)	Daimler/VDP
3	JLM	1137	Door insert veneer kit-figured walnut	1		
3	JLM	1141	Door insert veneer kit-burr walnut with inlay	1		
3	JLM	1145	Door insert veneer kit-burr walnut without inlay	1		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 659273
(4) From (V) 659274
(5) To (V) 657854
(6) From (V) 657855

DOOR CASING-REAR

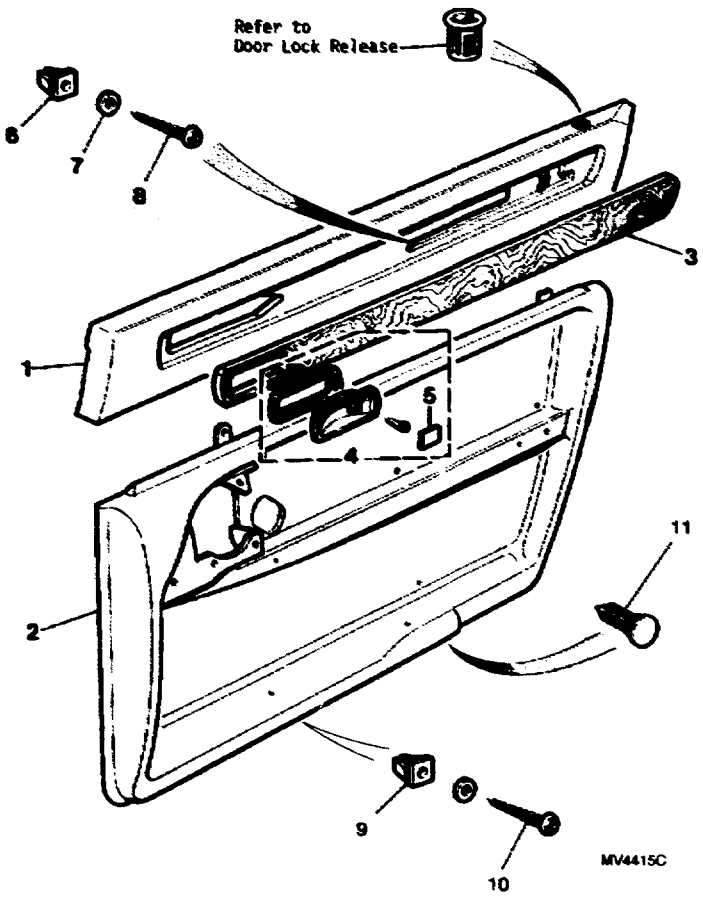

Illus	Part Number	Description	Quantity	Change Point	Remarks
4	BBC 8644	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use BEC15968.
4	BBC 8645	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use BEC15969.
4	BEC 15968	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use GNA1106AA.
4	BEC 15969	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use GNA1107AA.
5	BAC 6240	• Screw cover	NLA	.....	Use GNA1108AA.
4	GNA 1106AA	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use GNA1106AB.
4	GNA 1107AA	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use GNA1107AB.
5	GNA 1108AA	• Screw cover	1		
4	GNA 1107AB	Remote control escutcheon-LH front/rear	1		
4	GNA 1106AB	Remote control escutcheon-RH front/rear	1		
6	BBC 3242	Lokut nut-RH/LH	4		
7	WC 702101J	Plain washer-no.10	4		
8	AB 608081J	Screw	4		
9	DRC 5582	Lokut nut	NLA	.....	Use BD48954.
9	BD 48954	Lokut nut	2	.....	Casing to door
	AB 608051J	Self tapping screw	NLA	.....	Use DA608051J.
	DA 608051J	Self tapping screw-no.8	4	.....	Casing to door
9	BCC 2444	Lokut nut	NLA	.....	Use BD48954.
9	BD 48954	Lokut nut	2	.....	Casing to door
10	AB 608081J	Screw	2	.....	Casing to door
	AJU 1136J	Stud retainer	7	.....	Casing to door
11	AGU 2230	Fastener-fir tree	NLA	(1).....	Use AGU2507.
11	AGU 2507	Fastener-fir tree	7	(2)	

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

MASTER INDEX


ENGINE 1E
ENGINE MANAGEMENT/EMISSION SYSTEMS 1I
AIR AND FUEL DELIVERY SYSTEMS 1L
ENGINE COOLING SYSTEM 1N
EXHAUST SYSTEM AND COMPONENTS 2C
TRANSMISSION AND DRIVELINE 2E
STEERING AND SUSPENSION 2I
BRAKING SYSTEM 2M
AIR CONDITIONING/HEATING/VENTILATION 3C
WIPER AND WASHER SYSTEMS 3E
ELECTRICAL DISTRIBUTION SYSTEM 3F
INFORMATION SYSTEMS AND CONTROLS 3H
BATTERY/STARTER MOTOR/ALTERNATOR 3I
IN CAR ENTERTAINMENT 3J
LIGHTING - EXTERIOR/INTERIOR 3K
LOCKING/SECURITY SYSTEMS/HORNS 3M
SEATING 4C
OCCUPANT RESTRAINTS 4F
INTERIOR TRIM AND LININGS 4G
EXTERIOR FITTINGS AND SUNROOF 4K
BODY CLOSURES AND SEALING 4N
BODY METAL PANELS AND SEALING 5C
ACCESSORIES/CONSUMABLES/INDEX 5E

GROUP INDEX

BODY INTERIOR FIXTURES AND FITTINGS ..... 4. G 04
CENTRE CONSOLE ..... 4. H 03
DOOR INTERIOR TRIM AND FINISHERS ..... 4. H 10
FACIA ..... 4. I 03
FLOOR COVERINGS/CARPETS ..... 4. I 10
GLOVEBOX ..... 4. J 05
HEADLININGS AND SUNVISORS ..... 4. J 08
INSULATION/LINERS ..... 4. I 18
PARCEL SHELF AND SUNBLINDS ..... 4. J 15
REAR VIEW MIRRORS ..... 4. I 02
TREADPLATES ..... 4. G 02
VENEERS AND WOOD SETS ..... 4. I 09
A, B AND C-POST FINISHER ..... 4. G 07
A, B, C, AND D-POST FINISHER-MAJESTIC ..... 4. G 09
AIR DUCT/ECU COVER-SCUTTLE CASING ..... 4. G 05
BONNET AND TRUNK LID LINER ..... 4. J 04
CENTRE CONSOLE AND ARMREST-FRONT ..... 4. H 04
CENTRE CONSOLE REAR EXTENSION ..... 4. H 08
CENTRE CONSOLE-MAJESTIC ..... 4. H 03
D-POST FINISHER ..... 4. G 10
DOOR APERTURE EDGE FINISHER ..... 4. G 14
DOOR CASING-ARMREST/POCKET ..... 4. H 10
DOOR CASING-FRONT/REAR-MAJESTIC ..... 4. H 16
DOOR CASING-FRONT ..... 4. H 14
DOOR CASING-REAR ..... 4. H 17
DOOR POCKET/ARMREST ..... 4. H 12
FACIA ASSEMBLY-MAJESTIC ..... 4. I 08
FACIA ASSEMBLY ..... 4. I 03
FLOOR CARPET FIXINGS ..... 4. I 14
FLOOR CARPET-MAJESTIC ..... 4. I 13
FLOOR CARPET ..... 4. I 10
GEARBOX COVER PLATES ..... 4. G 18
GEARSHIFT APERTURE FINISHER ..... 4. H 07
GLOVEBOX ASSEMBLY ..... 4. J 05
GOATSKIN RUG-SIMULATED ..... 4. I 17
HEADLINING AND CANTRAIL ..... 4. J 08
ILLUMINATED SUNVISOR ..... 4. J 13
INTERIOR REAR VIEW MIRROR ..... 4. I 02
PARCEL SHELF-REAR ..... 4. J 15
PICNIC TRAY-DAIMLER/VDP ..... 4. H 02
ROOF CONSOLE ..... 4. G 16
SCUTTLE SIDE CASING ..... 4. G 04
SOUND INSULATION ..... 4. I 18
SUNBLIND-REAR ..... 4. J 16
SUNVISOR ..... 4. J 12
TREADPLATE AND FINISHER ..... 4. G 02
TRUNK CARPET AND INSULATION ..... 4. I 15
UNDERSCUTTLE CASING-PASSIVE ..... 4. G 12
UPPER TRIM-PASSIVE RESTRAINT ..... 4. G 13
VENEER FACIA PANELS ..... 4. I 09

INTERIOR REAR VIEW MIRROR


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 4090	Interior rear view mirror	1		
2	BAC 6194	Base plate	NLA	(1)	Use BEC17254.
2	BEC 17254	Base plate	1	(2)	
3	ADU 2038	Rivet	NLA		
4	SF 105201J	Countersunk screw	NLA		Use SF105253J.
4	SF 105253J	Countersunk screw	3		

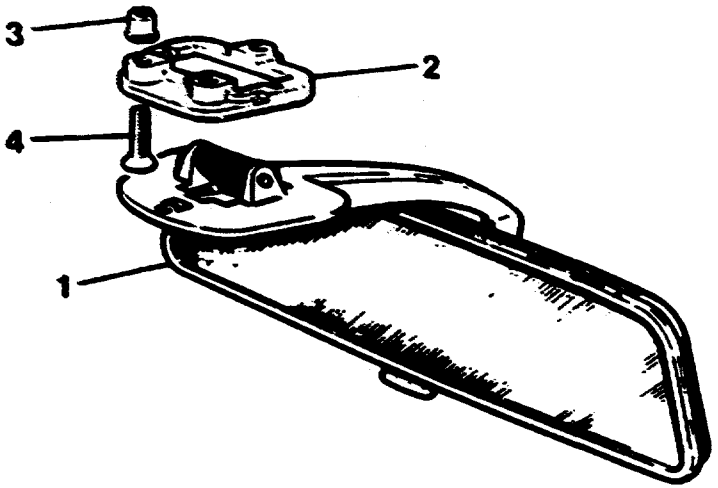

VS5635

CHANGE POINTS:
(1) To (V) 657854
(2) From (V) 657855

FACIA ASSEMBLY

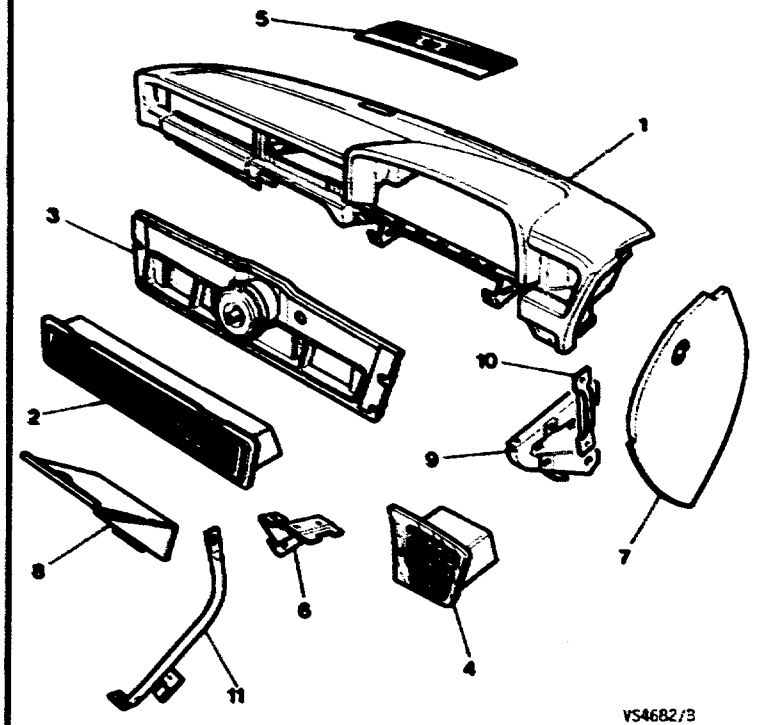


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	3796	Facia-sub assembly	NLA	(1)	Use BDC7762.
1	BDC	7762	Facia-sub assembly	NLA	(1)	Use BEC1808LEG.
1	BEC	1808 LEG	Facia-sub assembly-Warm charcoal	NLA	(2)	Use BEC4864LEG qty 1 with
1	BEC	1808 "6"	Facia-sub assembly	1	(2)	XJ6;RHD
						Sovereign;RHD
1	BEC	4864 "6"	Facia-sub assembly	1	(3)	XJ6;RHD
						Sovereign;RHD
1	BEC	11508 "7"	Facia-sub assembly	1	(4)	XJ6;RHD
						Sovereign;RHD
1	BCC	3797	Facia-sub assembly	NLA	(1)	Use BDC7763.
1	BDC	7763	Facia-sub assembly	NLA	(1)	Use BEC1807LEG.
1	BEC	1807 LEG	Facia-sub assembly-Warm charcoal	NLA	(2)	Use BEC4865LEG qty 1 with
1	BEC	1807 "6"	Facia-sub assembly	1	(2)	XJ6;LHD
						Sovereign;LHD
1	BEC	4865 "6"	Facia-sub assembly	1	(3)	XJ6;LHD
						Sovereign;LHD
1	BEC	11507 "7"	Facia-sub assembly	1	(4)	XJ6;LHD
						Sovereign;LHD;except Canada
						and USA

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286

FACIA ASSEMBLY

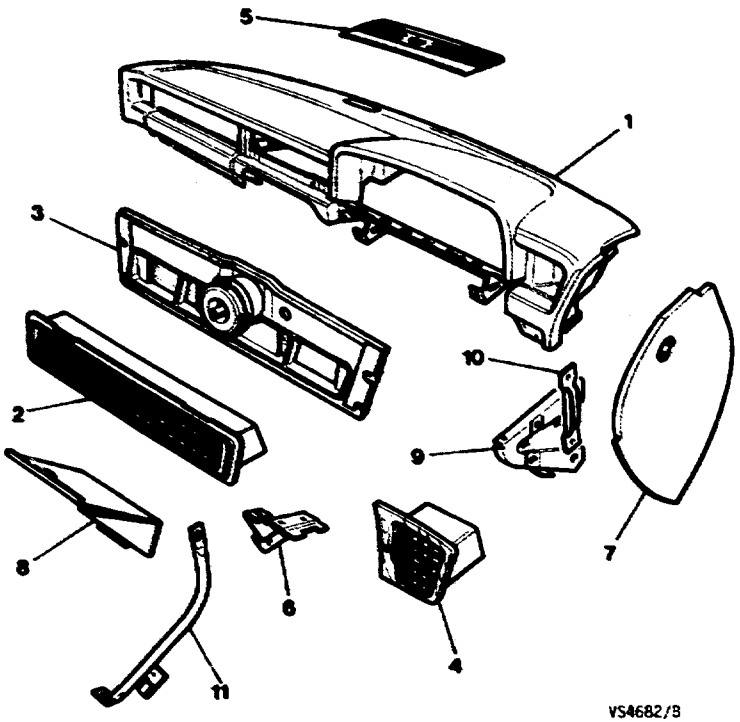


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 3794	Facia-sub assembly	NLA	(1)	Use BDC7764.
1	BDC 7764	Facia-sub assembly	NLA	(1)	Use BEC1804LEG.
1	BEC 1804 LEG	Facia-sub assembly-Warm charcoal	NLA	(2)	Use BEC4866LEG qty 1 with JLM1947 qty 1.
1	BEC 1804 *6*	Facia-sub assembly	1	(2)	Daimler/VDP;RHD
1	BEC 4866 *6*	Facia-sub assembly	1	(3)	Daimler/VDP;RHD
1	BEC 11508 *7*	Facia-sub assembly	1	(4)	Daimler/VDP;RHD
1	BDC 7765	Facia-sub assembly	NLA	(1)	Use BEC1805LEG.
1	BEC 1805 LEG	Facia-sub assembly-Warm charcoal	NLA	(2)	Use BEC4867LEG qty 1 with JLM1947 qty 1.
1	BEC 1805 *6*	Facia-sub assembly	1	(2)	Daimler/VDP;LHD
1	BEC 4867 *6*	Facia-sub assembly	1	(3)	Daimler/VDP;LHD
1	BEC 11509 *7*	Facia-sub assembly	1	(4)	Daimler/VDP;LHD
1	BEC 11509 *7*	Facia-sub assembly	1	(4)	USA;Canada;Sovereign;LHD
2	BBC 3708	Facia vent -centre	NLA		Use GMB6770AALEG.
2	GMB 6770AA LEG	Facia vent -centre	1		
	BBC 4861 1	Sealing strip-1250mm	1		
3	BDC 6404	Air valve and vacuum motor-centre vent -2 stage actuator	NLA	(5)	Use JLM11676.
3	CBC 9853	Air valve and vacuum motor-centre vent -1 stage actuator	NLA	(6)	Use JLM11676 qty 1 with JLM1133 qty 1 with JLM1237 qty 1.
	JLM 11676	Centre vent and flap-assembly-1 stage actuator	1		
	C 42799 1	Vacuum hose	A/R		
	BDC 8143	Elbow hose	1		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286
(5) To (V) 629361
(6) From (V) 629362

FACIA ASSEMBLY

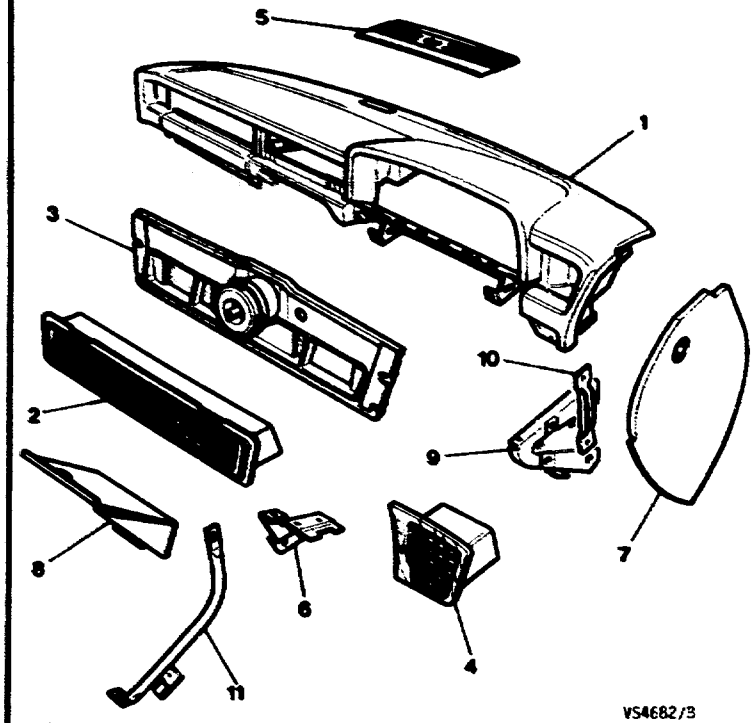


Illus	Part Number	Description	Quantity	Change Point	Remarks
4	BCC 6660	Facia vent -RH facia end vent	NLA		Use GMB6720AALEG.
4	GMB 6720AA LEG	Facia vent -RH facia end vent	1		
4	BCC 6661	Facia vent -LH facia end vent	NLA		Use GMB6721AALEG.
4	GMB 6721AA LEG	Facia vent -LH facia end vent	1		
5	BAC 6450	Solar sensor cover	NLA		Use BDC4070.
5	BDC 4070	Solar sensor cover	1		
6	BCC 3792	Mounting bracket-instrument cover-RH	1		
6	BCC 6400	Mounting bracket-instrument cover-LH	1		
7	BEC 6634 LEG	Facia end panel -RH-Warm charcoal	NLA	(1)	
7	BEC 6634 *6*	Facia end panel -RH-for colour codes see front of fiche	1	(2)	
7	BEC 9064 *7*	Facia end panel -RH-for colour codes see front of fiche	1	(3)	
7	BDC 7711	Facia end panel -LH	NLA	(4)	Use BEC6635LEG.
7	BEC 6635 LEG	Facia end panel -LH-Warm charcoal	NLA	(1)	
7	BEC 6635 *6*	Facia end panel -LH-for colour codes see front of fiche	1	(2)	
7	BEC 9065 *7*	Facia end panel -LH-for colour codes see front of fiche	1	(3)	
8	BAC 6351	Glovebox access cover	1		
	BAC 5516	Instrument cowl pad	NLA		
	BDC 6741 *6*	Instrument cowl pad-coloured	1	(1)	
	BEC 10162 *7*	Instrument cowl pad-coloured	1	(3)	
	BDC 8090	Demist duct and flap-RH	1		
	BDC 8091	Demist duct and flap-LH	1		
	BCC 4474	Windscreen demister grille-RH	1		
	BCC 4475	Windscreen demister grille-LH	1		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 594576 To (V) 629285
(3) From (V) 629286
(4) To (V) 594575


FACIA ASSEMBLY

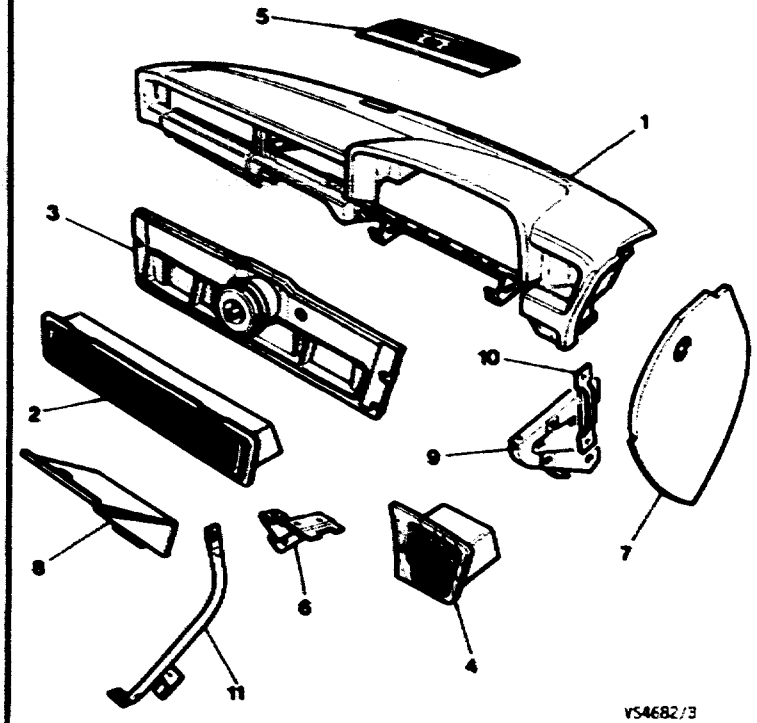

Illus	Part Number		Description	Quantity	Change Point	Remarks
9	BDC	7690	Facia support bracket-RH	NLA	(1)	Use BEC20872
9	BEC	20872	Facia support bracket-RH	1	(1)	
9	BEC	8672	Facia support bracket-RH	1	(2)	
9	BDC	7691	Facia support bracket-LH	NLA	(1)	
9	BEC	8673	Facia support bracket-LH	1	(2)	
10	BBC	9054	Facia end strut	2		
11	BDC	9426	Facia centre and relay bracket strut -RH	NLA		
11	BDC	9427	Facia centre and relay bracket strut -LH	NLA		
	SR	108201 J	Screw	1		Facia to dash
	BD	48963	Grip nut -frame to door	4		End bracket to armature
	C	10193	Washer	NLA		Facia to dash
	GL	108251 J	Setscrew	4		Bracket to A-post
	WD	108051 J	Washer	2		Bracket to A-post
	SR	108201 J	Facia screw	2		Facia to bracket
	C	4999	Spacer washer	2		Facia to bracket
	BD	48967	Grip nut -M6	1		Facia to dash
	AC	608044 J	Screw	2		Tray fixing
	WD	108041 J	Washer	4		Strut fixing
	SH	108121 J	Setscrew-M6 x 12mm	4		Strut fixing
	SE	105161 J	Screw-M5 x 16mm	4		Instrument pack to facia
	AGU	1415	Nut	4		Retainer pack to facia
	AB	608054 J	Screw	1		Access cover to glovebox


CHANGE POINTS
(1) To (V) 629361
(2) From (V) 629362

FACIA ASSEMBLY

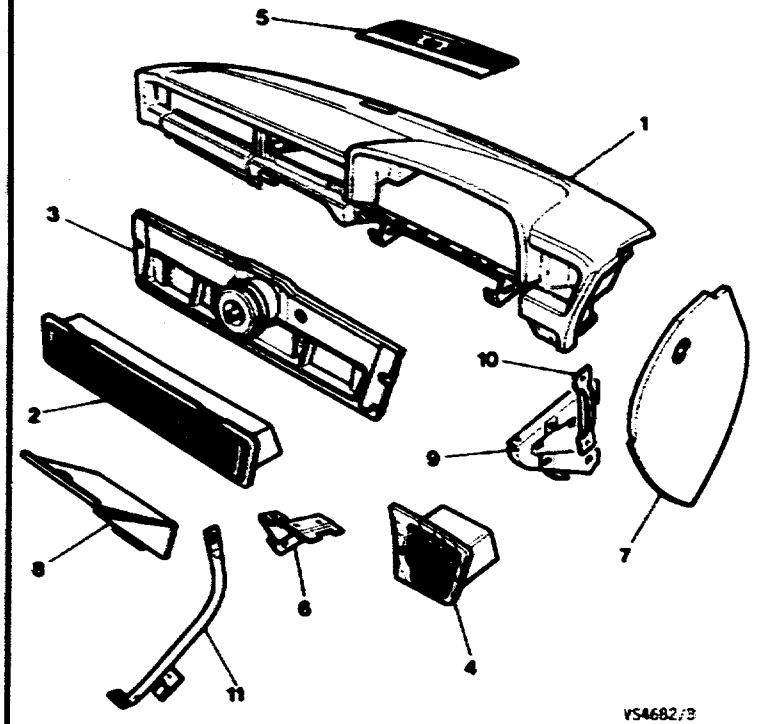


Illus	Part Number	Description	Quantity	Change Point	Remarks
BMK	2117J	Socket-plastic	NLA		Use AGU2388J.
AGU	2388J	Friction bush-short	2		End panel to facia
ACU	3692	Friction bush	NLA		Use BD26989.
BD	26989	Friction bush	2		End panel to facia
NH	104041J	Nut-M4	2		End panel to facia
BD	32692	Flat washer	4		End panel to facia
AB	606031J	Self tapping screw	6		
JLM	9686	Nut-M8	2		Strut to tunnel
FW	105E	Plain washer	2		Strut to tunnel
NH	105041	Nut-M5	2		Strut to facia sub assembly
WJ	105001J	Plain washer	2		Strut to facia sub assembly
AN	604081J	Push on fix	1		Sensor to cover
AJU	1034	Clip	2		
BBC	48617	Sealing strip-100mm	NLA		Use BBC48611.
BBC	1490	Windscreen demist vacuum motor	NLA		
BBC	86211	Flat head rivet	NLA		
AGU	2227	Push on fix	1		
AB	608054J	Screw	8		

FACIA ASSEMBLY-MAJESTIC

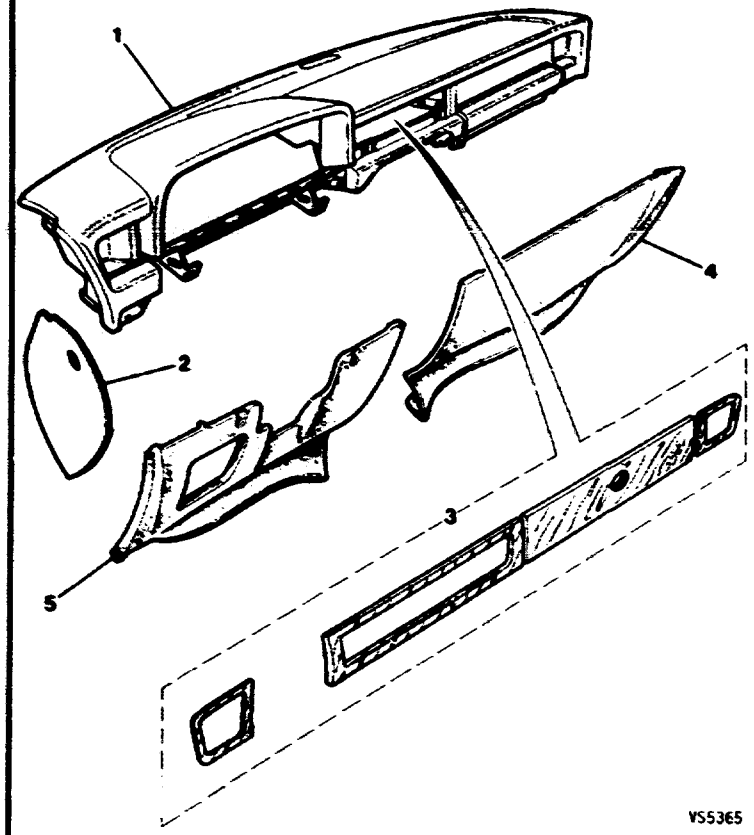

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 11509 SDC	FACIA-ASSEMBLY-COFFEE	1		
	BEC 10162 SDC	• Instrument cowl pad-Coffee	1		
	BEC 15338 SDC	• Glovebox lid-formed-Coffee	NLA		
2	BEC 9084 SDC	Facia end panel -RH-Coffee	NLA		Use GMB6650AASDC.
2	BEC 9085 SDC	Facia end panel -LH-Coffee	NLA		Use GMB6651AASDC.
2	GMB 6650AA SDC	Facia end panel -RH-Coffee	1		
2	GMB 6651AA SDC	Facia end panel -LH-Coffee	1		
3	JLM 10465	Veneer kit-facia panel	1		
4	BEC 10940 NDR	Underscuttle pad-passenger-RH-Cream	NLA		Use BEC23962NDR.
4	BEC 23962 NDR	Underscuttle pad-passenger-RH-Cream	1		
5	BEC 10941 NDR	Underscuttle pad-driver -LH-Cream	1		


VENEER FACIA PANELS

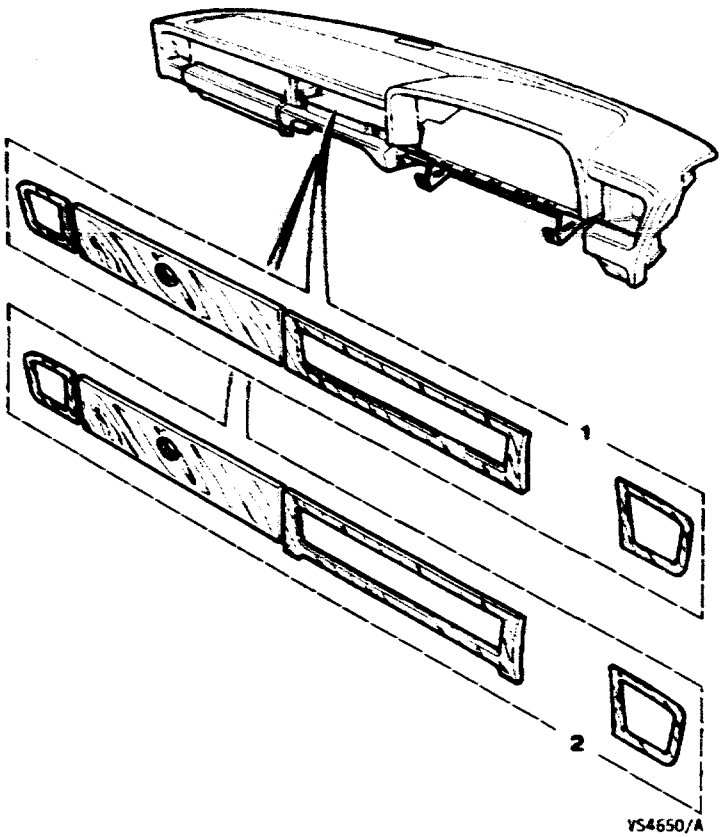

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 1135	Facia panel veneer kit-figured walnut	NLA		XJ6 Sovereign;except Canada and USA
1	JLM 10466	Facia panel veneer kit-burr walnut without inlay	1	(1)	XJ6 Sovereign;except Canada and USA
1	JLM 1139	Facia panel veneer kit-burr walnut with inlay	NLA		XJ6 Sovereign;except Canada and USA
1	JLM 1143	Facia panel veneer kit-burr walnut without inlay	NLA	(2)	Daimler/VDP Canada;USA;Sovereign (USA)
1	JLM 1144	Facia panel veneer kit-burr walnut with inlay	1		Daimler/VDP Canada;USA;Sovereign (USA)
	JLM 10465	Veneer kit-facia panel	1	(1)	Majestic;Majestic
	BDC 7049	Friction bush	4		
	BD 11309	Spring clip-finisher to facia	4		

CHANGE POINTS:
(1) From (V) 629286
(2) To (V) 629285

FLOOR CARPET

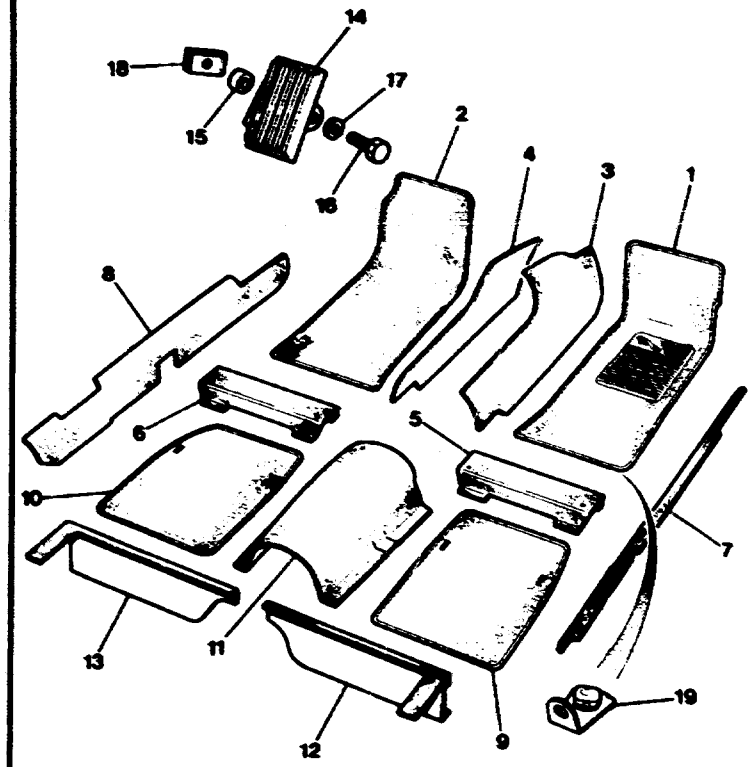


VS442D/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	3124 *R*	Floor carpet-RH front	1	(1)	Jaguar;RHD
1	BEC	19058 *W*	Floor carpet-RH front	1	(2)	Jaguar;RHD
1	BBC	3126 *R*	Floor carpet-RH front	1	(1)	Daimler;RHD
1	BEC	19062 *W*	Floor carpet-RH front	1	(2)	Daimler;RHD
1	BAC	6620 *R*	Floor carpet-RH front	1	(1)	LHD
1	BEC	19060 *W*	Floor carpet-RH front	1	(2)	LHD
2	BAC	6621 *R*	Floor carpet-LH front	1	(1)	RHD
2	BEC	19059 *W*	Floor carpet-LH front	1	(2)	RHD
2	BBC	3125 *R*	Floor carpet-LH front	1	(1)	Jaguar;LHD
2	BEC	19061 *W*	Floor carpet-LH front	1	(2)	Jaguar;LHD
2	BBC	3127 *R*	Floor carpet-LH front	1	(1)	Daimler;LHD
2	BEC	19063 *W*	Floor carpet-LH front	1	(2)	Daimler;LHD
3	BCC	8026 *S*	Gearbox tunnel carpet -RH	1	(3)	RHD
3	BEC	5698 *T*	Gearbox tunnel carpet -RH	1	(4)	RHD
3	BEC	15052 *T*	Gearbox tunnel carpet -RH	1	(5)	RHD
3	BCC	8028 *S*	Gearbox tunnel carpet -RH	1	(3)	LHD
3	BEC	5700 *T*	Gearbox tunnel carpet -RH	1	(4)	LHD
3	BEC	15050 *T*	Gearbox tunnel carpet -RH	1	(5)	LHD
4	BCC	8027 *S*	Gearbox tunnel carpet -LH	1	(3)	RHD
4	BEC	5699 *T*	Gearbox tunnel carpet -LH	1	(4)	RHD
4	BEC	15053 *T*	Gearbox tunnel carpet -LH	1	(5)	RHD
4	BCC	8025 *S*	Gearbox tunnel carpet -LH	1	(3)	LHD
4	BEC	5701 *T*	Gearbox tunnel carpet -LH	1	(4)	LHD
4	BEC	15051 *T*	Gearbox tunnel carpet -LH	1	(5)	LHD

CHANGE POINTS:

(1) To (V) 665810
(2) From (V) 665811
(3) To (V) 629285
(4) From (V) 629286 To (V) 656798
(5) From (V) 656799

FLOOR CARPET

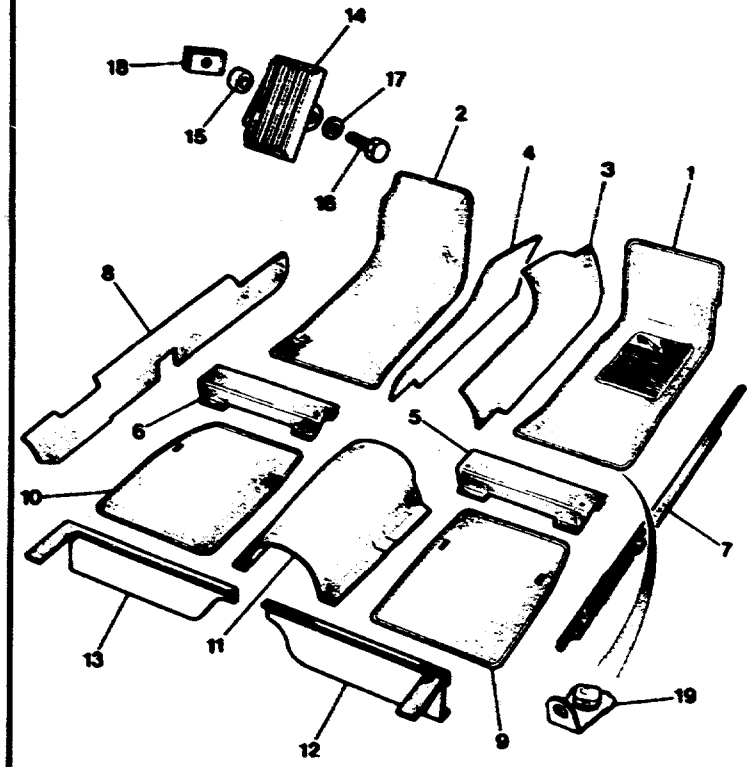


VS4429/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	BCC	7980 *S*	Crossmember carpet-RH	1	(1)	
5	BEC	1110 *U*	Crossmember carpet-RH	1	(2)	
5	BEC	9002 *T*	Crossmember carpet-RH	1	(3)	
6	BCC	7981 *S*	Crossmember carpet-LH	1	(1)	
6	BEC	1111 *U*	Crossmember carpet-LH	1	(2)	
6	BEC	9003 *T*	Crossmember carpet-LH	1	(3)	
7	BDC	8688 *S*	Sill carpet-RH	1	(4)	
7	BEC	2760 *U*	Sill carpet-RH	1	(5)	RHD
7	BEC	2762 *U*	Sill carpet-RH	1	(5)	LHD
8	BDC	8689 *S*	Sill carpet-LH	1	(4)	RHD
8	BEC	2761 *U*	Sill carpet-LH	1	(5)	RHD
8	BDC	8690 *S*	Sill carpet-LH	1	(4)	LHD
8	BEC	2763 *U*	Sill carpet-LH	1	(6)	LHD;except USA and fuel filler release
8	BEC	2763 *U*	Sill carpet-LH	1	(3)	LHD
8	BEC	6517 *U*	Sill carpet-LH	1	(6)	USA;fuel filler release;LHD
9	BCC	8402 *R*	Floor carpet-RH rear	1	(7)	Except passive restraint
9	BDC	4582 *R*	Floor carpet-RH rear	1	(7)	Passive restraint
9	BEC	15060 *W*	Floor carpet-RH rear	1	(8)	
10	BCC	8403 *R*	Floor carpet-LH rear	1	(7)	Except passive restraint
10	BDC	4583 *R*	Floor carpet-LH rear	1	(7)	Passive restraint
10	BEC	15061 *W*	Floor carpet-LH rear	1	(8)	

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 629285
(3) From (V) 629286
(4) To (V) 594575
(5) From (V) 594576
(6) From (V) 594576 To (V) 629285
(7) To (V) 656798
(8) From (V) 656799

FLOOR CARPET

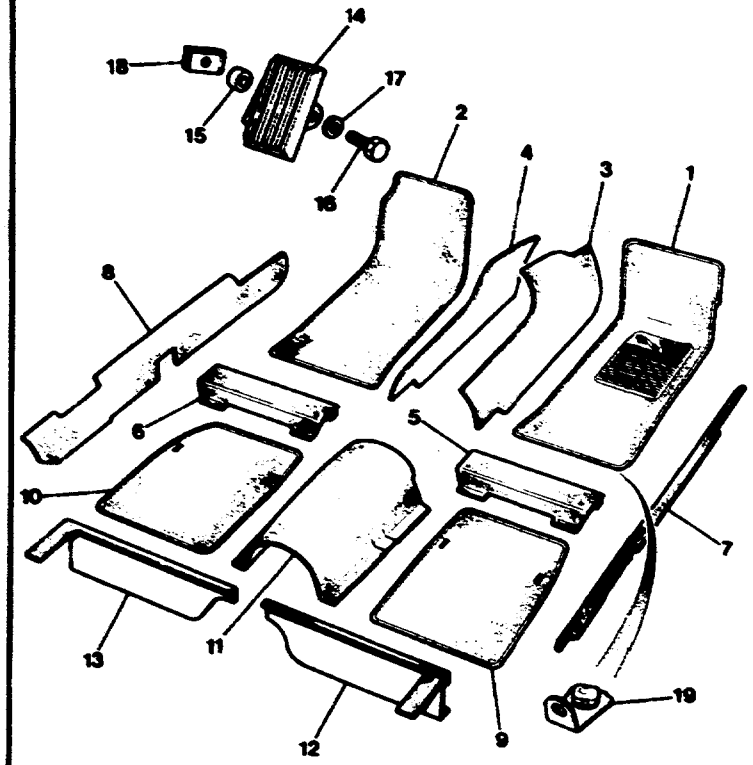


VS442D/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
11	BCC	7982 *S*	Tunnel carpet-rear	1	(1)	RHD
11	BDC	6690 *S*	Tunnel carpet-rear	1	(2)	RHD
11	BEC	5294 *U*	Tunnel carpet-rear	1	(3)	RHD
11	BEC	15068 *U*	Tunnel carpet-rear	1	(4)	RHD
11	BCC	7983 *S*	Tunnel carpet-rear	1	(1)	LHD
11	BDC	6691 *S*	Tunnel carpet-rear	1	(2)	LHD
11	BEC	5295 *U*	Tunnel carpet-rear	1	(3)	LHD
11	BEC	15069 *U*	Tunnel carpet-rear	1	(4)	LHD
12	BDC	6688 *S*	Heelboard carpet-RH	1	(1)	
12	BEC	2768 *U*	Heelboard carpet-RH	1	(5)	
13	BDC	6689 *S*	Heelboard carpet-LH	1	(1)	
13	BEC	2769 *U*	Heelboard carpet-LH	1	(5)	
14	BBC	3884	Footrest-assembly-less rubber	1		RHD
14	BCC	5600	Footrest-assembly-less rubber	1		LHD;manual
14	BCC	5162	Footrest-assembly-less rubber	1		LHD;automatic
	BBC	1462	Footrest rubber pad	1		RHD;automatic
	BBC	6877	Footrest rubber pad	1		LHD;automatic
15	BBC	3888	Spacer	2		RHD
15	BCC	5167	Spacer	1		LHD
16	SH	108254 J	Bolt	2		RHD
16	BP	110104 J	Bolt	2		LHD
17	WA	108054 J	Washer	2		RHD
17	WF	110004 J	Washer	2		LHD
18	AGU	2000	Nut	2		
	BCC	5164	Mounting bracket	1		
19	BEC	18971 *V*	Carpet retaining bracket	1		

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 629285
(3) From (V) 629286 To (V) 656798
(4) From (V) 656799
(5) From (V) 594576

FLOOR CARPET-MAJESTIC

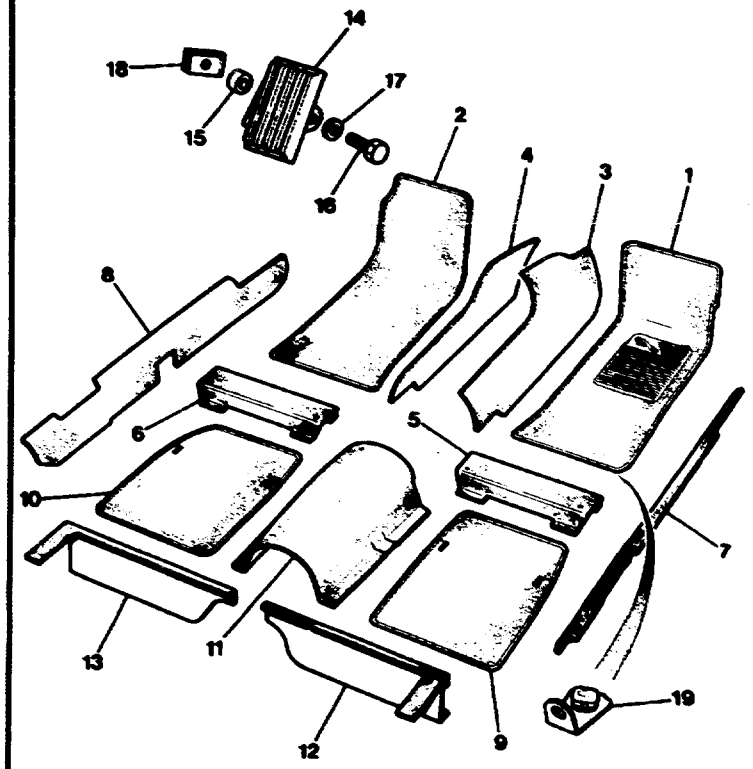


VS4420/C

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BEC	9398 SSC	Floor carpet-RH front-Coffee/Cream	1	(1)	
1	BEC	19084 SSC	Floor carpet-RH front-Coffee/Cream	1	(2)	
2	BEC	9399 SSC	Floor carpet-LH front-Coffee/Cream	1	(1)	
2	BEC	19085 SSC	Floor carpet-LH front-Coffee/Cream	1	(2)	
3	BEC	15054 SDC	Gearbox side carpet-RH-Coffee	1		
4	BEC	15055 SDC	Gearbox side carpet-LH-Coffee	1		
5	BEC	9002 SDC	Crossmember carpet-RH-Coffee	1		
6	BEC	9003 SDC	Crossmember carpet-LH-Coffee	1		
7	BEC	9404 SDC	Sill carpet-RH-Coffee	1		
8	BEC	9405 SDC	Sill carpet-LH-Coffee	1		
9	BEC	15082 SSC	Floor carpet-RH rear-Coffee/Cream	1		
10	BEC	15083 SSC	Floor carpet-LH rear-Coffee/Cream	1		
11	BEC	15071 SSC	Tunnel carpet-rear -Coffee/Cream	1		
12	BEC	9388 SSC	Heelboard carpet-RH-Coffee/Cream			
13	BEC	9389 SSC	Heelboard carpet-LH-Coffee/Cream			
14	BCC	5162	Footrest-assembly-less rubber	1		
	BBC	6877	Footrest rubber pad	1		
15	BCC	5167	Spacer	1		
16	BP	110104 J	Bolt	2		
17	WF	110004 J	Washer	2		
18	AGU	2000	Nut	2		
	BCC	5164	Mounting bracket	1		
19	BEC	18971 SDC	Carpet retaining bracket-Coffee	1		

CHANGE POINTS:
(1) To (V) 665810
(2) From (V) 665811


FLOOR CARPET FIXINGS

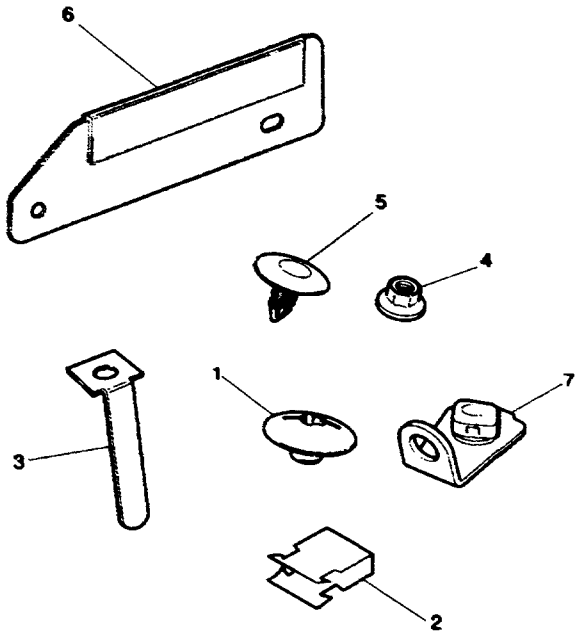

MV7190A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	AGU	2292	Push on fix-insulation	12		Sill carpet
1	AGU	2292	Push on fix-insulation	8		Gearbox carpet
1	AGU	2292	Push on fix-insulation	4		Heelboard carpet
1	AGU	2292	Push on fix-insulation	1		Rear tunnel carpet
2	BD	37523	Edge clip-A-post-facia	18		Sill carpet
3	BBC	9433	Carpet retainer	NLA		Use BDC3547.
3	BDC	3547	Carpet retainer	2		Gearbox carpet
4	AGU	2231	Plastic nut	2		Gearbox carpet
5	AGU	1467	Carpet fastener	6		Heelboard carpet
6	BEC	5568	Retention strip-front	2		Front carpet
7	BEC	18971 "V"	Carpet retaining bracket	1		Front carpet


TRUNK CARPET AND INSULATION

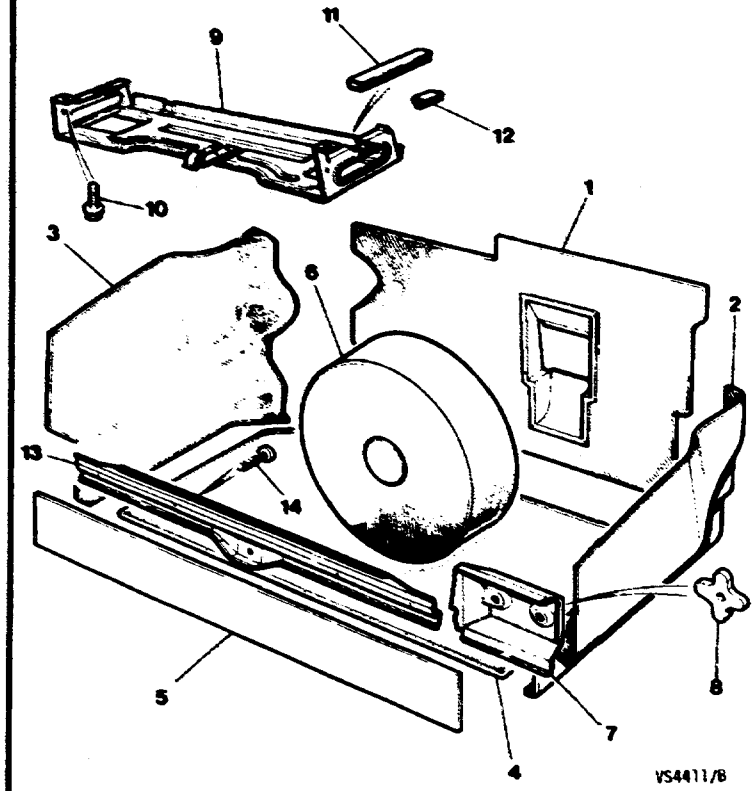

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 7832	Trunk floor carpet-front	NLA	(1)	Use BEC4491AEF.
1	BEC 4491 AEF	Trunk floor carpet-front-Rattan	NLA	(2)	Use BEC24712AEF.
1	BEC 24712 AEF	Trunk floor carpet-front-Rattan	1	(2)	Except USA
1	BEC 4491 LEA	Trunk floor carpet-front-Smoke grey	NLA	(2)	Use BEC24712LEA.
1	BEC 24712 LEA	Trunk floor carpet-front-Smoke grey	1	(2)	Except USA
1	BEC 5105 AEF	Trunk floor carpet-front-Rattan	1	(2)	USA
1	BEC 5105 LEA	Trunk floor carpet-front-Smoke grey	NLA	(2)	Use BEC24710LEA.
1	BEC 24710 LEA	Trunk floor carpet-front-Smoke grey	1	(2)	USA
2	BDC 6490 AEF	Trunk side carpet-RH-Rattan	1		
2	BDC 6490 LEA	Trunk side carpet-RH-Smoke grey	1		
3	BDC 6619	Trunk side carpet-LH	NLA	(1)	Use BDC7663.
3	BDC 7663	Trunk side carpet-LH	1	(1)	
3	BEC 4493 AEF	Trunk side carpet-LH-with label-Rattan	NLA	(2)	
3	BEC 4493 LEA	Trunk side carpet-LH-with label-Smoke grey	NLA	(2)	
	BDC 7023	Trunk side carpet brace -LH	NLA		
	AK 610020	Spire nut	2		
	DAB 108C	Screw	2		
	WK 610214J	Washer	2		
4	BAC 6616 AEF	Trunk floor carpet-Rattan	1		
4	BAC 6616 LEA	Trunk floor carpet-Smoke grey	NLA		
5	BCC 7524 AEF	Trunk panel carpet -rear -Rattan	1		
5	BCC 7524 LEA	Trunk panel carpet -rear -Smoke grey	1		

CHANGE POINTS:
(1) To (V) 602594
(2) From (V) 602595


TRUNK CARPET AND INSULATION

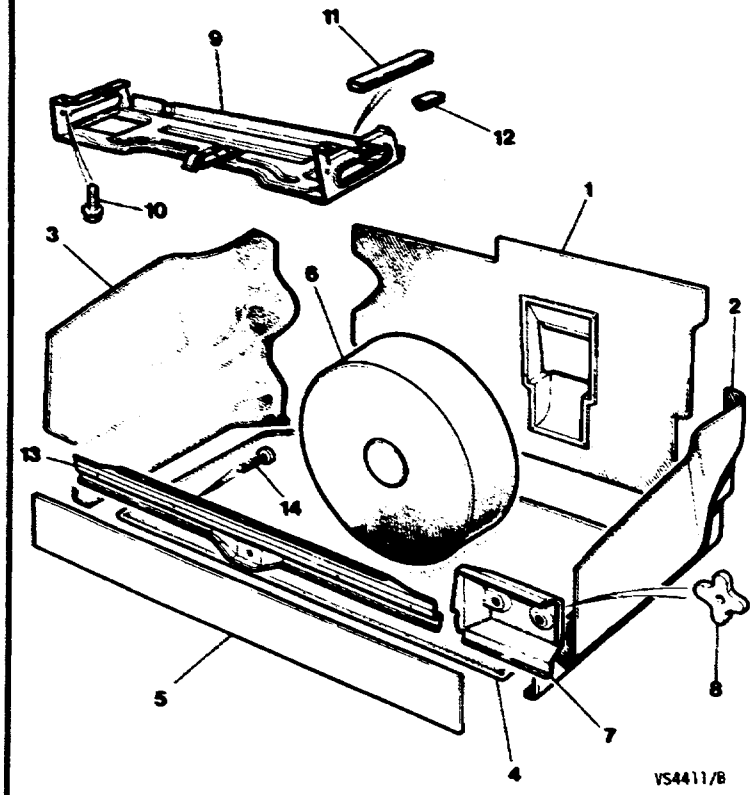

Illus	Part Number	Description	Quantity	Change Point	Remarks
6	BEC 6584 AEF	Spare wheel cover-Rattan	NLA	.....	Use BEC25239AEF.
6	BEC 25239 AEF	Spare wheel cover-Rattan	NLA	.....	Use BEC25239AFG.
6	BEC 25239 AFG	Spare wheel cover-Sisal	1		
6	BEC 6584 LEA	Spare wheel cover-Smoke grey	NLA	.....	Use BEC25239LEA.
6	BEC 25239 LEA	Spare wheel cover-Smoke grey	NLA	.....	Use BEC25239LFH.
6	BEC 25239 LFH	Spare wheel cover-Light grey	1		
7	BEC 11674	Lamp cover -RH rear	1	(1)	
7	BEC 16318	Lamp cover -RH rear	1	(2)	
7	BEC 11675	Lamp cover -LH rear	1	(1)	
7	BEC 18129	Lamp cover -LH rear	1	(2)	
8	BBC 1614	Fixing knob	4		
9	BBC 5490	Toolcase support panel	NLA	(3)	Use BEC12177.
9	BEC 12177	Toolcase support panel	NLA	(3)	Use BEC17718.
9	BEC 17718	Toolcase support panel	1	(3)	
9	BDC 3244	Toolcase support panel	1	(4)	
10	FS 106121 J	Setscrew-M6	4		
11	BD 446431	Edge strip-35.75"	3		
12	BRC 3101	Edge clip	6		
13	BBC 9955	Retainer	NLA	(5)	Use BEC16313.
13	BEC 16313	Retainer	1	(6)	
14	DA 608044 J	Self tapping screw-no.6 x 1"	4		
	BD 48975	Locknut	4		
	BCC 5950	Carpet support strap	2		

CHANGE POINTS:
(1) To (V) 663105
(2) From (V) 663106
(3) To (V) 602594
(4) From (V) 602595
(5) To (V) 660684
(6) From (V) 660685

GOATSKIN RUG-SIMULATED

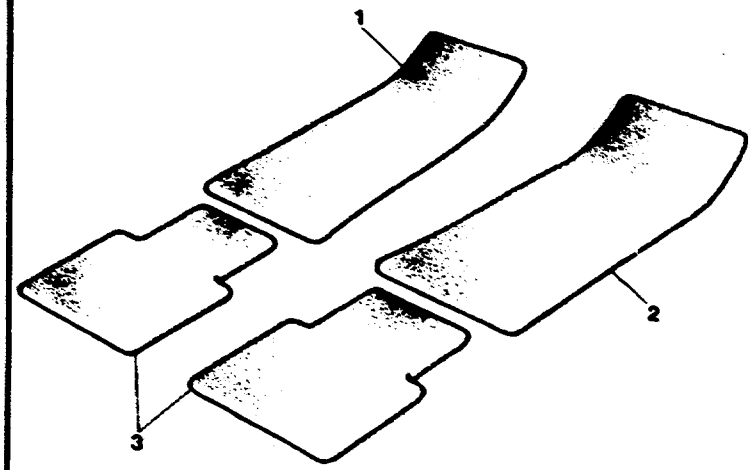


VS4469/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	6537 *J*	Footwell rug-front-LH	1	(1)	Passenger side;RHD
1	BEC	5419 *M*	Footwell rug-front-LH	1	(2)	Passenger side;RHD
1	BEC	19329 *M*	Footwell rug-front-LH	1	(3)	Passenger side;RHD
2	BCC	6536 *J*	Footwell rug-front-RH	1	(1)	Passenger side;LHD
2	BEC	5418 *M*	Footwell rug-front-RH	1	(2)	Passenger side;LHD
2	BEC	19328 *M*	Footwell rug-front-RH	1	(3)	Passenger side;LHD;except Majestic
2	BEC	9374 SDC	Footwell rug-front-RH-Coffee	NLA	(4)	Passenger side;Majestic;LHD
2	BEC	19330 SDC	Footwell rug-front-RH-Coffee	1	(3)	Passenger side;Majestic;LHD
3	BCC	6535 *J*	Footwell rug-rear -RH/LH	2	(5)	
3	BDC	8582 *J*	Footwell rug-rear -RH/LH	2	(6)	
3	BEC	5420 *M*	Footwell rug-rear -RH/LH	2	(7)	
3	BEC	9376 SDC	Footwell rug-rear -RH/LH-Coffee	2	(8)	Majestic

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 665810
(3) From (V) 665811
(4) From (V) 633352 To (V) 665810
(5) To (V) 556850
(6) From (V) 556851 To (V) 594575
(7) From (V) 594576
(8) From (V) 633352

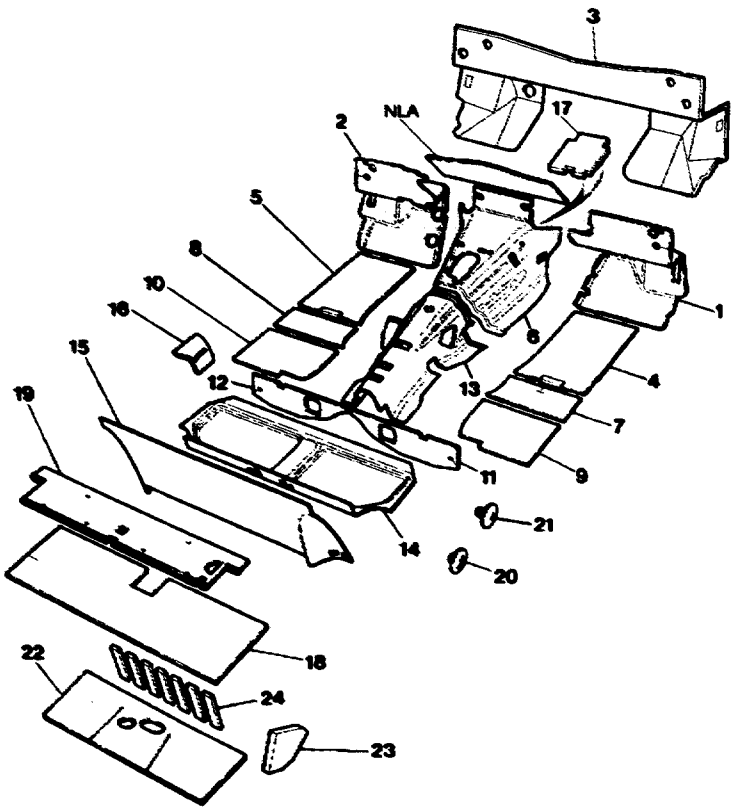


MV4674E

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 2466	Toeboard-RH	NLA	(1)	Use BEC3116.
2	BCC 2467	Toeboard-LH	NLA	(1)	Use BEC3117.
3	BEC 3116	Toeboard	1	(2)	Single piece;RHD
3	BEC 3117	Toeboard	1	(2)	Single piece;LHD
4	BAC 6508	Floor panel-RH front	NLA	(1)	Use BEC7712.
4	BEC 7712	Floor panel-RH front	NLA	(3)	Use BEC18974.
4	BEC 18974	Floor panel-RH front	1	(4)	
5	BAC 6509	Floor panel-LH front	1	(1)	
5	BEC 7713	Floor panel-LH front	NLA	(3)	Use BEC18975.
5	BEC 18975	Floor panel-LH front	1	(4)	
6	BCC 2468	Gearbox tunnel pad-front	NLA	(1)	Use BDC3847.
6	BDC 3847	Gearbox tunnel pad-front	NLA	(5)	Use BEC1267.
6	BEC 1267	Gearbox tunnel pad-front	NLA	(6)	
6	BEC 4359	Gearbox tunnel pad-front/rear	NLA		Single piece
7	BCC 2898	Centre floor panel-RH	NLA	(7)	Use BCC6692.
7	BCC 6692	Centre floor panel-RH	1	(6)	
8	BCC 2899	Centre floor panel-LH	NLA	(7)	Use BCC6693.
8	BCC 6693	Centre floor panel-LH	NLA	(6)	

CHANGE POINTS:


(1) To (V) 594575
(2) From (V) 594576
(3) From (V) 594576 To (V) 665810
(4) From (V) 665811
(5) From (V) 594576 To (V) 629285
(6) From (V) 629286
(7) To (V) 629285

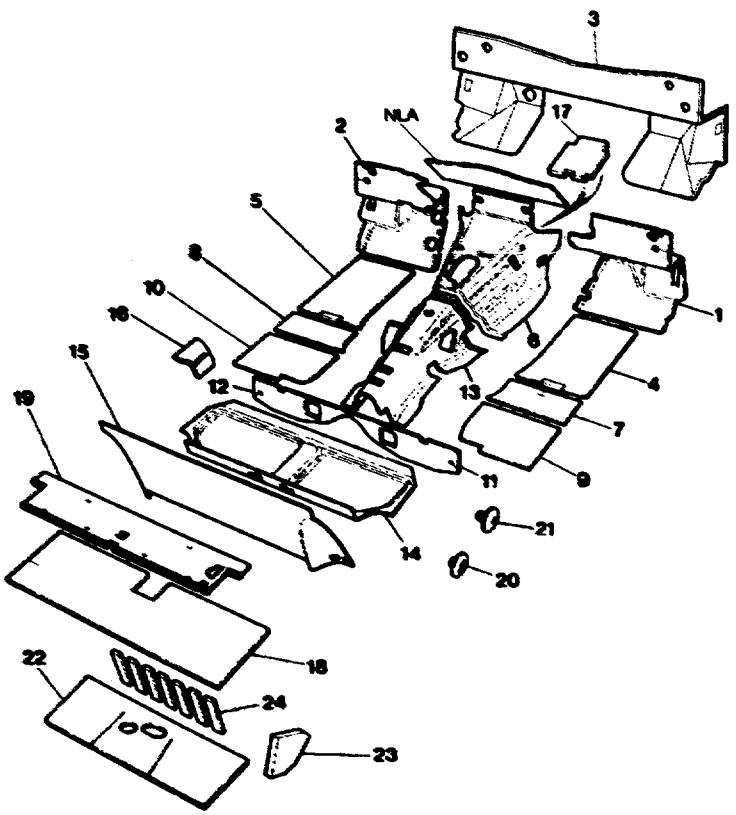

MV4674E

Illus	Part Number		Description	Quantity	Change Point	Remarks
9	BAC	6512	Floor panel-RH rear	1	(1)	
9	BEC	10362	Floor panel-RH rear	NLA	(2)	Use BEC10366.
	BEC	10366	Floor insulation -RH rear	1		
10	BAC	6513	Floor panel-LH rear	1	(1)	
10	BEC	10363	Floor panel-LH rear	NLA	(2)	Use BEC10367.
	BEC	10367	Floor insulation -LH rear	1		
11	BAC	6514	Heelboard pad -RH	NLA		
12	BAC	6515	Heelboard pad -LH	NLA		
13	BCC	7990	Tunnel pad -rear	1		
14	BEC	10359	Cushion well pad	NLA		Use BEC16466.
14	BEC	16466	Cushion well pad	1		
15	BCC	7586	Bulkhead insulation pad -rear	NLA	(1)	Use BEC2956.
15	BEC	2956	Bulkhead insulation pad -rear	1	(2)	
16	BBC	4980	Corner fillet -LH	1		
16	BBC	4981	Corner fillet -RH	1		
	BD	10313	Edge clip	4		
	AV	608081 J	Self drilling screw-no.6	2		
17	BBC	8435	Gearbox insulation pad	NLA		Use BEC25519.
17	BEC	25519	Gearbox insulation pad	1		Automatic
17	BD	46958	Gearbox insulation pad	NLA		Use BEC21107.
17	BEC	21107	Gearbox insulation pad	1		Manual

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

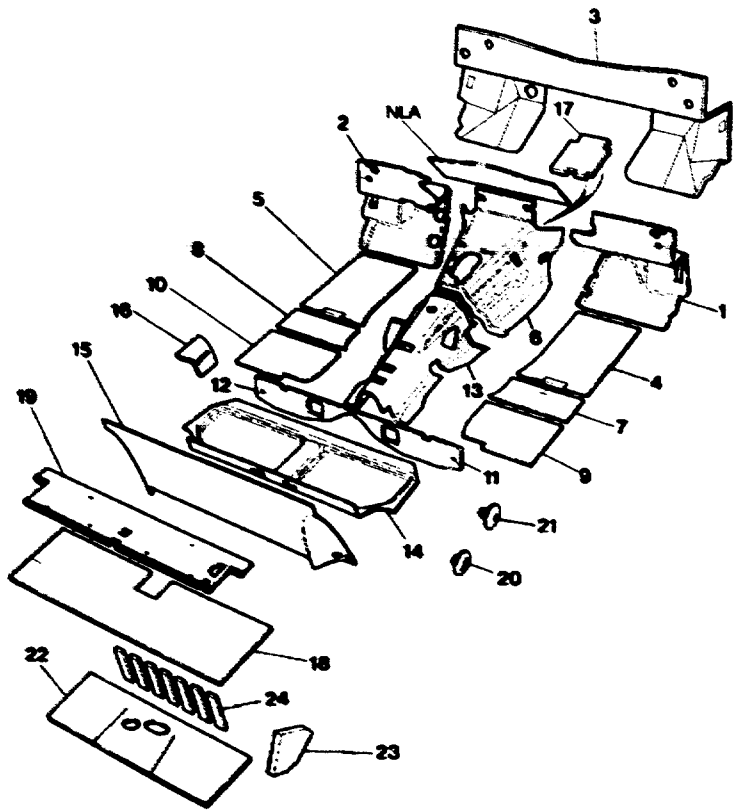


MV4674E

Illus	Part Number	Description	Quantity	Change Point	Remarks
18	BBC 9680	Fuel tank insulation pad	NLA	(1)	
18	BEC 10108	Fuel tank insulation pad	NLA	(2)	Use BEC11988.
18	BEC 11988	Fuel tank insulation pad	NLA	(3)	Use BEC19511.
18	BEC 19511	Fuel tank insulation pad	1	(3)	
19	BCC 7046	Insulation pad-rear	NLA	(4)	Use BEC14454.
19	BEC 14454	Insulation pad-rear	NLA	(3)	Use BEC14458.
19	BEC 14458	Insulation pad-rear	1		
20	AGU 2292	Push on fix-insulation	20		
21	ADL 1655	Push on fix-insulation	10		
20	AGU 2272	Push on fix-insulation	3		
22	BEC 2033	Insulation pad-lower	NLA		Use NMC5999AA.
22	NMC 5999AA	Insulation pad-lower	1		Fuel tank
23	BCC 7426	Fuel tank side pad-RH	1		
23	BCC 7427	Fuel tank side pad-LH	1		
24	BAC 6525	Fuel tank insulation pad-anti rattle	7		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286 To (V) 641327
(3) From (V) 641328
(4) To (V) 641327

BONNET AND TRUNK LID LINER

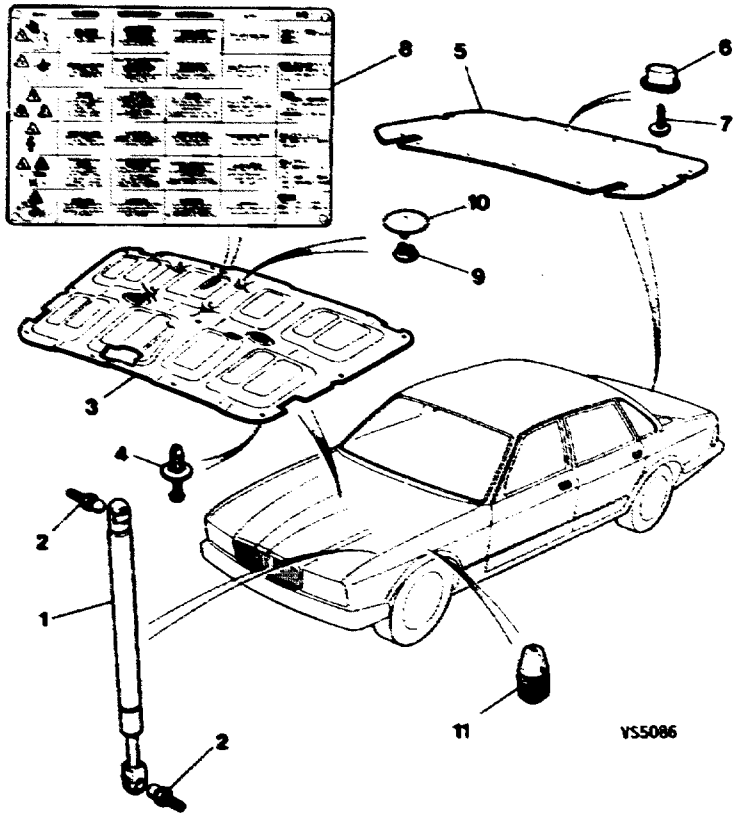


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	2856	Bonnet gas strut	2		
	BCC	7281	Trunk lid gas strut	NLA	(1)	Use BEC13514.
	BEC	13514	Trunk lid gas strut	2	(2)	
2	BCC	3664	Ballpin	8		
3	BDC	7402	Bonnet liner	NLA	(3)	Use BEC5567.
3	BEC	5567	Bonnet liner	NLA	(4)	Use BEC8375.
3	BEC	8375	Bonnet liner	1	(5)	
3	BEC	22722	Bonnet liner	1	(6)	
	DAC	1954 2	Grommet strip -197mm	1		
4	BAC	6919	Rivet screw -bonnet liner	NLA		Use KRS113130.
4	KRS	113130	Rivet screw -assembly	11		
5	BBC	7074	Trunk lid trimboard	NLA		Use GMD3616AAAFG qty 1 or GMD3616AALFH qty 1.
6	BD	48954	Lokut nut	12		
7	AGU	1413J	Self tapping screw-no.8 x 19mm	A/R		
8	CBC	4120	Hazard warning label-bonnet liner	1		Europe
8	CBC	4121	Hazard warning label-bonnet liner	1		Except Europe
9	CBC	4860	Ratchet rivet -button-hazard warning label	4		
10	CBC	4861	Ratchet rivet -back piece-hazard warning label	4		
11	CZG	1668J	Buffer-bonnet and trunk-hazard warning label	NLA		Use BEC10761.
11	BEC	10761	Buffer	4		

CHANGE POINTS:

(1) To (V) 657854
(2) From (V) 657855
(3) To (V) 594575
(4) From (V) 594576 To (V) 607040
(5) From (V) 607041 To (V) 662799
(6) From (V) 662800

GLOVEBOX ASSEMBLY

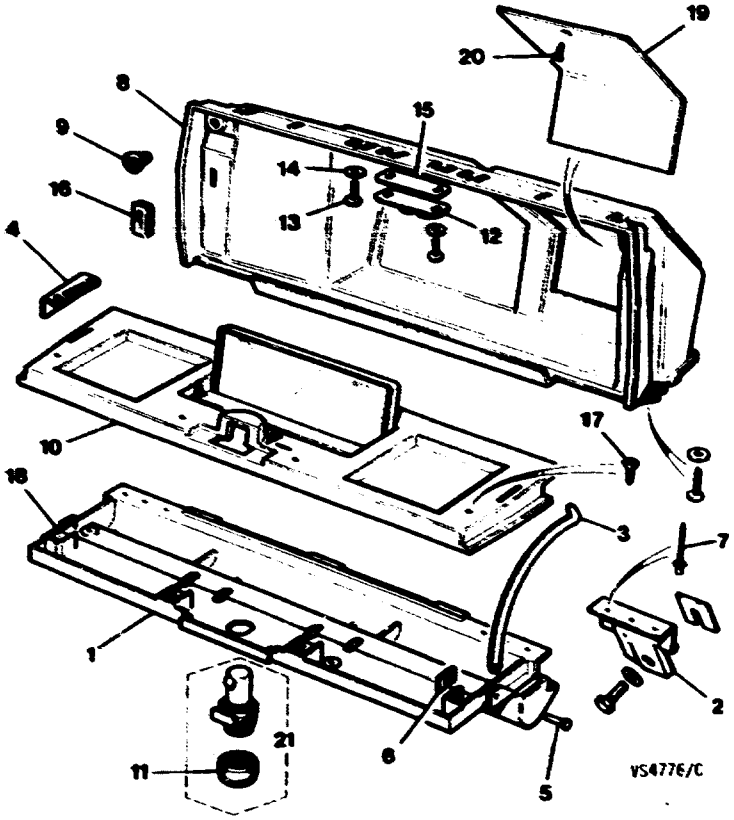

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 4027 LEG	Glovebox lid-assembly-Warm charcoal	NLA	(1)	Use BEC15345LEG.
1	BEC 15345 LEG	Glovebox lid-formed-Warm charcoal	1	(1)	XJ6
					Sovereign
1	BEC 4027 "6"	Glovebox lid-assembly	1	(2)	XJ6
					Sovereign
1	BEC 4027 "7"	Glovebox lid-assembly	1	(3)	XJ6
					Sovereign
1	BEC 4028 LEG	Glovebox lid-assembly-Warm charcoal	NLA	(1)	Use BEC15538LEG.
1	BEC 15538 LEG	Glovebox lid-assembly-Warm charcoal	NLA	(1)	Daimler/VDP
1	BEC 4028 "6"	Glovebox lid-assembly	1	(2)	Daimler/VDP
1	BEC 4028 "7"	Glovebox lid-assembly	1	(3)	Daimler/VDP
2	BBC 7934	Hinge	2		
3	BCC 5588	Glovebox lid checkarm	NLA		Use BDC7048.
3	BDC 7048	Glovebox lid checkarm	2		
4	BBC 6626	Check arm finisher -RH	1		
4	BBC 6627	Check arm finisher -LH	1		
5	RA 608186 J	Rivet-check arm to lid	NLA		Use RA608176J.
5	RA 608176 J	Rivet	2		XJ6
					Sovereign
6	AN 103121 J	Push-on fix rivet	NLA		XJ6
					Sovereign
7	RA 106167 J	Rivet	NLA		Use RA608176J.
7	RA 608176 J	Rivet	6		


CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576 To (V) 629285

(3) From (V) 629286


GLOVEBOX ASSEMBLY

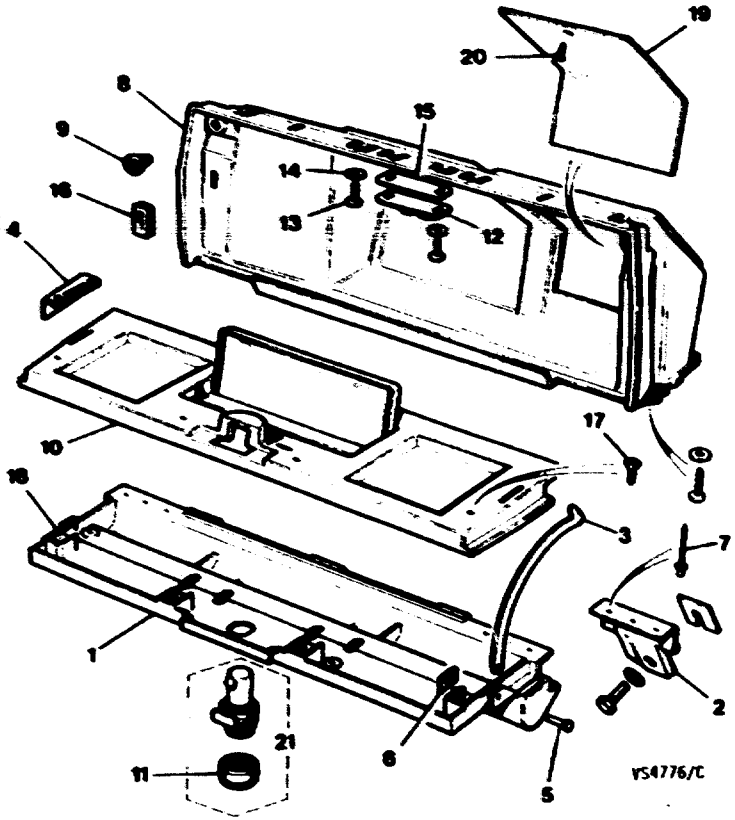

Illus	Part Number		Description	Quantity	Change Point	Remarks
8	BBC	4589	Glovebox	NLA	(1)	Use BCC8413.
8	BCC	8413	Glovebox	NLA	(2)	RHD
8	BCC	8412	Glovebox	NLA		LHD
9	BBC	4464	Buffer	2		
10	BBC	7643	Glovebox vanity tray	NLA		Use BDC8873.
10	BDC	8873	Glovebox vanity tray	1		XJ6
						Sovereign
	BCC	7957	Veneer panel	1		Daimler/VDP
	BBC	6628	Chrome lock cover	1		Daimler/VDP
	BBC	6629	Cup tray	1		Daimler/VDP
	BBC	6637	Mirror	NLA		Use BDC4872.
	BDC	4872	Mirror	1		Daimler/VDP
	BBC	6639	Bearing strip	1		Daimler/VDP
	BBC	6635	Mirror tray and catch	1		Daimler/VDP
	BCC	2442	Glovebox lock bezel -chrome rng	NLA		Use JLM1478.
11	JLM	1478	Glovebox lock knob	1	(1)	
12	BAC	6354	Glovebox lid lock striker	1		
13	AB	610074J	Screw	2		
14	WJ	105004J	Washer	2		
15	BAC	6832	Shim	1		
16	BCC	1015	Check arm grommet	NLA		Use BEC18266.
16	BEC	18266	Check arm grommet	2		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

GLOVEBOX ASSEMBLY

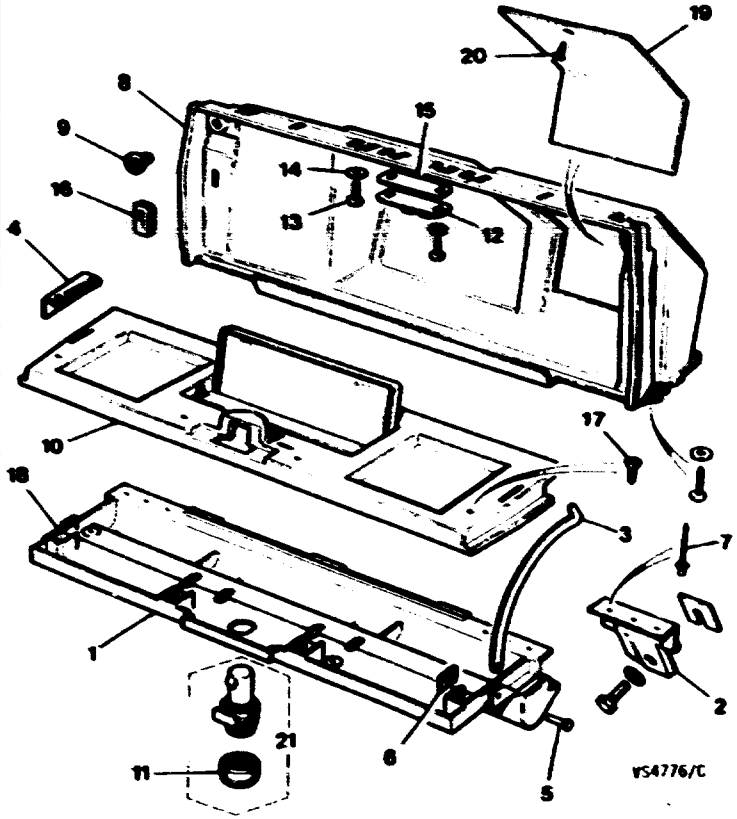

Illus	Part Number		Description	Quantity	Change Point	Remarks
	AC	604034J	Countersunk self tapping screw	NLA		Use AC604035J
	AC	604035J	Countersunk self tapping screw	4		Vanity tray/mirror;Daimler/VDP
	AC	606033J	Countersunk self tapping screw	4		Lock surround;Daimler/VDP
	AC	604033J	Countersunk self tapping screw	4		Check arm;Daimler/VDP
	AC	604041J	Countersunk self tapping screw	4		Inner veneer to outer;Daimler/VDP
17	AC	606044J	Screw	4		XJ6
						Sovereign
18	AK	606081J	Captive nut	4		XJ6
						Sovereign
19	BAC	6351	Glovebox access cover	1		
20	AB	606054J	Screw	1		Access cover
	BBC	6628	Chrome lock cover	1	(1)	Daimler/VDP
21	BEC	12507	Glovebox lock-assembly	1		Part of trunk and cubby box lockset
	BDC	7011	Trunk lid and cubby box lockset	1	(2)	Except remote release
	BEC	1335	Trunk lid and cubby box lockset	1	(3)	Remote release
	BEC	7708	Lockset-assembly-doors/steering/trunk/cubby box	1	(1)	


CHANGE POINTS:

(1) From (V) 594576

(2) To (V) 524374

(3) From (V) 524375 To (V) 594575

HEADLINING AND CANTRAIL

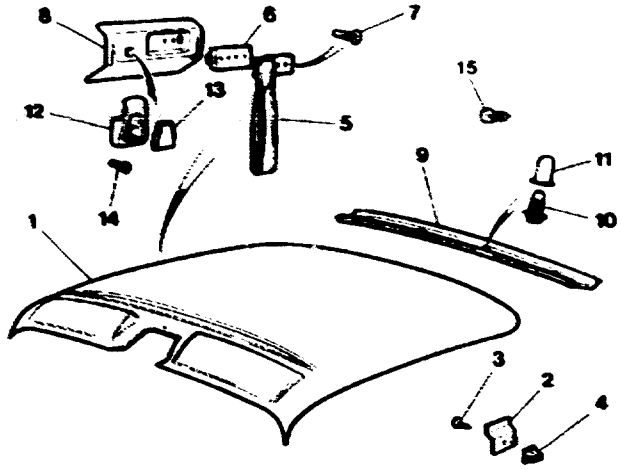

MV4757C

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BDC 9358	Roof lining	NLA	(1)	Except sunroof
1	BEC 1690 NDD	Roof lining-Limestone	NLA	(2)	Use BEC1690AEE.
1	BEC 1690 AEE	Roof lining-Doeskin	NLA	(2)	Use HMB1003BBAEE.
1	HMB 1003BB AEE	Roof lining-fixed roof-without intrusion sensor-Doeskin	1	(2)	
1	BEC 1690 LDY	Roof lining-Savile grey	NLA	(2)	Use HMB1003BBLDY.
1	HMB 1003BB LDY	Roof lining-fixed roof-without intrusion sensor-Savile grey	1	(2)	
1	BEC 21043 AEE	Roof lining-Doeskin	NLA	(3)	Use BEC22481AEE.
1	BEC 22481 AEE	Roof lining-Doeskin	NLA	(3)	Use BEC1690NDD.
1	BEC 21043 LDY	Roof lining-Savile grey	NLA	(3)	Use BEC22481LDY.
1	BEC 22481 LDY	Roof lining-Savile grey	NLA	(3)	Use BEC1690LDY.
1	BDC 9359	Roof lining	NLA	(1)	Sunroof
1	BEC 1691 NDD	Roof lining-Limestone	NLA	(2)	Use BEC1913NDD.
1	BEC 1913 NDD	Roof lining-Limestone	1	(2)	Sunroof
1	BEC 1691 LDY	Roof lining-Savile grey	NLA	(2)	Use BEC1913LDY.
1	BEC 1913 LDY	Roof lining-Savile grey	1	(2)	Sunroof
1	BEC 21044 AEE	Rcof lining-Doeskin	NLA	(3)	Use BEC22482AEE.
1	BEC 22482 AEE	Roof lining-Doeskin	NLA	(3)	Use HMB1002BBAEE.
1	HMB 1002BB AEE	Roof lining-with sunroof aperture-without intrusion sensor-Doeskin	1	(3)	Sunroof
1	BEC 21044 LDY	Roof lining-Savile grey	NLA	(3)	Use BEC22482LDY.
1	BEC 22482 LDY	Roof lining-Savile grey	NLA	(3)	Use HMB1002BBLDY.
1	HMB 1002BB LDY	Roof lining-with sunroof aperture-without intrusion sensor-Savile grey	1	(3)	Sunroof
	JLM 1356	Sunroof panel-inner	NLA	(1)	Use JLM1356NDD.
	JLM 1356 NDD	Sunroof panel-Limestone	1	(4)	
	JLM 1356 LDY	Sunroof panel-Savile grey	1	(4)	

CHANGE POINTS.


(1) To (V) 594575

(2) From (V) 594576 To (V) 660120

(3) From (V) 660121

(4) From (V) 594576

HEADLINING AND CANTRAIL

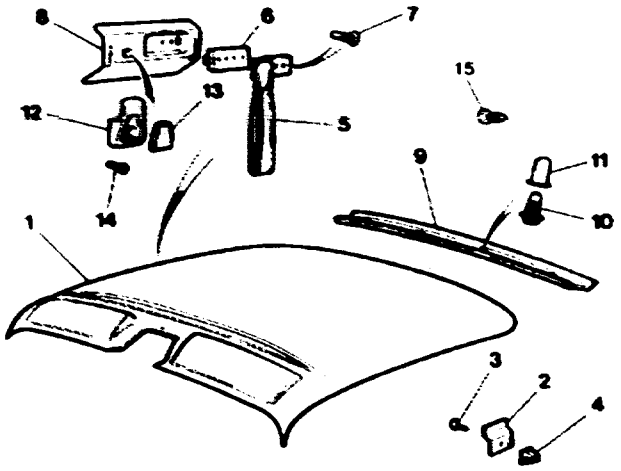


VIV4757C

Illus	Part Number		Description	Quantity	Change Point	Remarks
	BRC	3101	Edge clip	12		
	BRC	5101	Clip-roof lining trim to aperture	NLA		
2	BAC	6503	Cantrail bracket	NLA		
3	AB	608031 J	Self tapping screw	6		
4	CZH	619 J	Plastic nut-bracket and cantrail	6		
5	BBC	8408	Dowager strap-assembly-RH	NLA		Use BCC8680AEE.
5	BCC	8680 AEE	Dowager strap-assembly-RH-Doeskin	NLA		Use BEC26668AEE.
5	BEC	26668 AEE	Dowager strap-assembly-RH-leather-Doeskin	1		
5	BCC	8680 LDY	Dowager strap-assembly-RH-Savile grey	NLA	(1)	Use BEC26668LDY.
5	BEC	26668 LDY	Dowager strap-assembly-RH-leather-Savile grey	1	(1)	
5	BEC	8784 SDC	Dowager strap-assembly-RH-Coffee	NLA	(2)	Use BEC26668SDC.
5	BEC	26668 SDC	Dowager strap-assembly-RH-autolux leather-Coffee	1	(2)	Majestic
5	BBC	8409	Dowager strap-assembly	NLA		Use BCC8681AEE.
5	BCC	8681 AEE	Dowager strap-assembly-LH-Doeskin	NLA		Use BEC26669AEE.
5	BEC	26669 AEE	Dowager strap-assembly-LH-leather-Doeskin	1		
5	BCC	8681 LDY	Dowager strap-assembly-LH-Savile grey	NLA	(1)	Use BEC26669LDY.
5	BEC	26669 LDY	Dowager strap-assembly-LH-leather-Savile grey	1	(1)	
5	BEC	8785 SDC	Dowager strap-assembly-LH-Coffee	NLA	(2)	Use BEC26667SDC.
5	BEC	26667 SDC	Dowager strap-assembly-LH-autolux leather-Coffee	1	(2)	Majestic
6	BBC	8425	Dowager strap spacer	2		
7	SF	105253 J	Countersunk screw	4		
8	BDC	3612 XE	Dowager strap finisher-RH-Doeskin	NLA		Use BEC12396AEE.
8	BEC	12396 AEE	Dowager strap finisher-RH-Doeskin	1		
8	BDC	3612 LDY	Dowager strap finisher-RH-Savile grey	NLA		Use BEC12396LDY.
8	BEC	12396 LDY	Dowager strap finisher-RH-Savile grey	1		
8	BEC	12396 SDC	Dowager strap finisher-RH-Coffee	1	(2)	Majestic

CHANGE POINTS:
(1) From (V) 594576
(2) From (V) 633352

HEADLINING AND CANTRAIL

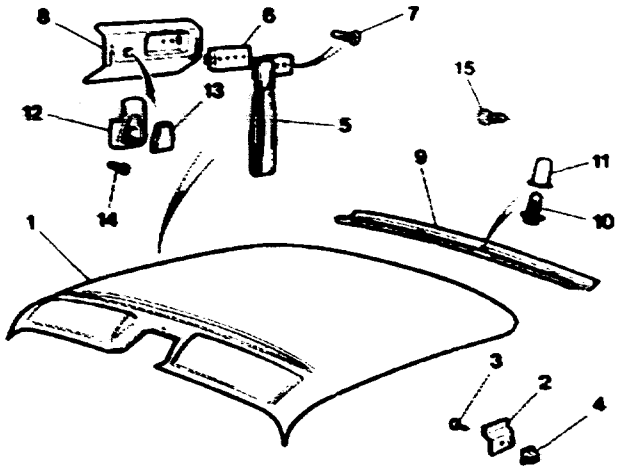


MV4757C

Illus	Part Number		Description	Quantity	Change Point	Remarks
8	BDC	3613 XE	Dowager strap finisher-LH-Doeskin	1		
8	BDC	3613 LDY	Dowager strap finisher-LH-Savile grey	NLA		Use BEC12397LDY.
8	BEC	12397 LDY	Dowager strap finisher-LH-Savile grey	1		
8	BEC	12397 SDC	Dowager strap finisher-LH-Coffee	1	(1)	Majestic
9	BEC	5708 LDY	Header panel-assembly-rear -Savile grey	1		Except sunblind
9	BEC	5708 AEE	Header panel-assembly-rear -Doeskin	1		Except sunblind
9	BEC	5708 SDC	Header panel-assembly-rear -Coffee	1	(1)	Majestic;except sunblind
9	BEC	5709 LDY	Header panel-assembly-rear -Savile grey	NLA		Use BEC19898LDY.
9	BEC	19898 LDY	Header panel-assembly-rear -Savile grey	1		Sunblind
9	BEC	5709 AEE	Header panel-assembly-rear -Doeskin	NLA		Use BEC19898AEE.
9	BEC	19898 AEE	Header panel-assembly-rear -Doeskin	1		Sunblind
9	BEC	5709 SDC	Header panel-assembly-rear -Coffee	NLA	(2)	Use BEC19898SDC.
9	BEC	19898 SDC	Header panel-assembly-rear -Coffee	1	(3)	Majestic;sunblind
10	AFU	4137 J	Finisher stud	4		
11	AGU	2388	Friction bush-clear	NLA		Use AGU2388J.
	AGU	2388 J	Friction bush-short	3		
	BBC	2928 XE	Sunblind retention bezel-Doeskin	2		
	BBC	2928 LDY	Sunblind retention bezel-Savile grey	2	(4)	
	BBC	2928 SDC	Sunblind retention bezel-Coffee	2	(1)	Majestic
15	AC	606022 J	Self tapping screw-bezel to rear header	2		

CHANGE POINTS:

(1) From (V) 633352
(2) From (V) 633352 To (V) 656798
(3) From (V) 656799
(4) From (V) 594576


Illus	Part Number		Description	Quantity	Change Point	Remarks
12	BCC	2242 XE	Coat hook-Doeskin	2		
12	BCC	2242 LDY	Coat hook-Savile grey	2	(1)	
12	BDC	2242 SDC	Coat hook-Coffee	2	(2)	Majestic
13	BCC	2243 XE	Coat hook finisher-Doeskin	2		
13	BCC	2243 LDY	Coat hook finisher-Savile grey	2	(1)	
13	BCC	2243 SDC	Coat hook finisher-Coffee	2	(2)	Majestic
14	SC	105251 J	Pan head screw	2		

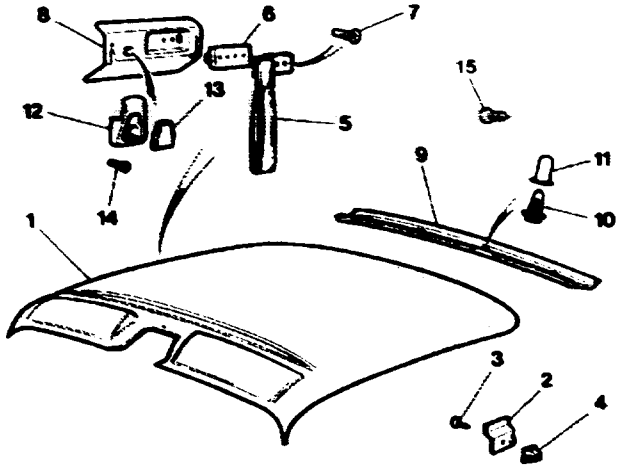

MV4757C

CHANGE POINTS:
(1) From (V) 594576
(2) From (V) 633352


SUNVISOR

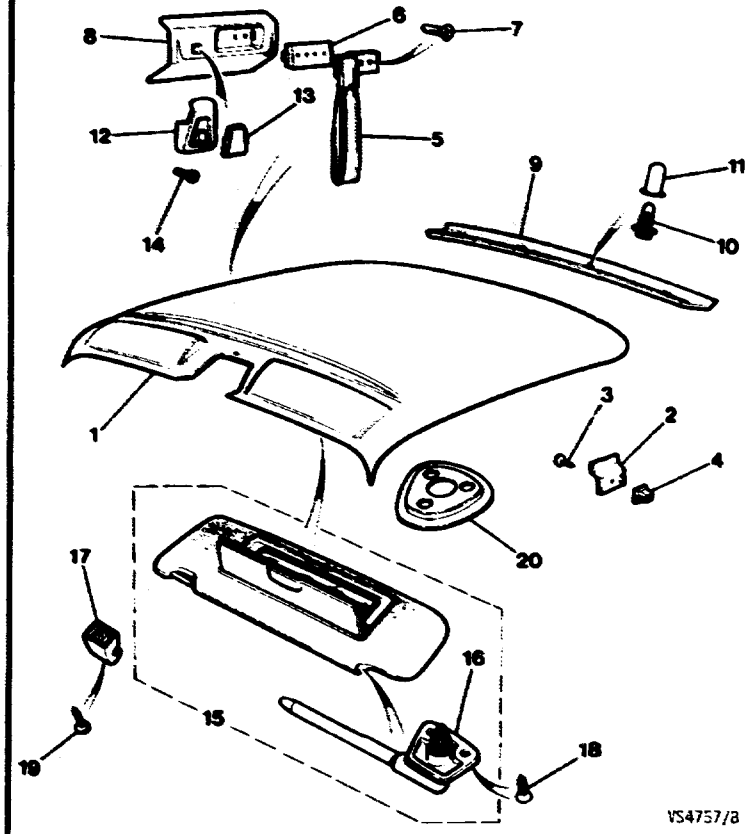

Illus	Part Number	Description	Quantity	Change Point	Remarks
15	BEC 1114 AEE	Sunvisor-RH-velour	1	(1)	
15	BEC 1115 AEE	Sunvisor-LH-velour	1		
15	BDC 9390	Sunvisor-RH-leather	NLA		
15	BDC 9391	Sunvisor-LH-leather	1		
16	BBC 1602	Sunvisor bracket and arm -RH	1		
16	BBC 1603	Sunvisor bracket and arm -LH	1		
17	BCC 9494 XE	Sunvisor support clip-Doeskin	NLA		Use BCC9494AEE.
17	BCC 9494 AEE	Sunvisor support clip-Doeskin	NLA		Use HHC1084AAAEE.
17	HHC 1084AA AEE	Sunvisor support clip-Doeskin	NLA		Use HMD1084AAAEE.
17	HMD 1084AA AEE	Sunvisor support clip-Doeskin	2		
	BBC 7248	Rubber buffer-self adhesive	NLA		Use BCC9488.
	BCC 9488	Rubber buffer-self adhesive	NLA		
	BD 86334	Speed nut	2		
19	DBB 80612C	Self tapping screw	NLA		
20	BEC 2759 AEE	Sunvisor foot finisher -Doeskin	2		
20	BEC 2759 LDY	Sunvisor foot finisher -Savile grey	2		

CHANGE POINTS:
(1) To (V) 594575

ILLUMINATED SUNVISOR

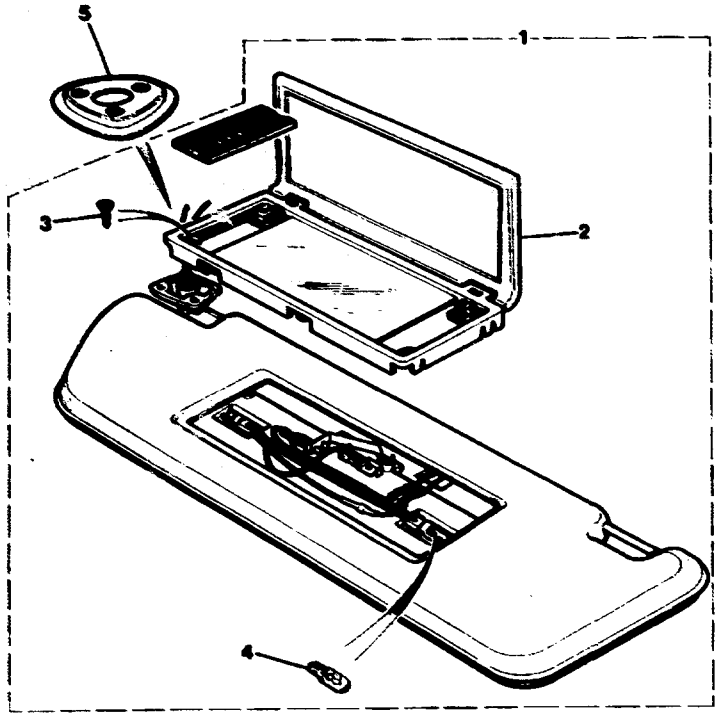


YS5900/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 4586 AEE	Sunvisor-RH-leather-Doeskin	NLA	(1)	Use BEC10478AEE.
1	BEC 4586 LDY	Sunvisor-RH-leather-Savile grey	NLA	(1)	Use BEC10478LDY.
1	BEC 10478 AEE	Sunvisor-RH-leather-Doeskin	1	(2)	
1	BEC 10478 LDY	Sunvisor-RH-leather-Savile grey	1	(2)	
1	BEC 9594 SDC	Sunvisor-RH-leather-Coffee	1	(3)	Majestic
1	BEC 4587 AEE	Sunvisor-LH-leather-Doeskin	NLA	(1)	Use BEC10479AEE.
1	BEC 4587 LDY	Sunvisor-LH-leather-Savile grey	NLA	(1)	Use BEC10479LDY.
1	BEC 10479 AEE	Sunvisor-LH-leather-Doeskin	1	(2)	
1	BEC 10479 LDY	Sunvisor-LH-leather-Savile grey	1	(2)	
1	BEC 9595 SDC	Sunvisor-LH-leather-Coffee	1	(3)	Majestic
1	BEC 4588 AEE	Sunvisor-RH-cloth-Doeskin	1	(1)	
1	BEC 4588 LDY	Sunvisor-RH-cloth-Savile grey	1	(1)	
1	BEC 10476 AEE	Sunvisor-RH-cloth-Doeskin	1	(2)	
1	BEC 10476 LDY	Sunvisor-RH-cloth-Savile grey	1	(2)	
1	BEC 4589 AEE	Sunvisor-LH-cloth-Doeskin	NLA	(1)	Use BEC10477AEE.
1	BEC 4589 LDY	Sunvisor-LH-cloth-Savile grey	NLA	(1)	Use BEC10477LDY.
1	BEC 10477 AEE	Sunvisor-LH-cloth-Doeskin	1	(2)	
1	BEC 10477 LDY	Sunvisor-LH-cloth-Savile grey	1	(2)	

CHANGE POINTS:

(1) From (V) 594576 To (V) 653194
(2) From (V) 653195
(3) From (V) 633352


ILLUMINATED SUNVISOR

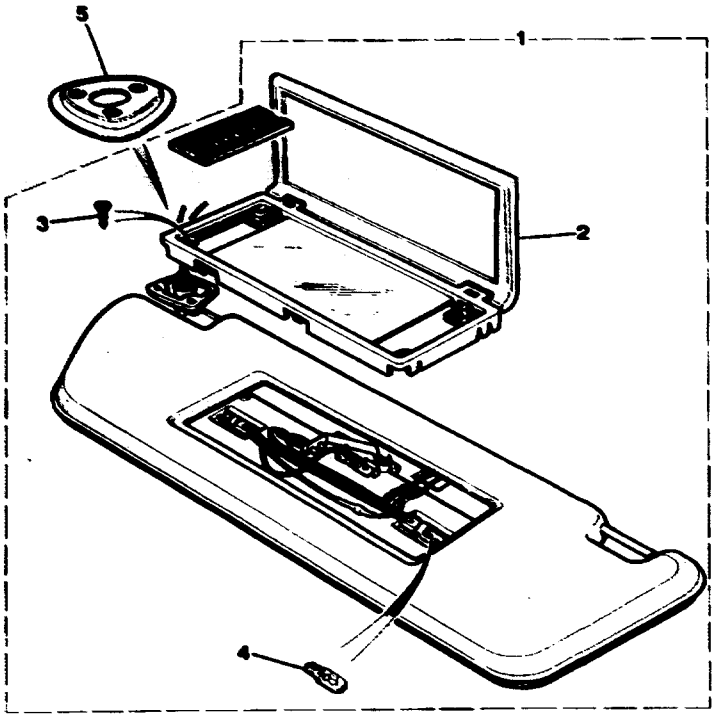

YS5000/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
2	BEC 4808 AEE	Vanity mirror -assembly-leather-Doeskin	1		
2	BEC 4808 LDY	Vanity mirror -assembly-leather-Savile grey	1		
2	BEC 9617 SDC	Vanity mirror -assembly-autolux leather-Coffee	1		
2	BEC 4809 AEE	Vanity mirror -assembly-cloth-Doeskin	1		
2	BEC 4809 LDY	Vanity mirror -assembly-cloth-Savile grey	1		
3	AR 608063 J	Screw	4		
4	C 38966	Bulb-wedge base	2		
	BCC 9894 XE	Stowage support -Doeskin	2		
	BCC 9494 LDY	Sunvisor support clip-Savile grey	NLA		Use HHC1084AALDY.
	HHC 1084AA LDY	Sunvisor support clip-Savile grey	NLA		Use HMD1084AALDY.
	HMD [illegible]94AA LDY	Sunvisor support clip-Savile grey	2		
5	BEC 2759 AEE	Sunvisor foot finisher -Doeskin	2		
5	BEC 2759 LDY	Sunvisor foot finisher -Savile grey	2		

PARCEL SHELF-REAR

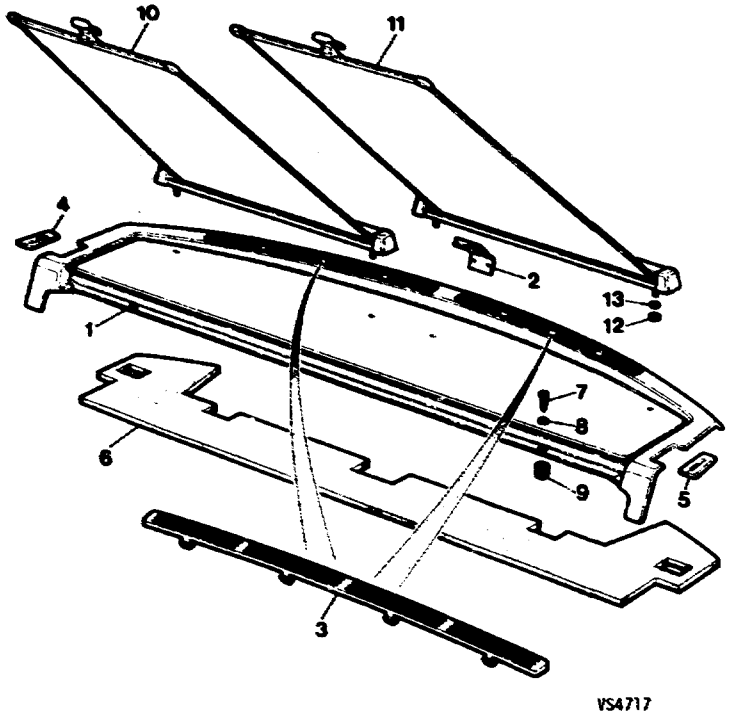


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 5449 *3*	Parcel shelf	1	(1)	
1	BDC 5482 *3*	Parcel shelf	1	(2)	
1	BEC 10048 *9*	Parcel shelf	1	(3)	
1	BEC 12347 *9*	Parcel shelf	1	(4)	
1	BEC 12661 RNR	Parcel shelf-Cream/Coffee	1	(5)	Majestic
1	BEC 12348 NDR	Parcel shelf-Cream	1	(6)	Majestic
2	BCC 1016	Support bracket-rear	1		
	AB 610031 J	Screw	2		
3	BEC 1901	Air extraction grille	NLA	(7)	Use BEC9048AFW qty 1 or
					BEC9048LDY qty 1 or
					BEC9048JEF qty 1 or
					BEC9048LEG qty 1 or
					BEC9048CEM qty 1 or
					BEC9048HEZ qty 1 or
					BEC9048AEE qty 1 or
					BEC9048AEM qty 1.
3	BEC 9048 AFW	Air extraction grille-Barley	2		
3	BEC 9048 LDY	Air extraction grille-Savile grey	2		
3	BEC 9048 JEF	Air extraction grille-Isis blue	2		
3	BEC 9048 LEG	Air extraction grille-Warm charcoal	2		
3	BEC 9048 CEM	Air extraction grille-Mulberry	2		
3	BEC 9048 HEZ	Air extraction grille-Parchment	NLA		
3	BEC 9048 AEE	Air extraction grille-Doeskin	1		
3	BEC 9048 AEM	Air extraction grille-Magnolia	2		
4	BCC 5128 *3*	Seatbelt escutcheon-RH rear	1	(1)	
4	BDC 5480 *3*	Seatbelt escutcheon-RH rear	1	(8)	
4	BDC 5480 NDR	Seatbelt escutcheon-RH rear-Cream	NLA	(2)	Use HNA1228AANDR.
					Majestic
5	HNA 1228AA NDR	Seatbelt escutcheon-RH rear-Cream	1		Majestic
5	BCC 5127 *3*	Seatbelt escutcheon-LH rear	1	(1)	
5	BDC 5481 *3*	Seatbelt escutcheon-LH rear	1	(8)	
5	BDC 5481 NDR	Seatbelt escutcheon-LH rear-Cream	NLA	(2)	Use HNA1229AANDR.
					Majestic
5	HNA 1229AA NDR	Seatbelt escutcheon-LH rear-Cream	1		Majestic
6	BEC 2100	Anti rattle pad	1		
7	DA 606051 J	Self tapping screw-no.8	2		
8	WC 702101 J	Plain washer-no.10	2		
9	AFU 1154 J	Captive nut	2		

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 629285
(3) From (V) 629286 To (V) 647170
(4) From (V) 647171
(5) From (V) 633352 To (V) 656798
(6) From (V) 656799
(7) To (V) 629285
(8) From (V) 594576

SUNBLIND-REAR

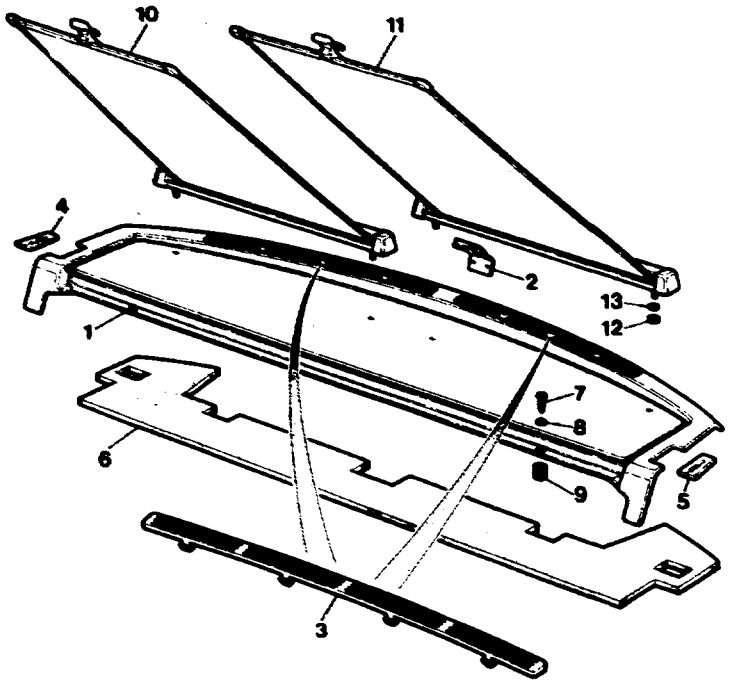

VS4717

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	BEC 6100 LZ	Backlight glass sunblind-RH-Warm charcoal	NLA	(1)	Use BDC6376LEG.
10	BDC 6376 LEG	Backlight glass sunblind-RH-twin-Warm charcoal	1	(2)	
10	BDC 6376 AEE	Backlight glass sunblind-RH-twin-Doeskin	1		
10	BDC 6376 NDR	Backlight glass sunblind-RH-twin-Cream	1	(3)	Majestic
11	BCC 6101 LZ	Backlight glass sunblind-LH-Warm charcoal	NLA		Use BDC6377LZ.
11	BDC 6377 LZ	Backlight glass sunblind-LH-Warm charcoal	NLA		Use BDC6377LEG.
11	BDC 6377 LEG	Backlight glass sunblind-LH-twin-Warm charcoal	1	(1)	
11	BDC 6377 AEE	Backlight glass sunblind-LH-twin-Doeskin	1	(2)	
11	BDC 6377 NDR	Backlight glass sunblind-LH-twin-Cream	1	(3)	Majestic
12	NH 104041 J	Nut-M4	4		
13	BD 32692	Flat washer	4		
	JLM 1643 AEE	Sunblind kit-Doeskin	NLA		Use JLM11568AEE.
	JLM 1643 LEG	Sunblind kit-Warm charcoal	NLA		Use JLM11568LEG.
	JLM 1643 LDY	Sunblind kit-Savile grey	NLA		Use JLM11568LDY.
	JLM 11568 AEE	Sunblind kit-Doeskin	NLA		
	JLM 11568 LEG	Sunblind kit-Warm charcoal	NLA		
	JLM 11568 LDY	Sunblind kit-Savile grey	NLA		

CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576

(3) From (V) 633352


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

BADGES AND MOTIFS ..... 4. L 06
BODY EXTERIOR FINISHERS/MOULDINGS ..... 4. K 15
BODY TRIM AND FIXTURES ..... 4. K 04
COACHLINES ..... 4. L 08
DOOR MIRRORS ..... 4. M 06
FRONT BUMPERS ..... 4. K 05
GRILLES ..... 4. L 13
REAR BUMPERS ..... 4. K 11
SUNROOF AND FIXINGS ..... 4. K 02
WINDSCREEN AND BODY GLASSES ..... 4. L 16
BACKLIGHT GLASS AND FINISHER ..... 4. M 04
BRIGHT FINISHERS-DAIMLER/VDP ..... 4. K 15
BRIGHT FINISHERS- ..... 4. K 16
BUMPER-FRONT-WITH ENERGY ..... 4. K 05
BUMPER-FRONT-WITHOUT ENERGY ..... 4. K 08
BUMPER-REAR-WITH ENERGY ABSORBING ..... 4. K 11
BUMPER-REAR-WITHOUT ENERGY ..... 4. K 13
DOUBLE COACHLINE ..... 4. L 10
EXTERIOR DOOR MIRROR ..... 4. M 06
FRONT SPOILER KIT ..... 4. K 04
MOULDINGS AND FINISHERS- ..... 4. K 17
SINGLE COACHLINE ..... 4. L 08
SIXLIGHT ..... 4. M 03
SPOILER AND GRILLE ..... 4. L 13
SUNROOF MOTOR ..... 4. K 03
SUNROOF ..... 4. K 02
TRUNK FINISHER AND WING MOTIF ..... 4. K 18
TRUNK LID EMBLEM ..... 4. L 06
WINDSCREEN FINISHER-LOWER ..... 4. L 18
WINDSCREEN GLASS AND FINISHER ..... 4. L 16


SUNROOF

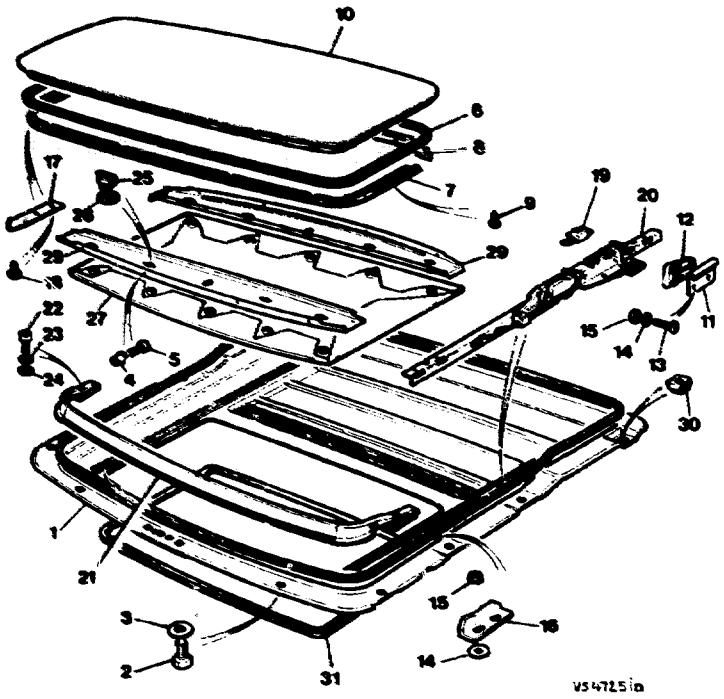

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1479	Sunroof undertray	1		
	CAP	484	Support bracket-sunroof	4		
2	SH	108161 J	Setscrew-imperial fixing	6		
3	WC	108051 J	Plain washer	15		
	FS	108161 J	Flange screw-M8	9		
4	MM	104201 J	Blind rivet nut	NLA	(1)	Use AGU2521.
4	AGU	2521	Blind rivet nut	NLA		Use AGU2540J.
4	AGU	2540 J	Blind rivet nut	4	(2)	
	WE	105001 J	Serrated washer-console extension	4		
5	BD	48976	Flanged head screw	4		
6	BBC	6189	Sunroof seal -outer	NLA		Use BDC5374.
6	BDC	5374	Sunroof seal	1		
7	BAC	6032	Seal retainer-front-outer	1		
8	BBC	3282	Seal retainer-rear -outer	1		
9	BD	48972	Self tapping screw	22		
10	CAP	720	Sunroof panel	1		
11	BBC	6179	Seal support plate -outer	2		
12	BBC	6492	Lifter block mechanism -RH	1		
12	BBC	6493	Lifter block mechanism -LH	1		
13	SE	104121 J	Screw	4		
14	WF	104001 J	Washer	4		
15	NH	104041 J	Nut-M4	4		
16	BBC	6486	Lifter block -RH front	1	(1)	
16	BDC	3614	Lifter block -RH front	1	(2)	
16	BBC	6487	Lifter block -LH front	1	(1)	
16	BDC	3615	Lifter block -LH front	1	(2)	
14	WF	104001 J	Washer	4		
15	NH	104041 J	Nut-M4	4		
17	BBC	9536	Deflector plate lid -RH	1		
17	BBC	9537	Deflector plate lid -LH	1		
18	AB	606021 J	Screw	4		
19	BBC	6498	Slide cam	2		
20	BBC	6490	Sunroof opening mechanism-RH	1		
20	BBC	6491	Sunroof opening mechanism-LH	1		
21	BBC	6483	Wind deflector	1		
22	SS	104081 J	Socket head screw -M4	2		
23	WE	104001 J	Shakeproof washer-M4	2		
24	WA	104001 J	Plain washer	2		
25	BBC	6496	Fixation knob	10		
26	BBC	6497	Foam washer	10		
27	JLM	1356 NDD	Sunroof panel-Limestone	1		
27	JLM	1356 LDY	Sunroof panel-Savile grey	1		
28	JLM	1483	Plate-front	1		
29	JLM	1484	Plate-rear	1		

CHANGE POINTS:
(1) To (V) 541004
(2) From (V) 541005

SUNROOF MOTOR

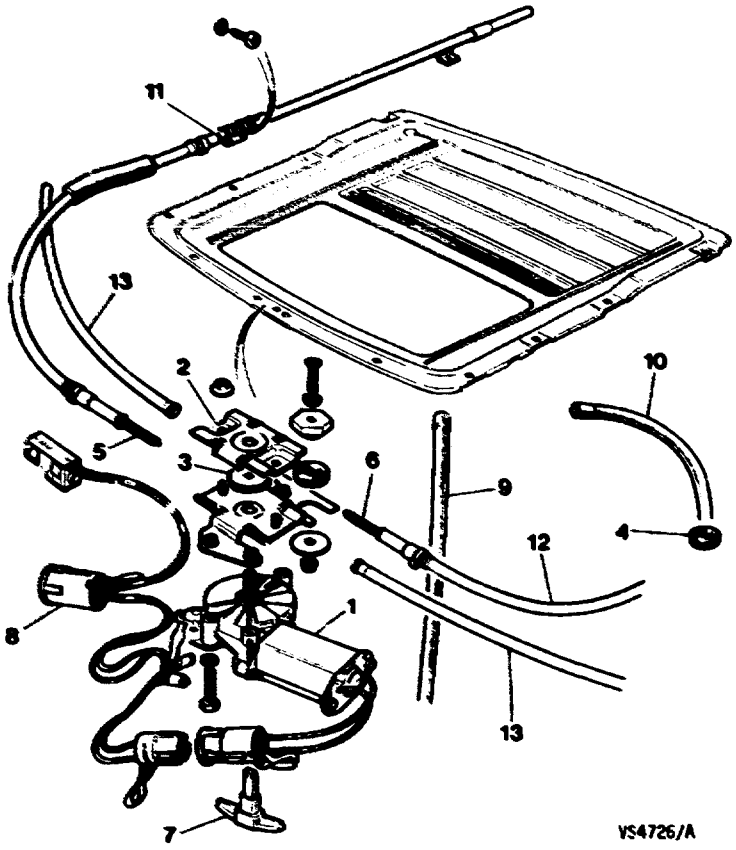


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BBC 6499	Sunroof motor	NLA	(1)	Use JLM1268.
1	JLM 1268	Sunroof motor	1	(2)	
2	JLM 1269	Sunroof motor bracket	1		
3	JLM 1270	Drive mechanism gear-sunroof	1		
4	BAC 5300	Drain tube grommet	NLA	(1)	Use BCC6322.
4	BCC 6322	Drain tube grommet -rear	NLA	(2)	Use HNA1739AA.
4	HNA 1739AA	Drain tube grommet -rear	4		
5	BBC 6484	Drive cable-assembly-RH	1		
6	BBC 6485	Drive cable-assembly-LH	1		
7	BBC 8355	Manual override key	1		
8	DBC 2454	Switch harness	1		
9	BBC 3950	Undertray drain tube -front	NLA	(1)	Use BEC1275.
9	BEC 1275	Undertray drain tube -front/rear	2		
10	BBC 5604	Undertray drain tube -front/rear	NLA	(2)	Use BDC6630.
10	BDC 6630	Undertray drain tube -front/rear	NLA	(1)	Use BEC1275.
10	BEC 1275	Undertray drain tube -front/rear	4	(3)	
10	BEC 14713	Undertray drain tube -front/rear	4	(4)	
10	BBC 1555	Undertray drain tube -front lower	NLA	(1)	Use BCC9481.
10	BCC 9481	Undertray drain tube -front lower	NLA	(5)	Use CAC87771.
	CAC 87771	Hose clip	4	(6)	
11	JLM 2242	Cable-RH-assembly	1		
12	JLM 2243	Cable-LH-assembly	1		
13	JLM 2244	Cable relief tube-plastic	2		

CHANGE POINTS:

(1) To (V) 524374
(2) From (V) 524375
(3) From (V) 587277 To (V) 659823
(4) From (V) 659829
(5) To (V) 587276
(6) From (V) 587277


FRONT SPOILER KIT

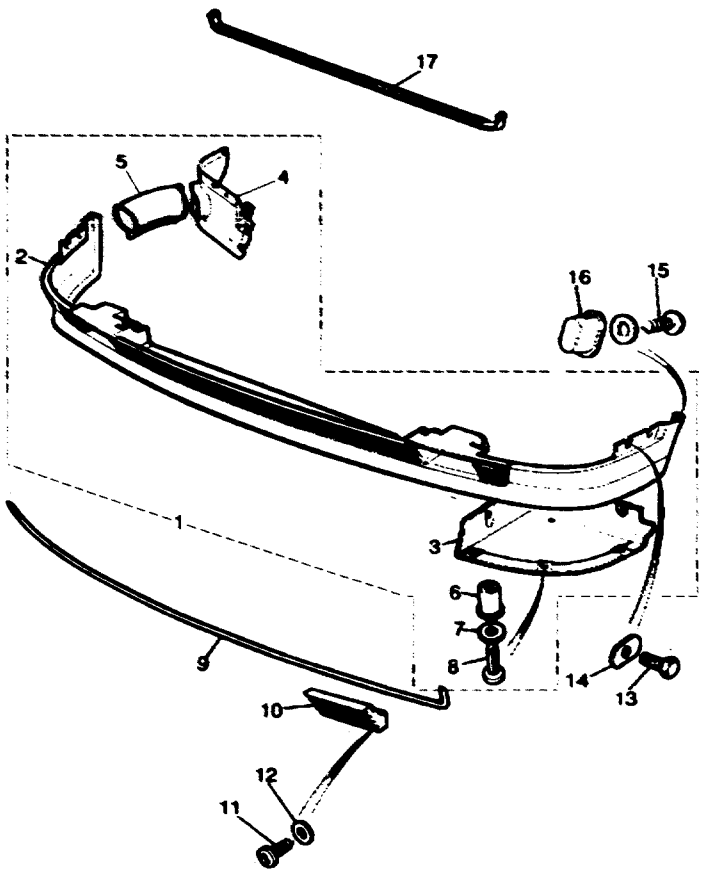

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	JLM 11703	KIT-FRONT SPOILER	1		
2	BDC 7042	• Spoiler panel	1		
3	BDC 7494	• Undertray-RH	1		
3	BDC 7495	• Undertray-LH	1		
4	BEC 11048	• Wheelarch baffle-RH	1		
4	BEC 11049	• Wheelarch baffle-LH	1		
5	BBC 4938	• Brake cooling duct-RH	1		
5	BBC 4939	• Brake cooling duct-LH	1		
6	AAU 4931	• Rawl nut	14		
7	BD 33929	• Plain washer-0.197" dia	14		
8	SE 105165J	• Setscrew	14		
9	BCC 7200	Bright finisher-spoiler	1		
10	BAC 6646	Grille duct -RH	1		
10	BAC 6647	Grille duct -LH	1		
11	AC 606051J	Screw-no.6 x 0.625	2		
12	WA 104005J	Plain washer	4		
13	GG 106201J	Screw	4		
14	BD 54212	Oval washer	4		
15	JZH 100005	Serns screw-self tapping	4		
16	BD 48954	Lokut nut	4		
17	BBC 8601	Seal	NLA	(1)	Use BCC9552
17	BCC 9552	Seal	1	(2)	

CHANGE POINTS:
(1) To (V) 524374
(2) From (V) 524375


BUMPER-FRONT-WITH ENERGY ABSORBING STRUT

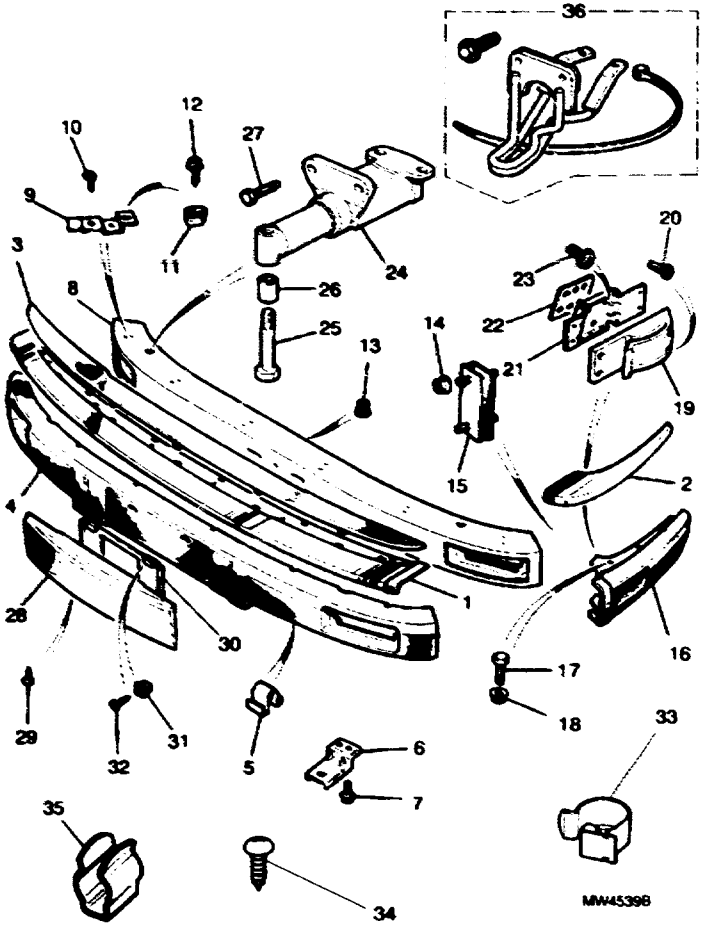

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 7288	Bumper blade-front	NLA		Use BEC24150.
					Except headlamp powerwash
1	BEC 24150	Bumper blade-front	1		Except headlamp powerwash
1	BCC 7290	Bumper blade-front	NLA	(1)	Use BEC8992.
					Headlamp powerwash
1	BEC 8992	Bumper blade-front	NLA	(2)	Use BEC24151.
					Headlamp powerwash
1	BCC 7292	Bumper blade-front	NLA	(3)	Use BEC24151.
					Headlamp powerwash
1	BEC 24151	Bumper blade-front	1		Headlamp powerwash
2	BCC 7284	Bumper blade-RH front-side	NLA		Use BEC24862.
2	BEC 24862	Bumper blade-RH front-side	1		
2	BCC 7285	Bumper blade-LH front-side	NLA		Use BEC24863.
2	BEC 24863	Bumper blade-LH front-side	1		
3	BAC 6224	Finisher	1		
4	BBC 8988	Bumper blade cover	NLA	(3)	~~Use BDC5098.~~
4	BDC 5098	Bumper blade cover	1		
5	BBC 3798	Clip	NLA		Use BDC7722.
5	BDC 7722	Clip	15		
6	JLM 9895	Fog lamp fitting kit-front	1	(3)	
6	JLM 1908	Fog lamp fitting kit-front	1	(4)	
7	FS 108201	Setscrew	NLA		Use FS108201J.
8	BCC 3645	Bumper beam	NLA	(1)	Use BEC3124.
					Headlamp powerwash
8	BEC 3124	Bumper beam	1	(2)	
9	BBC 4742	Retaining bracket	6		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 556850
(4) From (V) 556851


BUMPER-FRONT-WITH ENERGY ABSORBING STRUT

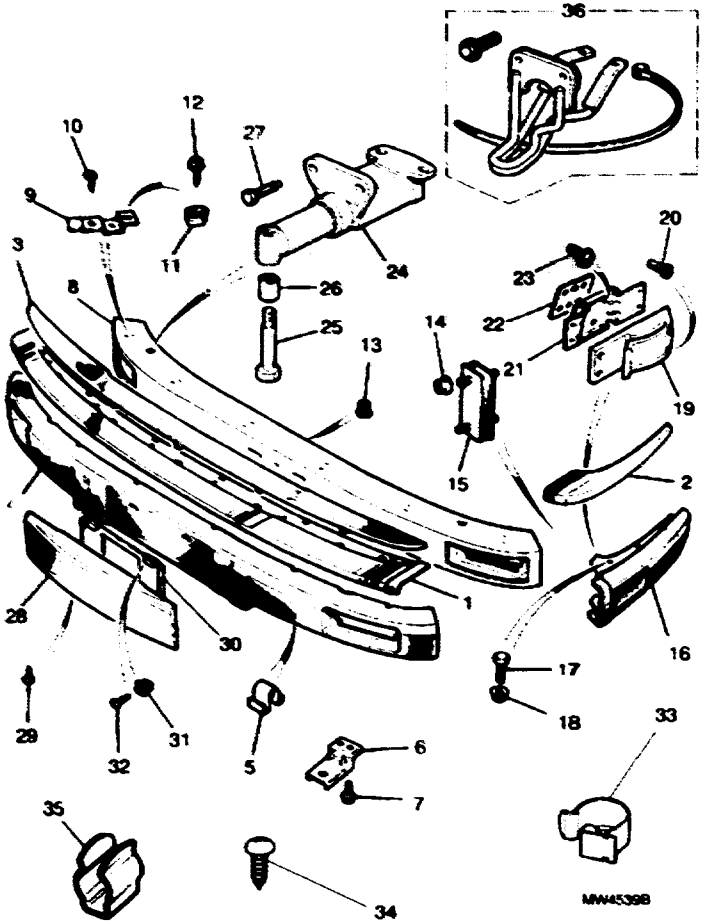

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	AA 610051	Flanged head screw	NLA		Use AA610051J.
10	AA 610051J	Flanged head screw-no.10 x 0.625"	12		
11	DRC 5582	Lokut nut	NLA		Use BD48954.
11	BD 48954	Lokut nut	6		
12	AA 608031J	Self tapping screw	NLA		Use AA608038J.
12	AA 608038J	Self tapping screw	6		
13	JZR 100011	Blind rivet nut-M8	4		
14	FN 105041J	Nut-M5	NLA		Use FN105045J.
14	FN 105045J	Nut-M5	6		
15	BBC 2298	Mounting block	2	(1)	See PTI 148
17	SH 105121	Bolt	6		
18	FN 105041J	Nut-M5	NLA		Use FN105045J.
18	FN 105045J	Nut-M5	6		
16	BBC 7096	Bumper beam and cover-RH side	NLA	(1)	Use BDC6776.
16	BDC 6776	Bumper beam and cover-RH side	1		
16	BBC 7097	Bumper beam and cover-LH side	NLA	(1)	Use BDC6777
16	BDC 6777	Bumper beam and cover-LH side	1		
19	BBC 7087	Guide block	NLA		Use HMB6454AA.
20	AGU 1966	Screw	NLA		Use JXH104108 qty 1 with WA104001J qty 1.

CHANGE POINTS:
(1) To (V) 573113


BUMPER-FRONT-WITH ENERGY ABSORBING STRUT

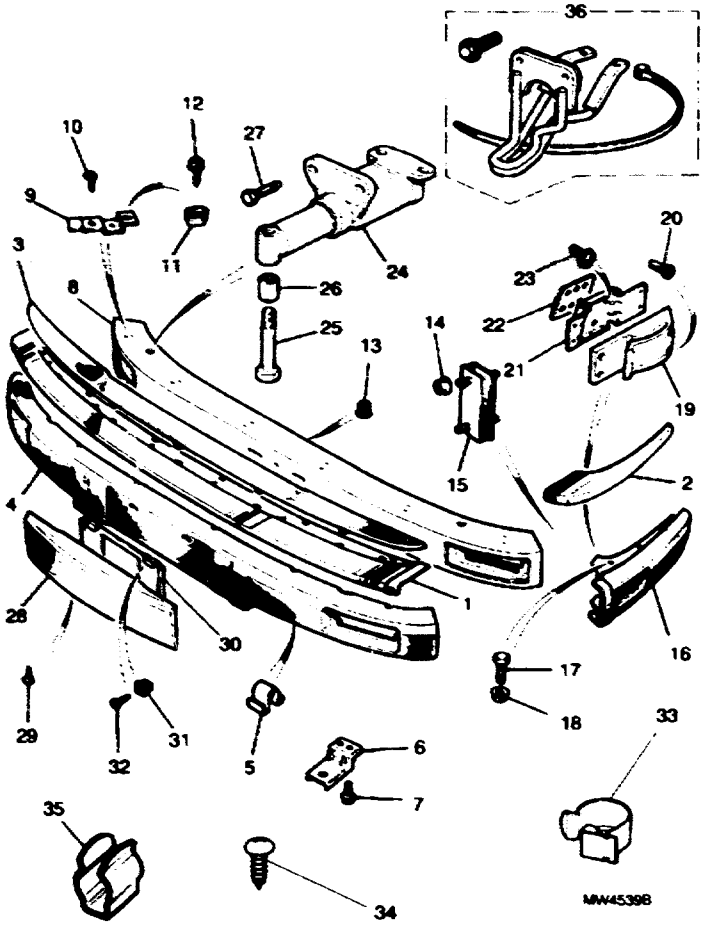

Illus	Part Number		Description	Quantity	Change Point	Remarks
21	BDC	4776	Guide block mounting bracket -RH	1		
21	BAC	6495	Guide block mounting bracket -LH	NLA	(1)	Use BDC4777.
21	BDC	4777	Guide block mounting bracket -LH	1	(2)	
22	BAC	6484	Gasket	NLA		Use BEC9210.
22	BEC	9210	Gasket	NLA		Use BEC15560.
22	BEC	15560	Gasket-bracket to body	2		
23	AGU	2020	Torx head screw-M6	NLA		Use JXR10616F.
23	JXR	10616F	Torx head screw	6		
24	BCC	8283	Bumper strut-front-energy absorbing	2		
25	BCC	8451	Bolt -beam to strut	2		
26	BAC	6544	Spacer	NLA		Use BDC4862.
26	BDC	4862	Spacer	2		
27	BCC	4466	Screw	NLA		Use FT108351.
	FT	108351	Flange head screw	8		
28	BCC	7456	Centre insert	NLA		Use BDC4076.
28	BDC	4076	Centre insert	1		Number plate not fitted
	JLM	1327	Centre bumper insert kit	1		
29	AB	604041 J	Recessed pan head screw-self tapping	2		Federal number plate
30	BBC	2883	Bumper mounting bracket	NLA		Use BDC4079.
30	BDC	4079	Bumper mounting bracket	NLA		Federal number plate
31	C	31973 15	Lokut nut	2		
32	JLM	9577	Self tapping screw	1		
33	EAC	2421 3	Edge clip	2	(3)	Wiring harness to bumper beam
34	AB	610041 J	Self tapping screw	2		
35	C	38827 2	Retaining clip	2		
	KRC	1152	O-ring-0.25" diameter	4		
36	JLM	1533	TOW EYE KIT	1		
	C	46294	• Tie strap-10.75"	2		
	WJ	108001 J	• Plain washer	1		

CHANGE POINTS:
(1) To (V) 524374
(2) From (V) 524375
(3) From (V) 594635


BUMPER-FRONT-WITHOUT ENERGY ABSORBING STRUT

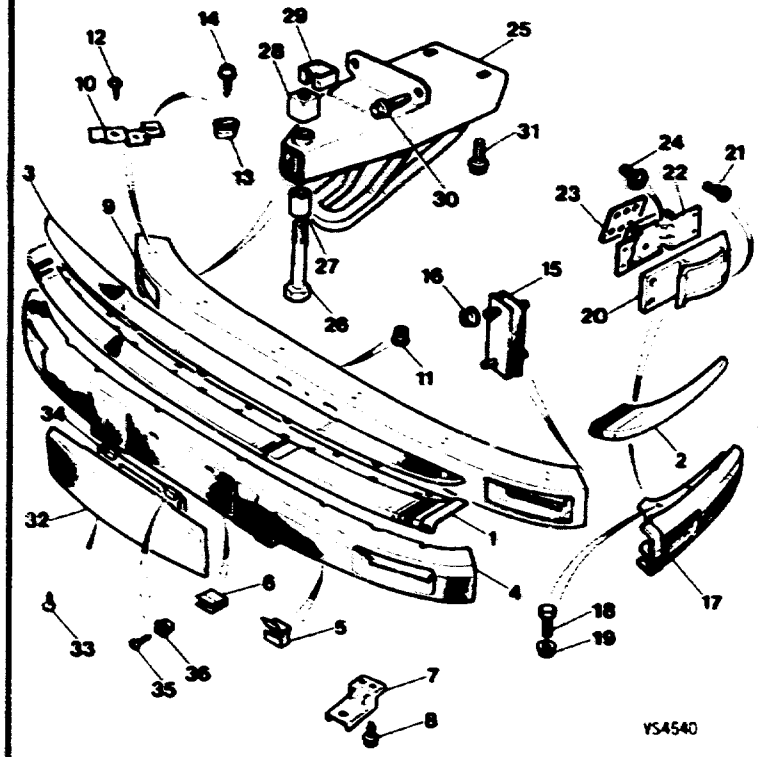

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 7286	Bumper blade-front	NLA		Use BEC24150.
					Except headlamp powerwash
1	BEC 24150	Bumper blade-front	1		Except headlamp powerwash
1	BCC 7290	Bumper blade-front	NLA	(1)	Use BEC8992.
					Headlamp powerwash
1	BEC 8992	Bumper blade-front	NLA	(2)	Use BEC24151.
					Headlamp powerwash
1	BCC 7292	Bumper blade-front	NLA	(3)	Use BEC24151.
					Headlamp powerwash
1	BEC 24151	Bumper blade-front	1		Headlamp powerwash
2	BCC 7284	Bumper blade-RH front-side	NLA		Use BEC24862.
2	BEC 24862	Bumper blade-RH front-side	1		
2	BCC 7285	Bumper blade-LH front-side	NLA		Use BEC24863.
2	BEC 24863	Bumper blade-LH front-side	1		
3	BAC 6224	Finisher	1		
4	BBC 8988	Bumper blade cover	NLA		Use BDC5098.
4	BDC 5098	Bumper blade cover	1		
5	BBC 3799	Clip	NLA		Use BDC7723.
	BDC 7723	Edge clip	10		
6	BL 109111 24	Clip	5		
7	BBC 4330	Fog lamp bracket	NLA		Use BCC5983.
7	BCC 5983	Fog lamp bracket	NLA		Use JLM9895.
	JLM 9895	Fog lamp fitting kit-front	1	(3)	
	JLM 1908	Fog lamp fitting kit-front	1	(4)	
8	FS 108201 J	Flange head screw	4		
9	BBC 9683	Bumper beam	NLA	(1)	Use BDC5105.
9	BDC 5105	Bumper beam	NLA	(2)	Use BEC24868.
9	BEC 24868	Bumper beam	1		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 556850
(4) From (V) 556851


BUMPER-FRONT-WITHOUT ENERGY ABSORBING STRUT

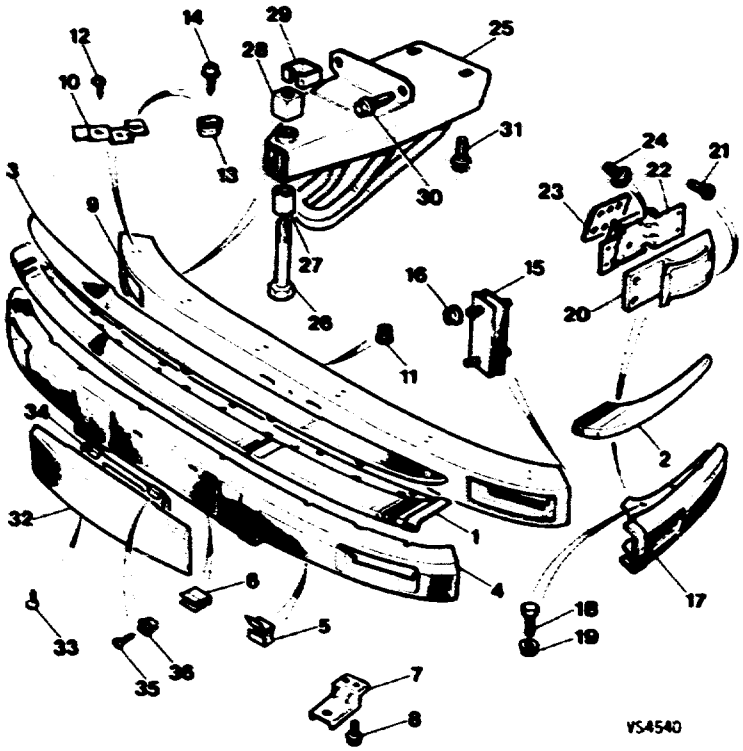

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	BBC 4742	Retaining bracket	6		
11	AGU 2485J	Blind rivet nut-M6	4		
12	AA 610051	Flanged head screw	NLA		Use AA610051J.
12	AA 610051J	Flanged head screw-no.10 x 0.625"	12		
13	DRC 5582	Lokut nut	NLA		Use BD48954.
13	BD 48954	Lokut nut	6		
14	AA 608031J	Self tapping screw	NLA		Use AA608038J.
14	AA 608038J	Self tapping screw	6		
15	BBC 2298	Mounting block	2	(1)	See PTI 148
16	FN 105041	Nut-M5	8		
17	BBC 7098	Bumper beam and cover-RH side	NLA	(1)	Use BDC6776.
17	BDC 6776	Bumper beam and cover-RH side	1	(2)	
17	BBC 7097	Bumper beam and cover-LH side	NLA	(1)	Use BDC6777.
17	BDC 6777	Bumper beam and cover-LH side	1	(2)	
18	FS 105121J	Flanged head screw-M5	4	(1)	
18	SH 105121J	Screw	8	(2)	
19	FN 105041	Nut-M5	6		
20	BBC 7087	Guide block	NLA		Use HMB6454AA.
20	HMB 6454AA	Guide block	2		
21	AGU 1988	Screw	NLA		Use JXH10410B qty 1 with WA104001J qty 1.
	JXH 10410B	Torx drive screw	1		
	WA 104001J	Plain washer	1		

CHANGE POINTS:
(1) To (V) 573113
(2) From (V) 573114

BUMPER-FRONT-WITHOUT ENERGY ABSORBING STRUT

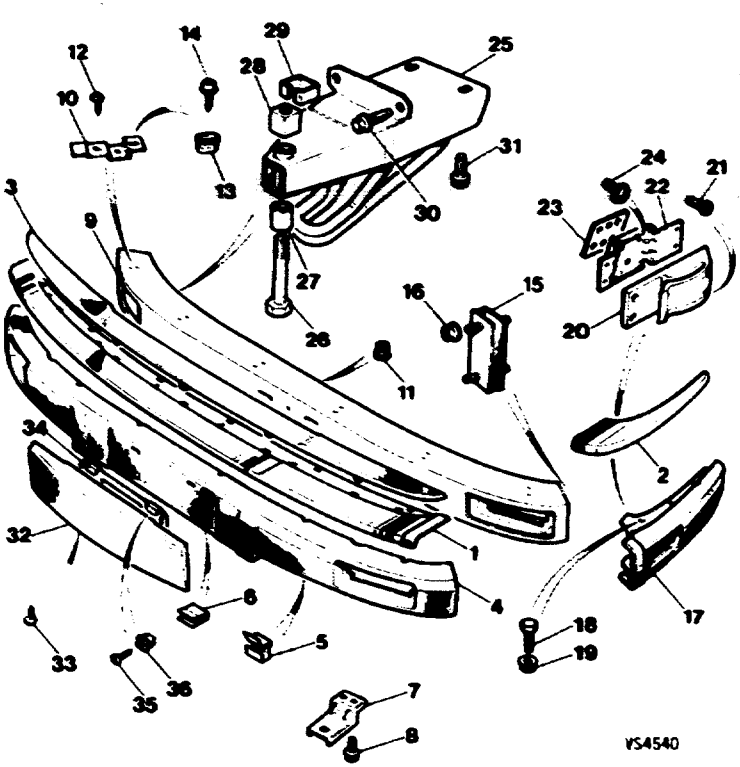


Illus	Part Number	Description	Quantity	Change Point	Remarks
22	BDC 4776	Guide block mounting bracket -RH	1		
22	BAC 6495	Guide block mounting bracket -LH	NLA	(1)	Use BDC4777.
22	BDC 4777	Guide block mounting bracket -LH	1	(2)	
23	BAC 6484	Gasket	NLA	(3)	Use BEC9210.
23	BEC 9210	Gasket	NLA	(4)	Use BEC15560.
23	BEC 15560	Gasket-bracket to body	2		
24	AGU 2020	Torx head screw-M6	NLA		Use JXR10816F.
24	JXR 10816F	Torx head screw	6		
25	BDC 4856	Mounting bracket-RH	1		
25	BDC 4857	Mounting bracket-LH	1		
26	BAC 6543	Bolt	NLA		Use BCC8451.
26	BCC 8451	Bolt -beam to strut	2		
27	BAC 6544	Spacer	NLA		Use BDC4862.
27	BDC 4862	Spacer	2		
28	BAC 5643	Nut	2		
29	BBC 4199	Retaining clip	2		
30	BD 489821	Screw-mounting bracket to body	NLA		Use BCC8005.
31	BD 489821	Screw-mounting bracket to body	NLA		Use BCC8005.
	BCC 8005	Paint clearing screw	NLA		Use JHG10825EM.
	JHG 10825EM	Paint clearing screw	8		
32	BCC 7456	Centre insert	NLA		Use BDC4076.
32	BDC 4076	Centre insert	1		Number plate not fitted
33	AB 604041J	Recessed pan head screw-self tapping	2		
34	BBC 2663	Bumper mounting bracket	NLA		Use BDC4079.
34	BDC 4079	Bumper mounting bracket	NLA		
35	JLM 9577	Self tapping screw	2		
36	C 3197315	Lokut nut	2		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851
(3) To (V) 656137
(4) From (V) 656138

BUMPER-REAR-WITH ENERGY ABSORBING STRUT

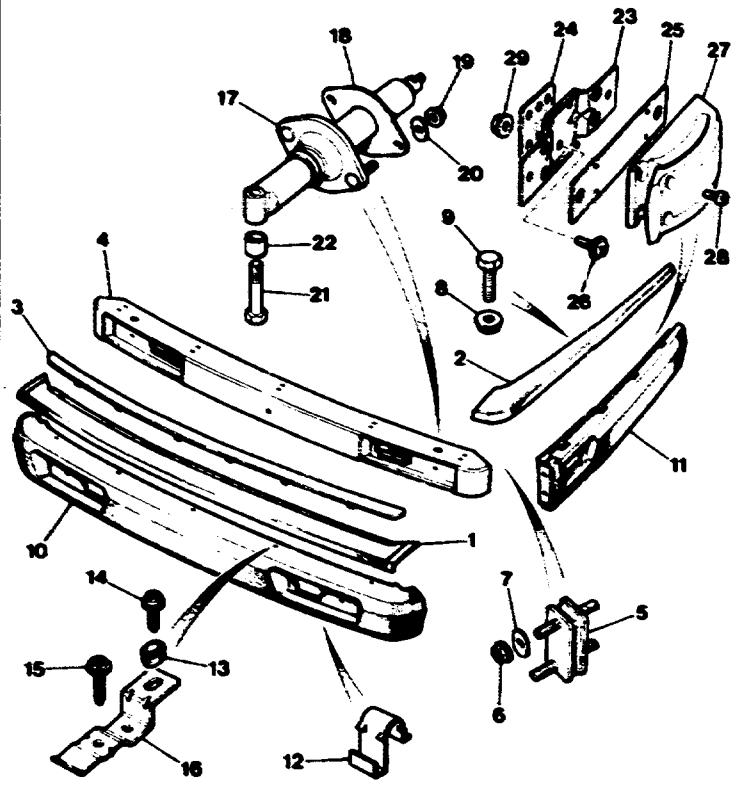


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 7300	Bumper blade-rear	NLA		Use BEC24152.
1	BEC 24152	Bumper blade-centre	1		
2	BAC 6294	Bumper blade-RH rear	NLA	(1)	Use BCC7298.
2	BCC 7298	Bumper blade-RH rear	NLA	(2)	Use BEC23046.
2	BEC 23046	Bumper blade-RH rear-side	1		
2	BCC 7299	Bumper blade-LH rear-side	NLA		Use BEC23047.
2	BEC 23047	Bumper blade-LH rear-side	1		
3	BAC 6301	Finisher	1		
4	BDC 8071	Bumper beam	NLA		Use BEC16962.
4	BEC 16962	Bumper beam	1		
5	BBC 2298	Mounting block	2	(3)	
6	FN 105045J	Nut-M5	8		
7	BD 54210	Special washer	4		
8	FN 105041J	Nut-M5	NLA		Use FN105045J.
8	FN 105045J	Nut-M5	8		
9	SH 105121J	Screw	8		
15	FS 105121J	Flanged head screw-M5	8		
10	BBC 9492	Bumper beam cover	1		
11	BDC 6166	Bumper beam and cover-RH rear-side-welded beam	NLA	(3)	Use BDC7106.
11	BDC 7106	Bumper beam and cover-RH rear-side-ABS beam	NLA	(4)	Use BEC8588.
11	BDC 6167	Bumper beam and cover-LH rear-side-welded beam	NLA	(3)	Use BDC7107.
11	BDC 7107	Bumper beam and cover-LH rear-side-ABS beam	NLA	(4)	Use BEC8589.
11	BEC 6588	Bumper beam and cover-RH rear-side	1	(5)	
11	BEC 6589	Bumper beam and cover-LH rear-side	1	(5)	
12	BBC 3798	Clip	NLA		Use BDC7722.
12	BDC 7722	Clip	9		
13	DRC 5582	Lokut nut	NLA		Use BD48954.
13	BD 48954	Lokut nut	5		
14	AA 608031J	Self tapping screw	NLA		Use AA608038J.
14	AA 608038J	Self tapping screw	5		
15	AA 610051J	Flanged head screw-no.10 x 0.625"	10		
16	BBC 4743	Retaining bracket	5		

CHANGE POINTS:

(1) To (V) 524374
(2) From (V) 524375
(3) To (V) 556850
(4) To (V) 629285
(5) From (V) 629286

BUMPER-REAR-WITH ENERGY ABSORBING STRUT

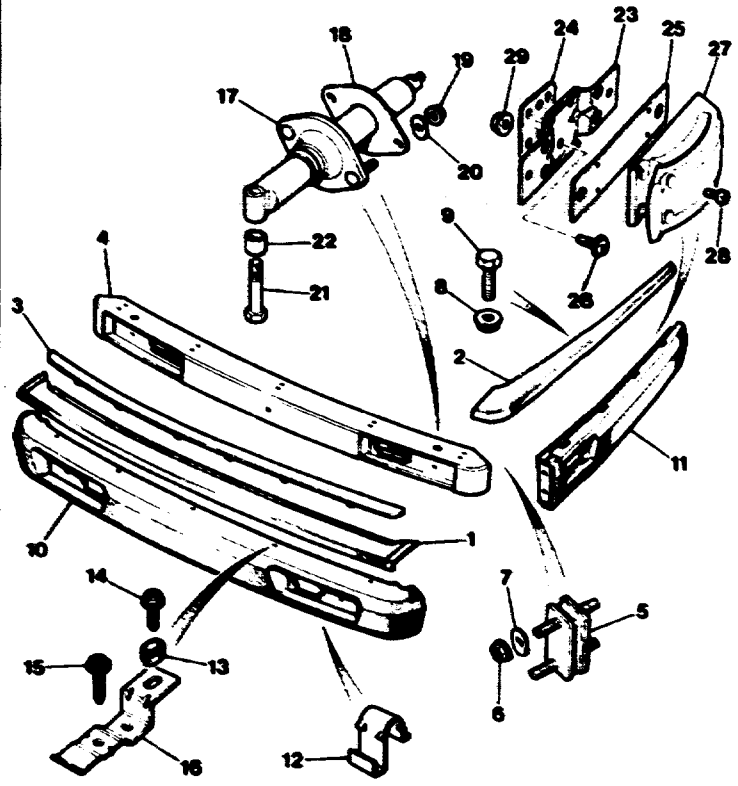


YS4537/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
17	BCC 7351	Bumper strut-energy absorbing	NLA		Use BDC3168.
17	BDC 3168	Bumper strut-energy absorbing	2		
18	BBC 3185	Gasket	NLA	(1)	Use BCC7354.
18	BCC 7354	Strut gasket	NLA	(2)	Use BDC7981.
	BDC 7981	Strut gasket	2		
19	FN 108041 J	Flanged nut -M8	4		
20	BD 542 10	Special washer	4		
21	BAC 6543	Bolt	NLA		Use BCC8451.
21	BCC 8451	Bolt -beam to strut	2		
22	BAC 6544	Spacer	NLA		Use BDC4862.
22	BDC 4862	Spacer	2		
23	BDC 4774	Guide block mounting bracket	NLA		Use BEC9212.
23	BEC 9212	Guide block mounting bracket	2		
24	BAC 6484	Gasket	NLA		Use BEC9210.
24	BEC 9210	Gasket	NLA		Use BEC1556
24	BEC 15560	Gasket-bracket to body	2		
25	BDC 4775	Location plate	2		
	AGU 2371	Setscrew	4		
26	AGU 2020	Torx head screw-M6	NLA		Use JXR10616F.
26	JXR 10616F	Torx head screw	6		
27	BBC 7088	Guide block-rear	2		
28	AGU 1066	Screw	NLA		
29	FN 108041 J	Flanged nut -M8	6		

CHANGE POINTS:
(1) To (V) 524374
(2) From (V) 524375

BUMPER-REAR-WITHOUT ENERGY ABSORBING STRUT

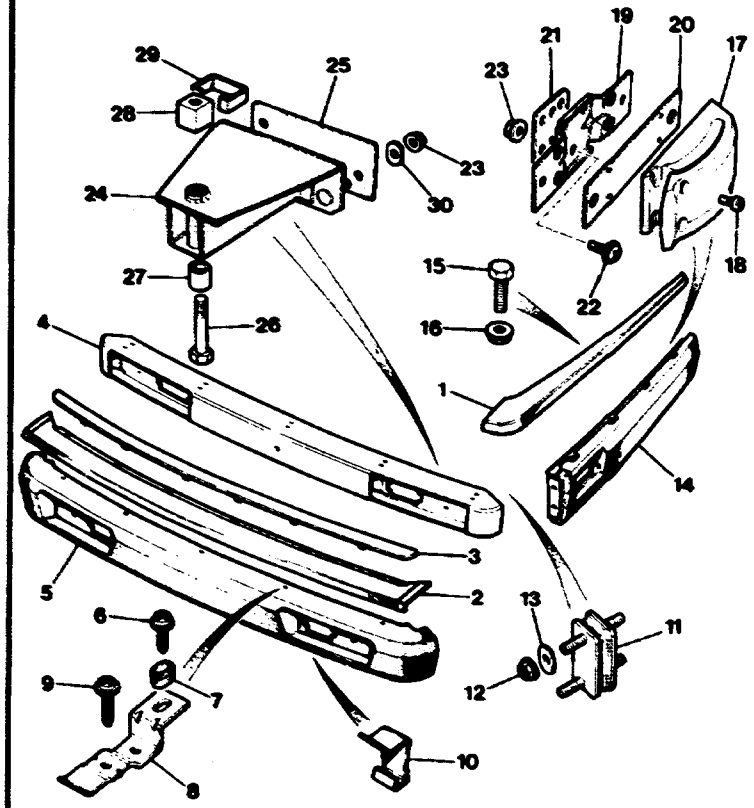

VS4538/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BAC 6294	Bumper blade-RH rear	NLA	(1)	Use BCC7298.
1	BCC 7298	Bumper blade-RH rear	NLA	(2)	Use BEC23046.
1	BEC 23046	Bumper blade-RH rear-side	1		
1	BCC 7299	Bumper blade-LH rear-side	NLA		Use BEC23047.
1	BEC 23047	Bumper blade-LH rear-side	1		
2	BCC 7300	Bumper blade-rear	NLA		Use BEC24152.
2	BEC 24152	Bumper blade-centre	1		
3	BAC 6301	Finisher	1		
4	BBC 3082	Bumper beam	NLA		Use BEC10465.
4	BEC 10465	Bumper beam	NLA		Use BEC24868.
4	BEC 24868	Bumper beam	NLA		Use HMB6580AA.
4	HMB 6580AA	Bumper beam	1		
5	BBC 9492	Bumper beam cover	1		
6	AA 608031	Self tapping screw	NLA		Use AA608031J.
6	AA 608031J	Self tapping screw	NLA		Use AA608038J.
6	AA 608038J	Self tapping screw	5		
7	DRC 5582	Lokut nut	NLA		Use BD48954.
7	BD 48954	Lokut nut	5		
8	BBC 4743	Retaining bracket	5		
9	AA 610051	Flanged head screw	NLA		Use AA610051J.
9	AA 610051J	Flanged head screw-no.10 x 0.625"	10		
10	BBC 3799	Clip	NLA		Use BDC7723.
	BDC 7723	Edge clip	10		
11	BBC 2298	Mounting block	2	(3)	
12	FN 105045J	Nut-M5	8		
13	BD 54210	Special washer	4		
14	BDC 6166	Bumper beam and cover-RH rear-side-welded beam	NLA		Use BDC7106.
14	BDC 7106	Bumper beam and cover-RH rear-side-ABS beam	NLA		Use BEC6588.
14	BEC 6588	Bumper beam and cover-RH rear-side	1		
14	BDC 6167	Bumper beam and cover-LH rear-side-welded beam	NLA		Use BDC7107.
14	BDC 7107	Bumper beam and cover-LH rear-side-ABS beam	NLA		Use BEC6589.
14	BEC 6589	Bumper beam and cover-LH rear-side	1		
15	SH 105121J	Screw	8		
9	FS 105121J	Flanged head screw-M5	8		
16	FN 105041J	Nut-M5	NLA		Use FN105045J.
16	FN 105045J	Nut-M5	8		


CHANGE POINTS:

(1) To (V) 524374


(2) From (V) 524375

(3) To (V) 573113

BUMPER-REAR-WITHOUT ENERGY ABSORBING STRUT

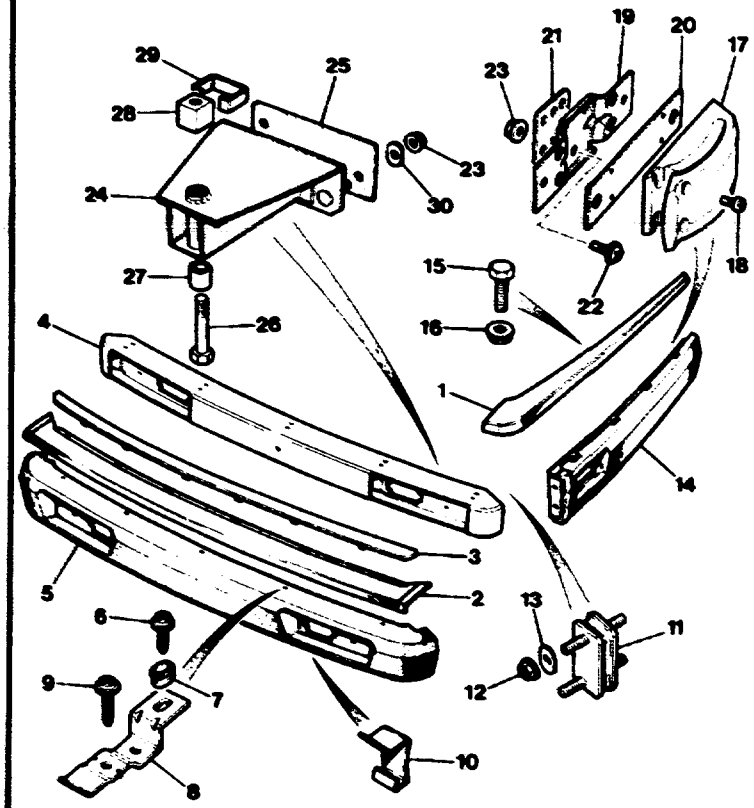


Illus	Part Number		Description	Quantity	Change Point	Remarks
17	BBC	7088	Guide block-rear	2		
18	AGU	1966	Screw	NLA		Use JXH10410B qty 1 with WA104001J qty 1.
19	BDC	4774	Guide block mounting bracket	NLA		Use BEC9212.
19	BEC	9212	Guide block mounting bracket	2		
20	BDC	4775	Location plate	2		
21	BAC	6484	Gasket	NLA		Use BEC9210.
21	BEC	9210	Gasket	NLA		Use BEC15560.
21	BEC	15560	Gasket-bracket to body	2		
22	AGU	2020	Torx head screw-M6	NLA		Use JXR10616F.
23	FN	108041 J	Flanged nut -M8	6		
24	BDC	9436	Bumper beam mounting bracket	2		
25	BCC	5399	Gasket	NLA		Use BDC7980.
25	BDC	7980	Gasket	2		
26	BAC	6543	Bolt	NLA		Use BCC8451.
26	BCC	8451	Bolt -beam to strut	2		
27	BAC	6544	Spacer	NLA		Use BDC4862.
27	BDC	4862	Spacer	2		
28	BAC	5643	Nut	2		
29	BBC	4199	Retaining clip	2		
	AGU	2371	Setscrew	4		
23	FN	108041 J	Flanged nut -M8	4		
30	BD	54210	Special washer	4		

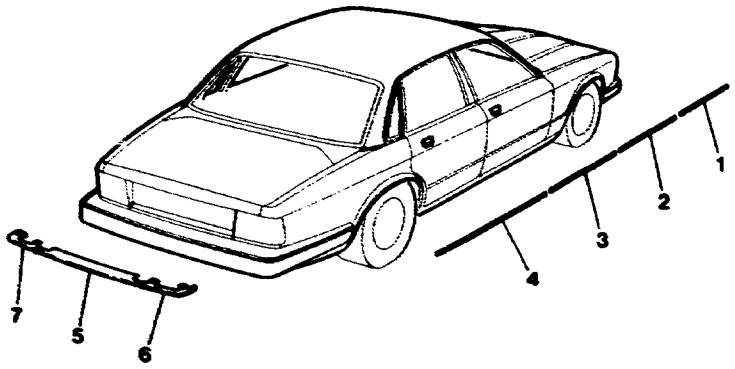

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	5806	Side moulding-RH front fender	NLA	(1)	Use BDC5720. Daimler/VDP
1	BCC	5807	Side moulding-LH front fender	NLA	(1)	Use BDC5721. Daimler/VDP
2	BCC	5808	Side moulding-RH front door	NLA	(1)	Use BDC5722. Daimler/VDP
2	BCC	5809	Side moulding-LH front door	NLA	(1)	Use BDC5723. Daimler/VDP
3	BCC	5810	Side moulding-RH rear door	NLA	(1)	Use BDC5724. Daimler/VDP
3	BCC	5811	Side moulding-LH rear door	NLA	(1)	Use BDC5725. Daimler/VDP
4	BCC	5812	Side moulding-RH rear tonneau	NLA	(1)	Use BDC5726. Daimler/VDP
4	BCC	5813	Side moulding-LH tonneau	NLA	(1)	Use BDC5727. Daimler/VDP
	BD	25659	Friction bush	8	(1)	Daimler/VDP
	BD	267062	Side moulding cup and rivet-assembly	44	(1)	Daimler/VDP
5	BEC	1682	Bright finisher-rear -lower -centre	NLA	(1)	Daimler/VDP
6	BEC	1680	Bright finisher-RH rear-lower	NLA	(1)	Daimler/VDP
7	BEC	1681	Bright finisher-LH rear-lower	NLA	(1)	Daimler/VDP
1	BDC	5720	Side moulding-RH front fender	1		Daimler/VDP
1	BDC	5721	Side moulding-LH front fender	1		Daimler/VDP
2	BDC	5722	Side moulding-RH front door	1		Daimler/VDP
2	BDC	5723	Side moulding-LH front door	1		Daimler/VDP
3	BDC	5724	Side moulding-RH rear door	1		Daimler/VDP
3	BDC	5725	Side moulding-LH rear door	NLA		Use BDC5724. Daimler/VDP
4	BDC	5726	Side moulding-RH rear tonneau	1		Daimler/VDP
4	BDC	5727	Side moulding-LH rear tonneau	1		Daimler/VDP


CHANGE POINTS:
(1) To (V) 594575

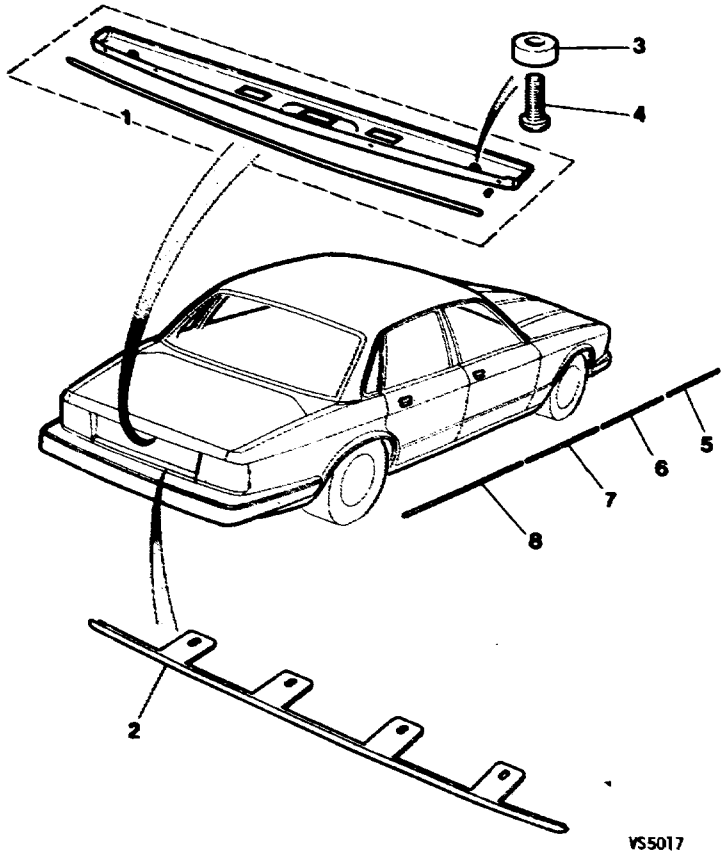

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 7755	Tactile panel-upper-bright finish	NLA	(1)	Use BEC8698.
1	BEC 8698	Tactile panel-upper-bright finish	NLA	(2)	Use BEC20850.
1	BEC 20850	Tactile panel-rear -upper-bright finish	NLA		Use BEC24575.
1	BEC 24575	Tactile panel-rear -upper-bright finish	NLA		Use HMB6141AA.
1	HMB 6141AA	Tactile panel-upper-bright finish	NLA		Use HMB6141BA.
1	HMB 6141BA	Tactile panel-upper-bright finish	1		
2	BEC 2753	Bright finisher	1	(3)	
3	BEC 2757	Spacer	3	(3)	
4	BCC 6624	Flanged head screw	3	(3)	
	BD 48954	Lokut nut	3	(3)	
	BD 48953 1	Screw	NLA	(3)	Use BCC6624.
	BD 48954	Lokut nut	4	(3)	
5	BDC 5720	Side moulding-RH front fender	1	(3)	
5	BDC 5721	Side moulding-LH front fender	1	(3)	
6	BDC 5722	Side moulding-RH front door	1	(3)	
6	BDC 5723	Side moulding-LH front door	1	(3)	
7	BDC 5724	Side moulding-RH rear door	1	(3)	
7	BDC 5725	Side moulding-LH rear door	NLA	(3)	Use BDC5724.
8	BDC 5726	Side moulding-RH rear tonneau	1	(3)	
8	BDC 5727	Side moulding-LH rear tonneau	1	(3)	
	BD 25659	Friction bush	8	(3)	
	BD 267062	Side moulding cup and rivet-assembly	44	(3)	

CHANGE POINTS:


(1) From (V) 594576 To (V) 613534
(2) From (V) 613535
(3) From (V) 594576

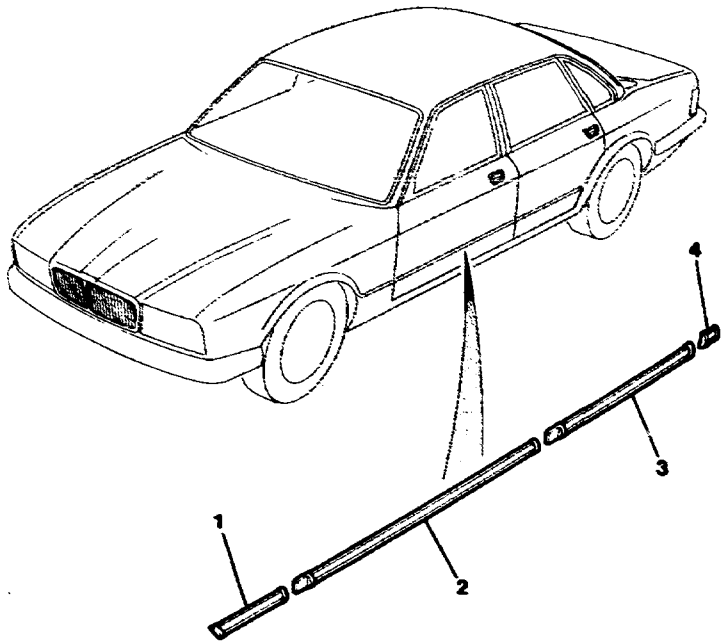

YS5215

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 21092	Side moulding-RH front wing-lower	1	(1)	
1	BEC 21093	Side moulding-LH front wing-lower	1	(1)	
2	BEC 21094	Side moulding-RH front door-lower	1	(1)	
2	BEC 21095	Side moulding-LH front door-lower	1	(1)	
3	BEC 21096	Side moulding-RH rear door-lower	1	(1)	
3	BEC 21097	Side moulding-LH rear door-lower	1	(1)	
4	BEC 21098	Side moulding-RH rear wing-lower	1	(1)	
4	BEC 21099	Side moulding-LH rear wing-lower	1	(1)	
	BEC 16295	Bonnet centre moulding	1	(1)	
1	BEC 9618	Side moulding-RH front wing-upper	NLA	(1)	Use BEC18514.
1	BEC 9619	Side moulding-LH front wing-upper	NLA	(1)	Use BEC18515.
2	BEC 9620	Side moulding-RH front door-upper	NLA	(1)	Use BEC18518.
2	BEC 9621	Side moulding-LH front door-upper	NLA	(1)	Use BEC18519.
3	BEC 9622	Side moulding-RH rear door-upper	NLA	(1)	Use BEC18522.
3	BEC 9623	Side moulding-LH rear door-upper	NLA	(1)	Use BEC18523.
4	BEC 9624	Side moulding-RH rear wing-upper	NLA	(1)	Use BEC18524.
4	BEC 9625	Side moulding-LH rear wing-upper	NLA	(1)	Use BEC18525.
1	BEC 18514	Side moulding-RH front wing-upper	NLA		Use BEC19044.
1	BEC 18515	Side moulding-LH front wing-upper	NLA		Use BEC19045.
2	BEC 18518	Side moulding-RH front door-upper	NLA		Use BEC19046.
2	BEC 18519	Side moulding-LH front door-upper	NLA		Use BEC19047.
3	BEC 18522	Side moulding-RH rear door-upper	NLA		Use BEC19048.
3	BEC 18523	Side moulding-LH rear door-upper	NLA		Use BEC19049.
4	BEC 18524	Side moulding-RH rear wing-upper	NLA		Use BEC19050.
4	BEC 18525	Side moulding-LH rear wing-upper	NLA		Use BEC19051.
	BEC 19044	Fender side moulding-RH front	1		
	BEC 19045	Fender side moulding-LH front	1		
	BEC 19046	Door side moulding-RH front	1		
	BEC 19047	Door side moulding-LH front	1		
	BEC 19048	Door side moulding-RH rear	NLA		Use HMB5714AA.
	BEC 19049	Door side moulding-LH rear	NLA		Use HMB5715AA.
	BEC 19050	Tonneau side moulding -RH rear	1		
	BEC 19051	Tonneau side moulding -LH rear	1		
	HMB 5714AA	Door side moulding-RH rear	1		
	HMB 5715AA	Door side moulding-LH rear	1		

CHANGE POINTS:
(1) From (V) 633352

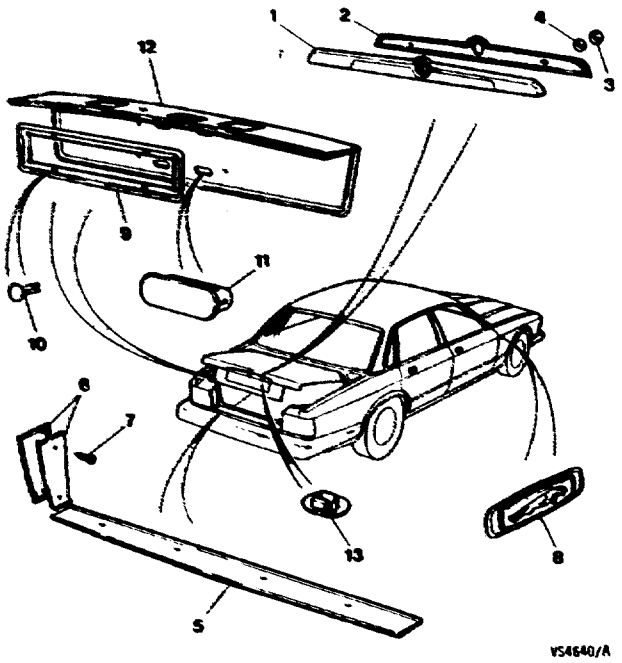

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	NSP	Trunk lid lock finisher	NLA	(1)	Use BDC4550.
					Except Daimler/VDP
1	BDC 4550	Trunk lid lock finisher	NLA	(2)	Use BEC9102.
					Except Daimler/VDP
1	BEC 9102	Trunk lid lock finisher	NLA	(3)	Use BEC21928.
					Except Daimler/VDP
1	BEC 21928	Trunk lid lock finisher	1		Except Daimler/VDP and Majestic
1	BAC 6416	Trunk lid lock finisher	NLA	(1)	Use BDC4551.
					Daimler/VDP
1	BDC 4551	Trunk lid lock finisher	NLA	(4)	Use BEC9101.
					Daimler/VDP
1	BEC 9101	Trunk lid lock finisher	1	(5)	Daimler/VDP
1	BEC 9101	Trunk lid lock finisher	1	(5)	Majestic
2	BBC 3882	Seal	1		
	13H 1453 J	Push on fix-finisher to trunk lid	2		Jaguar
3	NH 105041 J	Nyloc nut-M5	NLA		Use NH105061J.
					Daimler
3	NH 105061 J	Nyloc nut-M5	2		Daimler
4	WA 105001 J	Plain washer-M5	2		Daimler
5	BCC 5123	Trunk lid aperture finisher-lower	NLA	(6)	Use BEC6328.
5	BEC 6328	Trunk lid aperture finisher-lower	NLA	(7)	Use BEC13654.
5	BEC 13654	Trunk lid aperture finisher-lower	NLA	(8)	Use BEC17729.
5	BEC 17729	Trunk lid aperture finisher-lower	NLA		Use BEC18992.
5	BEC 18992	Trunk lid aperture finisher-lower	1		

CHANGE POINTS:

(1) To (V) 572619
(2) From (V) 572620 To (V) 606556
(3) From (V) 606557
(4) From (V) 572620 To (V) 616663
(5) From (V) 616664
(6) To (V) 586715
(7) From (V) 586716 To (V) 650361
(8) From (V) 650362

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E


GROUP INDEX

BADGES AND MOTIFS ..... 4. L 06
BODY EXTERIOR FINISHERS/MOULDINGS ..... 4. K 15
BODY TRIM AND FIXTURES ..... 4. K 04
COACHLINES ..... 4. L 08
DOOR MIRRORS ..... 4. M 06
FRONT BUMPERS ..... 4. K 05
GRILLES ..... 4. L 13
REAR BUMPERS ..... 4. K 11
SUNROOF AND FIXINGS ..... 4. K 02
WINDSCREEN AND BODY GLASSES ..... 4. L 16
BACKLIGHT GLASS AND FINISHER ..... 4. M 04
BRIGHT FINISHERS-DAIMLER/VDP ..... 4. K 15
BRIGHT FINISHERS- ..... 4. K 16
BUMPER-FRONT-WITH ENERGY ..... 4. K 05
BUMPER-FRONT-WITHOUT ENERGY ..... 4. K 08
BUMPER-REAR-WITH ENERGY ABSORBING ..... 4. K 11
BUMPER-REAR-WITHOUT ENERGY ..... 4. K 13
DOUBLE COACHLINE ..... 4. L 10
EXTERIOR DOOR MIRROR ..... 4. M 06
FRONT SPOILER KIT ..... 4. K 04
MOULDINGS AND FINISHERS- ..... 4. K 17
SINGLE COACHLINE ..... 4. L 08
SIXLIGHT ..... 4. M 03
SPOILER AND GRILLE ..... 4. L 13
SUNROOF MOTOR ..... 4. K 03
SUNROOF ..... 4. K 02
TRUNK FINISHER AND WING MOTIF ..... 4. K 18
TRUNK LID EMBLEM ..... 4. L 06
WINDSCREEN FINISHER-LOWER ..... 4. L 18
WINDSCREEN GLASS AND FINISHER ..... 4. L 16

EXTERIOR FITTINGS AND SUNROOF

BODY EXTERIOR FINISHERS/MOULDINGS

TRUNK FINISHER AND WING MOTIF

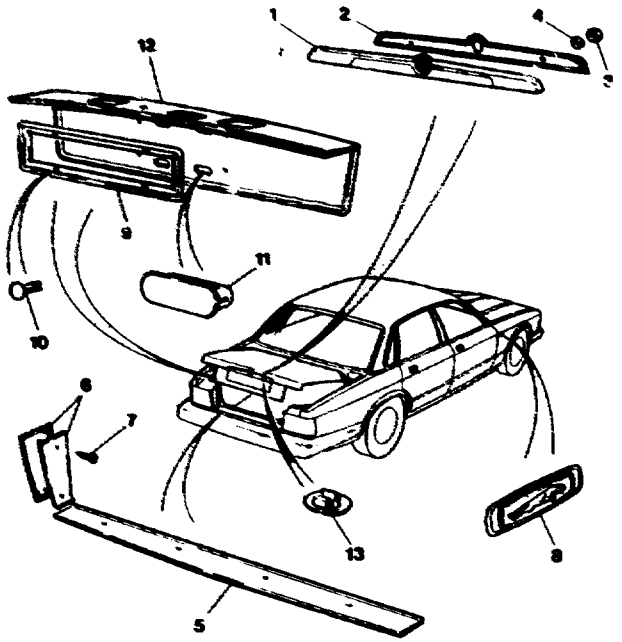


Illus	Part Number		Description	Quantity	Change Point	Remarks
6	BDC	6556	Trunk side finisher -RH	NLA	(1)	Use BEC7762.
6	BDC	6557	Trunk side finisher -LH	NLA	(1)	Use BEC7761.
6	BEC	7762	Trunk side finisher -RH	NLA	(2)	Use BEC13660.
6	BEC	7761	Trunk side finisher -LH	NLA	(2)	Use BEC13661.
6	BEC	13660	Trunk side finisher -RH	NLA	(3)	Use BEC17968 qty 1 with BEC17969 qty 1.
6	BEC	13661	Trunk side finisher -LH	NLA	(3)	Use BEC17968 qty 1 with BEC17969 qty 1.
6	BEC	17968	Trunk side finisher -RH	1		
6	BEC	17969	Trunk side finisher -LH	1		
	BD	48953 1	Screw	NLA		Use BCC6624.
7	BCC	6624	Flanged head screw	8		
	BD	48954	Lokut nut	8		
8	BCC	3730	Wing motif -RH	1	(4)	
8	BDC	8946	Wing motif -RH	NLA	(5)	Use BEC12232.
8	BEC	12232	Wing motif -RH front-silver	1	(6)	
8	BCC	3729	Wing motif -LH	1	(4)	
8	BDC	8947	Wing motif -LH	NLA	(5)	Use BEC12233.
8	BEC	12233	Wing motif -LH front-silver	1	(6)	
8	BEC	5991	Wing motif -RH/LH front	NLA	(5)	Use BEC12262.
8	BEC	12262	Wing motif -RH/LH front	2	(6)	

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 650361
(3) From (V) 650362
(4) To (V) 629285
(5) From (V) 629286 To (V) 656798
(6) From (V) 656799


TRUNK FINISHER AND WING MOTIF

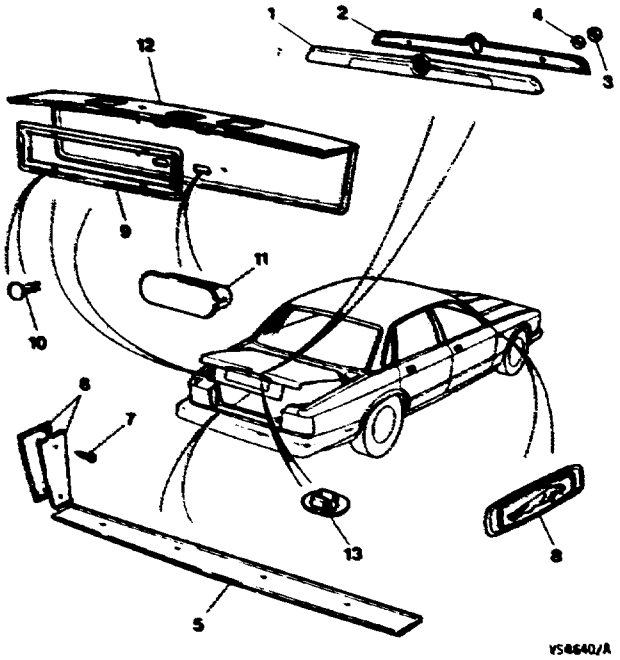

Illus	Part Number	Description	Quantity	Change Point	Remarks
9	BAC 1656	Number plate surround finisher-rear	NLA	(1)	Use BEC1748.
					Except Panama and USA
9	BEC 1748	Number plate surround finisher-bright finish	NLA	(2)	Use HNA5941AA.
					Except Panama and USA
9	HNA 5941AA	Number plate surround finisher-rear -bright finish	NLA		Use JLM20603.
9	BBC 5155	Number plate surround finisher-rear	NLA	(3)	Use BEC5539.
					Panama;USA;Canada
9	BEC 5539	Number plate surround finisher-rear	NLA		Use BEC7756.
9	BEC 7756	Number plate surround finisher	1	(4)	Panama;USA;Canada
10	AGU 2321	Rokut rivet	NLA		Use BDC4858.
10	BDC 4858	Rokut rivet -black nylon	4		
	BD 48944 1	Screw-finisher	4		Panama;USA;Canada
	WF 704084	Washer-finisher	4		Panama;USA;Canada
	UCN 113 L	Nut-no.6 unc	4		Panama;USA;Canada
11	BBC 5139	Blanking plug-finisher	4		Panama;USA;Canada
12	BCC 4445	Number plate surround finisher	NLA	(3)	Use BCC8406.
12	BCC 8406	Number plate surround finisher	1	(4)	
	BD 48954	Lokut nut	3		
	DA 608045 J	Self tapping screw-surround to trunk lid	3		
13	BBC 4590	Blanking plug-surround to trunk lid	3		

CHANGE POINTS:


(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 594575
(4) From (V) 594576

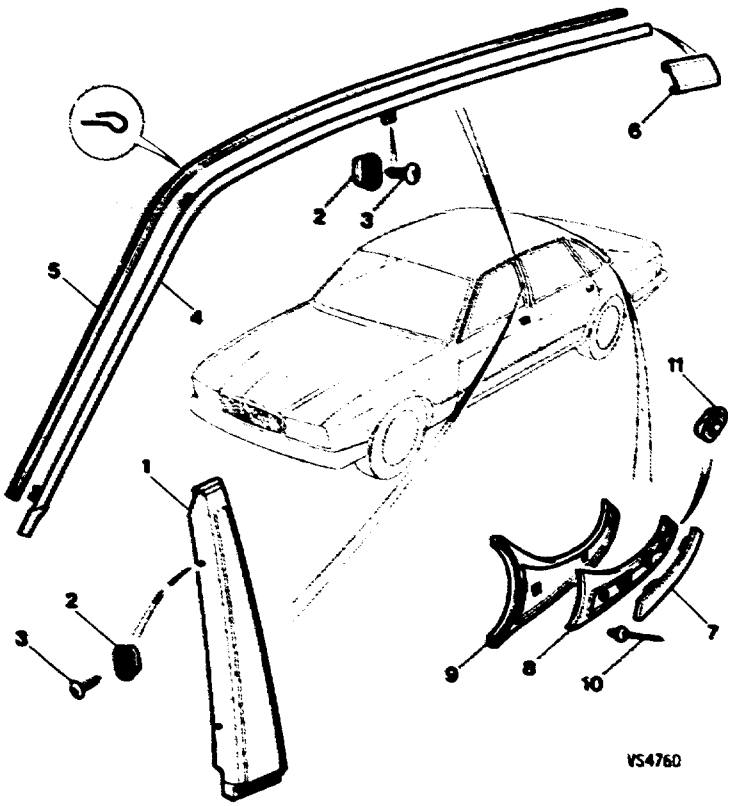

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 5096	B/C-post finisher-RH outer	NLA	(1)	Use BDC9554.
1	BDC 9554	B/C-post finisher-RH outer	NLA	(2)	Use BEC10414.
1	BEC 10414	B/C-post finisher-RH outer	NLA	(3)	Use BEC11798.
1	BEC 11798	B/C-post finisher-RH outer	NLA		Use BEC15848.
1	BEC 15848	B/C-post finisher-RH outer	NLA		Use BEC17016.
1	BEC 17016	B/C-post finisher-RH outer	NLA		Use HMB6080AA.
1	HMB 6080AA	B/C-post finisher-RH outer	1		
1	BCC 5097	B/C-post finisher-LH outer	NLA	(1)	Use BDC9555.
1	BDC 9555	B/C-post finisher-LH outer	NLA	(2)	Use BEC10415.
1	BEC 10415	B/C-post finisher-LH outer	NLA	(3)	Use BEC11799.
1	BEC 11799	B/C-post finisher-LH outer	NLA		Use BEC15849.
1	BEC 15849	B/C-post finisher-LH outer	NLA		Use BEC17017.
1	BEC 17017	B/C-post finisher-LH outer	NLA		Use HMB6081AA.
1	HMB 6081AA	B/C-post finisher-LH outer	1		
2	BD 48954	Lokut nut	8		B/C-post finisher
3	BD 48973	Self tapping screw-no.8 x 10mm	8		B/C-post finisher
4	BDC 5056	Drip moulding finisher-RH	NLA	(4)	Use BEC1760.
4	BEC 1760	Drip moulding finisher-RH	NLA	(5)	Use BEC24106.
4	BEC 24106	Drip moulding finisher-RH	1		
4	BDC 5057	Drip moulding finisher-LH	NLA	(4)	Use BEC1761.
4	BEC 1761	Drip moulding finisher-LH	NLA	(5)	Use BEC24107.
4	BEC 24107	Drip moulding finisher-LH	1		
5	BBC 4797	Drip moulding finisher seal	2		
2	BD 48954	Lokut nut	8		Drip moulding finisher
3	BD 48973	Self tapping screw-no.8 x 10mm	14		Drip moulding finisher
	BCC 6181	Reverse lokut nut-no.6 round	6		

CHANGE POINTS:

(1) To (V) 588663
(2) From (V) 588664 To (V) 630185
(3) From (V) 630186
(4) To (V) 599040
(5) From (V) 599041

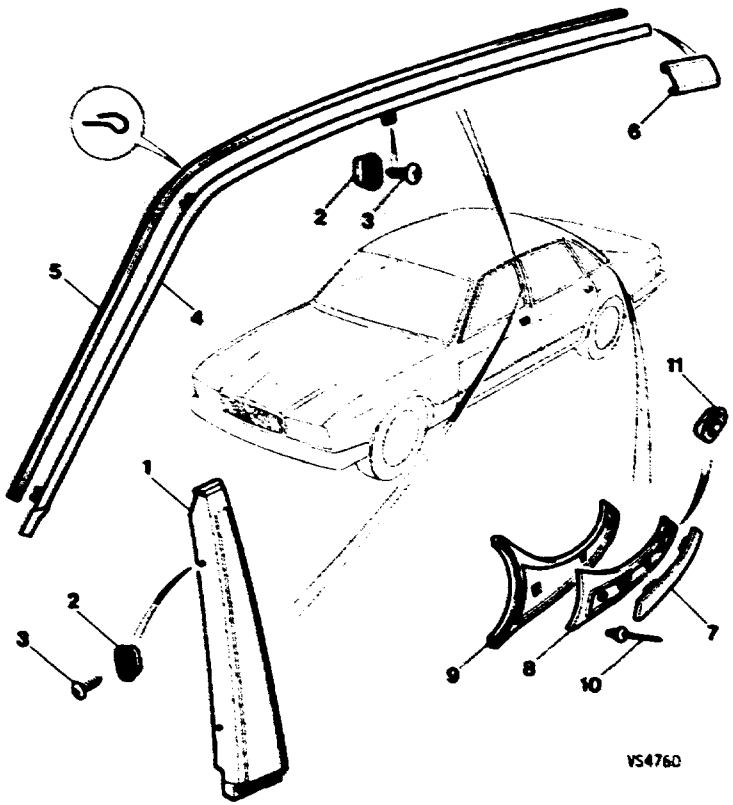


Illus	Part Number	Description	Quantity	Change Point	Remarks
6	BCC 3684	Drip moulding finisher clip -RH	1		
6	BCC 3685	Drip moulding finisher clip -LH	1		
7	BCC 4852	E-post finisher insert-RH	NLA		Use BDC9804.
					Except Majestic
7	BDC 9804	E-post finisher insert-RH	1		Except Majestic
7	BCC 4853	E-post finisher insert-LH	NLA		Use BDC9805.
					Except Majestic
7	BDC 9805	E-post finisher insert-LH	1		Except Majestic
7	BEC 16170 PDP	E-post finisher insert-RH	1	(1)	Majestic
7	BEC 16171 PDP	E-post finisher insert-LH	1		
8	BBC 1294	E-post finisher plinth-RH	1		
8	BEC 24164	E-post finisher plinth-RH	NLA		
8	BBC 1295	E-post finisher plinth-LH	1		
8	BEC 24165	E-post finisher plinth-LH	NLA		
9	BBC 4624	E-post finisher gasket -RH	NLA		Use BDC4854.
9	BDC 4854	E-post finisher gasket -RH	1		
9	BBC 4625	E-post finisher gasket -LH	NLA		Use BDC4855.
9	BDC 4855	E-post finisher gasket -LH	1		
10	RU 608253 J	Pop rivet	6		
11	BBC 1293	Friction bush cup	4		

CHANGE POINTS:
(1) From (V) 633352

EXTERIOR FITTINGS AND SUNROOF

BADGES AND MOTIFS

TRUNK LID EMBLEM

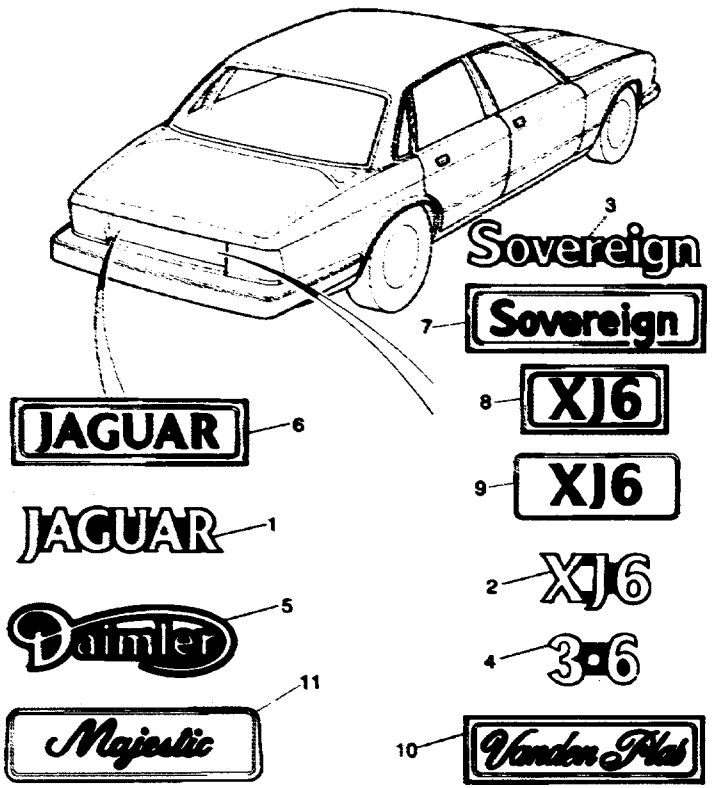

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BBC 9889	Trunk lid emblem-Jaguar	1	(1)	
2	BBC 9888	Trunk lid emblem-XJ6	1	(1)	
3	BBC 9890	Trunk lid emblem-Sovereign	1	(1)	
4	BBC 9892	Trunk lid emblem-3.6	1	(2)	
5	BBC 9891	Trunk lid emblem-Daimler	1		
6	BCC 1028	Trunk lid plaque -Jaguar	1	(3)	
6	BEC 10674	Trunk lid plaque -Jaguar	1	(4)	
6	BEC 11454	Trunk lid plaque -Jaguar	1	(5)	
6	BEC 10679	Trunk lid plaque -Jaguar	1	(6)	
7	BBC 9877	Trunk lid plaque -Sovereign	1	(3)	
7	BEC 10678	Trunk lid plaque -Sovereign	1	(4)	
7	BEC 11453	Trunk lid plaque -Sovereign	1	(5)	
7	BEC 10677	Trunk lid plaque -Sovereign	1	(6)	
8	BBC 9875	Trunk lid plaque -XJ6	1	(3)	
9	BEC 10684	Trunk lid plaque -4.0 Litre	1	(4)	
8	BEC 11452	Trunk lid plaque -XJ6	1	(5)	
8	BEC 10683	Trunk lid plaque -XJ6	1	(6)	

CHANGE POINTS:


(1) To (V) 629285
(2) From (V) 594576
(3) To (V) 556850
(4) From (V) 556851
(5) From (V) 629286 To (V) 657854
(6) From (V) 657855

EXTERIOR FITTINGS AND SUNROOF

BADGES AND MOTIFS

TRUNK LID EMBLEM

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	BBC 9876	Trunk lid plaque -Vanden Plas -silver/black	1	(1)	
10	BCC 9546	Trunk lid plaque -Vanden Plas -silver/grey	1	(2)	
10	BEC 10680	Trunk lid plaque -Vanden Plas -silver/black	1	(3)	
10	BEC 4747	Trunk lid plaque -Vanden Plas -regency red/gold	1		
10	BEC 8782	Trunk lid plaque -Vanden Plas -black cherry/gold	1		
11	BEC 4748	Trunk lid plaque -Majestic-regency red/gold	1		
11	BEC 8780	Trunk lid plaque -Majestic-black cherry/gold	1		

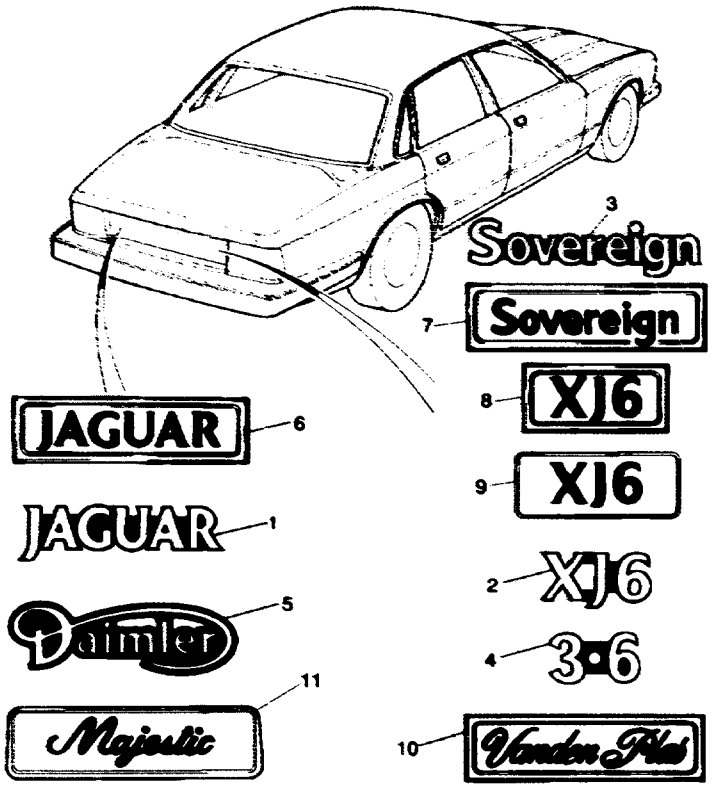

MW46571A

CHANGE POINTS:


(1) To (V) 556850

(2) From (V) 556851 To (V) 657854

(3) From (V) 657855

COACHLINES

SINGLE COACHLINE

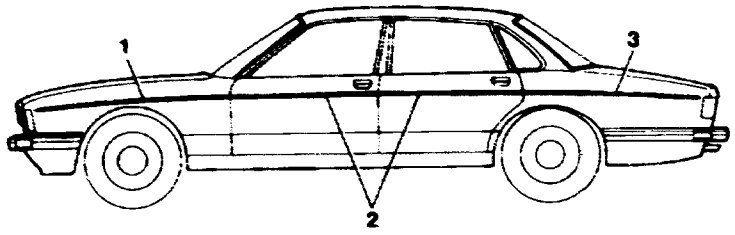


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	812	Coachline tape-Gunmetal-10m roll	A/R	(1)	
1	JLM	813	Coachline tape-Oyster -10m roll	A/R	(1)	
1	JLM	814	Coachline tape-Goldleaf -10m roll	A/R	(1)	
1	JLM	815	Coachline tape-Dark red-10m roll	A/R	(2)	
1	JLM	10582 JDL	Coachline tape-Dark blue -10m roll	A/R	(3)	
1	JLM	10582 FDL	Coachline tape-single-front/rear wing-Gold	A/R	(3)	
1	JLM	10582 MDL	Coachline tape-single-front/rear wing-Silver	A/R	(3)	
1	BBC	9350	Coachline tape-single-strip-RH front wing-Gunmetal	1	(4)	
1	BEC	7974	Coachline tape-single-strip-RH front wing-Gunmetal-LH rear tonneau	1	(1)	
1	BBC	9354	Coachline tape-single-strip-RH front wing-Oyster	1	(4)	
1	BEC	7976	Coachline tape-single-strip-RH front wing-Oyster -LH rear tonneau	1	(1)	
1	BBC	9358	Coachline tape-strip-single-RH front wing-Goldleaf	1	(4)	
1	BEC	7978	Coachline tape-single-strip-RH front wing-Goldleaf -LH rear tonneau	1	(1)	
1	BBC	9362	Coachline tape-single-strip-RH front wing-Dark red	NLA	(2)	
1	JLM	10582 JDL	Coachline tape-Dark blue -10m roll	A/R	(3)	
1	JLM	10582 FDL	Coachline tape-single-front/rear wing-Gold	A/R	(3)	
1	JLM	10582 MDL	Coachline tape-single-front/rear wing-Silver	A/R	(3)	
1	BBC	9351	Coachline tape-single-strip-LH front wing-Gunmetal	1	(4)	
1	BEC	7975	Coachline tape-single-strip-LH front wing-Gunmetal-RH tonneau	1	(1)	
1	BBC	9355	Coachline tape-single-strip-LH front wing-Oyster	1	(4)	
1	BEC	7977	Coachline tape-single-strip-LH front wing-Oyster -RH rear tonneau	1	(1)	
1	BBC	9359	Coachline tape-single-strip-LH front wing-Goldleaf	1	(4)	
1	BEC	7979	Coachline tape-single-strip-LH front wing-Goldleaf -RH rear tonneau	1	(1)	
1	BBC	9363	Coachline tape-single-strip-LH front wing-Dark red	1	(2)	
1	JLM	10582 JDL	Coachline tape-Dark blue -10m roll	A/R	(3)	
1	JLM	10582 FDL	Coachline tape-single-front/rear wing-Gold	A/R	(3)	
1	JLM	10582 MDL	Coachline tape-single-front/rear wing-Silver	A/R	(3)	

CHANGE POINTS:

(1) To (V) 629285
(2) To (V) 594575
(3) From (V) 629286
(4) To (V) 623900

COACHLINES

SINGLE COACHLINE

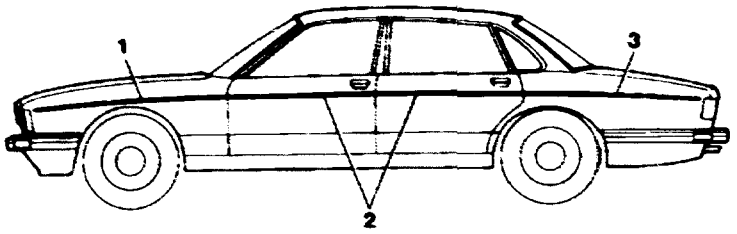


Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	9352	Coachline tape-RH rear tonneau -Gunmetal	1	(1)	
3	BEC	7975	Coachline tape-single-strip-LH front wing-Gunmetal-RH tonneau	1	(2)	
3	BBC	9356	Coachline tape-RH rear tonneau -Oyster	1	(1)	
3	BEC	7977	Coachline tape-single-strip-LH front wing-Oyster -RH rear tonneau	1	(2)	
3	BBC	9360	Coachline tape-RH rear tonneau -Goldleaf	1	(1)	
3	BEC	7979	Coachline tape-single-strip-LH front wing-Goldleaf -RH rear tonneau	1	(2)	
3	BBC	9364	Coachline tape-RH rear tonneau -Dark red	1	(3)	
3	JLM	10582 JDL	Coachline tape-Dark blue -10m roll	A/R	(4)	
3	JLM	10582 FDL	Coachline tape-single-front/rear wing-Gold	A/R	(4)	
3	JLM	10582 MDL	Coachline tape-single-front/rear wing-Silver	A/R	(4)	
3	BBC	9353	Coachline tape-LH rear tonneau -Gunmetal	NLA	(1)	Use BEC7974.
3	BEC	7974	Coachline tape-single-strip-RH front wing-Gunmetal-LH rear tonneau	1	(2)	
3	BBC	9357	Coachline tape-LH rear tonneau -Oyster	1	(1)	
3	BEC	7976	Coachline tape-single-strip-RH front wing-Oyster -LH rear tonneau	1	(2)	
3	BBC	9361	Coachline tape-LH rear tonneau -Goldleaf	1	(1)	
3	BEC	7978	Coachline tape-single-strip-RH front wing-Goldleaf -LH rear tonneau	1	(2)	
3	BBC	9365	Coachline tape-LH rear tonneau -Dark red	1	(3)	
3	JLM	10582 JDL	Coachline tape-Dark blue -10m roll	A/R	(4)	
3	JLM	10582 FDL	Coachline tape-single-front/rear wing-Gold	A/R	(4)	
3	JLM	10582 MDL	Coachline tape-single-front/rear wing-Silver	A/R	(4)	

CHANGE POINTS:

(1) To (V) 623900
(2) To (V) 629285
(3) To (V) 594575
(4) From (V) 629286

DOUBLE COACHLINE

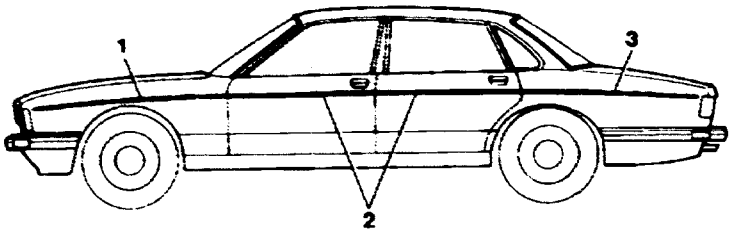


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	5420	Coachline tape-RH front wing-Dark red	1	(1)	
1	BBC	5414	Coachline tape-RH front wing-Goldleaf	NLA	(2)	Use BEC7968.
1	BBC	5402	Coachline tape-RH front wing-Gunmetal	NLA		Use BEC7964.
1	BBC	5408	Coachline tape-RH front wing-Oyster	NLA		Use BEC7966.
1	BEC	7968	Coachline tape-RH front/LH rear fender-Goldleaf	1	(3)	
1	BEC	7964	Coachline tape-RH front/LH rear fender-Gunmetal	1		
1	BEC	7966	Coachline tape-RH front/LH rear fender-Oyster	1		
1	BEC	10624 JDL	Coachline tape-double-RH front/LH rear fender-Dark blue	1	(4)	
1	BEC	10626 CDK	Coachline tape-double-RH front fender-Flame red/Pewter	1		
1	BEC	10626 CDH	Coachline tape-double-RH front fender-Flame red/Quicksilver	1		
1	BEC	10624 FDL	Coachline tape-double-RH front/LH rear fender-Gold	1		
1	BEC	10624 MDL	Coachline tape-double-RH front/LH rear fender-Silver	1		
1	BBC	5421	Coachline tape-LH front wing-Dark red	1	(1)	
1	BBC	5415	Coachline tape-LH front wing-Goldleaf	NLA	(2)	Use BEC7969.
1	BBC	5403	Coachline tape-LH front wing-Gunmetal	NLA		Use BEC7965.
1	BBC	5409	Coachline tape-LH front wing-Oyster	NLA		Use BEC7967.
1	BEC	7969	Coachline tape-LH front/RH rear fender-Goldleaf	1	(3)	
1	BEC	7965	Coachline tape-LH front/RH rear fender-Gunmetal	1		
1	BEC	7967	Coachline tape-LH front/RH rear fender-Oyster	1		
1	BEC	10625 JDL	Coachline tape-double-LH front/RH rear fender-Dark blue	1	(4)	
1	BEC	10627 CDK	Coachline tape-double-LH front fender-Flame red/Pewter	1		
1	BEC	10627 CDH	Coachline tape-double-LH front fender-Flame red/Quicksilver	1		
1	BEC	10625 FDL	Coachline tape-double-LH front/RH rear fender-Gold	1		
1	BEC	10625 MDL	Coachline tape-double-LH front/RH rear fender-Silver	1		

CHANGE POINTS:

(1) To (V) 594575
(2) To (V) 622600
(3) From (V) 622601 To (V) 629285
(4) From (V) 629286

DOUBLE COACHLINE

Illus	Part Number	Description	Quantity	Change Point	Remarks
2	JLM 820	Coachline tape-door-Dark red	A/R	(1)	
2	JLM 817	Coachline tape-door-Gunmetal	A/R	(2)	
2	JLM 818	Coachline tape-door-Oyster	A/R		
2	JLM 819	Coachline tape-door-Goldleaf	A/R		
2	BEC 10495 JDL	Coachline tape-double-door-Dark blue	A/R	(3)	
2	BEC 10492 CDK	Coachline tape-double-door-Flame red/Pewter	NLA		Use BEC18178CDK.
2	BEC 10492 CDH	Coachline tape-double-door-Flame red/Quicksilver	NLA		Use BEC18178CDH.
2	BEC 10495 FDL	Coachline tape-double-door-Gold	A/R		
2	BEC 10495 MDL	Coachline tape-double-door-Silver	A/R		
	BEC 18178 CDK	Door coachline tape-Flame red/Pewter	4		
	BEC 18178 CDH	Door coachline tape-Flame red/Quicksilver	4		

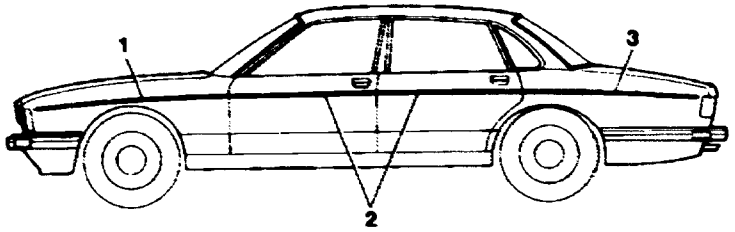


CHANGE POINTS:

(1) To (V) 594575

(2) To (V) 629285

(3) From (V) 629286

DOUBLE COACHLINE

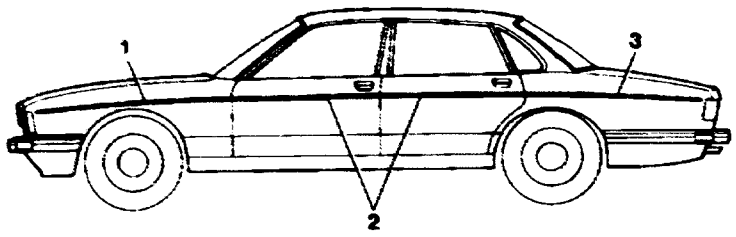


Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	5422	Coachline tape-RH rear wing-Dark red	1	(1)	
3	BBC	5416	Coachline tape-RH rear wing-Goldleaf	NLA	(2)	Use BEC7969.
3	BBC	5404	Coachline tape-RH rear wing-Gunmetal	NLA		Use BEC7965.
3	BBC	5410	Coachline tape-RH rear wing-Oyster	NLA		Use BEC7967.
3	BEC	7969	Coachline tape-LH front/RH rear fender-Goldleaf	1	(3)	
3	BEC	7965	Coachline tape-LH front/RH rear fender-Gunmetal	1		
3	BEC	7967	Coachline tape-LH front/RH rear fender-Oyster	1		
3	BEC	10625 JDL	Coachline tape-double-LH front/RH rear fender-Dark blue	1	(4)	
3	BEC	10625 FDL	Coachline tape-double-LH front/RH rear fender-Gold	1		
3	BEC	10625 MDL	Coachline tape-double-LH front/RH rear fender-Silver	1		
3	BBC	5423	Coachline tape-LH rear wing-Dark blue	1	(1)	
3	BBC	5417	Coachline tape-LH rear wing-Goldleaf	NLA	(2)	Use BEC7968.
3	BBC	5405	Coachline tape-LH rear wing-Gunmetal	NLA		Use BEC7964.
3	BBC	5411	Coachline tape-LH rear wing-Oyster	1		
3	BEC	7968	Coachline tape-RH front/LH rear fender-Goldleaf	1	(3)	
3	BEC	7964	Coachline tape-RH front/LH rear fender-Gunmetal	1		
3	BEC	7966	Coachline tape-RH front/LH rear fender-Oyster	1		
3	BEC	10624 JDL	Coachline tape-double-RH front/LH rear fender-Dark blue	1	(4)	
3	BEC	10624 FDL	Coachline tape-double-RH front/LH rear fender-Gold	1		
3	BEC	10624 MDL	Coachline tape-double-RH front/LH rear fender-Silver	1		
3	BEC	10390 CDK	Coachline tape-double-rear wing-Flame red/Pewter	NLA		Use BEC18174CDK.
3	BEC	10390 CDH	Coachline tape-double-rear wing-Flame red/Quicksilver	NLA		Use BEC18174CDH.
	BEC	18174 CDK	Wing/tonneau coachline tape-RH/LH-Flame red/Pewter	1		
	BEC	18174 CDH	Wing/tonneau coachline tape-RH/LH-Flame red/Quicksilver	1		

CHANGE POINTS:

(1) To (V) 594575
(2) To (V) 622600
(3) To (V) 629285
(4) From (V) 629286


SPOILER AND GRILLE

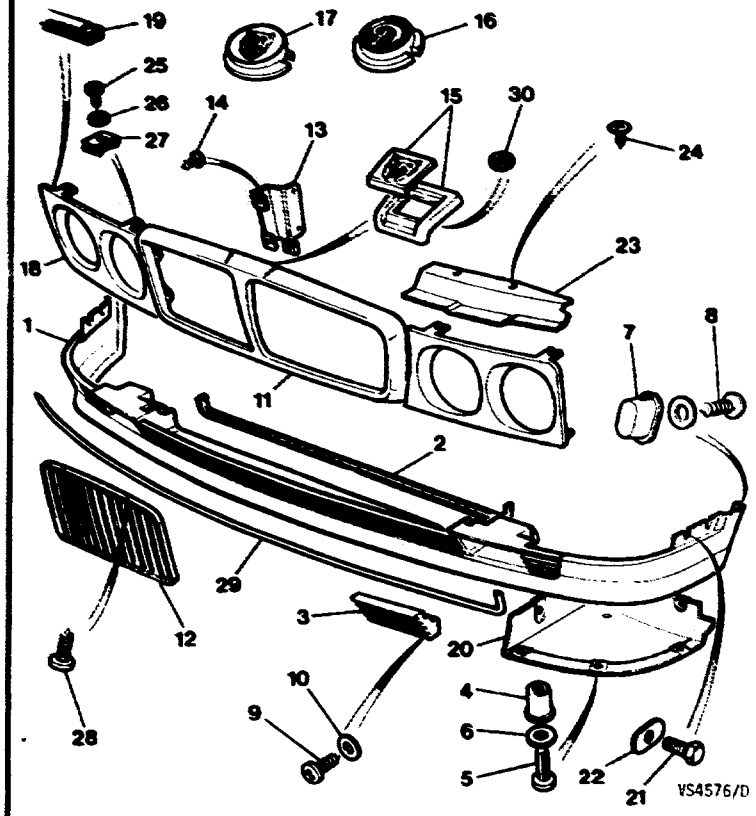

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BDC 7042	Spoiler panel	1		
6	WJ 106001J	Plain washer-M6	2		
9	SE 106161J	Screw-6 x 16mm	2		
	NK 106061J	Grip nut	2		
2	BBC 8601	Seal	NLA	(1)	Use BCC9552.
2	BCC 9552	Seal	1	(2)	
3	BAC 6646	Grille duct -RH	1		
3	BAC 6647	Grille duct -LH	1		
14	AB 606045J	Screw-black finish-no.6 x 1.5	8		
4	AAU 4931J	Rawl nut	14		
5	SE 105165J	Setscrew	14		
6	BD 33929	Plain washer-0.197" dia	14		
7	BD 48954	Lokut nut	4		
8	AGU 1497	Serns screw-self tapping	NLA		Use JZH100005.
8	JZH 100005	Serns screw-self tapping	4		
9	AC 606051	Screw	NLA		Use AC606051J.
9	AC 606051J	Screw-no.6 x 0.625	2		
10	WA 104005J	Plain washer	8		
	JLM 9997	Radiator grille-assembly	1		Jaguar
	JLM 9998	Radiator grille-assembly	1		Daimler
11	BBC 9016	Radiator grille surround	NLA		Use BEC5665.
					Jaguar;except Majestic
11	BBC 9017	Radiator grille surround	NLA		Use BEC5666.
					Daimler
11	BBC 9017	Radiator grille surround	NLA		Use BEC5666.
					Jaguar;Majestic
11	BEC 5665	Radiator grille surround	1		Jaguar;except Majestic
11	BEC 5666	Radiator grille surround	NLA		Use HMB5501BA.
					Daimler
11	BEC 5666	Radiator grille surround	NLA		Use HMB5501BA.
					Jaguar;Majestic
11	HMB 5501BA	Radiator grille surround	1		Daimler
11	HMB 5501BA	Radiator grille surround	1		Jaguar;Majestic

CHANGE POINTS:
(1) To (V) 524374
(2) From (V) 524375

SPOILER AND GRILLE

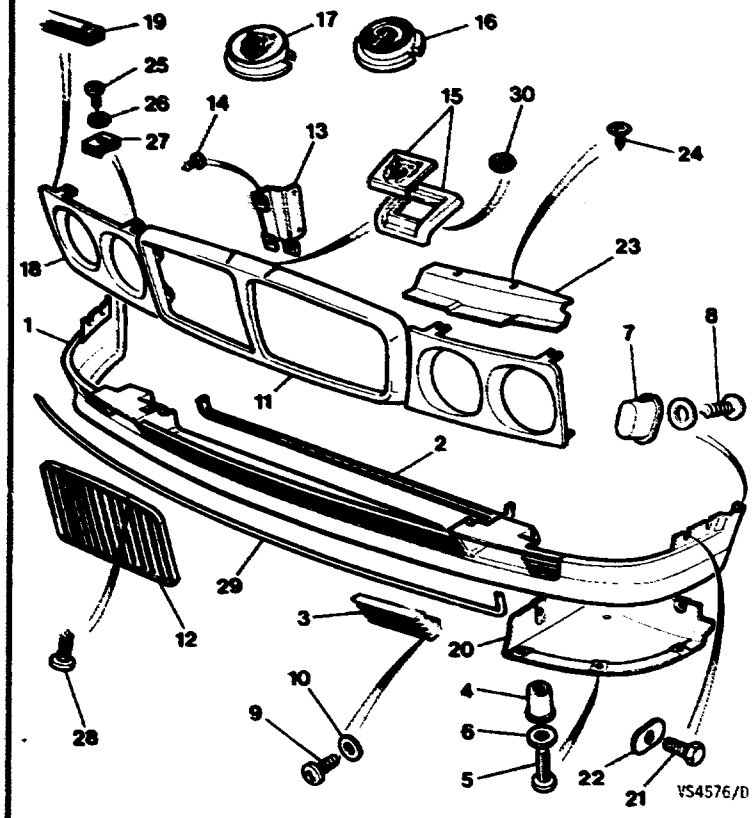


Illus	Part Number		Description	Quantity	Change Point	Remarks
12	BCC	8516	Radiator grille vane block-RH	NLA	(1)	Use BEC14242.
12	BEC	14242	Radiator grille vane block-RH	1	(2)	
12	BBC	8899	Radiator grille vane block-LH	NLA	(3)	Use BCC8517.
12	BCC	8517	Radiator grille vane block-LH	NLA	(4)	Use BEC14243.
12	BEC	14243	Radiator grille vane block-LH	1	(2)	
	KRC	1156J	O-ring	NLA		Use KRC1156.
13	BCC	2404	Mounting bracket-assembly-RH	NLA		Use BEC10234.
13	BCC	2405	Mounting bracket-assembly-LH	NLA		Use BEC10235.
13	BEC	10234	Mounting bracket-RH	1		
13	BEC	10235	Mounting bracket-LH	1		
	BCC	7487	Support clip-grille mounting bracket	4		
14	AD	606032J	Screw-no.6 x 0.375	4		
15	BBC	4770	Radiator grille badge-black/chrome	1		
30	AN	104041J	Push on fix	1		
16	BCC	7212	Medallion-Daimler	NLA		Use BEC14085.
16	BEC	14085	Medallion-Daimler	1		
17	BEC	4749	Medallion-Jaguar Majestic	1	(5)	
17	BEC	14084	Medallion-Jaguar	1	(6)	
17	BEC	8995	Medallion-Jaguar VDP	NLA	(7)	Use BEC14084.
18	BBC	5692	Headlamp bezel-RH	NLA		Use BEC9040.
18	BBC	5693	Headlamp bezel-LH	NLA		Use BEC9041.
18	BEC	9040	Headlamp bezel-RH-chrome	1		
18	BEC	9041	Headlamp bezel-LH-chrome	1		
	BCC	7487	Support clip-grille mounting bracket	4		
7	BD	48954	Lokut nut	4		
19	BBC	7873	Retainer finisher	NLA		Use BDC9046.
	BDC	9046	Headlamp bezel finisher	2		

CHANGE POINTS:

(1) To (V) 657854
(2) From (V) 657855
(3) To (V) 524374
(4) From (V) 524375 To (V) 657854
(5) To (V) 633351
(6) From (V) 633352
(7) From (V) 629286


SPOILER AND GRILLE

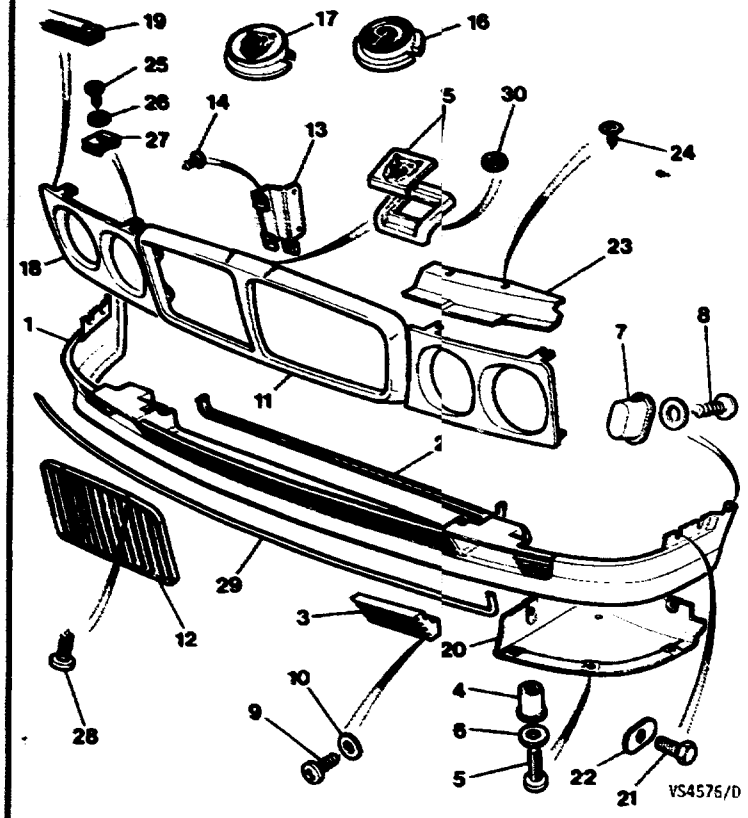

Illus	Part Number	Description	Quantity	Change Point	Remarks
20	BDC 7494	Undertray-RH	1		
20	BDC 7495	Undertray-LH	1		
21	GG 106201 J	Screw	4		
22	BD 542 12	Oval washer	4		
23	BCC 4464	Closing panel-RH upper	1		
23	BCC 4465	Closing panel-LH upper	1		
	BDC 7070	Headlamp cover panel -RH	1		
	BDC 7071	Headlamp cover panel -LH	1		
24	BD 489732	Screw	4		Quad lamps
25	AR 608031 J	Self tapping pan head screw	8		Quad lamps
26	WC 104001 J	Washer	8		Quad lamps
27	BD 86333	Spring nut	8		Quad lamps
28	JZS 100001	Self tapping screw	4		
29	BCC 7200	Bright finisher-spoiler	1		
30	AN 104041 J	Push on fix	1		

WINDSCREEN GLASS AND FINISHER


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	2728	Windscreen glass-clear glass-Triplex	NLA	(1)	Use BDC4588.
1	BDC	4588	Windscreen glass-clear glass-Secursiv	NLA	(2)	Use BDC4589.
1	BEC	4216	Windscreen glass-clear glass-Secursiv	NLA	(3)	Use BEC1010.
1	BEC	1010	Windscreen glass-clear glass-Triplex	NLA	(4)	Use BEC1011.
1	BDC	4587	Windscreen glass-tinted glass-Triplex	NLA	(2)	Use BDC4589.
1	BCC	2731	Windscreen glass-tinted glass-Secursiv	NLA	(1)	Use BDC4589.
1	BDC	4589	Windscreen glass-tinted glass-Secursiv	NLA	(2)	USE BEC 1011.
1	BEC	1011	Windscreen glass-tinted glass-Triplex	1	(5)	

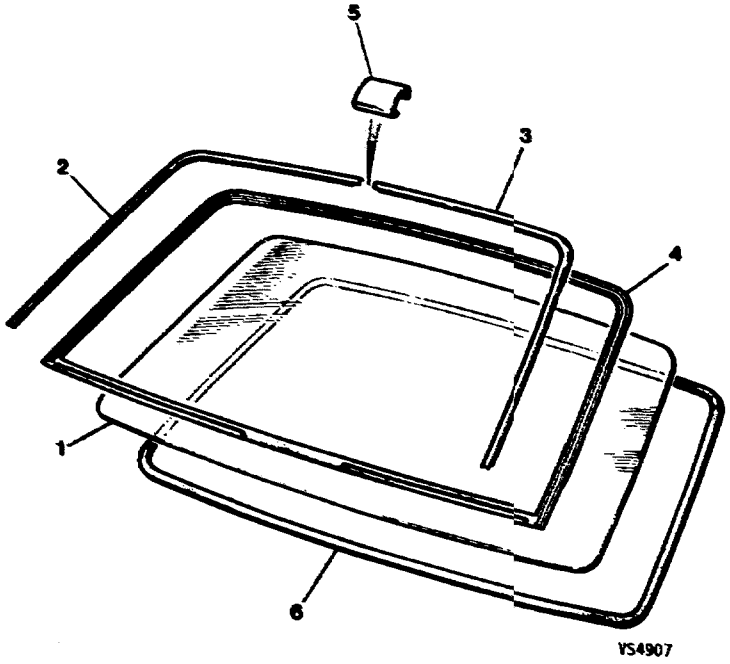

CHANGE POINTS:

(1) To (V) 524374
(2) To (V) 594575
(3) To (V) 634204
(4) From (V) 634205
(5) From (V) 594576

WINDSCREEN GLASS AND FINISHER

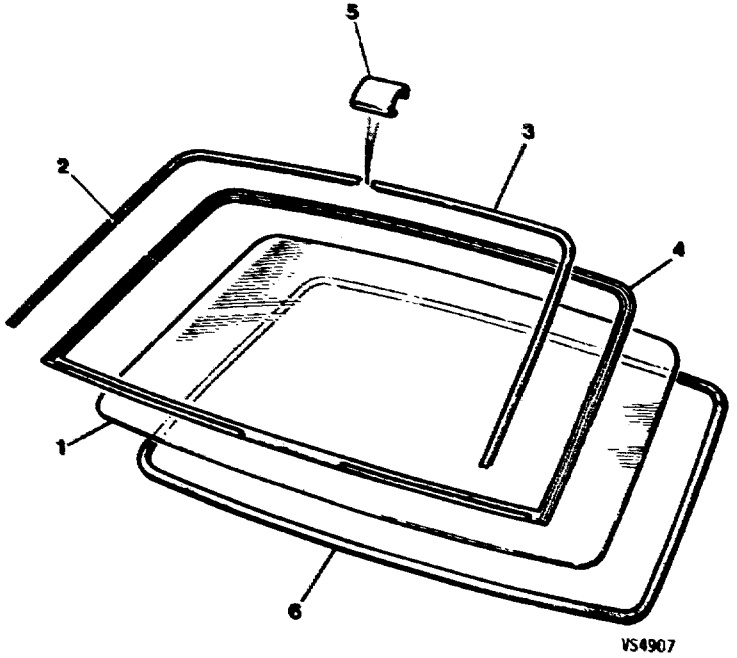


Illus	Part Number	Description	Quantity	Change Point	Remarks
2	BAC 5090	Finisher-RH	1	(1)	
2	BEC 18124	Finisher-upper-RH	1	(2)	
3	BAC 5091	Finisher-LH	1	(1)	
3	BEC 18125	Finisher-LH	1	(2)	
	BAC 6220	Finisher retainer-lower	1	(1)	
	BBC 8599	Inner sealing strip	1	(1)	
	BBC 5889	Sealing strip-outer-moulding to body	1	(1)	
4	BCC 9213	Windscreen glazing rubber	1	(3)	
4	BDC 8148	Windscreen glazing rubber	NLA	(4)	Use BDC9366.
4	BDC 9366	Windscreen glazing rubber	NLA		Use BEC14011.
4	BEC 14011	Windscreen glazing rubber	NLA		Use BEC23058.
4	BEC 23058	Windscreen glazing rubber	NLA		Use BEC25260.
4	BEC 25260	Windscreen glazing rubber	1	(4)	
5	BAC 5098	Joint clip	1	(1)	
5	BCC 5055	Joint clip-upper	NLA	(2)	Use BEC23512.
5	BEC 23512	Joint clip-upper-bright finish	1	(2)	
6	BCC 2625	Mastic dam retention	NLA		Use BEC7500.
6	BEC 7500	Mastic dam retention	NLA		Use BCC2626.
6	BCC 2626	Mastic dam retention	NLA		Use BEC25457.
6	BEC 25457	Mastic dam retention	1		
	JLM 1588	Betaseal sealant kit	NLA		Use JLM20452.
	JLM 20452	Glass bonding adhesive	1		
	JLM 1581	Betaseal cartridge -300mm	A/R		
	JLM 1582	Betaseal cartridge -150mm	NLA		Use JLM1581.
	BEC 9178	Clip	2	(5)	
	RH 612176	Rivet	2	(5)	

CHANGE POINTS:

(1) To (V) 530212
(2) From (V) 530213
(3) To (V) 556850
(4) From (V) 556851
(5) From (V) 617767

WINDSCREEN FINISHER-LOWER

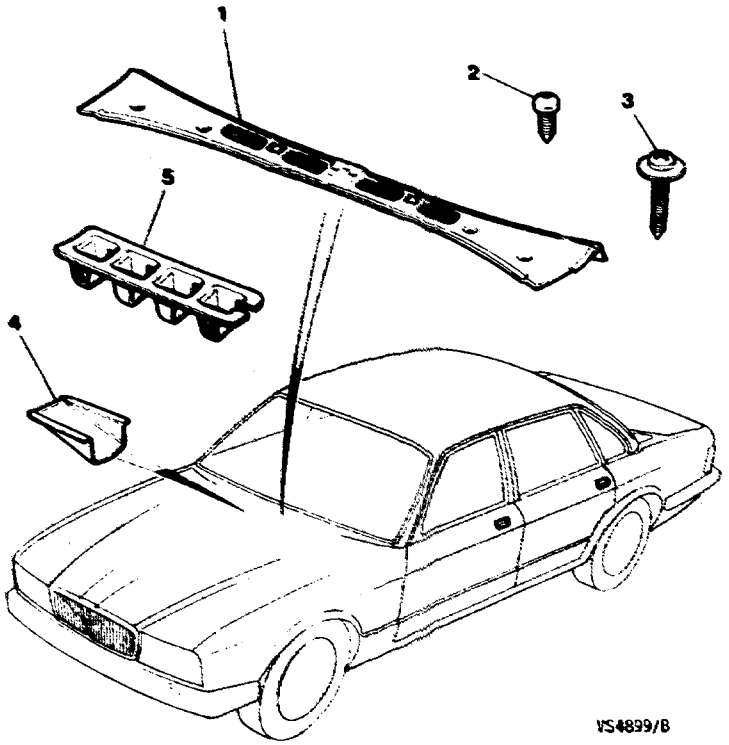

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 4810	Windscreen finisher-lower	1	(1)	RHD
1	BDC 7482	Windscreen finisher-lower	NLA	(2)	Use BEC2698.
					RHD
1	BEC 2698	Windscreen finisher-lower	NLA	(3)	Use BEC7086.
					RHD
1	BEC 7086	Windscreen finisher-lower	NLA	(4)	Use BEC17138.
					RHD
1	BEC 17138	Windscreen finisher-lower	NLA	(5)	Use BEC22232.
					RHD
1	BEC 22232	Windscreen finisher-lower	NLA	(6)	Use GMD8861AA.
					RHD
1	GMD 8861AA	Windscreen finisher-lower	1	(6)	RHD
1	BCC 4811	Windscreen finisher-lower	1	(1)	LHD
1	BDC 7483	Windscreen finisher-lower	NLA	(2)	Use BEC2699.
					LHD
1	BEC 2699	Windscreen finisher-lower	NLA	(3)	Use BEC7087.
					LHD
1	BEC 7087	Windscreen finisher-lower	NLA	(4)	Use BEC17139.
					LHD
1	BEC 17139	Windscreen finisher-lower	NLA	(5)	Use BEC22233.
					LHD
1	BEC 22233	Windscreen finisher-lower	NLA	(6)	Use GMD8861BA.
					LHD
1	GMD 8861BA	Windscreen finisher-lower	1	(6)	LHD
	BD 48954	Lokut nut	5		
2	BD 48979	Torx self tapping screw	4	(7)	
2	JXD 608048	Torx self tapping screw	4	(8)	
	AB 608045J	Screw-self tapping	1	(8)	
	BDC 8147	Seal-lower	1	(8)	
	BDC 6954	Windscreen glass spacer	4	(8)	

CHANGE POINTS:


(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 615464
(4) From (V) 615465 To (V) 660711
(5) From (V) 660712 To (V) 666688
(6) From (V) 666689
(7) To (V) 556851
(8) From (V) 556852

MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX


BADGES AND MOTIFS ..... 4. L 06
BODY EXTERIOR FINISHERS/MOULDINGS ..... 4. K 15
BODY TRIM AND FIXTURES ..... 4. K 04
COACHLINES ..... 4. L 08
DOOR MIRRORS ..... 4. M 06
FRONT BUMPERS ..... 4. K 05
GRILLES ..... 4. L 13
REAR BUMPERS ..... 4. K 11
SUNROOF AND FIXINGS ..... 4. K 02
WINDSCREEN AND BODY GLASSES ..... 4. L 16
BACKLIGHT GLASS AND FINISHER ..... 4. M 04
BRIGHT FINISHERS-DAIMLER/VDP ..... 4. K 15
BRIGHT FINISHERS- ..... 4. K 16
BUMPER-FRONT-WITH ENERGY ..... 4. K 05
BUMPER-FRONT-WITHOUT ENERGY ..... 4. K 06
BUMPER-REAR-WITH ENERGY ABSORBING ..... 4. K 11
BUMPER-REAR-WITHOUT ENERGY ..... 4. K 13
DOUBLE COACHLINE ..... 4. L 10
EXTERIOR DOOR MIRROR ..... 4. M 06
FRONT SPOILER KIT ..... 4. K 04
MOULDINGS AND FINISHERS- ..... 4. K 17
SINGLE COACHLINE ..... 4. L 06
SIXLIGHT ..... 4. M 03
SPOILER AND GRILLE ..... 4. L 13
SUNROOF MOTOR ..... 4. K 03
SUNROOF ..... 4. K 02
TRUNK FINISHER AND WING MOTIF ..... 4. K 18
TRUNK LID EMBLEM ..... 4. L 06
WINDSCREEN FINISHER-LOWER ..... 4. L 18
WINDSCREEN GLASS AND FINISHER ..... 4. L 16

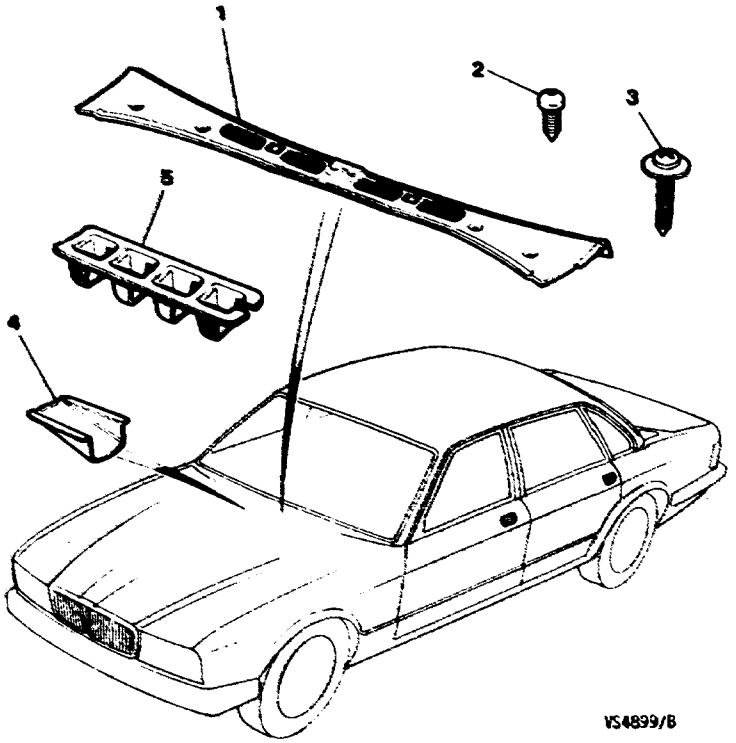

Illus	Part Number	Description	Quantity	Change Point	Remarks
3	AGU 1497	Serns screw-self tapping	NLA	.....	Use JZH100005.
3	JZH 100005	Serns screw-self tapping	1		
	BCC 4876	Wiper spindle cover	NLA	(1).....	Use BEC22227.
	BEC 22227	Wiper spindle cover	1	(2)	
	BDC 7150	Edge clip	10		
4	BCC 2359	Water deflector-air vent	2		
5	BEC 5910	Water deflector-RH air conditioning vent	NLA	(3).....	Use BEC11388.
5	BEC 11388	Water deflector-RH air conditioning vent	NLA	.....	Use BEC14950.
5	BEC 5911	Water deflector-LH air conditioning vent	NLA	(3).....	Use BEC11389.
5	BEC 11389	Water deflector-LH air conditioning vent	NLA	.....	Use BEC14951.
5	BEC 14950	Water deflector-RH air conditioning vent	1	(4)	
5	BEC 14951	Water deflector-LH air conditioning vent	1	(4)	

CHANGE POINTS:
(1) To (V) 666688
(2) From (V) 666689
(3) To (V) 657318
(4) From (V) 657319

SIXLIGHT

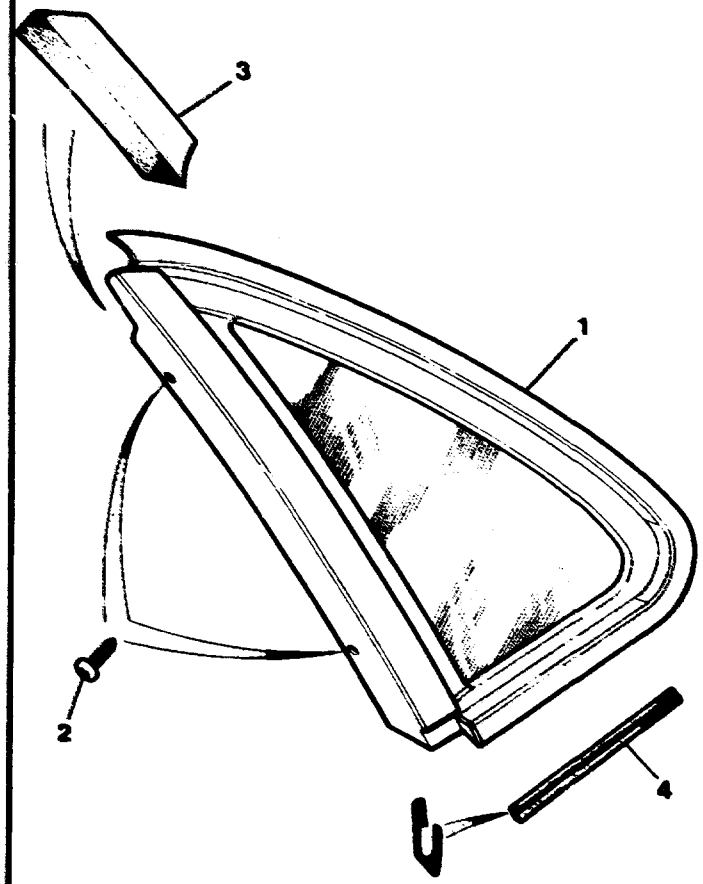


VS4761/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	4866	Sixlight glass-assembly-RH-Securiv-black finish	1	(1)	
1	BDC	5060	Sixlight glass-assembly-RH-Securiv-black finish	1	(2)	
1	BDC	5058	Sixlight glass-assembly-RH-Black-Triplex-black finish	1		
1	BCC	4867	Sixlight glass-assembly-LH-Securiv-black finish	1	(1)	
1	BDC	5061	Sixlight glass-assembly-LH-Securiv-black finish	1	(2)	
1	BDC	5059	Sixlight glass-assembly-LH-Black-Securiv-black finish-Triplex	1		
1	BCC	4868	Sixlight glass-assembly-RH-Securiv-stainless steel	1	(1)	
1	BDC	5328	Sixlight glass-assembly-RH-silver finish -Securiv-stainless steel	1	(3)	
1	BDC	5324	Sixlight glass-assembly-RH-silver finish -Triplex-stainless steel	1		
1	BDC	5327	Sixlight glass-assembly-LH-silver finish -Securiv-stainless steel	1		
1	BDC	5325	Sixlight glass-assembly-LH-silver finish -Triplex-stainless steel	1		
2	BD	48973	Self tapping screw-no.8 x 10mm	2		
	JLM	1671	Betaseal sealant kit	1		
	JLM	1582	Betaseal cartridge -150mm	NLA		Use JLM1581.
	JLM	1581	Betaseal cartridge -300mm	A/R		
3	BCC	7496	Sealing strip-4.5mm	A/R		
4	JLM	1858	Edge finisher-lower	A/R		

CHANGE POINTS:
(1) To (V) 556850
(2) To (V) 634204
(3) From (V) 556851

BACKLIGHT GLASS AND FINISHER

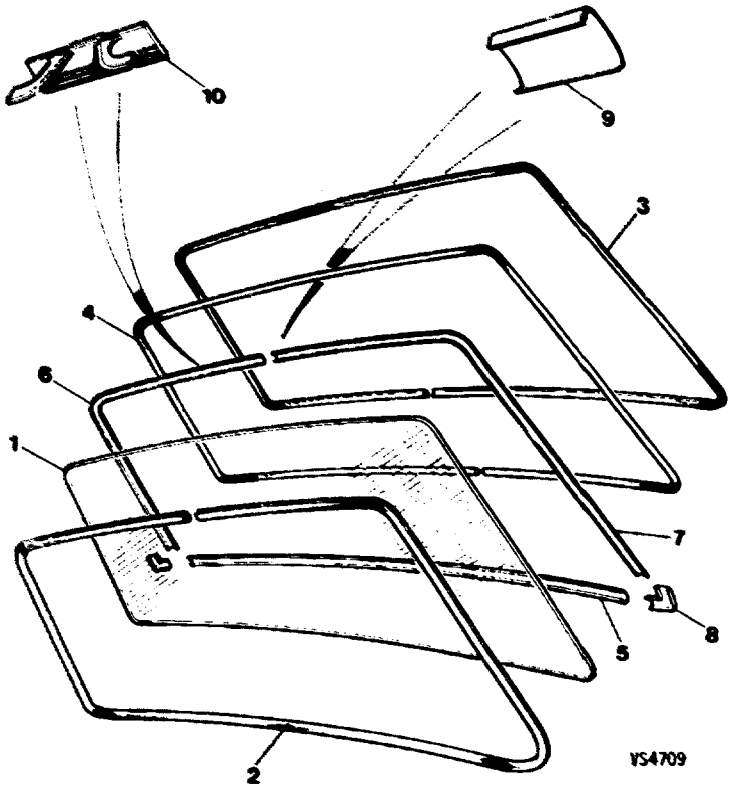


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 5977	Backlight glass-SIV	NLA	(1)	Use BDC5354.
					Except high mounted stop lamp
1	BDC 5354	Backlight glass-SIV	NLA		Use BDC9373.
					Except high mounted stop lamp
1	BDC 9373	Backlight glass-SIV	NLA		Use BDC9372.
					Except high mounted stop lamp
1	BDC 9372	Backlight glass-Triplex	NLA	(2)	Use BEC16553.
					Except high mounted stop lamp
1	BEC 16553	Backlight glass-Triplex	1	(3)	Except high mounted stop lamp
1	BCC 5973	Backlight glass-SIV	NLA	(1)	Use BDC9377.
					High mounted stop lamp
1	BDC 9377	Backlight glass-SIV	NLA		Use BDC9376.
					High mounted stop lamp
1	BDC 9376	Backlight glass-SIV	NLA		Use BEC16600.
					High mounted stop lamp
1	BEC 16600	Backlight glass-Triplex	1	(4)	High mounted stop lamp
	JLM 1660	Installation kit-high mounted stop lamp	1		
2	BCC 2626	Mastic dam retention	NLA		Use BEC25457.
2	BEC 25457	Mastic dam retention	1		
3	BBC 5889	Sealing strip-outer-moulding to body	1		
4	BBC 8589	Inner sealing strip	1		
5	BBC 4149	Finisher-lower	NLA	(5)	Use BBC3958.
5	BBC 3958	Finisher-lower	NLA		
6	BBC 4150	Finisher-upper	NLA	(5)	Use BBC3954.
6	BBC 3954	Finisher-upper-RH	NLA		Use BCC5056.
6	BCC 5056	Finisher-upper-RH	NLA		Use BEC18124.
6	BEC 18124	Finisher-upper-RH	1		
8	BBC 4148	Corner clip-RH	1	(5)	
8	BCC 5058	Corner clip	NLA		Use BCC8258.
8	BCC 8258	Corner clip-LH	2	(5)	
9	BAC 5098	Joint clip	1	(5)	
	RTC 2668	Betaseal sealant kit	NLA		Use JLM1588.
	JLM 1588	Betaseal sealant kit	NLA		Use JLM20452.
	JLM 20452	Glass bonding adhesive	1		
10	BAC 2816	Glazing clip	22		

CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 661056
(3) From (V) 661057
(4) From (V) 634205
(5) To (V) 560459


BACKLIGHT GLASS AND FINISHER

Illus	Part Number	Description	Quantity	Change Point	Remarks
2	BCC 2628	Mastic dam retention	NLA	(1)	Use BEC25457.
	BCC 9214	Backlight glazing rubber	1	(1)	
7	BEC 18120	Bright finisher-RH	1	(1)	
7	BEC 18121	Bright finisher-LH	1	(1)	
5	BEC 18122	Finisher-RH/LH-lower	1	(1)	
9	BCC 5055	Joint clip-upper	NLA	(1)	Use BEC23512.
9	BEC 23512	Joint clip-upper-bright finish	1	(1)	
8	BCC 8258	Corner clip-LH	2	(1)	
8	BEC 18126	Corner clip-RH	2	(1)	

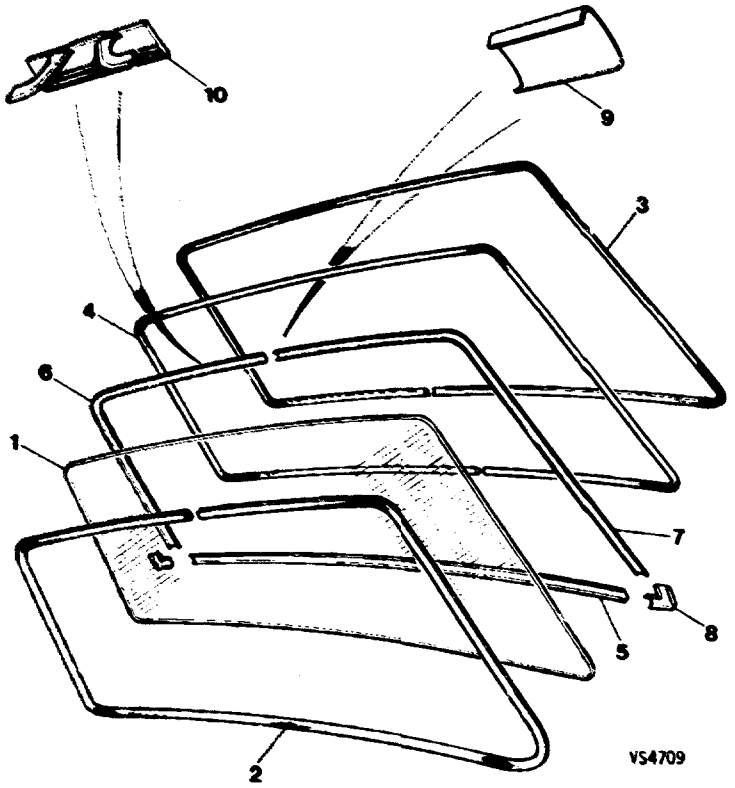

CHANGE POINTS:
(1) From (V) 560460

EXTERIOR DOOR MIRROR

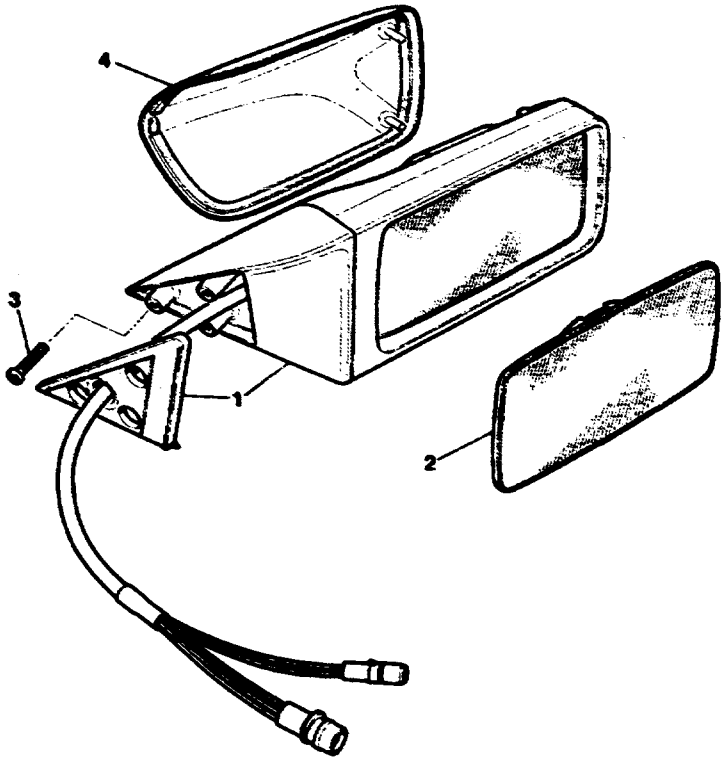


VS4928/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 4208	Door mirror-RH	NLA	(1)	Use BDC3826.
					RHD;except heated and Australia
					and New Zealand
1	BDC 3826	Door mirror-RH	NLA	(1)	Use BDC3830.
					RHD;except heated and Australia
					and New Zealand
1	BCC 4215	Door mirror-LH	NLA	(1)	Use BDC3833.
					RHD;except heated and Australia
					and Japan and New Zealand
1	BDC 3833	Door mirror-LH	NLA	(1)	Use BDC3835.
					RHD;except heated and Australia
					and Japan and New Zealand
1	BCC 4212	Door mirror-RH	NLA	(1)	Use BDC3830.
					Heated;RHD;except Australia and
					New Zealand
1	BDC 3830	Door mirror-RH	1	(1)	Heated;RHD;except Australia and
					New Zealand
1	BCC 4217	Door mirror-LH	NLA	(1)	Use BDC3835.
					Heated;RHD;except Australia and
					Japan and New Zealand
1	BDC 3835	Door mirror-LH	1	(1)	Heated;RHD;except Australia and
					Japan and New Zealand
1	BCC 4206	Door mirror-RH	NLA	(1)	Use BDC3824.
					Australia;New
					Zealand;RHD;except heated
1	BDC 3824	Door mirror-RH	NLA	(1)	Use BDC3826.
					Australia;New
					Zealand;RHD;except heated
1	BCC 4207	Door mirror-LH	NLA	(1)	Use BDC3825.
					Australia;New
					Zealand;RHD;except heated
1	BDC 3825	Door mirror-LH	NLA	(1)	Use BDC3829.
					Australia;New
					Zealand;RHD;except heated

CHANGE POINTS:
(1) To (V) 556850

EXTERIOR DOOR MIRROR

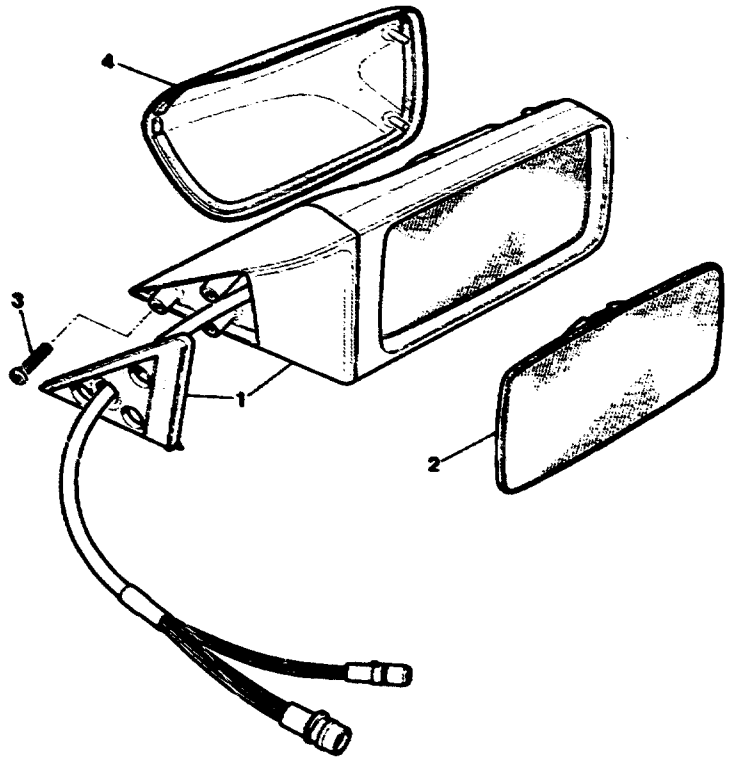


VS4928/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 4210	Door mirror-RH	NLA	(1)	Use BDC3828.
					Heated;Australia;New
1	BDC 3828	Door mirror-RH	NLA	(1)	Heated;Australia;New
1	BCC 4211	Door mirror-LH	NLA	(1)	Use BDC3829.
					Heated;Australia;New
1	BDC 3829	Door mirror-LH	1	(1)	Heated;Australia;New
1	BCC 4209	Door mirror-LH	NLA	(1)	Use BDC3827.
					Japan;RHD;except heated
1	BDC 3827	Door mirror-LH	NLA	(1)	Use BDC3831.
1	BCC 4213	Door mirror-LH	NLA	(1)	Use BDC3831.
1	BDC 3831	Door mirror-LH	1	(1)	Heated;Japan;RHD
1	BCC 4218	Door mirror-RH	NLA	(1)	Use BDC3836.
					LHD;except heated
1	BDC 3836	Door mirror-RH	NLA	(1)	Use BDC3840.
					LHD;except heated
1	BCC 4219	Door mirror-LH	NLA	(1)	Use BDC3837.
					LHD;except heated
1	BDC 3837	Door mirror-LH	NLA	(1)	Use BDC3841.
					LHD;except heated
1	BCC 4222	Door mirror-RH	NLA	(1)	Use BDC3840.
					Heated;LHD;except Canada and
					Sweden and USA
1	BDC 3840	Door mirror-RH	1	(1)	Heated;LHD;except Canada and
					Sweden and USA
1	BCC 4223	Door mirror-LH	NLA	(1)	Use BDC3841.
					Heated;LHD;except Canada and
					Sweden and USA
1	BDC 3841	Door mirror-LH	1	(1)	Heated;LHD;except Canada and
					Sweden and USA
1	BDC 3838	Door mirror-RH	1	(1)	Heated;Canada;USA;LHD
1	BCC 4221	Door mirror-LH	NLA	(1)	Use BDC3839.
					Heated;Canada;USA;LHD
1	BDC 3839	Door mirror-LH	1	(1)	Heated;Canada;USA;LHD
1	BDC 4886	Door mirror-RH	1	(1)	Heated;Sweden;LHD
1	BDC 4887	Door mirror-LH	1	(1)	Heated;Sweden;LHD

CHANGE POINTS:
(1) To (V) 556850

EXTERIOR DOOR MIRROR

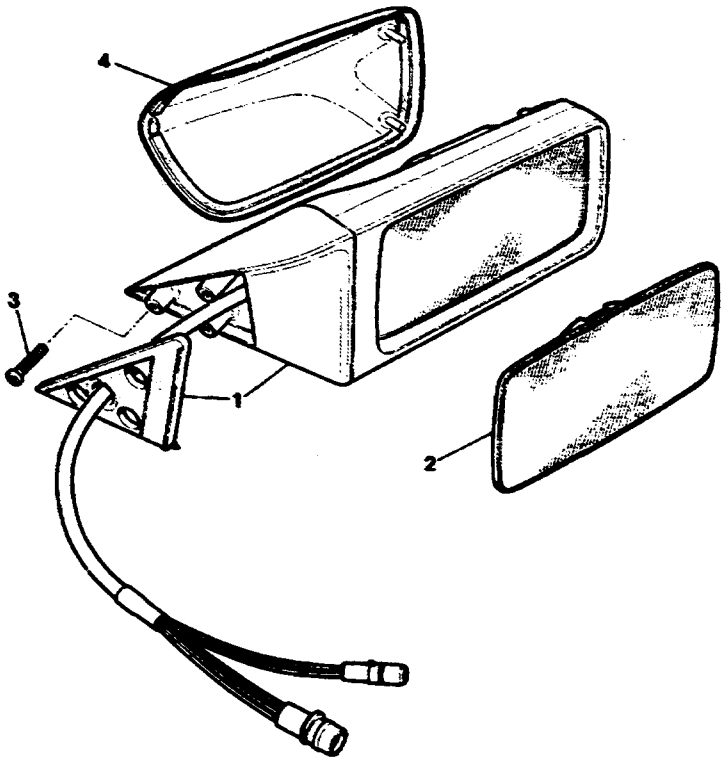


VS4928/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
4	JLM 10763	Mirror capping-bright finish	2	(1)	
	BAC 6836	Gasket-RH	1	(1)	
	BAC 6837	Gasket-LH	1	(1)	
3	BD 48956	Torx head screw	NLA	(1)	Use AGU2050.
3	AGU 2050	Torx head screw	NLA	(1)	
2	JLM 1429	Mirror glass -flat	2	(1)	Except heated
2	JLM 1430	Mirror glass -convex-1400mm radius	2	(1)	Except heated
2	JLM 1577	Mirror glass -flat -replacement	2	(1)	Heated;Australia;Canada;New Zealand;USA;RHD
2	JLM 1578	Mirror glass -convex-1400mm radius	2	(1)	Heated;RHD;except Australia and Canada and New Zealand and USA
2	JLM 1578	Mirror glass -convex-1400mm radius	2	(1)	Heated;LHD;except Canada and USA
2	JLM 1579	Mirror glass -convex-1000mm radius	2	(1)	Heated;Japan
2	JLM 1580	Mirror glass -convex-1400mm radius	2	(1)	Heated;Canada;USA;LHD

CHANGE POINTS:
(1) To (V) 556850

EXTERIOR DOOR MIRROR

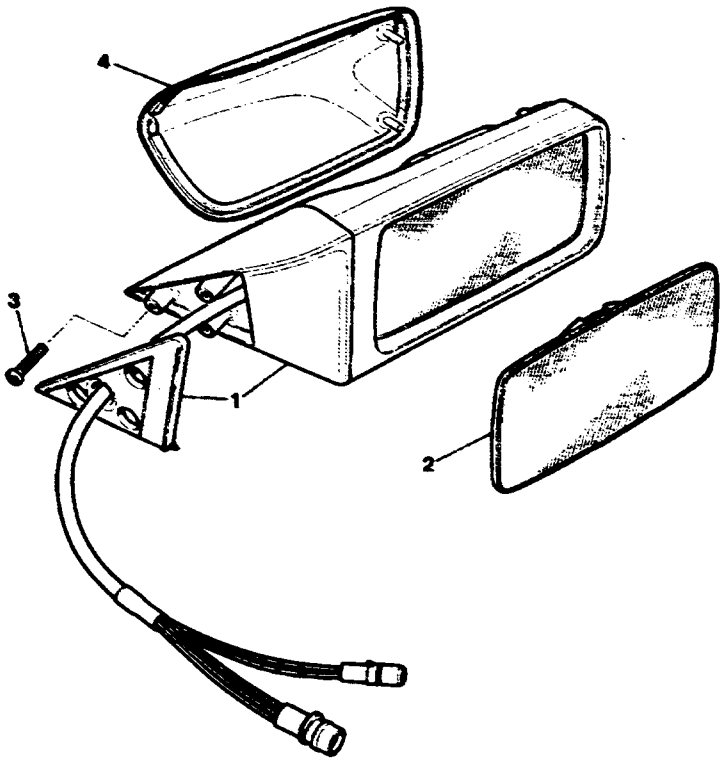


VS4928/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BCC	8558	Door mirror-RH	1	(1)	UK;RHD
1	BCC	8557	Door mirror-LH	1	(1)	UK;RHD
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		UK;RHD
1	BCC	8559	Door mirror-LH	1	(1)	LHD;Europe
1	BCC	8556	Door mirror-RH	1	(1)	LHD;Europe
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		LHD;Europe
1	BCC	8561	Door mirror-LH	1	(1)	Canada;USA;LHD
1	BCC	8562	Door mirror-RH	1	(1)	Canada;USA;LHD
2	JLM	1795	Mirror glass -flat	NLA	(1)	Use BEC4223.
	BEC	4223	Door mirror glass-assembly-flat -driver's side	1		LH;Canada;USA;LHD
2	JLM	1797	Mirror glass -1400mm radius	NLA	(1)	Use BEC4220.
	BEC	4220	Door mirror glass-1400mm radius-passenger side	1		RH;Canada;USA;LHD
1	BCC	8560	Door mirror-RH	1	(1)	Australia;RHD
1	BDC	3604	Door mirror-LH	1	(1)	Australia;RHD
2	JLM	1795	Mirror glass -flat	NLA	(1)	Use BEC4223.
	BEC	4223	Door mirror glass-assembly-flat -driver's side	2		Australia;RHD
1	BCC	8558	Door mirror-RH	1	(1)	Japan;RHD
1	BCC	8563	Door mirror-LH	NLA	(1)	Use BCC8557.
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	1		RH;Japan;RHD
2	JLM	1798	Mirror glass -1000mm radius	NLA	(1)	Use BEC4222.
	BEC	4222	Door mirror glass-passenger side-1000mm radius	NLA		Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	1		LH;Japan;RHD
1	BCC	8559	Door mirror-LH	1	(1)	Japan;LHD
1	BCC	8556	Door mirror-RH	1	(1)	Japan;LHD
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		Japan;LHD
3	AGU	2598J	Torx head screw	3	(1)	
	WA	104001J	Plain washer	3	(1)	
4	BEC	4219	Mirror capping-bright finish	2	(1)	
	JLM	2235	Retaining finisher spring cup	2	(1)	

CHANGE POINTS:
(1) From (V) 556851 To (V) 594575

EXTERIOR DOOR MIRROR

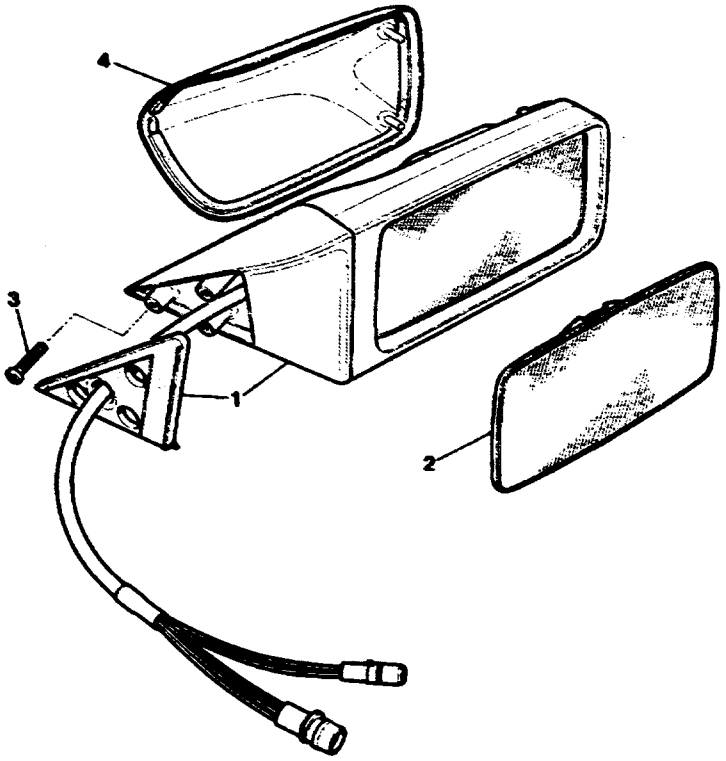


VS4928/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BDC	3545	Door mirror-LH	1	(1)	Sweden;LHD
1	BDC	3544	Door mirror-RH	NLA	(1)	Sweden;LHD
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		Sweden;LHD
1	BCC	8559	Door mirror-LH	1	(1)	LHD;except Canada and Sweden and USA
1	BCC	8556	Door mirror-RH	1	(1)	
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		LHD;except Canada and Sweden and USA
3	AGU	2598 J	Torx head screw	3	(1)	
	WA	104001 J	Plain washer	3	(1)	
4	BEC	4219	Mirror capping-bright finish	2	(1)	
	JLM	2235	Retaining finisher spring cup	2	(1)	

CHANGE POINTS:
(1) From (V) 556851 To (V) 594575

EXTERIOR DOOR MIRROR

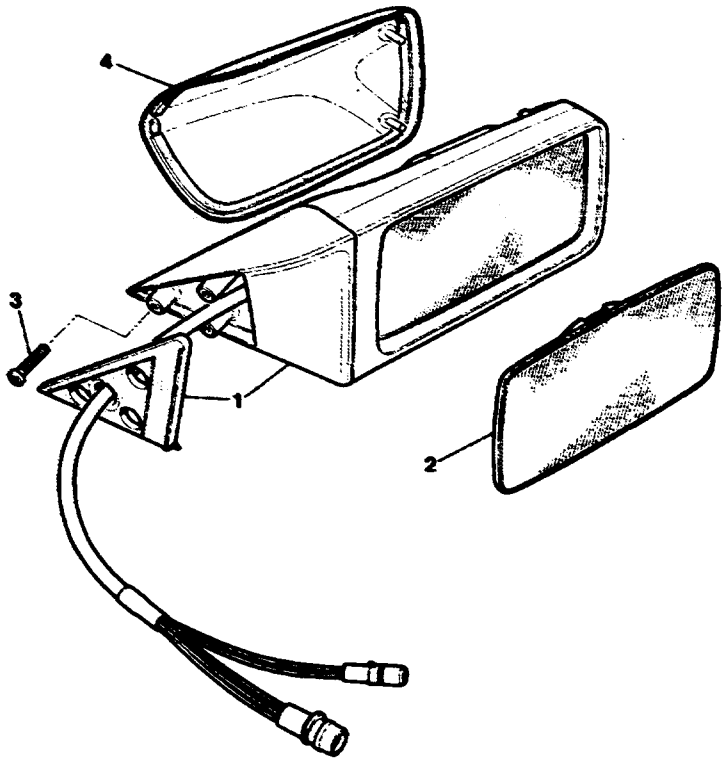

VS4928/A

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BDC	8080	Door mirror-RH	1	(1)	UK;RHD
1	BDC	8079	Door mirror-LH	1	(1)	UK;RHD
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		UK;RHD
1	BDC	8081	Door mirror-LH	1	(1)	LHD;except Canada and USA
1	BDC	8078	Door mirror-RH	1	(1)	LHD;except Canada and USA
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	2		LHD;except Canada and USA
1	BDC	8083	Door mirror-LH	1	(1)	Canada;USA;LHD
1	BDC	8084	Door mirror-RH	1	(1)	Canada;USA;LHD
2	JLM	1795	Mirror glass -flat	NLA	(1)	Use BEC4223.
	BEC	4223	Door mirror glass-assembly-flat -driver's side	1		LH;Canada;USA;LHD
2	JLM	1797	Mirror glass -1400mm radius	NLA	(1)	Use BEC4220.
	BEC	4220	Door mirror glass-1400mm radius-passenger side	1		RH;Canada;USA;LHD
1	BDC	8080	Door mirror-RH	1	(1)	Japan;RHD
1	BDC	8085	Door mirror-LH	NLA	(1)	Use BDC8079.
1	BDC	8079	Door mirror-LH	1	(1)	Japan;RHD
2	JLM	1796	Mirror glass -1400mm radius	NLA	(1)	Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	1		RH;Japan;RHD
2	JLM	1798	Mirror glass -1000mm radius	NLA	(1)	Use BEC4222.
	BEC	4222	Door mirror glass-passenger side-1000mm radius	NLA		Use BEC4221.
	BEC	4221	Door mirror glass-assembly-convex-1400mm radius	1		LH;Japan;RHD
1	BDC	8082	Door mirror-RH	1	(1)	Australia;New Zealand;RHD
1	BDC	8077	Door mirror-LH	1	(1)	Australia;New Zealand;RHD
2	JLM	1795	Mirror glass -flat	NLA	(1)	Use BEC4223.
	BEC	4223	Door mirror glass-assembly-flat -driver's side	2		Australia;New Zealand;RHD
3	AGU	2545J	Torx head screw	3	(1)	
	WA	104001J	Plain washer	3	(1)	
4	BEC	4219	Mirror capping-bright finish	2	(1)	
	JLM	2235	Retaining finisher spring cup	2	(1)	

CHANGE POINTS:
(1) From (V) 594576


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

BONNET LATCHING MECHANISM AND ..... 4. N 02
DOOR GLASSES AND FRAMES ..... 4. N 05
DOOR HANDLES AND LOCKS ..... 4. N 13
DOOR HINGES ..... 4. O 06
DOOR SEALS ..... 4. O 05
TRUNK LATCHING MECHANISMS AND ..... 4. N 03
BONNET CATCH AND STRIKER ..... 4. N 02
DOOR APERTURE SEAL ..... 4. O 05
DOOR GLASS AND FRAME FITTINGS-FRONT 4. N 05
DOOR GLASS REGULATOR ..... 4. N 12
DOOR GLASS, FRAME AND SEAL-REAR ..... 4. N 08
DOOR HANDLE AND DOOR LOCK-FRONT ..... 4. N 16
DOOR HANDLE ..... 4. N 13
DOOR HINGE ..... 4. O 06
DOOR LATCH ASSEMBLY-FRONT/REAR ..... 4. O 02
DOOR LOCK HEATER AND MICROSWITCH ..... 4. N 18
TRUNK LID LOCK ASSEMBLY ..... 4. N 03

BONNET CATCH AND STRIKER

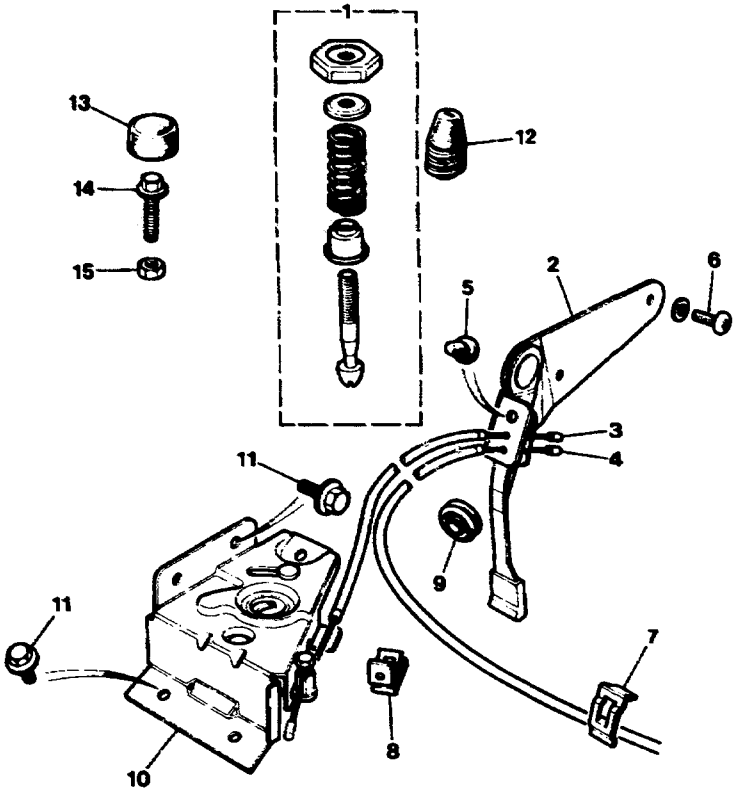


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BBC 3987	Bonnet lock striker-assembly	NLA		Use BEC22070.
1	BEC 22070	Bonnet lock striker-assembly	NLA		Use HMD2420AA.
1	HMD 2420AA	Bonnet lock striker-assembly	NLA		Use HNA2420AB.
1	HNA 2420AB	Bonnet lock striker-assembly	NLA		Use HNA2420AC.
1	HNA 2420AC	Bonnet lock striker-assembly	NLA		Use HNA2420AD.
1	HNA 2420AD	Bonnet lock striker-assembly	2		
2	BBC 5096	Bonnet release lever	NLA	(1)	Use BDC3160.
2	BDC 3160	Bonnet release lever	NLA	(2)	Use BEC6758.
2	BEC 6758	Bonnet release lever	NLA		Use HNA2560AA.
2	HNA 2560AA	Bonnet release lever-assembly	1		RHD
2	BBC 5097	Bonnet release lever	NLA	(1)	Use BDC3161.
2	BDC 3161	Bonnet release lever	1	(2)	LHD
3	BBC 5092	Bonnet release cable-driver's side	1		
4	BBC 5093	Bonnet release cable-passenger side	NLA		Use HMD2549AA.
4	HMD 2549AA	Bonnet release cable-inner-passenger side	1		
5	BD 4616	Buffer-1/4"	NLA		Use HMD3351AA.
	HMD 3351AA	Blanking patch -50mm diameter	2		
6	SR 106121J	Screw	2		
7	AGU 1473	Clip	NLA	(1)	Use BDC3751.
7	BDC 3751	Clip	5	(2)	
8	13H 489	Clip	NLA		Use 13H489J.
8	13H 489J	Clip	2		
	AGU 2028	Cable clip	2		
9	BD 33318	Grommet	1		
10	BBC 4800	Bonnet latch -RH	NLA	(3)	Use BCC5824.
10	BCC 5824	Bonnet latch -RH	NLA		Use BCC8470.
10	BCC 8470	Bonnet latch -RH	NLA		Use BDC8022.
10	BDC 8022	Bonnet latch -RH	NLA	(4)	Use HNA2400AA.
10	HNA 2400AA	Bonnet latch -assembly-RH	1		
10	BBC 4801	Bonnet latch -LH	1	(3)	
10	BDC 8023	Bonnet latch -LH	NLA	(4)	Use HNA2401AA.
10	HNA 2401AA	Bonnet latch -assembly-LH	1	(4)	
11	BD 48964	Paint clearing screw	10		
12	CZG 1668J	Buffer-bonnet and trunk-hazard warning label	NLA		Use BEC10761.
12	BEC 10761	Buffer	2		
13	BD 10224	Rubber buffer	2		
14	FS 106251J	Flange head screw	2		
15	NH 106041J	Nut-M6	2		
	DAC 40273	Edge protection strip-241mm	NLA		Use DAC402716.

CHANGE POINTS:

(1) To (V) 524374
(2) From (V) 524375
(3) To (V) 580392
(4) From (V) 580393

TRUNK LID LOCK ASSEMBLY

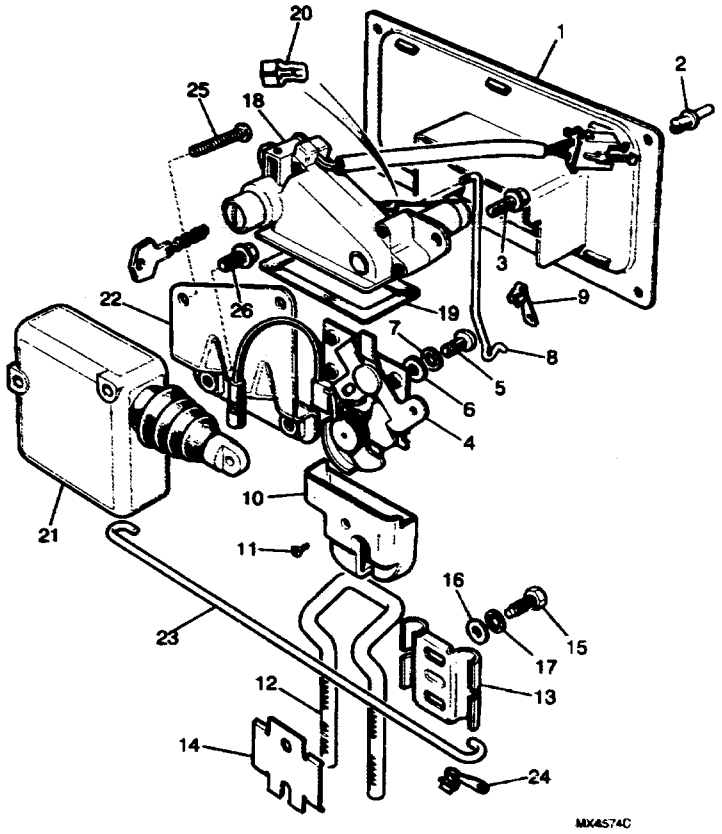


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BCC 3627	Mechanism shield-trunk lid lock	1	.....	Without lamp
1	BDC 7718	Mechanism shield-trunk lid lock	1	.....	With lamp
2	BRC 6035J	Rokut rivet	NLA	(1).....	Use DA604025J.
	DA 604025J	Self tapping screw	4		
	BD 33800J	Push fix	4	(2)	
3	FS 105121	Flanged head screw-M5	NLA		
4	BDC 7152	Trunk latch-assembly	1	(3)	
4	BEC 4829	Trunk latch-assembly	NLA	(4).....	Use BEC19331.
4	BEC 19331	Trunk latch-assembly	NLA	(5).....	Use GMB3500AB.
5	SE 604041	Pan posi head setscrew	3		
6	WC 105001J	Plain washer	3		
7	C 724	Shakeproof washer-0.25"	3		
8	BAC 4802	Trunk lid latch link	1		
9	BD 311022	Anti rattle clip	1		
10	BEC 1441	Trunk lid latch cover	NLA	.....	Use GHF3512AA.
10	GHF 3512AA	Trunk lid latch cover	1		
11	SF 103084	Screw-M3 x 8mm	1		
12	BBC 7249	Striker	NLA	(6).....	Use BEC7212.
12	BEC 7212	Striker	NLA	(7).....	Use GMB3490AA.
	GMB 3490AA	Trunk lock striker-assembly	1		
13	BD 31104	Retainer	1		
14	BDC 6596	Striker friction plate	NLA	(6).....	Use BEC7813.
14	BEC 7813	Striker friction plate	NLA	(6).....	Use BEC7213.
14	BEC 7213	Striker friction plate	1	(7)	
	BDC 6597	Self adhesive pad	1	(7)	
	SH 106161J	Setscrew-imperial fixing	2		
16	FW 104T	Plain washer-0.25" i/d	NLA	.....	Use WA106041J.
16	WA 106041J	Plain washer-0.25" i/d	2		
17	WF 600041J	Shakeproof washer	2		

CHANGE POINTS:

(1) To (V) 524374
(2) From (V) 524375
(3) To (V) 594575
(4) From (V) 594576 To (V) 664388
(5) From (V) 664389
(6) To (V) 610013
(7) From (V) 610014

TRUNK LID LOCK ASSEMBLY

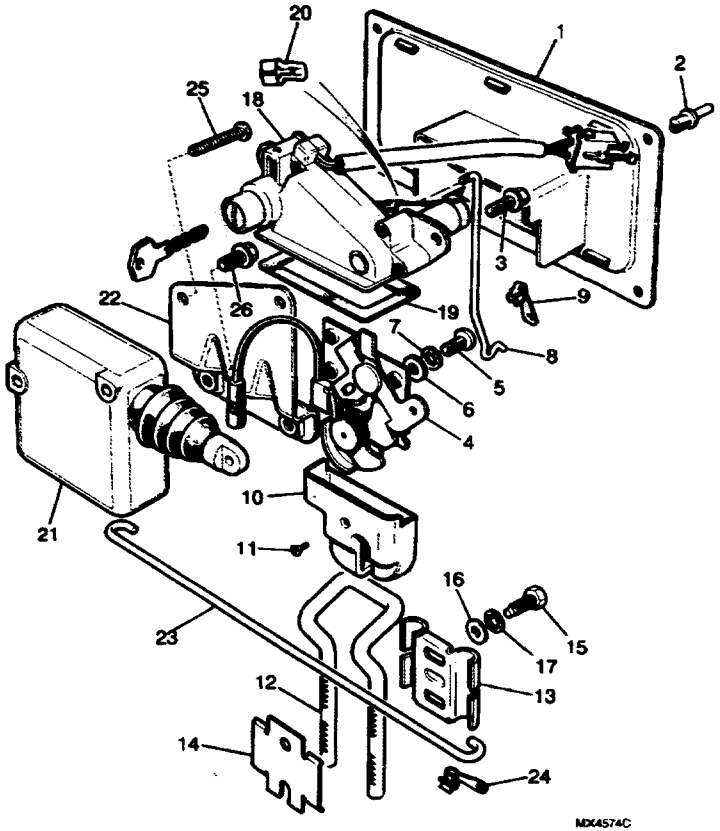

Illus	Part Number	Description	Quantity	Change Point	Remarks
18	BBC 9995	Trunk lid lock-less key and barrel	1	(1)	Without remote release
18	BEC 11691	Trunk lid lock-less key and barrel	1	(2)	Without remote release
18	BEC 5711	Trunk lid lock-less key and barrel	1	(3)	With remote release
	BDC 7011	Trunk lid and cubby box lockset	1		Without remote release
	BEC 1335	Trunk lid and cubby box lockset	1	(4)	With remote release
	BEC 7708	Lockset-assembly-doors/steering/trunk/cubby box	1	(3)	
	JLM 10788	Lock barrel repair kit-trunk lid lock	1	(3)	Note (1)
	JLM 476	Key blank -no.1 precut-blade type	A/R	(4)	
	JLM 4762	Key blank -no.2 precut-blade type	A/R	(4)	
	JLM 4763	Key blank -no.3 precut-blade type	A/R	(4)	
	JLM 1950	Blank key -standard -spindle type	A/R	(3)	
	JLM 1948	Key blank -illuminated -spindle type	A/R	(3)	
	BCC 9959	Cartridge-battery and bulb	A/R	(3)	
19	BCC 1029	Gasket	1		
20	JLM 2074	Clip	1		
21	BDC 7550	Trunk lid latch actuator-remote release	1		
22	BDC 7271	Mounting bracket-assembly	1		
23	BEC 4444	Link	1		
24	BD 311022	Anti rattle clip	1		
25	AGU 2445J	Screw	2		
26	FS 105101J	Flange screw-M5	2		


CHANGE POINTS:

(1) To (V) 583946
(2) From (V) 583947 To (V) 594575
(3) From (V) 594576
(4) To (V) 594575

Remarks:

(1) Service Bulletin JD 06/90

DOOR GLASS AND FRAME FITTINGS-FRONT

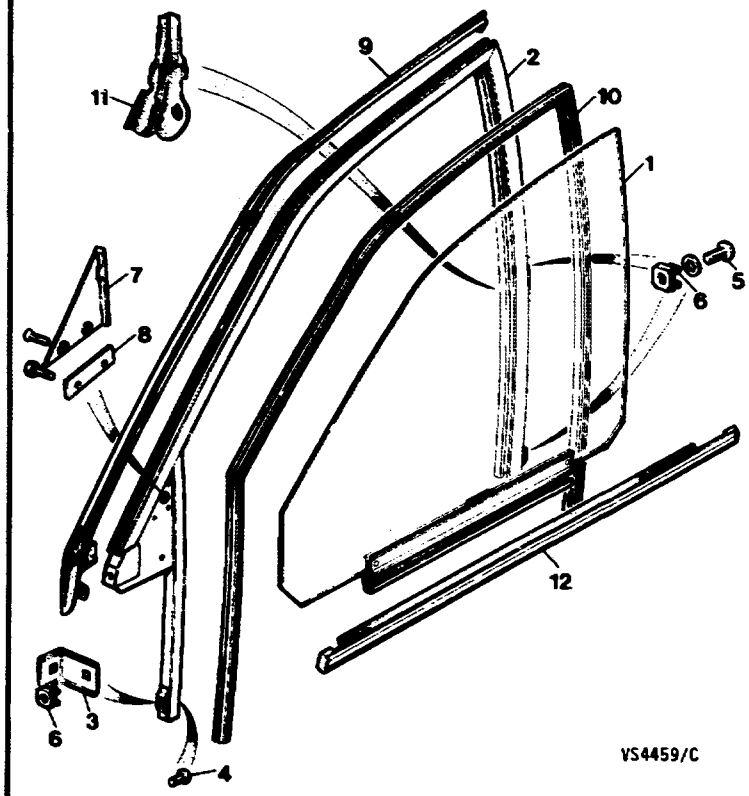


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BAC 5102	Door glass and carrier-assembly-RH front	NLA	(1)	Use BCC5320.
1	BCC 5320	Door glass and carrier-assembly-RH front	NLA	(2)	Use BCC5316.
1	BCC 5316	Door glass and carrier-assembly-RH front	1	(3)	
1	BCC 5321	Door glass and carrier-assembly-LH front	NLA	(2)	Use BCC5317.
1	BCC 5317	Door glass and carrier-assembly-LH front	1	(3)	
2	BCC 2852	Door glass frame-RH front door-black finish	NLA	(4)	Use BEC1164.
2	BEC 1164	Door glass frame-RH front door-black finish	NLA	(5)	Use BEC15488.
2	BEC 15488	Door glass frame-RH front door-black finish	NLA		Use BEC16336.
2	BEC 16336	Door glass frame-RH front door-black finish	1	(6)	
2	BCC 2853	Door glass frame-LH front door-black finish	NLA	(4)	Use BEC1165.
2	BEC 1165	Door glass frame-LH front door-black finish	NLA	(5)	Use BEC15489.
2	BEC 15489	Door glass frame-LH front door-black finish	NLA		Use BEC16337.
2	BEC 16337	Door glass frame-LH front door-black finish	1	(6)	
2	BCC 2854	Door glass frame-RH front door-stainless steel	NLA	(4)	Use BEC1166.
2	BEC 1166	Door glass frame-RH front door-stainless steel	NLA	(5)	Use BEC15486.
2	BEC 15486	Door glass frame-RH front door-stainless steel	NLA		Use BEC16334.
2	BEC 16334	Door glass frame-RH front door-stainless steel	1	(6)	
2	BCC 2855	Door glass frame-LH front door-stainless steel	NLA	(4)	Use BEC1167.
2	BEC 1167	Door glass frame-LH front door-stainless steel	NLA	(5)	Use BEC15487.
2	BEC 15487	Door glass frame-LH front door-stainless steel	NLA		Use BEC16335.
2	BEC 16335	Door glass frame-LH front door-stainless steel	1	(6)	
3	BAC 5685J	Support bracket	NLA		Use BEC25939.
3	BEC 25939	Support bracket	2		
4	BD 48949 3	Pan head torx screw-with M6-14 mm dia. washer	6		
5	BD 48949 2	Torx screw-without washer-frame to door	4		
5	BD 48949 4	Torx screw-with M6-18 mm dia. washer-frame to door	6		
6	BD 48963	Grip nut -frame to door	6		
7	BCC 4136	Cheater plate-RH inner	1		
7	BCC 4137	Cheater plate-LH inner	1		
8	BBC 2855	Clamping strip	2		
	AC 606044	Screw	NLA		Use AC606044J.
	AC 606044J	Screw	4		
	BD 48960	Nut	4		

CHANGE POINTS:

(1) To (V) 524374
(2) To (V) 634204
(3) From (V) 634205
(4) To (V) 556850
(5) From (V) 556851 To (V) 658759
(6) From (V) 658760

DOOR GLASS AND FRAME FITTINGS-FRONT

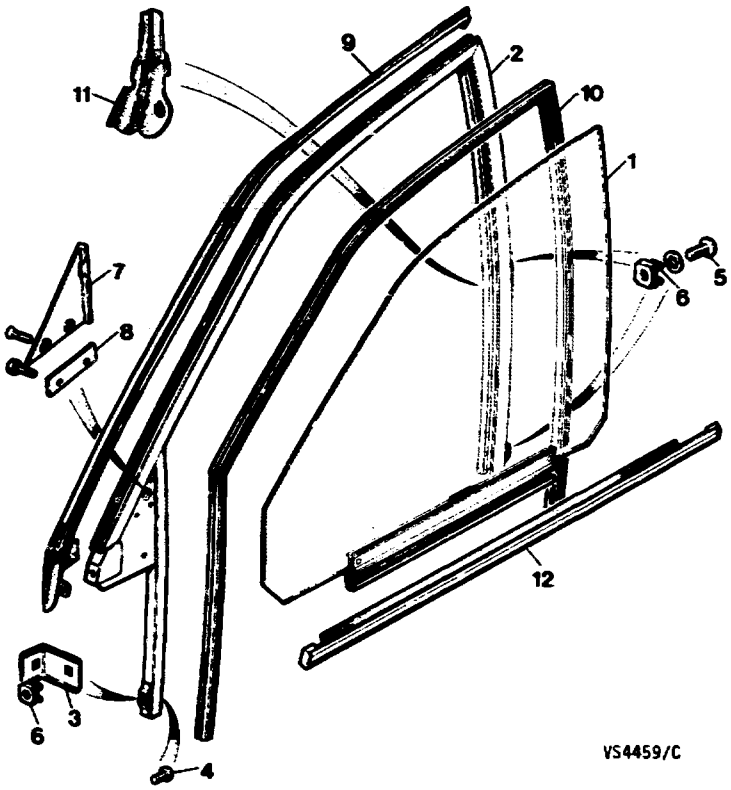


Illus	Part Number	Description	Quantity	Change Point	Remarks
9	BCC 2920	Glass frame seal -RH front door	NLA	(1)	Use BDC4514.
9	BDC 4514	Glass frame seal -RH front door	NLA	(2)	Use BEC15864.
9	BEC 15864	Glass frame seal -RH front door	NLA	(3)	Use BEC18414.
9	BEC 18414	Glass frame seal -RH front door	NLA		Use BEC24168.
9	BEC 24168	Glass frame seal -RH front door	1		
9	BCC 2921	Glass frame seal -LH front door	NLA	(1)	Use BDC4515.
9	BDC 4515	Glass frame seal -LH front door	NLA	(2)	Use BEC15865.
9	BEC 15865	Glass frame seal -LH front door	NLA	(3)	Use BEC18415.
9	BEC 18415	Glass frame seal -LH front door	NLA		Use BEC24169.
9	BEC 24169	Glass frame seal -LH front door	1		
10	BCC 9616	Silent run channel -RH/LH front	NLA	(4)	Use BDC8694 qty 1 or BDC8695 qty 1.
10	BDC 8694	Silent run channel -RH front	1	(5)	
10	BDC 8695	Silent run channel -LH front	1	(5)	
11	BCC 2900	Finisher-RH front door-rear -inner	NLA		Use BEC20626.
11	BEC 20626	Finisher-RH front door-rear -inner	NLA		Use BEC25878.
11	BEC 25878	Finisher-RH front door-rear -inner	NLA		Use GMB1720AB.
11	GMB 1720AB	Finisher-RH front door-rear -inner	1		
11	BCC 2901	Finisher-LH front door-rear -inner	NLA		Use BEC20627.
11	BEC 20627	Finisher-LH front door-rear -inner	NLA		Use BEC25879.
11	BEC 25879	Finisher-LH front door-rear -inner	NLA		Use GMB1721AB.
11	GMB 1721AB	Finisher-LH front door-rear -inner	1		
	BBC 3234	Rokut rivet	NLA		Use AGU2321.
	AGU 2321	Rokut rivet	NLA		Use BDC4858.
	BDC 4858	Rokut rivet -black nylon	4		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 647987
(3) From (V) 647988
(4) To (V) 583009
(5) From (V) 583010

DOOR GLASS AND FRAME FITTINGS-FRONT

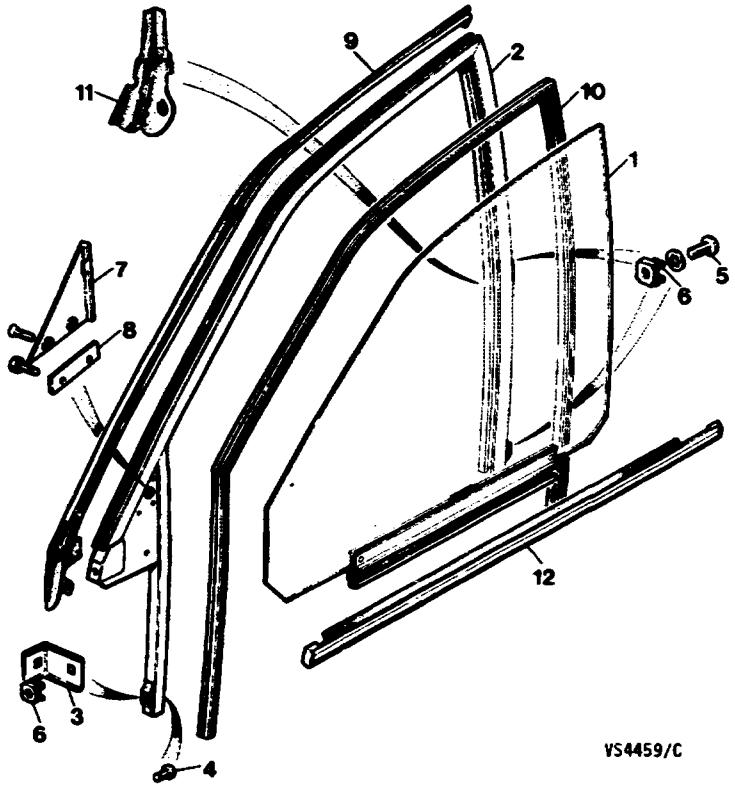


Illus	Part Number	Description	Quantity	Change Point	Remarks
12	BDC 5496	Waist finisher/seal-RH-door glass	NLA	(1)	Use BEC5444.
12	BEC 5444	Waist finisher/seal-RH-door glass	1	(2)	
12	BDC 5497	Waist finisher/seal-LH-door glass	NLA	(1)	Use BEC5445.
12	BEC 5445	Waist finisher/seal-LH-door glass	1	(2)	
	BRC 6035	Rokut rivet	NLA		Use BRC6035J.
	BRC 6035J	Rokut rivet	NLA		Use DA604025J.
	DA 604025J	Self tapping screw	2		
	AGU 2505J	Spring clip	NLA	(3)	Use AGU2544J.
	AGU 2544J	Spring clip	8	(4)	

CHANGE POINTS:

(1) To (V) 602499
(2) From (V) 602500
(3) To (V) 567949
(4) From (V) 567950

DOOR GLASS, FRAME AND SEAL-REAR

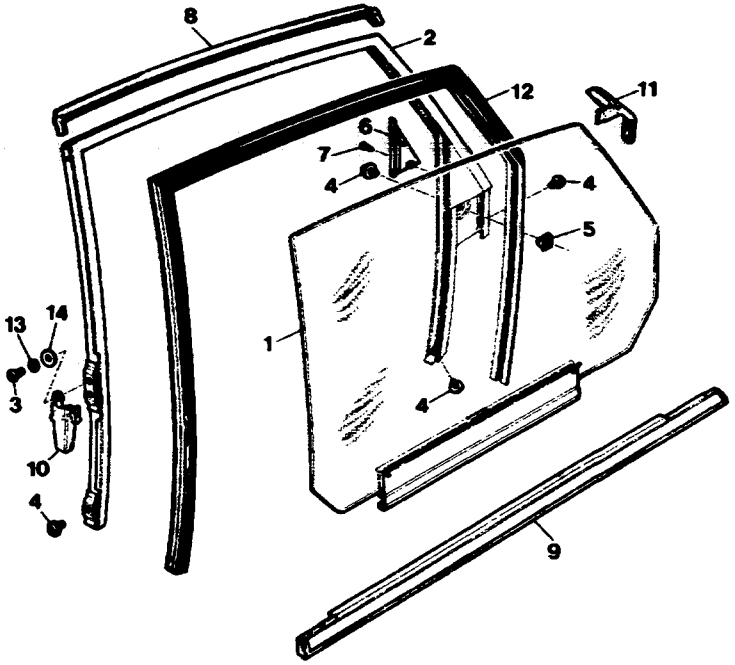


VS4758

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BBC 5166	Door glass and carrier-RH rear door	NLA	(1)	Use BCC5318.
1	BCC 5322	Door glass and carrier-RH rear door	NLA	(2)	Use BCC5318.
1	BCC 5318	Door glass and carrier-RH rear door	1	(3)	
1	BCC 5323	Door glass and carrier-LH rear door	NLA	(2)	Use BCC5319.
1	BCC 5319	Door glass and carrier-LH rear door	1	(3)	
2	BCC 5968	Glass frame/outer cheater plate-RH rear door-black finish	NLA	(4)	Use BDC9534.
2	BDC 9534	Glass frame/outer cheater plate-RH rear door-black finish	NLA	(5)	Use BEC15510.
2	BEC 15510	Glass frame/outer cheater plate-RH rear door-black finish	NLA		Use BEC16342.
2	BEC 16342	Glass frame/outer cheater plate-RH rear door-black finish	1	(6)	
2	BCC 5969	Glass frame/outer cheater plate-LH rear door-black finish	NLA	(4)	Use BDC9535.
2	BDC 9535	Glass frame/outer cheater plate-LH rear door-black finish	NLA	(5)	Use BEC15511.
2	BEC 15511	Glass frame/outer cheater plate-LH rear door-black finish	NLA		Use BEC16343.
2	BEC 16343	Glass frame/outer cheater plate-LH rear door-black finish	1	(6)	
2	BCC 5970	Glass frame/outer cheater plate-RH rear door-stainless steel	NLA	(4)	Use BDC9536.
2	BDC 9536	Glass frame/outer cheater plate-RH rear door-stainless steel	NLA	(5)	Use BEC15512.
2	BEC 15512	Glass frame/outer cheater plate-RH rear door-stainless steel	NLA		Use BEC16344.
2	BEC 16344	Glass frame/outer cheater plate-RH rear door-stainless steel	NLA	(6)	Use GMD2344BA.
2	GMD 2344BA	Glass frame/outer cheater plate-RH rear door-stainless steel	1		

CHANGE POINTS:

(1) To (V) 524374
(2) To (V) 634204
(3) From (V) 634205
(4) To (V) 599109
(5) From (V) 599110 To (V) 658759
(6) From (V) 658760

DOOR GLASS, FRAME AND SEAL-REAR

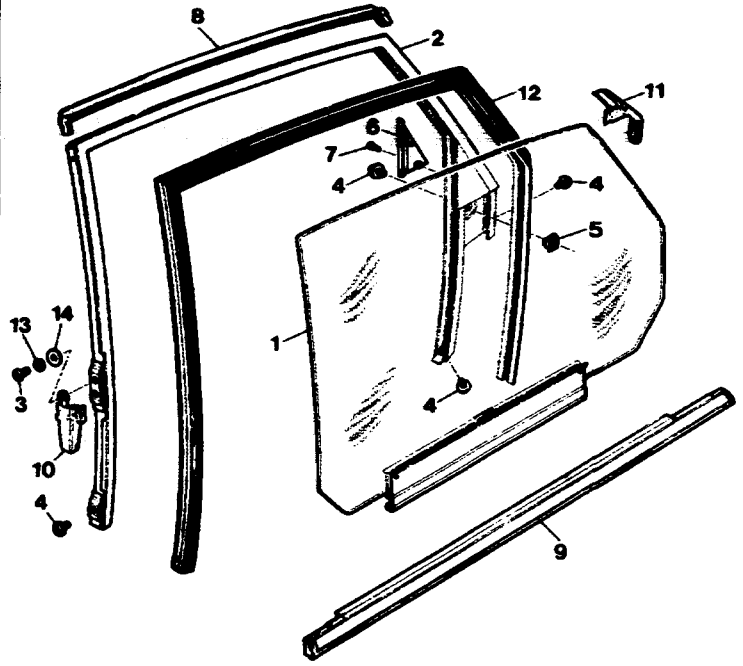


VS4758

Illus	Part Number	Description	Quantity	Change Point	Remarks
2	BCC 5971	Glass frame/outer cheater plate-LH rear door-stainless steel	NLA	(1)	Use BDC9537.
2	BDC 9537	Glass frame/outer cheater plate-LH rear door-stainless steel	NLA	(2)	Use BEC15513.
2	BEC 15513	Glass frame/outer cheater plate-LH rear door-stainless steel	NLA		Use BEC16345.
2	BEC 16345	Glass frame/outer cheater plate-LH rear door-stainless steel	NLA	(3)	Use GMD2345BA.
2	GMD 2345BA	Glass frame/outer cheater plate-LH rear door-stainless steel	1		
	BEC 9049	Packer	2	(4)	
3	BD 489492	Torx screw-without washer-frame to door	1		
4	BD 489494	Torx screw-with M6-18 mm dia. washer-frame to door	6		
5	BD 48963	Grip nut -frame to door	3		
	BD 489497	Pan head torx screw-frame to door	4	(4)	
	BDC 9542	Cheater plate-assembly-RH outer	NLA		Use BEC16460.
	BEC 16460	Cheater plate-assembly-RH outer	1		XJ6
	BDC 9543	Cheater plate-assembly-RH outer	NLA		Use BEC16461.
	BEC 16461	Cheater plate-assembly-LH outer	1		XJ6
	BEC 12664	Cheater plate-assembly-RH outer	NLA		Use BEC16458.
	BEC 12664	Cheater plate-assembly-RH outer	NLA		Use BEC16458.
	BEC 16458	Cheater plate-assembly-RH outer	1		Sovereign
	BEC 16458	Cheater plate-assembly-RH outer	1		Daimler/VDP
	BEC 12665	Cheater plate-assembly-LH outer	NLA		Use BEC16459.
	BEC 12665	Cheater plate-assembly-LH outer	NLA		Use BEC16459.
	BEC 16459	Cheater plate-assembly-LH outer	1		Sovereign
	BEC 16459	Cheater plate-assembly-LH outer	1		Daimler/VDP
	RA 608125J	Blind rivet-0.125" diameter	2		

CHANGE POINTS:

(1) To (V) 599109
(2) From (V) 599110 To (V) 658759
(3) From (V) 658760
(4) From (V) 602500

DOOR GLASS, FRAME AND SEAL-REAR

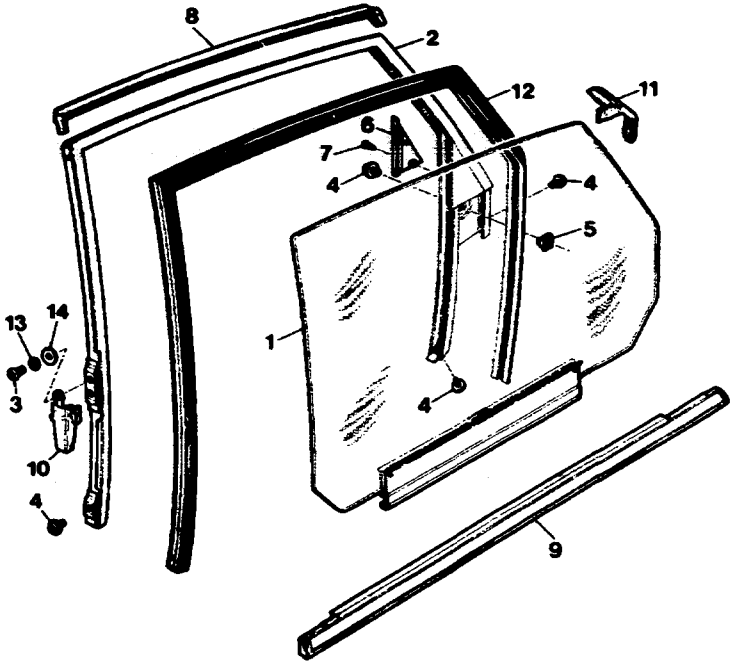


VS4758

Illus	Part Number	Description	Quantity	Change Point	Remarks
6	BBC 9578	Cheater finisher -RH inner	NLA	.....	Use BDC4098.
6	BDC 4098	Cheater finisher -RH inner	NLA	.....	Use JLM20202.
6	BBC 9579	Cheater finisher -LH inner	NLA	.....	Use BDC4099.
6	BDC 4099	Cheater finisher -LH inner	NLA	.....	Use JLM20202.
6	JLM 20202	Cheater finisher -RH/LH inner	2		
7	AC 606044J	Screw	2		
	BD 48960	Nut	2		
8	BBC 6892	Glass frame seal -RH	NLA	.....	Use BEC15920.
8	BEC 15920	Glass frame seal -RH	NLA	.....	Use BEC18416.
8	BEC 18416	Glass frame seal -RH	NLA	.....	Use HMB5322AA.
8	HMB 5322AA	Glass frame seal -RH	1		
8	BBC 6893	Glass frame seal -LH	NLA	.....	Use BEC15921.
8	BEC 15921	Glass frame seal -LH	NLA	.....	Use BEC18417.
8	BEC 18417	Glass frame seal -LH	NLA	.....	Use HMB5323AA.
8	HMB 5323AA	Glass frame seal -LH	1		
9	BDC 5498	Waist finisher/seal-RH rear door	NLA	(1)	Use BEC5446.
9	BEC 5446	Waist finisher/seal-RH rear door	1	(2)	
9	BDC 5499	Waist finisher/seal-LH rear door	NLA	(1)	Use BEC5447.
9	BEC 5447	Waist finisher/seal-LH rear door	1	(2)	
	AGU 2505J	Spring clip	NLA	.....	Use AGU2544J.
	AGU 2544J	Spring clip	8		

CHANGE POINTS:
(1) To (V) 602499
(2) From (V) 602500

DOOR GLASS, FRAME AND SEAL-REAR

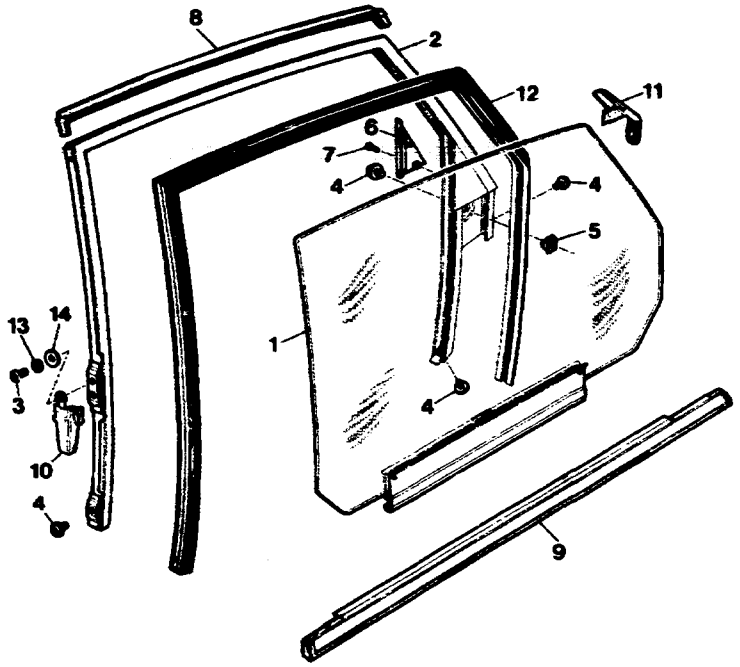


VS4758

Illus	Part Number	Description	Quantity	Change Point	Remarks
10	BCC 2902	Rubber finisher -glass frame to inner door panel-RH front	NLA	(1)	Use BEC20628.
10	BEC 20628	Rubber finisher -glass frame to inner door panel-RH front	NLA	(2)	Use BEC17610.
10	BEC 17610	Rubber finisher -glass frame to inner door panel-RH front	NLA		Use GMB2540AA.
10	GMB 2540AA	Rubber finisher -glass frame to inner door panel-RH front	NLA		Use GMB2540AB.
10	GMB 2540AB	Rubber finisher -glass frame to inner door panel-RH front	1		
10	BCC 2903	Rubber finisher -glass frame to inner door panel-LH front	NLA	(1)	Use BEC20629.
10	BEC 20629	Rubber finisher -glass frame to inner door panel-LH front	NLA	(2)	Use BEC17611.
10	BEC 17611	Rubber finisher -glass frame to inner door panel-LH front	NLA		Use GMB2541AA.
10	GMB 2541AA	Rubber finisher -glass frame to inner door panel-LH front	NLA		Use GMB2541AB.
10	GMB 2541AB	Rubber finisher -glass frame to inner door panel-LH front	1		
11	BCC 2904	Rubber finisher -glass frame to inner door panel-RH rear	NLA	(1)	Use BEC20630.
11	BEC 20630	Rubber finisher -glass frame to inner door panel-RH rear	NLA	(2)	Use BEC17612.
11	BEC 17612	Rubber finisher -glass frame to inner door panel-RH rear	NLA		Use GMB2542AA.
11	GMB 2542AA	Rubber finisher -glass frame to inner door panel-RH rear	NLA		Use GMB2542AB.
11	GMB 2542AB	Rubber finisher -glass frame to inner door panel-RH rear	1		
11	BCC 2905	Rubber finisher -glass frame to inner door panel-LH rear	NLA	(1)	Use BEC20631.
11	BEC 20631	Rubber finisher -glass frame to inner door panel-LH rear	NLA	(2)	Use BEC17613.
11	BEC 17613	Rubber finisher -glass frame to inner door panel-LH rear	NLA		Use GMB2543AA.
11	GMB 2543AA	Rubber finisher -glass frame to inner door panel-LH rear	NLA		Use GMB2543AB.
11	GMB 2543AB	Rubber finisher -glass frame to inner door panel-LH rear	1		
	BBC 3234	Rokut rivet	NLA		Use AGU2321.
	AGU 2321	Rokut rivet	NLA		Use BDC4858.
	BDC 4858	Rokut rivet -black nylon	6		
	DA 604025J	Self tapping screw	4		
12	BCC 9617	Silent run channel -RH/LH rear	NLA	(3)	Use BDC8696 qty 1 or BDC8697 qty 1.
12	BDC 8696	Silent run channel -RH rear	1	(4)	
12	BDC 8697	Silent run channel -LH rear	1	(4)	
13	BCC 6056	Plain washer	1		
14	BCC 4472	Nylon washer	1		

CHANGE POINTS:

(1) To (V) 659910
(2) From (V) 659911
(3) To (V) 583009
(4) From (V) 583010

DOOR GLASS REGULATOR

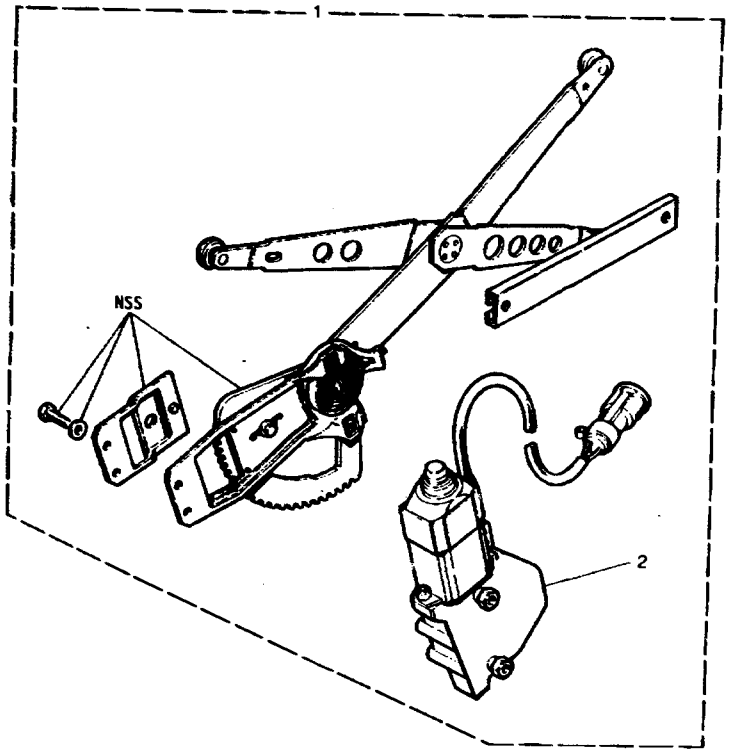

VS4456

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BDC	4528	Window regulator-assembly-RH front	1	(1)	
1	BDC	8050	Window regulator-assembly-RH front	NLA	(2)	Use BEC12668.
1	BEC	12668	Window regulator-assembly-RH front	1	(3)	
1	BDC	4529	Window regulator-assembly-LH front	1	(1)	
1	BDC	8051	Window regulator-assembly-LH front	NLA	(2)	Use BEC12669.
1	BEC	12669	Window regulator-assembly-LH front	1	(3)	
1	BDC	4530	Window regulator-assembly-RH rear	1	(1)	
1	BDC	8052	Window regulator-assembly-RH rear	NLA	(2)	Use BEC12670.
1	BEC	12670	Window regulator-assembly-RH rear	1	(3)	
1	BDC	4531	Window regulator-assembly-LH rear	1	(1)	
1	BDC	8053	Window regulator-assembly-LH rear	NLA	(2)	Use BEC12671.
1	BEC	12671	Window regulator-assembly-LH rear	1	(3)	
2	JLM	359	Regulator motor-RH front	1	(1)	
2	JLM	10550	Regulator motor-RH front	1	(2)	
2	JLM	11008	Regulator motor-RH front	1	(3)	
2	JLM	360	Regulator motor-LH front	1	(1)	
2	JLM	10551	Regulator motor-LH front	1	(2)	
2	JLM	11009	Regulator motor-LH front	1	(3)	
2	JLM	358	Regulator motor-RH rear	1	(1)	
2	JLM	10552	Regulator motor-RH rear	1	(2)	
2	JLM	11010	Regulator motor-RH rear	1	(3)	
2	JLM	357	Regulator motor-LH rear	1	(1)	
2	JLM	10553	Regulator motor-LH rear	1	(2)	
2	JLM	11011	Regulator motor-LH rear	1	(3)	
	JLM	2148	Solid mounting stud -motor to regulator	3		
	BD	48949 1	Screw-M6 x 9mm-regulator to door	4		
	BD	48949 3	Pan head torx screw-with M6-14 mm dia. washer	4		
	BD	541 48	Special washer	2		
	FN	106041 J	Flange nut-M6	4		


CHANGE POINTS:

(1) To (V) 629285

(2) From (V) 629286 To (V) 660169

(3) From (V) 660170

DOOR HANDLE

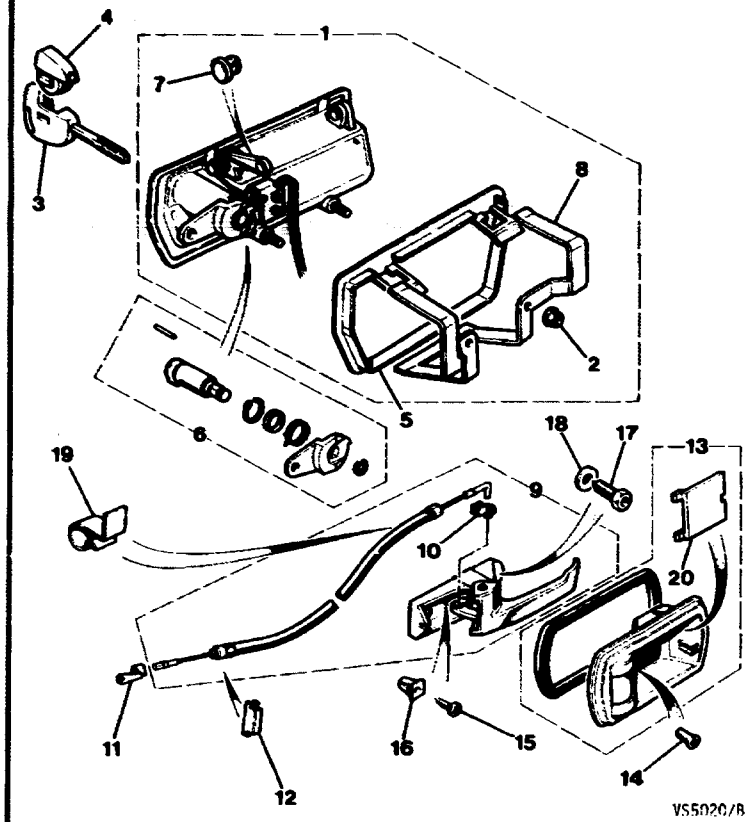


Illus	Part Number		Description	Quantity	Change Point	Remarks
	BEC	7708	Lockset-assembly-doors/steering/trunk/cubby box	1	(1)	
1	JLM	2043	Door handle-RH front-outer-less key and barrel	1	(1)	
1	JLM	2044	Door handle-LH front-outer-less key and barrel	1	(1)	
1	BEC	5590	Door handle-RH rear-outer	NLA	(1)	Use BEC7706.
1	BEC	5591	Door handle-LH rear-outer	NLA	(1)	Use BEC7706.
1	BEC	7706	Door handle-RH/LH rear-outer	2	(2)	
2	FN	104045J	Nut	NLA	(1)	Use FN105045J.
2	FN	105045J	Nut-M5	4		
	JLM	1949	Blank key -service	A/R	(1)	
	JLM	1950	Blank key -standard -spindle type	A/R	(1)	
3	JLM	1948	Key blank -illuminated -spindle type	A/R	(1)	
4	BCC	9959	Cartridge-battery and bulb	A/R	(1)	
5	JLM	2054	Gasket-RH-front handle to door	1	(3)	
5	JLM	2055	Gasket-LH-front handle to door	1	(3)	
5	JLM	2056	Gasket-RH/LH-rear handle to door	2	(3)	
5	BEC	8690	Gasket-RH-front handle to door	1	(2)	
5	BEC	8691	Gasket-LH-front handle to door	1	(2)	
5	BEC	8692	Gasket-RH/LH-rear handle to door	2	(2)	
6	JLM	10786	Door handle locking barrel repair kit -RH	1	(4)	Service Bulletin JD 06/90
6	JLM	10787	Door handle locking barrel repair kit -LH	1	(4)	Service Bulletin JD 06/90
6	JLM	10790	Door handle locking barrel repair kit -RH	1	(5)	Service Bulletin JD 06/90
6	JLM	10791	Door handle locking barrel repair kit -LH	1	(5)	Service Bulletin JD 06/90
7	BDC	7616	Z-bend bush	1		
8	BEC	9356	Fixing clamp -RH front-handle to door	1		
8	BEC	9357	Fixing clamp -LH front-handle to door	1		
8	BEC	9517	Fixing clamp -RH/LH rear-handle to door	2		

CHANGE POINTS:

(1) From (V) 594576
(2) From (V) 657921
(3) From (V) 594576 To (V) 657920
(4) To (D) end Oct 89
(5) From (D) Nov 89 on

DOOR HANDLE

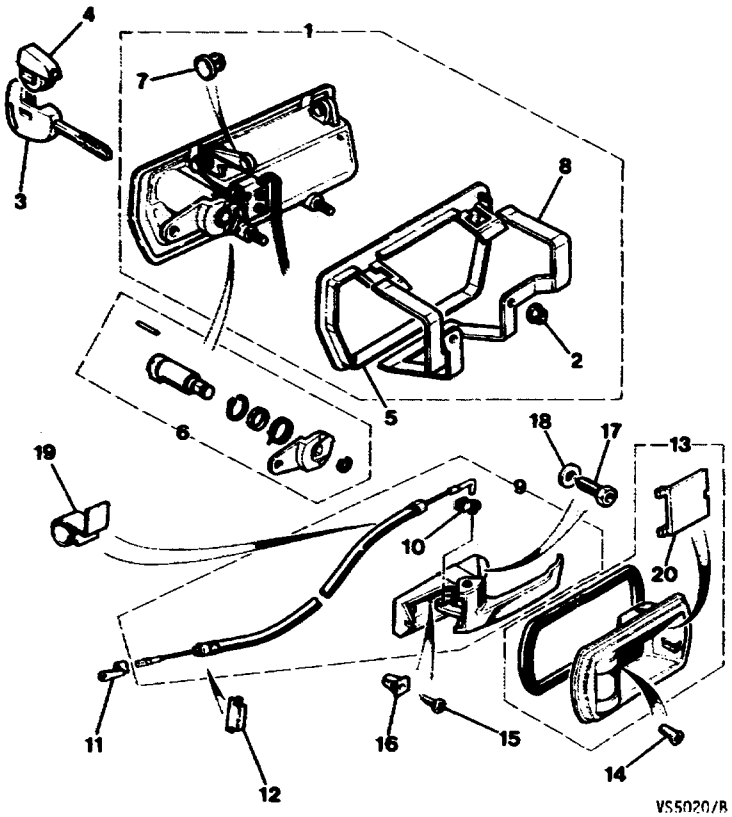


Illus	Part Number	Description	Quantity	Change Point	Remarks
9	BCC 7042	Door handle/remote control-assembly-RH front	NLA	(1)	Use BEC4974.
9	BEC 4974	Door handle/remote control-assembly-RH front	NLA	(2)	Use GMB1100AA.
9	GMB 1100AA	Door handle/remote control-assembly-RH front	1		
9	BCC 7043	Door handle/remote control-assembly-LH front	NLA	(1)	Use BEC4975.
9	BEC 4975	Door handle/remote control-assembly-LH front	NLA	(2)	Use GMB1101AA.
9	GMB 1101AA	Door handle/remote control-assembly-LH front	1		
9	BCC 7044	Door handle/remote control-assembly-RH rear	NLA	(1)	Use BEC4976.
9	BEC 4976	Door handle/remote control-assembly-RH rear	NLA	(2)	Use GMB2572AA.
9	GMB 2572AA	Door handle/remote control-assembly-RH rear	1		
9	BCC 7045	Door handle/remote control-assembly-LH rear	NLA	(1)	Use BEC4977.
9	BEC 4977	Door handle/remote control-assembly-LH rear	NLA	(2)	Use GMB2573AA.
9	GMB 2573AA	Door handle/remote control-assembly-LH rear	1		
10	AGU 1815	Linkage clip	NLA	(3)	Use AGU2679J.
10	AGU 2679J	Linkage clip	1		
11	BEC 1817	Clip	1	(3)	
12	BRC 3101	Edge clip	2	(3)	
13	BBC 8644	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	(4)	Use BEC15968.
13	BEC 15968	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	(5)	Use GNA1106AA.
13	BBC 8645	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	(4)	Use BEC15969.
13	BEC 15969	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	(5)	Use GNA1107AA.
20	BAC 6240	• Screw cover	NLA		Use GNA1108AA.
13	GNA 1106AA	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA		Use GNA1106AB.
13	GNA 1107AA	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA		Use GNA1107AB.
20	GNA 1108AA	• Screw cover	1		
13	GNA 1106AB	Remote control escutcheon-RH front/rear	2		
13	GNA 1107AB	Remote control escutcheon-LH front/rear	2		
	BAC 4789	Escutcheon gasket	NLA	(3)	Use GMB1152AA.
	GMB 1152AA	Escutcheon gasket-door-remote release	1		

CHANGE POINTS:

(1) From (V) 594576 To (V) 597612
(2) From (V) 597613
(3) From (V) 594576
(4) From (V) 594576 To (V) 659390
(5) From (V) 659391

DOOR HANDLE

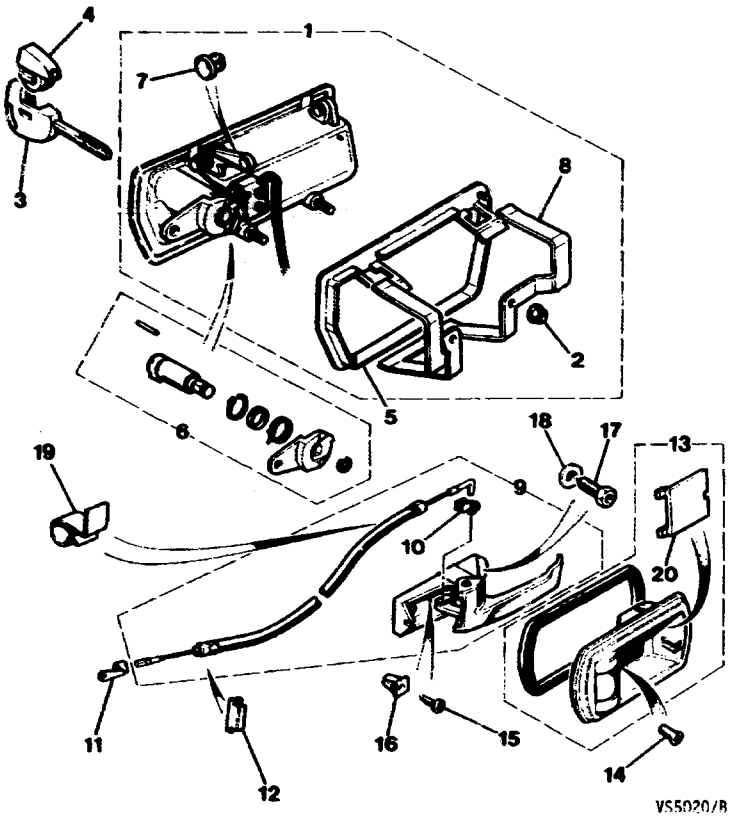

Illus	Part Number	Description	Quantity	Change Point	Remarks
14	SF 104101 J	Self tapping screw-M4	4	(1)	
15	AGU 1413 J	Self tapping screw-no.8 x 19mm	4	(1)	
16	BBC 3242	Lokut nut-RH/LH	4	(1)	
17	BBC 6830	Special bolt	NLA	(2)	Use BEC24115.
17	BEC 24115	Special bolt	4	(3)	
18	FW 104 T	Plain washer-0.25" i/d	NLA	(1)	Use WA106041J.
18	WA 106041 J	Plain washer-0.25" i/d	4		
19	BBC 3826	Spring clip-control cable to door	4	(1)	
	DBC 3958	Door handle microswitch	NLA	(1)	


CHANGE POINTS:

(1) From (V) 594576

(2) From (V) 594576 To (V) 663474

(3) From (V) 663475

DOOR HANDLE AND DOOR LOCK-FRONT

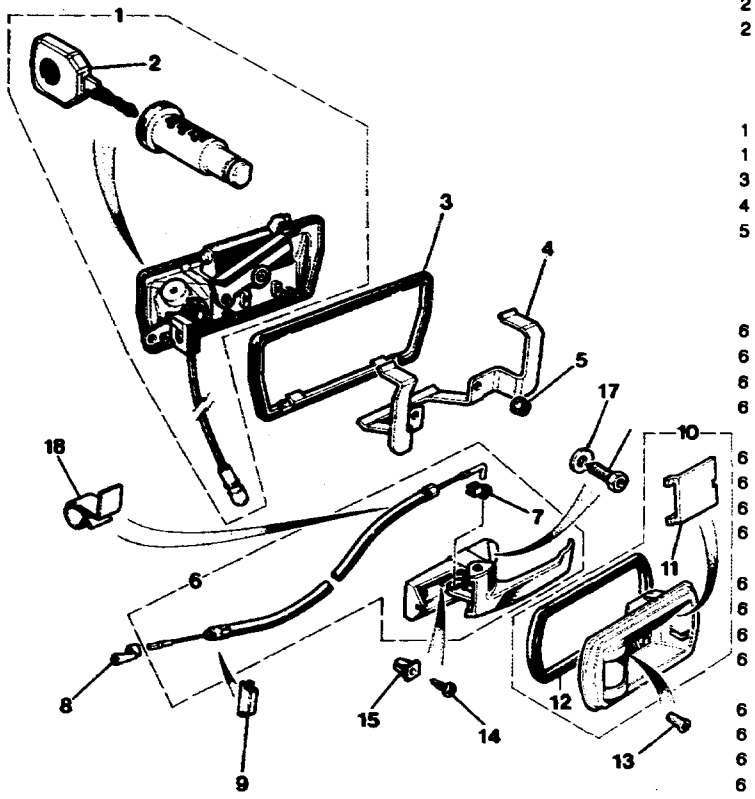

VS4474/C

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BEC 20244	Door handle-RH front-with key	1	(1)	Except heated
1	BEC 20245	Door handle-LH front-with key	1	(1)	Except heated
1	BEC 20246	Door handle-RH front-with key	1	(1)	Heated
1	BEC 20247	Door handle-LH front-with key	1	(1)	Heated
	JLM 1702	Lock barrel	A/R	(1)	
2	JLM 1149	Blank key -doors/steering-non illuminated	1	(1)	Except illuminated
2	JLM 1150	Blank key -doors/steering-illuminated	1	(1)	Illuminated
	JLM 476	Key blank -no.1 precut-blade type	1	(1)	
	JLM 476 2	Key blank -no.2 precut-blade type	1	(1)	
	JLM 476 3	Key blank -no.3 precut-blade type	1	(1)	
1	BEC 20248	Door handle-RH rear	1	(1)	
1	BEC 20249	Door handle-LH rear	1	(1)	
3	BBC 7491	Gasket	4	(1)	
4	BBC 1760	Fixing strap	NLA	(1)	
5	FN 105045 J	Nut-M5	8	(1)	
	JLM 1382	Door lockset-doors/steering	1	(1)	Except heated
	JLM 1383	Door lockset-doors/steering	1	(1)	Heated
6	BBC 9000	Door handle/remote control-assembly-RH front	NLA	(2)	Use BCC7042.
6	BCC 7042	Door handle/remote control-assembly-RH front	NLA	(3)	Use BEC4974.
6	BEC 4974	Door handle/remote control-assembly-RH front	NLA		Use GMB1100AA.
6	GMB 1100AA	Door handle/remote control-assembly-RH front	1		
6	BBC 9001	Door handle/remote control-assembly-LH front	NLA	(2)	Use BCC7043.
6	BCC 7043	Door handle/remote control-assembly-LH front	NLA	(3)	Use BEC4975.
6	BEC 4975	Door handle/remote control-assembly-LH front	NLA		Use GMB1101AA.
6	GMB 1101AA	Door handle/remote control-assembly-LH front	1		
6	BBC 9002	Door handle/remote control-assembly-RH rear	NLA	(2)	Use BCC7044.
6	BCC 7044	Door handle/remote control-assembly-RH rear	NLA	(3)	Use BEC4976.
6	BEC 4976	Door handle/remote control-assembly-RH rear	NLA		Use GMB2572AA.
6	GMB 2572AA	Door handle/remote control-assembly-RH rear	1		
6	BBC 9003	Door handle/remote control-assembly-LH rear	NLA	(2)	Use BCC7045.
6	BCC 7045	Door handle/remote control-assembly-LH rear	NLA	(3)	Use BEC4977.
6	BEC 4977	Door handle/remote control-assembly-LH rear	NLA		Use GMB2573AA.
6	GMB 2573AA	Door handle/remote control-assembly-LH rear	1		


CHANGE POINTS:

(1) To (V) 594575

(2) To (V) 524374

(3) From (V) 524375 To (V) 594575

DOOR HANDLE AND DOOR LOCK-FRONT

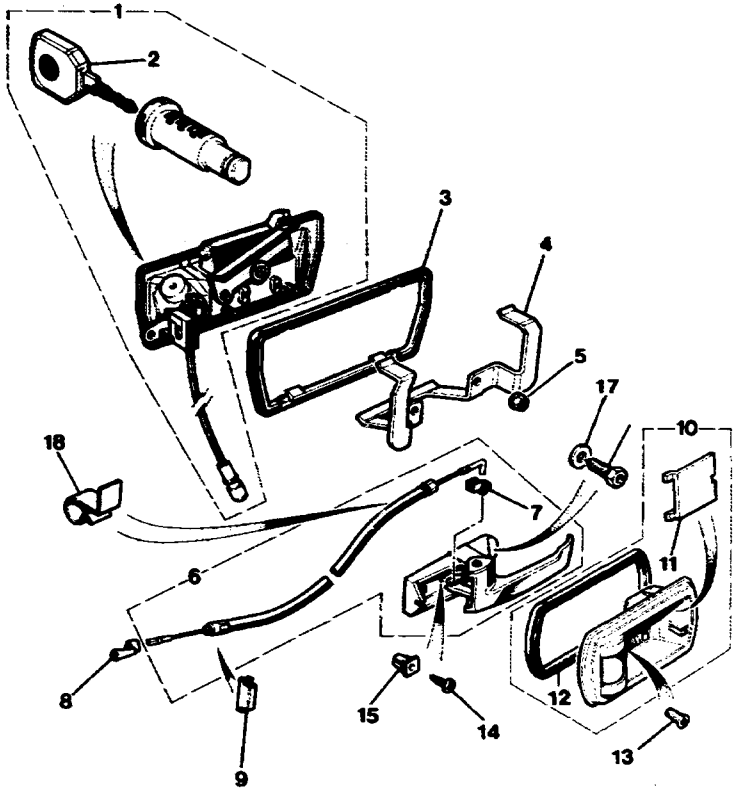

VS4474/C

Illus	Part Number	Description	Quantity	Change Point	Remarks
7	AGU 1815	Linkage clip	NLA	.....	Use AGU2679J.
7	AGU 2679J	Linkage clip	1		
8	BBC 1872	Linkage clip	NLA	.....	Use AGU1001.
	AGU 1001	Retaining clip-sill locking button to latch	1	(1)	
	BEC 1817	Clip	1	(2)	
9	BRC 3101	Edge clip	2		
10	BBC 8644	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	(3).....	Use BEC15968.
10	BEC 15968	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use GNA1106AA.
10	BBC 8645	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	(3).....	Use BEC15969.
10	BEC 15969	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use GNA1107AA.
11	BAC 6240	• Screw cover	NLA	.....	Use GNA1108AA.
10	GNA 1106AA	REMOTE CONTROL ESCUTCHEON-RH FRONT/REAR	NLA	.....	Use GNA1106AB.
10	GNA 1107AA	REMOTE CONTROL ESCUTCHEON-LH FRONT/REAR	NLA	.....	Use GNA1107AB.
11	GNA 1108AA	• Screw cover	1		
10	GNA 1106AB	Remote control escutcheon-RH front/rear	2		
10	GNA 1107AB	Remote control escutcheon-LH front/rear	2		
12	BAC 4789	Escutcheon gasket	NLA	(3).....	Use GMB1152AA.
12	GMB 1152AA	Escutcheon gasket-door-remote release	1		
13	SF 104101J	Self tapping screw-M4	1	(3)	
14	AGU 1413J	Self tapping screw-no.8 x 19mm	1	(3)	
15	BBC 3242	Lokut nut-RH/LH	1	(3)	
16	BBC 6830	Special bolt	NLA	(3).....	Use BEC24115.
16	BEC 24115	Special bolt	1		
17	WD 106041J	Washer	1	(3)	
18	BBC 3826	Spring clip-control cable to door	1	(3)	
	JLM 10772	Flap handle kit -RH	1	(3)	
	JLM 10773	Flap handle kit -LH	1	(3)	

CHANGE POINTS:


(1) To (V) 584304

(2) From (V) 584305 To (V) 594575

(3) To (V) 594575

DOOR LOCK HEATER AND MICROSWITCH

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	DBC 2592	Door lock heater	2	(1)	
2	DBC 2702	Door lock heater thermostat	2		
3	DBC 2150	Central locking microswitch-RH	2		
3	DBC 2151	Central locking microswitch-LH	2		
4	DBC 2148	Door handle microswitch-RH	2		
4	DBC 2149	Door handle microswitch-LH	2		
5	BD 39809	Door lock block-front	NLA		

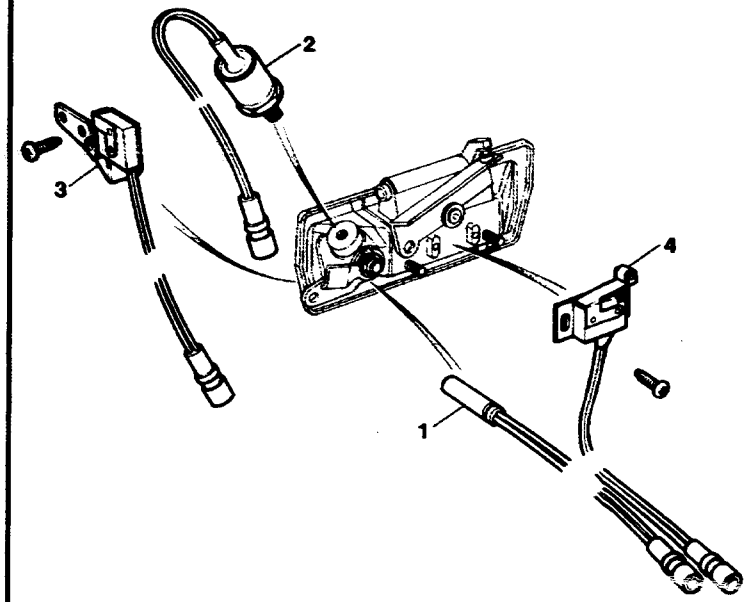

VS4829

CHANGE POINTS:
(1) To (V) 594575


MASTER INDEX

ENGINE ..... 1 E
ENGINE MANAGEMENT/EMISSION SYSTEMS ..... 1 I
AIR AND FUEL DELIVERY SYSTEMS ..... 1 L
ENGINE COOLING SYSTEM ..... 1 N
EXHAUST SYSTEM AND COMPONENTS ..... 2 C
TRANSMISSION AND DRIVELINE ..... 2 E
STEERING AND SUSPENSION ..... 2 I
BRAKING SYSTEM ..... 2 M
AIR CONDITIONING/HEATING/VENTILATION ..... 3 C
WIPER AND WASHER SYSTEMS ..... 3 E
ELECTRICAL DISTRIBUTION SYSTEM ..... 3 F
INFORMATION SYSTEMS AND CONTROLS ..... 3 H
BATTERY/STARTER MOTOR/ALTERNATOR ..... 3 I
IN CAR ENTERTAINMENT ..... 3 J
LIGHTING - EXTERIOR/INTERIOR ..... 3 K
LOCKING/SECURITY SYSTEMS/HORNS ..... 3 M
SEATING ..... 4 C
OCCUPANT RESTRAINTS ..... 4 F
INTERIOR TRIM AND LININGS ..... 4 G
EXTERIOR FITTINGS AND SUNROOF ..... 4 K
BODY CLOSURES AND SEALING ..... 4 N
BODY METAL PANELS AND SEALING ..... 5 C
ACCESSORIES/CONSUMABLES/INDEX ..... 5 E

GROUP INDEX

BONNET LATCHING MECHANISM AND ..... 4. N 02
DOOR GLASSES AND FRAMES ..... 4. N 05
DOOR HANDLES AND LOCKS ..... 4. N 13
DOOR HINGES ..... 4. O 06
DOOR SEALS ..... 4. O 05
TRUNK LATCHING MECHANISMS AND ..... 4. N 03
BONNET CATCH AND STRIKER ..... 4. N 02
DOOR APERTURE SEAL ..... 4. O 05
DOOR GLASS AND FRAME FITTINGS-FRONT 4. N 05
DOOR GLASS REGULATOR ..... 4. N 12
DOOR GLASS, FRAME AND SEAL-REAR ..... 4. N 08
DOOR HANDLE AND DOOR LOCK-FRONT ..... 4. N 16
DOOR HANDLE ..... 4. N 13
DOOR HINGE ..... 4. O 06
DOOR LATCH ASSEMBLY-FRONT/REAR ..... 4. O 02
DOOR LOCK HEATER AND MICROSWITCH ..... 4. N 18
TRUNK LID LOCK ASSEMBLY ..... 4. N 03

DOOR LATCH ASSEMBLY-FRONT/REAR

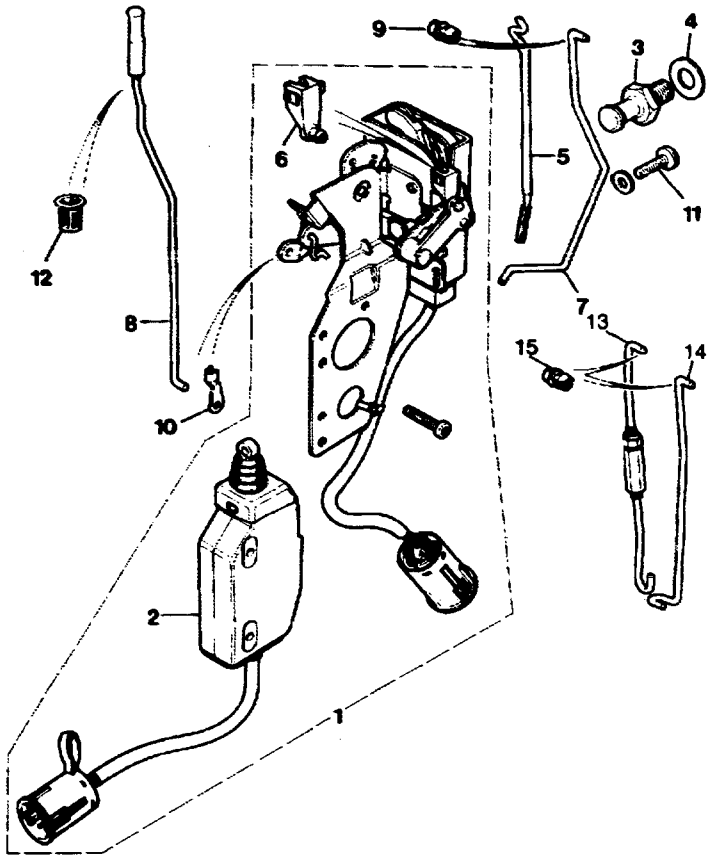


MX5018B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BDC	7012	Door latch-assembly-RH front	NLA	(1)	Use BEC1452.
1	BEC	1452	Door latch-assembly-RH front	1	(2)	
1	BEC	5298	Door latch-assembly-RH front	1	(3)	
1	BEC	8940	Door latch-assembly-RH front	1	(4)	
1	BDC	7013	Door latch-assembly-LH front	NLA	(1)	Use BEC1453.
1	BEC	1453	Door latch-assembly-LH front	1	(2)	
1	BEC	5299	Door latch-assembly-LH front	1	(3)	
1	BEC	8941	Door latch-assembly-LH front	1	(4)	
1	BDC	7014	Door latch-assembly-RH rear	NLA	(5)	Use BEC4536.
1	BEC	4536	Door latch-assembly-RH rear	1	(6)	Child proof lock
1	BCC	3446	Door latch-assembly-RH rear	NLA	(7)	Use BDC7016.
1	BDC	7016	Door latch-assembly-RH rear	NLA	(7)	Use BEC4536.
						2nd type;except child proof lock
1	BEC	5300	Door latch-assembly-RH rear	1	(3)	
1	BEC	4398	Door latch-assembly-RH rear	1	(4)	
1	BDC	7015	Door latch-assembly-LH rear	NLA	(5)	Use BEC4537.
1	BEC	4537	Door latch-assembly-LH rear	1	(6)	Child proof lock
1	BDC	7017	Door latch-assembly-LH rear	NLA	(7)	Use BEC4537.
						Except child proof lock
1	BEC	5301	Door latch-assembly-LH rear	1	(3)	
1	BEC	4399	Door latch-assembly-LH rear	1	(4)	
2	BBC	8624	Door lock actuator-RH front	1		
2	BBC	8625	Door lock actuator-LH front	1		
2	BCC	3442	Door lock actuator-RH rear	1	(8)	
2	BEC	4400	Door lock actuator-RH rear	1	(4)	
2	BCC	3443	Door lock actuator-LH rear	1	(8)	
2	BEC	4401	Door lock actuator-LH rear	1	(4)	

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286
(5) To (V) 587627
(6) From (V) 587628 To (V) 594575
(7) To (V) 594575
(8) To (V) 629285

DOOR LATCH ASSEMBLY-FRONT/REAR

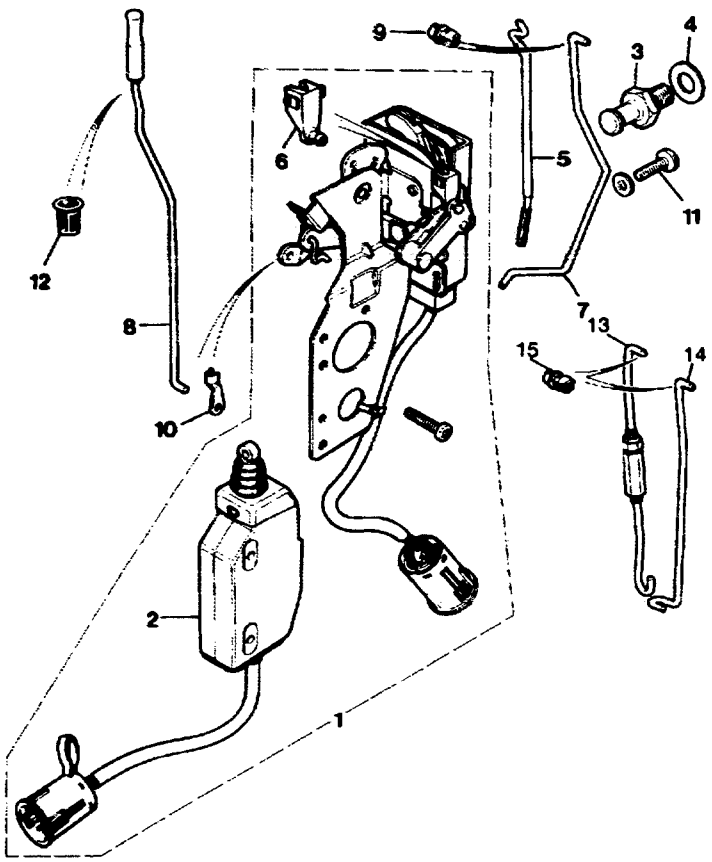


MX5018B

Illus	Part Number		Description	Quantity	Change Point	Remarks
3	BBC	9535	Striker pin -front/rear	4		
4	BBC	2987	Washer	NLA		Use BCC7783.
						Alternatives
4	BCC	7783	Washer	A/R		Alternatives
	BBC	9743	Blanking plug	2	(1)	Except child proof lock
5	BEC	6270	Door link -handle to latch-RH front	1	(2)	
5	BEC	6271	Door link -handle to latch-LH front	1	(2)	
5	BEC	4970	Door link -handle to latch-RH rear	1	(2)	
5	BEC	4971	Door link -handle to latch-LH rear	1	(2)	
6	BEC	2603	Linkage clip-handle link rod to latch	4	(2)	
7	BDC	4884	Door link -locking barrel to latch-RH front	1	(2)	
7	BDC	4885	Door link -locking barrel to latch-LH front	NLA	(2)	Use GMD1111AA.
8	BBC	7768	Door link -sill locking button to latch -RH front	NLA	(3)	Use BEC19126.
8	BBC	7769	Door link -sill locking button to latch -LH front	NLA	(3)	Use BEC19127.
8	BEC	19126	Door link -sill locking button to latch -RH front	1	(4)	
8	BEC	19127	Door link -sill locking button to latch -LH front	1	(4)	
8	BBC	7776	Door link -sill locking button to latch -RH rear	NLA	(3)	Use BEC19128.
8	BBC	7777	Door link -sill locking button to latch -LH rear	NLA	(3)	Use BEC19129.
8	BEC	19128	Door link -sill locking button to latch -RH rear	1	(4)	
8	BEC	19129	Door link -sill locking button to latch -LH rear	1	(4)	
9	ADU	3476	Clip-lock barrel to link	1	(2)	
10	BBC	1872	Linkage clip	NLA	(1)	Use AGU1001.
	AGU	1001	Retaining clip-sill locking button to latch	1	(2)	
	BRC	3101	Edge clip	4	(1)	
11	BD	489493	Pan head torx screw-with M6-14 mm dia. washer	12		
12	BBC	9033	Lock button surround	4	(1)	2 piece fixing
	BCC	7780	Nylon bush	4	(1)	2 piece fixing
12	BCC	9790	Lock button surround	NLA		Use BEC25189.
						1 piece fixing
12	BEC	25189	Lock button surround	4		1 piece fixing
13	BCC	3705	Door link -handle to lock-front	2	(1)	
13	BCC	3709	Door link -handle to lock-rear	2	(1)	
14	BAC	5322	Door link -lock to barrel -RH front	1	(1)	
14	BAC	5323	Door link -lock to barrel -LH front	1	(1)	
15	ADU	3476	Clip-lock barrel to link	4	(1)	

CHANGE POINTS.
(1) To (V) 594575
(2) From (V) 594576
(3) To (V) 661362
(4) From (V) 661363

DOOR LATCH ASSEMBLY-FRONT/REAR

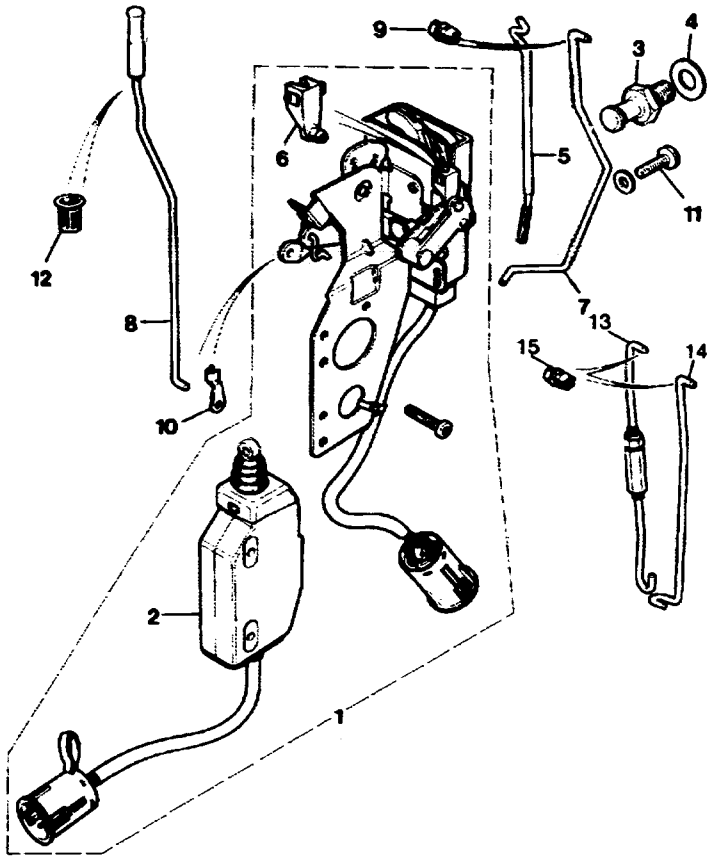

MX5018B

Illus	Part Number	Description	Quantity	Change Point	Remarks
	BCC 5754	Aperture blanking cover-RH front	NLA	(1)	Use BEC15026.
	BEC 15026	Aperture blanking cover-RH front	1	(2)	
	BCC 5755	Aperture blanking cover-LH front	NLA	(1)	Use BEC15027.
	BEC 15027	Aperture blanking cover-LH front	1	(2)	
	BCC 5758	Aperture blanking cover-RH rear	NLA	(1)	Use BEC15028.
	BEC 15028	Aperture blanking cover-RH rear	1	(2)	
	BCC 5759	Aperture blanking cover-LH rear	NLA	(1)	Use BEC15029.
	BEC 15029	Aperture blanking cover-LH rear	1	(2)	
	BCC 5752	Socket stowage box-RH front door	NLA		Use BEC11294.
	BEC 11294	Socket stowage box-RH front door	1		
	BCC 5753	Socket stowage box-LH front door	NLA		Use BEC11295.
	BEC 11295	Socket stowage box-LH front door	1		
	BCC 5756	Socket stowage box-RH rear door	NLA	(3)	Use BEC5296.
	BEC 5296	Socket stowage box-RH rear door	1	(4)	
	BCC 5757	Socket stowage box-LH rear door	NLA	(3)	Use BEC5297.
	BEC 5297	Socket stowage box-LH rear door	NLA	(4)	Use BEC11297.
	BEC 11297	Socket stowage box-LH rear door	1		
	DBC 11588	Door ajar microswitch-RH front	1	(5)	
	DBC 11589	Door ajar microswitch-LH front	1	(5)	
	DBC 11610	Door ajar microswitch-RH rear	1	(5)	
	DBC 11611	Door ajar microswitch-LH rear	1	(5)	


CHANGE POINTS:

(1) To (V) 659390
(2) From (V) 659391
(3) To (V) 600257
(4) From (V) 600258
(5) From (V) 564576

BODY CLOSURES AND SEALING

DOOR SEALS

DOOR APERTURE SEAL

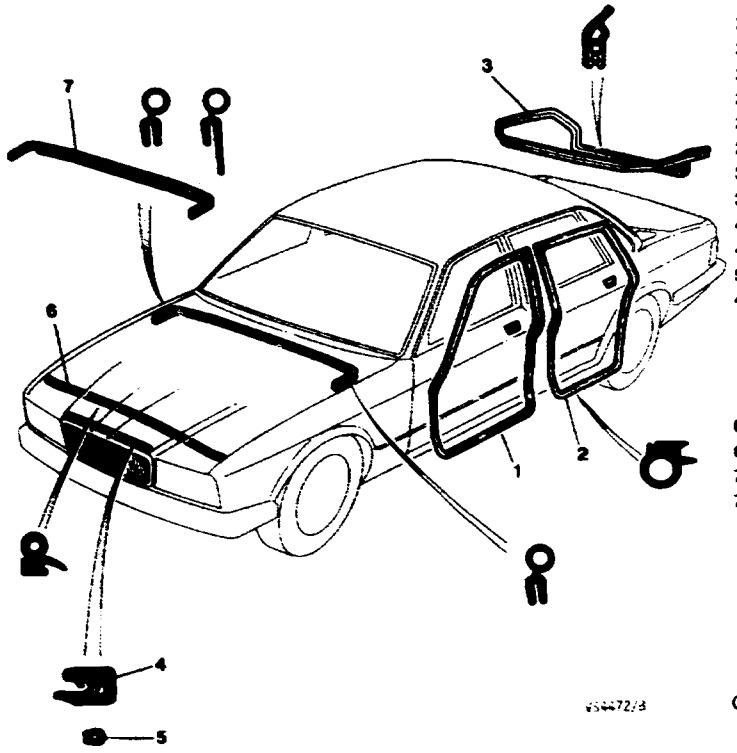


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BDC 3140	Door aperture seal-RH front	NLA	(1)	Use BDC7734.
1	BDC 7734	Door aperture seal-RH front	NLA		Use BEC1744.
1	BEC 1744	Door aperture seal-RH front	NLA	(2)	Use BEC18400.
1	BEC 18400	Door aperture seal-RH front	NLA		Use BEC21300.
1	BDC 3141	Door aperture seal-LH front	NLA	(1)	Use BDC7735.
1	BDC 7735	Door aperture seal-LH front	NLA		Use BEC1745.
1	BEC 1745	Door aperture seal-LH front	NLA	(2)	Use BEC18401.
1	BEC 18401	Door aperture seal-LH front	NLA		Use BEC21300.
1	BEC 21300	Door aperture seal-RH/LH front	2	(3)	
2	BDC 6414	Door aperture seal-RH rear	NLA	(1)	Use BEC1746.
2	BEC 1746	Door aperture seal-RH rear	NLA	(2)	Use BEC21304.
2	BEC 21304	Door aperture seal-RH rear	1	(3)	
2	BDC 6415	Door aperture seal-LH rear	NLA	(1)	Use BEC1747.
2	BEC 1747	Door aperture seal-LH rear	NLA	(2)	Use BEC21305.
2	BEC 21305	Door aperture seal-LH rear	1	(3)	
3	BEC 4609	Trunk lid seal	NLA	(4)	Use BEC10747.
3	BEC 10747	Trunk lid seal	1	(5)	
4	BBC 4259	Bonnet flange finisher	NLA		Use BDC3150.
4	BDC 3150	Bonnet flange finisher	NLA	(6)	Use BDC7676.
5	BDC 7676	Bonnet flange finisher	NLA	(7)	Use BEC4445.
4	BEC 4445	Bonnet flange finisher	1	(8)	
	BBC 9955	Retainer	NLA		Use BEC16313.
	BEC 16313	Retainer	1		
	DA 608044	Screw	4		
	BD 48954	Lokut nut	4		
6	BDC 3015	Bonnet seal-front	NLA	(9)	Use BEC9008.
6	BEC 9008	Bonnet seal-front	1	(10)	
7	BCC 5991	Bonnet seal-rear	NLA		Use BEC9009.
7	BEC 9009	Bonnet seal-rear	1		

CHANGE POINTS:

(1) To (V) 614596
(2) From (V) 614597 To (V) 658103
(3) From (V) 658104
(4) To (V) 627987
(5) From (V) 627988
(6) To (V) 553114
(7) To (V) 595019
(8) From (V) 595020
(9) To (V) 640379
(10) From (V) 640380


DOOR HINGE

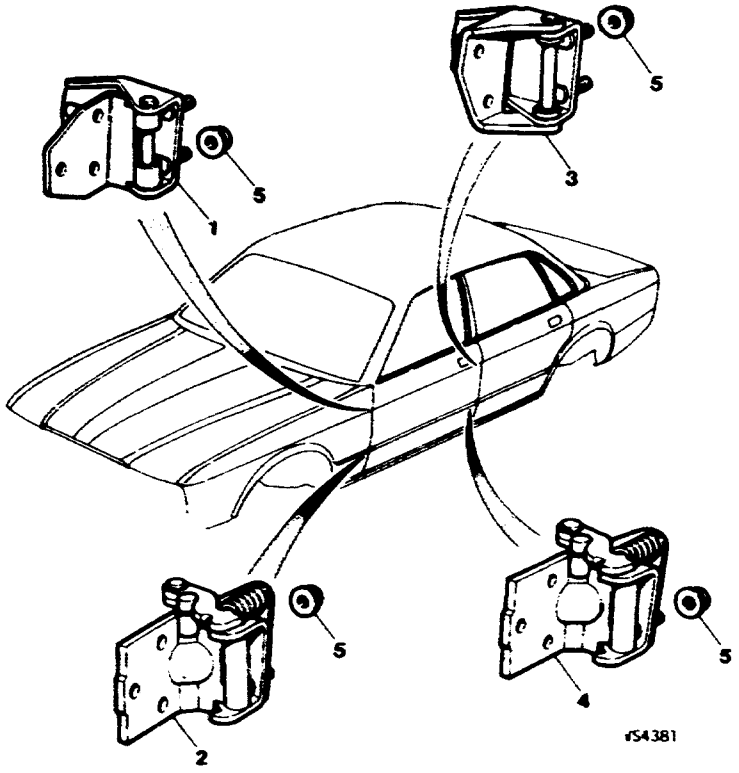


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAP	230	Door hinge-RH front-upper	NLA	(1)	Use CAP1328.
1	CAP	231	Door hinge-LH front-upper	NLA	(1)	Use CAP1329.
2	CAP	232	Door hinge-RH front/rear-lower	NLA	(1)	Use CAP1330.
2	CAP	233	Door hinge-LH front/rear-lower	NLA	(1)	Use CAP1331.
3	CAP	250	Door hinge-RH rear-upper	NLA	(1)	Use CAP1332.
3	CAP	251	Door hinge-LH rear-upper	NLA	(1)	Use CAP1333.
4	CAP	232	Door hinge-RH front/rear-lower	NLA	(1)	Use CAP1330.
4	CAP	233	Door hinge-LH front/rear-lower	NLA	(1)	Use CAP1331.
1	CAP	1328	Door hinge-RH front-upper	NLA	(2)	Use CAP5204.
1	CAP	5204	Door hinge-RH front-upper	1		
1	CAP	1329	Door hinge-LH front-upper	NLA	(2)	Use CAP5205.
1	CAP	5205	Door hinge-LH front-upper	1		
2	CAP	1330	Door hinge-RH front/rear-lower	NLA	(2)	Use CAP5224.
2	CAP	5224	Door hinge-RH front/rear-lower	1		
2	CAP	1331	Door hinge-LH front/rear-lower	NLA	(2)	Use CAP5225.
2	CAP	5225	Door hinge-LH front/rear-lower	1		
3	CAP	1332	Door hinge-RH rear-upper	1	(2)	
3	CAP	1333	Door hinge-LH rear-upper	1	(2)	
4	CAP	1330	Door hinge-RH front/rear-lower	NLA	(2)	Use CAP5224.
4	CAP	5224	Door hinge-RH front/rear-lower	1		
4	CAP	1331	Door hinge-LH front/rear-lower	NLA	(2)	Use CAP5225.
4	CAP	5225	Door hinge-LH front/rear-lower	1		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

BODYSHELL

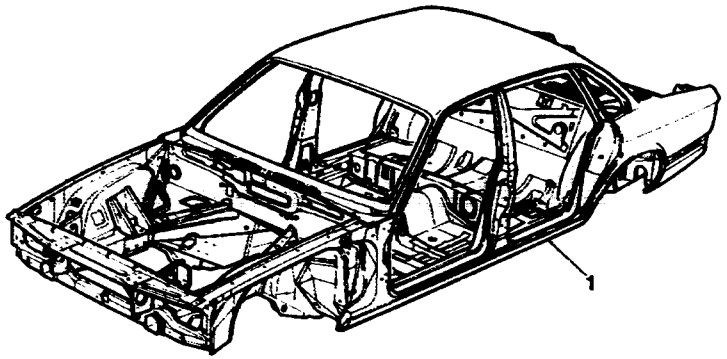

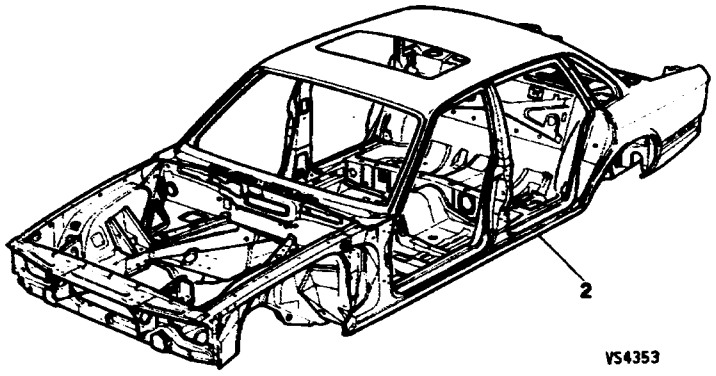

VS4353

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAP	561	Bodyshell -fixed roof	NLA	(1)	
1	CAP	3004	Bodyshell -fixed roof	NLA	(2)	Use CAP 5153 and refer to PTI 150.
1	CAP	4004	Bodyshell -fixed roof	NLA	(3)	Use CAP5153.
1	CAP	5153	Bodyshell -fixed roof	NLA	(4)	
2	CAP	740	Bodyshell -with sunroof aperture	NLA	(1)	See Bulletin PTI 150
2	CAP	3005	Bodyshell -with sunroof aperture	NLA	(2)	Use CAP 5154 and refer to PTI 150.
2	CAP	4005	Bodyshell -with sunroof aperture	NLA	(3)	Use CAP5154. See Bulletin PTI 150
2	CAP	5154	Bodyshell -with sunroof aperture	NLA	(4)	See Bulletin PTI 150
	BAC	4308	Metal sealing plug -16mm diameter	10		
	BAC	4303	Metal sealing plug -20mm diameter	17		
	BAC	4319	Metal sealing plug -25mm diameter	48		
	BBC	4358	Metal sealing plug -30mm diameter	17		
	BBC	4361	Metal sealing plug -40mm diameter	6		
	BAC	4307	Metal sealing plug -50mm diameter	9		

CHANGE POINTS:

(1) To (V) 556850
(2) From (V) 556851 To (V) 594575
(3) From (V) 594576 To (V) 629285
(4) From (V) 629286


BODYSHELL SEALING PLUGS AND GROMMETS

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	BBC 25502	Plug-16.7mm diameter hole	NLA		Use HMD3351AA.
	HMD 3351AA	Blanking patch -50mm diameter	3		
	BBC 25503	Plug-25.4mm diameter hole	NLA		Use HMD3351CA.
	HMD 3351CA	Blanking patch -50mm square	12		
	BBC 25505	D-post plug -19.1mm diameter hole	10		
	BBC 25507	Bonnet plug -50.8mm diameter hole	2		
	BBC 25509	Plug	NLA		Use HMD3351AA.
	HMD 3351AA	Blanking patch -50mm diameter	1		
	BBC 2551	Plug-2.8mm x 27.8mm slot	36		
	BEC 14733	Plug-32.8mm x 27.8mm slot	NLA		Use HMD3351AA.
	HMD 3351AA	Blanking patch -50mm diameter	36		
	BD 25919	Blanking plug-6.35mm	NLA		Use HMD3351CA.
	HMD 3351CA	Blanking patch -50mm square	4		
	BD 37521	Blanking plug-31.7mm diameter	2		
	BDC 9200	Plug-20mm diameter-fender reinforcement			
	BD 155888	Sealing plug	1		
	C 23035	Bonnet release cable hole grommet	1		3.6 Litre (XJ40)
	C 23035	Bonnet release cable hole grommet	1		4.0 Litre
	CBC 1327	Bonnet release cable hole grommet	NLA		Use HMD2583AA.
					2.9 Litre
	CBC 1327	Bonnet release cable hole grommet	NLA		Use HMD2583AA.
					3.2 Litre
	HMD 2583AA	Grommet	1		
	BEC 1879	Panel plug-rear fender	2	(1)	
	BEC 13857	Panel plug-rear fender	2	(2)	


CHANGE POINTS:
(1) To (V) 653441
(2) From (V) 653442

RADIATOR MOUNTING PANEL

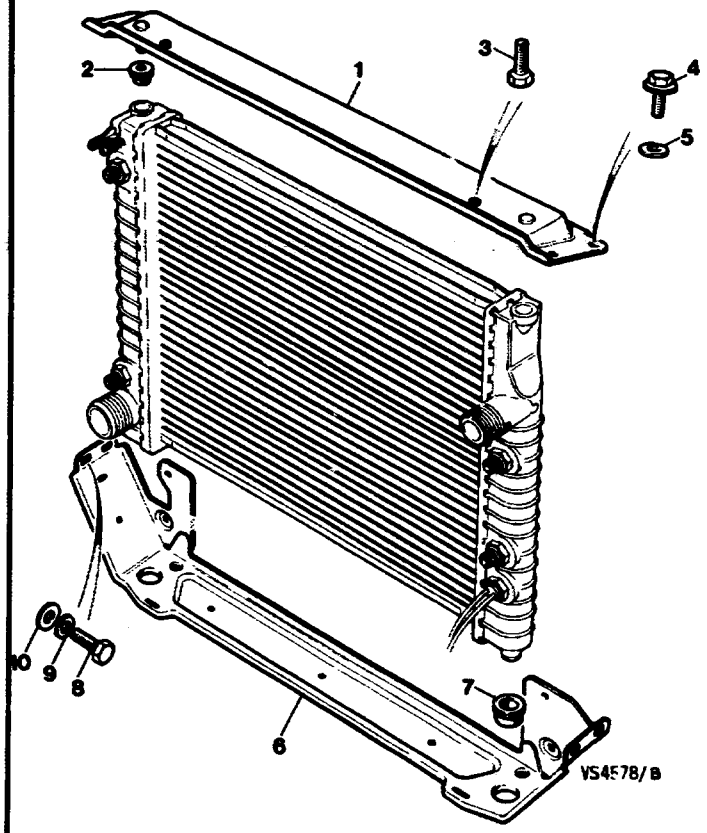

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CBC	4465	Radiator panel-top	1		
2	CBC	1576	Mounting rubber-upper	2		
3	SH	108105J	Screw	2		
4	BH	108051J	Bolt	4	.....	Alternatives
	GL	106301	Hexagon head paint clearing screw	1	.....	
5	WJ	108001J	Plain washer-M8	4		
6	CAC	9699	Mounting bracket-assembly	NLA	.....	Use CCC2670.
6	CCC	2670	Mounting bracket-assembly	1		
	CBC	8663	Radiator mounting bracket strap	1		
7	CBC	1789	Mounting rubber-lower	2		
8	GL	108201J	Setscrew-M8 x 20mm	2		
8	SH	108161J	Setscrew-M8 x 16mm	4		
9	WL	108001J	Spring washer-M8	6		
10	FW	105EJ	Plain washer	6		
	CBC	4466	Distance tube-top	4		
	CBC	1448	Grommet-lower	4		

VALANCE AND CRUSHTUBE-FRONT

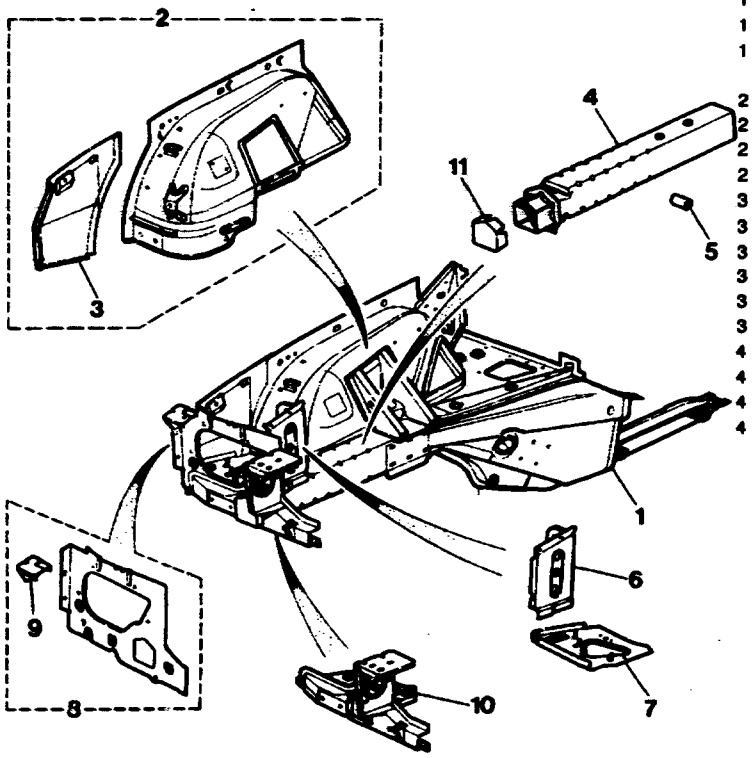


VS4355

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAP 528	Valance panel and crushtube-assembly-RH front	1	(1)	
1	CAP 529	Valance panel and crushtube-assembly-LH front	NLA	(1)	
1	CAP 3024	Valance panel and crushtube-assembly-RH front	NLA	(2)	Use CAP4012. See Bulletin PTI 150
1	CAP 3025	Valance panel and crushtube-assembly-LH front	NLA	(2)	Use CAP4013. See Bulletin PTI 150
1	CAP 4012	Valance panel and crushtube-assembly-RH front	NLA	(3)	Use CAP5142.
1	CAP 4013	Valance panel and crushtube-assembly-LH front	NLA	(3)	Use CAP5143.
1	CAP 5142	Valance panel and crushtube-assembly-RH front	1	(4)	
1	CAP 5143	Valance panel and crushtube-assembly-LH front	1	(4)	
	CAP 1292	Rear longitudinal	2	(5)	
2	CAP 668	Valance panel-RH front	NLA	(2)	See Bulletin PTI 150
2	CAP 669	Valance panel-LH front	NLA	(2)	See Bulletin PTI 150
2	CAP 4040	Valance panel-RH front	1	(6)	
2	CAP 4041	Valance panel-LH front	1	(6)	
3	CAP 680	Valance panel-RH front	1	(2)	
3	CAP 4038	Valance panel-RH front	NLA	(6)	Use CAP6342.
3	CAP 6342	Valance panel-RH front	1	(6)	
3	CAP 681	Valance panel-LH front	1	(2)	
3	CAP 4039	Valance panel-LH front	NLA	(6)	Use CAP6343.
3	CAP 6343	Valance panel-LH front	1	(6)	
4	CAP 662	Crushtube-RH	NLA	(2)	Use CAP4092.
4	CAP 4092	Crushtube-RH	1	(6)	
4	CAP 663	Crushtube-LH	NLA	(2)	Use CAP4093.
4	CAP 4093	Crushtube-LH	1	(6)	
	CAP 847	Air box mounting bracket	NLA	(2)	Use CAP4077.
	CAP 4077	Air box mounting bracket	1	(6)	

CHANGE POINTS:

(1) To (V) 556850
(2) To (V) 594575
(3) To (V) 629285
(4) From (V) 629286
(5) From (V) 556851
(6) From (V) 594576

VALANCE AND CRUSHTUBE-FRONT

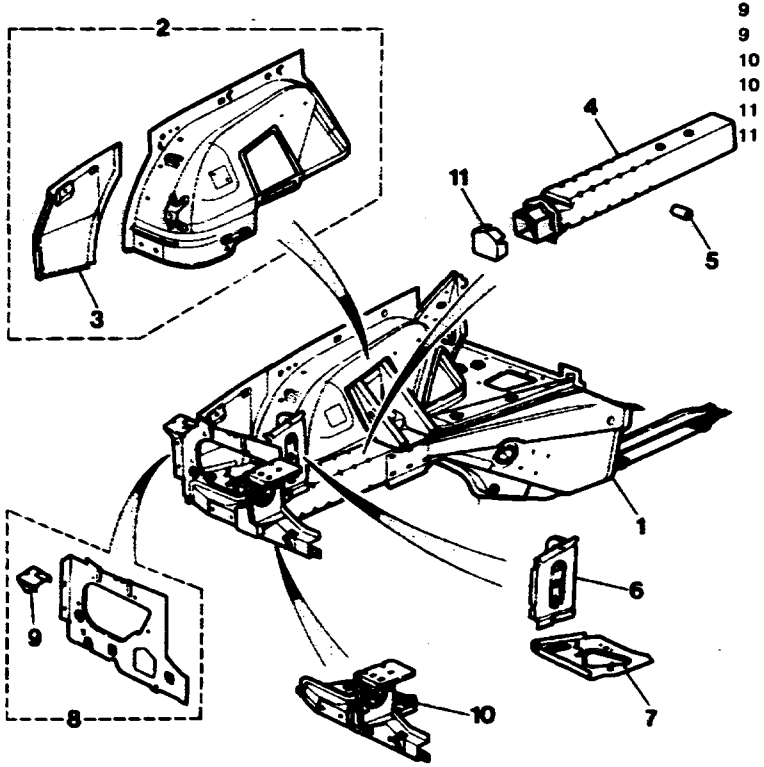


VS4355

Illus	Part Number		Description	Quantity	Change Point	Remarks
5	CAP	323	Tube	2		
6	CAP	674	Radiator mounting panel-RH	1		
6	CAP	675	Radiator mounting panel-LH	1		
7	CAP	802	Reinforcement-RH	1		
7	CAP	803	Reinforcement-LH	1		
8	CAP	678	Mounting panel -RH	1		
8	CAP	679	Mounting panel -LH	1		
9	CAP	676	Mounting bracket-RH	1		
9	CAP	677	Mounting bracket-LH	1		
10	CAP	672	Crushtube mounting-RH	1		
10	CAP	673	Crushtube mounting-LH	1		
11	BBC	1380	Crush tube closing plate	NLA		Use BEC1446.
11	BEC	1446	Crush tube closing plate	1		
	CAP	446	Floor jacking bracket	NLA	(1)	Use CAP6271.
	CAP	6271	Floor jacking bracket -front	2	(2)	
	CAC	9397	Blanking plug	4		

CHANGE POINTS:
(1) To (V) 629285
(2) From (V) 629286

VALANCE AND INNER SIDE PANEL

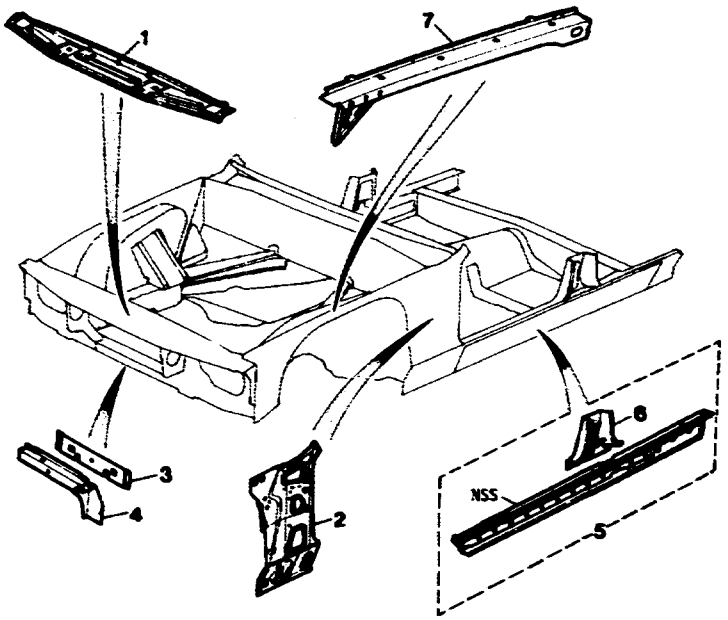


VS4361

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAP	861	Bonnet hinge platform panel	1		
2	CAP	698	Facia side panel-assembly-RH	NLA	(1)	Use CAP4056.
2	CAP	4056	Facia side panel-assembly-RH	1	(2)	
2	CAP	699	Facia side panel-assembly-LH	NLA	(1)	Use CAP4057.
2	CAP	4057	Facia side panel-assembly-LH	1	(2)	
3	CAP	131	Closing panel	1		
4	CAP	792	Crossmember	1		
5	CAP	530	Sill panel-assembly-RH inner	NLA	(1)	Use CAP4060.
5	CAP	4060	Sill panel-assembly-RH inner	NLA	(2)	Use CAP6176.
5	CAP	6176	Sill panel-assembly-RH inner	1		
5	CAP	531	Sill panel-assembly-LH inner	NLA	(1)	Use CAP4061.
5	CAP	4061	Sill panel-assembly-LH inner	NLA	(2)	Use CAP6177.
5	CAP	6177	Sill panel-assembly-LH inner	1		
	BAC	4304	Sill sealing plug	A/R		
6	CAP	66	B/C-post inner panel-RH lower	1		
6	CAP	67	B/C-post inner panel-LH lower	1		
7	CAP	716	Valance reinforcement-RH	NLA	(1)	Use CAP4066.
7	CAP	4066	Valance reinforcement-RH	1	(2)	
7	CAP	717	Valance reinforcement-LH	NLA	(1)	Use CAP4067.
7	CAP	4067	Valance reinforcement-LH	1	(2)	


CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576

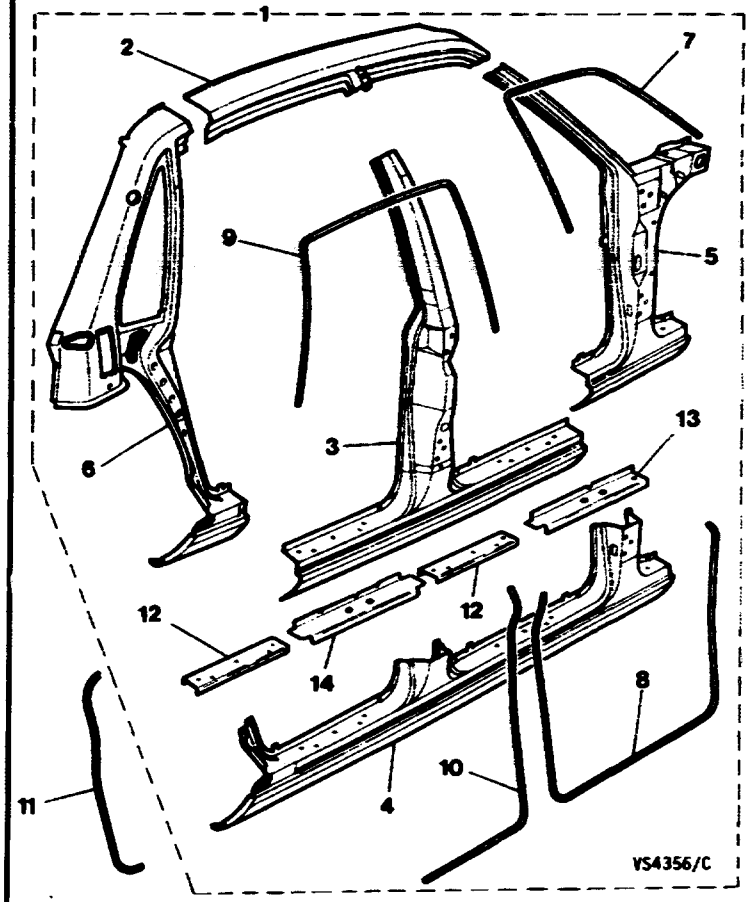

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	1392	Bodyside-RH	1		
1	JLM	1393	Bodyside-LH	1		
2	JLM	1398	Cantrail-RH	1		
2	JLM	1399	Cantrail-LH	1		
3	JLM	1755	B/C-post and sill panel-RH	1	.....	Alternatives
3	CAP	871	B/C-post and sill panel-LH	NLA	.....	Use JLM1756.
3	JLM	1756	B/C-post and sill panel-LH	1	.....	Alternatives
3	JLM	1400	B/C-post and sill panel-RH	1	.....	Alternatives
3	JLM	1401	B/C-post and sill panel-LH	1	.....	Alternatives
	CAP	894	Reinforcement-RH B/C-post	NLA	.....	Use JLM1400.
	CAP	895	Reinforcement-LH B/C-post	NLA	.....	Use JLM1401.
4	JLM	1605	Sill panel-RH	NLA	.....	Use JLM11348.
4	JLM	11348	Sill panel-RH	1		
4	JLM	1606	Sill panel-LH	NLA	.....	Use JLM11349.
4	JLM	11349	Sill panel-LH	1		
5	JLM	1394	A-post panel-RH	NLA	.....	Use JLM1753.
5	JLM	1753	A-post panel-RH	1		
5	JLM	1395	A-post panel-LH	NLA	.....	Use JLM1754.
5	JLM	1754	A-post panel-LH	1		
6	JLM	1396	D-post panel-RH	NLA	.....	Use JLM1757.
6	JLM	1757	D-post panel-RH	1		
6	JLM	1397	D-post panel-LH	NLA	.....	Use JLM1758.
6	JLM	1758	D-post panel-LH	NLA		

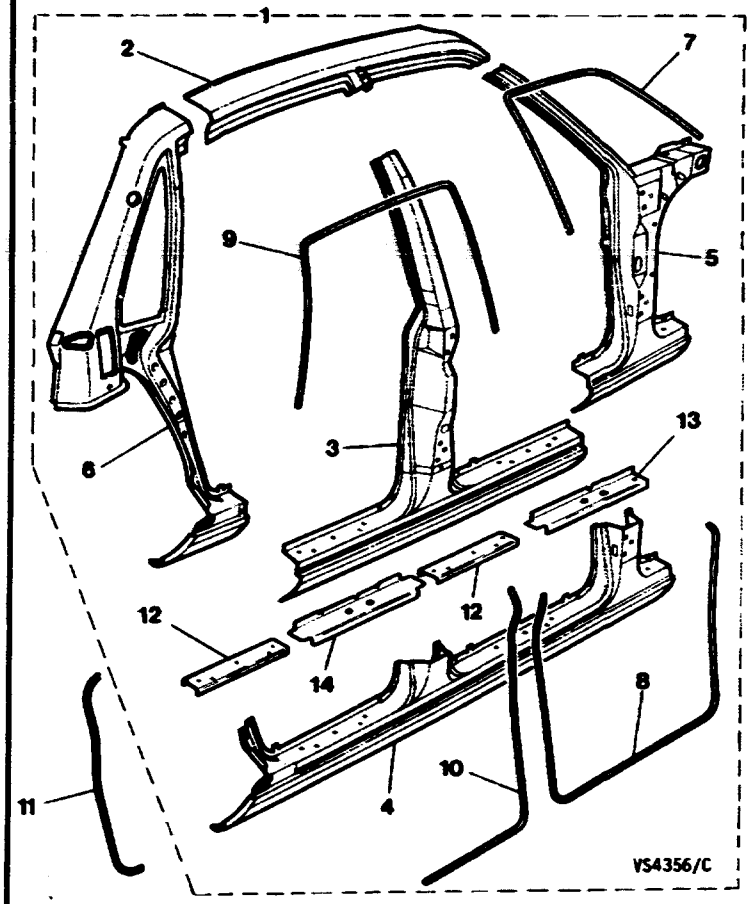


Illus	Part Number		Description	Quantity	Change Point	Remarks
7	CAP	312	C-channel -RH front-upper	1		
7	CAP	313	C-channel -LH front-upper	1		
8	CAP	310	C-channel -RH front-lower	NLA		Use CAP6468.
8	CAP	311	C-channel -LH front-lower	NLA		Use CAP6469.
8	CAP	6469	C-channel -LH front-lower	1		
9	CAP	320	C-channel -RH rear-upper	1		
9	CAP	321	C-channel -LH rear-upper	1		
10	CAP	318	C-channel -RH rear-lower	1		
10	CAP	319	C-channel -LH rear-lower	NLA		Use CAP6463.
10	CAP	6463	C-channel -LH rear-lower	1		
11	CAP	316	C-channel -RH rear	1		
11	CAP	317	C-channel -LH rear	1		
12	CAP	573	Reinforcement plate	4		
13	CAP	696	A-post reinforcement-RH	1		
13	CAP	697	A-post reinforcement-LH	1		
14	CAP	365	B/C-post reinforcement	2		

BODY METAL PANELS AND SEALING

FIXED BODY PANELS

ROOF ASSEMBLY AND WINDSHIELD

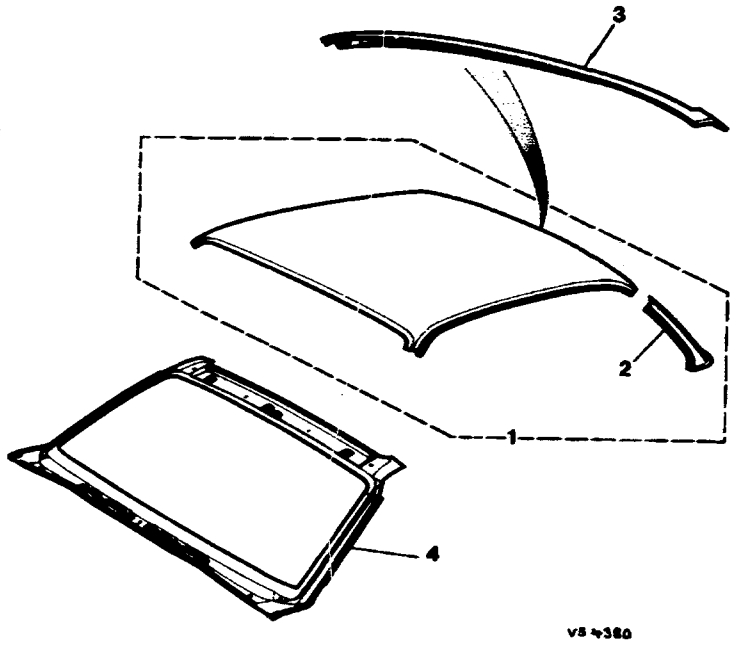


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAP 583	Roof panel-assembly-fixed roof	NLA	(1)	Use CAP1312.
1	CAP 1312	Roof panel-assembly-fixed roof	1	(2)	
1	CAP 722	Roof panel-assembly-with sunroof aperture	NLA	(1)	Use CAP1315.
1	CAP 1315	Roof panel-assembly-with sunroof aperture	1	(2)	
2	CAP 17	Roof quarter panel -LH	1		
2	CAP 16	Roof quarter panel -RH	1		
3	CAP 1150	Header panel-rear	1		
4	CAP 850	Windscreen panel	NLA		Use CAP1308.
4	CAP 1308	Windscreen panel	NLA		Use CAP6354.
4	CAP 6354	Windscreen panel	NLA		Use FNA1114BB.
4	FNA 1114BB	Windscreen panel	NLA		Use FNA1114BC.
4	FNA 1114BC	Windscreen panel	1		

CHANGE POINTS:

(1) To (V) 594575

(2) From (V) 594576


CANTRAIL CLOSING PANEL

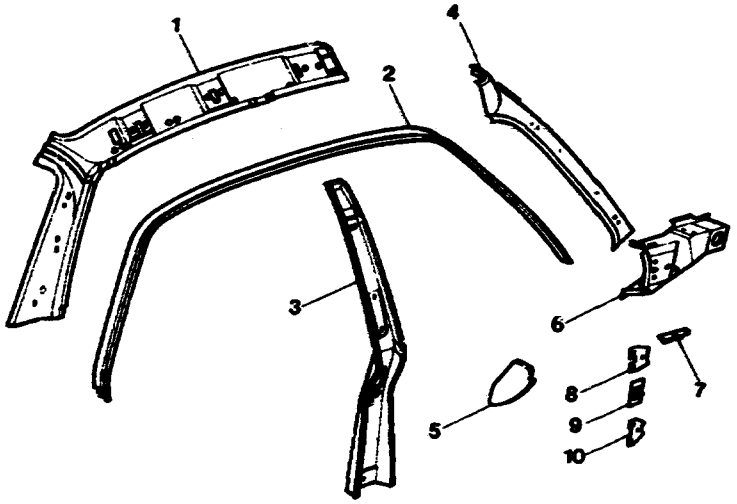

VS4367

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAP 594	Cantrail closing panel-RH	1		
1	CAP 595	Cantrail closing panel-LH	NLA	.....	Use CAP6441.
1	CAP 6441	Cantrail closing panel-LH	NLA	.....	Use CAP6459.
1	CAP 6459	Cantrail closing panel-LH	1		
2	CAP 422	Drip moulding-RH	1		
2	CAP 423	Drip moulding-LH	1		
3	CAP 222	B/C-post inner panel-RH	1		
3	CAP 223	B/C-post inner panel-LH	1		
4	CAP 1324	A-post closing panel-RH upper	NLA	.....	Use CAP6086.
4	CAP 6086	A-post closing panel-RH upper	1		
4	CAP 1325	A-post closing panel-LH upper	NLA	.....	Use CAP6087.
4	CAP 6087	A-post closing panel-LH upper	1		
5	CAP 340	Sill closing panel-RH	1		
5	CAP 341	Sill closing panel-LH	1		
6	CAP 690	Reinforcement plate-RH	1		
6	CAP 691	Reinforcement plate-LH	1		
7	CAP 430	A-post angle attachment	2		
8	CAP 371	Tapping plate	2		
9	CAP 831	Plate	2		
10	CAP 373	Tapping plate-lower hinge	NLA	.....	Use CAP5192.
10	CAP 5192	Tapping plate-lower hinge	NLA	.....	Use FJA2579AA.
10	FJA 2579AA	Tapping plate-A-post-RH/LH lower	2		

DECKING PANEL-REAR

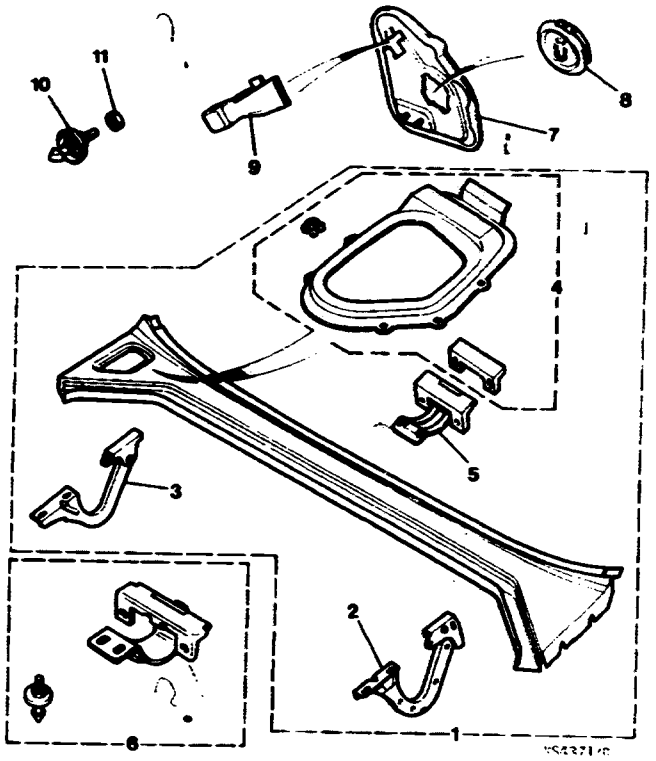


Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CAP 582	Decking panel	1		
2	CAP 450	Trunk lid hinge-RH	1		
3	CAP 451	Trunk lid hinge-LH	1		
4	CAP 883	Fuel filler reinforcement panel	1		
5	BDC 6860	Fuel filler lid hinge	1	(1)	
5	BEC 8102	Fuel filler lid hinge	1	(2)	
6	JLM 1486	Hinge and plunger kit	NLA		
7	CAP 723	Fuel filler lid	1	(1)	
7	CAP 5121	Fuel filler lid	1	(2)	
8	BEC 8101	Filler cap retaining magnet	NLA	(2)	Use HJA3101AA.
8	HJA 3101AA	Filler cap retaining magnet	1		
9	BEC 8100	Striker	NLA	(3)	Use BEC13316.
9	BEC 13316	Striker	1	(4)	
	FN 105041J	Nut-M5	NLA		Use FN105045J.
	FN 105045J	Nut-M5	2		
10	CBC 7704	Locking pin-with flats	1		
11	JLM 1425	Locking nut	1		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 635935
(4) From (V) 635936

FUME BAFFLE AND VENT BOX-TRUNK

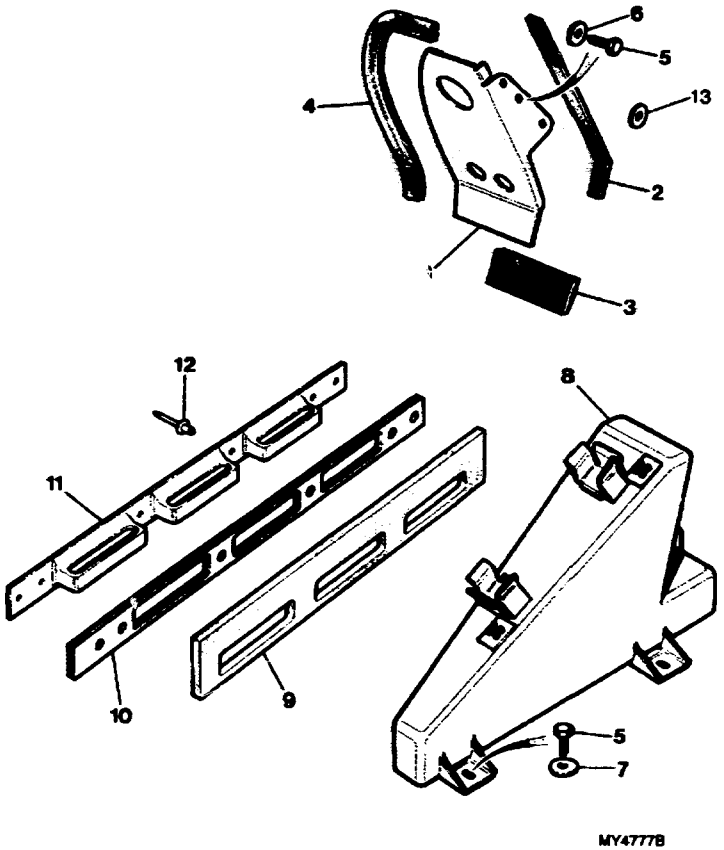

MY47778

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	BBC	9904	Trunk fume baffle panel -RH	NLA	(1)	Use BDC7886.
1	BDC	7886	Trunk fume baffle panel -RH	NLA	(2)	Use BDC7262.
1	BDC	7262	Trunk fume baffle panel -RH	NLA	(3)	Use BEC15462.
1	BEC	15462	Trunk fume baffle panel -RH	NLA		Use BEC21826.
	BEC	21826	Fume baffle panel -sub assembly-RH rear	1		
1	BBC	9905	Trunk fume baffle panel -LH	NLA	(1)	Use BDC7887.
						Except telephone
1	BDC	7887	Trunk fume baffle panel -LH	NLA	(2)	Use BDC7263.
						Except telephone
1	BDC	7263	Trunk fume baffle panel -LH	1	(3)	Except telephone
1	BCC	7491	Trunk fume baffle panel -LH	NLA	(1)	Use BDC7895.
						Telephone
1	BDC	7895	Trunk fume baffle panel -LH	NLA	(2)	Use BDC7265.
						Telephone
1	BDC	7265	Trunk fume baffle panel -LH	1	(3)	Telephone
2	BD	36787 11	Fume baffle sealing strip -203mm	NLA		Use BBC48615.
2	BBC	48615	Fume baffle sealing strip -235mm	NLA		Use BBC48611.
3	BD	36787 12	Fume baffle sealing strip -30mm	NLA		Use BBC48614.
3	BBC	48614	Fume baffle sealing strip -40mm	NLA		Use BBC48611.
	BBC	48611	Sealing strip-1250mm	A/R		
4	BBC	9908	Edge seal -340mm	2		
5	SH	106161 J	Setscrew-imperial fixing			
6	WJ	106001 J	Plain washer-M6	2		
13	WA	106041 J	Plain washer-0.2[illegible]/d	4		Baffle to body
	WF	106001 J	Shakeproof washer-M6	1		Baffle to body
5	SH	106161 J	Setscrew-imperial fixing	1		Vent hose fixing
	GL	106161 J	Hexagon head setscrew-M6	3		Vent hose fixing
7	WJ	600041 J	Plain washer-25mm	3		


CHANGE POINTS:


(1) To (V) 524374

(2) From (V) 524375 To (V) 594575

(3) From (V) 594576

FUME BAFFLE AND VENT BOX-TRUNK

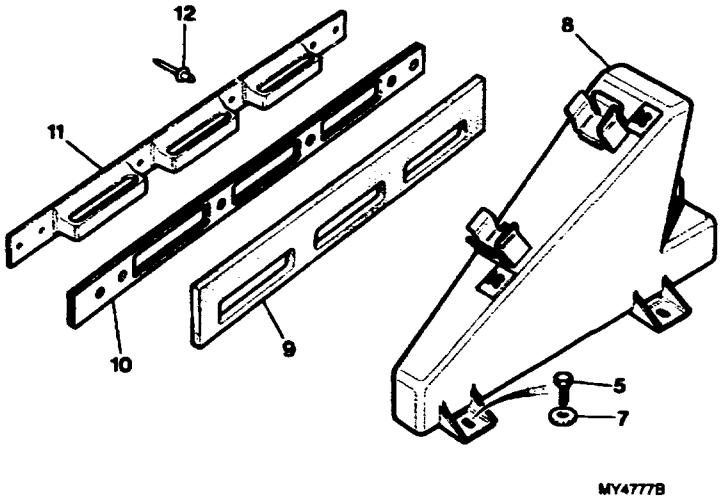

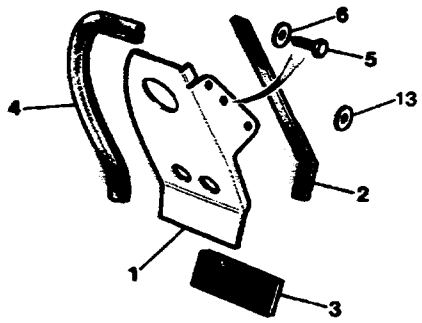

MY4777B

Illus	Part Number	Description	Quantity	Change Point	Remarks
8	BEC 1796	Vent box -assembly-RH	NLA	(1)	Use BDC9274.
8	BEC 1797	Vent box -assembly-LH	NLA	(1)	Use BDC9277.
8	BDC 9274	Vent box -assembly-RH	NLA	(2)	Use BEC8330. RHD
8	BDC 9277	Vent box -assembly-LH	NLA	(2)	Use BEC8333. RHD
8	BDC 9276	Vent box -assembly-RH	NLA	(2)	Use BEC8332. LHD
8	BDC 9275	Vent box -assembly-LH	NLA	(2)	Use BEC8331. LHD
8	BEC 8330	Vent box -assembly-RH	1	(3)	RHD
8	BEC 8333	Vent box -assembly-LH	1	(3)	RHD
8	BEC 8332	Vent box -assembly-RH	1	(3)	LHD
8	BEC 8331	Vent box -assembly-LH	NLA	(3)	LHD
9	BCC 5978	Foam pad	2		
10	BDC 6161	Gasket	2	(1)	
10	BEC 8464	Gasket	2	(4)	
11	BDC 8505	Vent box outlet	NLA	(1)	Use BEC8463.
11	BEC 8463	Vent box outlet	2	(4)	
12	BD 350061	Rivet	12		
	BDC 6633	Air extractor-assembly-rear parcel shelf	NLA	(5)	Use BDC7986.
	BDC 7986	Air extractor-assembly-rear parcel shelf	NLA	(6)	Use BEC10317.
	BEC 10317	Air extractor-assembly-rear parcel shelf	2		
	AB 608031J	Self tapping screw	8		


CHANGE POINTS:

(1) To (V) 594575
(2) From (V) 594576 To (V) 623330
(3) From (V) 623331
(4) From (V) 594576
(5) To (V) 524374
(6) From (V) 524375

BODY METAL PANELS AND SEALING

FIXED BODY PANELS

UNDERFRAME-REAR

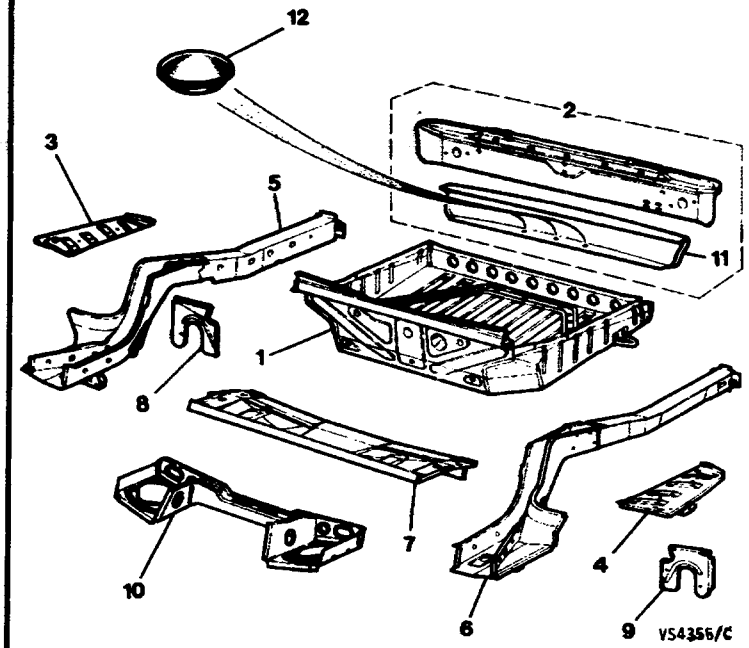


Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAP	500	Trunk floor panel	NLA		Use BBC4361 qty 1 with BAC4319 qty 1 with BAC4307 qty 1 with CAP6097 qty 1.
1	CAP	6097	Trunk floor panel-assembly	1		
	BAC	4319	Metal sealing plug -25mm diameter	1		
	BBC	4361	Metal sealing plug -40mm diameter	1		
	BAC	4307	Metal sealing plug -50mm diameter	1		
2	CAP	504	Bumper channel	1		
3	CAP	536	Luggage floor extension-RH	1		
4	CAP	537	Luggage floor extension-LH	1		
5	CAP	502	Longitudinal-RH	NLA	(1)	Use CAP1204.
5	CAP	1204	Longitudinal-RH	1	(2)	
6	CAP	503	Longitudinal-LH	NLA	(1)	Use CAP1205.
6	CAP	1205	Longitudinal-LH	NLA	(2)	Use CAP6279.
6	CAP	6279	Longitudinal-LH	1		
7	CAP	817	Petrol tank floor panel	1		
8	CAP	134	Wheelarch-RH rear-lower	1		
9	CAP	135	Wheelarch-LH rear-lower	1		
10	CAP	648	Tank floor crossmember	1		
	CAP	462	Jacking bracket-RH rear	1		
	CAP	463	Jacking bracket-LH rear	1		
	CAC	9397	Blanking plug	4		
	ADU	3208 J	Sealing cap-89mm diameter	2		
11	CAP	20	Lower panel	1		
12	BBC	2550 2	Plug-16.7mm diameter hole	NLA		Use HMD3351AA.
	HMD	3351AA	Blanking patch -50mm diameter	3		

CHANGE POINTS:

(1) To (V) 556850


(2) From (V) 556851

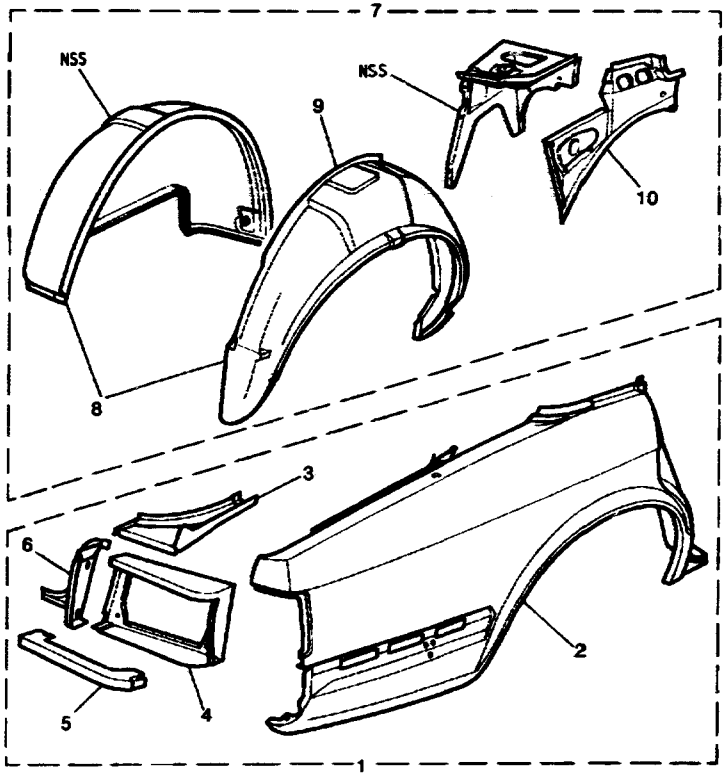

MY4357B

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAP	516	FENDER PANEL -RH REAR	1		
2	CAP	14	• Tonneau panel-RH rear	1		
1	CAP	517	FENDER PANEL -LH REAR	1		
2	CAP	15	• Tonneau panel-LH rear	1		
3	CAP	196	Drain channel -RH	1		
3	CAP	197	Drain channel -LH	1		
4	CAP	200	Lamp panel-RH	1		
4	CAP	201	Lamp panel-LH	1		
5	CAP	194	Lamp panel-RH lower	1		
5	CAP	195	Lamp panel-LH lower	1		
6	CAP	198	Drain channel extension -RH	1		
6	CAP	199	Drain channel extension -LH	1		
7	CAP	1288	Wheelarch/quarter panel-assembly-RH rear-inner	1		
7	CAP	1289	Wheelarch/quarter panel-assembly-LH rear-inner	1		
8	CAP	588	Wheelarch-RH rear-inner/outer	1		
8	CAP	589	Wheelarch-LH rear-inner/outer	1		
9	CAP	120	Wheelarch panel-RH rear-outer	1		
9	CAP	121	Wheelarch panel-LH rear-outer	1		
10	CAP	214	Quarter panel-RH rear-inner	1		
10	CAP	215	Quarter panel-LH rear-inner	1		


WHEELARCH LINER AND BAFFLE-FRONT

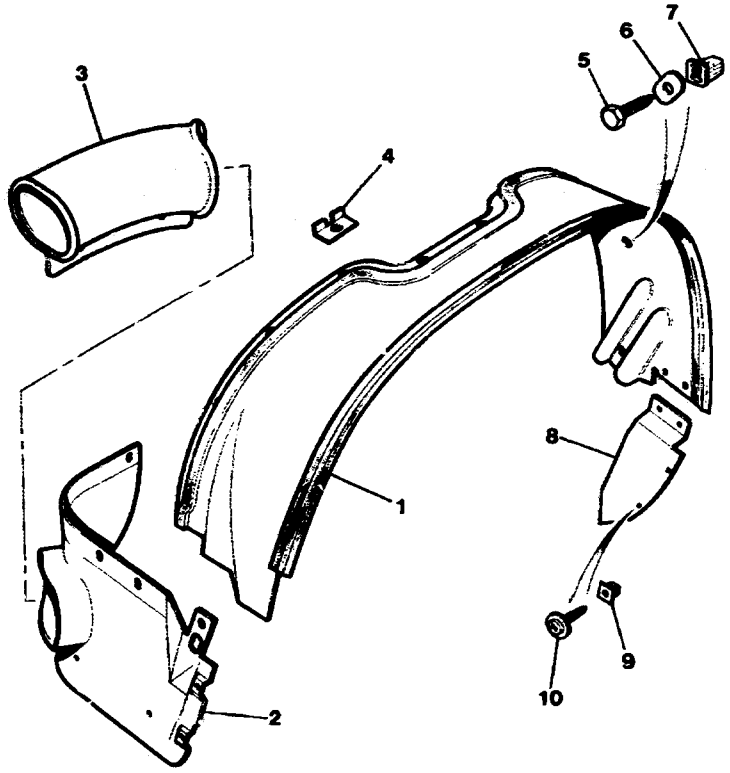

VS4759/A

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	BDC 7702	Wheelarch liner-RH	NLA	.....	Use BEC25996.
1	BDC 7703	Wheelarch liner-LH	NLA	.....	Use BEC25997.
1	BEC 25996	Wheelarch liner-RH	1		
1	BEC 25997	Wheelarch liner-LH	1		
2	BDC 7046	Wheelarch baffle-RH	NLA	.....	Use BEC11048.
2	BDC 7047	Wheelarch baffle-LH	NLA	.....	Use BEC11049.
2	BEC 11048	Wheelarch baffle-RH	1		
2	BEC 11049	Wheelarch baffle-LH	1		
3	BBC 4938	Brake cooling duct-RH	1		
3	BBC 4939	Brake cooling duct-LH	1		
4	BCC 2446	Wheelarch location plate	NLA		
5	AZ 614065 J	Self tapping screw	24		
6	BD 542 12	Oval washer	24		
7	BD 48970	Captive nut	24		
8	BBC 4540	Wheelarch extension -RH front	1		
8	BBC 4541	Wheelarch extension -LH front	1		
9	CZH 619 J	Plastic nut-bracket and cantrail	8		
10	JZH 100005	Sems screw-self tapping	4		
	JZH 100006	Self tapping screw	4		
	BBC 4861 1	Sealing strip-1250mm	1		
	AGU 2436 J	Plastic push on nut	2		

BONNET, WING, DOOR AND TRUNK LID PANEL

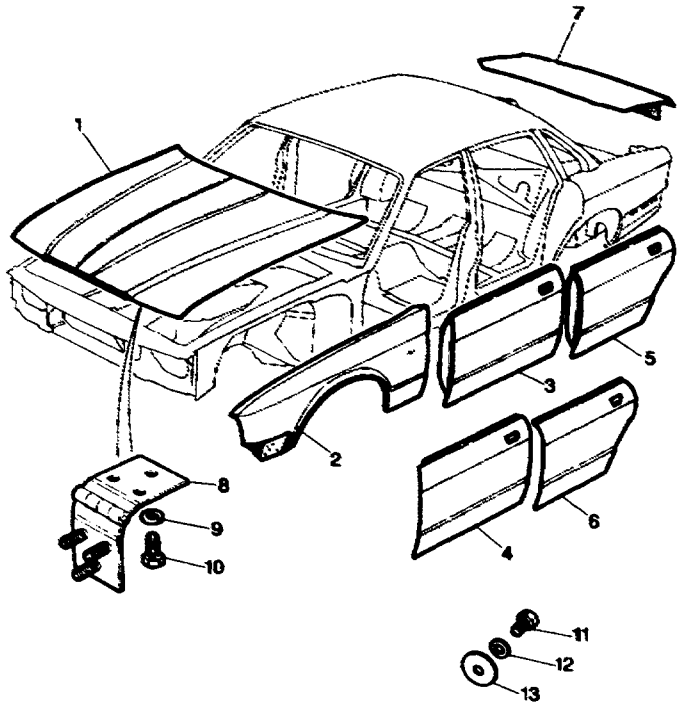


MY7101

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	CAP	566	Bonnet panel-assembly-less hinges	NLA		Use JLM1766.
1	JLM	1766	Bonnet panel-assembly-less hinges	1		
	CAP	378	Bonnet hinge shim	A/R		
2	CAP	520	Wing panel-RH front	1	(1)	
2	CAP	5122	Wing panel-RH front	1	(2)	
2	CAP	521	Wing panel-LH front	1	(1)	
2	CAP	5123	Wing panel-LH front	1	(2)	
3	JLM	2180	Door panel-RH front	1	(3)	
4	JLM	234	Door skin panel-RH front	1		
3	JLM	2181	Door panel-LH front	1		
4	JLM	235	Door skin panel-LH front	1		
5	JLM	2182	Door panel-RH rear	1		
6	JLM	236	Door skin panel-RH rear	1		
5	JLM	2183	Door panel-LH rear	1		
6	JLM	237	Door skin panel-LH rear	1		
3	JLM	2184	Door panel-assembly-RH front	1	(4)	
4	JLM	2022	Door skin panel-RH front	NLA		Use JLM11026.
4	JLM	11026	Door skin panel-RH front	1		
3	JLM	2185	Door panel-assembly-LH front	1		
4	JLM	2023	Door skin panel-LH front	NLA		Use JLM11027.
4	JLM	11027	Door skin panel-LH front	1		
5	JLM	2186	Door panel-assembly-RH rear	1		
6	JLM	2024	Door skin panel-RH rear	NLA		Use JLM11028.
6	JLM	11028	Door skin panel-RH rear	1		
5	JLM	2187	Door panel-assembly-LH rear	1		
6	JLM	2025	Door skin panel-LH rear	NLA		Use JLM11029.
6	JLM	11029	Door skin panel-LH rear	1		
	CAP	4036	Handle aperture reinforcement	4		See PTI 154
7	CAP	567	Trunk lid panel-assembly	1		

CHANGE POINTS:

(1) To (V) 629285
(2) From (V) 629286
(3) To (V) 594575
(4) From (V) 594576

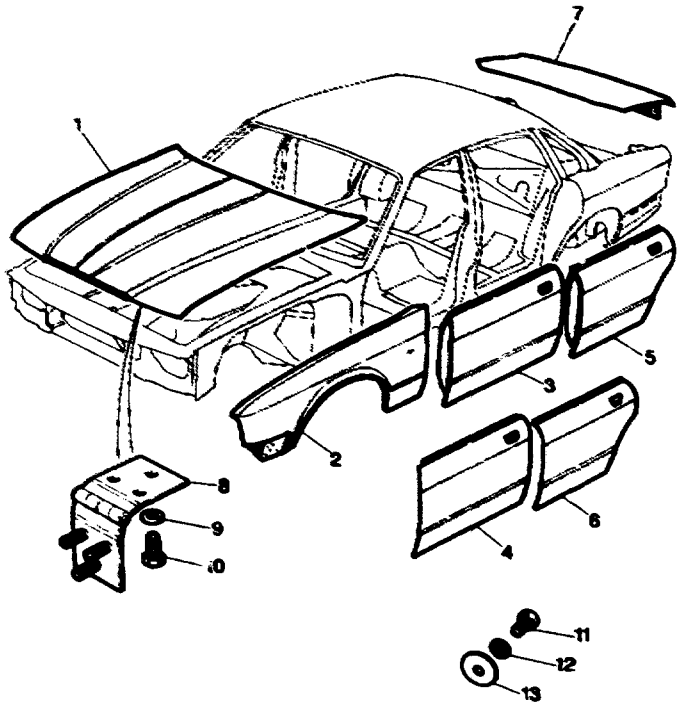

MY7101

Illus	Part Number		Description	Quantity	Change Point	Remarks
	BBC	25505	D-post plug -19.1mm diameter hole	4		
	BBC	25507	Bonnet plug -50.8mm diameter hole	2		
	BBC	4590	Blanking plug-surround to trunk lid	3		
	BBC	2551	Plug-2.8mm x 27.8mm slot	A/R		
	BDC	9200	Plug-20mm diameter-fender reinforcement	2		
11	SR	108161J	Hexagon head screw	9		
12	WA	108041J	Plain washer-0.25" i/d	9		
13	WJ	108001J	Plain washer-M6	9		
	CAP	856	Reinforcement	2		
8	CAP	1328	Bonnet hinge	2		
9	WC	108051J	Plain washer	6		
10	SH	108201J	Screw-M8 x 20mm	6		

MASTER INDEX

ENGINE 1E
ENGINE MANAGEMENT/EMISSION SYSTEMS 1I
AIR AND FUEL DELIVERY SYSTEMS 1L
ENGINE COOLING SYSTEM 1N
EXHAUST SYSTEM AND COMPONENTS 2C
TRANSMISSION AND DRIVELINE 2E
STEERING AND SUSPENSION 2I
BRAKING SYSTEM 2M
AIR CONDITIONING/HEATING/VENTILATION 3C
WIPER AND WASHER SYSTEMS 3E
ELECTRICAL DISTRIBUTION SYSTEM 3F
INFORMATION SYSTEMS AND CONTROLS 3H
BATTERY/STARTER MOTOR/ALTERNATOR 3I
IN CAR ENTERTAINMENT 3J
LIGHTING - EXTERIOR/INTERIOR 3K
LOCKING/SECURITY SYSTEMS/HORNS 3M
SEATING 4C
OCCUPANT RESTRAINTS 4F
INTERIOR TRIM AND LININGS 4G
EXTERIOR FITTINGS AND SUNROOF 4K
BODY CLOSURES AND SEALING 4N
BODY METAL PANELS AND SEALING 5C
ACCESSORIES/CONSUMABLES/INDEX 5E

GROUP INDEX

AUDIO ..... 5. E 04
CLIPS AND FIXINGS ..... 5. F 08
CONSUMABLES ..... 5. F 09
EXTERIOR STYLE ..... 5. E 06
INTERIOR STYLE ..... 5. E 05
JAGUAR DIAGNOSTIC SYSTEM ..... 5. E 15
LITERATURE ..... 5. F 02
PAINT TOUCH-UP ..... 5. E 17
SAFETY AND SECURITY ..... 5. E 02
TIE STRAPS AND PUSH-ON FIXES ..... 5. F 07
TOOLKIT ..... 5. E 12
TOURING ..... 5. E 09
TOWING ..... 5. E 10
WHEELS AND TYRES ..... 5. E 08

CAR CARE CONSUMABLES ..... 5. F 09
CAR JACK AND WHEEL BRACE ..... 5. E 12
CHILD SAFETY ..... 5. E 03
CLIPS AND FIXINGS ..... 5. F 08
Diagnostic system dust cover ..... 5. E 15
EXTERIOR ACCESSORIES ..... 5. E 07
Filter kit ..... 5. E 15
Hub cap wrench ..... 5. E 12
INTERIOR ACCESSORIES ..... 5. E 05
JAGUAR DIAGNOSTIC SYSTEM ..... 5. E 15
JDS adaptor kit-black ..... 5. E 16
JDS adaptor kit-red ..... 5. E 15
MUDFLAP ..... 5. E 06
PAINT TOUCH-UP PENCIL ..... 5. E 17
Printer paper roll ..... 5. E 15
Printer ribbon ..... 5. E 15
RADIO CASSETTE PLAYER ..... 5. E 04
ROOF RACK ..... 5. E 09
SAFETY ..... 5. E 02
SERVICE PUBLICATIONS ..... 5. F 02
TIE STRAPS AND PUSH-ON FIXES ..... 5. F 07
TOOLKIT ..... 5. E 13
TOWING EQUIPMENT ..... 5. E 10

Tyre pressure gauge ..... 5. E 14
WHEELS ..... 5. E 08

SAFETY

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9750	First aid kit	NLA		Use GMD3753AA.
	GMD 3753AA	First aid kit	NLA		Use GMD3753AB with XR82604.
	XR8 2604	First aid kit	1		
	JLM 9843	Fire extinguisher	NLA		Use JLM10842.
	JLM 10842	Fire extinguisher	NLA		Use JLM11660.
	JLM 11660	Fire extinguisher-dry powder-1.3 Kg.	NLA		Use JLM20729.
	JLM 20729	Fire extinguisher-dry powder-1 Kg.	1		
	JLM 9751	Warning triangle	1		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
JLM	9854	Baby seat	NLA		Use JLM10582.
JLM	10582	Baby seat	NLA		Use JLM11691.
JLM	11691	Infant carrier	1		
JLM	9855	Child seat	NLA		Use JLM10871.
JLM	10871	Child seat	1		
JLM	9856	Booster cushion	1		
JLM	2026	Child restraint tether bracket kit	NLA	(1)	Use BEC12556.
BEC	12556	Child restraint tether bracket kit	1	(2)	Canada

COMPONENTS NOT DRAWN

CHANGE POINTS:
(1) To (V) 657920
(2) From (V) 657921


Illus	Part Number	Description	Quantity	Change Point	Remarks
	DBC 2172	Radio/cassette player	NLA		Use DBC3976. Europe
	DBC 2707	Radio/cassette player	NLA		Use DBC2172. Europe;UK

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
JLM	9844	Carpet set-Grey	1		
JLM	9845	Carpet set-Beige	1		
JLM	9862	Rubber mats-front	1		
JLM	9863	Rubber mats-rear	1		
BD	21181	Licence holder -Jaguar	A/R		
BD	24427	Licence holder -Daimler	A/R		

COMPONENTS NOT DRAWN

MUDFLAP

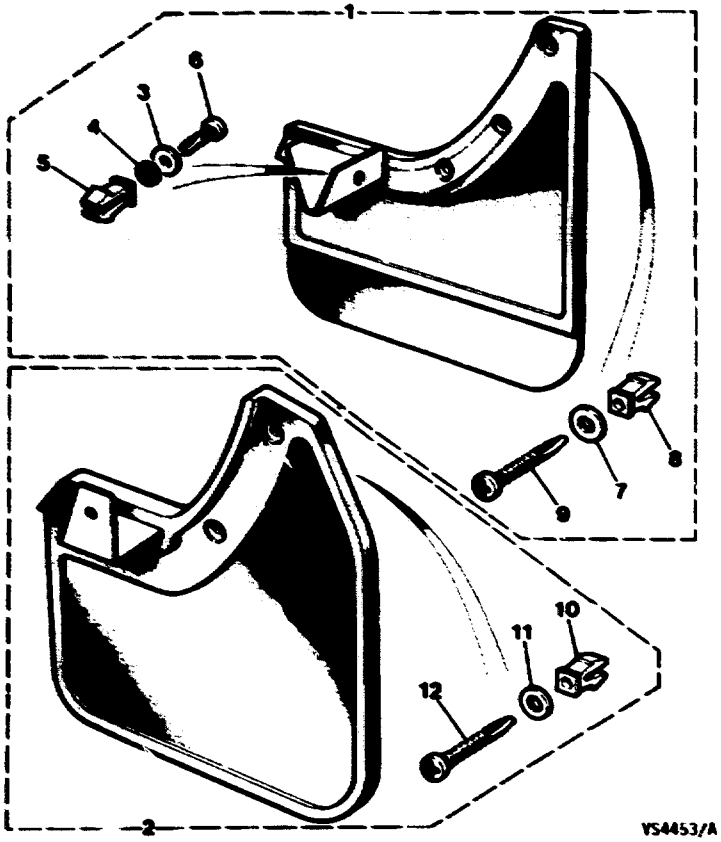

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	131	Mudflap kit-front	1		Jaguar
2	JLM	132	Mudflap kit-rear	1		
1	JLM	9891	Mudflap kit-front	1		Daimler
2	JLM	9892	Mudflap kit-rear	1		
3	FW	104T	Plain washer-0.25" i/d	NLA		Use WA108041J.
3	WA	108041J	Plain washer-0.25" i/d	2		
4	WM	108001J	Spring washer	4		Alternatives
	WM	108005J	Lock washer	4		
5	CZH	619J	Plastic nut-bracket and cantrail	2		
6	SH	108121J	Setscrew-M8 x 12mm	2		Alternatives
	SH	108105J	Screw	2		
7	WA	105001J	Plain washer-M5	4		Alternatives
7	WC	105045J	Plain washer	NLA		Use WC105001J.
7	WC	105001J	Plain washer	4		Alternatives
8	CZH	619J	Plastic nut-bracket and cantrail	6		
9	AB	608081J	Self tapping screw	4		Alternatives
	AB	608085J	Screw	4		
10	CZH	619J	Plastic nut-bracket and cantrail	6		
11	WA	105001J	Plain washer-M5	4		Alternatives
11	WC	105045J	Plain washer	NLA		Use WC105001J.
11	WC	105001J	Plain washer	4		Alternatives
12	AB	608081J	Self tapping screw	4		Alternatives
	AB	608085J	Screw	4		

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9883	Number plate-front	1		
	JLM 9884	Number plate-rear	1		
	DBC 2129	Fog lamp-yellow lens	1		
	JLM 9849	Beam converter	N/A		

COMPONENTS NOT DRAWN

WHEELS

Illus	Part Number	Description	Quantity	Change Point	Remarks
	CBC 1339	Alloy road wheel	NLA		Use CBC4691.
	CBC 4691	Alloy road wheel	NLA		Use CBC7966.
	CBC 7966	Alloy road wheel-tear drop	5		
	JLM 9861	Alloy road wheel fitting kit	NLA		Use JLM11381.
					Jaguar
	JLM 11381	INSTALLATION KIT	1		Jaguar
	CAC 6439 1	• Hub cap-flush nave-plastic	4		
	MMB 6261AA	• Open end wheel nut-alloy wheel	20		
	MNA 6249GA	• Road wheel badge-Jaguar-silver/grey	4		
	JLM 9894	Alloy road wheel fitting kit	NLA		Daimler
	JLM 9847	Snow chain kit	A/R		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9853	Roof rack -basic carrier	1		
	JLM 9748	Luggage holder -roof rack	1		
	JLM 9746	Luggage net -roof rack	NLA		
	JLM 9742	Cycle holder -roof rack	NLA		Use JLM10507.
	JLM 10507	Cycle holder -roof rack	1		
	JLM 9744	Ski holder -roof rack	1		
	JLM 9743	Windsurfer holder -roof rack	1		

COMPONENTS NOT DRAWN

TOWING EQUIPMENT

COMPONENTS NOT DRAWN


Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9850	Towing mirror	NLA		Except USA
	JLM 9851	Detachable towbar	NLA		Use JLM9924.
					Except USA
	JLM 9924	Detachable towbar	NLA		Use JLM2090.
					Except USA
	JLM 2090	Tow bar kit	NLA		Use JLM10372.
					Except USA
	JLM 10372	TOW BAR KIT	NLA		Use JLM10895.
					Except USA
	DBC 2227	• Connector	1		
	DBC 2228	• Connector	1		
	DBC 2428	• Caravan/trailer module	NLA		Use DBC10537.
	C 1042	• Module grommet	NLA		Use CZK4308J.
	ACU 1511	• Panel grommet	1		
	DBC 3430	• Rubber seal	NLA		
	DBC 3280	• Fused link lead	1		
	DBC 3401	• Adhesive pad-non vented battery	2		
	DBC 6241	• Module mounting bracket-LH	1		
	JLM 10370	• Towbar-assembly	NLA		
	JLM 10895	TOW BAR KIT	1		Except USA
	JLM 9852	• Caravan and trailer electrics kit	NLA		Use JLM2091.
	ACU 1511	• Panel grommet	1		
	C 1042	• Module grommet	NLA		Use CZK4308J.
	DBC 10537	• Caravan/trailer module	1		
	DBC 2227	• Connector	1		
	DBC 2228	• Connector	1		
	DBC 3280	• Fused link lead	1		
	DBC 3401	• Adhesive pad-non vented battery	2		
	DBC 3430	• Rubber seal	NLA		
	DBC 6241	• Module mounting bracket-LH	1		
	JLM 11039	• Towbar	NLA		
	NH 105041J	• Nyloc nut-M5	NLA		Use NH105081J.
	SH 108141J	• Setscrew-M6 x 14mm	1		
	WA 105001J	• Plain washer-M5	6		
	WC 108041J	• Plain washer	NLA		
	WF 105001J	• Shakeproof washer	6		
	WL 105001J	• Spring washer-M5	6		
	NH 105081J	Nyloc nut-M5	6		Except USA

TOWING EQUIPMENT

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9852	Caravan and trailer electrics kit	NLA	.....	Use JLM2091.
				.....	Except USA
	JLM 2091	Caravan and trailer electrics kit	NLA	.....	Use JLM10894.
				.....	Except USA
	JLM 10894	TOW BAR KIT	1	.....	Except USA
	ACU 1511	• Panel grommet	1		
	C 1042	• Module grommet	NLA	.....	Use CZK4306J.
	DBC 10537	• Caravan/trailer module	1		
	DBC 2227	• Connector	1		
	DBC 2228	• Connector	1		
	DBC 3280	• Fused link lead	1		
	DBC 3401	• Adhesive pad-non vented battery	2		
	DBC 3430	• Rubber seal	NLA		
	DBC 6241	• Module mounting bracket-LH	1		

COMPONENTS NOT DRAWN

CAR JACK AND WHEEL BRACE

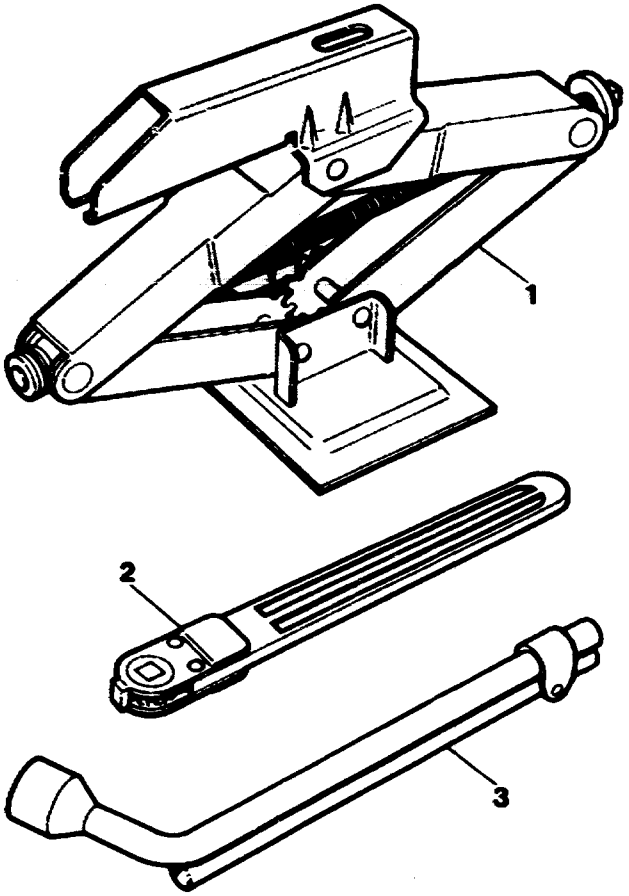


VS4689

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 2791	Car lifting jack	NLA	(1)	Use CBC9638.
1	CBC 9638	Car lifting jack	NLA		Use CBC9773.
1	CBC 9773	Car lifting jack	NLA	(2)	Use CCC4577.
1	CCC 4577	Car lifting jack	1		
2	CAC 8065	Ratchet handle	NLA		Use CCC4604.
	CCC 4604	Jack handle-ratchet	NLA		Use MNA6365AA.
	MNA 6365AA	Jack handle-ratchet	1		
3	CAC 8144	Wheel brace	1		
	CAC 9397	Blanking plug	4		
	CBC 5681	Hub cap wrench	1		

CHANGE POINTS:
(1) To (V) 594575
(2) From (V) 594576

TOOLKIT

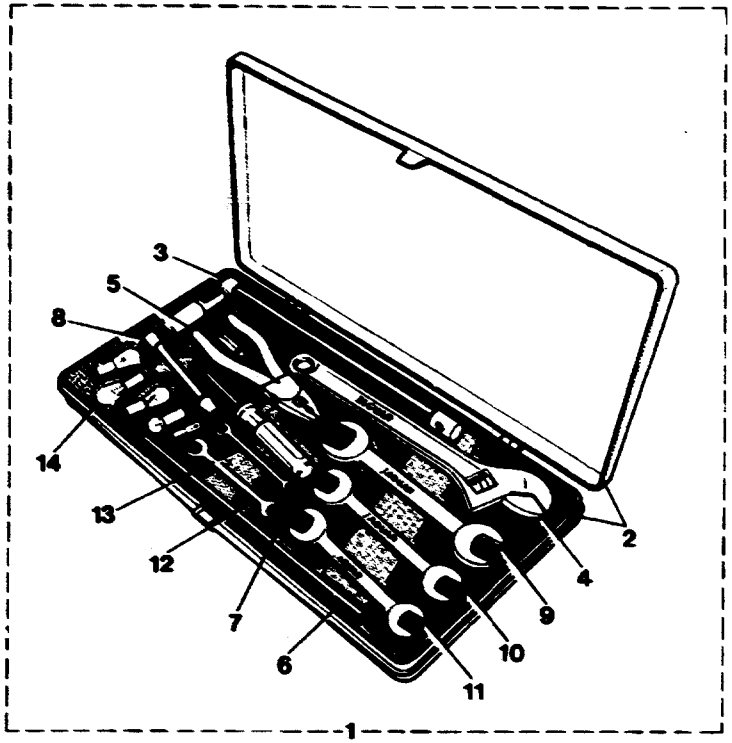


VS4631

Illus	Part Number	Description	Quantity	Change Point	Remarks
1	CBC 4255	Toolkit-assembly	NLA	(1)	Use CBC5275.
					2.9 Litre
1	CBC 5275	Toolkit-assembly	NLA		Use JLM2005.
					2.9 Litre
1	JLM 2005	Toolkit-assembly-less paint touch-up	NLA	(2)	2.9 Litre
1	CBC 2612	Toolkit-assembly	NLA	(1)	Use CBC5277.
					3.6 Litre (XJ40)
1	CBC 5277	Toolkit-assembly	NLA		Use JLM1857.
					3.6 Litre (XJ40)
1	JLM 1857	Toolkit-assembly-less paint touch-up	NLA	(2)	Use JLM11122.
					3.2 Litre
1	JLM 1857	Toolkit-assembly-less paint touch-up	NLA	(2)	Use JLM11122.
					3.6 Litre (XJ40)
1	JLM 1857	Toolkit-assembly-less paint touch-up	NLA	(2)	Use JLM11122.
					4.0 Litre
1	JLM 11122	Toolkit-assembly	1		3.2 Litre
1	JLM 11122	Toolkit-assembly	1		3.6 Litre (XJ40)
1	JLM 11122	Toolkit-assembly	1		4.0 Litre
2	CBC 2613	Tool case-adjustable spanner	NLA	(1)	
2	CBC 8131	Tool case	1	(2)	
3	CBC 4171	Spark plug socket	NLA		2.9 Litre
3	CBC 4096	Spark plug socket	NLA		Use CCC4813.
					3.6 Litre (XJ40)
3	CBC 4096	Spark plug socket	NLA		Use CCC4813.
					4.0 Litre
3	CAC 7000	Spark plug socket	NLA		Use CBC4096.
					3.6 Litre (XJ40)
3	CCC 4813	Spark plug socket	1		3.6 Litre (XJ40)
3	CCC 4813	Spark plug socket	1		4.0 Litre

CHANGE POINTS:
(1) To (V) 568600
(2) From (V) 568601

TOOLKIT

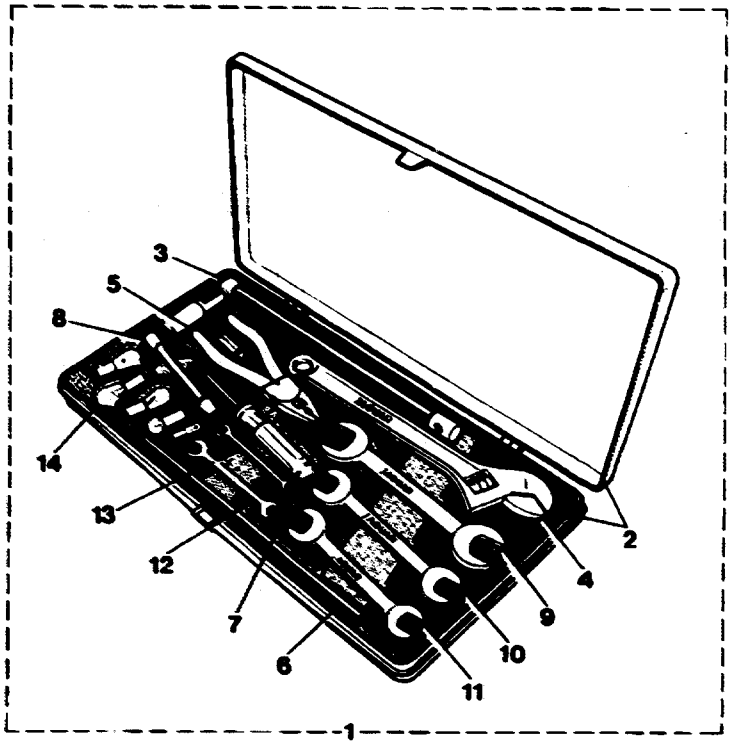

VS4631

Illus	Part Number	Description	Quantity	Change Point	Remarks
4	CAC 8130	Adjustable spanner	NLA	(1)	
5	AFU 1024	Pliers	1		
6	C 36613 2	Tommy bar	1		
7	CBC 2553	Screwdriver	1		
8	562019 J	Tyre pressure gauge	1		
9	CAC 8139	Spanner-17mm x 19mm	1		
10	CAC 8133	Spanner-13mm x 15mm	1		
11	CAC 8134	Spanner-1/2" x 9/16"	1		
12	CAC 8132	Spanner-8mm x 10mm	1		
13	CAC 8131	Spanner-6mm x 7mm	1		
14	JLM 9594	Bulb-5/21w-stop lamp	NLA		Use DBC11383.
14	DBC 11383	Bulb-bayonet-21w/5w	1		
14	C 9126	Bulb-bayonet-21w	NLA		Use DBC11382.
14	DBC 11382	Bulb-bayonet-21w	2		
14	JLM 9587	Bulb-bayonet-5w	NLA		Use DBC11711.
					Tail lamp
14	JLM 9589	Bulb-bayonet-12v 4w	NLA		Use JLM186.
					Sidemarker lamp
14	JLM 186	Bulb-bayonet-12v 4w	NLA		Use DBC11380.
14	DBC 11380	Bulb-bayonet-12v 4w	1		
14	JLM 9590	Bulb-festoon.-5w	NLA		Use LNA5180AA.
					Number plate lamp
14	LNA 5180AA	Bulb-festoon.-5w	1		Number plate lamp
	CBC 5165	Fuse extractor	NLA		

CHANGE POINTS:
(1) To (V) 568600

JAGUAR DIAGNOSTIC SYSTEM CONSUMABLES

COMPONENTS NOT DRAWN


Illus	Part Number	Description	Quantity	Change Point	Remarks
JDS	1024	Disc cleaning kit	1		
JDS	1025	Printer paper roll	1		
JDS	1026	Printer ribbon	1		
JDS	1038	Filter kit	1		
JDS	1029	Bulb	1		
JDS	1036	Diagnostic system dust cover	1		
JDS	1022	JDS ADAPTOR KIT-RED	NLA		
JDS	1022 1	• JDS adaptor -no.1	1		
JDS	1022 2	• JDS adaptor -no.2	1		
JDS	1022 3	• JDS adaptor -no.3	1		
JDS	1022 4	• JDS adaptor -no.4	NLA		Use JDS10234.
JDS	1022 5	• JDS adaptor -no.5	1		
JDS	1022 6	• JDS adaptor -no.6	1		
JDS	1022 7	• JDS adaptor -no.7	NLA		Use JDS10237.
JDS	1022 8	• JDS adaptor -no.8	1		
JDS	1022 9	• JDS adaptor -no.9	NLA		Use JDS10239.
JDS	1022 10	• JDS adaptor -no.10	1		
JDS	1022 11	• JDS adaptor -no.11	1		
JDS	1022 12	• JDS adaptor -no.12	NLA		Use JDS102312.
JDS	1022 13	• JDS adaptor -no.13	NLA		Use JDS102313.
JDS	1022 14	• JDS adaptor -no.14	1		
JDS	1022 15	• JDS adaptor -no.15	1		
JDS	1022 16	• JDS adaptor -no.16	1		
JDS	1022 17	• JDS adaptor -no.17	1		
JDS	1022 18	• JDS adaptor -no.18	1		
JDS	1022 19	• JDS adaptor -no.19	1		
JDS	1022 20	• JDS adaptor -no.20	1		
JDS	1022 21	• JDS adaptor -no.21	1		
JDS	1022 22	• JDS adaptor -no.22	1		
JDS	1022 23	• JDS adaptor -no.23	NLA		Use JDS102323.

JAGUAR DIAGNOSTIC SYSTEM CONSUMABLES

COMPONENTS NOT DRAWN


Illus	Part Number	Description	Quantity	Change Point	Remarks
JDS	1023	JDS ADAPTOR KIT-BLACK	NLA		
JDS	1023 1	• JDS adaptor -no.1	1		
JDS	1023 2	• JDS adaptor -no.2	NLA		
JDS	1023 3	• JDS adaptor -no.3	1		
JDS	1023 4	• JDS adaptor -no.4	1		
JDS	1023 5	• JDS adaptor -no.5	NLA		
JDS	1023 6	• JDS adaptor -no.6	NLA		
JDS	1023 7	• JDS adaptor -no.7	1		
JDS	1023 8	• JDS adaptor -no.8	1		
JDS	1023 9	• JDS adaptor -no.9	1		
JDS	1023 10	• JDS adaptor -no.10	NLA		
JDS	1023 11	• JDS adaptor -no.11	1		
JDS	1023 12	• JDS adaptor -no.12	NLA		
JDS	1023 13	• JDS adaptor -no.13	1		
JDS	1023 14	• JDS adaptor -no.14	1		
JDS	1023 15	• JDS adaptor -no.15	1		
JDS	1023 16	• JDS adaptor -no.16	1		
JDS	1023 17	• JDS adaptor -no.17	1		
JDS	1023 18	• JDS adaptor -no.18	1		
JDS	1023 19	• JDS adaptor -no.19	1		
JDS	1023 20	• JDS adaptor -no.20	1		
JDS	1023 21	• JDS adaptor -no.21	1		
JDS	1023 22	• JDS adaptor -no.22	1		
JDS	1023 23	• JDS adaptor -no.23	1		

PAINT TOUCH-UP PENCIL

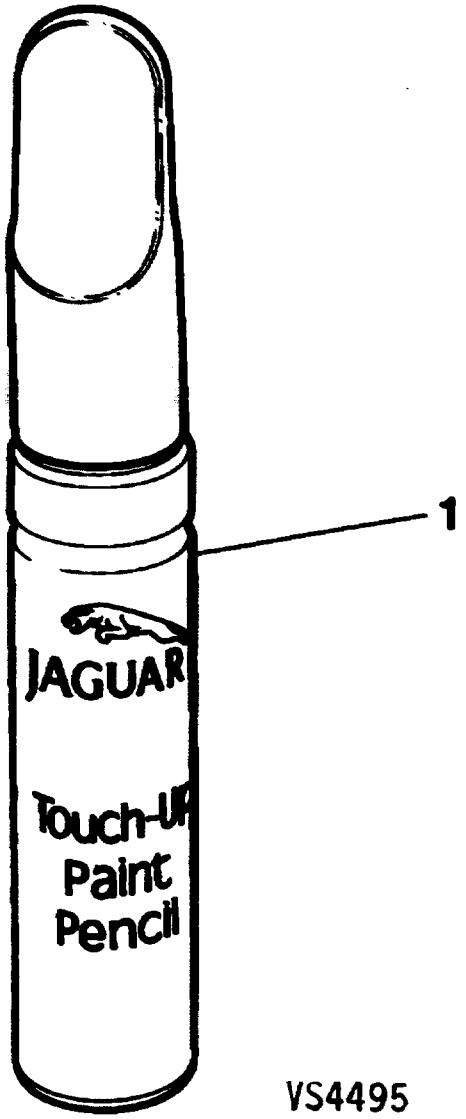

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	JLM	9055	Paint touch-up pencil-Nimbus white-BLVC 700	NLA		Use JLM11464NJD.
1	JLM	9056	Paint touch-up pencil-Grenadier red -BLVC 332	NLA		Use JLM11464CEH.
1	JLM	9057	Paint touch-up pencil-Jaguar racing green -BLVC 701	NLA		Use JLM11464HEN.
1	JLM	9058	Paint touch-up pencil-Westminster blue-BLVC 712	NLA		Use JLM11464JFG.
1	JLM	9059	Paint touch-up pencil-Jet black-BLVC 333	NLA		Use JLM11464PDH.
1	JLM	10482	Paint touch-up pencil-Brooklands green -BLVC 753	NLA		Use JLM11464HFB.
1	JLM	9060	Paint touch-up pencil-Bordeaux red-BLVC 340	NLA		Use JLM11464CEK.
1	JLM	9061	Paint touch-up pencil-Crimson-BLVC 714	NLA		Use JLM11464CFF.
1	JLM	9062	Paint touch-up pencil-Solent blue-BLVC 715	NLA		Use JLM11464JFJ.
1	JLM	9063	Paint touch-up pencil-Artic blue -BLVC 337	NLA		Use JLM11464JFE.
1	JLM	9064	Paint touch-up pencil-Tungsten-BLVC 718	NLA		Use JLM11464JEX.
1	JLM	9065	Paint touch-up pencil-Talisman silver-BLVC 336	NLA		Use JLM11464MDF.
1	JLM	9066	Paint touch-up pencil-Dorchester grey-BLVC 342	NLA		Use JLM11464LDP.
1	JLM	9067	Paint touch-up pencil-Sovereign gold-BLVC 341	NLA		Use JLM11464GDF.
1	JLM	9068	Paint touch-up pencil-Satin beige-BLVC 711	NLA		Use JLM11464AGA.
1	JLM	9069	Paint touch-up pencil-Silver birch-BLVC 716	NLA		Use JLM11464MDJ.
1	JLM	9070	Paint touch-up pencil-Alpine green-BLVC 709	NLA		Use JLM11464HES.
1	JLM	9071	Paint touch-up pencil-Moorland green-BLVC 717	NLA		Use JLM11464HET.
1	JLM	9072	Paint touch-up pencil-clear lacquer	1		
1	JLM	9001C	Paint touch-up pencil-Grey primer	NLA		
1	JLM	9004C	Paint touch-up pencil-White primer	NLA		
1	JLM	9009C	Paint touch-up pencil-Red oxide primer	NLA		
1	JLM	9076	Paint touch-up pencil-Regency red-BLVC 734	NLA		Use JLM11464CFA.
1	JLM	9077	Paint touch-up pencil-Jade green-BLVC 735	NLA		Use JLM11464HEV.
1	JLM	9078	Paint touch-up pencil-Gunmetal-BLVC 740	NLA		Use JLM11464LEH.
1	JLM	9079	Paint touch-up pencil-Savoy grey-BLVC 731	NLA		Use JLM11464LED.
1	JLM	9080	Paint touch-up pencil-Diamond blue-BLVC 743	NLA		Use JLM11464JFN.
1	JLM	9081	Paint touch-up pencil-Silver frost-BLVC 750	NLA		Use JLM11464MDK.
1	JLM	10483	Paint touch-up pencil-Oyster metallic-BLVC 751	NLA		Use JLM11464SDE.
1	JLM	10485	Paint touch-up pencil-Black cherry mica-BLVC 737	NLA		Use JLM11464PDP.
1	JLM	10774	Paint touch-up pencil-Platinum	NLA		Use JLM11464LEP.
1	JLM	10775	Paint touch-up pencil-Kingfisher blue	NLA		Use JLM11464HFE.
1	JLM	10776	Paint touch-up pencil-Catkin mica	NLA		Use JLM11464HFD.
1	JLM	10777	Paint touch-up pencil-Flamenco mica	NLA		Use JLM11464CFH.

PAINT TOUCH-UP PENCIL

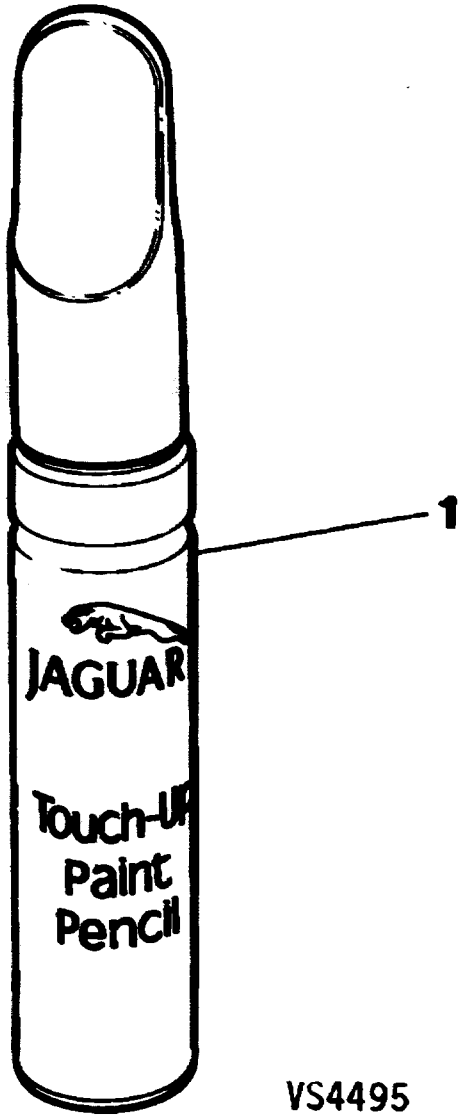

Illus	Part Number	Description	Quantity	Change Point	Remarks
JLM	11464 NJD	Paint touch-up kit -Nimbus white	1		
JLM	11464 CEH	Paint touch-up kit -Grenadier red	1		
JLM	11464 HEN	Paint touch-up kit -Jaguar racing green	1		
JLM	11464 JFG	Paint touch-up kit -Westminster blue	1		
JLM	11464 HFB	Paint touch-up kit -British racing green	1		
JLM	11464 CEK	Paint touch-up kit -Bordeaux red	1		
JLM	11464 CFF	Paint touch-up kit -Crimson	1		
JLM	11464 JFJ	Paint touch-up kit -Solent blue	1		
JLM	11464 JFE	Paint touch-up kit -Artic blue	1		
JLM	11464 JEX	Paint touch-up kit -Tungsten	1		
JLM	11464 MDF	Paint touch-up kit -Talisman silver	1		
JLM	11464 LDP	Paint touch-up kit -Dorchester grey	1		
JLM	11464 GDF	Paint touch-up kit -Sovereign gold	1		
JLM	11464 AGA	Paint touch-up kit -Satin beige	1		
JLM	11464 MDJ	Paint touch-up kit -Silver birch	1		
JLM	11464 HET	Paint touch-up kit -Moorland green	1		
JLM	11464 HEV	Paint touch-up kit -Jade green	1		
JLM	11464 LEH	Paint touch-up kit -Gunmetal grey	1		
JLM	11464 LED	Paint touch-up kit -Savoy	NLA		Use JLM11464LEK
JLM	11464 LEK	Paint touch-up kit -Savoy	1		
JLM	11464 JFN	Paint touch-up kit -Diamond blue	1		
JLM	11464 MDK	Paint touch-up kit -Silver frost	1		
JLM	11464 SDE	Paint touch-up kit -Oyster	1		
JLM	11464 PDP	Paint touch-up kit -Black cherry	1		
JLM	11464 LEP	Paint touch-up kit -Platinum	1		
JLM	11464 HFE	Paint touch-up kit -Kingfisher blue	1		
JLM	11464 HFD	Paint touch-up kit -Catkin mica	1		
JLM	11464 CFH	Paint touch-up kit -Flamenco	1		
JLM	11464 PDH	Paint touch-up kit -Jet black	1		
JLM	11464 HES	Paint touch-up kit -Alpine green	1		
JLM	11464 CFA	Paint touch-up kit -Regency red	1		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JJM 100105	Repair operation times-English	A/R		
	JJM 110105	Repair operation times-French	NLA		Use JJM11010540.
	JJM 110105 40	Repair operation times-French	A/R		
	JJM 120105	Repair operation times-Dutch	NLA		Use JJM12010540.
	JJM 120105 40	Repair operation times-Dutch	NLA		
	JJM 130105	Repair operation times-German	NLA		Use JJM13010540.
	JJM 130105 40	Repair operation times-German	A/R		
	JJM 140105	Repair operation times-Italian	NLA		Use JJM14010540.
	JJM 140105 40	Repair operation times-Italian	A/R		
	JJM 150105	Repair operation times-Spanish	NLA		Use JJM15010540.
	JJM 150105 40	Repair operation times-Spanish	A/R		
	JJM 170105	Repair operation times-Japanese	NLA		Use JJM17010540.
	JJM 170105 40	Repair operation times-Japanese	NLA		
	JJM 100205	Driver's handbook-English	NLA		Use JJM10020590.
	JJM 100205 90	Driver's handbook-English	NLA		Use JJM10020585.
	JJM 100205 95	Driver's handbook-English	NLA		Use JJM10020500.
	JJM 100205 00	Driver's handbook-English	A/R		
	JJM 110205	Driver's handbook-French	NLA		
	JJM 120205	Driver's handbook-Dutch	A/R		
	JJM 130205	Driver's handbook-German	A/R		
	JJM 140205	Driver's handbook-Italian	NLA		
	JJM 150205	Driver's handbook-Spanish	A/R		
	JJM 160205	Driver's handbook-Arabic	A/R		
	JJM 180205	Driver's handbook-North America	NLA		
	JJM 170205	Driver's handbook-Japanese	NLA		
	JJM 190205	Driver's handbook-Canadian English	A/R		
	JJM 200205	Driver's handbook-Canadian French	NLA		
	JJM 100305	Maintenance guide -English	A/R		
	JJM 110305	Maintenance guide -French	A/R		
	JJM 120305	Maintenance guide -Dutch	A/R		
	JJM 130305	Maintenance guide -German	NLA		
	JJM 140305	Maintenance guide -Italian	NLA		
	JJM 150305	Maintenance guide -Spanish	A/R		
	JJM 170305	Maintenance guide -Japanese	A/R		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JJM 100405	Service manual -English	NLA		
	JJM 110405	Service manual -French	NLA		
	JJM 120405	Service manual -Dutch	A/R		
	JJM 130405	Service manual -German	NLA		
	JJM 140405	Service manual -Italian	NLA		
	JJM 150405	Service manual -Spanish	NLA		
	JJM 170405	Service manual -Japanese	A/R		
	JJM 100805	Warranty codes -English	NLA		Use JJM10080540.
	JJM 110805	Warranty codes -French	NLA		Use JJM11080540.
	JJM 120805	Warranty codes -Dutch	NLA		Use JJM12080540.
	JJM 130805	Warranty codes -German	NLA		Use JJM13080540.
	JJM 140805	Warranty codes -Italian	NLA		Use JJM14080540.
	JJM 150805	Warranty codes -Spanish	NLA		Use JJM15080540.
	JJM 170805	Warranty codes -Japanese	NLA		Use JJM17080540.
	JJM 10080540	Warranty codes -English	A/R		
	JJM 11080540	Warranty codes -French	NLA		
	JJM 12080540	Warranty codes -Dutch	NLA		
	JJM 13080540	Warranty codes -German	A/R		
	JJM 14080540	Warranty codes -Italian	A/R		
	JJM 15080540	Warranty codes -Spanish	A/R		
	JJM 17080540	Warranty codes -Japanese	A/R		
	JJM 101005	Service record/warranty book-English	NLA		Use JJM101799.
	JJM 111005	Service record/warranty book-French	NLA		Use JJM111799.
	JJM 121005	Service record/warranty book-Dutch	NLA		Use JJM121799.
	JJM 131005	Service record/warranty book-German	NLA		Use JJM131799.
	JJM 141005	Service record/warranty book-Italian	NLA		Use JJM141799.
	JJM 151005	Service record/warranty book-Spanish	NLA		Use JJM151799.
	JJM 161005	Service record/warranty book-Arabic	NLA		Use JJM161799.
	JJM 171005	Service record/warranty book-Japanese	NLA		Use JJM171799.
	JJM 101799	Service record/warranty book-English	A/R		
	JJM 111799	Service record/warranty book-French	NLA		
	JJM 121799	Service record/warranty book-Dutch	A/R		
	JJM 131799	Service record/warranty book-German	A/R		
	JJM 141799	Service record/warranty book-Italian	A/R		
	JJM 151799	Service record/warranty book-Spanish	A/R		
	JJM 161799	Service record/warranty book-Arabic	NLA		
	JJM 171799	Service record/warranty book-Japanese	A/R		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JJM 101105	Forecourt data card-English	NLA		
	JJM 111105	Forecourt data card-French	NLA		
	JJM 121105	Forecourt data card-Dutch	NLA		
	JJM 131105	Forecourt data card-German	NLA		
	JJM 141105	Forecourt data card-Italian	NLA		
	JJM 151105	Forecourt data card-Spanish	NLA		
	JJM 161105	Forecourt data card-Arabic	NLA		
	JJM 171105	Forecourt data card-Japanese	NLA		
	JJM 181105	Forecourt data card-North America	NLA		
	JJM 201105	Forecourt data card-Canadian French	NLA		
	JJM 105005	Pre delivery inspection form-English	NLA		Use JJM10500504.
	JJM 115005	Pre delivery inspection form-French	NLA		Use JJM11500504.
	JJM 125005	Pre delivery inspection form-Dutch	NLA		Use JJM12500504.
	JJM 135005	Pre delivery inspection form-German	NLA		Use JJM13500504.
	JJM 145005	Pre delivery inspection form-Italian	NLA		Use JJM14500504.
	JJM 155005	Pre delivery inspection form-Spanish	NLA		Use JJM15500504.
	JJM 175005	Pre delivery inspection form-Japanese	NLA		Use JJM17500504.
	JJM 105005 04	Pre delivery inspection form-English	NLA		Use JJM10500510.
	JJM 115005 04	Pre delivery inspection form-French	NLA		Use JJM11500510.
	JJM 125005 04	Pre delivery inspection form-Dutch	NLA		Use JJM12500510.
	JJM 135005 04	Pre delivery inspection form-German	NLA		Use JJM13500510.
	JJM 145005 04	Pre delivery inspection form-Italian	NLA		Use JJM14500510.
	JJM 155005 04	Pre delivery inspection form-Spanish	NLA		Use JJM15500510.
	JJM 175005 04	Pre delivery inspection form-Japanese	NLA		Use JJM17500510.
	JJM 105005 10	Pre delivery inspection form-English	A/R		
	JJM 115005 10	Pre delivery inspection form-French	A/R		
	JJM 125005 10	Pre delivery inspection form-Dutch	A/R		
	JJM 135005 10	Pre delivery inspection form-German	A/R		
	JJM 145005 10	Pre delivery inspection form-Italian	A/R		
	JJM 155005 10	Pre delivery inspection form-Spanish	A/R		
	JJM 175005 10	Pre delivery inspection form-Japanese	A/R		


COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JJM 105105	Vehicle maintenance sheets -English	NLA		Use JJM10510504.
	JJM 115105	Vehicle maintenance sheets -French	NLA		Use JJM11510504.
	JJM 125105	Vehicle maintenance sheets -Dutch	NLA		Use JJM12510504.
	JJM 135105	Vehicle maintenance sheets -German	NLA		Use JJM13510504.
	JJM 145105	Vehicle maintenance sheets -Italian	NLA		Use JJM14510504.
	JJM 155105	Vehicle maintenance sheets -Spanish	NLA		Use JJM15510504.
	JJM 175105	Vehicle maintenance sheets -Japanese	NLA		Use JJM17510504.
	JJM 10510504	Vehicle maintenance sheets -English	A/R		
	JJM 11510504	Vehicle maintenance sheets -French	NLA		Use JJM11519940.
	JJM 12510504	Vehicle maintenance sheets -Dutch	NLA		Use JJM12519940.
	JJM 13510504	Vehicle maintenance sheets -German	A/R		
	JJM 14510504	Vehicle maintenance sheets -Italian	NLA		Use JJM14519940.
	JJM 15510504	Vehicle maintenance sheets -Spanish	NLA		Use JJM15519940.
	JJM 17510504	Vehicle maintenance sheets -Japanese	A/R		
	JJM 11519940	Vehicle maintenance sheets -French	NLA		Use JJM115199401.
	JJM 12519940	Vehicle maintenance sheets -Dutch	NLA		Use JJM125199401.
	JJM 14519940	Vehicle maintenance sheets -Italian	NLA		Use JJM145199401.
	JJM 15519940	Vehicle maintenance sheets -Spanish	NLA		Use JJM155199401.
	JJM 115199401	Vehicle maintenance sheets -French	A/R		
	JJM 125199401	Vehicle maintenance sheets -Dutch	A/R		
	JJM 145199401	Vehicle maintenance sheets -Italian	A/R		
	JJM 155199401	Vehicle maintenance sheets -Spanish	A/R		

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JMM 100505	Diagnostics sytem user guide-English	A/R		
	JMM 110505	Diagnostics sytem user guide-French	NLA		
	JMM 120505	Diagnostics sytem user guide-Dutch	NLA		
	JMM 130505	Diagnostics sytem user guide-German	A/R		
	JMM 140505	Diagnostics sytem user guide-Italian	NLA		
	JMM 150505	Diagnostics sytem user guide-Spanish	NLA		
	JJM 170505	Diagnostics sytem user guide-Japanese	A/R		
	JMM 101205	Paint repair times -English	NLA		
	JMM 111205	Paint repair times -French	NLA		
	JMM 121205	Paint repair times -Dutch	NLA		
	JMM 131205	Paint repair times -German	NLA		
	JMM 141205	Paint repair times -Italian	NLA		
	JMM 151205	Paint repair times -Spanish	NLA		
	JJM 171205	Paint repair times -Japanese	NLA		
	JJM 180405	Maintenance handbook-North America	NLA		

COMPONENTS NOT DRAWN


TIE STRAPS AND PUSH-ON FIXES

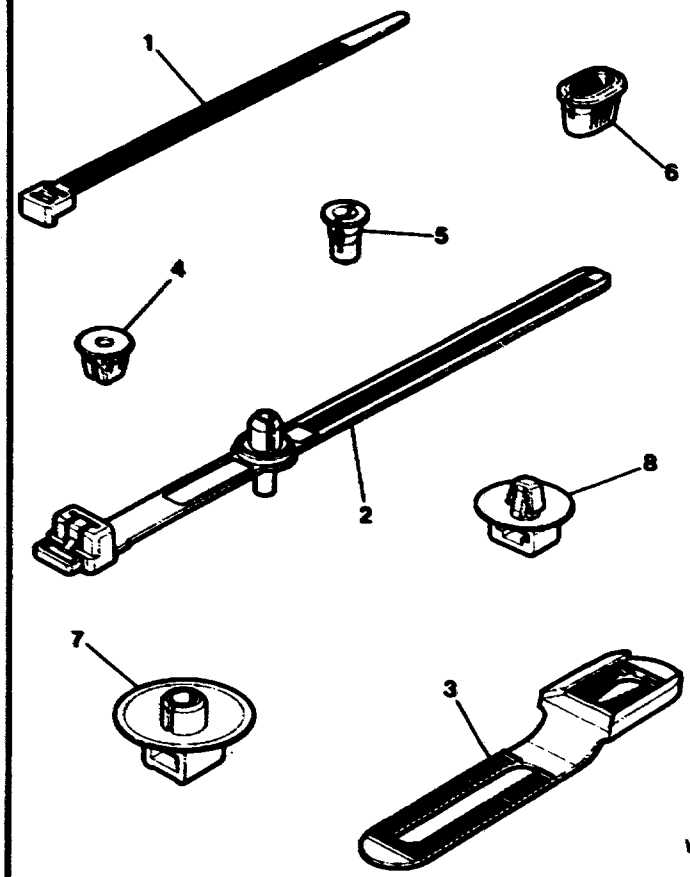

YS4963

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	C	45099	Tie strap-4"	A/R		
1	C	25969	Tie strap-4.75" long	A/R		
1	UKC	6684J	Tie strap-6"	A/R		
1	ADU	9028	Tie strap-7.75" long	A/R		
1	C	46294	Tie strap-10.75"	A/R		
1	UKC	6683J	Tie strap-15.75"	A/R		
2	AAU	3685J	Tie strap and push-on fix -7" long	A/R		
2	AAU	3686J	Tie strap and push-on fix -6" long	A/R		
3	C	39377	P-clip	A/R		
4	BBC	3242	Lokut nut-RH/LH	A/R		
	ACU	1612J	Push-in nut-black	A/R		
5	BCC	6181	Reverse lokut nut-no.6 round	A/R		
6	DRC	5582	Lokut nut	NLA		Use BD48954.
6	BD	48954	Lokut nut	A/R		
7	DBC	3206	Tie strap-1.25" diameter	A/R		
8	DBC	1870	Tie strap-0.875" diameter	A/R		

CLIPS AND FIXINGS

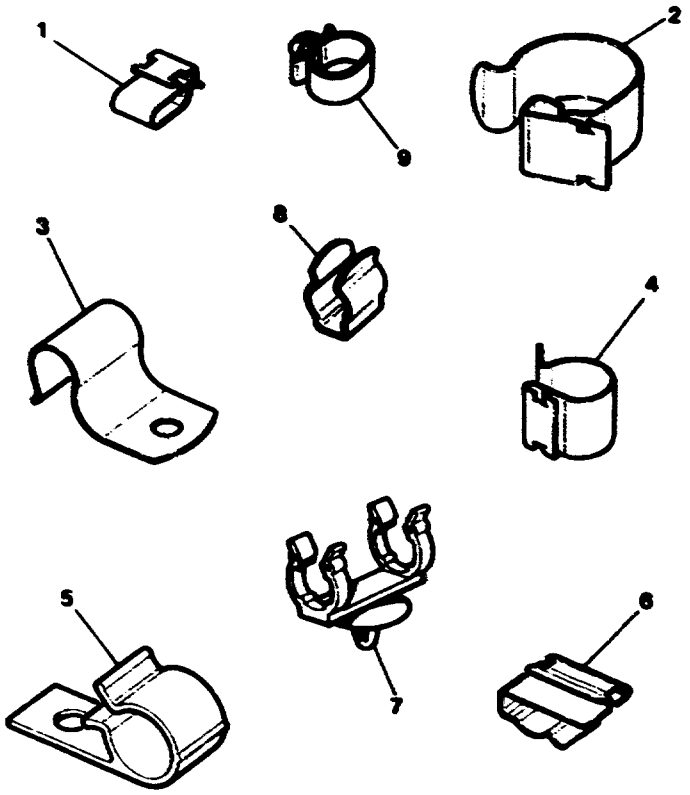

VS4962/8

Illus	Part Number		Description	Quantity	Change Point	Remarks
1	9	5837 J	Edge clip	A/R		
2	EAC	2421 3	Edge clip	A/R		
	AGU	2585	Cable clip	A/R		
3	DBC	3103	Harness clip-power seat	4		
4	BD	24519	Pipe clip-metal-0.25" diameter	A/R		
4	C	43844	Pipe clip-single-metal-0.375" diameter	A/R		
4	BD	26562	Pipe clip-metal-0.5" diameter	A/R		
5	ADU	8951 J	P-clip-0.5" diameter	A/R		
5	DBC	2847	P-clip-0.75" diameter	A/R		
6	AGU	1085	Edge clip	A/R		
7	DBC	5655	Connector clip	A/R		
8	C	38827	Single clip-single	A/R		
	C	38827 2	Retaining clip	A/R		
9	DBC	5832	Harness clip	A/R		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9755	Alloy wheel cleaner kit	NLA		No longer required ref Clayton Spencer.
	JLM 9829	Hide care-11oz jar	1		
	JLM 9830	Aerial cleaner	1		
	JLM 9885	Cassette cleaner	NLA		Use JLM10283.
	JLM 10283	Cassette cleaner	NLA		
	JLM 9867	Shampoo -300ml	NLA		Use JLM21227.
	JLM 9868	Polish -300ml	NLA		Use JLM21223.
	JLM 21223	Car wax	1		
	JLM 9869	Leather cleaner -300ml	NLA		Use JLM21230.
	JLM 21230	Leather cleaner	1		
	JLM 9871	Glass cleaner -300ml	NLA		Use JLM21226.
	JLM 21226	Glass cleaner	1		
	JLM 9872	Chrome polish -300ml	1		
	JLM 9876	Chamois leather	1		
	JLM 9877	Polishing cloth	1		
	JLM 9878	Sponge	1		
	JLM 9879	Anti mist wipe	1		
	JLM 9880	Ice scraper	1		
	JLM 9875	De-icer	1		
	RTC 1479	Final drive oil	A/R		
	JLM 10614	Powr-lok additive	A/R		
	605785 J	Corrosion inhibitor	A/R		
	12953	Radiator leak inhibitor	NLA		Use JLM636.
	JLM 636	Radiator leak inhibitor	A/R		

COMPONENTS NOT DRAWN

Illus	Part Number	Description	Quantity	Change Point	Remarks
	JLM 9705	WD40 spray-small container	NLA	.....	Use JLM10275.
	JLM 10275	Jaguar AC 90-200ml aerosol	A/R		
	JLM 9704	WD40 spray-large container	NLA	.....	Use JLM10276.
	JLM 10276	Jaguar AC 90-415ml aerosol	A/R		
	JLM 9708	WD40 fluid-5 litre container	NLA	.....	Use JLM97081.
	JLM 97081	Jaguar AC 90-5 litre container-can	A/R		
	JLM 9734	Jaguar AC 90-5 litre container-bottle	A/R		
	JLM 9709	Hylomar sealant -110g tube	A/R		
	JLM 9710	Hylosil sealant-RTV-110g tube	A/R		
	JLM 9822	Flange sealer-50ml tube	A/R		
	JLM 1227	Loctite 510 -50ml tube	A/R		
	JLM 1247	Loctite 574 -50ml tube	A/R		
	JLM 1746	Loctite 542 -50ml tube	A/R		
	JLM 1747	Loctite 638 -50ml tube	A/R		
	JLM 1748	Loctite studlock 270 -50ml tube	A/R		
	JLM 364	Engine oil -5 litre	A/R		
	JLM 10228	Final drive oil-500ml	NLA	.....	Use RTC1479.
	RTC 1479	Final drive oil	A/R		
	JLM 10228	Automatic gearbox oil-Dextron 2D-500ml	A/R		
	JLM 10227	Manual gearbox oil-EP80-500ml	A/R		
	JLM 9901	Brake fluid -500ml	NLA	.....	Use MNA7829AD.
	MNA 7829AD	Brake fluid -500ml	A/R		
	JLM 9902	Brake fluid -dot 4	NLA		
	JLM 9903	Brake fluid -dot 4	NLA		
	JLM 9874	Windscreen washer fluid -500ml	NLA		
	JLM 9882	Windscreen washer fluid -sachet	NLA	.....	Use JLM10150.
	JLM 10150	Windscreen washer fluid -Trico-100ml	NLA	.....	Use JLM11259.
	JLM 10151	Windscreen washer fluid -500ml	NLA	.....	Use DBC5178.
	DBC 5178	Windscreen washer fluid -500ml bottle	NLA	.....	Use JLM11259.
	JLM 10152	Windscreen washer fluid -5 litre container	NLA	.....	Use JLM11259.
	JLM 11259	Windscreen washer fluid -1 Litre container	NLA	.....	Use JLM11518.
	JLM 11518	Windscreen washer fluid -500ml	NLA	.....	Use JLM21228.
	JLM 21228	Windscreen washer fluid -sachet	A/R		
	JLM 10228	Automatic gearbox oil-Dextron 2D-500ml	A/R		
	JLM 9888	Hydraulic System Mineral Oil	A/R		

3845	2.H 12	AAU	4931	1.N 03	AB	610051 J	4.G 05	ADU	3208 J	5.C 15	AGU	1001	4.O 03	AGU	1498	4.G 05	AGU	2098 J	1.M 13	AGU	2494 J	1.E 06
3845	2.H 15	AAU	4931	4.K 04	AB	610051 J	4.G 18	ADU	3478	4.O 03	AGU	1004	2.C 13	AGU	1498	4.G 06	AGU	2098 J	1.M 14	AGU	2494 J	1.E 08
3860	2.H 12	AAU	4931 J	4.L 13	AB	610051 J	4.D 15	ADU	8951 J	5.F 08	AGU	1004	2.C 16	AGU	1501	2.K 02	AGU	2098 J	1.M 15	AGU	2505 J	4.N 07
3860	2.H 14	AAU	5884	2.J 10	AB	610051 J	4.D 11	ADU	8951 J	3.I 02	AGU	1004	2.C 15	AGU	1529	4.H 06	AGU	2098 J	1.M 03	AGU	2505 J	4.N 10
3861	2.H 12	AAU	5884	2.J 12	AB	610051 J	1.I 02	ADU	8951 J	4.D 18	AGU	1004	2.C 17	AGU	1533	2.G 03	AGU	2201	2.M 05	AGU	2507	4.H 15
3861	2.H 14	AAU	5884 J	2.K 04	AB	610061	2.K 07	ADU	8951 J	3.I 03	AGU	1004	2.C 18	AGU	1533	2.G 04	AGU	2201	2.M 04	AGU	2507	4.H 18
3862	2.H 12	AAU	5884 J	2.K 05	AB	610074 J	4.J 06	ADU	9028	5.F 07	AGU	1004	2.C 12	AGU	1534	3.J 07	AGU	2202	1.L 16	AGU	2521	4.K 02
3862	2.H 14	AAU	6008	2.G 05	AB	610081 J	4.H 10	ADU	9028	3.F 18	AGU	1018	4.H 10	AGU	1534	4.G 06	AGU	2202	2.K 07	AGU	2527 J	1.F 03
11099	2.H 12	AAU	6008	2.G 06	AB	612051 J	1.M 13	ADU	9028	3.F 06	AGU	1058	1.M 05	AGU	1548	4.G 18	AGU	2203 J	2.M 04	AGU	2527 J	1.K 04
11099	2.H 14	AB	604021 J	1.J 09	AB	612051 J	1.M 15	ADU	9028	1.J 12	AGU	1066	4.K 12	AGU	1548	2.J 10	AGU	2206	2.M 04	AGU	2527 J	1.J 07
12252	2.H 12	AB	604041 J	4.K 07	AB	612061 J	4.H 06	ADU	9028	1.J 14	AGU	1085	5.F 06	AGU	1548	2.J 12	AGU	2207	1.L 16	AGU	2527 J	1.J 06
12252	2.H 14	AB	604041 J	4.K 10	AC	604021 J	4.H 02	ADU	9028	3.J 05	AGU	1085	3.I 06	AGU	1815	4.N 14	AGU	2207	2.M 05	AGU	2527 J	1.K 05
12456	2.H 12	AB	606021 J	4.K 02	AC	604021 J	4.H 13	ADU	9028	4.G 17	AGU	1085	3.J 05	AGU	1815	4.N 17	AGU	2207 J	1.M 02	AGU	2530	4.H 09
12456	2.H 14	AB	606021 J	3.L 04	AC	604024 J	1.M 07	ADU	9028	4.E 03	AGU	1088	1.K 10	AGU	1859 1	2.M 15	AGU	2209 J	2.K 02	AGU	2532	1.I 05
12953	5.F 06	AB	606031 J	4.I 07	AC	604033 J	4.J 07	ADU	9028	3.E 05	AGU	1135 MJ	2.J 17	AGU	1863	4.G 06	AGU	2221 J	1.I 12	AGU	2536 J	1.K 07
511598	3.K 03	AB	606041 J	3.L 04	AC	604034 J	4.J 07	ADU	9028	1.N 04	AGU	1152	1.H 07	AGU	1863 J	4.G 13	AGU	2221 J	1.I 09	AGU	2536 J	1.J 07
513982 J	1.J 02	AB	606045 J	4.L 13	AC	604035 J	4.J 07	ADU	9028	1.N 05	AGU	1158	1.H 07	AGU	1866	3.F 03	AGU	2221 J	1.L 11	AGU	2536 J	1.J 06
582019 J	5.E 14	AB	606045 J	3.L 02	AC	604035 J	3.E 02	ADU	9028	1.J 13	AGU	1196 J	2.G 05	AGU	1870	1.J 12	AGU	2221 J	1.L 12	AGU	2540 J	4.K 02
605765 J	5.F 06	AB	606088 J	3.L 03	AC	604041 J	4.J 07	ADU	9028	2.I 08	AGU	1198 J	2.G 06	AGU	1875	2.C 14	AGU	2227	4.I 07	AGU	2544 J	4.N 07
606094 J	1.J 02	AB	606031 J	5.C 14	AC	606022 J	4.J 10	ADU	9028	2.I 09	AGU	1284 J	1.M 09	AGU	1875	2.C 16	AGU	2229 *1*	4.G 13	AGU	2544 J	4.N 10
3837 J	5.F 06	AB	606031 J	4.J 09	AC	606091 J	3.H 08	AE	604033 J	4.H 02	AGU	1285	1.M 10	AGU	1875	2.C 18	AGU	2229 *3*	4.H 06	AGU	2545 J	4.M 11
13H 489	4.N 02	AB	606031 J	2.I 10	AC	606033 J	4.J 07	AEU	1119	3.I 07	AGU	1329 J	1.M 13	AGU	1875 2J	2.C 12	AGU	2229 *5*	4.H 10	AGU	2550 J	4.G 13
13H 489 J	4.N 02	AB	606041 J	1.J 14	AC	606041 J	4.H 08	AEU	1364	3.K 02	AGU	1329 J	1.M 14	AGU	1877 *4*	4.G 04	AGU	2229 *5*	4.G 08	AGU	2551	2.I 17
13H 1453 J	4.K 18	AB	606041 J	4.H 11	AC	606044	4.N 05	AEU	1364	3.K 03	AGU	1329 J	1.M 15	AGU	1877 HEZ	4.G 04	AGU	2229 NDR	4.G 09	AGU	2565	5.F 08
13H 9056 J	2.M 15	AB	606044 J	4.H 06	AC	606044 J	4.N 05	AEU	1365	3.K 02	AGU	1329 J	1.J 05	AGU	1877 NDR	4.G 09	AGU	2230	4.H 15	AGU	2567	2.E 04
13H 9056 J	2.M 16	AB	606045 J	4.L 18	AC	606044 J	4.N 10	AEU	1365	3.K 03	AGU	1381	2.G 03	AGU	1895 J	1.L 02	AGU	2230	4.H 18	AGU	2577	4.G 12
13H 9559	4.E 03	AB	606051 J	1.J 14	AC	606044 J	4.I 08	AEU	1616 J	3.I 09	AGU	1381	2.G 04	AGU	1939 1	2.I 05	AGU	2231	4.I 14	AGU	2580	2.E 11
37H 6362 J	3.I 07	AB	606051 J	4.H 06	AC	606044 J	4.J 07	AEU	1672	3.I 08	AGU	1386	1.L 16	AGU	1939 1	2.I 06	AGU	2249 J	1.M 02	AGU	2598 J	4.M 09
53K 3039	4.H 10	AB	606051 J	4.H 15	AC	606051	4.L 13	AEU	1672 J	3.I 09	AGU	1386	1.M 05	AGU	1944	2.I 05	AGU	2272	4.J 03	AGU	2598 J	4.M 10
AA 606031	4.K 15	AB	606051 J	4.H 18	AC	606051 J	4.L 13	AEU	1687	3.C 09	AGU	1386	3.D 14	AGU	1944 1	2.I 05	AGU	2292	4.I 14	AGU	2608	2.G 17
AA 606031 J	4.K 06	AB	606051 J	4.H 11	AC	606051 J	4.K 04	AEU	1688 J	3.C 09	AGU	1386 J	1.L 16	AGU	1944 1	2.I 06	AGU	2292	4.J 03	AGU	2608	2.G 14
AA 606031 J	4.K 09	AB	606051 J	4.H 13	AC	606064 J	4.D 02	AEU	1689 J	3.C 09	AGU	1386 J	1.M 05	AGU	1966	4.K 06	AGU	2321	4.N 06	AGU	2613	2.J 18
AA 606031 J	3.K 03	AB	606054 J	4.I 06	AC	606011 J	4.D 02	AEU	1690 J	3.C 09	AGU	1386 J	3.D 14	AGU	1966	4.K 09	AGU	2321	4.N 11	AGU	2669	4.F 04
AA 606031 J	4.K 11	AB	606054 J	4.I 07	AC	606044 J	4.D 13	AEU	1691 J	3.C 09	AGU	1387	1.L 16	AGU	1966	4.K 14	AGU	2321	4.L 03	AGU	2669	1.I 10
AA 606031 J	4.K 13	AB	606054 J	4.J 07	AC	606051 J	4.C 07	AEU	1692	3.C 09	AGU	1387 J	1.M 05	AGU	2000	4.I 12	AGU	2351	1.M 02	AGU	2679 J	4.N 14
AA 606038 J	4.K 06	AB	606061 J	5.E 06	AC	606051 J	4.C 13	AEU	1693	3.C 09	AGU	1393	2.M 15	AGU	2000	4.I 13	AGU	2351	2.K 07	AGU	2679 J	4.N 17
AA 606038 J	4.K 09	AB	606061 J	4.C 07	AC	606074 J	4.C 07	AEU	1694 J	3.C 09	AGU	1411	1.J 14	AGU	2001	2.L 03	AGU	2351 J	1.M 02	AGU	2692	3.D 14
AA 606038 J	3.K 03	AB	606061 J	4.C 13	AC	606074 J	4.C 13	AEU	1695	3.C 09	AGU	1413 J	4.N 15	AGU	2011	4.H 06	AGU	2371	4.K 12	AGU	2719	2.J 07
AA 606038 J	4.K 11	AB	606065 J	5.E 06	ACU	1511	3.L 12	AEU	1696	3.C 09	AGU	1413 J	4.N 17	AGU	2016	3.F 06	AGU	2371	4.K 14	AGU	2748 J	2.I 04
AA 606038 J	4.K 13	AB	606081 J	4.H 15	ACU	1511	5.E 10	AEU	1697	3.C 09	AGU	1413 J	4.G 12	AGU	2020	4.K 07	AGU	2378	4.G 11	AH	610011	2.E 09
AA 606045 J	3.D 10	AB	606081 J	4.H 18	ACU	1511	5.E 11	AEU	1698	3.C 09	AGU	1413 J	4.J 04	AGU	2020	4.K 10	AGU	2382	4.H 15	AH	610011 J	2.E 09
AA 610051	4.K 06	AB	606122	4.D 02	ACU	1612 J	5.F 07	AEU	1699	3.C 09	AGU	1415	3.H 02	AGU	2020	4.K 12	AGU	2384	1.I 11	AJ	606021 J	3.L 02
AA 610051	4.K 09	AB	606141 J	4.H 17	ACU	2415	1.N 03	AEU	1858	3.C 09	AGU	1415	4.I 06	AGU	2020	4.K 14	AGU	2388	4.J 10	AJ	610011 J	4.G 18
AA 610051	4.K 13	AB	610031 J	4.J 15	ACU	3692	4.I 07	AEU	2786	2.I 07	AGU	1425 J	4.G 06	AGU	2022	2.D 03	AGU	2388 J	4.G 06	AJU	1034	4.I 07
AA 610051 J	3.F 16	AB	610041 J	1.I 13	ACU	4009 J	4.H 10	AEU	2787	2.I 07	AGU	1425 J	4.G 12	AGU	2028	4.N 02	AGU	2388 J	4.G 12	AJU	1136	4.G 12
AA 610051 J	3.F 02	AB	610041 J	1.I 12	ACU	6289	2.C 08	AEU	2997	2.I 04	AGU	1429	1.N 02	AGU	2050	4.M 06	AGU	2388 J	4.G 13	AJU	1136 J	4.H 15
AA 610051 J	4.K 06	AB	610041 J	1.I 17	AD	604033 J	4.H 02	AEU	4006	2.F 16	AGU	1467	4.I 14	AGU	2071	4.H 06	AGU	2388 J	4.I 07	AJU	1136 J	4.H 18
AA 610051 J	4.K 09	AB	610041 J	2.C 14	AD	606032 J	4.L 14	AEU	4006	2.F 17	AGU	1467	4.D 03	AGU	2071 J	2.K 02	AGU	2388 J	4.J 10	AJU	1136 J	4.H 10
AA 610051 J	4.G 18	AB	610041 J	2.C 16	AD	606043 J	4.D 13	AFU	1024	5.E 14	AGU	1467	4.C 07	AGU	2081 J	1.M 05	AGU	2388 J	3.K 03	AJU	2388 J	4.H 15
AA 610051 J	4.K 11	AB	610041 J	2.C 10	AD	606052 J	4.D 02	AFU	1154 J	4.J 15	AGU	1467	4.C 13	AGU	2091	3.C 08	AGU	2388 J	4.G 08	AK	606081 J	4.J 07
AA 610051 J	4.K 13	AB	610041 J	2.D 02	AD	606053 J	4.G 04	AFU	2538 J	1.J 14	AGU	1473	4.N 02	AGU	2083 J	2.E 09	AGU	2436 J	5.C 17	AK	606081 J	2.I 10
AAU 3885 J	5.F 07	AB	610041 J	4.K 07	ADL	1855	4.J 03	AFU	4137 J	4.G 13	AGU	1497	4.L 13	AGU	2098	4.H 08	AGU	2439 J	3.H 16	AK	606081 J	4.G 04
AAU 3886 J	5.F 07	AB	610041 J	3.J 07	ADU	1879 J	1.J 10	AFU	4137 J	4.J 10	AGU	1497	4.M 02	AGU	2097 J	1.M 02	AGU	2445 J	4.N 04	AK	606141 J	3.D 10
AAU 4931	3.L 05	AB	610041 J	2.E 11	ADU	2098	4.I 02	AFU	4137 J	4.G 08	AGU	1497	4.G 05	AGU	2097 J	1.M 03	AGU	2481	3.D 12	AK	606141 J	4.G 05
AAU 4931	3.D 12	AB	610051 J	1.J 14	ADU	2898 J	3.L 03	AGU	1001	4.N 17	AGU	1497	4.H 06	AGU	2098 J	1.M 02	AGU	2485 J	4.K 09	AK	606161 J	4.G 12

AK 610011 J 2.C 14
AK 610011 J 2.C 16
AK 610011 J 2.C 10
AK 610011 J 2.D 09
AK 610020 4.I 15
AK 610021 J 4.G 05
AK 610021 J 4.D 15
AK 610021 J 4.D 11
AK 610051 J 4.G 05
AN 103011 J 4.G 17
AN 103011 J 4.H 06
AN 103121 J 4.J 05
AN 104041 J 4.L 14
AN 104041 J 4.L 15
AN 604061 J 4.I 07
AN 604061 J 2.I 11
AN 604061 J 2.I 13
AN 604061 J 2.I 14
AN 604061 J 2.I 12
AR 608021 J 4.G 17
AR 608021 J 3.E 06
AR 608051 J 4.L 15
AR 608051 J 3.H 09
AR 608063 J 4.J 14
AR 610021 J 1.J 13
AR 612051 J 3.J 05
ARA 1501 J 1.M 06
ARA 1501 J 1.M 10
ARA 1502 J 1.M 06
ARA 1502 J 1.M 10
ATA 7166 2.H 12
ATA 7166 2.H 14
AUC 1358 J 1.L 04
AUC 1358 J 1.L 05
AUC 1358 J 1.L 06
AUC 1358 J 1.L 0.
AV 608081 J 4.J 02
AV 608081 J 4.G 11
AZ 610041 J 2.M 07
AZ 610051 2.E 06
AZ 610051 J 2.E 06
AZ 612084 J 4.G 13
AZ 614041 J 4.D 13
AZ 614051 J 1.F 04
AZ 614085 J 5.C 17
BAC 1215 4.G 18
BAC 1658 4.L 03
BAC 2698 4.D 02
BAC 2698 4.D 05
BAC 2698 4.C 06
BAC 2698 4.C 12
BAC 2736 4.G 17
BAC 2816 4.M 04
BAC 3624 4.G 18
BAC 3787 4.D 17
BAC 4303 5.C 02
BAC 4304 5.C 07
BAC 4307 5.C 02
BAC 4307 5.C 15
BAC 4308 5.C 02
BAC 4319 5.C 02
BAC 4319 5.C 15
BAC 4520 4.D 02
BAC 4520 4.D 09
BAC 4520 4.C 06
BAC 4520 4.C 12
BAC 4789 4.N 14
BAC 4789 4.N 17
BAC 4802 4.N 03
BAC 5090 4.L 17
BAC 5091 4.L 17
BAC 5098 4.M 04
BAC 5098 4.L 17
BAC 5102 4.N 05
BAC 5300 4.K 09
BAC 5322 4.O 03
BAC 5323 4.O 03
BAC 5516 4.I 05
BAC 5843 4.K 10
BAC 5843 4.K 14
BAC 5885 J 4.N 05
BAC 6032 4.K 02
BAC 6194 4.I 02
BAC 6220 4.L 17
BAC 6224 4.K 05
BAC 6224 4.K 08
BAC 6240 4.N 14
BAC 6240 4.N 17
BAC 6240 4.H 15
BAC 6240 4.H 18
BAC 6294 4.K 11
BAC 6294 4.K 13
BAC 6301 4.K 11
BAC 6301 4.K 13
BAC 6351 4.I 05
BAC 6351 4.J 07
BAC 6354 4.J 08
BAC 6416 4.K 18
BAC 6450 4.I 05
BAC 6484 4.K 07
BAC 6484 4.K 10
BAC 6484 4.K 12
BAC 6484 4.K 14
BAC 6495 4.K 07
BAC 6495 4.K 10
BAC 6503 4.J 09
BAC 6508 4.I 18
BAC 6509 4.I 18
BAC 6512 4.J 02
BAC 6513 4.J 02
BAC 6514 4.J 02
BAC 6515 4.J 02
BAC 6525 3.L 12
BAC 6525 4.J 03
BAC 6543 4.K 10
BAC 6543 4.K 12
BAC 6543 4.K 14
BAC 6544 4.K 07
BAC 6544 4.K 10
BAC 6544 4.K 12
BAC 6544 4.K 14
BAC 6616 AEF 4.I 15
BAC 6616 LEA 4.I 15
BAC 6620 "R" 4.I 10
BAC 6621 "R" 4.I 10
BAC 6646 4.L 13
BAC 6646 4.K 04
BAC 6647 4.L 13
BAC 6647 4.K 04
BAC 6758 4.D 02
BAC 6758 4.D 03
BAC 6758 4.C 06
BAC 6758 4.C 12
BAC 6832 4.J 08
BAC 6836 4.M 08
BAC 6837 4.M 08
BAC 6919 4.J 04
BAC 7013 2.I 11
BAC 7013 2.I 13
BAU 2043 3.E 02
BAU 2135 2.I 07
BAU 2137 2.I 07
BAU 4781 A 2.G 07
BAU 4781 A 2.G 08
BBC 1198 4.D 16
BBC 1198 4.D 18
BBC 1223 4.K 13
BBC 1293 4.L 05
BBC 1294 4.L 05
BBC 1295 4.L 05
BBC 1380 5.C 06
BBC 1462 4.I 12
BBC 1490 4.I 07
BBC 1543 3.J 07
BBC 1555 4.K 03
BBC 1602 4.J 12
BBC 1603 4.J 12
BBC 1614 4.I 16
BBC 1614 3.K 14
BBC 1614 3.K 16
BBC 1716 4.G 06
BBC 1760 4.N 16
BBC 1872 4.N 17
BBC 1872 4.O 03
BBC 1977 4.F 04
BBC 2176 AEE 4.G 07
BBC 2176 LDY 4.G 07
BBC 2177 AEE 4.G 07
BBC 2177 LDY 4.G 07
BBC 2298 4.K 06
BBC 2298 4.K 09
BBC 2298 4.K 11
BBC 2298 4.K 13
BBC 2534 1.J 16
BBC 2550 2 5.C 03
BBC 2550 2 5.C 15
BBC 2550 3 5.C 03
BBC 2550 5 5.D 02
BBC 2550 5 5.C 03
BBC 2550 7 5.D 02
BBC 2550 7 5 C 03
BBC 2550 9 5.C 03
BBC 2551 5.D 02
BBC 2551 5.C 03
BBC 2663 4.K 07
BBC 2663 4.K 10
BBC 2855 4.N 05
BBC 2856 4.J 04
BBC 2875 4.F 05
BBC 2875 4.F 07
BBC 2936 4.F 05
BBC 2936 4.F 07
BBC 2936 AGD 4.F 05
BBC 2936 HEZ 4.F 05
BBC 2936 LDY 4.J 10
BBC 2936 SDC 4.J 10
BBC 2936 XE 4.J 10
BBC 2987 4.O 03
BBC 3036 4.D 18
BBC 3037 4.D 18
BBC 3054 4.D 13
BBC 3082 4.K 13
BBC 3124 "R" 4.I 10
BBC 3125 "R" 4.I 10
BBC 3126 "R" 4.I 10
BBC 3127 "R" 4.I 10
BBC 3185 4.K 12
BBC 3234 4.N 06
BBC 3234 4.N 11
BBC 3242 5.F 07
BBC 3242 4.N 15
BBC 3242 4.N 17
BBC 3242 3.F 18
BBC 3242 1.J 10
BBC 3242 4.H 15
BBC 3242 4.H 18
BBC 3242 4.H 10
BBC 3242 1.I 02
BBC 3282 4.K 02
BBC 3691 4.F 07
BBC 3708 4.I 04
BBC 3796 4.K 05
BBC 3798 4.K 11
BBC 3799 4.K 08
BBC 3799 4.K 13
BBC 3826 4.N 15
BBC 3826 4.N 17
BBC 3882 4.K 18
BBC 3884 4.I 12
BBC 3888 4.I 12
BBC 3934 4.G 05
BBC 3935 4.G 05
BBC 3950 4.K 03
BBC 3954 4.M 04
BBC 3958 4.M 04
BBC 3987 4.N 02
BBC 4148 4.M 04
BBC 4149 4.M 04
BBC 4150 4.M 04
BBC 4199 4.K 10
BBC 4199 4.K 14
BBC 4218 4.D 16
BBC 4218 4.D 18
BBC 4219 4.D 16
BBC 4219 4.D 18
BBC 4259 4.O 05
BBC 4330 4.K 08
BBC 4358 5.C 02
BBC 4361 5.C 02
BBC 4361 5.C 15
BBC 4464 4.J 08
BBC 4474 4.G 17
BBC 4540 5.C 17
BBC 4541 5.C 17
BBC 4583 4.D 16
BBC 4589 4.J 08
BBC 4590 5.D 02
BBC 4590 4.L 03
BBC 4624 4.L 05
BBC 4625 4.L 05
BBC 4689 4.H 07
BBC 4742 4.K 05
BBC 4742 4.K 09
BBC 4743 4.K 11
BBC 4743 4.K 13
BBC 4761 4.D 02
BBC 4761 4.D 03
BBC 4766 "4" 4.G 04
BBC 4767 "4" 4.G 04
BBC 4770 4.L 14
BBC 4789 4.H 06
BBC 4795 4.G 02
BBC 4797 4.L 04
BBC 4798 4.D 02
BBC 4798 4.D 03
BBC 4798 4.C 07
BBC 4798 4.C 13
BBC 4800 4.N 02
BBC 4801 4.N 02
BBC 4830 LZ 4.H 05
BBC 4831 4.H 05
BBC 4842 4.G 03
BBC 4843 4.G 03
BBC 4861 1 5.C 13
BBC 4861 1 5.C 17
BBC 4861 1 3.F 03
BBC 4861 1 4.G 17
BBC 4861 1 4.I 04
BBC 4861 4 5.C 13
BBC 4861 5 5.C 13
BBC 4861 7 4.I 07
BBC 4928 4.G 02
BBC 4938 5.C 17
BBC 4938 4.K 04
BBC 4939 5.C 17
BBC 4939 4.K 04
BBC 4980 4.J 02
BBC 4981 4.J 02
BBC 5082 4.N 02
BBC 5083 4.N 02
BBC 5086 4.N 02
BBC 5087 4.N 02
BBC 5139 4.L 03
BBC 5154 3.C 08
BBC 5155 4.L 03
BBC 5166 4.N 08
BBC 5172 LEG 3.C 08
BBC 5250 3.J 07
BBC 5402 4.L 10
BBC 5403 4.L 10
BBC 5404 4.L 12
BBC 5405 4.L 12
BBC 5408 4.L 10
BBC 5409 4.L 10
BBC 5410 4.L 12
BBC 5411 4.L 12
BBC 5414 4.L 10
BBC 5415 4.L 10
BBC 5416 4.L 12
BBC 5417 4.L 12
BBC 5420 4.L 10
BBC 5421 4.L 10
BBC 5422 4.L 12
BBC 5423 4.L 12
BBC 5490 4.I 16
BBC 5530 4.G 02
BBC 5531 4.G 02
BBC 5604 4.K 03
BBC 5682 4.L 14
BBC 5683 4.L 14
BBC 5689 4.M 04
BBC 5689 4.L 17
BBC 6050 3.C 06
BBC 6054 3.C 06
BBC 6097 4.H 06
BBC 6165 "C" 4.C 18
BBC 6165 "C" 4.C 06
BBC 6165 "C" 4.C 12
BBC 6166 "A" 4.C 06
BBC 6166 "A" 4.C 12
BBC 6174 "C" 4.D 02
BBC 6174 "C" 4.C 06
BBC 6174 "C" 4.C 12
BBC 6175 "C" 4.D 02
BBC 6175 "C" 4.C 06
BBC 6175 "C" 4.C 12
BBC 6179 4.K 02
BBC 6189 4.K 02
BBC 6470 "4" 4.H 11
BBC 6470 NDR 4.H 16
BBC 6471 "4" 4.H 11
BBC 6471 NDR 4.H 16
BBC 6483 4.K 02
BBC 6484 4.K 03
BBC 6485 4.K 03
BBC 6486 4.K 02
BBC 6487 4.K 02
BBC 6490 4.K 02
BBC 6491 4.K 02
BBC 6492 4.K 02
BBC 6493 4.K 02
BBC 6496 4.K 02
BBC 6497 4.K 02
BBC 6498 4.K 02
BBC 6499 4.K 03
BBC 6499 "4" 4.G 04
BBC 6521 LZ 4.C 06
BBC 6521 LZ 4.C 12
BBC 6549 LZ 4.J 15
BBC 6591 "4" 4.H 08
BBC 6626 4.J 05
BBC 6627 4.J 05
BBC 6628 4.J 06
BBC 6628 4.J 07
BBC 6629 4.J 06
BBC 6635 4.J 06
BBC 6637 4.J 06
BBC 6639 4.J 06
BBC 6749 4.H 05
BBC 6810 4.C 06
BBC 6810 4.C 12
BBC 6830 4.N 15
BBC 6830 4.N 17
BBC 6877 4.I 12
BBC 6877 4.I 13
BBC 6882 4.N 10
BBC 6893 4.N 10
BBC 7032 4.D 18
BBC 7033 4.D 18
BBC 7054 4.H 02
BBC 7058 "1" 4.H 02
BBC 7082 4.H 02
BBC 7074 4.J 04
BBC 7087 4.K 06
BBC 7087 4.K 09
BBC 7088 4.K 12
BBC 7088 4.K 14
BBC 7096 4.K 06
BBC 7096 4.K 09
BBC 7097 4.K 06
BBC 7097 4.K 09
BBC 7222 LDY 4.G 17
BBC 7222 XE 4.G 17
BBC 7222 XE 3.L 06
BBC 7248 4.J 12
BBC 7249 4.N 03
BBC 7314 4.H 05
BBC 7428 ND 4.G 16
BBC 7458 "5" 4.H 08
BBC 7459 "5" 4.H 08
BBC 7491 4.N 16
BBC 7525 "8" 4.H 15
BBC 7525 CEM 4.H 15
BBC 7525 NDR 4.H 16
BBC 7525 SDC 4.H 16
BBC 7531 PA 4.G 17
BBC 7643 4.J 06
BBC 7757 LDY 4.K 02
BBC 7757 NDD 4.K 02
BBC 7768 4.O 03
BBC 7769 4.O 03
BBC 7776 4.O 03
BBC 7777 4.O 03
BBC 7803 "5" 4.D 13
BBC 7806 "C" 4.D 10
BBC 7807 "C" 4.D 10
BBC 7808 "5" 4.D 13
BBC 7809 "5" 4.D 13
BBC 7825 4.D 13
BBC 7827 4.D 13
BBC 7828 4.D 13
BBC 7831 "C" 4.D 11
BBC 7835 "5" 4.D 13
BBC 7840 "C" 4.D 12
BBC 7841 "C" 4.D 12
BBC 7873 4.L 14
BBC 7884 "C" 4.D 05
BBC 7884 "C" 4.D 06
BBC 7885 "A" 4.D 04
BBC 7885 "A" 4.D 06

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

G03
Fiche 5

NUMERIC INDEX "BBC 7880"C"" TO "BCC 7046"

BBC	7880 "C"	4.D 05	BBC	9001	4.N 16	BBC	9865 "5"	4.H 10	BCC	2468	4.I 18	BCC	3841 "A"	4.C 02	BCC	4766 "A"	4.C 03	BCC	5275 LZ	4.C 13	BCC	5977	4.M 04
BBC	7880 "C"	4.D 06	BBC	9002	4.N 16	BBC	9865	4.K 08	BCC	2533	4.H 05	BCC	3841 "A"	4.C 06	BCC	4766 "A"	4.C 09	BCC	5316	4.N 05	BCC	5978	5.C 14
BBC	7881 "A"	4.D 05	BBC	9003	4.N 16	BBC	9743	4.O 03	BCC	2534	4.H 05	BCC	3868 "C"	4.C 05	BCC	4767 "A"	4.C 04	BCC	5317	4.N 05	BCC	5983	4.K 06
BBC	7881 "A"	4.D 06	BBC	9016	4.L 13	BBC	9766 "4"	4.G 04	BCC	2625	4.L 17	BCC	3868 "C"	4.C 11	BCC	4767 "A"	4.C 10	BCC	5318	4.N 06	BCC	5991	4.O 05
BBC	7883 "C"	4.D 06	BBC	9017	4.L 13	BBC	9767 "4"	4.G 04	BCC	2626	4.M 04	BCC	3869 "A"	4.C 05	BCC	4768 "C"	4.C 04	BCC	5319	4.N 06	BCC	6056	4.N 11
BBC	7883 "C"	4.D 09	BBC	9033	4.O 03	BBC	9828	4.H 05	BCC	2626	4.M 05	BCC	3869 "A"	4.C 11	BCC	4768 "C"	4.C 10	BCC	5320	4.N 05	BCC	6098 "3"	4.H 04
BBC	7884 "A"	4.D 06	BBC	9033	4.H 14	BBC	9868	4.H 06	BCC	2626	4.L 17	BCC	4076	4.D 16	BCC	4769 "C"	4.C 04	BCC	5321	4.N 05	BCC	6101 LZ	4.J 16
BBC	7884 "A"	4.D 09	BBC	9033	4.H 17	BBC	9875	4.L 06	BCC	2690	4.G 03	BCC	4077	4.D 16	BCC	4769 "C"	4.C 10	BCC	5322	4.N 06	BCC	6178 "4"	4.H 11
BBC	7912 "C"	4.D 04	BBC	9054	4.I 06	BBC	9876	4.L 07	BCC	2691	4.G 03	BCC	4078	4.D 16	BCC	4770 "A"	4.C 04	BCC	5323	4.N 06	BCC	6179 "4"	4.H 11
BBC	7912 "C"	4.D 07	BBC	9137	4.D 02	BBC	9877	4.L 06	BCC	2728	4.L 16	BCC	4079	4.D 16	BCC	4770 "A"	4.C 10	BCC	5328 AEE	4.G 06	BCC	6181	5.F 07
BBC	7913 "A"	4.D 04	BBC	9138	4.H 06	BBC	9888	4.L 06	BCC	2731	4.L 16	BCC	4080	4.D 16	BCC	4771 "A"	4.C 04	BCC	5328 LDY	4.G 06	BCC	6181	1.M 07
BBC	7913 "A"	4.D 07	BBC	9188	3.C 06	BBC	9889	4.L 06	BCC	2852	4.N 05	BCC	4080	4.I 02	BCC	4771 "A"	4.C 10	BCC	5389	4.K 14	BCC	6181	4.L 04
BBC	7915 "C"	4.D 04	BBC	9189	3.C 06	BBC	9890	4.L 06	BCC	2853	4.N 05	BCC	4116 "C"	4.C 17	BCC	4772 "C"	4.C 05	BCC	5449 "3"	4.J 15	BCC	6239	4.H 07
BBC	7915 "C"	4.D 07	BBC	9308 "3"	4.H 04	BBC	9891	4.L 06	BCC	2854	4.N 05	BCC	4117 "C"	4.C 17	BCC	4772 "C"	4.C 11	BCC	5462 "C"	4.C 18	BCC	6244 "C"	4.D 12
BBC	7916 "A"	4.D 04	BBC	9333 "C"	4.D 12	BBC	9892	4.L 06	BCC	2855	4.N 05	BCC	4136	4.N 05	BCC	4773 "C"	4.C 05	BCC	5463 "C"	4.D 02	BCC	6244 "C"	4.D 06
BBC	7916 "A"	4.D 07	BBC	9333 "C"	4.D 06	BBC	9904	5.C 13	BCC	2898	4.I 18	BCC	4137	4.N 05	BCC	4773 "C"	4.C 11	BCC	5464 "C"	4.C 06	BCC	6244 "C"	4.D 09
BBC	7934	4.J 05	BBC	9333 "C"	4.D 09	BBC	9905	5.C 13	BCC	2899	4.I 18	BCC	4164 AE	4.G 06	BCC	4796	4.G 05	BCC	5464 "C"	4.C 12	BCC	6245 "A"	4.D 12
BBC	7940	3.C 06	BBC	9334 "A"	4.D 05	BBC	9908	5.C 13	BCC	2900	4.N 06	BCC	4165 AE	4.G 06	BCC	4810	4.L 18	BCC	5465 "C"	4.C 06	BCC	6245 "A"	4.D 05
BBC	7948 "C"	4.D 10	BBC	9334 "A"	4.D 09	BBC	9912 "3"	4.H 12	BCC	2901	4.N 06	BCC	4180 "4"	4.H 14	BCC	4811	4.L 18	BCC	5465 "C"	4.C 12	BCC	6245 "A"	4.D 09
BBC	7949 "C"	4.D 11	BBC	9337	4.G 06	BBC	9913 "3"	4.H 12	BCC	2902	4.N 11	BCC	4181 "4"	4.H 14	BCC	4852	4.L 05	BCC	5588	4.J 05	BCC	6248	4.D 02
BBC	7974	4.H 02	BBC	9338 "3"	4.H 14	BBC	9918 "3"	4.H 12	BCC	2903	4.N 11	BCC	4186 "4"	4.H 17	BCC	4853	4.L 05	BCC	5595 "3"	4.H 04	BCC	6248	4.C 07
BBC	7976	4.H 02	BBC	9339 "3"	4.H 14	BBC	9919 "3"	4.H 12	BCC	2904	4.N 11	BCC	4187 "4"	4.H 17	BCC	4866	4.M 03	BCC	5600	4.I 12	BCC	6248	4.C 13
BBC	8355	4.K 03	BBC	9340 "3"	4.H 17	BBC	9955	4.O 05	BCC	2905	4.N 11	BCC	4206	4.M 06	BCC	4867	4.M 03	BCC	5741 LZ	4.G 14	BCC	6249	4.D 02
BBC	8408	4.J 08	BBC	9341 "3"	4.H 17	BBC	9955	4.I 16	BCC	2920	4.N 06	BCC	4207	4.M 06	BCC	4868	4.M 03	BCC	5741 XE	4.G 14	BCC	6249	4.C 07
BBC	8408	4.J 09	BBC	9350	4.L 06	BBC	9968	4.G 05	BCC	2921	4.N 06	BCC	4208	4.M 06	BCC	4876	4.M 02	BCC	5752	4.O 04	BCC	6249	4.C 13
BBC	8425	4.J 09	BBC	9351	4.L 06	BBC	9985	4.N 04	BCC	2946 "C"	4.C 18	BCC	4209	4.M 07	BCC	4878 "A"	4.C 02	BCC	5752	3.F 02	BCC	6251	3.J 07
BBC	8435	4.J 02	BBC	9352	4.L 09	BBC	9988	4.H 06	BCC	3442	4.O 02	BCC	4210	4.M 07	BCC	4878 "A"	4.C 06	BCC	5753	4.O 04	BCC	6322	4.K 03
BBC	8546 "3"	4.H 13	BBC	9353	4.L 09	BCC	1002	4.H 09	BCC	3443	4.O 02	BCC	4211	4.M 07	BCC	4880 "C"	4.C 02	BCC	5753	3.F 02	BCC	6400	4.I 05
BBC	8589	4.M 04	BBC	9354	4.L 06	BCC	1014	3.J 07	BCC	3446	4.O 02	BCC	4212	4.M 06	BCC	4880 "C"	4.C 06	BCC	5754	4.O 04	BCC	6535 "J"	4.I 17
BBC	8589	4.L 17	BBC	9355	4.L 06	BCC	1015	4.J 06	BCC	3606 AEE	4.G 10	BCC	4213	4.M 07	BCC	4884 "C"	4.C 14	BCC	5755	4.O 04	BCC	6536 "J"	4.I 17
BBC	8601	4.L 13	BBC	9356	4.L 09	BCC	1016	4.J 15	BCC	3606 LDY	4.G 10	BCC	4215	4.M 06	BCC	4900 "C"	4.C 16	BCC	5756	4.O 04	BCC	6537 "J"	4.I 17
BBC	8601	4.K 04	BBC	9357	4.L 09	BCC	1017	3.J 07	BCC	3607 AEE	4.G 10	BCC	4217	4.M 06	BCC	5036	4.H 07	BCC	5756	3.F 02	BCC	6624	1.M 07
BBC	8620	4.G 17	BBC	9358	4.L 06	BCC	1028	4.L 06	BCC	3607 LDY	4.G 10	BCC	4218	4.M 07	BCC	5051	4.H 06	BCC	5757	4.O 04	BCC	6624	4.K 16
BBC	8621 1	4.I 07	BBC	9359	4.L 06	BCC	1029	4.N 04	BCC	3606 AEE	4.G 10	BCC	4219	4.M 07	BCC	5055	4.M 05	BCC	5757	3.F 02	BCC	6624	4.L 02
BBC	8624	4.O 02	BBC	9360	4.L 09	BCC	2082	4.D 17	BCC	3606 LDY	4.G 10	BCC	4221	4.M 07	BCC	5055	4.L 17	BCC	5758	4.O 04	BCC	6660	4.I 05
BBC	8625	4.O 02	BBC	9361	4.L 09	BCC	2082	4.C 07	BCC	3609 AEE	4.G 11	BCC	4222	4.M 07	BCC	5056	4.M 04	BCC	5759	4.O 04	BCC	6661	4.I 05
BBC	8644	4.N 14	BBC	9362	4.L 06	BCC	2082	4.C 13	BCC	3609 LDY	4.G 11	BCC	4223	4.M 07	BCC	5058	4.M 04	BCC	5772	4.G 05	BCC	6680 "3"	4.H 04
BBC	8644	4.N 17	BBC	9365	4.L 06	BCC	2104	4.F 05	BCC	3627	4.N 03	BCC	4254	3.D 10	BCC	5096	4.L 04	BCC	5806	4.K 15	BCC	6681 "3"	4.H 04
BBC	8644	4.H 15	BBC	9364	4.L 09	BCC	2104	4.F 07	BCC	3645	4.K 05	BCC	4255	3.D 10	BCC	5097	4.L 04	BCC	5807	4.K 15	BCC	6692	4.I 18
BBC	8644	4.H 18	BBC	9365	4.L 09	BCC	2164	4.D 16	BCC	3684	4.J 04	BCC	4445	4.L 03	BCC	5123	4.K 18	BCC	5808	4.K 15	BCC	6693	4.I 18
BBC	8645	4.N 14	BBC	9372 "3"	4.H 13	BCC	2164	4.D 18	BCC	3684	4.L 05	BCC	4464	4.L 15	BCC	5126 "3"	4.J 15	BCC	5809	4.K 15	BCC	6742	3.C 02
BBC	8645	4.N 17	BBC	9373 "3"	4.H 13	BCC	2242 LDY	4.J 11	BCC	3685	4.L 05	BCC	4465	4.L 15	BCC	5127 "3"	4.J 15	BCC	5810	4.K 15	BCC	6744 "3"	4.H 12
BBC	8645	4.H 15	BBC	9433	4.I 14	BCC	2242 XE	4.J 11	BCC	3690	4.G 02	BCC	4466	4.K 07	BCC	5162	4.I 12	BCC	5811	4.K 15	BCC	6745 "3"	4.H 12
BBC	8645	4.H 18	BBC	9485	4.H 10	BCC	2243 LDY	4.J 11	BCC	3691	4.F 05	BCC	4472	4.N 11	BCC	5162	4.I 13	BCC	5812	4.K 15	BCC	6752 "3"	4.H 12
BBC	8735 "3"	4.H 04	BBC	9486	4.H 10	BCC	2243 SDC	4.J 11	BCC	3705	4.O 03	BCC	4474	4.I 05	BCC	5164	4.I 12	BCC	5813	4.K 15	BCC	6753 "3"	4.H 12
BBC	8736 "3"	4.H 04	BBC	9487	4.H 10	BCC	2243 XE	4.J 11	BCC	3709	4.O 03	BCC	4475	4.I 05	BCC	5164	4.I 13	BCC	5824	4.N 02	BCC	6764 "3"	4.H 13
BBC	8899	4.L 14	BBC	9492	4.K 11	BCC	2359	4.M 02	BCC	3729	4.L 02	BCC	4484 "2"	4.G 08	BCC	5167	4.I 12	BCC	5923	4.G 05	BCC	6765 "3"	4.H 13
BBC	8972	4.H 06	BBC	9492	4.K 13	BCC	2404	4.L 14	BCC	3730	4.L 02	BCC	4485 "2"	4.G 08	BCC	5167	4.I 13	BCC	5944 "1"	4.H 10	BCC	7042	4.N 14
BBC	8973	4.H 06	BBC	9535	4.O 03	BCC	2405	4.L 14	BCC	3792	4.I 05	BCC	4721	4.D 16	BCC	5274 LZ	4.D 02	BCC	5945 "1"	4.H 10	BCC	7042	4.N 16
BBC	8976 "5"	4.H 06	BBC	9536	4.K 02	BCC	2442	4.J 06	BCC	3794	4.I 04	BCC	4722	4.D 16	BCC	5274 LZ	4.D 03	BCC	5950	4.I 16	BCC	7043	4.N 14
BBC	8977 "5"	4.H 06	BBC	9537	4.K 02	BCC	2444	4.H 15	BCC	3796	4.I 03	BCC	4723	4.D 16	BCC	5274 LZ	4.C 07	BCC	5968	4.N 08	BCC	7043	4.N 16
BBC	8981	4.G 16	BBC	9578	4.N 10	BCC	2444	4.H 18	BCC	3797	4.I 03	BCC	4724	4.D 16	BCC	5274 LZ	4.C 13	BCC	5969	4.N 08	BCC	7044	4.N 14
BBC	8999	4.K 05	BBC	9579	4.N 10	BCC	2446	5.C 17	BCC	3837	4.G 08	BCC	4725	4.D 16	BCC	5275 LZ	4.D 02	BCC	5970	4.N 08	BCC	7044	4.N 16
BBC	8999	4.K 06	BBC	9580	4.J 03	BCC	2466	4.I 18	BCC	3840 "C"	4.C 03	BCC	4760 "C"	4.C 17	BCC	5275 LZ	4.D 03	BCC	5971	4.N 09	BCC	7045	4.N 14
BBC	9000	4.N 16	BBC	9864 "5"	4.H 10	BCC	2467	4.I 18	BCC	3840 "C"	4.C 09	BCC	4761 "C"	4.C 17	BCC	5275 LZ	4.C 07	BCC	5973	4.M 04	BCC	7045	4.N 16

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

G04
Fiche 5

NUMERIC INDEX "BCC 7046" TO "BDC 5710*C*"

BCC	7046	4.J 05	BCC	7981 *S*	4.I 11	BCC	8557	4.M 09	BD	541 48	1.E 08	BD	36787 11	5.C 13	BD	48954	4.K 04	BDC	3824	4.M 06	BDC	4856	4.K 10
BCC	7200	4.L 15	BCC	7982 *S*	4.I 12	BCC	8558	4.M 09	BD	542 10	4.K 11	BD	36787 12	5.C 13	BD	48956	4.M 08	BDC	3825	4.M 06	BDC	4857	4.K 10
BCC	7200	4.K 04	BCC	7983 *S*	4.I 12	BCC	8559	4.M 09	BD	542 10	4.K 12	BD	37071	4.G 06	BD	48960	4.N 05	BDC	3826	4.M 06	BDC	4858	4.N 06
BCC	7212	4.L 14	BCC	7990	4.J 02	BCC	8559	4.M 10	BD	542 10	4.K 13	BD	37521	5.C 03	BD	48960	4.N 10	BDC	3827	4.M 07	BDC	4858	4.N 11
BCC	7281	4.J 04	BCC	8005	4.K 10	BCC	8560	4.M 09	BD	542 10	4.K 14	BD	37523	4.I 14	BD	48962 1	4.K 10	BDC	3828	4.M 07	BDC	4858	4.L 03
BCC	7284	4.K 05	BCC	8005	3.M 05	BCC	8561	4.M 09	BD	542 12	5.C 17	BD	37523	4.G 06	BD	48963	4.N 05	BDC	3829	4.M 07	BDC	4862	4.K 07
BCC	7284	4.K 06	BCC	8005	2.I 09	BCC	8562	4.M 09	BD	542 12	4.L 15	BD	39809	4.N 18	BD	48963	4.N 09	BDC	3830	4.M 06	BDC	4862	4.K 10
BCC	7285	4.K 05	BCC	8012	4.D 18	BCC	8563	4.M 09	BD	542 12	4.K 04	BD	43367 1	4.D 02	BD	48963	4.I 06	BDC	3831	4.M 07	BDC	4862	4.K 12
BCC	7285	4.K 06	BCC	8025 *S*	4.I 10	BCC	8570	3.J 07	BD	542 13	3.C 06	BD	43367 1	4.D 03	BD	48964	4.N 02	BDC	3833	4.M 06	BDC	4862	4.K 14
BCC	7288	4.K 06	BCC	8026 *S*	4.I 10	BCC	8580 AEE	4.J 09	BD	542 13	3.C 07	BD	43367 1	4.C 06	BD	48967	2.M 09	BDC	3835	4.M 06	BDC	4872	4.J 06
BCC	7288	4.K 06	BCC	8027 *S*	4.I 10	BCC	8580 LDY	4.J 09	BD	4616	4.N 02	BD	43367 1	4.C 12	BD	48967	2.M 11	BDC	3836	4.M 07	BDC	4884	4.O 03
BCC	7290	4.K 05	BCC	8028 *S*	4.I 10	BCC	8581 AEE	4.J 0[illegible]	BD	8633 1	3.J 05	BD	44643 1	1.J 14	BD	48967	4.G 12	BDC	3837	4.M 07	BDC	4885	4.O 03
BCC	7290	4.K 06	BCC	8034	4.H 05	BCC	8581 LDY	4.J 09	BD	8633 3	4.L 15	BD	44643 1	3.H 07	BD	48967	4.I 08	BDC	3838	4.M 07	BDC	4886	4.M 07
BCC	7292	4.K 05	BCC	8160 *A*	4.C 14	BCC	9037 *2*	4.F 07	BD	8633 3	3.K 03	BD	44643 1	3.H 08	BD	48970	5.C 17	BDC	3839	4.M 07	BDC	4887	4.M 07
BCC	7292	4.K 06	BCC	8161 *A*	4.C 15	BCC	9037 *8*	4.F 08	BD	8633 4	1.M 07	BD	44643 1	4.I 16	BD	48972	4.K 02	BDC	3840	4.M 07	BDC	4994	2.J 07
BCC	7298	4.K 11	BCC	8166 *A*	4.C 18	BCC	9037 *8*	4.F 09	BD	8633 4	4.J 12	BD	45909 2	3.F 03	BD	48973	4.M 03	BDC	3841	4.M 07	BDC	5020	3.F 03
BCC	7298	4.K 13	BCC	8167 *A*	4.C 18	BCC	9037 LEG	4.F 05	BD	8633 8	4.D 17	BD	46140 3	4.G 17	BD	48973	4.L 04	BDC	3847	4.I 18	BDC	5020	4.H 09
BCC	7299	4.K 11	BCC	8258	4.M 04	BCC	9037 LEG	4.F 07	BD	8633 8	4.C 07	BD	46140 3	3.L 06	BD	48973 2	4.L 15	BDC	4070	4.I 05	BDC	5056	4.L 04
BCC	7299	4.K 13	BCC	8258	4.M 05	BCC	9079	4.G 16	BD	8633 8	4.C 13	BD	46958	4.G 18	BD	48975	4.I 16	BDC	4076	4.K 07	BDC	5057	4.L 04
BCC	7300	4.K 11	BCC	8283	4.K 07	BCC	9080 LDY	4.G 17	BD	10224	4.N 02	BD	46958	4.J 02	BD	48976	4.K 02	BDC	4078	4.K 10	BDC	5058	4.M 03
BCC	7300	4.K 13	BCC	8290	4.H 09	BCC	9080 NDD	4.G 17	BD	10313	4.J 02	BD	47802	4.G 11	BD	48977	4.G 03	BDC	4079	4.K 07	BDC	5059	4.M 03
BCC	7351	4.K 13	BCC	8292	4.H 09	BCC	9081 LDY	4.G 17	BD	11309	4.I 09	BD	48049	4.H 06	BD	48979	4.L 18	BDC	4079	4.K 10	BDC	5060	4.M 03
BCC	7354	4.K 12	BCC	8342 *C*	4.D 05	BCC	9081 NDD	4.G 17	BD	13102	4.H 10	BD	48612 2	4.E 02	BD	48988	4.H 06	BDC	4088	4.N 10	BDC	5061	4.M 03
BCC	7426	4.J 05	BCC	8342 *C*	4.D 08	BCC	9191 *C*	4.D 04	BD	15588 8	5.C 03	BD	48944 1	4.L 03	BD	38292	4.G 12	BDC	4099	4.N 10	BDC	5094	4.G 07
BCC	7427	4.J 05	BCC	8343 *A*	4.D 04	BCC	9191 *C*	4.D 07	BD	17648	2.M 07	BD	48949 1	4.N 12	BDC	2242 SDC	4.J 11	BDC	4380 *C*	4.C 16	BDC	5094 AEE	4.G 07
BCC	7454	4.H 07	BCC	8343 *A*	4.D 08	BCC	9192 *A*	4.D 04	BD	17648	4.D 18	BD	48949 2	4.N 05	BDC	3015	4.O 05	BDC	4381 *C*	4.C 16	BDC	5094 LDY	4.G 07
BCC	7455	4.G 18	BCC	8348 *C*	4.D 05	BCC	9192 *A*	4.D 07	BD	21181	5.E 05	BD	48949 2	4.N 09	BDC	3030 *1*	4.G 08	BDC	4514	4.N 06	BDC	5095	4.G 07
BCC	7456	4.K 07	BCC	8348 *C*	4.D 08	BCC	9210 *C*	4.D 04	BD	24427	5.E 05	BD	48949 3	4.N 05	BDC	3031 *1*	4.G 08	BDC	4515	4.N 06	BDC	5095 AEE	4.G 07
BCC	7458	4.K 10	BCC	8348 *A*	4.D 05	BCC	9210 *C*	4.D 07	BD	24519	5.F 08	BD	48949 3	4.N 12	BDC	3032 *1*	4.G 08	BDC	4528	4.N 12	BDC	5095 LDY	4.G 07
BCC	7484 *F*	4.H 04	BCC	8349 *A*	4.D 08	BCC	9211 *A*	4.D 04	BD	24629	4.D 17	BD	48949 3	4.O 03	BDC	3033 *1*	4.G 08	BDC	4529	4.N 12	BDC	5096	4.K 05
BCC	7487	4.L 14	BCC	8350 *C*	4.D 08	BCC	9211 *A*	4.D 07	BD	25659	4.K 15	BD	48949 4	4.N 05	BDC	3140	4.O 05	BDC	4530	4.N 12	BDC	5098	4.K 06
BCC	7491	5.C 13	BCC	8350 *C*	4.D 09	BCC	9213	4.L 17	BD	25659	4.K 16	BD	48949 4	4.N 09	BDC	3141	4.O 05	BDC	4531	4.N 12	BDC	5105	4.K 06
BCC	7496	4.M 03	BCC	8350 *E*	4.D 08	BCC	9214	4.M 05	BD	25919	5.C 03	BD	48949 7	4.N 09	BDC	3150	4.O 05	BDC	4550	4.K 18	BDC	5324	4.M 03
BCC	7524 AEF	4.I 15	BCC	8350 *E*	4.D 09	BCC	9481	4.K 03	BD	25919	2.I 08	BD	48953 1	4.K 16	BDC	3156 *1*	4.G 13	BDC	4551	4.K 18	BDC	5325	4.M 03
BCC	7524 LEA	4.I 15	BCC	8350 *G*	4.D 08	BCC	9488	4.J 12	BD	25919	2.I 09	BD	48953 1	4.L 02	BDC	3157 *1*	4.G 13	BDC	4582 *R*	4.I 11	BDC	5326	4.M 03
BCC	7559 *S*	4.H 04	BCC	8350 *G*	4.D 09	BCC	9494 AEE	4.J 12	BD	26582	5.F 08	BD	48954	5.F 07	BDC	3160	4.N 02	BDC	4583 *R*	4.I 11	BDC	5327	4.M 03
BCC	7560 *S*	4.H 04	BCC	8351 *A*	4.D 08	BCC	9494 LDY	4.J 14	BD	26582	3.E 02	BD	48954	4.O 05	BDC	3161	4.N 02	BDC	4587	4.L 16	BDC	5354	4.M 04
BCC	7561 *S*	4.H 04	BCC	8351 *A*	4.D 09	BCC	9494 XE	4.J 12	BD	26706 2	4.K 15	BD	48954	1.J 10	BDC	3168	4.K 12	BDC	4588	4.L 16	BDC	5374	4.K 02
BCC	7566	4.J 02	BCC	8402 *R*	4.I 11	BCC	9546	4.L 07	BD	26706 2	4.K 16	BD	48954	4.K 16	BDC	3244	4.I 16	BDC	4589	4.I 16	BDC	5480 *3*	4.J 15
BCC	7682 AEE	4.G 07	BCC	8403 *R*	4.I 11	BCC	9552	4.L 13	BD	26989	4.I 07	BD	48954	4.L 02	BDC	3540 *C*	4.C 03	BDC	4658 LDY	4.G 16	BDC	5480 NDR	4.J 15
BCC	7682 LDY	4.G 07	BCC	8406	4.L 03	BCC	9552	4.K 04	BD	29301	4.D 17	BD	48954	4.L 03	BDC	3540 *C*	4.C 09	BDC	4658 NDC	4.G 16	BDC	5481 *3*	4.J 15
BCC	7683 AEE	4.G 07	BCC	8412	4.J 08	BCC	9616	4.N 08	BD	31102 2	4.N 03	BD	48954	4.K 08	BDC	3541 *C*	4.C 03	BDC	4659 LDY	4.G 16	BDC	5481 NDR	4.J 15
BCC	7683 LDY	4.G 07	BCC	8413	4.J 08	BCC	9617	4.N 11	BD	31102 2	4.N 04	BD	48954	4.K 09	BDC	3541 *C*	4.C 09	BDC	4659 NDC	4.G 16	BDC	5482 *3*	4.J 15
BCC	7687	4.J 15	BCC	8450 LEG	4.H 14	BCC	9780	4.O 03	BD	31104	4.N 03	BD	48954	4.L 13	BDC	3544	4.M 10	BDC	4661	4.G 16	BDC	5496	4.N 07
BCC	7760 *A*	4.C 16	BCC	8451	4.K 07	BCC	9880	4.G 03	BD	32892	4.I 07	BD	48954	4.L 14	BDC	3545	4.M 10	BDC	4663	4.G 16	BDC	5497	4.N 07
BCC	7761 *A*	4.C 17	BCC	8451	4.K 10	BCC	9881	4.G 03	BD	32892	4.J 16	BD	48954	4.L 18	BDC	3547	4.I 14	BDC	4774	4.K 12	BDC	5498	4.N 10
BCC	7780	4.O 03	BCC	8451	4.K 12	BCC	9880	4.G 02	BD	33918	4.N 02	BD	48954	4.G 06	BDC	3804	4.M 09	BDC	4774	4.K 14	BDC	5499	4.N 10
BCC	7780	4.H 14	BCC	8451	4.K 14	BCC	9881	4.G 02	BD	33506 1	5.C 14	BD	48954	4.H 15	BDC	3812 LDY	4.J 09	BDC	4775	4.K 12	BDC	5508 LZ	4.G 14
BCC	7780	4.H 17	BCC	8470	4.N 02	BCC	9884 XE	4.J 14	BD	33800 J	4.N 03	BD	48954	4.H 18	BDC	3812 XE	4.J 09	BDC	4775	4.K 14	BDC	5508 XE	4.G 14
BCC	7783	4.O 03	BCC	8498 *S*	4.H 10	BCC	9959	4.N 13	BD	33800 J	3.F 03	BD	48954	4.H 10	BDC	3813 LDY	4.J 10	BDC	4776	4.K 07	BDC	5509 LZ	4.G 14
BCC	7832	4.I 15	BCC	8499 *S*	4.H 10	BCC	9959	4.N 04	BD	33929	4.L 13	BD	48954	4.H 13	BDC	3813 XE	4.J 10	BDC	4776	4.K 10	BDC	5509 XE	4.G 14
BCC	7834	4.D 16	BCC	8516	4.L 14	BD	541 34	3.J 05	BD	33929	4.K 04	BD	48954	4.K 11	BDC	3814	4.K 02	BDC	4777	4.K 07	BDC	5634	4.H 14
BCC	7883 ND	4.G 16	BCC	8517	4.L 14	BD	541 34	1.I 11	BD	38436	1.L 02	BD	48954	4.K 13	BDC	3815	4.K 02	BDC	4777	4.K 10	BDC	5635	4.H 17
BCC	7957	4.J 06	BCC	8558	4.M 09	BD	541 48	4.N 12	BD	38436	1.E 05	BD	48954	4.J 04	BDC	3751	4.N 02	BDC	4854	4.L 05	BDC	5710 *C*	4.C 18
BCC	7980 *S*	4.I 11	BCC	8558	4.M 10	BD	541 48	1.E 08	BD	38436	1.L 11	BD	48954	4.L 04	BDC	3751	2.L 03	BDC	4855	4.L 05	BDC	5710 *C*	4.C 08

BDC	5710 "C"	4.C 12	BDC	6741 "B"	4.I 05	BDC	7429 "C"	4.C 10	BDC	7986	5.C 14	BDC	8481 "B"	4.C 08	BDC	9373	4.M 04	BEC	1342	4.G 12	BEC	1814 LDY	4.G 13
BDC	5711 "A"	4.C 08	BDC	6776	4.K 08	BDC	7430 "A"	4.C 04	BDC	8022	4.N 02	BDC	8484 "D"	4.C 02	BDC	9376	4.M 04	BEC	1345	4.G 12	BEC	1814 SDC	4.G 09
BDC	5711 "A"	4.C 12	BDC	6776	4.K 09	BDC	7430 "A"	4.C 10	BDC	8023	4.N 02	BDC	8484 "D"	4.C 08	BDC	9377	4.M 04	BEC	1348	3.C 08	BEC	1817	4.N 14
BDC	5720	4.K 15	BDC	6777	4.K 08	BDC	7431 "A"	4.C 04	BDC	8050	4.N 12	BDC	8485 "D"	4.C 02	BDC	9384 "4"	4.H 08	BEC	1352	4.G 12	BEC	1817	4.N 17
BDC	5720	4.K 16	BDC	6777	4.K 09	BDC	7431 "A"	4.C 10	BDC	8051	4.N 12	BDC	8485 "D"	4.C 08	BDC	9390	4.J 12	BEC	1353	4.G 12	BEC	1818 "B"	4.D 08
BDC	5721	4.K 15	BDC	6802	3.D 12	BDC	7432 "C"	4.C 05	BDC	8052	4.N 12	BDC	8505	5.C 14	BDC	9391	4.J 12	BEC	1441	4.N 03	BEC	1818 "B"	4.D 09
BDC	5721	4.K 16	BDC	6860	5.C 12	BDC	7432 "C"	4.C 11	BDC	8053	4.N 12	BDC	8570	4.F 04	BDC	9400	4.G 13	BEC	1446	5.C 08	BEC	1879	5.C 03
BDC	5722	4.K 15	BDC	6873	4.J 08	BDC	7433 "C"	4.C 05	BDC	8056 "B"	4.G 04	BDC	8582 "J"	4.I 17	BDC	9401	4.G 13	BEC	1452	4.O 02	BEC	1889	4.F 04
BDC	5722	4.K 16	BDC	6854	4.L 18	BDC	7433 "C"	4.C 11	BDC	8056 AFR	4.G 04	BDC	8590	4.F 04	BDC	9426	4.I 08	BEC	1453	4.O 02	BEC	1901	4.J 15
BDC	5723	4.K 15	BDC	7011	4.N 04	BDC	7482	4.L 18	BDC	8057 "B"	4.G 04	BDC	8591	4.F 04	BDC	9427	4.I 08	BEC	1528 "2"	4.G 12	BEC	1913 LDY	4.J 08
BDC	5723	4.K 16	BDC	7011	4.J 07	BDC	7483	4.L 18	BDC	8057 AFR	4.G 04	BDC	8598	4.D 18	BDC	9436	4.K 14	BEC	1529 "2"	4.G 12	BEC	1913 NDD	4.J 08
BDC	5724	4.K 15	BDC	7012	4.O 02	BDC	7494	4.L 15	BDC	8060 "B"	4.G 04	BDC	8686 "S"	4.I 11	BDC	9534	4.N 08	BEC	1658 "A"	4.C 03	BEC	1920 LDY	4.G 16
BDC	5724	4.K 16	BDC	7013	4.O 02	BDC	7494	4.K 04	BDC	8060 AFR	4.G 04	BDC	8689 "S"	4.I 11	BDC	9535	4.N 08	BEC	1658 "A"	4.C 09	BEC	1920 NDD	4.G 16
BDC	5725	4.K 15	BDC	7014	4.O 02	BDC	7495	4.L 15	BDC	8061 "B"	4.G 04	BDC	8690 "S"	4.I 11	BDC	9536	4.N 08	BEC	1659 "A"	4.C 04	BEC	1921 LDY	4.G 16
BDC	5725	4.K 16	BDC	7015	4.O 02	BDC	7495	4.K 04	BDC	8061 AFR	4.G 04	BDC	8694	4.N 08	BDC	9537	4.N 09	BEC	1659 "A"	4.C 10	BEC	1921 NDD	4.G 16
BDC	5726	4.K 15	BDC	7016	4.O 02	BDC	7550	4.N 04	BDC	8071	4.K 11	BDC	8695	4.N 08	BDC	9542	4.N 09	BEC	1666 "A"	4.C 04	BEC	1956	4.F 04
BDC	5726	4.K 16	BDC	7017	4.O 02	BDC	7616	4.N 13	BDC	8077	4.M 11	BDC	8696	4.N 11	BDC	9543	4.N 09	BEC	1666 "A"	4.C 10	BEC	1983 "B"	4.F 07
BDC	5727	4.K 15	BDC	7023	4.I 15	BDC	7663	4.I 15	BDC	8078	4.M 11	BDC	8697	4.N 11	BDC	9554	4.L 04	BEC	1667 "A"	4.C 04	BEC	1984 "B"	4.F 07
BDC	5727	4.K 16	BDC	7042	4.L 13	BDC	7676	4.O 05	BDC	8079	4.M 11	BDC	8823 "B"	4.D 12	BDC	9555	4.L 04	BEC	1667 "A"	4.C 10	BEC	1985 "B"	4.F 09
BDC	6161	5.C 14	BDC	7012	4.K 04	BDC	7690	4.I 08	BDC	8080	4.M 11	BDC	8823 "B"	4.D 05	BDC	9566 "D"	4.C 14	BEC	1676 "B"	4.D 10	BEC	1986 "B"	4.F 09
BDC	6166	4.K 11	BDC	7046	5.C 17	BDC	7691	4.I 08	BDC	8081	4.M 11	BDC	8823 "B"	4.D 09	BDC	9567 "D"	4.C 15	BEC	1677 "B"	4.D 10	BEC	1987 "B"	4.F 02
BDC	6166	4.K 15	BDC	7047	5.C 17	BDC	7702	5.C 17	BDC	8082	4.M 11	BDC	8824 "D"	4.D 12	BDC	9630	4.H 05	BEC	1680	4.K 15	BEC	1988 "B"	4.F 02
BDC	6167	4.K 11	BDC	7048	4.J 05	BDC	7703	5.C 17	BDC	8083	4.M 11	BDC	8824 "D"	4.D 08	BDC	9630 LEG	4.H 05	BEC	1681	4.K 15	BEC	1989 "B"	4.F 02
BDC	6167	4.K 15	BDC	7049	4.I 09	BDC	7711	4.I 05	BDC	8084	4.M 11	BDC	8824 "D"	4.D 09	BDC	9634 LEG	4.H 05	BEC	1682	4.K 15	BEC	1990 "B"	4.F 02
BDC	6376 AEE	4.J 16	BDC	7070	4.L 15	BDC	7718	4.N 03	BDC	8085	4.M 11	BDC	8946	4.L 02	BDC	9650 AEE	4.G 13	BEC	1690 AEE	4.J 08	BEC	2033	4.J 03
BDC	6376 LEG	4.J 16	BDC	7071	4.L 15	BDC	7722	4.K 05	BDC	8090	4.I 05	BDC	8947	4.L 02	BDC	9650 SDC	4.G 09	BEC	1690 LDY	4.J 08	BEC	2100	4.J 15
BDC	6376 NDR	4.J 16	BDC	7108	4.K 11	BDC	7722	4.K 11	BDC	8091	4.I 05	BDC	8980	4.F 04	BDC	9651 AEE	4.G 13	BEC	1690 NDD	4.J 08	BEC	2170	4.D 18
BDC	6377 AEE	4.J 16	BDC	7108	4.K 13	BDC	7723	4.K 08	BDC	8143	4.I 04	BDC	8981	4.F 04	BDC	9651 SDC	4.G 09	BEC	1691 LDY	4.J 08	BEC	2171	4.D 18
BDC	6377 LEG	4.J 16	BDC	7107	4.K 11	BDC	7723	4.K 13	BDC	8147	4.L 18	BDC	8989	4.H 11	BDC	9662	4.F 04	BEC	1691 NDD	4.J 08	BEC	2226 "2"	4.H 13
BDC	6377 LZ	4.J 16	BDC	7107	4.K 13	BDC	7734	4.O 05	BDC	8148	4.L 17	BDC	8989	4.H 13	BDC	9663	4.F 04	BEC	1744	4.O 05	BEC	2227 "2"	4.H 13
BDC	6377 NDR	4.J 16	BDC	7150	4.M 02	BDC	7735	4.O 05	BDC	8184 "A"	4.C 15	BDC	9046	4.L 14	BDC	9664	4.F 04	BEC	1745	4.O 05	BEC	2236 "2"	4.H 14
BDC	6404	4.I 04	BDC	7152	4.N 03	BDC	7762	4.I 03	BDC	8185 "A"	4.C 15	BDC	9152 "C"	4.C 04	BDC	9665	4.F 04	BEC	1746	4.O 05	BEC	2237 "2"	4.H 14
BDC	6414	4.O 05	BDC	7262	5.C 13	BDC	7763	4.I 03	BDC	8248 "C"	4.D 11	BDC	9152 "C"	4.C 10	BDC	9732 LEG	4.H 09	BEC	1747	4.O 05	BEC	2238 "2"	4.H 17
BDC	6415	4.O 05	BDC	7263	5.C 13	BDC	7764	4.I 04	BDC	8249 "B"	4.D 11	BDC	9153 "C"	4.C 04	BDC	9804	4.L 05	BEC	1748	4.L 03	BEC	2239 "2"	4.H 17
BDC	6462 "4"	4.G 04	BDC	7265	5.C 13	BDC	7765	4.I 04	BDC	8288 "B"	4.D 10	BDC	9153 "C"	4.C 10	BDC	9805	4.L 05	BEC	1760	4.L 04	BEC	2432	3.H 16
BDC	6463 "4"	4.G 04	BDC	7271	4.N 04	BDC	7785	4.F 04	BDC	8289 "B"	4.D 10	BDC	9160 "C"	4.C 05	BDC	9979	1.M 07	BEC	1761	4.L 04	BEC	2433	3.H 16
BDC	6480 AEF	4.I 15	BDC	7280 "C"	4.C 05	BDC	7804	4.G 02	BDC	8432 "D"	4.C 16	BDC	9160 "C"	4.C 11	BEC	1010	4.L 16	BEC	1765	1.M 07	BEC	2603	4.O 03
BDC	6480 LEA	4.I 15	BDC	7280 "C"	4.C 11	BDC	7805	4.G 02	BDC	8433 "D"	4.C 16	BDC	9161 "C"	4.C 05	BEC	1011	4.L 16	BEC	1771	1.M 07	BEC	2608	4.L 18
BDC	6498 "4"	4.G 04	BDC	7291 "A"	4.C 05	BDC	7806 LZ	4.G 14	BDC	8442 "C"	4.C 03	BDC	9161 "C"	4.C 11	BEC	1110 "U"	4.I 11	BEC	1788 "2"	4.H 17	BEC	2609	4.L 18
BDC	6524	4.H 13	BDC	7291 "A"	4.C 11	BDC	7806 XE	4.G 14	BDC	8442 "C"	4.C 09	BDC	9200	5.D 02	BEC	1111 "U"	4.I 11	BEC	1789 "2"	4.H 17	BEC	2753	4.K 16
BDC	6525	4.H 13	BDC	7366 "D"	4.D 12	BDC	7807 LZ	4.G 14	BDC	8443 "C"	4.C 03	BDC	9200	5.C 03	BEC	1114 AEE	4.J 12	BEC	1796	5.C 14	BEC	2757	4.K 16
BDC	6542	4.H 11	BDC	7367 "D"	4.D 12	BDC	7807 XE	4.G 14	BDC	8443 "C"	4.C 09	BDC	9203	4.F 02	BEC	1115 AEE	4.J 12	BEC	1797	5.C 14	BEC	2759 AEE	4.J 14
BDC	6543	4.H 11	BDC	7368 "B"	4.D 11	BDC	7808	4.G 03	BDC	8452 "B"	4.C 02	BDC	9204	4.F 02	BEC	1164	4.N 05	BEC	1802	1.M 07	BEC	2759 AEE	4.J 12
BDC	6556	4.L 02	BDC	7369 "B"	4.D 12	BDC	7809	4.G 03	BDC	8452 "B"	4.C 08	BDC	9212	4.G 05	BEC	1165	4.N 05	BEC	1804 "6"	4.I 04	BEC	2759 LDY	4.J 14
BDC	6557	4.L 02	BDC	7402	4.J 04	BDC	7886	5.C 13	BDC	8453 "B"	4.C 03	BDC	9213	4.G 05	BEC	1166	4.N 05	BEC	1804 LEG	4.I 04	BEC	2759 LDY	4.J 12
BDC	6586	4.N 03	BDC	7419 "C"	4.C 16	BDC	7887	5.C 13	BDC	8453 "B"	4.C 09	BDC	9239	4.D 16	BEC	1167	4.N 05	BEC	1805 "6"	4.I 04	BEC	2760 "U"	4.I 11
BDC	6587	4.N 03	BDC	7420 "A"	4.C 08	BDC	7895	5.C 13	BDC	8464 "C"	4.C 14	BDC	9274	5.C 14	BEC	1169 1	4.N 04	BEC	1805 LEG	4.I 04	BEC	2761 "U"	4.I 11
BDC	6619	4.I 15	BDC	7420 "A"	4.C 12	BDC	7926	4.F 07	BDC	8465 "C"	4.C 15	BDC	9275	5.C 14	BEC	1184	2.J 14	BEC	1806 "6"	4.I 03	BEC	2762 "U"	4.I 11
BDC	6630	4.K 03	BDC	7426 "B"	4.C 03	BDC	7927	4.F 07	BDC	8470 "B"	4.C 15	BDC	9276	5.C 14	BEC	1207	4.F 04	BEC	1806 LEG	4.I 03	BEC	2763 "U"	4.I 11
BDC	6633	5.C 14	BDC	7428 "B"	4.C 09	BDC	7980	4.F 02	BDC	8471 "B"	4.C 15	BDC	9277	5.C 14	BEC	1222	4.F 04	BEC	1807 "6"	4.I 03	BEC	2765	4.D 18
BDC	6665 "2"	4.H 13	BDC	7427 "B"	4.C 04	BDC	7981	4.F 02	BDC	8476 "A"	4.C 14	BDC	9358	4.J 08	BEC	1252	4.F 04	BEC	1807 LEG	4.I 03	BEC	2768 "U"	4.I 12
BDC	6666 "S"	4.I 12	BDC	7427 "B"	4.C 10	BDC	7976	4.F 07	BDC	8477 "A"	4.C 14	BDC	9359	4.J 08	BEC	1267	4.I 18	BEC	1813 AEE	4.G 13	BEC	2769 "U"	4.I 12
BDC	6669 "S"	4.I 12	BDC	7429 "C"	4.C 04	BDC	7977	4.F 07	BDC	8480 "B"	4.C 02	BDC	9366	4.L 17	BEC	1275	4.K 03	BEC	1813 LDY	4.G 13	BEC	2956	4.J 02
BDC	6690 "S"	4.I 12	BDC	7429 "C"	4.C 10	BDC	7980	4.K 14	BDC	8480 "B"	4.C 08	BDC	9371	4.E 03	BEC	1335	4.N 04	BEC	1813 SDC	4.G 09	BEC	3030 AEE	4.G 13
BDC	6691 "S"	4.I 12	BDC	7429 "C"	4.C 04	BDC	7981	4.K 12	BDC	8481 "B"	4.C 02	BDC	9372	4.M 04	BEC	1335	4.J 07	BEC	1814 AEE	4.G 13	BEC	3030 LDY	4.G 13

BEC 3030 SDC ... 4.G 08
BEC 3031 AEE ... 4.G 13
BEC 3031 LDY ... 4.G 13
BEC 3031 SDC ... 4.G 08
BEC 3066 LEG ... 4.H 07
BEC 3071 ... 4.G 17
BEC 3116 ... 4.I 18
BEC 3117 ... 4.I 18
BEC 3124 ... 4.K 05
BEC 3942 "6" ... 4.H 14
BEC 3943 "6" ... 4.H 14
BEC 3946 "6" ... 4.H 17
BEC 3947 "6" ... 4.H 17
BEC 3950 AEE ... 3.L 08
BEC 3950 LDY ... 3.L 08
BEC 4027 "6" ... 4.J 05
BEC 4027 "7" ... 4.J 05
BEC 4027 LEG ... 4.J 05
BEC 4028 "6" ... 4.J 05
BEC 4028 "7" ... 4.J 05
BEC 4028 LEG ... 4.J 05
BEC 4033 ... 1.M 07
BEC 4216 ... 4.L 16
BEC 4219 ... 4.M 09
BEC 4219 ... 4.M 10
BEC 4219 ... 4.M 11
BEC 4220 ... 4.M 09
BEC 4220 ... 4.M 11
BEC 4221 ... 4.M 09
BEC 4221 ... 4.M 10
BEC 4221 ... 4.M 11
BEC 4222 ... 4.M 09
BEC 4222 ... 4.M 11
BEC 4223 ... 4.M 09
BEC 4223 ... 4.M 11
BEC 4239 "B" ... 4.D 11
BEC 4346 "2" ... 4.H 13
BEC 4347 "2" ... 4.H 13
BEC 4359 ... 4.I 18
BEC 4368 ... 4.O 02
BEC 4369 ... 4.O 02
BEC 4400 ... 4.O 02
BEC 4401 ... 4.O 02
BEC 4444 ... 4.N 04
BEC 4445 ... 4.O 05
BEC 4491 AEF ... 4.I 15
BEC 4491 LEA ... 4.I 15
BEC 4493 AEF ... 4.I 15
BEC 4493 LEA ... 4.I 15
BEC 4536 ... 4.O 02
BEC 4537 ... 4.O 02
BEC 4572 "2" ... 4.H 04
BEC 4574 "2" ... 4.H 04
BEC 4575 "2" ... 4.H 04
BEC 4576 "2" ... 4.H 04
BEC 4586 AEE ... 4.J 13
BEC 4586 LDY ... 4.J 13
BEC 4587 AEE ... 4.J 13
BEC 4587 LDY ... 4.J 13
BEC 4588 AEE ... 4.J 13
BEC 4588 LDY ... 4.J 13
BEC 4589 AEE ... 4.J 13
BEC 4589 LDY ... 4.J 13
BEC 4609 ... 4.O 05
BEC 4643 ... 4.H 07
BEC 4747 ... 4.L 07
BEC 4748 ... 4.L 07
BEC 4749 ... 4.L 14
BEC 4754 "E" ... 4.C 18
BEC 4754 "G" ... 4.C 18
BEC 4755 "B" ... 4.C 18
BEC 4756 "E" ... 4.C 16
BEC 4756 "G" ... 4.C 16
BEC 4757 "E" ... 4.C 16
BEC 4757 "G" ... 4.C 16
BEC 4758 "B" ... 4.C 15
BEC 4759 "B" ... 4.C 15
BEC 4760 "E" ... 4.C 05
BEC 4760 "E" ... 4.C 11
BEC 4760 "G" ... 4.C 05
BEC 4760 "G" ... 4.C 11
BEC 4761 "B" ... 4.C 05
BEC 4761 "B" ... 4.C 11
BEC 4762 "B" ... 4.C 02
BEC 4762 "B" ... 4.C 08
BEC 4763 "B" ... 4.C 03
BEC 4763 "B" ... 4.C 09
BEC 4764 "E" ... 4.C 03
BEC 4764 "E" ... 4.C 09
BEC 4765 "E" ... 4.C 03
BEC 4765 "E" ... 4.C 09
BEC 4770 "B" ... 4.D 10
BEC 4771 "B" ... 4.D 10
BEC 4772 "E" ... 4.D 10
BEC 4772 "G" ... 4.D 10
BEC 4773 "E" ... 4.D 11
BEC 4773 "G" ... 4.D 11
BEC 4774 "B" ... 4.D 11
BEC 4775 "B" ... 4.D 12
BEC 4776 "E" ... 4.D 12
BEC 4776 "G" ... 4.D 12
BEC 4777 "E" ... 4.D 12
BEC 4777 "G" ... 4.D 12
BEC 4778 "A" ... 4.D 05
BEC 4778 "A" ... 4.D 08
BEC 4779 "E" ... 4.D 05
BEC 4779 "E" ... 4.D 08
BEC 4779 "G" ... 4.D 05
BEC 4779 "G" ... 4.D 08
BEC 4780 "A" ... 4.D 04
BEC 4780 "A" ... 4.D 07
BEC 4781 "E" ... 4.D 04
BEC 4781 "E" ... 4.D 07
BEC 4781 "G" ... 4.D 04
BEC 4781 "G" ... 4.D 07
BEC 4808 AEE ... 4.J 14
BEC 4808 LDY ... 4.J 14
BEC 4809 AEE ... 4.J 14
BEC 4809 LDY ... 4.J 14
BEC 4814 ... 4.F 04
BEC 4815 ... 4.F 04
BEC 4825 "6" ... 4.F 09
BEC 4826 "6" ... 4.F 09
BEC 4829 ... 4.N 03
BEC 4831 ... 1.M 07
BEC 4864 "6" ... 4.I 03
BEC 4865 "6" ... 4.I 03
BEC 4866 "6" ... 4.I 04
BEC 4867 "6" ... 4.I 04
BEC 4970 ... 4.O 03
BEC 4971 ... 4.O 03
BEC 4974 ... 4.N 14
BEC 4974 ... 4.N 16
BEC 4975 ... 4.N 14
BEC 4975 ... 4.N 16
BEC 4976 ... 4.N 14
BEC 4976 ... 4.N 16
BEC 4977 ... 4.N 14
BEC 4977 ... 4.N 16
BEC 4979 ... 1.M 07
BEC 5105 AEF ... 4.I 15
BEC 5105 LEA ... 4.I 15
BEC 5220 ... 4.G 05
BEC 5221 ... 4.G 05
BEC 5294 "U" ... 4.I 12
BEC 5295 "U" ... 4.I 12
BEC 5296 ... 4.O 04
BEC 5296 ... 3.F 02
BEC 5297 ... 4.O 04
BEC 5297 ... 3.F 02
BEC 5298 ... 4.O 02
BEC 5299 ... 4.O 02
BEC 5300 ... 4.O 02
BEC 5301 ... 4.O 02
BEC 5418 "M" ... 4.I 17
BEC 5419 "M" ... 4.I 17
BEC 5420 "M" ... 4.I 17
BEC 5444 ... 4.N 07
BEC 5445 ... 4.N 07
BEC 5446 ... 4.N 10
BEC 5447 ... 4.N 10
BEC 5539 ... 4.L 03
BEC 5567 ... 4.J 04
BEC 5568 ... 4.I 14
BEC 5582 AEE ... 4.G 13
BEC 5582 LDY ... 4.G 13
BEC 5582 SDC ... 4.G 09
BEC 5583 AEE ... 4.G 13
BEC 5583 LDY ... 4.G 13
BEC 5583 SDC ... 4.G 09
BEC 5590 ... 4.N 13
BEC 5591 ... 4.N 13
BEC 5624 LEG ... 4.H 09
BEC 5665 ... 4.L 13
BEC 5666 ... 4.L 13
BEC 5669 ... 4.H 03
BEC 5670 NDR ... 4.H 03
BEC 5698 "T" ... 4.I 10
BEC 5699 "T" ... 4.I 10
BEC 5700 "T" ... 4.I 10
BEC 5701 "T" ... 4.I 10
BEC 5708 AEE ... 4.J 10
BEC 5708 LDY ... 4.J 10
BEC 5708 SDC ... 4.J 10
BEC 5709 AEE ... 4.J 10
BEC 5709 LDY ... 4.J 10
BEC 5709 SDC ... 4.J 10
BEC 5711 ... 4.N 04
BEC 5790 "G" ... 4.C 05
BEC 5790 "G" ... 4.C 11
BEC 5791 "G" ... 4.C 05
BEC 5791 "G" ... 4.C 11
BEC 5796 "B" ... 4.C 04
BEC 5796 "B" ... 4.C 10
BEC 5797 "B" ... 4.C 04
BEC 5797 "B" ... 4.C 10
BEC 5802 "B" ... 4.C 03
BEC 5802 "B" ... 4.C 09
BEC 5803 "B" ... 4.C 04
BEC 5803 "B" ... 4.C 10
BEC 5806 "G" ... 4.C 04
BEC 5806 "G" ... 4.C 10
BEC 5807 "G" ... 4.C 04
BEC 5807 "G" ... 4.C 10
BEC 5910 ... 4.M 02
BEC 5911 ... 4.M 02
BEC 5991 ... 4.L 02
BEC 6100 LZ ... 4.J 16
BEC 6130 "E" ... 4.C 06
BEC 6130 "E" ... 4.C 12
BEC 6130 "G" ... 4.C 06
BEC 6130 "G" ... 4.C 12
BEC 6131 "B" ... 4.C 18
BEC 6131 "B" ... 4.C 06
BEC 6131 "B" ... 4.C 12
BEC 6146 "E" ... 4.C 04
BEC 6146 "E" ... 4.C 10
BEC 6147 "E" ... 4.C 04
BEC 6147 "E" ... 4.C 10
BEC 6148 "B" ... 4.C 03
BEC 6148 "B" ... 4.C 09
BEC 6149 "B" ... 4.C 04
BEC 6149 "B" ... 4.C 10
BEC 6162 "E" ... 4.C 05
BEC 6162 "E" ... 4.C 11
BEC 6163 "E" ... 4.C 05
BEC 6163 "E" ... 4.C 11
BEC 6164 "B" ... 4.C 04
BEC 6164 "B" ... 4.C 10
BEC 6165 "B" ... 4.C 04
BEC 6165 "B" ... 4.C 10
BEC 6188 "E" ... 4.C 02
BEC 6188 "E" ... 4.C 08
BEC 6189 "E" ... 4.C 02
BEC 6189 "E" ... 4.C 08
BEC 6190 "B" ... 4.C 02
BEC 6190 "B" ... 4.C 08
BEC 6191 "B" ... 4.C 02
BEC 6191 "B" ... 4.C 08
BEC 6204 "B" ... 4.C 14
BEC 6205 "B" ... 4.C 14
BEC 6206 "E" ... 4.C 14
BEC 6207 "E" ... 4.C 15
BEC 6208 "E" ... 4.D 06
BEC 6208 "E" ... 4.D 09
BEC 6208 "G" ... 4.D 12
BEC 6208 "G" ... 4.D 06
BEC 6208 "G" ... 4.D 09
BEC 6209 "B" ... 4.D 12
BEC 6209 "B" ... 4.D 05
BEC 6209 "B" ... 4.D 09
BEC 6236 "E" ... 4.D 11
BEC 6236 "G" ... 4.D 11
BEC 6237 "B" ... 4.D 11
BEC 6240 "A" ... 4.D 04
BEC 6240 "A" ... 4.D 07
BEC 6241 "E" ... 4.D 04
BEC 6241 "E" ... 4.D 07
BEC 6241 "G" ... 4.D 04
BEC 6241 "G" ... 4.D 07
BEC 6270 ... 4.O 03
BEC 6271 ... 4.O 03
BEC 6328 ... 4.K 18
BEC 6353 ... 4.D 16
BEC 6354 ... 4.D 16
BEC 6408 "E" ... 4.C 17
BEC 6409 "E" ... 4.C 17
BEC 6410 "B" ... 4.C 16
BEC 6411 "B" ... 4.C 17
BEC 6420 "A" ... 4.D 04
BEC 6420 "A" ... 4.D 08
BEC 6421 "E" ... 4.D 05
BEC 6421 "E" ... 4.D 08
BEC 6421 "G" ... 4.D 05
BEC 6421 "G" ... 4.D 08
BEC 6517 "U" ... 4.I 11
BEC 6584 AEF ... 4.I 16
BEC 6584 LEA ... 4.I 16
BEC 6588 ... 4.K 11
BEC 6588 ... 4.K 13
BEC 6589 ... 4.K 11
BEC 6589 ... 4.K 13
BEC 6629 "9" ... 4.H 14
BEC 6630 "9" ... 4.H 14
BEC 6634 "6" ... 4.I 05
BEC 6634 LEG ... 4.I 05
BEC 6635 "6" ... 4.I 05
BEC 6635 LEG ... 4.I 05
BEC 6636 ... 1.M 07
BEC 6652 RNR ... 4.H 16
BEC 6653 RNR ... 4.H 16
BEC 6678 RNR ... 4.H 16
BEC 6679 RNR ... 4.H 16
BEC 6729 NDR ... 4.H 03
BEC 6758 ... 4.N 02
BEC 6782 "E" ... 4.D 10
BEC 6782 "G" ... 4.D 10
BEC 6783 "E" ... 4.D 10
BEC 6783 "G" ... 4.D 10
BEC 6784 "B" ... 4.D 10
BEC 6785 "B" ... 4.D 10
BEC 6800 "E" ... 4.C 18
BEC 6800 "G" ... 4.C 18
BEC 6804 "G" ... 4.D 08
BEC 6804 "G" ... 4.D 09
BEC 6876 "H" ... 4.C 18
BEC 6876 RNR ... 4.D 03
BEC 6896 "H" ... 4.C 18
BEC 6896 RNR ... 4.D 03
BEC 6906 AEE ... 4.C 18
BEC 6906 AEM ... 4.C 18
BEC 6906 LDY ... 4.C 18
BEC 6906 NDR ... 4.D 03
BEC 6907 AEE ... 4.D 02
BEC 6907 AEM ... 4.D 02
BEC 6907 LDY ... 4.D 02
BEC 6907 NDR ... 4.D 03
BEC 6914 RNR ... 4.D 03
BEC 6915 RNR ... 4.D 03
BEC 6916 "H" ... 4.C 16
BEC 6916 RNR ... 4.D 03
BEC 6917 "H" ... 4.C 16
BEC 6917 RNR ... 4.D 03
BEC 6948 "H" ... 4.D 11
BEC 6948 RNR ... 4.D 15
BEC 6950 "H" ... 4.D 12
BEC 6950 RNR ... 4.D 15
BEC 6951 "H" ... 4.D 12
BEC 6951 RNR ... 4.D 15
BEC 6986 AEE ... 4.D 13
BEC 6986 AEM ... 4.D 13
BEC 6986 LDY ... 4.D 13
BEC 6986 NDR ... 4.D 13
BEC 6988 AEE ... 4.D 13
BEC 6988 AEM ... 4.D 13
BEC 6988 LDY ... 4.D 13
BEC 6988 NDR ... 4.D 13
BEC 6997 "H" ... 4.D 12
BEC 6997 RNR ... 4.D 15
BEC 7008 "H" ... 4.D 10
BEC 7008 RNR ... 4.D 15
BEC 7009 "H" ... 4.D 10
BEC 7009 RNR ... 4.D 15
BEC 7011 AEE ... 4.D 13
BEC 7011 AEM ... 4.D 13
BEC 7011 LDY ... 4.D 13
BEC 7011 NDR ... 4.D 13
BEC 7012 "H" ... 4.D 10
BEC 7012 RNR ... 4.D 15
BEC 7013 "H" ... 4.D 11
BEC 7013 RNR ... 4.D 15
BEC 7054 AEE ... 4.D 13
BEC 7054 AEM ... 4.D 13
BEC 7054 LDY ... 4.D 13
BEC 7054 NDR ... 4.D 13
BEC 7086 ... 4.L 18
BEC 7087 ... 4.L 18
BEC 7212 ... 4.N 03
BEC 7213 ... 4.N 03
BEC 7448 "B" ... 4.C 05
BEC 7448 "B" ... 4.C 11
BEC 7450 "B" ... 4.C 02
BEC 7450 "B" ... 4.C 08
BEC 7451 "B" ... 4.C 03
BEC 7451 "B" ... 4.C 09
BEC 7454 "A" ... 4.D 05
BEC 7454 "A" ... 4.D 08
BEC 7460 "A" ... 4.D 04
BEC 7460 "A" ... 4.D 07
BEC 7500 ... 4.L 17
BEC 7731 ... 1.M 06
BEC 7736 ... 4.N 13
BEC 7706 ... 4.N 13
BEC 7706 ... 4.N 04
BEC 7706 ... 4.J 07
BEC 7712 ... 4.I 18
BEC 7713 ... 4.I 18
BEC 7716 LEG ... 3.C 08
BEC 7719 ... 4.D 18
BEC 7721 ... 1.M 07
BEC 7755 ... 4.K 16
BEC 7756 ... 4.L 03
BEC 7761 ... 4.L 02
BEC 7762 ... 4.L 02
BEC 7813 ... 4.N 03
BEC 7851 ... 4.G 05
BEC 7964 ... 4.L 10
BEC 7964 ... 4.L 12
BEC 7965 ... 4.L 10
BEC 7965 ... 4.L 12
BEC 7966 ... 4.L 10
BEC 7966 ... 4.L 12
BEC 7967 ... 4.L 10
BEC 7967 ... 4.L 12
BEC 7968 ... 4.L 10
BEC 7968 ... 4.L 12
BEC 7969 ... 4.L 10
BEC 7969 ... 4.L 12
BEC 7974 ... 4.L 08
BEC 7974 ... 4.L 09
BEC 7975 ... 4.L 08
BEC 7975 ... 4.L 09
BEC 7976 ... 4.L 08
BEC 7976 ... 4.L 09
BEC 7977 ... 4.L 08
BEC 7977 ... 4.L 09
BEC 7978 ... 4.L 08
BEC 7978 ... 4.L 09
BEC 7979 ... 4.L 08
BEC 7979 ... 4.L 09
BEC 8100 ... 5.C 12
BEC 8101 ... 5.C 12
BEC 8102 ... 5.C 12
BEC 8330 ... 5.C 14
BEC 8331 ... 5.C 14
BEC 8332 ... 5.C 14
BEC 8333 ... 5.C 14
BEC 8368 ... 3.C 08
BEC 8575 ... 4.J 04
BEC 8404 ... 3.I 11
BEC 8414 "2" ... 4.G 06
BEC 8415 "2" ... 4.G 06
BEC 8463 ... 5.C 14
BEC 8464 ... 5.C 14
BEC 8490 ... 4.G 02
BEC 8491 ... 4.G 02
BEC 8527 AEE ... 4.H 02
BEC 8527 AEM ... 4.H 02
BEC 8527 LDY ... 4.H 02
BEC 8527 NDR ... 4.H 02
BEC 8672 ... 4.I 06
BEC 8673 ... 4.I 06
BEC 8690 ... 4.N 13
BEC 8691 ... 4.N 13
BEC 8692 ... 4.N 13
BEC 8696 ... 4.K 16
BEC 8780 ... 4.L 07
BEC 8782 ... 4.L 07
BEC 8784 SDC ... 4.J 09
BEC 8785 SDC ... 4.J 09

BEC 8797 AEE ... 4.H 08
BEC 8797 AEM ... 4.H 08
BEC 8797 LDY ... 4.H 08
BEC 8797 NDR ... 4.H 05
BEC 8800 SDC ... 4.G 09
BEC 8801 SDC ... 4.G 09
BEC 8815 SDC ... 4.G 16
BEC 8817 SDC ... 4.G 16
BEC 8818 NDR ... 4.G 09
BEC 8819 NDR ... 4.G 09
BEC 8940 ... 4.O 02
BEC 8941 ... 4.O 02
BEC 8992 ... 4.K 05
BEC 8992 ... 4.K 08
BEC 8995 ... 4.L 14
BEC 9002 "T" ... 4.I 11
BEC 9002 SDC ... 4.I 13
BEC 9003 "T" ... 4.I 11
BEC 9003 SDC ... 4.I 13
BEC 9008 ... 4.O 05
BEC 9009 ... 4.O 05
BEC 9040 ... 4.L 14
BEC 9041 ... 4.L 14
BEC 9048 AEE ... 4.J 15
BEC 9048 AEM ... 4.J 15
BEC 9048 AFW ... 4.J 15
BEC 9048 CEM ... 4.J 15
BEC 9048 HEZ ... 4.J 15
BEC 9048 JEF ... 4.J 15
BEC 9048 LDY ... 4.J 15
BEC 9048 LEG ... 4.J 15
BEC 9049 ... 4.N 08
BEC 9084 "7" ... 4.I 05
BEC 9084 SDC ... 4.I 08
BEC 9085 "7" ... 4.I 05
BEC 9085 SDC ... 4.I 08
BEC 9101 ... 4.K 18
BEC 9102 ... 4.K 18
BEC 9110 "E" ... 4.C 17
BEC 9111 "E" ... 4.C 17
BEC 9112 "B" ... 4.C 16
BEC 9113 "B" ... 4.C 17
BEC 9136 "E" ... 4.C 02
BEC 9136 "E" ... 4.C 08
BEC 9137 "E" ... 4.C 02
BEC 9137 "E" ... 4.C 08
BEC 9138 "B" ... 4.C 02
BEC 9138 "B" ... 4.C 08
BEC 9139 "B" ... 4.C 02
BEC 9139 "B" ... 4.C 08
BEC 9146 "B" ... 4.C 14
BEC 9147 "B" ... 4.C 14
BEC 9148 "E" ... 4.C 14
BEC 9149 "E" ... 4.C 15
BEC 9154 "E" ... 4.D 10
BEC 9155 "E" ... 4.D 10
BEC 9156 "B" ... 4.D 10
BEC 9157 "B" ... 4.D 10
BEC 9158 "E" ... 4.C 18
BEC 9159 "B" ... 4.C 18
BEC 9160 "B" ... 4.C 02
BEC 9160 "B" ... 4.C 08
BEC 9161 "B" ... 4.C 03
BEC 9161 "B" ... 4.C 09
BEC 9162 "E" ... 4.C 03
BEC 9162 "E" ... 4.C 09
BEC 9163 "E" ... 4.C 03
BEC 9163 "E" ... 4.C 09
BEC 9164 "E" ... 4.C 16
BEC 9165 "E" ... 4.C 16
BEC 9166 "B" ... 4.C 15
BEC 9167 "B" ... 4.C 15
BEC 9168 "B" ... 4.D 10
BEC 9169 "B" ... 4.D 10
BEC 9170 "E" ... 4.D 10
BEC 9171 "E" ... 4.D 11
BEC 9178 ... 4.L 17
BEC 9210 ... 4.K 07
BEC 9210 ... 4.K 10
BEC 9210 ... 4.K 12
BEC 9210 ... 4.K 14
BEC 9212 ... 4.K 12
BEC 9212 ... 4.K 14
BEC 9244 "D" ... 4.C 08
BEC 9244 "D" ... 4.C 12
BEC 9245 "D" ... 4.C 02
BEC 9245 "D" ... 4.C 12
BEC 9356 ... 4.N 13
BEC 9357 ... 4.N 13
BEC 9366 NDR ... 4.H 03
BEC 9374 SDC ... 4.I 17
BEC 9376 SDC ... 4.I 17
BEC 9388 SSC ... 4.I 13
BEC 9389 SSC ... 4.I 13
BEC 9398 SSC ... 4.I 13
BEC 9399 SSC ... 4.I 13
BEC 9404 SDC ... 4.I 13
BEC 9405 SDC ... 4.I 13
BEC 9464 "A" ... 4.D 04
BEC 9464 "A" ... 4.D 08
BEC 9465 "A" ... 4.D 04
BEC 9465 "A" ... 4.D 07
BEC 9466 "B" ... 4.D 06
BEC 9466 "B" ... 4.D 09
BEC 9472 "9" ... 4.G 04
BEC 9472 NDR ... 4.G 09
BEC 9473 "9" ... 4.G 04
BEC 9473 NDR ... 4.G 09
BEC 9502 LEG ... 3.C 08
BEC 9504 ... 4.H 07
BEC 9504 LEG ... 4.H 07
BEC 9505 ... 4.H 07
BEC 9505 LEG ... 4.H 07
BEC 9517 ... 4.N 13
BEC 9594 SDC ... 4.J 13
BEC 9595 SDC ... 4.J 13
BEC 9617 SDC ... 4.J 14
BEC 9618 ... 4.K 17
BEC 9619 ... 4.K 17
BEC 9620 ... 4.K 17
BEC 9621 ... 4.K 17
BEC 9622 ... 4.K 17
BEC 9623 ... 4.K 17
BEC 9624 ... 4.K 17
BEC 9625 ... 4.K 17
BEC 10048 "9" ... 4.J 15
BEC 10059 ... 4.H 07
BEC 10060 ... 4.H 07
BEC 10108 ... 4.J 03
BEC 10162 "7" ... 4.I 05
BEC 10162 SDC ... 4.I 08
BEC 10234 ... 4.L 14
BEC 10235 ... 4.L 14
BEC 10240 "B" ... 4.F 07
BEC 10241 "B" ... 4.F 07
BEC 10242 "B" ... 4.F 09
BEC 10243 "B" ... 4.F 09
BEC 10244 LEG ... 4.F 05
BEC 10244 LEG ... 4.F 07
BEC 10244 PMA ... 4.F 07
BEC 10245 LEG ... 4.F 05
BEC 10245 LEG ... 4.F 07
BEC 10245 PMA ... 4.F 07
BEC 10246 LEG ... 4.F 05
BEC 10246 LEG ... 4.F 07
BEC 10246 PMA ... 4.F 07
BEC 10247 LEG ... 4.F 05
BEC 10247 LEG ... 4.F 07
BEC 10247 PMA ... 4.F 07
BEC 10248 "B" ... 4.F 09
BEC 10249 "B" ... 4.F 09
BEC 10250 PMA ... 4.F 05
BEC 10251 PMA ... 4.F 05
BEC 10252 PMA ... 4.F 09
BEC 10253 PMA ... 4.F 09
BEC 10254 PMA ... 4.F 09
BEC 10255 PMA ... 4.F 09
BEC 10256 "B" ... 4.F 02
BEC 10257 "B" ... 4.F 02
BEC 10258 "B" ... 4.F 02
BEC 10259 "B" ... 4.F 02
BEC 10260 "B" ... 4.F 02
BEC 10261 "B" ... 4.F 02
BEC 10261 PMA ... 4.F 02
BEC 10274 "7" ... 4.H 14
BEC 10275 "7" ... 4.H 14
BEC 10276 "7" ... 4.H 17
BEC 10277 "7" ... 4.H 17
BEC 10278 RNR ... 4.H 16
BEC 10279 RNR ... 4.H 16
BEC 10283 ... 3.I 11
BEC 10316 ... 4.D 17
BEC 10317 ... 5.C 14
BEC 10359 ... 4.J 02
BEC 10362 ... 4.J 02
BEC 10363 ... 4.J 02
BEC 10366 ... 4.J 02
BEC 10367 ... 4.J 02
BEC 10388 AEM ... 2.I 11
BEC 10388 AEM ... 2.I 14
BEC 10388 LEG ... 2.I 11
BEC 10388 LEG ... 2.I 14
BEC 10390 CDH ... 4.L 12
BEC 10390 CDK ... 4.L 12
BEC 10414 ... 4.L 04
BEC 10415 ... 4.L 04
BEC 10465 ... 4.K 13
BEC 10473 ... 4.H 07
BEC 10476 AEE ... 4.J 13
BEC 10476 LDY ... 4.J 13
BEC 10477 AEE ... 4.J 13
BEC 10477 LDY ... 4.J 13
BEC 10478 AEE ... 4.J 13
BEC 10478 LDY ... 4.J 13
BEC 10479 AEE ... 4.J 13
BEC 10479 LDY ... 4.J 13
BEC 10492 CDH ... 4.L 11
BEC 10492 CDK ... 4.L 11
BEC 10493 LEG ... 4.H 07
BEC 10495 FDL ... 4.L 11
BEC 10495 JDL ... 4.L 11
BEC 10495 MDL ... 4.L 11
BEC 10624 FDL ... 4.L 10
BEC 10624 FDL ... 4.L 12
BEC 10624 JDL ... 4.L 10
BEC 10624 JDL ... 4.L 12
BEC 10624 MDL ... 4.L 10
BEC 10624 MDL ... 4.L 12
BEC 10625 FDL ... 4.L 10
BEC 10625 FDL ... 4.L 12
BEC 10625 JDL ... 4.L 10
BEC 10625 JDL ... 4.L 12
BEC 10625 MDL ... 4.L 10
BEC 10625 MDL ... 4.L 12
BEC 10626 CDH ... 4.L 10
BEC 10626 CDK ... 4.L 10
BEC 10627 CDH ... 4.L 10
BEC 10627 CDK ... 4.L 10
BEC 10646 "B" ... 4.C 02
BEC 10646 "B" ... 4.C 08
BEC 10647 "B" ... 4.C 02
BEC 10647 "B" ... 4.C 08
BEC 10650 "G" ... 4.C 02
BEC 10650 "G" ... 4.C 08
BEC 10651 "G" ... 4.C 02
BEC 10651 "G" ... 4.C 08
BEC 10654 "G" ... 4.C 14
BEC 10655 "G" ... 4.C 15
BEC 10656 "B" ... 4.C 14
BEC 10657 "B" ... 4.C 14
BEC 10673 ... 4.L 06
BEC 10674 ... 4.L 06
BEC 10677 ... 4.L 06
BEC 10678 ... 4.L 06
BEC 10680 ... 4.L 07
BEC 10683 ... 4.L 06
BEC 10684 ... 4.L 06
BEC 10747 ... 4.O 05
BEC 10761 ... 4.N 02
BEC 10761 ... 4.J 04
BEC 10840 "9" ... 4.G 12
BEC 10840 NDR ... 4.I 08
BEC 10841 "9" ... 4.G 12
BEC 10841 NDR ... 4.I 08
BEC 10869 ... 4.G 18
BEC 10972 ... 4.C 07
BEC 10972 ... 4.C 13
BEC 10973 ... 4.C 07
BEC 10973 ... 4.C 13
BEC 11048 ... 5.C 17
BEC 11048 ... 4.K 04
BEC 11049 ... 5.C 17
BEC 11049 ... 4.K 04
BEC 11138 "B" ... 4.F 09
BEC 11139 "B" ... 4.F 09
BEC 11140 PMA ... 4.F 09
BEC 11141 PMA ... 4.F 09
BEC 11142 "B" ... 4.F 07
BEC 11143 "B" ... 4.F 07
BEC 11144 PMA ... 4.F 05
BEC 11145 PMA ... 4.F 05
BEC 11294 ... 4.O 04
BEC 11294 ... 3.F 02
BEC 11295 ... 4.O 04
BEC 11295 ... 3.F 02
BEC 11297 ... 4.O 04
BEC 11297 ... 3.F 02
BEC 11298 "9" ... 4.H 14
BEC 11299 "9" ... 4.H 14
BEC 11300 "9" ... 4.H 17
BEC 11301 "9" ... 4.H 17
BEC 11388 ... 4.M 02
BEC 11389 ... 4.M 02
BEC 11452 ... 4.L 06
BEC 11453 ... 4.L 06
BEC 11454 ... 4.L 06
BEC 11506 "7" ... 4.I 03
BEC 11507 "7" ... 4.I 03
BEC 11508 "7" ... 4.I 04
BEC 11509 "7" ... 4.I 04
BEC 11509 SDC ... 4.I 08
BEC 11624 ... 4.C 14
BEC 11625 ... 4.D 18
BEC 11674 ... 4.I 16
BEC 11675 ... 4.I 16
BEC 11798 ... 4.L 04
BEC 11799 ... 4.L 04
BEC 11986 ... 4.J 03
BEC 12078 RNR ... 4.H 16
BEC 12079 RNR ... 4.H 16
BEC 12177 ... 4.I 16
BEC 12232 ... 4.L 02
BEC 12233 ... 4.L 02
BEC 12244 NDR ... 4.H 03
BEC 12262 ... 4.L 02
BEC 12347 "9" ... 4.J 15
BEC 12348 NDR ... 4.J 15
BEC 12386 AEE ... 4.J 09
BEC 12386 LDY ... 4.J 09
BEC 12386 SDC ... 4.J 09
BEC 12397 LDY ... 4.J 10
BEC 12397 SDC ... 4.J 10
BEC 12446 AEE ... 4.G 15
BEC 12446 LDY ... 4.G 15
BEC 12446 LEG ... 4.G 15
BEC 12447 AEE ... 4.G 15
BEC 12447 LDY ... 4.G 15
BEC 12447 LEG ... 4.G 15
BEC 12507 ... 4.J 07
BEC 12556 ... 5.E 03
BEC 12564 ... 3.F 03
BEC 12564 ... 3.J 07
BEC 12661 RNR ... 4.J 15
BEC 12664 ... 4.N 09
BEC 12665 ... 4.N 09
BEC 12668 ... 4.N 12
BEC 12669 ... 4.N 12
BEC 12670 ... 4.N 12
BEC 12671 ... 4.N 12
BEC 12794 ... 4.F 04
BEC 13316 ... 5.C 12
BEC 13368 SDC ... 4.H 16
BEC 13371 SDC ... 4.H 16
BEC 13390 "G" ... 4.C 17
BEC 13391 "G" ... 4.C 17
BEC 13392 "G" ... 4.C 05
BEC 13392 "G" ... 4.C 11
BEC 13393 "G" ... 4.C 05
BEC 13393 "G" ... 4.C 11
BEC 13396 "B" ... 4.C 16
BEC 13397 "B" ... 4.C 17
BEC 13398 "B" ... 4.C 04
BEC 13398 "B" ... 4.C 10
BEC 13399 "B" ... 4.C 04
BEC 13399 "B" ... 4.C 10
BEC 13404 "B" ... 4.C 03
BEC 13404 "B" ... 4.C 09
BEC 13405 "B" ... 4.C 04
BEC 13405 "B" ... 4.C 10
BEC 13414 RNR ... 4.D 03
BEC 13415 RNR ... 4.D 03
BEC 13514 ... 4.J 04
BEC 13654 ... 4.K 18
BEC 13660 ... 4.L 02
BEC 13661 ... 4.L 02
BEC 13857 ... 5.C 03
BEC 13874 "G" ... 4.C 04
BEC 13874 "G" ... 4.C 10
BEC 13875 "G" ... 4.C 04
BEC 13875 "G" ... 4.C 10
BEC 14011 ... 4.L 17
BEC 14084 ... 4.L 14
BEC 14085 ... 4.L 14
BEC 14204 ... 4.H 07
BEC 14242 ... 4.L 14
BEC 14243 ... 4.L 14
BEC 14378 ... 4.H 07
BEC 14454 ... 4.J 03
BEC 14458 ... 4.J 03
BEC 14484 ... 4.H 14
BEC 14485 ... 4.H 14
BEC 14486 ... 4.H 17
BEC 14562 SDC ... 4.H 16
BEC 14563 SDC ... 4.H 16
BEC 14564 SDC ... 4.H 16
BEC 14565 SDC ... 4.H 16
BEC 14713 ... 4.K 03
BEC 14733 ... 5.C 03
BEC 14865 LEG ... 4.H 07
BEC 14866 SDC ... 4.H 03
BEC 14938 AEE ... 4.G 10
BEC 14938 LDY ... 4.G 10
BEC 14939 AEE ... 4.G 11
BEC 14939 LDY ... 4.G 11
BEC 14940 AEE ... 4.G 10
BEC 14940 LDY ... 4.G 10
BEC 14941 AEE ... 4.G 10
BEC 14941 LDY ... 4.G 10
BEC 14950 ... 4.M 02
BEC 14951 ... 4.M 02
BEC 15026 ... 4.O 04
BEC 15027 ... 4.O 04
BEC 15028 ... 4.O 04
BEC 15029 ... 4.O 04
BEC 15050 "T" ... 4.I 10
BEC 15051 "T" ... 4.I 10
BEC 15052 "T" ... 4.I 10
BEC 15053 "T" ... 4.I 10
BEC 15054 SDC ... 4.I 13
BEC 15055 SDC ... 4.I 13
BEC 15080 "W" ... 4.I 11
BEC 15081 "W" ... 4.I 11
BEC 15082 SSC ... 4.I 13
BEC 15083 SSC ... 4.I 13
BEC 15088 "U" ... 4.I 12
BEC 15089 "U" ... 4.I 12
BEC 15071 SSC ... 4.I 13
BEC 15080 AEE ... 4.G 13
BEC 15080 LDY ... 4.G 13
BEC 15080 SDC ... 4.G 09
BEC 15091 AEE ... 4.G 13
BEC 15091 LDY ... 4.G 13
BEC 15091 SDC ... 4.G 09
BEC 15132 ... 2.I 10
BEC 15338 SDC ... 4.I 08
BEC 15345 LEG ... 4.J 05
BEC 15462 ... 5.C 13
BEC 15481 LEG ... 4.H 07
BEC 15482 LEG ... 4.H 07
BEC 15482 SDC ... 4.H 03
BEC 15486 ... 4.N 05
BEC 15487 ... 4.N 05
BEC 15488 ... 4.N 05
BEC 15489 ... 4.N 05
BEC 15510 ... 4.N 08
BEC 15511 ... 4.N 08
BEC 15512 ... 4.N 08
BEC 15513 ... 4.N 09
BEC 15538 LEG ... 4.J 05
BEC 15560 ... 4.K 07
BEC 15560 ... 4.K 10
BEC 15560 ... 4.K 12
BEC 15560 ... 4.K 14
BEC 15848 ... 4.L 04
BEC 15849 ... 4.L 04
BEC 15864 ... 4.N 08
BEC 15865 ... 4.N 08
BEC 15882 NDR ... 4.H 16
BEC 15883 NDR ... 4.H 16
BEC 15884 NDR ... 4.H 16
BEC 15885 NDR ... 4.H 16
BEC 15920 ... 4.N 10
BEC 15921 ... 4.N 10
BEC 15968 ... 4.N 14
BEC 15968 ... 4.N 17
BEC 15968 ... 4.H 15
BEC 15968 ... 4.H 18
BEC 15969 ... 4.N 14
BEC 15969 ... 4.N 17
BEC 15969 ... 4.H 15

BEC	15889	4.H 16	BEC	16623 "H"	4.C 17	BEC	18057 AEE	4.G 10	BEC	19050	4.K 17	BEC	21788 AEE	4.G 10	BEC	24151	4.K 08	BH	108081 J	2.G 04	BX	112131 J	2.H 02
BEC	16032 "G"	4.C 17	BEC	16680 "J"	4.H 17	BEC	18057 LDY	4.G 10	BEC	19051	4.K 17	BEC	21788 LDY	4.G 10	BEC	24152	4.K 11	BH	108091 J	2.I 10	C	724	4.N 03
BEC	16033 "G"	4.C 17	BEC	16681 "J"	4.H 17	BEC	18058 AEE	4.G 10	BEC	19056 AEE	4.G 07	BEC	21789 AEE	4.G 11	BEC	24152	4.K 13	BH	108101 J	1.N 15	C	794	2.J 06
BEC	16034 "G"	4.C 05	BEC	16684 "J"	4.H 10	BEC	18058 LDY	4.G 10	BEC	19056 LDY	4.G 07	BEC	21789 LDY	4.G 11	BEC	24164	4.L 05	BH	108101 J	1.N 17	C	1040 12	1.L 11
BEC	16034 "G"	4.C 11	BEC	16685 "J"	4.H 10	BEC	18059 AEE	4.G 11	BEC	19057 AEE	4.G 07	BEC	21790 AEE	4.G 10	BEC	24165	4.L 05	BH	108101 J	1.N 16	C	1040 12	1.L 12
BEC	16035 "G"	4.C 05	BEC	16732 "J"	4.H 14	BEC	18059 LDY	4.G 11	BEC	19058 "W"	4.I 10	BEC	21790 LDY	4.G 10	BEC	24168	4.N 08	BH	108141 J	1.N 15	C	1040 19	1.L 17
BEC	16035 "G"	4.C 11	BEC	16733 "J"	4.H 14	BEC	18120	4.M 05	BEC	19059 "W"	4.I 10	BEC	21791 AEE	4.G 10	BEC	24169	4.N 08	BH	108141 J	1.N 17	C	1040 19	1.M 04
BEC	16136 AEE	4.G 07	BEC	16982	4.K 11	BEC	18121	4.M 05	BEC	19060 "W"	4.I 10	BEC	21791 LDY	4.G 10	BEC	24575	4.K 16	BH	108141 J	1.N 16	C	1040 2	2.G 05
BEC	16136 LDY	4.G 07	BEC	16988 AEE	4.H 08	BEC	18122	4.M 05	BEC	19061 "W"	4.I 10	BEC	21828	5.C 13	BEC	24710 LEA	4.I 15	BH	108231 J	1.J 06	C	1040 35	1.L 16
BEC	16137 LDY	4.G 07	BEC	16988 AEM	4.H 08	BEC	18124	4.M 04	BEC	19062 "W"	4.I 10	BEC	21878	4.G 02	BEC	24712 AEF	4.I 15	BH	108241 J	2.G 03	C	1040 5	2.M 07
BEC	16170 PDP	4.L 0[illegible]	BEC	16988 LDY	4.H 08	BEC	18124	4.L 17	BEC	19063 "W"	4.I 10	BEC	21879	4.G 02	BEC	24712 LEA	4.I 15	BH	108261 J	3.I 09	C	1042	3.L 12
BEC	16171 PDP	4.L 0[illegible]	BEC	17014	4.H 05	BEC	18125	4.L 17	BEC	19064 SSC	4.I 13	BEC	21886	4.G 02	BEC	24862	4.K 05	BH	108261 J	3.I 10	C	1042	5.E 10
BEC	16192	4.H 13	BEC	17016	4.L 04	BEC	18126	4.M 05	BEC	19065 SSC	4.I 13	BEC	21887	4.G 02	BEC	24862	4.K 08	BH	108281 J	1.N 12	C	1042	5.E 11
BEC	16193	4.H 13	BEC	17017	4.L 04	BEC	18129	4.I 16	BEC	19126	4.O 03	BEC	21888	4.G 02	BEC	24863	4.K 05	BH	110081 J	3.D 02	C	2243 A	1.F 13
BEC	16295	4.K 17	BEC	17138	4.L 16	BEC	18174 CDH	4.L 12	BEC	19127	4.O 03	BEC	21889	4.G 02	BEC	24863	4.K 08	BH	110081 J	3.D 04	C	2243 AP	1.F 13
BEC	16313	4.O 05	BEC	17139	4.L 16	BEC	18174 CDK	4.L 12	BEC	19128	4.O 03	BEC	21928	4.K 16	BEC	24866	4.K 08	BH	110261 J	3.D 06	C	2243 B	1.F 13
BEC	16313	4.I 16	BEC	17254	4.I 02	BEC	18176 CDH	4.L 11	BEC	19129	4.O 03	BEC	21992 LEG	4.F 05	BEC	24868	4.K 13	BH	110261 J	3.D 03	C	2243 BP	1.F 13
BEC	16318	4.I 16	BEC	17594 "D"	4.C 06	BEC	18176 CDK	4.L 11	BEC	19326 "M"	4.I 17	BEC	21992 LEG	4.F 07	BEC	24914 SDC	4.H 16	BH	110261 J	3.D 05	C	2243 C	1.F 13
BEC	16334	4.N 05	BEC	17594 "D"	4.C 12	BEC	18256 AEE	4.G 07	BEC	19329 "M"	4.I 17	BEC	21993 LEG	4.F 05	BEC	24917 SDC	4.H 16	BH	110281 J	3.I 10	C	2243 CP	1.F 13
BEC	16335	4.N 05	BEC	17595 "D"	4.C 06	BEC	18256 LDY	4.G 07	BEC	19330 SDC	4.I 17	BEC	21993 LEG	4.F 07	BEC	25189	4.O 03	BH	110301 J	3.C 12	C	2243 DP	1.F 13
BEC	16336	4.N 05	BEC	17595 "D"	4.C 12	BEC	18257 LDY	4.G 07	BEC	19331	4.N 03	BEC	21994 LEG	4.F 05	BEC	25239 AEF	4.I 16	BH	110301 J	3.C 14	C	2243 E	1.F 13
BEC	16337	4.N 05	BEC	17610	4.N 11	BEC	18266	4.J 06	BEC	19511	4.J 03	BEC	21994 LEG	4.F 07	BEC	25239 AFG	4.I 16	BH	110301 J	3.C 16	C	2243 EP	1.F 14
BEC	16342	4.N 05	BEC	17611	4.N 11	BEC	18400	4.O 05	BEC	19898 AEE	4.J 10	BEC	22070	4.N 02	BEC	25239 LEA	4.I 16	BH	110301 J	3.C 15	C	2243 F	1.F 14
BEC	16343	4.N 05	BEC	17612	4.N 11	BEC	18401	4.O 05	BEC	19898 LDY	4.J 10	BEC	22227	4.M 02	BEC	25239 LFH	4.I 16	BH	110301 J	3.C 17	C	2243 FP	1.F 14
BEC	16344	4.N 05	BEC	17613	4.N 11	BEC	18414	4.N 06	BEC	19898 SDC	4.J 10	BEC	22232	4.L 16	BEC	25260	4.L 17	BH	112081 J	2.J 13	C	2243 G	1.F 14
BEC	16345	4.N 05	BEC	17622 "G"	4.D 04	BEC	18415	4.N 06	BEC	20244	4.N 16	BEC	22233	4.L 16	BEC	25457	4.M 04	BH	112121 PJ	2.J 17	C	2243 GP	1.F 14
BEC	16448 "B"	4.H 05	BEC	17622 "G"	4.D 07	BEC	18416	4.N 10	BEC	20245	4.N 16	BEC	22404	4.G 03	BEC	25457	4.L 17	BH	112131 J	2.J 13	C	2243 H	1.F 14
BEC	16449 AEE	4.H 05	BEC	17623 "G"	4.D 04	BEC	18417	4.N 10	BEC	20246	4.N 16	BEC	22405	4.G 03	BEC	25519	4.J 02	BH	112131 J	2.J 16	C	2243 HP	1.F 14
BEC	16449 AEM	4.H 05	BEC	17623 "G"	4.D 07	BEC	18500 "J"	4.C 18	BEC	20247	4.N 16	BEC	22481 AEE	4.J 06	BEC	25878	4.N 06	BH	112181 J	2.J 13	C	2243 I	1.F 14
BEC	16449 LDY	4.H 05	BEC	17630 "G"	4.C 05	BEC	18501 "J"	4.D 02	BEC	20248	4.N 16	BEC	22481 LDY	4.J 06	BEC	25879	4.N 06	BH	212091 MJ	2.J 13	C	2243 IP	1.F 14
BEC	16449 NDR	4.H 05	BEC	17630 "G"	4.C 11	BEC	18503 "B"	4.H 02	BEC	20249	4.N 16	BEC	22482 AEE	4.J 06	BEC	25939	4.N 05	BH	607301 J	2.I 15	C	2243 J	1.F 14
BEC	16458	4.N 05	BEC	17631 "G"	4.C 05	BEC	18514	4.K 17	BEC	20626	4.N 06	BEC	22482 LDY	4.J 06	BEC	25966	5.C 17	BH	607301 J	2.I 16	C	2243 JP	1.F 14
BEC	16459	4.N 05	BEC	17631 "G"	4.C 11	BEC	18515	4.K 17	BEC	20627	4.N 06	BEC	22722	4.J 04	BEC	25997	5.C 17	BH	607301 J	2.J 04	C	2243 K	1.F 14
BEC	16460	4.N 05	BEC	17632 "G"	4.C 05	BEC	18518	4.K 17	BEC	20628	4.N 11	BEC	22957 "B"	4.D 14	BEC	26666 SDC	4.J 09	BH	612451 J	2.J 07	C	2243 KP	1.F 14
BEC	16461	4.N 05	BEC	17632 "G"	4.C 11	BEC	18519	4.K 17	BEC	20629	4.N 11	BEC	22959 "B"	4.D 14	BEC	26667 SDC	4.J 09	BHA	4359	4.H 13	C	2243 L	1.F 14
BEC	16464 AEE	4.G 15	BEC	17644 "G"	4.C 02	BEC	18522	4.K 17	BEC	20630	4.N 11	BEC	22961 "B"	4.D 14	BEC	26668 AEE	4.J 09	BL	109111 24	4.K 06	C	2243 LP	1.F 14
BEC	16464 LDY	4.G 15	BEC	17644 "G"	4.C 06	BEC	18523	4.K 17	BEC	20631	4.N 11	BEC	22962 "B"	4.D 14	BEC	26668 LDY	4.J 09	BMK	2091	1.L 11	C	2243 M	1.F 14
BEC	16464 LEG	4.G 15	BEC	17645 "G"	4.C 02	BEC	18524	4.K 16	BEC	20650	4.K 16	BEC	23046	4.K 11	BEC	26669 AEE	4.J 09	BMK	2117 J	4.I 07	C	2243 MP	1.F 14
BEC	16465 AEE	4.G 15	BEC	17645 "G"	4.C 06	BEC	18525	4.K 17	BEC	20672	4.I 06	BEC	23046	4.K 13	BEC	26669 LDY	4.J 09	BMK	2117 J	3.K 03	C	2243 N	1.F 14
BEC	16465 LDY	4.G 15	BEC	17648 "G"	4.C 03	BEC	18660 "G"	4.C 17	BEC	21043 AEE	4.J 06	BEC	23047	4.K 11	BEC	6666 DR	4.H 16	BP	108201 J	2.J 07	C	2243 NP	1.F 14
BEC	16465 LEG	4.G 15	BEC	17648 "G"	4.C 09	BEC	18661 "G"	4.C 17	BEC	21043 LDY	4.J 06	BEC	23047	4.K 13	BEC	6669 DR	4.H 16	BP	110104 J	4.I 12	C	2243 O	1.F 14
BEC	16466	4.J 02	BEC	17649 "G"	4.C 03	BEC	18666 "G"	4.C 17	BEC	21044 AEE	4.J 06	BEC	23058	4.L 17	BH	105101 J	1.M 06	BP	110104 J	4.I 13	C	2243 OP	1.F 14
BEC	16539 "B"	4.H 13	BEC	17649 "G"	4.C 09	BEC	18667 "G"	4.C 17	BEC	21044 LDY	4.J 06	BEC	23122 "B"	4.D 14	BH	105101 J	1.M 08	BRC	1063	2.G 07	C	2243 P	1.F 14
BEC	16540 "B"	4.H 13	BEC	17656 "G"	4.D 05	BEC	18971 "V"	4.I 12	BEC	21092	4.K 17	BEC	23512	4.M 05	BH	108051 J	5.C 04	BRC	1063	2.G 08	C	2243 PP	1.F 14
BEC	16544 "B"	4.H 13	BEC	17656 "G"	4.D 08	BEC	18971 "V"	4.I 14	BEC	21093	4.K 17	BEC	23512	4.L 17	BH	108091 J	1.I 02	BRC	3101	4.N 14	C	2243 Q	1.F 14
BEC	16545 "B"	4.H 13	BEC	17657 "G"	4.D 05	BEC	18971 SDC	4.I 13	BEC	21094	4.K 17	BEC	23778	1.M 08	BH	108151 J	1.I 05	BRC	3101	4.N 17	C	2243 QP	1.F 14
BEC	16553	4.M 04	BEC	17657 "G"	4.D 08	BEC	18974	4.I 18	BEC	21095	4.K 17	BEC	23778	1.M 06	BH	108071 J	2.G 03	BRC	3101	4.O 03	C	2243 R	1.F 14
BEC	16566 "H"	4.C 14	BEC	17718	4.I 16	BEC	18975	4.I 18	BEC	21096	4.K 17	BEC	23982 NDR	4.I 08	BH	108071 J	2.G 04	BRC	3101	4.I 16	C	2243 RP	1.F 14
BEC	16567 "H"	4.C 15	BEC	17729	4.K 18	BEC	18992	4.K 18	BEC	21097	4.K 17	BEC	24106	4.L 04	BH	108081 J	2.H 04	BRC	3101	4.J 09	C	2243 S	1.F 14
BEC	16576 "B"	4.H 12	BEC	17968	4.L 02	BEC	19044	4.K 17	BEC	21098	4.K 17	BEC	24107	4.L 04	BH	108081 J	2.H 08	BRC	5101	4.J 09	C	2243 SD	1.F 13
BEC	16577 "B"	4.H 12	BEC	17969	4.L 02	BEC	19045	4.K 17	BEC	21099	4.K 17	BEC	24115	4.N 15	BH	108081 J	2.H 11	BRC	6035	4.N 07	C	2243 SP	1.F 14
BEC	16586 "B"	4.H 12	BEC	18044 SDC	4.G 09	BEC	19046	4.K 17	BEC	21107	4.J 02	BEC	24115	4.N 17	BH	108081 J	2.G 03	BRC	6035 J	4.N 07	C	2243 SW	1.F 14
BEC	16587 "B"	4.H 12	BEC	18045 SDC	4.G 09	BEC	19047	4.K 17	BEC	21300	4.O 05	BEC	24150	4.K 05	BH	108081 J	3.H 06	BRC	6035 J	4.N 03	C	2243 T	1.F 14
BEC	16600	4.M 04	BEC	18056 AEE	4.G 10	BEC	19048	4.K 17	BEC	21304	4.O 05	BEC	24150	4.K 06	BH	108081 J	2.M 15	BX	108081 J	4.F 04	C	2243 TP	1.F 14
BEC	16622 "H"	4.C 17	BEC	18056 LDY	4.G 10	BEC	19049	4.K 17	BEC	21305	4.O 05	BEC	24151	4.K 05	BH	108081 J	2.M 16	BX	112131 J	2.G 12	C	2243 U	1.F 14

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

G09
Fiche 5

NUMERIC INDEX "C 2243UP" TO "CAC 5118 "

C	2243 UP	1.F 14	C	16862 2	1.F 13	C	27328 3Z	2.G 06	C	31075	2.C 06	C	36175 19	1.N 11	C	43212	1.L 07	CAC	2750	2.C 17	CAC	4073	2.C 11
C	2243 V	1.F 14	C	16862 3	1.F 17	C	27480	1.F 13	C	31075	2.C 18	C	36175 19	1.N 04	C	43230	1.L 05	CAC	2750	2.C 11	CAC	4073	2.C 09
C	2243 VP	1.F 14	C	16862 3	1.G 02	C	27481	1.G 18	C	31075	2.C 12	C	36175 19	1.N 05	C	43231	1.L 05	CAC	2750	2.C 06	CAC	4073	2.C 08
C	2243 WP	1.F 14	C	16862 3	1.G 03	C	27481	1.F 13	C	31135	2.G 05	C	36813 2	5.E 14	C	43232	1.L 05	CAC	2750	2.C 18	CAC	4123	2.K 08
C	2243 X	1.F 14	C	16862 6	1.F 13	C	27482	1.G 18	C	31135	2.G 06	C	37021	1.L 06	C	43638	1.E 09	CAC	2750	2.C 12	CAC	4123	2.K 09
C	2286 18	1.K 06	C	16862 8	1.H 08	C	27482	1.F 13	C	31973 11	2.K 07	C	37330	3.I 06	C	43638	1.E 10	CAC	2958	2.C 17	CAC	4123	2.K 10
C	2286 20	1.N 14	C	16862 8	1.H 10	C	28654 3	2.G 12	C	31973 14	1.J 03	C	37939	1.L 04	C	43644	5.F 08	CAC	2958	2.D 02	CAC	4123	2.K 12
C	2286 20	1.N 12	C	17432	3.J 05	C	28654 3	2.H 02	C	31973 15	4.K 07	C	37939	1.L 05	C	43695	2.M 15	CAC	3101	1.M 04	CAC	4123	2.K 14
C	2286 22	1.E 13	C	17916 1	2.C 02	C	28654 3	2.G 15	C	31973 15	4.K 10	C	37939	1.L 06	C	43695	2.M 16	CAC	3101	1.I 04	CAC	4123	2.K 17
C	2286 23	1.E 08	C	17916 1	2.C 05	C	28654 3	2.G 11	C	32202	2.G 05	C	37939	1.L 07	C	44010	1.F 15	CAC	3101	1.M 09	CAC	4123	2.L 02
C	2286 23	1.E 10	C	17916 1	2.C 03	C	28654 4	2.G 12	C	32202	2.G 06	C	37939	1.L 10	C	44063	2.C 13	CAC	3103	2.C 13	CAC	4188	3.D 08
C	2286 23	1.N 13	C	17916 1	2.C 07	C	28654 4	2.H 02	C	32366	1.H 02	C	38528	2.I 11	C	44063	2.C 16	CAC	3103	2.C 16	CAC	4336	2.C 02
C	2286 23	1.N 14	C	17916 1	2.C 08	C	28654 4	2.G 15	C	32366	1.H 05	C	38827	5.F 08	C	44063	2.C 15	CAC	3103	2.C 15	CAC	4336	2.C 05
C	2286 23	1.N 12	C	17916 1	2.C 11	C	28654 4	2.G 11	C	32366	1.H 06	C	38827 2	5.F 06	C	44063	2.C 17	CAC	3103	2.C 17	CAC	4336	2.C 03
C	2286 24	1.E 06	C	17916 1	2.C 09	C	28732	1.L 11	C	32366	1.E 18	C	38827 2	4.K 07	C	44063	2.C 11	CAC	3103	2.C 18	CAC	4336	2.C 07
C	2286 24	1.E 10	C	17916 1	2.C 06	C	28890	1.F 13	C	32367 1	1.F 05	C	38827 2	3.K 17	C	44063	2.C 08	CAC	3103	2.C 12	CAC	4336	2.C 06
C	2286 24	1.E 14	C	18066	3.K 18	C	28890	1.F 17	C	32367 1	1.F 07	C	38966	3.H 07	C	44063	2.C 18	CAC	3398	3.D 12	CAC	4336	2.C 11
C	2286 24	1.E 13	C	18066	3.K 12	C	28890	1.G 02	C	32367 1	1.F 08	C	38966	4.J 14	C	44063	2.C 12	CAC	3533	2.J 03	CAC	4336	2.C 09
C	2286 4	1.E 10	C	18405 1	2.C 03	C	28890	1.G 03	C	32367 1	1.F 06	C	39193 8	1.M 05	C	44230	1.E 15	CAC	3554	2.J 03	CAC	4336	2.C 06
C	2286 4	1.F 18	C	18405 1	2.C 07	C	28891	1.F 13	C	32746 2	2.K 07	C	39246	2.E 05	C	44230	1.E 13	CAC	3801 4	2.C 02	CAC	4547 2	2.K 06
C	2286 4	1.G 05	C	18405 1	2.C 09	C	28891	1.F 17	C	32746 2	1.I 02	C	39246	2.E 06	C	44468	2.I 08	CAC	3801 4	2.C 05	CAC	4547 2	2.K 14
C	2373	1.G 15	C	19706	2.M 12	C	28891	1.G 02	C	33139 4	1.J 12	C	39377	5.F 07	C	44468	2.I 09	CAC	3801 4	2.C 04	CAC	4547 2	2.K 15
C	2373	1.E 06	C	19827	2.G 12	C	28891	1.G 03	C	33139 6	1.M 05	C	39377	1.J 12	C	44667	2.L 03	CAC	3801 4	2.C 07	CAC	4554 3	2.G 11
C	2373	1.E 10	C	19827	2.G 15	C	29428	1.G 15	C	33244	1.G 15	C	39377	3.E 05	C	45021	3.I 06	CAC	3801 4	2.C 08	CAC	4555 6	2.G 15
C	2373	1.E 12	C	19827	2.G 14	C	29583	2.G 12	C	33244	1.G 16	C	39456	2.I 04	C	45089	5.F 07	CAC	3801 4	2.C 13	CAC	4556	2.J 02
C	2373	1.G 06	C	19827	2.G 11	C	29583	2.H 02	C	33460	1.J 04	C	39457	2.I 04	C	45089	1.M 08	CAC	3801 4	2.C 16	CAC	4568	1.N 03
C	2373	1.G 07	C	20172	1.J 12	C	29583	2.G 15	C	33626	1.M 16	C	39520	3.D 08	C	45089	1.J 12	CAC	3801 4	2.C 15	CAC	4572 2	1.N 11
C	2373	1.G 08	C	20852 3	1.L 04	C	29583	2.G 11	C	33635	1.L 04	C	41014	3.F 18	C	45089	3.E 02	CAC	3801 4	2.C 17	CAC	4572 2	1.N 03
C	2373	1.G 05	C	20852 3	1.L 05	C	29699	1.F 10	C	33684	1.L 08	C	41712	2.M 02	C	45287	1.L 11	CAC	3801 4	2.C 11	CAC	4572 2	1.N 04
C	4146	1.E 18	C	20852 3	1.L 06	C	29699	1.F 11	C	33684	1.L 09	C	41712	2.M 03	C	45287	1.L 12	CAC	3801 4	2.C 10	CAC	4572 2	1.N 05
C	4999	4.I 08	C	20852 3	1.L 07	C	29875	1.N 06	C	33689	1.G 09	C	41712	2.M 06	C	45726	2.J 02	CAC	3801 4	2.C 08	CAC	4572 3	1.N 11
C	4999	3.E 05	C	21089	2.J 07	C	30075 2	1.G 15	C	33689	1.G 11	C	41712	2.M 05	C	45758 3	1.J 07	CAC	3801 4	2.C 18	CAC	4572 3	1.N 03
C	5946	1.E 18	C	21515	2.M 08	C	30075 2	1.H 07	C	33917	1.G 09	C	41712	2.J 15	C	45758 3	1.J 08	CAC	3801 4	2.C 12	CAC	4603	2.J 02
C	8016	3.J 05	C	21515	2.M 09	C	30075 2	1.H 08	C	33917	1.G 11	C	41712	2.M 04	C	46021	1.H 13	CAC	3802	2.C 02	CAC	4610	2.J 10
C	8631	2.F 18	C	22803	2.M 08	C	30075 2	1.H 09	C	33918	1.G 09	C	42150	2.M 05	C	46272	1.E 16	CAC	3802	2.C 05	CAC	4610	2.J 12
C	8737 6	2.J 06	C	22803	2.M 09	C	30075 2	1.H 10	C	33918	1.G 11	C	42150	2.M 04	C	46272	1.E 17	CAC	3802	2.C 04	CAC	4650	2.J 02
C	9128	5.E 14	C	22803	2.M 10	C	30075 2	1.N 06	C	34241	3.I 09	C	42176	1.G 15	C	46294	5.F 07	CAC	3802	2.C 07	CAC	4651 10	2.I 15
C	9128	3.K 16	C	23035	1.M 04	C	30044	1.N 09	C	34241	3.I 10	C	42511	1.G 15	C	46294	1.M 08	CAC	3802	2.C 08	CAC	4651 10	2.I 16
C	9128	3.K 14	C	23035	5.C 03	C	30361	1.N 11	C	34646 19	3.E 05	C	42511	1.H 02	C	46294	4.K 07	CAC	3802	2.C 13	CAC	4713	2.J 17
C	9128	3.K 18	C	23035	1.I 03	C	30431	1.G 15	C	34697	1.F 05	C	42511	1.H 05	CAC	1742	2.M 08	CAC	3802	2.C 16	CAC	4713 1	2.J 17
C	9128	3.K 11	C	24119 4	2.H 12	C	30431	1.F 18	C	34697	1.F 07	C	42511	1.H 06	CAC	1742	2.M 09	CAC	3802	2.C 15	CAC	4771	2.J 14
C	10193	4.I 08	C	24119 4	2.H 14	C	30431	1.G 02	C	34697	1.F 08	C	42511	1.F 02	CAC	1742	2.M 10	CAC	3802	2.C 17	CAC	4772	2.J 14
C	13478	1.H 15	C	24688	1.G 11	C	30431	1.H 02	C	34697	1.F 06	C	42511	1.F 03	CAC	1742	2.G 09	CAC	3802	2.C 11	CAC	4827 1	2.J 13
C	13824	1.L 12	C	24689	2.G 09	C	30431	1.H 03	C	34697 1	1.F 05	C	42797	1.E 18	CAC	1825	2.J 18	CAC	3802	2.C 10	CAC	4866 1	3.D 12
C	14350	1.L 10	C	25869	5.F 07	C	30431	1.H 04	C	34697 1	1.F 07	C	42797	1.E 17	CAC	1825	2.K 02	CAC	3802	2.C 06	CAC	4883	2.M 06
C	14581	1.F 13	C	27328 3	1.L 12	C	30741	2.I 10	C	34697 1	1.F 08	C	42799 1	3.D 15	CAC	1825	2.I 08	CAC	3802	2.C 18	CAC	4918	2.M 06
C	14582	1.F 15	C	27328 3	2.M 10	C	30767	1.G 09	C	34697 1	1.F 06	C	42799 1	4.I 04	CAC	1853 4	1.I 02	CAC	3802 1	2.C 12	CAC	4919	2.M 06
C	15190 8	3.D 12	C	27328 32	2.C 02	C	30767	1.G 11	C	35083 1	1.E 15	C	42799 17	1.I 13	CAC	1853 5	1.M 08	CAC	3803	2.C 11	CAC	4985	2.M 10
C	15183	3.I 06	C	27328 32	2.C 05	C	30954	2.J 04	C	35093 1	1.E 13	C	42799 17	1.J 15	CAC	1853 8	1.M 06	CAC	3878	2.J 09	CAC	4985	2.G 09
C	15183	3.I 10	C	27328 32	2.C 03	C	30954	2.J 06	C	35864	3.C 10	C	42799 17	1.I 09	CAC	1853 8	1.L 17	CAC	3878	2.J 11	CAC	4999	2.J 02
C	15308	2.J 03	C	27328 32	2.C 09	C	31075	2.C 13	C	35864	3.C 11	C	42879	2.I 10	CAC	2469	4.D 16	CAC	4073	2.C 02	CAC	5073	2.K 06
C	15844	1.K 07	C	27328 3Z	2.M 06	C	31075	2.C 16	C	36120	3.C 13	C	43206 5	1.M 06	CAC	2841 1	1.M 04	CAC	4073	2.C 05	CAC	5074	2.M 06
C	15844	1.J 06	C	27328 3Z	2.M 10	C	31075	2.C 15	C	36120	3.C 18	C	43212	1.L 04	CAC	2750	2.C 14	CAC	4073	2.C 03	CAC	5118	1.H 02
C	16370	2.I 06	C	27328 3Z	2.M 13	C	31075	2.C 17	C	36120	3.I 09	C	43212	1.L 05	CAC	2750	2.C 16	CAC	4073	2.C 07	CAC	5118	1.H 05
C	16370	2.I 09	C	27328 3Z	2.G 05	C	31075	2.C 11	C	36120	3.I 10	C	43212	1.L 06	CAC	2750	2.C 15	CAC	4073	2.C 08	CAC	5118	1.H 06

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

G10
Fiche 5

NUMERIC INDEX "CAC 5118" TO "CAC 9716"

CAC	5118	1.E 17	CAC	6880	2.G 09	CAC	7522 1	3.D 07	CAC	8051 30	1.I 05	CAC	8509	1.F 04	CAC	8774	1.I 04	CAC	9252	2.M 06	CAC	9463	1.L 11
CAC	5118	1.F 04	CAC	6727	2.G 05	CAC	7522 2	3.D 07	CAC	8051 4	3.D 08	CAC	8518	1.M 08	CAC	8774 2	1.I 05	CAC	9253	1.M 06	CAC	9463	1.L 13
CAC	5381	2.J 17	CAC	6739	1.I 05	CAC	7522 5	1.N 11	CAC	8080	2.M 08	CAC	8518	1.M 08	CAC	8776	1.I 05	CAC	9253	1.M 06	CAC	9464	1.L 11
CAC	5537	1.F 04	CAC	6739	1.I 02	CAC	7522 6	1.N 11	CAC	8081	2.M 08	CAC	8533	2.M 15	CAC	8776	1.I 04	CAC	9268	2.J 03	CAC	9464	1.L 13
CAC	5567	2.N 04	CAC	6739	1.I 03	CAC	7576	2.G 12	CAC	8085	5.E 12	CAC	8533	2.M 16	CAC	8776	1.I 02	CAC	9268	2.J 05	CAC	9465	1.L 11
CAC	5692	1.M 10	CAC	6776	2.J 03	CAC	7576	2.G 18	CAC	8086	2.I 10	CAC	8535	2.C 02	CAC	8776	1.I 03	CAC	9269	2.J 03	CAC	9465	1.L 13
CAC	5825	2.J 09	CAC	6777	2.J 03	CAC	7576	2.G 16	CAC	8092	1.N 11	CAC	8535	2.C 03	CAC	8777 1	4.K 03	CAC	9269	2.J 05	CAC	9474	2.G 05
CAC	5833	2.J 15	CAC	6840	1.N 02	CAC	7585 1	2.J 04	CAC	8092	1.N 03	CAC	8535	2.C 07	CAC	8848	2.I 15	CAC	9278	3.D 15	CAC	9484	2.E 15
CAC	5834	2.N 04	CAC	6853	2.I 05	CAC	7585 1	2.J 05	CAC	8128	1.L 15	CAC	8535	2.C 09	CAC	8848	2.I 16	CAC	9293	1.N 11	CAC	9492	2.J 15
CAC	5835	2.N 04	CAC	6874	1.I 05	CAC	7586	1.M 04	CAC	8130	5.E 14	CAC	8544	3.D 08	CAC	8849	2.I 15	CAC	9294	1.N 11	CAC	9493 50	2.J 15
CAC	5840	2.J 16	CAC	6874	1.I 04	CAC	7586	1.I 05	CAC	8131	5.E 14	CAC	8601 1	2.M 14	CAC	8849	2.I 16	CAC	9295	2.J 03	CAC	9494 65	2.J 15
CAC	5846	2.J 10	CAC	6874	1.I 02	CAC	7586	1.I 04	CAC	8132	5.E 14	CAC	8601 2	2.M 14	CAC	8855	1.I 02	CAC	9301	2.G 05	CAC	9495	2.J 14
CAC	5848	2.J 12	CAC	6883	2.K 11	CAC	7586	1.I 03	CAC	8133	5.E 14	CAC	8602 1	2.M 14	CAC	8900 11	1.I 04	CAC	9301	2.G 06	CAC	9496	2.J 15
CAC	5863	2.J 03	CAC	7000	5.E 13	CAC	7623	2.J 16	CAC	8134	5.E 14	CAC	8602 1	2.M 16	CAC	8901 22	1.L 17	CAC	9304 2	2.L 03	CAC	9498 1	2.N 05
CAC	5863	2.J 05	CAC	7053	1.M 02	CAC	7640	2.M 15	CAC	8139	5.E 14	CAC	8603	2.M 15	CAC	8901 22	1.I 05	CAC	9313	1.N 03	CAC	9498 1	2.M 16
CAC	5866 20	1.M 06	CAC	7053	2.M 05	CAC	7640	2.M 16	CAC	8144	5.E 12	CAC	8603	2.M 16	CAC	8901 22	1.I 04	CAC	9314	3.I 03	CAC	9498 2	2.N 05
CAC	5866 20	1.M 04	CAC	7053	1.M 03	CAC	7651	2.J 02	CAC	8169	3.D 14	CAC	8635	2.E 09	CAC	8901 22	1.I 02	CAC	9330	2.J 13	CAC	9498 2	2.M 16
CAC	5866 20	1.I 04	CAC	7053	2.M 04	CAC	7714	2.K 07	CAC	8181	2.C 14	CAC	8638	1.L 17	CAC	8962	2.K 11	CAC	9333	1.E 05	CAC	9508	2.G 05
CAC	5866 4	1.M 06	CAC	7054	2.J 17	CAC	7731	2.I 10	CAC	8181	2.C 16	CAC	8638	1.M 04	CAC	8968 1	2.I 05	CAC	9333	1.E 06	CAC	9508	2.G 06
CAC	5867 25	1.I 03	CAC	7055	2.J 17	CAC	7732	2.I 10	CAC	8181	2.C 15	CAC	8638	1.I 03	CAC	8968 1	2.I 06	CAC	9333	1.E 07	CAC	9524	2.M 02
CAC	5867 3	1.I 03	CAC	7101 10	3.I 02	CAC	7739	2.I 05	CAC	8181	2.C 17	CAC	8666	2.M 15	CAC	8968 2	1.L 16	CAC	9338	1.E 06	CAC	9525	2.K 02
CAC	5867 7	1.I 03	CAC	7101 10	3.I 03	CAC	7760 1	2.J 17	CAC	8181	2.C 18	CAC	8666	2.M 16	CAC	8968 2	2.E 09	CAC	9343	1.E 05	CAC	9526	2.K 02
CAC	5869 19	1.I 05	CAC	7101 11	3.I 02	CAC	7777	2.I 15	CAC	8181	2.C 12	CAC	8667	2.M 15	CAC	8968 2	2.I 05	CAC	9343	1.E 06	CAC	9527	2.K 02
CAC	5869 3	1.I 02	CAC	7101 11	3.I 03	CAC	7777	2.I 16	CAC	8196	2.M 02	CAC	8667	2.M 16	CAC	8968 2	2.I 06	CAC	9343	1.E 07	CAC	9528	2.K 02
CAC	6180	1.E 06	CAC	7101 4	3.I 02	CAC	7777	2.J 06	CAC	8196	2.M 06	CAC	8679	3.C 02	CAC	8968 2	3.D 14	CAC	9344	1.E 05	CAC	9543	1.E 04
CAC	6185	2.C 07	CAC	7101 5	3.I 02	CAC	7783	2.M 02	CAC	8199	2.M 04	CAC	8680	2.J 16	CAC	8971	2.K 11	CAC	9344	1.E 06	CAC	9574	2.J 04
CAC	6198	3.I 11	CAC	7114	1.M 02	CAC	7783	2.M 06	CAC	8220 1	2.M 05	CAC	8681	2.J 16	CAC	8979	2.J 16	CAC	9344	1.E 08	CAC	9574	2.J 06
CAC	6198	3.I 12	CAC	7114	2.K 07	CAC	7787	2.I 15	CAC	8220 1	2.M 04	CAC	8712	2.M 14	CAC	9012	2.E 15	CAC	9377	2.G 05	CAC	9586	2.J 18
CAC	6199	3.I 12	CAC	7128	2.J 03	CAC	7787	2.I 16	CAC	8220 2	2.K 07	CAC	8712	2.M 16	CAC	9013	2.I 08	CAC	9378	2.G 05	CAC	9586	2.K 02
CAC	6332	2.J 09	CAC	7160	1.M 02	CAC	7787	2.J 04	CAC	8226	2.J 13	CAC	8713	2.G 10	CAC	9036	2.J 16	CAC	9379	2.G 05	CAC	9586	2.I 06
CAC	6332	2.J 12	CAC	7160	1.M 03	CAC	7787	2.J 06	CAC	8228	2.H 04	CAC	8715	2.M 02	CAC	9049	2.J 17	CAC	9384	2.J 16	CAC	9628	2.I 18
CAC	6333	2.J 09	CAC	7160	2.M 04	CAC	7790	2.M 04	CAC	8228	2.H 06	CAC	8730	2.J 15	CAC	9060	1.E 07	CAC	9386	2.I 10	CAC	9629	1.L 11
CAC	6333	2.J 11	CAC	7161	1.M 02	CAC	7791	2.M 05	CAC	8228	2.H 11	CAC	8731	2.J 15	CAC	9067	2.E 14	CAC	9387	2.I 10	CAC	9629	1.L 13
CAC	6336	1.N 07	CAC	7161	2.K 07	CAC	7791	2.M 04	CAC	8274	2.K 03	CAC	8742	1.E 04	CAC	9068	2.E 14	CAC	9388	2.I 10	CAC	9630	1.L 15
CAC	6387	1.L 16	CAC	7162	1.L 16	CAC	7833 2	1.M 06	CAC	8274 E	2.K 03	CAC	8749	2.M 14	CAC	9074	1.F 04	CAC	9389	2.I 10	CAC	9645	2.M 07
CAC	6388	1.L 18	CAC	7162	1.M 02	CAC	7835	2.E 14	CAC	8275	2.K 03	CAC	8749 1	2.M 14	CAC	9082	2.I 10	CAC	9397	5.E 12	CAC	9646	2.J 02
CAC	6389	1.M 04	CAC	7162	2.M 05	CAC	7843	1.I 04	CAC	8277	2.K 03	CAC	8751	2.K 11	CAC	9109	2.M 06	CAC	9397	5.C 15	CAC	9647	2.J 02
CAC	6400	2.J 09	CAC	7162	1.M 03	CAC	7843	1.I 02	CAC	8278	2.K 03	CAC	8753	2.M 02	CAC	9110	2.M 06	CAC	9397	5.C 06	CAC	9650	2.K 08
CAC	6426	1.N 06	CAC	7162	2.M 04	CAC	7854	1.I 05	CAC	8293	2.J 15	CAC	8753	2.M 06	CAC	9111	2.M 06	CAC	9399	2.G 12	CAC	9676	3.D 12
CAC	6426	1.N 03	CAC	7216	2.J 09	CAC	7854	1.I 02	CAC	8298 1	2.C 04	CAC	8760	2.K 03	CAC	9112	2.M 06	CAC	9399	2.H 02	CAC	9678	2.J 15
CAC	6434	2.L 03	CAC	7218	2.K 08	CAC	7859	1.L 15	CAC	8298 1	2.C 09	CAC	8767 25	3.H 06	CAC	9114	2.M 02	CAC	9399	2.G 15	CAC	9679	2.J 15
CAC	6436	2.K 08	CAC	7218	2.K 09	CAC	7867 1	1.I 02	CAC	8310	2.C 10	CAC	8772	1.M 06	CAC	9115	2.M 02	CAC	9399	2.G 11	CAC	9680	2.J 15
CAC	6438	2.K 15	CAC	7218	2.K 10	CAC	7868	1.I 02	CAC	8310	2.D 02	CAC	8772	1.L 17	CAC	9117	2.M 02	CAC	9400	2.G 12	CAC	9682	1.L 11
CAC	6438 1	2.K 06	CAC	7218	2.K 12	CAC	7881	1.N 03	CAC	8311	2.D 02	CAC	8772	1.M 04	CAC	9118	2.M 02	CAC	9400	2.H 02	CAC	9683	1.L 11
CAC	6439 1	2.K 09	CAC	7218	2.K 14	CAC	7888	1.N 03	CAC	8365	2.I 10	CAC	8772	1.N 02	CAC	9120	2.M 06	CAC	9400	2.G 15	CAC	9691	1.N 03
CAC	6439 1	2.K 14	CAC	7218	2.K 16	CAC	7922	2.G 09	CAC	8389	2.K 03	CAC	8772	1.I 04	CAC	9123	2.M 02	CAC	9400	2.G 11	CAC	9699	5.C 04
CAC	6439 1	5.E 08	CAC	7218	2.K 17	CAC	7975	1.N 07	CAC	8442	1.F 04	CAC	8772	2.K 02	CAC	9124	2.M 02	CAC	9426	2.I 18	CAC	9702	1.N 08
CAC	6442	2.K 06	CAC	7218	2.L 02	CAC	7996	1.E 06	CAC	8443	1.F 04	CAC	8772	1.I 02	CAC	9142	1.N 11	CAC	9428	2.I 18	CAC	9703	2.C 14
CAC	6442	2.K 09	CAC	7250	3.I 12	CAC	8001	3.C 06	CAC	8444	1.F 04	CAC	8772	1.I 03	CAC	9162	2.J 14	CAC	9429	2.I 18	CAC	9703	2.C 16
CAC	6442	2.K 11	CAC	7325 3	2.E 15	CAC	8001	3.C 07	CAC	8451	2.M 10	CAC	8772	1.N 03	CAC	9162 1	2.J 14	CAC	9430	2.I 18	CAC	9703	2.C 15
CAC	6442	2.K 15	CAC	7367 1	2.K 08	CAC	8010	2.I 08	CAC	8451	2.G 09	CAC	8773	1.L 17	CAC	9205	3.D 16	CAC	9439	2.J 14	CAC	9703	2.C 17
CAC	6502	2.K 06	CAC	7367 1	2.K 09	CAC	8050	1.I 05	CAC	8475	2.E 15	CAC	8773	1.M 04	CAC	9246	3.D 12	CAC	9443	2.J 14	CAC	9703	2.D 02
CAC	6502	2.K 11	CAC	7370 1	2.K 11	CAC	8050	1.K 07	CAC	8476	2.E 15	CAC	8773	1.I 04	CAC	9249	3.D 12	CAC	9449 60	2.J 14	CAC	9703	2.C 12
CAC	6502	2.K 15	CAC	7452	2.J 10	CAC	8050	1.J 08	CAC	8494	2.M 14	CAC	8773	1.I 03	CAC	9251	2.M 02	CAC	9456	2.K 02	CAC	9707	1.N 03
CAC	6554	2.M 05	CAC	7517 3	2.K 02	CAC	8050	3.D 06	CAC	8494	2.M 16	CAC	8774	1.M 04	CAC	9252	2.M 02	CAC	9457	2.K 02	CAC	9716	3.C 03

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

G11
Fiche 5

NUMERIC INDEX "CAC 9716" TO "CBC 2255"

CAC	9716	3.C 02	CAM	1978 J	1.F 05	CAP	450	5.C 12	CAP	722	5.C 10	CAP	4093	5.C 05	CBC	1319	1.E 07	CBC	1537 2	2.J 10	CBC	1830	2.I 06
CAC	9716	2.I 08	CAM	1978 J	1.F 07	CAP	451	5.C 12	CAP	723	5.C 12	CAP	5090	2.J 08	CBC	1320	1.E 05	CBC	1537 2	2.J 12	CBC	1835	3.D 12
CAC	9719	2.I 08	CAM	1978 J	1.F 08	CAP	462	5.C 15	CAP	740	5.C 02	CAP	5091	2.J 08	CBC	1320	1.E 06	CBC	1537 3	2.J 10	CBC	1836	2.I 15
CAC	9727	1.E 04	CAM	1978 J	1.F 06	CAP	463	5.C 15	CAP	792	5.C 07	CAP	5121	5.C 12	CBC	1320	1.E 07	CBC	1537 3	2.J 12	CBC	1836	2.I 16
CAC	9753	1.L 11	CAP	14	5.C 16	CAP	464	4.K 02	CAP	802	5.C 06	CAP	5122	5.C 18	CBC	1321	1.E 05	CBC	1537 4	2.J 10	CBC	1836	2.J 04
CAC	9759	2.M 10	CAP	15	5.C 16	CAP	500	5.C 15	CAP	803	5.C 06	CAP	5123	5.C 18	CBC	1321	1.E 07	CBC	1537 4	2.J 12	CBC	1836	2.J 05
CAC	9759	2.G 09	CAP	16	5.C 10	CAP	502	5.C 15	CAP	817	5.C 15	CAP	5142	5.C 05	CBC	1322	1.E 06	CBC	1537 5	2.J 10	CBC	1844	2.J 03
CAC	9760	2.M 08	CAP	17	5.C 10	CAP	503	5.C 15	CAP	831	5.C 11	CAP	5143	5.C 05	CBC	1322	1.E 07	CBC	1537 5	2.J 12	CBC	1844	2.J 05
CAC	9760	2.M 10	CAP	20	5.C 15	CAP	504	5.C 15	CAP	847	5.C 05	CAP	5153	5.C 02	CBC	1324	1.E 05	CBC	1537 6	2.J 10	CBC	1857	3.D 15
CAC	9766	2.M 08	CAP	66	5.C 07	CAP	516	5.C 16	CAP	850	5.C 10	CAP	5154	5.C 02	CBC	1324	1.E 06	CBC	1537 6	2.J 12	CBC	1863	2.J 13
CAC	9767	2.M 08	CAP	67	5.C 07	CAP	517	5.C 16	CAP	856	5.D 02	CAP	5192	5.C 11	CBC	1324	1.E 07	CBC	1537 7	2.J 10	CBC	1883	1.E 05
CAC	9768	2.M 08	CAP	120	5.C 16	CAP	520	5.C 16	CAP	861	5.C 07	CAP	5204	4.O 06	CBC	1327	5.C 03	CBC	1537 7	2.J 12	CBC	1883	1.E 06
CAC	9769	2.M 08	CAP	121	5.C 16	CAP	521	5.C 18	CAP	863	5.C 12	CAP	5205	4.O 06	CBC	1329	1.E 05	CBC	1537 8	2.J 10	CBC	1883	1.E 07
CAC	9787	1.M 08	CAP	131	5.C 07	CAP	528	5.C 05	CAP	871	5.C 08	CAP	5224	4.O 06	CBC	1329	1.E 06	CBC	1537 8	2.J 12	CBC	1886	2.J 14
CAC	9787	1.M 09	CAP	134	5.C 15	CAP	529	5.C 05	CAP	1056	2.J 08	CAP	5225	4.O 06	CBC	1329	1.E 07	CBC	1537 9	2.J 10	CBC	1891	2.J 13
CAC	9791	2.I 15	CAP	135	5.C 15	CAP	530	5.C 07	CAP	1057	2.J 08	CAP	6086	5.C 11	CBC	1332	1.E 05	CBC	1537 9	2.J 12	CBC	1954	2.D 03
CAC	9791	2.I 16	CAP	194	5.C 16	CAP	531	5.C 07	CAP	1150	5.C 10	CAP	6087	5.C 11	CBC	1339	5.E 08	CBC	1564	3.H 15	CBC	1978	3.D 08
CAC	9792	1.M 08	CAP	195	5.C 16	CAP	536	5.C 15	CAP	1204	5.C 15	CAP	6097	5.C 15	CBC	1346	2.J 02	CBC	1576	5.C 04	CBC	1982	2.E 14
CAC	9817	2.I 08	CAP	196	5.C 16	CAP	537	5.C 15	CAP	1205	5.C 15	CAP	6154	2.J 07	CBC	1346	2.N 02	CBC	1582	1.N 11	CBC	2011	2.C 13
CAC	9817	2.I 09	CAP	197	5.C 16	CAP	561	5.C 02	CAP	1288	5.C 16	CAP	6155	2.J 07	CBC	1368	1.M 06	CBC	1589	3.D 14	CBC	2011	2.C 18
CAC	9822	2.I 17	CAP	198	5.C 16	CAP	566	5.C 18	CAP	1289	5.C 16	CAP	6176	5.C 07	CBC	1368	1.M 09	CBC	1590	3.D 14	CBC	2011	2.C 12
CAC	9822 1	2.I 17	CAP	199	5.C 16	CAP	567	5.C 18	CAP	1292	5.C 05	CAP	6177	5.C 07	CBC	1400	2.I 05	CBC	1591	3.D 14	CBC	2012	2.M 02
CAC	9827	2.I 15	CAP	200	5.C 16	CAP	573	5.C 09	CAP	1308	5.C 10	CAP	6271	5.C 06	CBC	1400	2.I 06	CBC	1594	2.J 14	CBC	2021	2.E 15
CAC	9827	2.I 16	CAP	201	5.C 16	CAP	582	5.C 12	CAP	1312	5.C 10	CAP	6279	5.C 15	CBC	1417	2.E 15	CBC	1608	2.M 14	CBC	2024	2.J 13
CAC	9829	2.I 16	CAP	214	5.C 16	CAP	583	5.C 10	CAP	1315	5.C 10	CAP	6342	5.C 05	CBC	1426	2.J 14	CBC	1669	2.M 07	CBC	2026	1.M 05
CAC	9834	2.J 02	CAP	215	5.C 16	CAP	588	5.C 16	CAP	1324	5.C 11	CAP	6343	5.C 05	CBC	1442	2.J 02	CBC	1670	2.M 07	CBC	2028	1.L 15
CAC	9863	1.M 08	CAP	222	5.C 11	CAP	589	5.C 16	CAP	1325	5.C 11	CAP	6354	5.C 10	CBC	1443	2.J 02	CBC	1670	1.F 18	CBC	2031	2.I 10
CAC	9863	1.M 08	CAP	223	5.C 11	CAP	594	5.C 11	CAP	1326	5.D 02	CAP	6441	5.C 11	CBC	1448	3.D 07	CBC	1670	1.G 03	CBC	2068	2.C 18
CAC	9864	1.L 15	CAP	230	4.O 06	CAP	595	5.C 11	CAP	1328	4.O 06	CAP	6459	5.C 11	CBC	1448	5.C 04	CBC	1670	2.J 18	CBC	2069	2.C 18
CAC	9865	2.J 02	CAP	231	4.O 06	CAP	648	5.C 15	CAP	1329	4.O 06	CAP	6463	5.C 09	CBC	1448	1.N 08	CBC	1696	2.C 14	CBC	2097	2.I 11
CAC	9880	3.D 08	CAP	232	4.O 06	CAP	662	5.C 05	CAP	1330	4.O 06	CAP	6469	5.C 09	CBC	1448	2.J 18	CBC	1696	2.C 16	CBC	2098	2.I 11
CAC	9884	2.H 04	CAP	233	4.O 06	CAP	663	5.C 05	CAP	1331	4.O 06	CBC	1261	2.J 13	CBC	1448	2.K 02	CBC	1696	2.D 02	CBC	2099 LEG	2.I 11
CAC	9884	2.H 08	CAP	250	4.O 06	CAP	668	5.C 05	CAP	1332	4.O 06	CBC	1261	2.H 03	CBC	1448	2.I 06	CBC	1697	2.C 14	CBC	2099 LEG	2.I 12
CAC	9884	2.I 11	CAP	251	4.O 06	CAP	669	5.C 05	CAP	1333	4.O 06	CBC	1261	2.H 04	CBC	1451	2.I 08	CBC	1697	2.C 16	CBC	2112	2.I 11
CAC	9884	3.H 08	CAP	310	5.C 09	CAP	672	5.C 06	CAP	3004	5.C 02	CBC	1261	2.H 05	CBC	1466 205	2.I 15	CBC	1697	2.D 02	CBC	2112	2.I 14
CAC	9905	2.M 08	CAP	311	5.C 09	CAP	673	5.C 06	CAP	3005	5.C 02	CBC	1261	2.H 06	CBC	1470	1.N 11	CBC	1700	2.C 02	CBC	2112	2.I 12
CAC	9906	2.M 02	CAP	312	5.C 09	CAP	674	5.C 06	CAP	3024	5.C 05	CBC	1261	2.H 07	CBC	1471	1.N 11	CBC	1700	2.C 05	CBC	2136	2.I 05
CAC	9907	2.M 02	CAP	313	5.C 09	CAP	675	5.C 06	CAP	3025	5.C 05	CBC	1261	2.H 08	CBC	1472	1.N 11	CBC	1700	2.C 04	CBC	2136	2.I 06
CAC	9926	4.H 09	CAP	316	5.C 09	CAP	676	5.C 06	CAP	4004	5.C 02	CBC	1261	2.H 09	CBC	1473	1.N 11	CBC	1700	2.C 07	CBC	2167	2.C 11
CAC	9926	2.M 14	CAP	317	5.C 09	CAP	677	5.C 06	CAP	4005	5.C 02	CBC	1261	2.H 10	CBC	1474	1.M 05	CBC	1706	2.J 09	CBC	2167	2.C 10
CAC	9926	2.M 16	CAP	318	5.C 09	CAP	678	5.C 06	CAP	4012	5.C 05	CBC	1262	2.K 10	CBC	1481	1.M 05	CBC	1706	2.J 12	CBC	2170	2.C 10
CAC	9937	2.J 04	CAP	319	5.C 09	CAP	679	5.C 06	CAP	4013	5.C 05	CBC	1262	2.K 13	CBC	1489	1.M 05	CBC	1707	1.N 07	CBC	2196	2.J 10
CAC	9937	2.J 06	CAP	320	5.C 09	CAP	680	5.C 05	CAP	4036	5.C 18	CBC	1262	2.K 16	CBC	1491	2.K 11	CBC	1710	2.J 02	CBC	2196	2.J 12
CAC	9938	2.J 03	CAP	321	5.C 09	CAP	681	5.C 05	CAP	4038	5.C 05	CBC	1262	2.K 17	CBC	1498	2.E 12	CBC	1711	2.J 02	CBC	2197	2.J 10
CAC	9938	2.J 05	CAP	323	5.C 06	CAP	690	5.C 11	CAP	4039	5.C 05	CBC	1262	2.L 02	CBC	1499	2.E 12	CBC	1712	2.J 02	CBC	2197	2.J 12
CAC	9952	2.I 05	CAP	340	5.C 11	CAP	691	5.C 11	CAP	4040	5.C 05	CBC	1262	2.C 02	CBC	1511	2.I 05	CBC	1713	2.J 02	CBC	2209	2.J 09
CAC	9955 5	2.J 15	CAP	341	5.C 11	CAP	694	5.C 06	CAP	4041	5.C 05	CBC	1262	2.C 05	CBC	1511	2.I 06	CBC	1746	1.E 04	CBC	2220 50	2.I 18
CAC	9971	2.G 09	CAP	365	5.C 09	CAP	695	5.C 06	CAP	4056	5.C 07	CBC	1262	2.C 03	CBC	1525 1	2.C 11	CBC	1751	2.E 15	CBC	2239	3.C 02
CAC	9980	2.I 05	CAP	371	5.C 11	CAP	696	5.C 09	CAP	4057	5.C 07	CBC	1262	2.C 09	CBC	1525 1	2.C 10	CBC	1788	3.D 07	CBC	2240	2.J 03
CAC	9980	2.I 06	CAP	373	5.C 11	CAP	697	5.C 09	CAP	4060	5.C 07	CBC	1297 16	1.E 04	CBC	1534	2.J 09	CBC	1789	5.C 04	CBC	2240	2.J 05
CAC	9992	2.I 05	CAP	378	5.C 18	CAP	698	5.C 07	CAP	4061	5.C 07	CBC	1309	1.F 04	CBC	1535	2.J 09	CBC	1805	2.J 04	CBC	2241	2.J 03
CAC	9996	2.K 02	CAP	422	5.C 11	CAP	699	5.C 07	CAP	4066	5.C 07	CBC	1310	1.F 04	CBC	1537 1	2.J 10	CBC	1805	2.J 06	CBC	2241	2.J 05
CAC	9997	2.K 06	CAP	423	5.C 11	CAP	716	5.C 07	CAP	4067	5.C 07	CBC	1318	1.E 06	CBC	1537 1	2.J 12	CBC	1808	2.K 07	CBC	2252	2.J 14
CAC	9999	2.C 02	CAP	430	5.C 11	CAP	717	5.C 07	CAP	4077	5.C 05	CBC	1319	1.E 05	CBC	1537 10	2.J 10	CBC	1820	2.J 13	CBC	2254 55	2.J 14
CAC	9999	2.C 05	CAP	446	5.C 06	CAP	720	4.K 02	CAP	4092	5.C 05	CBC	1319	1.E 06	CBC	1537 10	2.J 12	CBC	1830	2.I 05	CBC	2255	2.J 14

CBC 2256 ..... 2.J 14
CBC 2257 60 ..... 2.J 14
CBC 2268 ..... 2.G 10
CBC 2291 ..... 2.J 04
CBC 2291 ..... 2.J 05

CBC 2301 ..... 2.J 04
CBC 2301 ..... 2.J 05
CBC 2319 ..... 3.D 07
CBC 2327 ..... 3.C 02
CBC 2366 ..... 3.D 14

CBC 2396 ..... 2.K 06
CBC 2403 ..... 1.M 06
CBC 2403 ..... 1.M 10
CBC 2448 13 ..... 1.E 04
CBC 2449 ..... 2.J 16

CBC 2469 3 ..... 2.K 16
CBC 2469 5 ..... 2.K 16
CBC 2470 ..... 2.I 06
CBC 2513 ..... 2.J 17
CBC 2520 ..... 2.C 02

CBC 2520 ..... 2.C 05
CBC 2520 ..... 2.C 04
CBC 2520 ..... 2.C 07
CBC 2536 ..... 3.D 15
CBC 2551 ..... 2.J 16

CBC 2553 ..... 5.E 14
CBC 2562 ..... 2.J 10
CBC 2562 ..... 2.J 12
CBC 2563 ..... 2.J 10
CBC 2563 ..... 2.J 12

CBC 2573 ..... 1.L 15
CBC 2573 ..... 1.M 05
CBC 2576 ..... 1.M 05
CBC 2578 ..... 1.L 15
CBC 2581 ..... 1.M 02

CBC 2581 ..... 1.M 03
CBC 2582 ..... 1.M 02
CBC 2582 ..... 1.M 03
CBC 2583 ..... 1.M 02
CBC 2583 ..... 1.M 03

CBC 2589 ..... 2.J 10
CBC 2589 ..... 2.J 12
CBC 2590 8 ..... 3.D 15
CBC 2590 8 ..... 3.D 06
CBC 2591 10 ..... 3.I 02

CBC 2591 13 ..... 3.I 02
CBC 2591 9 ..... 1.L 17
CBC 2600 ..... 2.M 09
CBC 2600 ..... 2.M 10
CBC 2600 ..... 2.M 13

CBC 2612 ..... 5.E 13
CBC 2613 ..... 5.E 13
CBC 2618 ..... 1.L 11
CBC 2619 ..... 1.L 11
CBC 2635 ..... 2.C 03

CBC 2666 ..... 2.K 02
CBC 2667 ..... 1.M 05
CBC 2668 ..... 1.L 15
CBC 2668 ..... 1.M 05
CBC 2694 ..... 2.K 03

CBC 2695 ..... 3.C 06
CBC 2696 ..... 3.C 06
CBC 2696 K 3.C 06
CBC 2697 ..... 3.C 07
CBC 2698 ..... 3.C 07

CBC 2775 ..... 1.N 07
CBC 2777 ..... 2.J 17
CBC 2791 ..... 5.E 12
CBC 2802 ..... 2.C 13
CBC 2802 ..... 2.C 18

CBC 2802 ..... 2.C 12
CBC 2803 ..... 2.C 13
CBC 2803 ..... 2.C 18
CBC 2803 ..... 2.C 12
CBC 2829 ..... 2.M 14

CBC 2858 ..... 2.J 02
CBC 2869 ..... 2.D 03
CBC 2881 ..... 3.D 14
CBC 2898 ..... 3.C 02
CBC 2918 ..... 2.E 15

CBC 2919 ..... 2.E 12
CBC 2933 ..... 2.J 14
CBC 2958 ..... 2.C 14
CBC 2958 ..... 2.C 16
CBC 2958 ..... 2.C 15

CBC 2958 ..... 2.C 12
CBC 2964 ..... 2.J 13
CBC 2965 ..... 2.J 13
CBC 4046 ..... 2.I 02
CBC 4059 ..... 2.K 06

CBC 4059 ..... 2.K 11
CBC 4059 ..... 2.K 16
CBC 4096 ..... 5.E 13
CBC 4120 ..... 4.J 04
CBC 4121 ..... 4.J 04

CBC 4127 ..... 4.H 09
CBC 4127 ..... 2.M 14
CBC 4132 ..... 2.J 16
CBC 4152 ..... 2.I 18
CBC 4167 ..... 3.I 12

CBC 4168 ..... 2.L 03
CBC 4170 ..... 2.L 03
CBC 4171 ..... 5.E 13
CBC 4177 ..... 2.J 15
CBC 4214 ..... 2.J 15

CBC 4233 ..... 2.M 03
CBC 4243 ..... 2.J 07
CBC 4255 ..... 5.E 13
CBC 4256 ..... 2.J 13
CBC 4257 ..... 2.J 13

CBC 4262 ..... 2.J 13
CBC 4264 ..... 1.M 02
CBC 4264 ..... 1.M 03
CBC 4276 ..... 1.L 11
CBC 4277 ..... 1.L 11

CBC 4392 ..... 2.M 03
CBC 4406 ..... 2.G 06
CBC 4465 ..... 5.C 04
CBC 4466 ..... 5.C 04
CBC 4515 ..... 2.K 06

CBC 4515 ..... 2.K 09
CBC 4515 ..... 2.K 11
CBC 4554 ..... 2.K 11
CBC 4586 ..... 2.J 02
CBC 4586 ..... 2.N 02

CBC 4589 ..... 2.J 02
CBC 4589 ..... 2.N 02
CBC 4594 ..... 3.D 14
CBC 4596 ..... 3.D 14
CBC 4597 ..... 3.D 14

CBC 4598 ..... 3.D 14
CBC 4622 ..... 2.J 15
CBC 4659 ..... 2.C 17
CBC 4659 ..... 2.D 02
CBC 4660 ..... 2.D 02

CBC 4661 ..... 2.D 02
CBC 4678 ..... 2.E 15
CBC 4681 ..... 2.M 09
CBC 4681 ..... 2.M 10
CBC 4688 ..... 2.K 06

CBC 4688 ..... 2.K 14
CBC 4688 ..... 2.K 15
CBC 4689 ..... 2.K 06
CBC 4689 ..... 2.K 15
CBC 4691 ..... 2.K 06

CBC 4691 ..... 5.E 06
CBC 4692 ..... 2.K 06
CBC 4693 ..... 2.K 06
CBC 4704 ..... 2.J 02
CBC 4705 ..... 2.J 09

CBC 4705 ..... 2.J 12
CBC 4720 ..... 1.M 02
CBC 4720 ..... 1.M 03
CBC 4723 ..... 3.D 15
CBC 4724 ..... 1.M 05

CBC 4744 ..... 1.E 05
CBC 4744 ..... 1.E 06
CBC 4744 ..... 1.E 07
CBC 4745 ..... 1.E 05
CBC 4745 ..... 1.E 06

CBC 4745 ..... 1.E 07
CBC 4806 35 ..... 2.G 10
CBC 4806 40 ..... 2.G 10
CBC 4806 45 ..... 2.G 10
CBC 4806 50 ..... 2.G 10

CBC 4806 55 ..... 2.G 10
CBC 4806 60 ..... 2.G 10
CBC 4806 65 ..... 2.G 10
CBC 4806 70 ..... 2.G 10
CBC 4806 75 ..... 2.G 10

CBC 4807 15 ..... 2.G 10
CBC 4807 20 ..... 2.G 10
CBC 4807 25 ..... 2.G 10
CBC 4807 30 ..... 2.G 10
CBC 4807 35 ..... 2.G 10

CBC 4807 40 ..... 2.G 10
CBC 4807 50 ..... 2.G 10
CBC 4807 55 ..... 2.G 10
CBC 4834 ..... 1.H 03
CBC 4834 ..... 2.C 03

CBC 4834 ..... 2.C 07
CBC 4834 ..... 2.C 09
CBC 4860 ..... 4.J 04
CBC 4861 ..... 4.J 04
CBC 4864 ..... 1.L 18

CBC 4865 ..... 1.L 18
CBC 4866 ..... 1.M 04
CBC 4906 ..... 1.N 11
CBC 4907 ..... 1.N 11
CBC 4924 ..... 2.I 02

CBC 4925 ..... 2.I 03
CBC 4965 ..... 3.C 05
CBC 4965 ..... 3.D 13
CBC 4966 ..... 3.C 05
CBC 4966 ..... 3.D 13

CBC 4967 ..... 3.C 05
CBC 4967 ..... 3.D 13
CBC 4973 ..... 2.K 11
CBC 4974 ..... 2.K 11
CBC 4987 ..... 2.M 02

CBC 4987 ..... 2.M 06
CBC 5005 ..... 2.K 06
CBC 5005 ..... 2.K 15
CBC 5005 ..... 2.K 18
CBC 5097 ..... 3.D 14

CBC 5152 ..... 2.M 07
CBC 5160 ..... 2.M 09
CBC 5160 ..... 2.M 11
CBC 5165 ..... 5.E 14
CBC 5194 ..... 2.G 12

CBC 5195 ..... 2.G 18
CBC 5202 ..... 2.M 09
CBC 5202 ..... 2.M 10
CBC 5220 ..... 2.E 15
CBC 5248 ..... 2.N 03

CBC 5249 ..... 2.N 03
CBC 5255 ..... 2.M 06
CBC 5275 ..... 5.E 13
CBC 5277 ..... 5.E 13
CBC 5285 ..... 1.E 06

CBC 5286 ..... 1.E 06
CBC 5287 ..... 1.E 07
CBC 5292 ..... 1.M 06
CBC 5296 ..... 2.M 14
CBC 5297 ..... 2.C 09

CBC 5301 ..... 1.E 07
CBC 5336 ..... 2.I 15
CBC 5336 ..... 2.I 16
CBC 5337 ..... 2.I 15
CBC 5337 ..... 2.I 16

CBC 5353 ..... 1.E 07
CBC 5386 ..... 2.C 07
CBC 5388 ..... 2.C 12
CBC 5389 ..... 2.C 12
CBC 5390 ..... 2.C 13

CBC 5390 ..... 2.C 16
CBC 5391 ..... 2.C 13
CBC 5391 ..... 2.C 16
CBC 5392 ..... 2.C 18
CBC 5393 ..... 2.C 18

CBC 5410 ..... 2.J 14
CBC 5425 ..... 3.C 03
CBC 5426 ..... 3.C 02
CBC 5431 ..... 2.J 14
CBC 5448 ..... 2.I 06

CBC 5497 ..... 2.K 06
CBC 5497 ..... 2.K 11
CBC 5497 ..... 2.K 16
CBC 5497 11 ..... 2.K 06
CBC 5497 11 ..... 2.K 09

CBC 5497 11 ..... 2.K 11
CBC 5497 11 ..... 2.K 14
CBC 5497 11 ..... 2.K 15
CBC 5497 11 ..... 2.K 16
CBC 5497 11 ..... 2.L 02

CBC 5498 ..... 3.C 06
CBC 5498 K 3.C 06
CBC 5499 ..... 3.C 06
CBC 5499 K 3.C 06
CBC 5500 ..... 3.C 07

CBC 5501 ..... 3.C 07
CBC 5507 ..... 2.E 14
CBC 5508 ..... 2.E 15
CBC 5523 ..... 2.J 03
CBC 5523 ..... 2.J 05

CBC 5558 ..... 2.I 06
CBC 5559 ..... 2.E 15
CBC 5606 ..... 1.N 07
CBC 5618 ..... 1.L 18
CBC 5618 ..... 1.M 03

CBC 5619 ..... 1.L 18
CBC 5619 ..... 1.M 03
CBC 5620 ..... 1.M 04
CBC 5621 ..... 2.M 05
CBC 5621 ..... 2.M 04

CBC 5623 ..... 1.L 18
CBC 5623 ..... 1.M 04
CBC 5624 ..... 1.L 18
CBC 5625 ..... 2.E 14
CBC 5656 ..... 1.M 05

CBC 5659 ..... 3.C 04
CBC 5659 ..... 3.D 11
CBC 5660 ..... 3.C 04
CBC 5660 ..... 3.D 11
CBC 5681 ..... 5.E 12

CBC 5694 ..... 2.E 12
CBC 5700 ..... 2.J 06
CBC 5701 ..... 2.J 06
CBC 5724 ..... 3.C 06
CBC 5724 ..... 3.C 07

CBC 5727 ..... 2.C 09
CBC 5728 ..... 2.C 03
CBC 5762 ..... 3.D 06
CBC 5918 ..... 1.E 11
CBC 5929 ..... 1.N 05

CBC 5931 ..... 1.E 04
CBC 5939 ..... 3.D 12
CBC 5939 1 ..... 3.D 12
CBC 5950 ..... 3.C 02
CBC 5952 ..... 3.D 12

CBC 5953 ..... 3.D 12
CBC 5956 ..... 2.I 18
CBC 5957 ..... 2.J 07
CBC 5958 ..... 2.J 14
CBC 5961 ..... 2.J 15

CBC 5968 ..... 2.M 16
CBC 6021 ..... 1.M 06
CBC 6078 ..... 2.I 10
CBC 6079 ..... 2.I 10
CBC 6080 ..... 2.I 10

CBC 6081 ..... 2.I 10
CBC 6106 ..... 2.M 07
CBC 6139 ..... 2.J 07
CBC 6152 ..... 2.G 05
CBC 6152 ..... 2.G 06

CBC 6200 ..... 2.C 02
CBC 6200 ..... 2.C 05
CBC 6200 ..... 2.C 04
CBC 6252 ..... 2.E 14
CBC 6260 ..... 1.M 04

CBC 6260 ..... 1.I 04
CBC 6260 ..... 1.M 09
CBC 6268 ..... 2.M 11
CBC 6289 ..... 2.M 11
CBC 6297 ..... 2.I 06

CBC 6298 ..... 2.J 18
CBC 6298 ..... 2.I 06
CBC 6299 ..... 3.D 14
CBC 6312 ..... 2.D 03
CBC 6313 1 ..... 2.M 07

CBC 6314 1 ..... 2.K 02
CBC 6326 ..... 1.M 06
CBC 6335 ..... 2.I 11
CBC 6368 ..... 1.E 05
CBC 6368 ..... 1.E 06

CBC 6368 ..... 1.E 07
CBC 6373 ..... 2.C 06
CBC 6394 ..... 2.J 16
CBC 6416 1 ..... 2.J 03
CBC 6416 1 ..... 2.J 05

CBC 6416 2 ..... 2.J 03
CBC 6416 2 ..... 2.J 05
CBC 6417 ..... 1.E 07
CBC 6418 ..... 1.E 05
CBC 6418 ..... 1.E 06

CBC 6421 ..... 3.I 11
CBC 6421 ..... 3.I 12
CBC 6440 ..... 1.N 11
CBC 6441 ..... 1.N 11
CBC 6448 1 ..... 2.M 07

CBC 6448 1 ..... 2.J 18
CBC 6452 ..... 2.J 06
CBC 6453 ..... 2.J 06
CBC 6460 ..... 1.M 05
CBC 6461 ..... 1.L 15

CBC 6464 ..... 2.I 06
CBC 6464 ..... 2.I 09
CBC 6470 205 ..... 2.I 15
CBC 6470 205 ..... 2.I 16
CBC 6471 ..... 1.M 06

CBC 6483 ..... 3.I 11
CBC 6486 ..... 2.J 17
CBC 6487 ..... 2.J 17
CBC 6514 ..... 2.C 14
CBC 6514 ..... 2.C 16

CBC 6514 ..... 2.C 15
CBC 6514 ..... 2.C 17
CBC 6514 ..... 2.D 02
CBC 6514 ..... 2.C 12
CBC 6518 ..... 2.C 02

CBC 6518 ..... 2.C 04
CBC 6522 ..... 3.C 10
CBC 6522 ..... 3.C 11
CBC 6523 ..... 1.I 04
CBC 6524 ..... 1.I 04

CBC 6544 ..... 3.D 14
CBC 6553 ..... 1.I 05
CBC 6554 ..... 1.I 05
CBC 6562 ..... 2.M 12
CBC 6565 ..... 2.G 06

CBC 6566 ..... 2.G 06
CBC 6586 ..... 2.M 10
CBC 6587 ..... 2.M 10
CBC 6588 ..... 2.M 09
CBC 6589 ..... 2.M 09

CBC 6615 ..... 2.M 03
CBC 6621 ..... 1.M 06
CBC 6622 ..... 1.M 06
CBC 6635 ..... 2.I 18
CBC 6652 ..... 2.J 09

CBC 6652 ..... 2.J 11
CBC 6729 ..... 2.I 13
CBC 6729 ..... 2.I 14
CBC 6729 ..... 2.I 12
CBC 6735 ..... 2.I 09

CBC 6742 ..... 2.I 13
CBC 6742 ..... 2.I 14
CBC 6742 ..... 2.I 12
CBC 6776 ..... 1.E 07
CBC 6798 ..... 1.E 04

CBC 6801 ..... 1.L 12
CBC 6805 ..... 1.L 12
CBC 6811 ..... 1.L 12
CBC 6815 ..... 1.L 12
CBC 6816 ..... 1.L 13

CBC 6842 ..... 2.C 15
CBC 6842 ..... 2.C 17
CBC 6843 ..... 2.C 15
CBC 6843 ..... 2.C 17
CBC 6850 ..... 1.L 12

CBC 6870 ..... 1.M 02
CBC 6873 ..... 2.M 09
CBC 6873 ..... 2.M 11
CBC 6882 ..... 2.J 15
CBC 6883 ..... 2.J 15

CBC 6885 ..... 1.I 05
CBC 6921 ..... 3.C 02
CBC 6923 ..... 2.H 12
CBC 6923 ..... 2.H 14
CBC 6949 ..... 2.J 18

CBC 6951 ..... 1.L 13
CBC 6952 ..... 2.M 07
CBC 7083 ..... 1.L 16
CBC 7190 ..... 1.M 10
CBC 7220 ..... 2.C 06

CBC 7234 ..... 1.L 15
CBC 7247 ..... 2.I 09
CBC 7253 1 ..... 2.G 17
CBC 7253 1 ..... 2.G 14
CBC 7253 2 ..... 2.G 17

CBC 7253 2 ..... 2.G 14
CBC 7277 ..... 2.I 17
CBC 7278 ..... 2.I 17
CBC 7281 ..... 2.J 15
CBC 7281 5 ..... 2.J 15

CBC 7283 ..... 2.I 06
CBC 7283 ..... 2.I 09
CBC 7284 ..... 2.G 06
CBC 7317 ..... 2.C 11
CBC 7319 ..... 2.G 06

CBC	7322	2.C 15	CBC	7831	1.E 07	CBC	8104	2.C 03	CBC	8630	2.C 11	CBC	8966	3.C 06	CBC	9039 6	2.K 17	CBC	9505 13	2.J 11	CBC	9587 9	2.K 18
CBC	7322	2.C 16	CBC	7834	2.I 09	CBC	8109	2.C 09	CBC	8644	1.N 11	CBC	8967	3.C 06	CBC	9039 7	2.K 10	CBC	9505 14	2.J 09	CBC	9588	1.L 12
CBC	7322	2.C 15	CBC	7837	2.I 09	CBC	8113	2.C 02	CBC	8645	1.N 11	CBC	8968	3.C 07	CBC	9039 7	2.K 13	CBC	9505 14	2.J 11	CBC	9589	2.J 17
CBC	7322	2.C 17	CBC	7884	2.M 09	CBC	8113	2.C 05	CBC	8647	1.N 08	CBC	8969	3.C 07	CBC	9039 7	2.K 16	CBC	9505 15	2.J 09	CBC	9622	2.M 03
CBC	7322	2.C 18	CBC	7885	2.M 10	CBC	8113	2.C 03	CBC	8661	1.F 04	CBC	8974	1.L 13	CBC	9039 7	2.K 17	CBC	9505 15	2.J 11	CBC	9623	2.M 03
CBC	7322	2.C 12	CBC	7875	2.M 12	CBC	8131	5.E 13	CBC	8662	1.F 04	CBC	8977	2.E 14	CBC	9039 8	2.K 10	CBC	9505 16	2.J 11	CBC	9625	1.L 13
CBC	7325	3.C 02	CBC	7901	1.N 04	CBC	8150	2.E 12	CBC	8663	5.C 04	CBC	8996	2.G 13	CBC	9039 8	2.K 13	CBC	9505 17	2.J 09	CBC	9625 1	1.L 13
CBC	7342	2.M 09	CBC	7901	1.N 05	CBC	8153	1.M 06	CBC	8663	1.F 04	CBC	9002	2.M 03	CBC	9039 8	2.K 16	CBC	9505 17	2.J 11	CBC	9638	5.E 12
CBC	7344	2.M 10	CBC	7902	1.N 04	CBC	8168	2.I 09	CBC	8673	2.M 07	CBC	9003	2.M 03	CBC	9039 8	2.K 17	CBC	9505 18	2.J 09	CBC	9642	2.I 16
CBC	7345	2.J 18	CBC	7902	1.N 05	CBC	8169	3.D 14	CBC	8699	3.D 08	CBC	9004	2.M 03	CBC	9039 9	2.K 10	CBC	9505 18	2.J 11	CBC	9643	2.K 17
CBC	7349	2.M 14	CBC	7904	1.N 04	CBC	8174	2.G 12	CBC	8701	2.J 17	CBC	9005	2.M 03	CBC	9039 9	2.K 13	CBC	9505 19	2.J 09	CBC	9644	2.K 17
CBC	7355	2.J 09	CBC	7904	1.N 05	CBC	8174	2.H 02	CBC	8719	3.C 02	CBC	9006	2.M 03	CBC	9039 9	2.K 16	CBC	9505 19	2.J 11	CBC	9647	2.G 06
CBC	7356	2.M 08	CBC	7905	1.N 04	CBC	8174	2.G 17	CBC	8721	3.C 03	CBC	9007	2.M 03	CBC	9039 9	2.K 17	CBC	9505 2	2.J 11	CBC	9674	2.G 06
CBC	7356	2.M 10	CBC	7905	1.N 05	CBC	8174	2.G 13	CBC	8731	1.M 08	CBC	9025	2.G 13	CBC	9052 N	2.I 02	CBC	9505 20	2.J 11	CBC	9696	2.K 04
CBC	7362	2.E 15	CBC	7906	1.N 04	CBC	8174	2.G 14	CBC	8766	2.C 11	CBC	9031	2.K 16	CBC	9053 N	2.I 03	CBC	9505 21	2.J 09	CBC	9697	2.K 04
CBC	7363	1.L 12	CBC	7906	1.N 05	CBC	8183	1.M 05	CBC	8766	2.C 06	CBC	9032	2.K 16	CBC	9054 N	2.I 02	CBC	9505 21	2.J 11	CBC	9700	2.K 04
CBC	7398	2.J 12	CBC	7994	2.K 08	CBC	8185	1.L 15	CBC	8767	2.C 06	CBC	9033	2.K 16	CBC	9073	2.M 03	CBC	9505 22	2.J 11	CBC	9700	2.K 05
CBC	7404	3.C 02	CBC	7995	2.K 08	CBC	8185	1.M 05	CBC	8771	1.N 04	CBC	9034 3	2.L 03	CBC	9084	1.L 16	CBC	9505 23	2.J 09	CBC	9701	2.K 04
CBC	7405	3.C 02	CBC	7995	2.K 09	CBC	8196	2.C 09	CBC	8771	1.N 05	CBC	9037	2.K 16	CBC	9085	1.L 16	CBC	9505 23	2.J 11	CBC	9701	2.K 05
CBC	7408	2.M 05	CBC	7996	2.K 08	CBC	8201	2.C 03	CBC	8772	1.N 04	CBC	9038	2.M 16	CBC	9103	2.C 11	CBC	9505 24	2.J 11	CBC	9702	2.K 04
CBC	7408	2.M 04	CBC	7996	2.K 09	CBC	8207	2.J 11	CBC	8772	1.N 05	CBC	9039 1	2.K 10	CBC	9103	2.C 06	CBC	9505 25	2.J 11	CBC	9734	1.M 08
CBC	7438	2.C 17	CBC	7996	2.L 02	CBC	8209	2.M 03	CBC	8784	2.C 13	CBC	9039 1	2.K 13	CBC	9111 SDC	2.E 14	CBC	9505 26	2.J 11	CBC	9743	2.I 18
CBC	7439	2.C 17	CBC	7996	5.E 08	CBC	8261	1.N 04	CBC	8784	2.C 16	CBC	9039 1	2.K 16	CBC	9120	2.E 15	CBC	9505 3	2.J 11	CBC	9745	2.J 15
CBC	7508	2.M 12	CBC	8001	2.I 09	CBC	8261	1.N 05	CBC	8784	2.C 15	CBC	9039 1	2.K 17	CBC	9191	2.I 15	CBC	9505 4	2.J 11	CBC	9750	2.G 06
CBC	7509	2.M 12	CBC	8014	2.E 14	CBC	8262	1.N 08	CBC	8784	2.C 17	CBC	9039 10	2.K 10	CBC	9191	2.I 16	CBC	9505 5	2.J 09	CBC	9773	5.E 12
CBC	7516	2.C 13	CBC	8022	3.D 14	CBC	8262	1.N 03	CBC	8784	2.C 18	CBC	9039 10	2.K 13	CBC	9223	1.M 10	CBC	9505 5	2.J 11	CBC	9788	2.K 16
CBC	7516	2.C 18	CBC	8023	3.D 14	CBC	8262	1.N 04	CBC	8784	2.C 12	CBC	9039 10	2.K 16	CBC	9235	2.I 08	CBC	9505 6	2.J 09	CBC	9824	2.J 08
CBC	7516	2.C 12	CBC	8058	2.I 14	CBC	8262	1.N 05	CBC	8785	2.C 13	CBC	9039 10	2.K 17	CBC	9235	2.I 09	CBC	9505 6	2.J 11	CBC	9825	2.J 08
CBC	7517	2.C 13	CBC	8058 AEM	2.I 11	CBC	8293	1.L 16	CBC	8785	2.C 16	CBC	9039 11	2.K 10	CBC	9256	2.J 18	CBC	9505 7	2.J 11	CBC	9843	2.M 10
CBC	7517	2.C 18	CBC	8058 AEM	2.I 14	CBC	8293	1.M 05	CBC	8785	2.C 15	CBC	9039 11	2.K 13	CBC	9262	2.K 18	CBC	9505 8	2.J 09	CBC	9845	3.C 10
CBC	7517	2.C 12	CBC	8058 LEG	2.I 11	CBC	8294	1.L 15	CBC	8785	2.C 17	CBC	9039 11	2.K 16	CBC	9263	2.K 18	CBC	9505 8	2.J 11	CBC	9853	4.I 04
CBC	7571	2.M 11	CBC	8060 LEG	2.I 11	CBC	8294	1.L 16	CBC	8785	2.C 18	CBC	9039 11	2.K 17	CBC	9269	2.K 14	CBC	9505 9	2.J 09	CBC	9858	2.J 18
CBC	7582	2.M 10	CBC	8060 LEG	2.I 13	CBC	8294	1.M 05	CBC	8785	2.C 12	CBC	9039 12	2.K 10	CBC	9325	2.M 15	CBC	9505 9	2.J 11	CBC	9907 1	2.K 10
CBC	7593	2.M 10	CBC	8062	2.I 13	CBC	8301	2.I 18	CBC	8803 1	1.M 09	CBC	9039 12	2.K 13	CBC	9325	2.M 16	CBC	9507	1.M 06	CBC	9907 1	2.K 12
CBC	7640	2.M 05	CBC	8062	2.I 14	CBC	8323	2.J 07	CBC	8826	2.G 06	CBC	9039 12	2.K 16	CBC	9328	2.E 12	CBC	9512	1.L 16	CBC	9907 1	2.K 14
CBC	7673	2.N 07	CBC	8062	2.I 12	CBC	8352	1.L 12	CBC	8827	2.G 06	CBC	9039 12	2.K 17	CBC	9352	2.M 09	CBC	9525	2.M 14	CBC	9907 1	2.K 17
CBC	7674	2.N 07	CBC	8067	2.G 12	CBC	8353	1.L 12	CBC	8844	3.D 10	CBC	9039 2	2.K 10	CBC	9352	2.M 11	CBC	9525	2.M 16	CBC	9907 1	2.L 02
CBC	7704	5.C 12	CBC	8067	2.G 18	CBC	8368	2.C 13	CBC	8859	1.I 05	CBC	9039 2	2.K 13	CBC	9356	2.K 07	CBC	9531	2.M 16	CBC	9923	2.K 12
CBC	7714	1.L 17	CBC	8067	2.G 16	CBC	8368	2.C 16	CBC	8859	1.K 07	CBC	9039 2	2.K 16	CBC	9370	3.C 08	CBC	9538	2.J 18	CBC	9923	2.K 17
CBC	7714	1.I 05	CBC	8067	2.G 17	CBC	8368	2.C 15	CBC	8859	1.J 08	CBC	9039 2	2.K 17	CBC	9402	2.I 05	CBC	9550	2.M 03	CBC	9923	2.L 02
CBC	7721	2.K 04	CBC	8067	2.G 13	CBC	8368	2.C 17	CBC	8859	3.D 08	CBC	9039 3	2.K 10	CBC	9402	2.I 08	CBC	9563 AEE	2.E 14	CBC	9950	2.M 16
CBC	7725	2.I 11	CBC	8067	2.G 14	CBC	8368	2.C 19	CBC	8873	2.K 18	CBC	9039 3	2.K 13	CBC	9403	2.I 05	CBC	9563 LEG	2.E 14	CBC	9951	2.M 16
CBC	7725 AEM	2.I 11	CBC	8074	3.D 07	CBC	8368	2.C 12	CBC	8875	2.K 18	CBC	9039 3	2.K 16	CBC	9403	2.I 08	CBC	9587 1	2.K 18	CBC	9974	3.D 14
CBC	7734	1.L 12	CBC	8089	2.E 15	CBC	8438	2.C 11	CBC	8892	2.J 15	CBC	9039 3	2.K 17	CBC	9458	2.M 11	CBC	9587 10	2.K 18	CBC	9999	2.J 07
CBC	7779	2.G 12	CBC	8094	2.I 11	CBC	8438	2.C 06	CBC	8897	1.L 16	CBC	9039 4	2.K 10	CBC	9462	2.K 11	CBC	9587 11	2.K 18	CCC	2426	2.J 03
CBC	7780	2.G 18	CBC	8094	2.I 13	CBC	8459	2.C 11	CBC	8899	1.L 16	CBC	9039 4	2.K 13	CBC	9463	2.K 08	CBC	9587 12	2.K 18	CCC	2426	2.J 05
CBC	7780	2.G 16	CBC	8094	2.I 14	CBC	8459	2.C 08	CBC	8905	2.J 02	CBC	9039 4	2.K 16	CBC	9463	2.K 09	CBC	9587 13	2.K 18	CCC	2427	2.J 03
CBC	7796	4.H 09	CBC	8094	2.I 12	CBC	8510	1.L 12	CBC	8905	2.N 02	CBC	9039 4	2.K 17	CBC	9486	2.M 14	CBC	9587 14	2.K 18	CCC	2427	2.J 05
CBC	7796	2.M 14	CBC	8094 AEM	2.I 14	CBC	8511	1.L 12	CBC	8936	2.J 09	CBC	9039 5	2.K 10	CBC	9486	2.M 16	CBC	9587 2	2.K 18	CCC	2434	2.J 03
CBC	7800	2.G 12	CBC	8095	2.I 11	CBC	8519	1.N 05	CBC	8936	2.J 11	CBC	9039 5	2.K 13	CBC	9505 1	2.J 11	CBC	9587 3	2.K 18	CCC	2434	2.J 05
CBC	7800	2.G 18	CBC	8095	2.I 13	CBC	8522	1.L 16	CBC	8945	1.L 17	CBC	9039 5	2.K 16	CBC	9505 10	2.J 11	CBC	9587 4	2.K 18	CCC	2435	2.J 03
CBC	7800	2.G 16	CBC	8095	2.I 14	CBC	8562	2.J 03	CBC	8945	1.I 03	CBC	9039 5	2.K 17	CBC	9505 11	2.J 09	CBC	9587 5	2.K 18	CCC	2435	2.J 05
CBC	7804	1.M 10	CBC	8095	2.I 12	CBC	8563	2.J 03	CBC	8948	2.M 05	CBC	9039 6	2.K 10	CBC	9505 11	2.J 11	CBC	9587 6	2.K 18	CCC	2576	2.K 18
CBC	7817	2.I 09	CBC	8099	1.I 04	CBC	8594	2.M 10	CBC	8958	3.D 08	CBC	9039 6	2.K 13	CBC	9505 12	2.J 09	CBC	9587 7	2.K 18	CCC	2585	2.J 18
CBC	7828	2.C 11	CBC	8099	1.I 03	CBC	8595	2.M 10	CBC	8959	3.D 08	CBC	9039 6	2.K 16	CBC	9505 12	2.J 11	CBC	9587 8	2.K 18	CCC	2585	2.I 08

CCC	2625	2.J 15	CCC	3520	2.L 02	CCC	5505	3.D 14	CCC	6890 12	2.K 13	CZH	619 J	4.J 09	DAC	4817	3.K 13	DBC	1097	3.F 02	DBC	1914	2.N 06
CCC	2628	3.D 10	CCC	3537	3.D 16	CCC	5644	2.N 05	CCC	6890 12	2.K 16	CZH	619 J	5.E 06	DAC	4843	2.E 13	DBC	1098	3.F 02	DBC	1917	3.E 06
CCC	2633	3.D 10	CCC	3538	2.J 14	CCC	5644	2.M 15	CCC	6890 12	2.K 17	CZK	3284 J	3.F 18	DAC	4868	3.E 04	DBC	1134	1.J 14	DBC	1918	3.E 06
CCC	2633	3.D 12	CCC	3637	2.M 09	CCC	5644	2.M 16	CCC	6890 2	2.K 10	CZK	3284 J	1.I 02	DAC	5224 E	3.I 08	DBC	1135	1.J 14	DBC	1919	3.E 06
CCC	2634	3.D 10	CCC	3637	2.M 11	CCC	5650 E	2.I 02	CCC	6890 2	2.K 13	DA	604025 J	4.N 07	DAC	5224 N	3.I 08	DBC	1139	1.J 14	DBC	1939 E	3.I 07
CCC	2634	3.D 12	CCC	3638	2.M 09	CCC	5650 N	2.I 02	CCC	6890 2	2.K 16	DA	604025 J	4.N 11	DAC	5515	4.E 04	DBC	1140	1.J 03	DBC	1939 N	3.I 07
CCC	2635	3.D 12	CCC	3638	2.M 11	CCC	5651 E	2.I 03	CCC	6890 2	2.K 17	DA	604025 J	4.N 03	DAC	5583	1.J 04	DBC	1153	1.M 16	DBC	1940	3.F 02
CCC	2636	3.D 12	CCC	3789	2.J 17	CCC	5651 N	2.I 03	CCC	6890 6	2.K 10	DA	608044	4.O 05	DAC	6075	3.F 04	DBC	1156	3.F 03	DBC	1941	3.F 02
CCC	2637	2.M 07	CCC	3830	2.K 04	CCC	5652 N	2.I 02	CCC	6890 6	2.K 13	DA	608044 J	1.M 07	DAC	6142	3.F 04	DBC	1157	3.F 03	DBC	1973	1.M 16
CCC	2641 SDC	4.H 03	CCC	3832	2.K 04	CCC	5653 N	2.I 03	CCC	6890 6	2.K 16	DA	608044 J	4.I 16	DAC	6907	1.J 12	DBC	1160	3.F 03	DBC	1989	3.E 02
CCC	2670	5.C 04	CCC	3832	2.K 05	CCC	5688	1.E 05	CCC	6890 6	2.K 17	DA	608045 J	4.L 03	DAC	7151	2.N 09	DBC	1161	3.F 03	DBC	2000	1.J 03
CCC	2672	1.L 12	CCC	3834	2.K 04	CCC	6020 E	2.I 02	CCC	6890 7	2.K 10	DA	608051 J	1.J 14	DAC	7237	1.M 16	DBC	1167	1.M 16	DBC	2001	3.F 15
CCC	2706	2.K 12	CCC	3834	2.K 05	CCC	6020 N	2.I 02	CCC	6890 7	2.K 13	DA	608051 J	4.H 06	DAC	7553	3.L 04	DBC	1168 1	1.M 16	DBC	2013	3.H 11
CCC	2707	2.K 12	CCC	3878	2.K 04	CCC	6021 E	2.I 03	CCC	6890 7	2.K 16	DA	608051 J	4.H 15	DAC	7554	3.L 04	DBC	1169	1.J 15	DBC	2013	3.H 12
CCC	2708	2.K 12	CCC	3880	2.K 04	CCC	6021 N	2.I 03	CCC	6890 7	2.K 17	DA	608051 J	4.H 18	DAC	7811	1.J 04	DBC	1541	3.E 02	DBC	2015	3.J 04
CCC	2708 1	2.K 10	CCC	3956 SDC	2.M 16	CCC	6022 N	2.I 02	CCC	6890 8	2.K 10	DA	608051 J	4.H 10	DAC	7879	1.E 16	DBC	1543	3.E 02	DBC	2016	3.L 03
CCC	2711	2.K 12	CCC	3984	2.J 12	CCC	6023 N	2.I 03	CCC	6890 8	2.K 13	DA	608051 J	4.H 11	DAC	7879	1.E 17	DBC	1545	2.N 08	DBC	2018	3.I 12
CCC	2711	2.L 02	CCC	3985	2.J 12	CCC	6272	2.J 07	CCC	6890 8	2.K 16	DA	608051 J	4.H 13	DAC	7986	3.M 05	DBC	1545 E	2.N 08	DBC	2022	1.J 09
CCC	2711 1	2.K 10	CCC	4466	2.J 10	CCC	6347	2.K 10	CCC	6890 8	2.K 17	DA	608051 J	4.J 15	DAC	8372	3.H 13	DBC	1546	2.N 08	DBC	2024	3.E 08
CCC	2712	2.K 12	CCC	4466	2.J 11	CCC	6347	2.K 12	CCC	6890 9	2.K 10	DA	610081 J	1.J 10	DAC	8447	1.J 10	DBC	1554	1.J 14	DBC	2036	1.J 16
CCC	2712	2.L 02	CCC	4466	2.J 12	CCC	6347	2.K 14	CCC	6890 9	2.K 13	DAB	10 8C	4.I 15	DAC	8468	1.I 09	DBC	1557	2.N 08	DBC	2037	1.J 16
CCC	2713	2.K 10	CCC	4470	2.K 10	CCC	6347	2.K 16	CCC	6890 9	2.K 16	DAC	706 J	4.D 02	DAC	8469	3.L 04	DBC	1566	3.F 03	DBC	2041	3.K 10
CCC	2713	2.K 12	CCC	4482	4.G 05	CCC	6347	2.K 17	CCC	6890 9	2.K 17	DAC	706 J	4.C 06	DAC	8470	3.L 04	DBC	1597	1.I 13	DBC	2042	3.K 10
CCC	2713	2.L 02	CCC	4499	1.L 12	CCC	6347	2.L 02	CCC	6894	2.J 13	DAC	706 J	4.C 12	DAC	8490	3.L 04	DBC	1597	1.I 09	DBC	2044	3.K 11
CCC	2714	2.K 10	CCC	4577	5.E 12	CCC	6347 1	2.K 10	CCC	6923	2.J 14	DAC	1782	1.J 09	DAC	8511 1	1.I 09	DBC	1602	3.K 03	DBC	2045	3.K 11
CCC	2714	2.K 12	CCC	4604	5.E 12	CCC	6347 1	2.K 12	CCC	6941	2.E 15	DAC	1836	3.H 07	DAC	8511 2	1.I 09	DBC	1603	1.J 13	DBC	2046	3.K 11
CCC	2714	2.L 02	CCC	4608	2.K 10	CCC	6347 1	2.K 14	CCC	7028	2.K 10	DAC	1853	3.D 08	DAC	8520	1.J 03	DBC	1605	1.J 13	DBC	2047	3.K 11
CCC	2719	3.C 02	CCC	4608	2.K 12	CCC	6347 1	2.K 16	CCC	7028	2.K 13	DAC	1906	2.M 11	DAC	8525	1.I 18	DBC	1606	1.J 13	DBC	2063	3.F 15
CCC	2720	3.C 03	CCC	4608	2.L 02	CCC	6347 1	2.K 17	CCC	7028	2.K 16	DAC	1954 1	3.L 05	DAC	8558	3.F 04	DBC	1609	1.J 13	DBC	2066	3.F 04
CCC	2722	3.C 03	CCC	4674	1.L 12	CCC	6347 1	2.L 02	CCC	7028	2.K 17	DAC	1954 2	4.J 04	DAC	8585	3.L 03	DBC	1616	1.J 13	DBC	2074	3.F 06
CCC	2776	2.M 12	CCC	4783	1.N 05	CCC	6348	2.K 12	CCC	7028	2.L 02	DAC	2381 1	3.F 02	DAC	8633	3.L 02	DBC	1620	3.J 05	DBC	2076	3.F 04
CCC	2783	2.J 16	CCC	4813	5.E 13	CCC	6348	2.K 17	CCC	7030	2.K 08	DAC	2583	1.N 13	DAC	8731	1.J 14	DBC	1621	3.J 05	DBC	2077	3.F 04
CCC	2789	2.I 06	CCC	4914	1.N 05	CCC	6348	2.L 02	CCC	7030	2.K 14	DAC	2583	1.N 14	DAC	8756	1.J 14	DBC	1626	1.F 18	DBC	2081	1.J 13
CCC	2794	2.M 05	CCC	4929	3.C 10	CCC	6573	2.J 18	CCC	7030	2.K 15	DAC	2583	1.N 12	DAC	8782	3.F 14	DBC	1626	1.G 03	DBC	2111	1.N 03
CCC	2806	2.I 16	CCC	4950	2.J 03	CCC	6635	2.I 18	CCC	7031	2.K 08	DAC	2877	3.E 02	DAC	8782	3.F 13	DBC	1649	3.J 07	DBC	2125	3.E 07
CCC	2846	3.D 14	CCC	4950	2.J 05	CCC	6683	3.C 08	CCC	7031	2.K 09	DAC	3255 3	3.J 05	DAC	8783	3.F 14	DBC	1720	3.J 07	DBC	2126	3.E 07
CCC	2847	2.M 09	CCC	4951	2.J 03	CCC	6707	1.N 03	CCC	7043	2.E 15	DAC	3476	2.F 16	DAC	8783	3.F 13	DBC	1729	3.F 15	DBC	2127	3.E 07
CCC	2847	2.M 10	CCC	4951	2.J 05	CCC	6760	2.G 06	CCC	7104	2.E 14	DAC	4027 16	4.N 02	DAC	8784	3.F 14	DBC	1735	2.M 17	DBC	2128	3.E 07
CCC	2847	2.M 13	CCC	5020	2.M 12	CCC	6832	2.J 07	CCC	7228	2.N 06	DAC	4027 16	3.F 03	DAC	8784	3.F 13	DBC	1737	3.F 15	DBC	2129	3.K 17
CCC	2856	3.C 06	CCC	5133	2.I 18	CCC	6864	3.C 08	CCC	7338	1.N 05	DAC	4027 16	1.I 14	DAC	8793	3.F 14	DBC	1818	2.M 17	DBC	2129	5.E 07
CCC	2857	3.C 06	CCC	5204	2.J 09	CCC	6865	3.C 08	CCC	7363	1.E 04	DAC	4027 16	1.I 12	DAC	8793	3.F 13	DBC	1819	2.M 17	DBC	2132	3.L 03
CCC	2877	3.D 06	CCC	5204	2.J 11	CCC	6875	2.J 13	CCC	7460	2.E 14	DAC	4027 16	4.G 12	DAC	8839 1	1.J 15	DBC	1845	3.K 17	DBC	2139	1.G 07
CCC	2890	2.J 17	CCC	5243	2.I 18	CCC	6890 1	2.K 10	CCC	7568	2.I 05	DAC	4027 16	1.I 11	DAC	8839 2	1.J 15	DBC	1855 1	3.E 02	DBC	2139	1.G 06
CCC	2893	2.J 16	CCC	5245	2.I 18	CCC	6890 1	2.K 13	CCC	7568	2.I 06	DAC	4027 16	2.I 09	DAC	10077	3.L 04	DBC	1855 8	3.E 02	DBC	2144 1	1.G 06
CCC	2894	2.J 16	CCC	5253	2.J 07	CCC	6890 1	2.K 16	CP	106251 J	1.N 09	DAC	4027 3	4.N 02	DAC	10923	1.J 03	DBC	1859	1.J 03	DBC	2144 1	1.G 05
CCC	2900	2.L 09	CCC	5274	2.I 18	CCC	6890 1	2.K 17	CP	106251 J	1.N 10	DAC	4027 3	3.F 03	DAZ	406 8C	4.G 18	DBC	1868	3.J 05	DBC	2145	1.N 11
CCC	2900	2.K 10	CCC	5336	2.K 05	CCC	6890 10	2.K 10	CP	108101 J	1.K 04	DAC	4027 3	1.I 14	DBB	808 12C	4.J 12	DBC	1870	5.F 07	DBC	2146	3.E 07
CCC	2900	2.K 13	CCC	5378	1.E 05	CCC	6890 10	2.K 13	CP	108101 J	1.K 05	DAC	4027 3	1.I 16	DBC	1018 6	3.E 08	DBC	1873	1.I 13	DBC	2148	4.N 18
CCC	2900	2.L 02	CCC	5379	1.E 05	CCC	6890 10	2.K 16	CR	120225 J	1.G 04	DAC	4027 3	1.I 12	DBC	1039	3.E 05	DBC	1873	1.I 08	DBC	2149	4.N 18
CCC	2913	2.J 09	CCC	5398	3.C 07	CCC	6890 10	2.K 17	CRC	1038	2.K 11	DAC	4027 3	4.G 12	DBC	1044	3.F 04	DBC	1876	1.I 13	DBC	2150	4.N 18
CCC	2913	2.J 11	CCC	5399	3.C 07	CCC	6890 11	2.K 10	CRC	1038 J	2.K 11	DAC	4027 3	1.I 11	DBC	1062	1.J 17	DBC	1876	1.I 08	DBC	2151	4.N 18
CCC	2984	2.G 06	CCC	5400	3.C 06	CCC	6890 11	2.K 13	CRC	1428	2.K 11	DAC	4027 3	2.I 09	DBC	1063	1.J 17	DBC	1883	3.F 10	DBC	2157	1.I 07
CCC	3511	2.M 14	CCC	5401	3.C 06	CCC	6890 11	2.K 16	CZG	1668 J	4.N 02	DAC	4506	2.N 09	DBC	1093	3.F 02	DBC	1884	3.F 10	DBC	2158	1.I 13
CCC	3511	2.M 16	CCC	5455	2.J 16	CCC	6890 11	2.K 17	CZG	1668 J	4.J 04	DAC	4545	3.I 05	DBC	1094	3.F 02	DBC	1909	3.F 02	DBC	2158	1.I 07
CCC	3513	2.M 03	CCC	5504	3.D 14	CCC	6890 12	2.K 10	CZH	619 J	5.C 17	DAC	4743	1.J 12	DBC	1095	1.K 10	DBC	1914	3.F 02	DBC	2159	1.I 13

DBC	2159	1.I 07	DBC	2441	3.L 11	DBC	2659	3.J 05	DBC	2960	2.M 08	DBC	3178	3.L 10	DBC	3291 CM	3.K 13	DBC	3551	3.F 11	DBC	3745	3.M 04
DBC	2172	3.J 05	DBC	2441	2.E 14	DBC	2660	3.L 04	DBC	2961	3.H 07	DBC	3179	3.L 10	DBC	3291 HZ	3.K 13	DBC	3552	3.F 11	DBC	3746	3.M 04
DBC	2172	5.E 04	DBC	2443	3.E 04	DBC	2662	3.G 02	DBC	2962	3.H 07	DBC	3180	3.L 07	DBC	3291 JF	3.K 13	DBC	3553	3.F 11	DBC	3750	3.H 13
DBC	2174	3.F 04	DBC	2444	3.E 04	DBC	2663	3.G 02	DBC	2980	3.H 08	DBC	3183	3.L 10	DBC	3291 LY	3.K 13	DBC	3554	3.F 11	DBC	3753	3.K 17
DBC	2175	3.F 04	DBC	2454	4.K 03	DBC	2664	3.I 02	DBC	2984	3.H 08	DBC	3184	3.L 10	DBC	3291 LZ	3.K 13	DBC	3557	3.F 12	DBC	3755	3.E 05
DBC	2181	3.I 08	DBC	2459	3.J 03	DBC	2664	3.K 03	DBC	2984	4.D 18	DBC	3185	3.L 07	DBC	3291 NDR	3.K 13	DBC	3558	3.F 12	DBC	3758	1.J 11
DBC	2198	2.N 08	DBC	2471	3.H 08	DBC	2664	3.K 08	DBC	3034	3.K 02	DBC	3203	1.I 13	DBC	3291 XE	3.K 13	DBC	3561	3.F 11	DBC	3761	3.F 18
DBC	2200	3.J 05	DBC	2476	1.K 09	DBC	2664	2.I 04	DBC	3035	3.K 02	DBC	3203	1.I 11	DBC	3291 ZM	3.K 13	DBC	3562	3.F 11	DBC	3761	3.H 08
DBC	2227	3.L 12	DBC	2477	3.G 02	DBC	2671	3.G 02	DBC	3036	3.K 02	DBC	3205	3.I 05	DBC	3295	3.E 04	DBC	3565	3.F 11	DBC	3775	1.J 11
DBC	2227	5.E 10	DBC	2483	3.G 02	DBC	2672	3.G 02	DBC	3037	3.K 02	DBC	3206	5.F 07	DBC	3296	3.E 04	DBC	3566	3.F 11	DBC	3781	3.E 02
DBC	2227	5.E 11	DBC	2483	4.E 03	DBC	2673	3.L 02	DBC	3045	3.H 07	DBC	3207	3.F 05	DBC	3299	2.M 07	DBC	3567	3.F 11	DBC	3784	3.E 02
DBC	2228	3.L 12	DBC	2483	2.N 09	DBC	2684	3.H 15	DBC	3049	3.I 02	DBC	3208	3.F 05	DBC	3302	3.J 04	DBC	3568	3.F 11	DBC	3785	3.H 10
DBC	2228	5.E 10	DBC	2484	1.L 14	DBC	2684	2.E 15	DBC	3050	3.I 02	DBC	3210	4.E 02	DBC	3303	3.J 04	DBC	3569	3.F 11	DBC	3794	1.I 07
DBC	2228	5.E 11	DBC	2484	3.F 18	DBC	2690	1.J 02	DBC	3054	2.F 17	DBC	3211	4.E 02	DBC	3323	3.K 12	DBC	3570	3.F 11	DBC	3794	1.I 08
DBC	2237	1.H 08	DBC	2484	3.G 02	DBC	2691	1.I 10	DBC	3055	2.F 17	DBC	3212	4.E 02	DBC	3343	1.I 10	DBC	3571	3.F 11	DBC	3794 E	1.I 08
DBC	2237	1.H 09	DBC	2484	1.J 17	DBC	2694	3.F 03	DBC	3057	1.J 15	DBC	3213	3.F 08	DBC	3344	1.I 10	DBC	3572	3.F 11	DBC	3795	3.I 02
DBC	2237	1.H 10	DBC	2484	1.J 11	DBC	2702	4.N 18	DBC	3062	2.M 07	DBC	3214	3.F 09	DBC	3355	3.J 04	DBC	3575	3.F 11	DBC	3796	3.I 06
DBC	2241	2.M 13	DBC	2484	1.J 14	DBC	2704	2.J 04	DBC	3067 E	3.I 06	DBC	3215	3.F 08	DBC	3358	3.M 03	DBC	3576	3.F 11	DBC	3797	3.I 06
DBC	2246	3.J 05	DBC	2486	3.G 02	DBC	2707	3.J 03	DBC	3068	3.E 02	DBC	3216	3.F 09	DBC	3359	3.M 03	DBC	3579	3.F 11	DBC	3797	3.I 03
DBC	2262	3.L 08	DBC	2486	1.J 17	DBC	2707	5.E 04	DBC	3077	3.F 03	DBC	3217	3.F 08	DBC	3360	3.F 08	DBC	3580	3.F 11	DBC	3798 1	3.I 06
DBC	2265	3.L 08	DBC	2486	1.J 11	DBC	2730	3.E 04	DBC	3085	1.J 11	DBC	3219	4.E 02	DBC	3361	3.F 08	DBC	3581	3.F 11	DBC	3864	2.J 05
DBC	2274	1.J 11	DBC	2486	1.J 14	DBC	2731	3.E 04	DBC	3086	1.K 09	DBC	3228	1.J 04	DBC	3362	3.F 08	DBC	3594	3.F 12	DBC	3865	2.J 05
DBC	2275	1.J 11	DBC	2499	1.K 09	DBC	2732	3.E 04	DBC	3087	1.K 09	DBC	3230	3.I 08	DBC	3363	3.M 03	DBC	3595	3.F 12	DBC	3866	2.J 06
DBC	2286	3.H 10	DBC	2506	3.F 09	DBC	2734	3.J 07	DBC	3088	1.K 09	DBC	3231	3.I 08	DBC	3366	1.J 16	DBC	3596	3.F 12	DBC	3900	3.K 10
DBC	2287	3.H 10	DBC	2512	3.F 16	DBC	2738	3.E 07	DBC	3089	1.K 09	DBC	3232	3.I 08	DBC	3387	3.F 18	DBC	3597	3.F 12	DBC	3901	3.K 10
DBC	2289	3.H 10	DBC	2514	3.F 16	DBC	2847	5.F 08	DBC	3090	3.F 09	DBC	3233	3.J 03	DBC	3390	3.K 15	DBC	3598	3.F 12	DBC	3908	1.L 06
DBC	2290	3.H 10	DBC	2515	3.F 08	DBC	2850	2.E 04	DBC	3091	4.E 02	DBC	3234	3.J 03	DBC	3391	3.K 15	DBC	3599	3.F 11	DBC	3914 1	3.I 02
DBC	2297	3.H 07	DBC	2516	3.F 08	DBC	2860	3.L 02	DBC	3092	2.M 08	DBC	3235	3.J 03	DBC	3392	3.K 14	DBC	3600	3.F 11	DBC	3914 1	1.I 13
DBC	2298	3.H 07	DBC	2517	3.F 08	DBC	2861	4.F 03	DBC	3093	3.H 06	DBC	3236	3.J 04	DBC	3393	3.K 14	DBC	3601	3.F 11	DBC	3914 1	1.I 14
DBC	2299	3.H 07	DBC	2534	3.L 04	DBC	2872	3.K 02	DBC	3102	3.I 08	DBC	3238	3.M 04	DBC	3394	3.K 15	DBC	3602	3.F 12	DBC	3914 1	1.I 16
DBC	2310	3.F 15	DBC	2535	3.L 04	DBC	2873	3.K 02	DBC	3102 E	3.I 08	DBC	3242	1.J 15	DBC	3395	3.K 15	DBC	3603	3.F 12	DBC	3914 2	3.I 02
DBC	2311	3.F 15	DBC	2564	3.H 08	DBC	2874	3.K 02	DBC	3103	5.F 08	DBC	3244	1.J 15	DBC	3396	3.K 14	DBC	3604	3.F 11	DBC	3944	3.F 08
DBC	2313	3.F 04	DBC	2571	3.L 04	DBC	2875	3.K 02	DBC	3105	1.I 09	DBC	3245	1.J 15	DBC	3397	3.K 14	DBC	3605	3.F 12	DBC	3946	3.G 02
DBC	2322	3.L 02	DBC	2572	3.L 04	DBC	2876	3.K 02	DBC	3106 1	1.I 14	DBC	3252	3.L 06	DBC	3398	1.J 10	DBC	3606	3.F 12	DBC	3946	1.J 11
DBC	2325	3.F 06	DBC	2580	3.I 02	DBC	2877	3.K 02	DBC	3106 1	1.I 16	DBC	3256	3.L 02	DBC	3399	1.J 10	DBC	3608	3.F 11	DBC	3946	3.F 16
DBC	2326	3.E 08	DBC	2580	3.I 03	DBC	2879	1.J 13	DBC	3106 1	1.I 09	DBC	3264	3.L 10	DBC	3401	3.I 02	DBC	3612	3.F 11	DBC	3952	3.J 04
DBC	2339	3.H 08	DBC	2582	4.N 18	DBC	2886	4.E 02	DBC	3106 2	1.I 09	DBC	3265	3.L 10	DBC	3401	3.L 12	DBC	3613	3.F 11	DBC	3958	4.N 15
DBC	2362	3.F 14	DBC	2594	3.K 18	DBC	2887	4.E 02	DBC	3107	3.I 02	DBC	3266	3.L 07	DBC	3401	5.E 10	DBC	3614	3.F 11	DBC	3972	3.E 06
DBC	2392	3.I 12	DBC	2595	3.K 18	DBC	2889	1.L 05	DBC	3107	3.I 03	DBC	3269	3.L 10	DBC	3401	5.E 11	DBC	3617	3.F 12	DBC	3976	3.J 03
DBC	2402	3.F 14	DBC	2597	1.J 10	DBC	2889	1.L 07	DBC	3120 CM	3.K 13	DBC	3270	3.L 10	DBC	3402	3.H 02	DBC	3618	3.F 12	DBC	3979	1.J 10
DBC	2403	3.F 14	DBC	2634	3.F 02	DBC	2898	3.I 06	DBC	3120 JF	3.K 13	DBC	3271	3.L 07	DBC	3424	3.I 02	DBC	3621	3.F 12	DBC	3980	1.J 11
DBC	2408	3.F 17	DBC	2635	3.F 02	DBC	2899	3.I 05	DBC	3120 ZM	3.K 13	DBC	3273	3.I 02	DBC	3425	3.I 02	DBC	3622	3.F 12	DBC	3981	3.H 08
DBC	2414	3.F 16	DBC	2640	3.E 03	DBC	2900	3.I 05	DBC	3132	1.I 12	DBC	3273	3.I 03	DBC	3430	3.L 12	DBC	3645	3.F 11	DBC	3983	1.J 10
DBC	2415	3.F 16	DBC	2641	1.M 16	DBC	2905	3.I 06	DBC	3132	1.I 11	DBC	3280	3.L 12	DBC	3430	5.E 10	DBC	3647	2.N 08	DBC	3998	3.F 08
DBC	2416	3.F 09	DBC	2642	1.J 03	DBC	2925	2.G 09	DBC	3133	1.I 12	DBC	3280	5.E 10	DBC	3430	5.E 11	DBC	3679	3.E 06	DBC	3999	3.L 12
DBC	2417	3.F 08	DBC	2643	3.L 06	DBC	2932	3.E 05	DBC	3133	1.I 11	DBC	3280	5.E 11	DBC	3434	2.M 18	DBC	3682	1.I 17	DBC	4101 1	1.J 15
DBC	2418	3.F 09	DBC	2644 LY	3.L 06	DBC	2933	3.I 02	DBC	3135	3.I 05	DBC	3281	3.I 02	DBC	3434	3.F 14	DBC	3682	1.J 16	DBC	4101 2	1.J 15
DBC	2421	4.E 02	DBC	2644 XE	3.L 06	DBC	2934	3.H 08	DBC	3136	3.K 13	DBC	3282	3.F 06	DBC	3435	2.M 18	DBC	3684	3.M 04	DBC	4138	1.J 12
DBC	2423	1.K 09	DBC	2646	3.M 03	DBC	2934	4.D 18	DBC	3148	3.F 15	DBC	3284	1.I 10	DBC	3435	3.F 14	DBC	3694	3.I 06	DBC	4150	3.F 05
DBC	2424	1.K 09	DBC	2647	3.I 06	DBC	2937 E	3.I 07	DBC	3149	3.F 15	DBC	3285	1.I 10	DBC	3438	2.J 04	DBC	3712	1.I 07	DBC	4151	3.F 05
DBC	2427	3.L 12	DBC	2650	3.H 13	DBC	2937 N	3.I 07	DBC	3150	3.F 15	DBC	3286	1.J 11	DBC	3439	2.K 06	DBC	3722	1.M 16	DBC	4174	3.F 16
DBC	2428	3.L 12	DBC	2650	3.H 14	DBC	2957	3.I 02	DBC	3159	3.I 06	DBC	3286	3.F 16	DBC	3444	3.H 07	DBC	3728	1.N 13	DBC	4252	3.I 02
DBC	2428	5.E 10	DBC	2653	3.L 06	DBC	2958	3.I 02	DBC	3164	1.J 17	DBC	3289	1.J 17	DBC	3445	3.H 07	DBC	3728	1.N 14	DBC	4252	3.I 03
DBC	2433	1.G 08	DBC	2656	1.I 11	DBC	2959	2.M 08	DBC	3168	3.L 05	DBC	3291 AR	3.K 13	DBC	3448	3.I 02	DBC	3739	3.L 10	DBC	4267	3.I 08
DBC	2433	1.G 05	DBC	2657	1.I 10	DBC	2959	2.M 11	DBC	3169	3.F 02	DBC	3291 AW	3.K 13	DBC	3449	3.I 02	DBC	3740	3.L 07	DBC	4267	3.I 09

DBC 4273 ..... 3.L 08
DBC 4282 ..... 3.G 02
DBC 4293 ..... 1.M 16
DBC 4301 ..... 1.I 04
DBC 4301 ..... 1.I 05
DBC 4309 ..... 3.C 04
DBC 4309 ..... 3.D 11
DBC 4313 ..... 1.J 13
DBC 4320 ..... 3.K 17
DBC 4321 ..... 3.K 17
DBC 4326 ..... 1.J 11
DBC 4327 ..... 1.J 11
DBC 4328 ..... 3.L 07
DBC 4329 ..... 3.L 10
DBC 4342 ..... 3.J 04
DBC 4343 ..... 3.L 08
DBC 4349 ..... 3.E 07
DBC 4350 ..... 3.E 07
DBC 4361 ..... 3.J 04
DBC 4371 ..... 3.L 07
DBC 4372 ..... 3.L 08
DBC 4372 LY 3.L 08
DBC 4372 XE 3.L 08
DBC 4408 ..... 3.F 17
DBC 4411 ..... 1.I 07
DBC 4412 ..... 1.I 07
DBC 4418 ..... 1.E 16
DBC 4418 ..... 1.E 17
DBC 4727 ..... 3.F 07
DBC 4733 ..... 1.J 16
DBC 4734 ..... 1.J 16
DBC 4735 ..... 1.M 09
DBC 4742 ..... 1.I 09
DBC 4743 ..... 1.I 09
DBC 4771 LY 3.L 05
DBC 4771 SDC 3.L 05
DBC 4771 XE 3.L 05
DBC 4776 ..... 3.I 06
DBC 4778 ..... 3.D 11
DBC 4780 ..... 3.F 16
DBC 4784 ..... 4.E 04
DBC 4785 ..... 1.K 09
DBC 4788 ..... 3.K 10
DBC 4789 ..... 3.K 10
DBC 4794 ..... 3.M 05
DBC 4797 ..... 3.M 05
DBC 4802 ..... 3.M 05
DBC 4803 ..... 3.M 05
DBC 4810 ..... 3.J 04
DBC 4816 ..... 3.M 05
DBC 4817 ..... 3.M 05
DBC 4819 ..... 3.M 05
DBC 4822 ..... 3.L 03
DBC 4824 ..... 1.J 10
DBC 4835 ..... 3.H 02
DBC 4835 E 3.H 02
DBC 4837 ..... 3.H 02
DBC 4837 E 3.H 02
DBC 4839 ..... 3.H 02
DBC 4840 ..... 3.H 02
DBC 4840 E 3.H 02
DBC 4842 ..... 1.G 08
DBC 4842 ..... 1.G 05
DBC 4855 ..... 3.H 12
DBC 4856 ..... 3.H 12
DBC 4870 ..... 3.H 07
DBC 4871 ..... 3.H 07
DBC 4872 ..... 3.F 09
DBC 4873 ..... 3.F 08
DBC 4874 ..... 3.F 09
DBC 4875 ..... 3.F 08
DBC 4876 ..... 3.F 08
DBC 4910 ..... 1.I 08
DBC 4910 E 1.I 08
DBC 4911 ..... 1.I 09
DBC 4912 ..... 1.I 07
DBC 4913 ..... 1.I 07
DBC 4914 ..... 1.I 09
DBC 4916 ..... 3.D 11
DBC 4938 ..... 3.E 05
DBC 4939 ..... 3.E 05
DBC 4940 ..... 3.F 02
DBC 4944 ..... 3.K 10
DBC 4945 ..... 3.K 10
DBC 4946 ..... 3.K 10
DBC 4947 ..... 3.K 10
DBC 4965 ..... 3.M 05
DBC 4966 ..... 1.I 12
DBC 4967 ..... 1.I 12
DBC 4968 ..... 1.I 12
DBC 4969 ..... 1.J 11
DBC 4970 ..... 1.J 11
DBC 4971 ..... 1.J 09
DBC 4972 ..... 1.K 09
DBC 4973 ..... 1.K 09
DBC 4974 ..... 3.H 07
DBC 4975 ..... 3.H 07
DBC 4991 1 ..... 3.I 02
DBC 4991 1 ..... 3.I 06
DBC 4991 1 ..... 3.F 02
DBC 4991 1 ..... 3.I 03
DBC 4992 ..... 4.F 03
DBC 4997 ..... 3.E 02
DBC 5004 ..... 3.K 15
DBC 5005 ..... 3.K 15
DBC 5006 ..... 3.K 14
DBC 5007 ..... 3.K 14
DBC 5008 ..... 3.K 15
DBC 5009 ..... 3.K 15
DBC 5013 ..... 3.L 03
DBC 5028 ..... 3.H 16
DBC 5030 ..... 3.H 16
DBC 5034 ..... 1.K 08
DBC 5043 ..... 2.N 06
DBC 5050 ..... 3.F 04
DBC 5077 ..... 3.F 05
DBC 5079 ..... 3.F 05
DBC 5080 ..... 1.I 17
DBC 5082 ..... 1.I 17
DBC 5082 ..... 1.J 16
DBC 5097 ..... 3.I 06
DBC 5101 ..... 3.J 05
DBC 5114 ..... 3.L 09
DBC 5124 ..... 1.J 15
DBC 5125 ..... 1.J 15
DBC 5132 ..... 3.J 06
DBC 5136 ..... 4.E 02
DBC 5137 ..... 4.E 02
DBC 5138 ..... 4.E 03
DBC 5153 ..... 4.E 03
DBC 5157 ..... 3.E 02
DBC 5166 ..... 3.H 13
DBC 5167 ..... 3.H 13
DBC 5176 ..... 1.K 09
DBC 5178 ..... 5.F 10
DBC 5178 ..... 3.E 04
DBC 5201 ..... 3.F 15
DBC 5212 ..... 3.F 17
DBC 5213 ..... 3.F 17
DBC 5235 ..... 3.H 12
DBC 5238 ..... 3.L 10
DBC 5239 ..... 3.L 10
DBC 5240 ..... 3.L 07
DBC 5241 ..... 3.L 10
DBC 5242 ..... 3.L 10
DBC 5243 ..... 3.L 07
DBC 5244 ..... 3.L 10
DBC 5245 ..... 3.L 07
DBC 5246 ..... 3.L 07
DBC 5247 ..... 3.L 07
DBC 5248 ..... 3.L 10
DBC 5249 ..... 3.L 08
DBC 5250 ..... 3.L 08
DBC 5251 ..... 3.L 08
DBC 5269 ..... 3.L 05
DBC 5273 ..... 3.F 03
DBC 5273 ..... 3.J 07
DBC 5292 ..... 3.I 05
DBC 5293 ..... 1.K 10
DBC 5309 ..... 3.J 07
DBC 5312 ..... 3.J 02
DBC 5319 ..... 1.L 07
DBC 5327 ..... 3.L 08
DBC 5328 ..... 3.L 08
DBC 5330 ..... 3.F 17
DBC 5346 ..... 1.J 03
DBC 5347 ..... 3.F 03
DBC 5347 ..... 3.J 07
DBC 5349 ..... 3.F 07
DBC 5370 ..... 2.N 09
DBC 5371 ..... 2.N 09
DBC 5377 ..... 3.F 05
DBC 5378 ..... 3.F 05
DBC 5392 ..... 3.H 03
DBC 5393 ..... 3.H 03
DBC 5394 ..... 3.H 03
DBC 5395 ..... 3.H 03
DBC 5396 ..... 3.H 03
DBC 5397 ..... 3.H 03
DBC 5398 ..... 3.H 03
DBC 5404 ..... 3.H 13
DBC 5417 ..... 3.F 15
DBC 5422 ..... 2.N 09
DBC 5441 ..... 3.K 09
DBC 5442 ..... 3.K 09
DBC 5447 ..... 3.F 08
DBC 5449 ..... 3.F 08
DBC 5450 ..... 3.F 08
DBC 5453 ..... 3.H 14
DBC 5465 ..... 3.H 15
DBC 5471 ..... 3.F 14
DBC 5471 ..... 3.F 13
DBC 5472 ..... 3.F 14
DBC 5472 ..... 3.F 13
DBC 5476 ..... 3.F 14
DBC 5476 ..... 3.F 13
DBC 5513 ..... 1.E 16
DBC 5513 ..... 1.E 17
DBC 5525 ..... 4.E 03
DBC 5531 ..... 3.F 15
DBC 5533 ..... 3.K 13
DBC 5546 ..... 1.N 05
DBC 5551 ..... 3.E 03
DBC 5552 ..... 1.G 07
DBC 5553 ..... 3.I 08
DBC 5554 ..... 3.J 05
DBC 5555 ..... 3.K 11
DBC 5556 ..... 3.K 11
DBC 5557 ..... 3.K 11
DBC 5558 ..... 3.K 11
DBC 5559 ..... 3.K 10
DBC 5560 ..... 3.K 10
DBC 5563 ..... 1.J 13
DBC 5564 ..... 1.N 11
DBC 5573 ..... 3.H 08
DBC 5578 ..... 1.N 04
DBC 5578 ..... 1.N 05
DBC 5593 ..... 3.K 14
DBC 5593 ..... 3.K 18
DBC 5602 ..... 3.F 09
DBC 5604 ..... 3.F 09
DBC 5605 ..... 3.G 02
DBC 5640 ..... 3.I 03
DBC 5641 ..... 3.I 03
DBC 5643 2 ..... 3.I 06
DBC 5645 ..... 3.F 05
DBC 5648 ..... 3.F 05
DBC 5647 ..... 3.F 05
DBC 5651 ..... 3.J 05
DBC 5655 ..... 5.F 08
DBC 5666 1 ..... 1.I 13
DBC 5666 1 ..... 1.I 14
DBC 5666 1 ..... 1.I 16
DBC 5666 2 ..... 1.I 13
DBC 5666 2 ..... 1.I 14
DBC 5666 2 ..... 1.I 16
DBC 5666 2 ..... 3.I 03
DBC 5667 ..... 1.M 16
DBC 5669 ..... 3.F 15
DBC 5670 ..... 3.F 15
DBC 5675 ..... 3.I 11
DBC 5676 ..... 3.E 04
DBC 5703 ..... 1.I 16
DBC 5704 ..... 1.I 15
DBC 5707 ..... 3.L 09
DBC 5712 ..... 1.J 11
DBC 5713 ..... 3.H 08
DBC 5720 ..... 1.J 14
DBC 5721 ..... 1.J 14
DBC 5722 ..... 3.D 11
DBC 5724 ..... 3.D 10
DBC 5724 ..... 3.D 12
DBC 5727 ..... 1.K 03
DBC 5733 ..... 3.H 15
DBC 5736 ..... 3.I 05
DBC 5737 ..... 3.I 05
DBC 5743 ..... 3.J 07
DBC 5744 ..... 1.J 16
DBC 5745 ..... 1.J 16
DBC 5746 ..... 1.K 09
DBC 5747 ..... 1.K 09
DBC 5758 ..... 3.E 07
DBC 5774 ..... 3.F 16
DBC 5778 ..... 3.F 15
DBC 5823 ..... 3.I 03
DBC 5825 ..... 3.D 09
DBC 5828 ..... 1.L 11
DBC 5828 ..... 1.L 13
DBC 5832 ..... 5.F 08
DBC 5841 ..... 3.I 03
DBC 5844 ..... 3.D 09
DBC 5845 ..... 3.D 09
DBC 5848 ..... 3.F 03
DBC 5857 ..... 1.K 09
DBC 5858 ..... 2.E 11
DBC 5869 ..... 2.M 09
DBC 5869 ..... 2.M 11
DBC 5870 ..... 2.M 09
DBC 5870 ..... 2.M 11
DBC 5872 ..... 1.I 13
DBC 5872 ..... 1.I 14
DBC 5872 ..... 1.I 16
DBC 5873 ..... 1.I 13
DBC 5873 ..... 1.I 14
DBC 5873 ..... 1.I 16
DBC 5891 ..... 1.J 10
DBC 5892 ..... 1.J 10
DBC 5910 ..... 1.K 09
DBC 5911 ..... 1.K 09
DBC 5913 ..... 3.F 07
DBC 5914 ..... 3.F 07
DBC 5917 ..... 1.L 03
DBC 5919 ..... 1.J 03
DBC 5921 ..... 3.F 05
DBC 5922 ..... 3.F 05
DBC 5923 ..... 3.F 05
DBC 5924 ..... 3.F 08
DBC 5925 ..... 3.F 10
DBC 5926 ..... 3.F 10
DBC 5927 ..... 3.F 08
DBC 5928 ..... 3.F 08
DBC 5929 ..... 3.F 10
DBC 5930 ..... 3.F 16
DBC 5931 ..... 3.F 16
DBC 5933 ..... 3.F 08
DBC 5934 ..... 1.J 16
DBC 5935 ..... 1.J 16
DBC 5943 ..... 4.G 04
DBC 5977 ..... 1.I 10
DBC 5978 ..... 1.I 10
DBC 5979 ..... 1.I 10
DBC 5982 ..... 3.F 18
DBC 5986 ..... 3.L 09
DBC 5987 ..... 3.L 09
DBC 5989 ..... 3.I 03
DBC 5994 ..... 3.I 05
DBC 5995 ..... 3.I 05
DBC 6026 ..... 1.J 13
DBC 6027 ..... 1.J 13
DBC 6112 ..... 1.K 07
DBC 6113 ..... 3.E 04
DBC 6126 ..... 3.F 15
DBC 6130 ..... 3.F 16
DBC 6133 ..... 2.E 11
DBC 6134 ..... 3.F 16
DBC 6139 ..... 1.M 10
DBC 6161 ..... 3.H 09
DBC 6165 ..... 3.F 15
DBC 6166 ..... 3.F 16
DBC 6167 ..... 3.I 08
DBC 6171 ..... 3.I 03
DBC 6175 ..... 1.K 09
DBC 6176 ..... 1.K 09
DBC 6224 ..... 3.L 12
DBC 6241 ..... 3.L 12
DBC 6241 ..... 5.E 10
DBC 6241 ..... 5.E 11
DBC 6242 ..... 3.L 12
DBC 6244 ..... 4.E 02
DBC 6246 ..... 2.N 09
DBC 6247 ..... 2.N 09
DBC 6262 ..... 3.H 04
DBC 6263 ..... 3.H 04
DBC 6264 ..... 3.H 04
DBC 6265 ..... 3.H 04
DBC 6266 ..... 3.H 04
DBC 6267 ..... 3.H 04
DBC 6268 ..... 3.H 04
DBC 6279 ..... 3.E 07
DBC 6280 ..... 3.E 07
DBC 6289 ..... 1.L 13
DBC 6292 ..... 2.M 17
DBC 6293 ..... 2.M 17
DBC 6296 ..... 3.H 06
DBC 6308 ..... 3.F 04
DBC 6309 ..... 3.F 04
DBC 6311 ..... 3.J 02
DBC 6369 ..... 1.I 17
DBC 6372 ..... 3.D 10
DBC 6372 ..... 3.D 12
DBC 6417 ..... 1.L 14
DBC 6423 ..... 3.H 07
DBC 6424 ..... 3.H 07
DBC 6427 ..... 3.I 05
DBC 6429 ..... 3.I 05
DBC 6433 ..... 3.L 11
DBC 6433 ..... 2.E 14
DBC 6435 ..... 3.J 07
DBC 6436 ..... 3.J 02
DBC 6437 ..... 3.J 02
DBC 6438 ..... 3.J 02
DBC 6439 ..... 3.J 02
DBC 6448 ..... 3.K 10
DBC 6449 ..... 3.K 10
DBC 6457 ..... 3.H 07
DBC 6458 ..... 3.H 07
DBC 6472 ..... 1.I 14
DBC 6473 ..... 1.I 14
DBC 6487 ..... 3.J 02
DBC 6488 ..... 3.J 02
DBC 6501 ..... 1.J 04
DBC 6510 ..... 2.E 04
DBC 6513 ..... 1.M 10
DBC 6529 ..... 3.H 08
DBC 6550 ..... 1.I 15
DBC 6551 ..... 1.I 16
DBC 6552 ..... 1.I 15
DBC 6553 ..... 1.I 16
DBC 6554 ..... 1.I 15
DBC 6555 ..... 1.I 15
DBC 6556 ..... 1.I 15
DBC 6567 ..... 3.E 02
DBC 6568 ..... 1.L 14
DBC 6570 ..... 1.L 14
DBC 6591 ..... 3.K 12
DBC 6595 ..... 3.F 14
DBC 6595 ..... 2.N 03
DBC 6596 ..... 2.N 06
DBC 6596 ..... 3.F 14
DBC 6616 ..... 3.E 02
DBC 6621 ..... 3.I 06
DBC 6642 ..... 3.H 07
DBC 6643 ..... 3.I 03
DBC 6646 ..... 3.H 06
DBC 6647 ..... 3.H 06
DBC 6649 ..... 2.N 09
DBC 6675 ..... 3.H 07
DBC 6677 ..... 3.H 07
DBC 6679 3 ..... 3.I 06
DBC 6680 ..... 3.I 06
DBC 6751 ..... 3.F 18
DBC 6754 ..... 2.F 17
DBC 6768 ..... 2.M 07
DBC 6768 ..... 2.J 18
DBC 6768 ..... 2.K 06
DBC 6794 ..... 3.F 17
DBC 6795 ..... 3.F 17
DBC 6801 ..... 3.J 02
DBC 6802 ..... 3.K 18
DBC 6803 ..... 3.K 18
DBC 6807 ..... 3.F 07
DBC 6809 ..... 1.L 14
DBC 6830 ..... 1.I 15
DBC 6832 ..... 1.I 15
DBC 6834 ..... 1.I 15
DBC 6835 ..... 1.I 15
DBC 6836 ..... 1.I 15
DBC 6871 ..... 3.F 05
DBC 6872 ..... 3.F 05
DBC 6873 ..... 3.F 10
DBC 6874 ..... 3.F 10
DBC 6875 ..... 3.F 08
DBC 6876 ..... 3.F 08
DBC 6877 ..... 3.I 06
DBC 6878 ..... 3.F 17
DBC 6879 ..... 3.K 09
DBC 6880 ..... 3.K 09
DBC 6884 ..... 1.K 09
DBC 6885 ..... 1.K 09
DBC 6886 ..... 1.K 09

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

G17
Fiche 5

NUMERIC INDEX "DBC 6887" TO "EAC 4647"

DBC	6887	1.K 09	DBC	10537	5.E 11	DBC	11405	3.K 02	DBC	12514	1.J 04	EAC	2464	1.F 08	EAC	3215 2	1.K 04	EAC	3671	1.E 17	EAC	4119	1.E 09
DBC	6888	3.F 07	DBC	10554	3.K 07	DBC	11405	3.K 03	DBC	12516	1.L 03	EAC	2464	1.F 08	EAC	3215 2	1.K 06	EAC	3762	1.N 12	EAC	4119	1.E 10
DBC	6889	3.F 07	DBC	10555	3.K 07	DBC	11405	3.K 08	DBC	12516 E	1.L 03	EAC	2475	1.G 09	EAC	3215 2	1.N 11	EAC	3793	1.E 12	EAC	4126	1.N 13
DBC	6890	3.F 07	DBC	10556	3.K 07	DBC	11464	3.K 09	DBC	12517	1.L 03	EAC	2488	1.G 09	EAC	3215 2	1.I 02	EAC	3803	1.N 13	EAC	4126	1.N 14
DBC	6891	3.F 07	DBC	10557	3.K 07	DBC	11485	3.K 09	DBC	12517 E	1.L 03	EAC	2494	1.E 09	EAC	3215 2	1.N 03	EAC	3803	1.N 14	EAC	4126	1.N 12
DBC	6900	1.J 16	DBC	10597	3.J 07	DBC	11494	3.M 02	DGC	1553	3.F 12	EAC	2494	1.E 10	EAC	3215 2	1.N 04	EAC	3803	1.N 12	EAC	4175	1.G 11
DBC	6901	1.J 16	DBC	10618	3.I 04	DBC	11501	1.G 07	DGC	2491	3.F 18	EAC	2495	1.E 09	EAC	3215 2	1.N 05	EAC	3810	1.F 05	EAC	4292	1.F 15
DBC	6902	1.J 09	DBC	10650	3.I 05	DBC	11509	1.L 03	DGC	2491	1.J 10	EAC	2495	1.E 10	EAC	3215 2	1.K 05	EAC	3810	1.F 08	EAC	4293	1.E 09
DBC	6903	1.J 09	DBC	10684	3.F 04	DBC	11588	4.O 04	DGC	2491	3.H 08	EAC	2495	1.H 02	EAC	3215 2	1.M 10	EAC	3823	1.H 11	EAC	4294	1.E 09
DBC	6910	1.J 09	DBC	10686	3.I 05	DBC	11589	4.O 04	DGC	2493	1.J 10	EAC	2495	1.H 05	EAC	3215 20	1.L 02	EAC	3823	1.H 12	EAC	4326	1.E 12
DBC	6911	1.J 09	DBC	10697	3.I 03	DBC	11610	4.O 04	DGC	2493	3.H 08	EAC	2495	1.H 06	EAC	3215 4	2.M 07	EAC	3850	1.G 13	EAC	4327	1.E 12
DBC	6913	3.F 16	DBC	10729	4.F 03	DBC	11611	4.O 04	DGC	2494	1.J 10	EAC	2522	1.E 09	EAC	3215 4	1.F 03	EAC	3850	1.G 14	EAC	4328	1.E 12
DBC	6914	3.F 16	DBC	10736	3.K 03	DBC	11638	3.K 16	DGC	2494	3.H 08	EAC	2522	1.E 10	EAC	3215 4	1.K 04	EAC	3864	3.C 13	EAC	4329 1	1.E 12
DBC	6926	3.J 07	DBC	10772	1.I 14	DBC	11639	3.K 16	DGC	2495	1.J 10	EAC	2522	1.G 04	EAC	3215 4	3.E 08	EAC	3864	3.C 18	EAC	4329 2	1.E 12
DBC	6936	1.M 10	DBC	10772 E	1.I 14	DBC	11642	3.K 16	DGC	2495	1.J 15	EAC	2522	1.G 06	EAC	3215 4	2.J 18	EAC	3866	3.D 02	EAC	4329 3	1.E 12
DBC	6971	3.J 09	DBC	10780	1.I 15	DBC	11643	3.K 16	DGC	2496	1.J 10	EAC	2522	1.G 07	EAC	3215 4	2.I 05	EAC	3866	3.D 04	EAC	4378	1.H 02
DBC	9821	1.I 16	DBC	10782	1.I 15	DBC	11646	3.K 16	DGC	2497	1.J 10	EAC	2522	1.G 08	EAC	3215 4	1.K 05	EAC	3866	3.C 13	EAC	4378	1.H 05
DBC	9823	1.I 16	DBC	10784	1.I 15	DBC	11647	3.K 16	DGC	2498	1.J 10	EAC	2522	1.G 05	EAC	3215 5	1.K 04	EAC	3866	3.C 18	EAC	4378	1.H 06
DBC	9824	1.I 15	DBC	10785	1.I 15	DBC	11653 AEE	3.K 13	DGC	2499	1.J 09	EAC	2547	2.F 18	EAC	3215 5	2.I 06	EAC	3866	3.C 14	EAC	4378	1.H 13
DBC	9832	1.I 14	DBC	10786	1.I 15	DBC	11653 AEM	3.K 13	DGC	2499	1.J 10	EAC	2618	1.F 02	EAC	3215 5	1.M 05	EAC	3866	3.C 16	EAC	4380	1.E 12
DBC	9833	1.I 14	DBC	10808	3.E 08	DBC	11653 AFR	3.K 13	DGC	2658	3.F 18	EAC	2619	1.E 12	EAC	3215 5	1.K 05	EAC	3867	3.D 02	EAC	4431	1.F 10
DBC	10044	3.F 02	DBC	10809	3.E 08	DBC	11653 CEM	3.K 13	DGC	2660	3.F 18	EAC	2630	1.N 14	EAC	3215 5	1.M 10	EAC	3867	3.D 04	EAC	4431	1.F 11
DBC	10045	3.F 02	DBC	10837	1.J 15	DBC	11653 HEZ	3.K 13	DRC	1449	3.L 09	EAC	2630	1.N 12	EAC	3215 6	1.M 08	EAC	3867	3.C 13	EAC	4451	1.E 09
DBC	10060	1.I 17	DBC	10838	1.J 15	DBC	11653 JEF	3.K 13	DRC	1449	3.L 12	EAC	2632	1.F 02	EAC	3215 6	3.D 15	EAC	3867	3.C 18	EAC	4451	1.E 10
DBC	10080	1.J 16	DBC	10919	3.L 08	DBC	11653 LDY	3.K 13	DRC	5582	5.F 07	EAC	2632	1.F 03	EAC	3215 6	1.K 04	EAC	3867	3.C 14	EAC	4505	1.E 12
DBC	10070	3.K 16	DBC	10920	3.L 08	DBC	11653 LEG	3.K 13	DRC	5582	4.K 06	EAC	2676	1.G 09	EAC	3215 6	1.K 06	EAC	3867	3.C 16	EAC	4512	1.E 16
DBC	10110	1.I 17	DBC	10921	3.L 08	DBC	11653 NDR	3.K 13	DRC	5582	4.K 09	EAC	2732	1.F 10	EAC	3215 6	1.K 02	EAC	3878	1.G 13	EAC	4512	1.E 17
DBC	10166	1.J 10	DBC	10922	3.L 08	DBC	11654	3.K 10	DRC	5582	4.G 06	EAC	2732	1.F 12	EAC	3215 6	1.K 05	EAC	3878	1.G 14	EAC	4519	1.G 10
DBC	10167	1.J 11	DBC	10923	3.L 08	DBC	11658	3.K 11	DRC	5582	4.H 15	EAC	2863	1.L 03	EAC	3215 7	1.K 06	EAC	3921	1.G 04	EAC	4520	1.G 11
DBC	10183	3.L 08	DBC	10924	3.L 08	DBC	11659	3.K 11	DRC	5582	4.H 16	EAC	2909	1.G 18	EAC	3215 7	1.N 11	EAC	3926	1.G 06	EAC	4527	1.G 10
DBC	10188	3.F 05	DBC	10937	3.F 10	DBC	11663	3.K 18	DRC	5582	4.H 10	EAC	2911	1.F 17	EAC	3215 7	1.N 03	EAC	3926	1.G 07	EAC	4528	1.G 10
DBC	10232	1.I 12	DBC	10938	3.F 10	DBC	11664	3.K 10	DRC	5582	4.K	EAC	2911	1.G 02	EAC	3215 7	1.N 04	EAC	3926	1.G 08	EAC	4531	1.G 10
DBC	10233	1.I 12	DBC	10939	3.F 08	DBC	11665	3.K 10	DRC	558	4.[illegible]	EAC	2911	1.G 03	EAC	3215 7	1.N 05	EAC	3926	1.G 05	EAC	4532	1.G 10
DBC	10234	1.I 12	DBC	10940	3.F 06	DBC	11711	3.K 14	EAC	1027	1.F 10	EAC	2912	1.F 16	EAC	3215 8	1.K 03	EAC	3927	1.N 13	EAC	4533	1.G 10
DBC	10284	1.M 09	DBC	11299	1.J 10	DBC	11711	3.K 16	EAC	1027	1.F [illegible]	EAC	2912	1.G 02	EAC	3215 8	1.K 02	EAC	3927	1.N 14	EAC	4534	1.G 11
DBC	10306	3.K 16	DBC	11300	1.J 11	DBC	11711	3.K 11	EAC	1864	1.E 09	EAC	2912	1.H 03	EAC	3215 8	1.J 18	EAC	3964	1.E 09	EAC	4535	1.G 11
DBC	10355	1.J 11	DBC	11313	3.K 09	DBC	11762	3.K 03	EAC	1864	1.E 10	EAC	2912	1.H 04	EAC	3215 8	1.J 07	EAC	3964	1.E 13	EAC	4536	1.G 12
DBC	10358	2.M 11	DBC	11314	3.K 09	DBC	11763	3.K 03	EAC	1896	2.G 03	EAC	2978	2.E 09	EAC	3215 8	1.J 08	EAC	3968	2.I 07	EAC	4538	1.G 09
DBC	10362	1.I 12	DBC	11342	3.H 07	DBC	11764	3.K 03	EAC	1896	2.G 04	EAC	2989	1.G 11	EAC	3215 8	1.J 05	EAC	3970	2.I 07	EAC	4538	1.G 12
DBC	10362	1.I 11	DBC	11380	5.E 14	DBC	11765	3.K 03	EAC	2206	1.L 04	EAC	3215	1.I 03	EAC	3215 8	1.N 09	EAC	3972	1.E 09	EAC	4540	1.H 03
DBC	10363	1.I 12	DBC	11380	3.L 04	DBC	11766	3.K 03	EAC	2206	1.J 07	EAC	3215 1	1.N 09	EAC	3215 8	1.N 10	EAC	3972	1.E 10	EAC	4540	1.H 04
DBC	10363	1.I 11	DBC	11380	3.L 05	DBC	11767	3.K 03	EAC	2206	1.J 08	EAC	3215 1	1.N 10	EAC	3215 9	1.K 02	EAC	3972	1.E 14	EAC	4540	1.G 12
DBC	10370	3.E 07	DBC	11380	3.K 12	DBC	12082	3.E 08	EAC	2258	1.E 14	EAC	3215 1	2.J 18	EAC	3263	1.N 06	EAC	3972	1.E 13	EAC	4542	3.I 09
DBC	10371	3.E 07	DBC	11380	3.K 10	DBC	12117	3.H 08	EAC	2258	1.E 13	EAC	3215 1	2.K 02	EAC	3385	3.I 09	EAC	3977	1.G 06	EAC	4542	3.I 10
DBC	10372	3.E 07	DBC	11381	3.L 04	DBC	12118	3.H 07	EAC	2421 3	4.N 02	EAC	3215 1	2.I 05	EAC	3386	3.C 09	EAC	3977	1.G 07	EAC	4557	1.H 03
DBC	10373	3.E 07	DBC	11381	3.K 13	DBC	12142	4.E 02	EAC	2421 3	3.F 08	EAC	3215 1	2.I 06	EAC	3454	1.N 09	EAC	4038	1.G 04	EAC	4557	1.H 04
DBC	10374	3.L 08	DBC	11382	5.E 14	DBC	12143	4.E 02	EAC	2421 3	4.K 07	EAC	3215 10	1.N 13	EAC	3454	1.N 10	EAC	4038	1.H 02	EAC	4557	1.G 12
DBC	10432	3.J 06	DBC	11382	3.K 18	DBC	12196	3.K 16	EAC	2428	1.E 16	EAC	3215 10	1.N 14	EAC	3455	1.G 04	EAC	4038	1.H 05	EAC	4579	1.M 13
DBC	10489	3.I 03	DBC	11382	3.K 14	DBC	12197	3.K 16	EAC	2428	1.E 17	EAC	3215 10	1.N 12	EAC	3630	1.F 13	EAC	4038	1.H 06	EAC	4579	1.M 14
DBC	10491	3.I 03	DBC	11382	3.K 16	DBC	12243	1.L 13	EAC	2456	1.F 05	EAC	3215 12	1.N 09	EAC	3636	1.F 13	EAC	4049	1.F 16	EAC	4579	1.M 15
DBC	10492	3.I 03	DBC	11382	3.K 11	DBC	12273	1.I 14	EAC	2456	1.F 07	EAC	3215 12	1.N 10	EAC	3637	1.F 13	EAC	4049	1.G 02	EAC	4619	1.H 14
DBC	10508	3.I 03	DBC	11383	5.E 14	DBC	12304	3.K 12	EAC	2456	1.F 08	EAC	3215 13	1.M 08	EAC	3639	1.F 13	EAC	4049	1.H 03	EAC	4620	1.H 14
DBC	10536	3.M 02	DBC	11383	3.K 11	DBC	12441	3.L 02	EAC	2456	1.F 06	EAC	3215 15	1.L 02	EAC	3641	1.F 13	EAC	4049	1.H 04	EAC	4644	1.N 09
DBC	10537	3.L 12	DBC	11404	3.K 03	DBC	12442	3.L 02	EAC	2464	1.F 05	EAC	3215 2	1.E 18	EAC	3653	1.G 15	EAC	4056	1.F 05	EAC	4644	1.N 10
DBC	10537	5.E 10	DBC	11404	3.K 08	DBC	12469	3.L 02	EAC	2464	1.F 07	EAC	3215 2	1.I 05	EAC	3671	1.E 16	EAC	4056	1.F 08	EAC	4647	1.G 10

EAC	4650	1.G 12	EAC	5013 14	1.G 17	EAC	5513	1.N 09	EAC	5901	1.M 14	EAC	6268	2.G 03	EAC	6811	1.G 08	EAC	7301	3.C 13	EAC	7642	1.G 11
EAC	4674	1.J 02	EAC	5013 15	1.G 17	EAC	5513	1.N 10	EAC	5901	1.M 15	EAC	6278	1.M 14	EAC	6811	1.G 05	EAC	7301	3.C 18	EAC	7643	1.G 04
EAC	4681	1.H 07	EAC	5013 2	1.G 17	EAC	5536	1.H 02	EAC	5903	1.E 18	EAC	6278	1.M 15	EAC	6813	1.N 13	EAC	7309	1.F 13	EAC	7643	1.G 09
EAC	4681	1.H 09	EAC	5013 3	1.G 17	EAC	5536	1.H 05	EAC	5911	1.J 05	EAC	6305	1.N 15	EAC	6813	1.N 14	EAC	7318	1.F 13	EAC	7643	1.G 11
EAC	4681	1.H 10	EAC	5013 4	1.G 17	EAC	5536	1.H 06	EAC	5939	1.J 07	EAC	6305	1.N 17	EAC	6813	1.N 12	EAC	7329	1.L 04	EAC	7657	2.G 03
EAC	4709	1.G 18	EAC	5013 5	1.G 17	EAC	5536	1.E 12	EAC	5939	1.J 08	EAC	6305	1.N 16	EAC	6827	1.L 09	EAC	7329	1.L 05	EAC	7698	3.C 11
EAC	4714	1.L 08	EAC	5013 6	1.G 17	EAC	5541	1.F 10	EAC	5940	1.J 07	EAC	6314	1.M 15	EAC	6849	1.F 05	EAC	7329	1.L 06	EAC	7730	1.F 08
EAC	4714	1.L 09	EAC	5013 7	1.G 17	EAC	5541	1.F 12	EAC	5940	1.J 08	EAC	6335	1.G 14	EAC	6849	1.F 06	EAC	7329	1.L 07	EAC	7748	1.H 08
EAC	4714	1.H 02	EAC	5013 8	1.G 17	EAC	5557	2.G 07	EAC	5943	1.J 07	EAC	6370	1.L 02	EAC	6850	1.F 07	EAC	7329	1.H 05	EAC	7748	1.H 09
EAC	4714	1.H 03	EAC	5013 9	1.G 17	EAC	5580	1.H 14	EAC	5943	1.J 08	EAC	6382	1.H 07	EAC	6850	1.F 08	EAC	7339	1.N 10	EAC	7748	1.H 10
EAC	4714	1.H 04	EAC	5032	1.G 18	EAC	5580	1.H 15	EAC	5944	1.J 07	EAC	6382	1.H 09	EAC	6878	1.G 10	EAC	7340	1.K 02	EAC	7759	1.H 07
EAC	4750	1.H 02	EAC	5032	1.F 13	EAC	5589	1.L 05	EAC	5944	1.J 08	EAC	6382	1.H 10	EAC	6923 N	2.E 05	EAC	7341	1.L 06	EAC	7759	1.H 09
EAC	4750	1.H 07	EAC	5033	1.L 09	EAC	5604	1.K 02	EAC	5945	1.J 07	EAC	6395	1.E 12	EAC	6926	1.L 04	EAC	7340	1.N 10	EAC	7769	1.E 09
EAC	4800	1.L 05	EAC	5038	1.N 11	EAC	5606	1.L 03	EAC	5945	1.J 08	EAC	6434	1.F 02	EAC	6962	1.L 02	EAC	7353	1.E 14	EAC	7769	1.E 10
EAC	4808	1.E 14	EAC	5040	1.J 07	EAC	5613	1.G 05	EAC	5958	1.J 06	EAC	6434	1.F 03	EAC	6996	1.M 13	EAC	7353	1.E 13	EAC	7786	3.C 13
EAC	4808	1.E 13	EAC	5040	1.J 08	EAC	5615	1.F 08	EAC	5961	1.J 06	EAC	6435	1.F 17	EAC	6996	1.M 15	EAC	7365	1.E 12	EAC	7786	3.C 18
EAC	4820	1.L 04	EAC	5042	1.J 07	EAC	5620	1.L 08	EAC	5998	1.J 18	EAC	6435	1.G 02	EAC	7002	1.E 09	EAC	7391	1.K 04	EAC	7811	3.D 02
EAC	4820	1.L 06	EAC	5042	1.J 08	EAC	5620	1.L 09	EAC	5999	1.J 18	EAC	6435	1.G 03	EAC	7005	1.F 05	EAC	7396	1.K 04	EAC	7811	3.D 04
EAC	4820	1.L 07	EAC	5045	1.J 04	EAC	5622	1.G 09	EAC	6001	1.G 08	EAC	6437	1.F 17	EAC	7005	1.F 08	EAC	7396	1.K 05	EAC	7904	1.L 04
EAC	4834	1.L 04	EAC	5046	1.J 04	EAC	5624	1.G 08	EAC	6010	1.J 18	EAC	6437	1.G 02	EAC	7019	1.N 09	EAC	7398	1.E 12	EAC	7905	1.K 07
EAC	4834	1.L 05	EAC	5063	1.N 14	EAC	5625	2.E 09	EAC	6024	2.G 03	EAC	6437	1.G 03	EAC	7019	1.N 10	EAC	7407	1.F 03	EAC	7905	1.J 07
EAC	4834	1.L 06	EAC	5063	1.N 12	EAC	5645	1.F 13	EAC	6024	2.G 04	EAC	6447	1.N 17	EAC	7033	1.G 13	EAC	7407	1.K 04	EAC	7905	1.J 08
EAC	4834	1.L 07	EAC	5070	1.L 02	EAC	5645 E	1.F 13	EAC	6025	2.G 03	EAC	6523	1.G 15	EAC	7033	1.G 14	EAC	7407	1.K 05	EAC	7917	1.F 05
EAC	4866	1.M 14	EAC	5099	1.E 18	EAC	5653	1.G 05	EAC	6025	2.G 04	EAC	6523	1.F 02	EAC	7067	1.H 13	EAC	7414	1.N 12	EAC	7917	1.F 08
EAC	4867	1.M 14	EAC	5166 1	1.L 02	EAC	5659	1.G 06	EAC	6026	2.G 03	EAC	6523	1.F 03	EAC	7080	1.G 04	EAC	7417	1.J 05	EAC	7922	1.K 02
EAC	4867	1.M 15	EAC	5166 2	1.L 02	EAC	5662	1.J 18	EAC	6026	2.G 04	EAC	6560	1.K 02	EAC	7081	2.I 07	EAC	7418	1.K 04	EAC	7922	1.J 18
EAC	4886	1.F 02	EAC	5192	1.J 05	EAC	5672	1.L 08	EAC	6027	2.G 03	EAC	6567	1.F 12	EAC	7094	1.H 11	EAC	7418	1.K 06	EAC	7925	1.J 18
EAC	4886	1.F 03	EAC	5221	1.E 13	EAC	5672	1.L 09	EAC	6027	2.G 04	EAC	6601	3.C 13	EAC	7104	1.H 11	EAC	7419	1.E 18	EAC	7954	1.H 02
EAC	4886	1.L 10	EAC	5249	2.E 12	EAC	5674	1.E 12	EAC	6063	1.N 14	EAC	6601	3.C 18	EAC	7107	2.I 07	EAC	7428	1.E 14	EAC	7954	1.H 05
EAC	4897	1.J 06	EAC	5249	2.E 02	EAC	5714	1.M 13	EAC	6063	1.N 12	EAC	6606	1.J 04	EAC	7133	3.D 06	EAC	7428	1.E 13	EAC	7954	1.H 06
EAC	4898	1.J 06	EAC	5259	2.G 03	EAC	5721	1.H 02	EAC	6089	2.G 07	EAC	6612	1.J 04	EAC	7133	3.D 02	EAC	7430	1.K 04	EAC	7954	1.G 06
EAC	4902	2.G 03	EAC	5259	2.G 04	EAC	5721	1.H 05	EAC	6100	1.L 09	EAC	6642	3.C 13	EAC	7133	3.D 03	EAC	7430	1.K 05	EAC	7954	1.G 07
EAC	4902	2.G 04	EAC	5261	2.G 03	EAC	5721	1.H 06	EAC	6106	1.N 10	EAC	6642	3.C 18	EAC	7133	3.D 04	EAC	7433	1.E 18	EAC	7954	1.G 08
EAC	4915	1.I 18	EAC	5261	2.G 04	EAC	5721	1.G 06	EAC	6124	1.N 09	EAC	6651	1.N 15	EAC	7133	3.D 05	EAC	7435	1.K 04	EAC	7954	1.G 05
EAC	4927	1.F 03	EAC	5268	2.G 03	EAC	5721	1.G 07	EAC	6124	1.N 10	EAC	6651	1.N 17	EAC	7155	1.K 06	EAC	7435	1.K 05	EAC	7991	1.K 04
EAC	4927	1.K 04	EAC	5271	2.G 03	EAC	5721	1.G 08	EAC	6140	1.N 13	EAC	6651	1.N 16	EAC	7189	1.F 18	EAC	7436	1.E 13	EAC	7991	1.K 06
EAC	4927	1.J 07	EAC	5271	2.G 04	EAC	5721	1.G 05	EAC	6140	1.N 14	EAC	6741	1.G 04	EAC	7189	1.G 03	EAC	7441	1.F 03	EAC	7993	1.N 09
EAC	4927	1.J 08	EAC	5277	1.H 11	EAC	5741	1.H 02	EAC	6142	1.N 13	EAC	6744	1.G 12	EAC	7220	1.N 15	EAC	7443	1.F 03	EAC	7993	1.N 10
EAC	4927	1.K 05	EAC	5277	1.K 08	EAC	5741	1.G 09	EAC	6142	1.N 14	EAC	6766	1.G 10	EAC	7220	1.N 17	EAC	7447	1.K 04	EAC	8009	1.L 04
EAC	4929	1.J 07	EAC	5308	1.H 12	EAC	5749	1.G 09	EAC	6142	1.N 12	EAC	6778	1.E 11	EAC	7220	1.N 16	EAC	7447	1.K 06	EAC	8011	1.L 06
EAC	4929	1.J 08	EAC	5310	2.G 07	EAC	5750	1.G 09	EAC	6156	1.G 04	EAC	6779	1.H 02	EAC	7227	1.G 18	EAC	7487	1.K 04	EAC	8021 18	1.L 04
EAC	4962	1.M 13	EAC	5317	1.G 10	EAC	5751	2.G 03	EAC	6156	1.H 02	EAC	6779	1.H 03	EAC	7236	1.J 06	EAC	7487	1.K 06	EAC	8021 18	1.J 07
EAC	4974	1.E 06	EAC	5338	2.G 07	EAC	5752	2.G 03	EAC	6156	1.H 05	EAC	6779	1.H 04	EAC	7237	1.J 06	EAC	7487	1.K 05	EAC	8021 18	1.J 08
EAC	4974	1.E 10	EAC	5371	2.E 05	EAC	5753	2.G 03	EAC	6156	1.H 06	EAC	6779	1.H 05	EAC	7242	1.N 15	EAC	7488	1.L 09	EAC	8022 19	1.I 03
EAC	4974	1.H 02	EAC	5376	1.E 18	EAC	5838	1.H 07	EAC	6191	1.J 07	EAC	6779	1.H 06	EAC	7242	1.N 17	EAC	7503	1.F 15	EAC	8022 24	1.L 17
EAC	4974	1.H 05	EAC	5378	2.G 07	EAC	5838	1.H 09	EAC	6191	1.J 08	EAC	6779	1.G 10	EAC	7255	1.G 18	EAC	7508	1.J 06	EAC	8022 30	1.L 04
EAC	4974	1.H 06	EAC	5378	2.G 08	EAC	5864	1.L 08	EAC	6215	1.L 03	EAC	6779	1.G 12	EAC	7256	1.G 18	EAC	7544	1.H 07	EAC	8022 30	1.L 05
EAC	4989	1.F 16	EAC	5405	2.G 07	EAC	5864	1.L 09	EAC	6254	1.K 02	EAC	6783	1.G 09	EAC	7256	1.F 13	EAC	7544	1.H 09	EAC	8022 30	1.L 06
EAC	4989	1.G 02	EAC	5405	2.G 08	EAC	5869	1.H 07	EAC	6255	1.K 02	EAC	6783	1.G 12	EAC	7275	1.H 12	EAC	7557	1.K 04	EAC	8022 30	1.L 07
EAC	5004	1.F 02	EAC	5410	1.L 04	EAC	5869	1.H 09	EAC	6260	1.J 18	EAC	6805	1.L 02	EAC	7276	1.H 12	EAC	7557	1.K 06	EAC	8022 30	1.M 08
EAC	5004	1.F 03	EAC	5410	1.L 06	EAC	5875	1.G 18	EAC	6262	1.J 18	EAC	6805	3.D 07	EAC	7277	1.J 04	EAC	7557	1.K 05	EAC	8022 30	1.M 13
EAC	5013 10	1.G 17	EAC	5419	1.E 09	EAC	5895	1.L 09	EAC	6263	1.K 02	EAC	6805	1.J 18	EAC	7291	1.F 05	EAC	7561	1.L 02	EAC	8022 30	1.M 14
EAC	5013 11	1.G 17	EAC	5438	1.J 06	EAC	5896	1.J 07	EAC	6266	1.L 02	EAC	6805	1.F 04	EAC	7291	1.F 07	EAC	7639	1.G 09	EAC	8022 30	1.M 15
EAC	5013 12	1.G 17	EAC	5442	1.N 15	EAC	5896	1.J 08	EAC	6266	1.L 04	EAC	6811	1.G 06	EAC	7291	1.F 08	EAC	7639	1.G 11	EAC	8022 30	1.I 13
EAC	5013 13	1.G 17	EAC	5442	1.N 17	EAC	5901	1.M 13	EAC	6266	1.L 06	EAC	6811	1.G 07	EAC	7291	1.F 08	EAC	7641	1.G 09	EAC	8022 30	1.I 05

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)503001 Up to (V)667828

H01
Fiche 5

NUMERIC INDEX "EAC 802230" TO "EBC 3912"

EAC	8022 30	1.I 04	EAC	8995	1.H 03	EAC	9830	1.G 15	EAC	9825	1.H 02	EBC	1294	1.F 16	EBC	2054	1.H 09	EBC	2755	1.G 16	EBC	3415	1.G 04
EAC	8022 30	1.K 07	EAC	8995	1.H 04	EAC	9855	1.G 06	EAC	9825	1.H 05	EBC	1294	1.G 02	EBC	2064	1.E 15	EBC	2756	1.G 16	EBC	3445	1.H 10
EAC	8022 30	1.J 07	EAC	8995	1.H 12	EAC	9855	1.G 05	EAC	9825	1.H 06	EBC	1310 A	1.F 09	EBC	2084	1.E 13	EBC	2781	1.H 03	EBC	3445	1.K 08
EAC	8022 30	1.J 08	EAC	8999	1.H 02	EAC	9857	1.G 07	EAC	9825	1.K 02	EBC	1310 B	1.F 09	EBC	2091	1.H 08	EBC	2781	1.H 04	EBC	3446	1.L 08
EAC	8022 30	1.I 09	EAC	8999	1.H 03	EAC	9857	1.G 08	EAC	9826	1.L 02	EBC	1310 C	1.F 09	EBC	2091	1.H 10	EBC	2781	1.H 08	EBC	3492	2.E 08
EAC	8106	2.F 09	EAC	8999	1.H 04	EAC	9859 N	2.E 05	EAC	9826	1.L 04	EBC	1310 D	1.F 09	EBC	2092	1.H 08	EBC	2781	1.H 09	EBC	3498	1.E 14
EAC	8111	1.H 11	EAC	8999	1.N 13	EAC	9875	1.H 12	EAC	9826	1.L 06	EBC	1310 E	1.F 09	EBC	2092	1.H 10	EBC	2781	1.H 10	EBC	3498	1.E 13
EAC	8116	1.L 02	EAC	8999	1.N 14	EAC	9879	1.G 03	EAC	9826	1.L 07	EBC	1310 F	1.F 09	EBC	2107	1.L 04	EBC	2788	1.H 14	EBC	3519	1.F 15
EAC	8124	2.E 09	EAC	8999	1.N 12	EAC	9880	1.G 03	EAC	9826	1.H 02	EBC	1310 G	1.F 09	EBC	2107	1.L 06	EBC	2788	1.H 15	EBC	3531	1.G 18
EAC	8126	2.E 08	EAC	9044	2.G 07	EAC	9889	1.M 13	EAC	9826	1.H 03	EBC	1310 H	1.F 09	EBC	2108	1.L 04	EBC	2802	1.N 10	EBC	3531	1.F 13
EAC	8130	1.L 08	EAC	9044	2.G 08	EAC	9890	1.M 15	EAC	9826	1.H 04	EBC	1310 I	1.F 09	EBC	2108	1.L 06	EBC	2820	1.L 08	EBC	3531	1.H 02
EAC	8130	1.L 09	EAC	9083	1.H 11	EAC	9891	3.D 06	EAC	9826	1.H 05	EBC	1321 20	1.F 10	EBC	2164 N	2.E 02	EBC	2856	2.G 02	EBC	3531	1.H 03
EAC	8151	1.L 10	EAC	9149	1.H 07	EAC	9891	3.D 03	EAC	9826	1.H 06	EBC	1321 S	1.F 10	EBC	2165 E	2.E 07	EBC	2882	1.L 08	EBC	3531	1.H 04
EAC	8161	1.L 10	EAC	9162	2.G 04	EAC	9891	3.D 05	EAC	9855	2.G 03	EBC	1323 20	1.F 10	EBC	2165 N	2.E 07	EBC	2907	1.G 16	EBC	3539	1.H 11
EAC	8162	1.L 10	EAC	9164	2.G 04	EAC	9703	3.C 14	EAC	9855	2.G 04	EBC	1323 S	1.F 10	EBC	2195 E	2.E 02	EBC	2908	1.G 16	EBC	3539	1.H 12
EAC	8164	1.L 10	EAC	9187	2.E 06	EAC	9703	3.C 16	EAC	9895	2.G 06	EBC	1411	1.G 09	EBC	2195 N	2.E 02	EBC	2911 E	2.E 02	EBC	3540	1.H 12
EAC	8166	1.L 10	EAC	9213	1.N 15	EAC	9704	3.D 02	EAC	9905	2.E 09	EBC	1411	1.G 11	EBC	2196 E	2.E 07	EBC	2911 N	2.E 02	EBC	3541	2.E 03
EAC	8167	1.L 10	EAC	9213	1.N 17	EAC	9704	3.D 04	EAC	9911 A	1.F 09	EBC	1433	1.F 09	EBC	2196 N	2.E 07	EBC	2912 N	2.E 07	EBC	3541 E	2.E 03
EAC	8168	2.E 09	EAC	9213	1.N 16	EAC	9705	2.G 02	EAC	9911 B	1.F 09	EBC	1436	1.H 03	EBC	2197	1.G 16	EBC	2925	1.G 02	EBC	3554 20	1.F 11
EAC	8186	1.N 09	EAC	9218	1.G 16	EAC	9717	3.C 12	EAC	9911 C	1.F 09	EBC	1436	1.H 04	EBC	2225	1.F 06	EBC	2926	1.F 16	EBC	3554 S	1.F 11
EAC	8195	2.F 16	EAC	9218	1.G 03	EAC	9717	3.C 15	EAC	9911 D	1.F 09	EBC	1436	1.K 06	EBC	2230	1.J 04	EBC	2926	1.G 02	EBC	3570	1.H 12
EAC	8195 E	2.F 16	EAC	9276	1.E 14	EAC	9717	3.C 17	EAC	9911 E	1.F 09	EBC	1441	1.F 07	EBC	2257	2.E 05	EBC	2940	1.L 06	EBC	3572	1.H 12
EAC	8209	1.N 13	EAC	9276	1.E 13	EAC	9718	3.D 06	EAC	9911 I	1.F 09	EBC	1442	1.F 07	EBC	2263	2.E 02	EBC	2946	1.G 16	EBC	3597	1.H 12
EAC	8209	1.N 14	EAC	9286	1.L 17	EAC	9718	3.D 03	EAC	9946	2.G 04	EBC	1442	1.F 06	EBC	2282 N	2.E 02	EBC	2964	1.L 04	EBC	3598	1.H 12
EAC	8209	1.N 12	EAC	9333	1.L 10	EAC	9718	3.D 05	EAC	9947	2.G 04	EBC	1465	2.E 03	EBC	2344	1.L 04	EBC	2964	1.L 05	EBC	3599	1.H 12
EAC	8274	1.F 05	EAC	9335	1.L 10	EAC	9719	3.D 06	EAC	9961	1.H 14	EBC	1481	1.K 03	EBC	2344	1.L 06	EBC	2964	1.L 06	EBC	3601	1.H 12
EAC	8307	1.K 02	EAC	9342	1.L 10	EAC	9719	3.D 03	EAC	9985	2.F 18	EBC	1550	1.F 15	EBC	2351	1.H 07	EBC	2964	1.L 07	EBC	3621	1.N 13
EAC	8344	1.J 04	EAC	9366	3.D 02	EAC	9719	3.D 05	EAC	9997	4.G 18	EBC	1550	1.H 02	EBC	2351	1.H 09	EBC	2997	1.G 18	EBC	3621	1.N 14
EAC	8347	1.N 09	EAC	9366	3.D 04	EAC	9745	1.H 02	EAC	2421 3	5.F 08	EBC	1551	1.F 18	EBC	2369	1.L 07	EBC	2997	1.F 13	EBC	3621	1.N 12
EAC	8347	1.N 10	EAC	9367	1.N 06	EAC	9745	1.H 05	EBC	1052	3.I 10	EBC	1551	1.G 03	EBC	2372	1.L 07	EBC	2998	1.G 18	EBC	3635	2.E 09
EAC	8367	1.G 04	EAC	9398	1.G 15	EAC	9745	1.H 08	EBC	1057	1.H 07	EBC	1620	1.F 11	EBC	2378	2.E 08	EBC	2998	1.F 13	EBC	3667 E	2.F 17
EAC	8418	1.G 18	EAC	9399	1.E 18	EAC	9745	1.N 09	EBC	1057	1.H 08	EBC	1632	3.I 07	EBC	2493	1.L 10	EBC	3057	1.F 03	EBC	3667 N	2.F 17
EAC	8460	1.L 02	EAC	9434	2.E 07	EAC	9745	1.N 10	EBC	1057	1.H 09	EBC	1647	1.H 13	EBC	2568	1.F 17	EBC	3058	1.K 05	EBC	3679	1.M 14
EAC	8543 20	1.F 10	EAC	9435	2.E 07	EAC	9754	1.H 11	EBC	1057	1.H 10	EBC	1767	1.H 02	EBC	2568	1.G 02	EBC	3067	1.N 15	EBC	3705	1 F 07
EAC	8543 S	1.F 10	EAC	9440	1.K 02	EAC	9798	1.H 14	EBC	1058	1.H 07	EBC	1767	1.H 05	EBC	2568	1.G 03	EBC	3067	1.N 17	EBC	3707	1.N 09
EAC	8545 20	1.F 10	EAC	9476	2.F 09	EAC	9799	1.H 14	EBC	1058	1.H 08	EBC	1767	1.H 06	EBC	2568	1.H 03	EBC	3067	1.N 16	EBC	3707	1.N 10
EAC	8545 S	1.F 10	EAC	9503	3.C 12	EAC	9809	2.G 06	EBC	1058	1.H 09	EBC	1767	1.K 03	EBC	2568	1.H 04	EBC	3109	1.J 05	EBC	3756	1.F 11
EAC	8567	1.L 10	EAC	9503	3.C 15	EAC	9811	1.N 12	EBC	1058	1.H 10	EBC	1771	1.F 18	EBC	2606	1.M 14	EBC	3114	2.G 02	EBC	3764	1.K 08
EAC	8585	2.F 18	EAC	9503	3.C 17	EAC	9816	2.G 04	EBC	1147	1.F 08	EBC	1771	1.G 03	EBC	2606	1.M 15	EBC	3115	2.G 02	EBC	3810	2.G 13
EAC	8744 20	1.F 11	EAC	9508	1.G 12	EAC	9822	1.L 04	EBC	1147 E	1.F 08	EBC	1782	1.F 13	EBC	2607	1.M 13	EBC	3131	1.N 15	EBC	3823	1.E 12
EAC	8744 S	1.F 11	EAC	9510	3.I 10	EAC	9822	1.L 06	EBC	1148	1.F 05	EBC	1782	1.F 17	EBC	2626	2.E 09	EBC	3131	1.N 17	EBC	3829	2.G 17
EAC	8746 20	1.F 11	EAC	9552	1.L 02	EAC	9822	1.L 07	EBC	1148	1.F 06	EBC	1782	1.G 02	EBC	2635	1.H 07	EBC	3131	1.N 16	EBC	3829	2.G 14
EAC	8765	2.F 09	EAC	9586	2.G 04	EAC	9822	1.H 02	EBC	1148 E	1.F 05	EBC	1782	1.G 03	EBC	2635	1.H 08	EBC	3256	1.F 11	EBC	3830	2.G 17
EAC	8776	1.L 10	EAC	9587	1.N 11	EAC	9822	1.H 05	EBC	1148 E	1.F 06	EBC	1789	1.K 02	EBC	2635	1.H 09	EBC	3274	2.E 09	EBC	3830	2.G 14
EAC	8809	1.J 05	EAC	9588	1.N 11	EAC	9822	1.H 06	EBC	1176 N	2.E 05	EBC	1832	2.F 18	EBC	2635	1.H 10	EBC	3278	2.E 11	EBC	3882	1.K 08
EAC	8810	1.J 05	EAC	9807	1.G 12	EAC	9823	1.H 02	EBC	1178	2.E 04	EBC	1868	1.K 06	EBC	2675	1.K 02	EBC	3283 E	2.F 16	EBC	3888	1.F 18
EAC	8811	1.J 05	EAC	9813 E	2.E 02	EAC	9823	1.H 05	EBC	1223	1.G 04	EBC	1880	1.F 07	EBC	2731	1.H 02	EBC	3283 N	2.F 16	EBC	3889	1.F 18
EAC	8848	1.N 08	EAC	9813 E	2.E 03	EAC	9823	1.H 06	EBC	1224	1.L 10	EBC	1905	1.M 14	EBC	2731	1.H 05	EBC	3309	2.E 11	EBC	3890	1.F 18
EAC	8850	1.J 05	EAC	9813 N	2.E 02	EAC	9823	1.H 07	EBC	1233	1.K 06	EBC	1908	1.H 14	EBC	2731	1.H 06	EBC	3310	2.E 11	EBC	3892	1.E 14
EAC	8851	1.J 05	EAC	9813 N	2.E 03	EAC	9823	1.H 09	EBC	1252	1.G 06	EBC	1908	1.H 15	EBC	2731	1.H 08	EBC	3316	1.H 12	EBC	3894	1.J 05
EAC	8858	1.E 14	EAC	9825	3.C 14	EAC	9824	1.H 02	EBC	1252	1.G 05	EBC	1937 E	2.F 16	EBC	2731	1.H 10	EBC	3375	1.L 02	EBC	3901	2.E 08
EAC	8858	1.E 13	EAC	9825	3.C 16	EAC	9824	1.H 05	EBC	1253	1.G 07	EBC	1939	1.H 14	EBC	2731	1.K 08	EBC	3396	1.G 04	EBC	3907	2.E 09
EAC	8894	1.H 05	EAC	9826	3.C 14	EAC	9824	1.H 06	EBC	1253	1.G 06	EBC	1939	1.H 15	EBC	2735	1.H 07	EBC	3398	1.G 11	EBC	3908	2.E 09
EAC	8894	1.H 04	EAC	9826	3.C 16	EAC	9824	1.N 09	EBC	1288 20	1.F 11	EBC	1981	1.E 14	EBC	2735	1.H 09	EBC	3412	1.G 04	EBC	3911	2.E 09
EAC	8894	1.H 12	EAC	9829	1.G 15	EAC	9824	1.N 10	EBC	1288 S	1.F 11	EBC	2051	1.H 13	EBC	2737	1.K 08	EBC	3412	1.G 11	EBC	3912	2.E 09

EBC	3912	2.E 09	EBC	4663 N	2.F 17	EBC	8614	1.F 16	EBC	9416	1.M 06	EBC	10345	1.N 14	FB	108061 J	1.G 06	FB	108141 J	2.C 02	FN	108041 J	2.C 02
EBC	3930	1.K 06	EBC	4664	1.K 06	EBC	8642	1.L 16	EBC	9481 1	1.M 10	EBC	10345	1.N 12	FB	108061 J	1.G 07	FB	108141 J	2.C 05	FN	108041 J	2.C 03
EBC	3936	1.E 14	EBC	4676	1.M 10	EBC	8643	1.L 16	EBC	9627	1.G 15	EBC	10394	1.M 03	FB	108061 J	1.G 08	FB	108141 J	2.C 03	FN	108041 J	2.C 07
EBC	3962	1.E 09	EBC	4677	1.M 10	EBC	8663	1.L 16	EBC	9627	1.H 02	EBC	10430	1.E 14	FB	108061 J	1.G 05	FB	108141 J	2.C 07	FN	108041 J	2.C 11
EBC	3962	1.E 10	EBC	4678	1.M 10	EBC	8697	1.F 07	EBC	9634	1.H 02	EBC	10432	1.E 14	FB	108061 J	3.D 02	FB	108141 J	2.C 08	FN	108041 J	2.C 09
EBC	3964	1.L 04	EBC	4679	1.M 10	EBC	8836	1.M 10	EBC	9634	1.N 09	EBC	10433	1.E 14	FB	108061 J	3.D 03	FB	108141 J	2.C 11	FN	108041 J	2.K 03
EBC	3964	1.L 05	EBC	4681	1.M 10	EBC	9040	2.G 12	EBC	9658	1.E 16	EBC	10435	1.E 14	FB	108061 J	3.D 04	FB	108141 J	2.C 09	FN	108041 J	1.N 04
EBC	3964	1.L 06	EBC	4685	2.C 15	EBC	9040	2.G 18	EBC	9658	1.E 17	EBC	10890	1.F 16	FB	108061 J	3.D 05	FB	108141 J	2.C 06	FN	108041 J	1.N 05
EBC	3964	1.L 07	EBC	4685	2.C 17	EBC	9040	2.G 15	EBC	9678	2.C 11	EBC	10968	2.C 15	FB	108061 J	3.C 13	FB	108181 J	1.G 06	FN	108041 J	3.I 03
EBC	3964	1.H 02	EBC	4691 20	1.F 11	EBC	9040	2.G 16	EBC	9678	2.C 06	EBC	10969	2.C 15	FB	108061 J	3.C 18	FB	108181 J	1.G 07	FN	108041 J	1.L 11
EBC	3964	1.H 06	EBC	4691 S	1.F 11	EBC	9040	2.G 13	EBC	9695	1.L 10	EBC	11305 E	2.F 17	FB	108061 J	3.C 14	FB	108181 J	1.G 08	FN	108041	3.K 09
EBC	3966	2.G 17	EBC	4769 E	2.E 03	EBC	9040	2.G 11	EBC	9705	1.G 15	EBC	11305 N	2.F 17	FB	108061 J	3.C 16	FB	108181 J	1.J 06	FN	108041 J	1.M 16
EBC	3966	2.G 14	EBC	4769 N	2.E 03	EBC	9044	1.E 09	EBC	9705	1.E 09	EBC	11327	1.F 17	FB	108061 J	3.C 15	FB	108181 J	1.G 05	FN	108041 J	2.M 13
EBC	4024	1.J 05	EBC	4770	2.E 07	EBC	9044	1.E 10	EBC	9705	1.E 10	EBC	11327	1.G 02	FB	108061 J	3.C 17	FB	108201 J	1.N 13	FN	108041 J	1.G 15
EBC	4034	2.E 09	EBC	4770	2.E 08	EBC	9044	1.E 14	EBC	9705	1.F 17	EBC	11334	1.G 11	FB	108061 J	3.I 09	FB	108201 J	1.N 14	FN	108041 J	1.H 08
EBC	4124	1.E 17	EBC	4871	1.G 18	EBC	9044	1.E 13	EBC	9705	1.G 02	EBC	11336	1.G 10	FB	108071 J	1.F 15	FB	110071 J	3.D 06	FN	108041 J	1.H 10
EBC	4132	2.F 18	EBC	4881	2.C 03	EBC	9101	2.C 14	EBC	9705	1.G 03	EBC	11360 10	1.G 17	FB	108071 J	1.F 18	FB	110071 J	3.C 12	FN	108041 J	1.E 17
EBC	4133 20	1.F 11	EBC	4881	2.C 07	EBC	9101	2.C 16	EBC	9705	1.E 12	EBC	11360 11	1.G 17	FB	108071 J	1.G 03	FB	110071 J	3.I 07	FN	108041 J	1.N 06
EBC	4133 S	1.F 11	EBC	4881	2.C 09	EBC	9101	2.C 15	EBC	9705	1.G 06	EBC	11360 12	1.G 17	FB	108071 J	1.G 08	FB	110071 J	3.D 03	FN	108041 J	1.I 14
EBC	4138	1.K 06	EBC	4890	1.L 05	EBC	9101	2.C 17	EBC	9705	1.G 07	EBC	11360 13	1.G 17	FB	108071 J	1.G 11	FB	110071 J	3.D 05	FN	108041 J	1.I 16
EBC	4175	1.L 10	EBC	4892	1.L 05	EBC	9101	2.C 18	EBC	9705	1.G 08	EBC	11360 14	1.G 17	FB	108071 J	1.G 05	FB	110071 J	3.C 14	FN	108041 J	3.M 03
EBC	4198	1.F 17	EBC	4895	2.E 09	EBC	9101	2.C 12	EBC	9705	1.G 05	EBC	11360 15	1.G 17	FB	108071 J	3.C 13	FB	110071 J	3.C 16	FN	108041 J	3.M 04
EBC	4198	1.G 03	EBC	4896	2.E 09	EBC	9104	2.G 13	EBC	9811	1.M 02	EBC	11360 2	1.G 17	FB	108071 J	3.C 18	FB	110071 J	3.C 15	FN	108041 J	3.M 05
EBC	4213	2.C 14	EBC	4953	1.H 07	EBC	9105	2.G 13	EBC	9811	1.M 03	EBC	11360 3	1.G 17	FB	108071 J	3.I 10	FB	110071 J	3.C 17	FN	108041 J	2.G 07
EBC	4213	2.C 16	EBC	4953	1.H 08	EBC	9108	2.G 16	EBC	9812	1.M 02	EBC	11360 4	1.G 17	FB	108061 J	3.C 12	FB	110061 J	3.D 06	FN	108041 J	2.G 08
EBC	4213	2.C 15	EBC	4953	1.H 09	EBC	9108	2.G 16	EBC	9812	1.M 03	EBC	11360 5	1.G 17	FB	108061 J	1.J 06	FB	110061 J	3.D 03	FN	108041 J	4.K 12
EBC	4213	2.C 17	EBC	4953	1.H 10	EBC	9213	1.F 18	EBC	9813	1.L 16	EBC	11360 6	1.G 17	FB	108061 J	3.C 15	FB	110061 J	3.D 05	FN	108041 J	4.K 14
EBC	4213	2.C 18	EBC	4954	1.H 07	EBC	9213	1.G 03	EBC	9959	1.K 06	EBC	11360 7	1.G 17	FB	108061 J	3.C 17	FB	110091 J	3.D 02	FN	108041 J	3.I 03
EBC	4213	2.C 12	EBC	4954	1.H 08	EBC	9213	1.H 03	EBC	10041	2.C 11	EBC	11360 8	1.G 17	FB	108091 J	1.F 05	FB	110091 J	3.D 04	FN	108041 J	2.G 05
EBC	4244	1.E 17	EBC	4954	1.H 09	EBC	9220	1.N 16	EBC	10041	2.C 06	EBC	11360 9	1.G 17	FB	108091 J	1.F 08	FB	110121 J	2.G 07	FN	108041 J	2.G 06
EBC	4263	2.G 18	EBC	4954	1.H 10	EBC	9237	1.K 06	EBC	10076	2.C 15	EBC	11365	1.M 10	FB	108091 J	1.H 07	FB	110125 J	2.F 17	FN	108041 J	2.I 08
EBC	4263	2.G 16	EBC	5017	1.G 07	EBC	9257 1	2.C 02	EBC	10076	2.C 17	EBC	11386	1.G 04	FB	108091 J	1.G 10	FB	110165 J	2.F 17	FN	108041 J	2.I 09
EBC	4282	1.F 16	EBC	5020	2.C 15	EBC	9257 1	2.C 05	EBC	10077	2.C 15	EBC	11480	1.J 04	FB	108091 J	3.I 10	FB	110171 J	3.I 07	FN	108041 J	3.I 09
EBC	4314	1.M 06	EBC	5021	2.C 15	EBC	9257 1	2.C 04	EBC	10077	2.C 17	EBC	11571	1.E 12	FB	108101 J	1.F 17	FB	110171 J	2.G 07	FNA	1114BB	5.C 10
EBC	4321	1.M 06	EBC	5140	1.H 10	EBC	9257 1	2.C 07	EBC	10094 1	1.M 11	EBC	11580	1.M 05	FB	108101 J	1.G 02	FB	110201 J	2.F 17	FNA	1114BC	5.C 10
EBC	4322	1.K 06	EBC	5140	1.K 06	EBC	9257 1	2.C 08	EBC	10095 1	1.M 11	FAM	8906 J	2.M 05	FB	108101 J	1.G 03	FG	105 X	1.H 11	FRC	7418 J	2.G 03
EBC	4355	1.L 16	EBC	5150 1	1.M 10	EBC	9257 1	2.C 13	EBC	10123	1.M 10	FAM	8906 J	2.M 04	FB	108101 J	1.E 12	FG	106 X	3.C 13	FRC	7418 J	2.G 04
EBC	4356	1.L 16	EBC	5151 1	1.M 10	EBC	9257 1	2.C 16	EBC	10124	1.M 10	FB	105101 J	1.M 08	FB	108101 J	1.G 09	FG	108 X	3.C 18	FS	105101 J	4.N 04
EBC	4409	2.E 03	EBC	5185	1.K 08	EBC	9257 1	2.C 15	EBC	10152	1.M 04	FB	106061 J	1.M 02	FB	108101 J	1.G 06	FJA	2579AA	5.C 11	FS	105101 J	3.D 14
EBC	4409 E	2.E 03	EBC	8110	1.F 15	EBC	9257 1	2.C 17	EBC	10152	1.I 05	FB	106061 J	1.M 03	FB	108101 J	1.G 11	FN	104045 J	4.N 13	FS	105101 J	3.I 08
EBC	4410	2.E 06	EBC	8168	1.E 17	EBC	9257 1	2.C 11	EBC	10152	1.I 04	FB	106071 MJ	1.L 02	FB	108101 J	1.G 05	FN	105041	4.K 09	FS	105101 J	3.I 09
EBC	4437	1.N 15	EBC	8409	2.E 09	EBC	9257 1	2.C 10	EBC	10152	1.I 03	FB	106071 PJ	1.L 02	FB	108111 J	1.G 07	FN	105041 J	5.C 12	FS	105121	4.N 03
EBC	4437	1.N 17	EBC	8427	1.E 14	EBC	9257 1	2.C 06	EBC	10199	1.H 02	FB	106081 J	1.K 06	FB	108111 J	1.G 08	FN	105041 J	4.K 06	FS	105121 J	3.I 02
EBC	4437	1.N 16	EBC	8445	1.L 06	EBC	9257 1	2.C 18	EBC	10199	1.H 11	FB	106082 J	1.H 10	FB	108111 J	1.J 06	FN	105041 J	4.K 11	FS	105121 J	4.K 09
EBC	4469	1.L 16	EBC	8446 1	1.M 10	EBC	9257 1	2.C 12	EBC	10237	1.M 06	FB	108121 J	1.K 02	FB	108121 J	1.E 12	FN	105041 J	4.K 13	FS	105121 J	4.K 11
EBC	4469	1.M 14	EBC	8447 1	1.M 10	EBC	9388	1.H 02	EBC	10256	1.F 18	FB	108121 J	1.N 09	FB	108121 J	1.E 14	FN	105045 J	3.I 02	FS	105121 J	4.K 13
EBC	4469	2.C 14	EBC	8550	1.N 15	EBC	9388	1.H 04	EBC	10256	1.G 09	FB	108121 J	1.N 10	FB	108121 J	1.E 13	FN	105045 J	4.N 13	FS	105121 J	3.I 03
EBC	4469	2.C 16	EBC	8550	1.N 17	EBC	9388	2.C 02	EBC	10325	1.N 09	FB	108131 J	1.K 03	FB	108131 J	1.E 11	FN	105045 J	4.N 16	FS	108101	2.M 07
EBC	4469	2.C 15	EBC	8550	1.N 16	EBC	9388	2.C 05	EBC	10325	1.N 10	FB	108061 J	3.D 06	FB	108131 J	1.G 06	FN	105045 J	5.C 12	FS	108101 J	1.L 16
EBC	4469	2.C 17	EBC	8552	1.N 15	EBC	9388	2.C 03	EBC	10342	1.N 09	FB	108061 J	3.C 12	FB	108131 J	1.G 07	FN	105045 J	4.K 06	FS	108101 J	1.M 14
EBC	4469	2.C 18	EBC	8552	1.N 17	EBC	9388	2.C 07	EBC	10342	1.N 10	FB	108061 J	1.H 06	FB	108131 J	1.G 08	FN	105045 J	4.K 11	FS	108101 J	2.M 07
EBC	4469	2.C 12	EBC	8552	1.N 16	EBC	9388	2.C 08	EBC	10343	1.N 13	FB	108061 J	1.H 09	FB	108131 J	1.G 05	FN	105045 J	4.K 13	FS	108101 J	1.K 04
EBC	4614	1.N 06	EBC	8594	1.E 09	EBC	9388	2.C 11	EBC	10343	1.N 14	FB	108061 J	1.H 10	FB	108141 J	1.E 17	FN	105045 J	3.I 03	FS	108101 J	1.J 04
EBC	4614	1.N 10	EBC	8594	1.E 10	EBC	9388	2.C 09	EBC	10343	1.N 12	FB	108061 J	1.E 12	FB	108141 J	1.G 09	FN	108041 J	1.L 16	FS	108101 J	2.C 11
EBC	4663 E	2.F 17	EBC	8597	1.M 10	EBC	9388	2.C 06	EBC	10345	1.N 13	FB	108061 J	1.G 10	FB	108141 J	1.G 12	FN	108041 J	4.N 12	FS	108101 J	2.C 08

FS 108101 J 2.E 04
FS 108101 J 2.J 16
FS 108101 J 2.K 03
FS 108101 J 1.K 05
FS 108121 J 1.M 13
FS 108121 J 1.F 02
FS 108121 J 1.F 03
FS 108121 J 1.K 07
FS 108121 J 2.C 02
FS 108121 J 2.C 05
FS 108121 J 2.C 04
FS 108121 J 2.C 10
FS 108121 J 4.I 16
FS 108121 J 1.N 09
FS 108121 J 1.M 05
FS 108121 J 2.G 05
FS 108121 J 2.G 06
FS 108141 J 1.L 09
FS 108141 J 1.M 14
FS 108141 J 1.M 15
FS 108141 J 1.L 10
FS 108141 J 1.K 02
FS 108141 J 1.J 18
FS 108141 J 1.J 03
FS 108161 J 1.L 15
FS 108161 J 1.L 10
FS 108161 J 1.H 08
FS 108161 J 1.H 10
FS 108161 J 1.E 15
FS 108161 J 1.G 06
FS 108161 J 1.G 07
FS 108161 J 1.G 09
FS 108161 J 2.C 11
FS 108161 J 2.C 06
FS 108161 J 3.L 09
FS 108161 J 2.I 05
FS 108161 J 1.E 13
FS 108161 J 1.G 05
FS 108161 J 1.N 03
FS 108165 J 2.E 11
FS 108165 P 1.L 15
FS 108165 P 1.L 10
FS 108165 P 1.H 08
FS 108165 P 1.H 10
FS 108165 P 1.E 15
FS 108165 P 1.G 06
FS 108165 P 1.G 07
FS 108165 P 1.G 08
FS 108165 P 2.C 11
FS 108165 P 2.C 06
FS 108165 P 3.L 08
FS 108165 P 2.I 05
FS 108165 P 1.E 13
FS 108165 P 2.E 11
FS 108165 P 1.G 05

FS 108165 P 1.N 03
FS 108201 4.K 05
FS 108201 J 1.L 10
FS 108201 J 1.H 07
FS 108201 J 1.H 09
FS 108201 J 1.H 10
FS 108201 J 1.E 12
FS 108201 J 1.G 06
FS 108201 J 1.N 12
FS 108201 J 1.J 02
FS 108201 J 4.K 08
FS 108201 J 3.E 04
FS 108201 J 1.K 06
FS 108201 J 2.J 10
FS 108201 J 2.J 12
FS 108251 J 4.N 02
FS 108251 J 2.M 07
FS 108251 J 3.E 05
FS 108121 J 1.I 13
FS 108121 J 1.I 14
FS 108121 J 1.I 16
FS 108121 J 2.C 14
FS 108121 J 2.C 16
FS 108121 J 2.C 15
FS 108121 J 2.C 17
FS 108121 J 2.C 18
FS 108121 J 2.C 12
FS 108121 J 3.I 03
FS 108121 J 3.C 13
FS 108121 J 3.C 18
FS 108141 J 3.I 02
FS 108141 J 1.E 16
FS 108141 J 1.N 10
FS 108161 J 1.L 04
FS 108161 J 1.H 11
FS 108161 J 1.E 14
FS 108161 J 1.G 11
FS 108161 J 2.C 12
FS 108161 J 4.K 02
FS 108161 J 2.J 08
FS 108161 J 1.N 09
FS 108161 J 1.E 13
FS 108161 J 3.I 03
FS 108201 J 1.E 09
FS 108201 J 1.E 10
FS 108201 J 1.E 05
FS 108201 J 1.E 18
FS 108201 J 1.E 12
FS 108201 J 1.G 10
FS 108201 J 1.G 09
FS 108201 J 1.G 07
FS 108201 J 1.N 13
FS 108201 J 1.N 14
FS 108201 J 1.N 12
FS 108201 J 1.K 04

FS 108201 J 1.J 08
FS 108201 J 4.G 12
FS 108201 J 2.M 14
FS 108201 J 2.M 16
FS 108201 J 1.K 05
FS 108201 J 2.I 08
FS 108201 J 2.I 09
FS 108201 J 3.C 13
FS 108201 J 3.C 18
FS 108201 M 2.G 17
FS 108201 MJ 2.H 02
FS 108201 MJ 2.G 14
FS 108251 J 1.L 04
FS 108251 J 1.L 05
FS 108251 J 1.L 06
FS 108251 J 1.L 07
FS 108251 J 1.F 17
FS 108251 J 1.G 02
FS 108251 J 1.G 03
FS 108251 J 1.F 02
FS 108251 J 1.F 03
FS 108251 J 1.E 14
FS 108251 J 1.G 12
FS 108251 J 1.G 11
FS 108251 J 2.F 18
FS 108251 J 2.G 02
FS 108251 J 1.N 09
FS 108251 J 1.N 10
FS 108251 J 1.E 13
FS 108251 J 3.C 13
FS 108251 J 3.C 18
FS 108251 J 3.I 09
FS 108251 J 3.I 10
FS 108301 1.E 05
FS 108301 J 1.E 09
FS 108301 J 1.E 10
FS 108301 J 1.G 12
FS 108301 J 1.N 15
FS 108301 J 1.N 17
FS 108301 J 1.N 16
FS 108301 J 1.J 08
FS 110201 MJ 2.J 17
FS 110251 3.D 14
FS 110251 J 1.E 04
FS 110251 J 2.I 07
FS 110251 J 1.H 13
FS 110251 J 3.C 13
FS 110251 J 3.C 18
FS 110901 J 2.G 07
FS 110901 J 3.C 13
FS 110901 J 3.C 18
FS 110351 J 3.C 13
FS 110351 J 3.C 18
FT 108351 4.K 07

FW 104 T 4.N 15
FW 104 T 4.N 03
FW 104 T 2.C 08
FW 104 T 2.E 15
FW 104 T 2.E 12
FW 104 T 5.E 06
FW 104 T 2.G 05
FW 104 T 2.G 06
FW 104 TJ 2.C 02
FW 104 TJ 2.C 05
FW 104 TJ 2.C 04
FW 104 TJ 2.C 07
FW 104 TJ 2.C 13
FW 104 TJ 2.C 16
FW 104 TJ 2.C 15
FW 104 TJ 2.C 17
FW 104 TJ 2.C 10
FW 104 TJ 2.C 08
FW 104 TJ 2.C 18
FW 105 E 2.M 08
FW 105 E 1.I 13
FW 105 E 1.I 14
FW 105 E 4.I 07
FW 105 E 2.I 10
FW 105 E 2.L 03
FW 105 E 2.G 07
FW 105 E 3.E 05
FW 105 E 2.J 14
FW 105 E 2.J 15
FW 105 E 1.I 09
FW 105 E 2.M 15
FW 105 E 2.M 16
FW 105 EJ 5.C 04
FW 105 EJ 2.M 14
FW 105 T 2.C 02
FW 105 T 2.C 05
FW 105 T 2.C 08
FW 105 T 2.I 08
FW 105 T 2.I 09
FW 105 TJ 2.C 03
FW 105 TJ 2.C 07
FW 105 TJ 2.C 11
FW 105 TJ 2.C 09
FW 105 TJ 2.C 06
FW 106 TJ 2.C 02
FW 106 TJ 2.C 05
FW 106 TJ 2.C 03
FW 106 TJ 2.C 07
FW 106 TJ 2.C 09
FW 206 2J 2.C 11
FW 206 J 2.C 06
FW 206 T 2.C 15
FW 206 TJ 2.C 13

FW 206 TJ 2.C 16
FW 206 TJ 2.C 17
FW 206 TJ 2.C 18
FW 206 TJ 2.C 12
FX 106041 J 2.C 11
FX 106041 J 2.C 06
FX 106041 J 1.F 04
FX 112041 J 1.E 05
FX 118041 J 1.E 05
GG 106161 J 1.L 15
GG 106201 J 4.L 15
GG 106201 J 4.K 04
GHF 3512AA 4.N 03
GL 106141 J 1.L 11
GL 106141 J 1.L 12
GL 106181 J 5.C 13
GL 106181 J 2.M 07
GL 106301 5.C 04
GL 106351 J 1.N 08
GL 106401 J 2.M 09
GL 106401 J 2.M 11
GL 106201 J 5.C 04
GL 106251 J 2.M 06
GL 106251 J 4.I 06
GL 106251 J 3.L 09
GL 106251 J 3.M 03
GL 106251 J 3.M 05
GL 106251 PJ 2.J 14
GL 106251 PJ 2.J 15
GL 106301 J 2.G 12
GL 106301 J 2.H 02
GL 106301 J 2.G 15
GL 106301 J 2.G 11
GL 106301 P 2.J 17
GL 109251 J 2.M 08
GMB1100AA 4.N 14
GMB1100AA 4.N 16
GMB1101AA 4.N 14
GMB1101AA 4.N 16
GMB1152AA 4.N 14
GMB1152AA 4.N 17
GMB1720AB 4.N 06
GMB1721AB 4.N 06
GMB2540AA 4.N 11
GMB2540AB 4.N 11
GMB2541AA 4.N 11
GMB2541AB 4.N 11
GMB2542AA 4.N 11
GMB2542AB 4.N 11
GMB2543AA 4.N 11
GMB2543AB 4.N 11
GMB2572AA 4.N 14
GMB2572AA 4.N 16
GMB2573AA 4.N 14
GMB2573AA 4.N 16

GMB3490AA 4.N 03
GMB6650AA SDC 4.I 08
GMB6651AA SDC 4.I 08
GMB6720AA LEG 4.I 05
GMB6721AA LEG 4.I 05
GMB6770AA LEG 4.I 04
GMB7641AA LEG 4.H 05
GMB7641AB LEG 4.H 05
GMB7641AC LEG 4.H 05
GMB7880BA 3.C 08
GMD2344BA 4.N 08
GMD2345BA 4.N 09
GMD3753AA 5.E 02
GMD8661AA 4.L 18
GMD8661BA 4.L 18
GNA1108AA 4.N 14
GNA1108AA 4.N 17
GNA1108AA 4.H 15
GNA1108AA 4.H 18
GNA1108AA 4.N 14
GNA1108AB 4.N 14
GNA1108AB 4.N 17
GNA1108AB 4.H 15
GNA1108AB 4.H 18
GNA1107AB 4.N 14
GNA1107AB 4.N 17
GNA1107AB 4.H 15
GNA1107AB 4.H 18
GNA1107AB 4.N 14
GNA1108AA 4.N 14
GNA1108AA 4.N 17
GNA1108AA 4.H 15
GNA1108AA 4.H 18
GNA7826AB LEG 4.H 07
GNA7826AC LEG 4.H 07
GNA7826BB LEG 4.H 07
GNA7826BC LEG 4.H 07
GNA8960AA 3.E 06
GNC8955AA 3.E 06
GT 105161 J 1.J 09
HHC1084AA AEE 4.J 12
HHC1084AA LDY 4.J 14
HJA 3101AA 5.C 12
HMB1002BB AEE 4.J 08
HMB1002BB LDY 4.J 08
HMB1003BB AEE 4.J 08
HMB1003BB LDY 4.J 08
HMB1440AA AEE 4.G 07
HMB1440AA LDY 4.G 07
HMB1441AA LDY 4.G 07
HMB5322AA 4.N 10
HMB5323AA 4.N 10
HMB5501BA 4.L 13

HMB5714AA 4.K 17
HMB5715AA 4.K 17
HMB6080AA 4.L 04
HMB6081AA 4.L 04
HMB6141AA 4.K 16
HMB6141BA 4.K 16
HMB6454AA 4.K 09
HMB6580AA 4.K 13
HMD1084AA AEE 4.J 12
HMD1084AA LDY 4.J 14
HMD1300AA 4.F 04
HMD1301AA 4.F 04
HMD2420AA 4.N 02
HMD2549AA 4.N 02
HMD2583AA 5.C 03
HMD3351AA 4.N 02
HMD3351AA 5.C 03
HMD3351AA 5.C 15
HMD3351CA 5.C 03
HMD3351CA 2.I 08
HMD3351CA 2.I 09
HNA 1228AA NDR 4.J 15
HNA 1228AA NDR 4.J 15
HNA 1739AA 4.K 03
HNA 2400AA 4.N 02
HNA 2401AA 4.N 02
HNA 2420AB 4.N 02
HNA 2420AC 4.N 02
HNA 2420AD 4.N 02
HNA 2560AA 4.N 02
HNA 3106AA 1.M 08
HNA 3106AA 1.M 06
HNA 3490AA 4.G 18
HNA 5941AA 4.L 03
J 205 8S 2.M 10
J 205 8S 2.G 05
J 205 8S 2.G 06
JBH 612481 2.J 07
JDS 1022 5.E 15
JDS 1022 1 5.E 15
JDS 1022 10 5.E 15
JDS 1022 11 5.E 15
JDS 1022 12 5.E 15
JDS 1022 13 5.E 15
JDS 1022 14 5.E 15
JDS 1022 15 5.E 15
JDS 1022 16 5.E 15
JDS 1022 17 5.E 15
JDS 1022 18 5.E 15
JDS 1022 19 5.E 15
JDS 1022 2 5.E 15
JDS 1022 20 5.E 15
JDS 1022 21 5.E 15
JDS 1022 22 5.E 15
JDS 1022 23 5.E 15

JDS 1022 3 5.E 15
JDS 1022 4 5.E 15
JDS 1022 5 5.E 15
JDS 1022 6 5.E 15
JDS 1022 7 5.E 15
JDS 1022 8 5.E 15
JDS 1022 9 5.E 15
JDS 1023 5.E 16
JDS 1023 1 5.E 16
JDS 1023 10 5.E 16
JDS 1023 11 5.E 16
JDS 1023 12 5.E 16
JDS 1023 13 5.E 16
JDS 1023 14 5.E 16
JDS 1023 15 5.E 16
JDS 1023 16 5.E 16
JDS 1023 17 5.E 16
JDS 1023 18 5.E 16
JDS 1023 19 5.E 16
JDS 1023 2 5.E 16
JDS 1023 20 5.E 16
JDS 1023 21 5.E 16
JDS 1023 22 5.E 16
JDS 1023 23 5.E 16
JDS 1023 3 5.E 16
JDS 1023 4 5.E 16
JDS 1023 5 5.E 16
JDS 1023 6 5.E 16
JDS 1023 7 5.E 16
JDS 1023 8 5.E 16
JDS 1023 9 5.E 16
JDS 1024 5.E 15
JDS 1025 5.E 15
JDS 1026 5.E 15
JDS 1029 5.E 15
JDS 1036 5.E 15
JDS 1038 5.E 15
JFD 10806 E 3.I 02
JFD 10806 E 3.K 03
JFS 10816E P 1.E 06
JFS 10816E P 1.E 08
JFX 214051 2.J 16
JFY 10804B 1.M 06
JFY 10804B 1.J 06
JFY 10804B 2.C 14
JFY 10804B 2.C 16
JFY 10804B 2.C 15
JFY 10804B 2.C 17
JFY 10804B 2.D 02
JFY 10804B 2.I 10
JFY 10804B 2.G 07
JFY 10804B 2.G 08
JFY 10804B 2.G 03
JFY 10804B 2.K 02
JFY 10804B 2.G 04

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

H04
Fiche 5

NUMERIC INDEX "JFY10804B " TO "JLM 750"

JFY 10804B	1.M 06	JHC 201901	2.I 05	JJM 125199 401	5.F 05	JJM 170105 40	5.F 02	JLM	188	3.L 05	JLM	563 A	2.H 13	JLM	615	2.H 15	JLM	673	2.F 13
JFY 10804B	2.I 06	JHC 201901	2.I 06	JJM 130105	5.F 02	JJM 170205	5.F 02	JLM	188	3.K 12	JLM	563 A	2.H 15	JLM	616	2.H 04	JLM	673	2.F 14
JFY 10804B	2.I 08	JHG 10825E M	4.K 10	JJM 130105 40	5.F 02	JJM 170305	5.F 02	JLM	188	3.K 10	JLM	563 B	2.H 13	JLM	616	2.H 08	JLM	674	2.E 05
JFY 10804B	3.I 10	JHG 10825E M	3.M 05	JJM 130205	5.F 02	JJM 170405	5.F 03	JLM	205	3.E 04	JLM	563 B	2.H 15	JLM	616	2.H 11	JLM	674	2.E 06
JHC 200101	2.M 07	JHG 10825E M	2.I 09	JJM 130305	5.F 02	JJM 170505	5.F 06	JLM	209 LZ	4.F 08	JLM	563 C	2.H 13	JLM	617	2.H 12	JLM	675	2.E 05
JHC 200101	1.E 18	JJM 100105	5.F 02	JJM 130405	5.F 03	JJM 170605	5.F 03	JLM	209 XE	4.F 08	JLM	563 C	2.H 15	JLM	617	2.H 14	JLM	675	2.E 06
JHC 200101	1.F 03	JJM 100205	5.F 02	JJM 130605	5.F 03	JJM 170605 40	5.F 03	JLM	210 LZ	4.F 08	JLM	563 D	2.H 13	JLM	618	2.H 12	JLM	678	2.F 13
JHC 200101	1.I 05	JJM 100205 00	5.F 02	JJM 130605 40	5.F 03	JJM 171005	5.F 03	JLM	210 XE	4.F 08	JLM	563 D	2.H 15	JLM	618	2.H 14	JLM	678	2.F 14
JHC 200101	1.K 04	JJM 100205 90	5.F 02	JJM 131005	5.F 03	JJM 171105	5.F 04	JLM	211	4.F 08	JLM	563 E	2.H 13	JLM	619	2.H 12	JLM	679	2.F 13
JHC 200101	1.K 06	JJM 100205 95	5.F 02	JJM 131105	5.F 04	JJM 171205	5.F 06	JLM	212	4.F 08	JLM	563 E	2.H 15	JLM	619	2.H 14	JLM	679	2.F 14
JHC 200101	3.E 06	JJM 100305	5.F 02	JJM 131799	5.F 03	JJM 171799	5.F 03	JLM	215	3.K 02	JLM	563 F	2.H 13	JLM	621	2.H 12	JLM	684	2.F 13
JHC 200101	2.J 18	JJM 100405	5.F 03	JJM 135005	5.F 04	JJM 175005	5.F 04	JLM	216	3.K 02	JLM	563 F	2.H 15	JLM	621	2.H 14	JLM	684	2.F 14
JHC 200101	2.I 05	JJM 100605	5.F 03	JJM 135005 04	5.F 04	JJM 175005 04	5.F 04	JLM	234	5.C 18	JLM	563 G	2.H 13	JLM	624	2.H 12	JLM	685	2.F 13
JHC 200101	1.N 11	JJM 100605 40	5.F 03	JJM 135005 10	5.F 04	JJM 175005 10	5.F 04	JLM	235	5.C 18	JLM	563 G	2.H 15	JLM	624	2.H 14	JLM	685	2.F 14
JHC 200101	1.I 02	JJM 101005	5.F 03	JJM 135105	5.F 05	JJM 175105	5.F 05	JLM	236	5.C 18	JLM	563 H	2.H 13	JLM	630	2.H 12	JLM	686	2.F 09
JHC 200101	1.N 03	JJM 101105	5.F 04	JJM 135105 04	5.F 05	JJM 175105 04	5.F 05	JLM	237	5.C 18	JLM	563 H	2.H 15	JLM	630	2.H 14	JLM	689	2.F 13
JHC 200101	1.N 04	JJM 101799	5.F 03	JJM 140105	5.F 02	JJM 180205	5.F 02	JLM	303	1.H 11	JLM	563 I	2.H 13	JLM	631	2.H 04	JLM	689	2.F 14
JHC 200101	1.N 05	JJM 105005	5.F 04	JJM 140105 40	5.F 02	JJM 180405	5.F 06	JLM	304	3.C 13	JLM	563 I	2.H 15	JLM	631	2.H 08	JLM	692	2.F 13
JHC 200101	1.K 05	JJM 105005 04	5.F 04	JJM 140205	5.F 02	JJM 181105	5.F 04	JLM	307	4.G 18	JLM	563 J	2.H 13	JLM	631	2.H 11	JLM	692	2.F 14
JHC 200101	1.M 10	JJM 105005 10	5.F 04	JJM 140305	5.F 02	JJM 190205	5.F 02	JLM	322	1.N 13	JLM	563 J	2.H 15	JLM	632	2.H 04	JLM	693	2.E 04
JHC 200401	1.M 06	JJM 105105	5.F 05	JJM 140405	5.F 03	JJM 200205	5.F 02	JLM	322	1.N 14	JLM	563 JD	2.H 13	JLM	632	2.H 08	JLM	694	2.F 09
JHC 200401	3.D 15	JJM 105105 04	5.F 05	JJM 140605	5.F 03	JJM 201105	5.F 04	JLM	322	1.N 12	JLM	563 JD	2.H 15	JLM	632	2.H 10	JLM	694	2.F 10
JHC 200401	1.K 04	JJM 110105	5.F 02	JJM 140605 40	5.F 03	JLB 110167	2.J 03	JLM	335	3.I 09	JLM	563 JE	2.H 13	JLM	632	2.H 11	JLM	697	2.E 04
JHC 200401	1.K 06	JJM 110105 40	5.F 02	JJM 141005	5.F 03	JLB 110167	2.J 05	JLM	357	4.N 12	JLM	563 JE	2.H 15	JLM	636	5.F 09	JLM	698	2.E 04
JHC 200401	1.K 02	JJM 110205	5.F 02	JJM 141105	5.F 04	JLM 122	1.F 10	JLM	358	4.N 12	JLM	563 JI	2.H 13	JLM	642	3.H 02	JLM	699	2.F 09
JHC 200401	1.K 05	JJM 110305	5.F 02	JJM 141799	5.F 03	JLM 122 E	1.F 10	JLM	359	4.N 12	JLM	563 JI	2.H 15	JLM	645	3.H 02	JLM	699	2.F 10
JHC 200501	1.K 06	JJM 110405	5.F 03	JJM 145005	5.F 04	JLM 127	1.G 15	JLM	360	4.N 12	JLM	563 JK	2.H 13	JLM	646	3.H 02	JLM	700	2.E 04
JHC 200501	1.N 11	JJM 110805	5.F 03	JJM 145005 04	5.F 04	JLM 131	5.E 06	JLM	364	5.F 10	JLM	563 JK	2.H 15	JLM	647	3.H 02	JLM	701	2.E 04
JHC 200501	1.N 03	JJM 110805 40	5.F 03	JJM 145005 10	5.F 04	JLM 132	5.E 06	JLM	381	1.J 02	JLM	563 JM	2.H 13	JLM	648	2.E 10	JLM	702	2.F 13
JHC 200501	1.N 04	JJM 111005	5.F 03	JJM 145105	5.F 05	JLM 135 LZ	4.F 06	JLM	476	4.N 16	JLM	563 JM	2.H 15	JLM	649	2.E 10	JLM	702	2.F 14
JHC 200501	1.N 05	JJM 111105	5.F 04	JJM 145105 04	5.F 05	JLM 136	4.F 05	JLM	476	4.N 04	JLM	563 K	2.H 13	JLM	650	2.E 10	JLM	703	2.E 04
JHC 200601	1.K 03	JJM 111799	5.F 03	JJM 145199 40	5.F 05	JLM 138	4.F 05	JLM	476 2	4.N 16	JLM	563 K	2.H 15	JLM	651	2.E 10	JLM	705	2.E 04
JHC 200601	1.K 02	JJM 115005	5.F 04	JJM 145199 401	5.F 05	JLM 150	1.J 02	JLM	476 2	4.N 04	JLM	563 L	2.H 13	JLM	653	2.E 10	JLM	708	2.E 04
JHC 200601	1.J 18	JJM 115005 04	5.F 04	JJM 150105	5.F 02	JLM 153	3.I 09	JLM	476 3	4.N 16	JLM	563 L	2.H 15	JLM	655	2.E 10	JLM	711	2.F 09
JHC 200601	1.J 07	JJM 115005 10	5.F 04	JJM 150105 40	5.F 02	JLM 153 E	3.I 09	JLM	476 3	4.N 04	JLM	563 M	2.H 13	JLM	657	2.J 14	JLM	711	2.F 10
JHC 200601	1.J 08	JJM 115105	5.F 05	JJM 150205	5.F 02	JLM 154	3.I 09	JLM	499	3.D 09	JLM	563 M	2.H 15	JLM	659	2.E 05	JLM	712	2.F 11
JHC 200601	1.J 05	JJM 115105 04	5.F 05	JJM 150305	5.F 02	JLM 157	3.I 09	JLM	500	3.D 08	JLM	577	2.N 02	JLM	659	2.E 06	JLM	713	2.F 11
JHC 200601	1.N 09	JJM 115199 40	5.F 05	JJM 150405	5.F 03	JLM 158	3.I 09	JLM	501	3.D 09	JLM	578	2.I 17	JLM	660	2.F 13	JLM	714	2.F 11
JHC 200601	1.N 10	JJM 115199 401	5.F 05	JJM 150605	5.F 03	JLM 159	3.I 07	JLM	504	3.H 13	JLM	579	2.I 17	JLM	662	2.E 05	JLM	715	2.F 09
JHC 200701	1.K 02	JJM 120105	5.F 02	JJM 150805 40	5.F 03	JLM 160	3.I 07	JLM	505	3.H 13	JLM	580	2.I 17	JLM	662	2.E 06	JLM	717	2.F 11
JHC 200801	1.N 13	JJM 120105 40	5.F 02	JJM 151005	5.F 03	JLM 169	3.K 14	JLM	505	3.H 14	JLM	581 20	1.F 10	JLM	663	2.F 13	JLM	718	2.F 09
JHC 200801	1.N 14	JJM 120205	5.F 02	JJM 151105	5.F 04	JLM 169	3.K 16	JLM	506	3.H 13	JLM	581 20	1.F 11	JLM	663	2.F 14	JLM	733	2.F 13
JHC 200801	1.N 12	JJM 120305	5.F 02	JJM 151799	5.F 03	JLM 170	3.K 14	JLM	507	3.H 13	JLM	581 S	1.F 10	JLM	664	2.E 10	JLM	733	2.F 14
JHC 200801	1.N 11	JJM 120405	5.F 03	JJM 155005	5.F 04	JLM 170	3.K 16	JLM	509	3.H 13	JLM	581 S	1.F 11	JLM	665	2.E 10	JLM	734	2.F 13
JHC 200801	1.N 04	JJM 120605	5.F 03	JJM 155005 04	5.F 04	JLM 173	3.K 03	JLM	509	3.H 14	JLM	603	2.N 04	JLM	666	2.E 05	JLM	734	2.F 14
JHC 200801	1.N 05	JJM 120805 40	5.F 03	JJM 155005 10	5.F 04	JLM 174	3.K 03	JLM	510	3.H 13	JLM	610	2.H 12	JLM	666	2.E 06	JLM	737	2.F 13
JHC 201001	1.M 06	JJM 121005	5.F 03	JJM 155105	5.F 05	JLM 175	3.K 03	JLM	511	3.H 13	JLM	610	2.H 14	JLM	667	2.E 10	JLM	737	2.F 14
JHC 201001	1.N 08	JJM 121105	5.F 04	JJM 155105 04	5.F 05	JLM 178	3.K 02	JLM	511	3.H 14	JLM	611	2.H 12	JLM	668	2.F 13	JLM	738	2.F 13
JHC 201001	1.N 10	JJM 121799	5.F 03	JJM 155199 40	5.F 05	JLM 178	3.K 03	JLM	516	2.E 14	JLM	611	2.H 14	JLM	668	2.F 14	JLM	738	2.F 14
JHC 201301	1.L 02	JJM 125005	5.F 04	JJM 155199 401	5.F 05	JLM 179	3.K 02	JLM	527	2.H 12	JLM	612	2.H 04	JLM	669	2.E 07	JLM	740	1.F 13
JHC 201801	1.L 02	JJM 125005 04	5.F 04	JJM 160205	5.F 02	JLM 179	3.K 03	JLM	527	2.H 14	JLM	612	2.H J8	JLM	670	2.F 13	JLM	741	1.G 02
JHC 201901	1.N 09	JJM 125005 10	5.F 04	JJM 161005	5.F 03	JLM 180	3.K 03	JLM	561	3.K 14	JLM	612	2.H 11	JLM	670	2.F 14	JLM	747	2.J 14
JHC 201901	1.N 10	JJM 125105	5.F 05	JJM 161105	5.F 04	JLM 181	3.K 02	JLM	561	3.K 16	JLM	614	2.H 12	JLM	671	2.F 09	JLM	748	3.D 11
JHC 201901	2.J 18	JJM 125105 04	5.F 05	JJM 161799	5.F 03	JLM 181	3.K 03	JLM	562	3.K 14	JLM	614	2.H 14	JLM	672	2.E 05	JLM	749	3.D 16
JHC 201901	2.K 02	JJM 125199 40	5.F 05	JJM 170105	5.F 02	JLM 186	5.E 14	JLM	562	3.K 16	JLM	615	2.H 12	JLM	672	2.E 06	JLM	750	3.D 16

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

H05
Fiche 5

NUMERIC INDEX "JLM 751" TO "JLM 1256"

JLM	751	3.D 16	JLM	812	4.L 08	JLM	879	2.F 05	JLM	914	2.F 08	JLM	999	2.F 03	JLM	1059	3.K 18	JLM	1109	2.I 03	JLM	1206	3.H 11
JLM	752	3.C 04	JLM	813	4.L 09	JLM	880	2.F 06	JLM	915	2.F 09	JLM	999	2.F 04	JLM	1060	3.K 18	JLM	1110	2.I 02	JLM	1207	3.H 11
JLM	752	3.D 11	JLM	814	4.L 09	JLM	880	2.F 05	JLM	915	2.F 10	JLM	999	2.F 05	JLM	1061	3.K 18	JLM	1110	2.I 03	JLM	1208	3.H 11
JLM	756	3.C 05	JLM	815	4.L 08	JLM	881	2.F 06	JLM	916	2.F 03	JLM	999	2.F 06	JLM	1062	3.K 18	JLM	1117	2.H 12	JLM	1208	3.H 12
JLM	757	3.C 05	JLM	817	4.L 11	JLM	881	2.F 05	JLM	916	2.F 04	JLM	1000	2.E 18	JLM	1065	2.E 16	JLM	1117	2.H 15	JLM	1209	3.H 11
JLM	757	3.D 13	JLM	818	4.L 11	JLM	882	2.F 13	JLM	917	2.F 03	JLM	1000	2.F 03	JLM	1066	2.E 16	JLM	1118	2.H 12	JLM	1209	3.H 12
JLM	758	3.C 05	JLM	819	4.L 11	JLM	884	2.F 13	JLM	918	2.F 03	JLM	1001	2.E 18	JLM	1067	2.E 16	JLM	1118	2.H 15	JLM	1210	3.H 11
JLM	758	3.D 13	JLM	820	4.L 11	JLM	885	2.F 13	JLM	918	2.F 04	JLM	1001	2.F 03	JLM	1068	2.E 16	JLM	1119	2.H 12	JLM	1210	3.H 12
JLM	758	3.C 05	JLM	823	2.G 12	JLM	887	2.F 11	JLM	919	2.F 03	JLM	1002	2.F 07	JLM	1068	2.E 17	JLM	1119	2.H 15	JLM	1211	3.H 11
JLM	759	3.D 13	JLM	823	2.G 16	JLM	888	2.F 11	JLM	919	2.F 04	JLM	1003	2.F 07	JLM	1069	2.F 15	JLM	1120	2.H 12	JLM	1211	3.H 12
JLM	760	3.C 05	JLM	823	2.G 15	JLM	889	2.F 09	JLM	920	2.F 03	JLM	1003	2.F 08	JLM	1070	2.E 18	JLM	1120	2.H 15	JLM	1212	3.H 11
JLM	760	3.D 13	JLM	823	2.G 16	JLM	890	2.F 09	JLM	920	2.F 04	JLM	1004	2.E 16	JLM	1071	2.E 16	JLM	1125	3.D 16	JLM	1212	3.H 12
JLM	761	3.C 05	JLM	823	2.G 11	JLM	890	2.F 10	JLM	921	2.F 03	JLM	1004	2.E 18	JLM	1071	2.E 18	JLM	1126	3.D 16	JLM	1213	3.H 11
JLM	761	3.D 13	JLM	824	3.L 04	JLM	891	2.F 09	JLM	921	2.F 04	JLM	1004	2.F 05	JLM	1072	2.E 16	JLM	1127	3.D 16	JLM	1213	3.H 12
JLM	763	3.C 05	JLM	825	3.L 04	JLM	892	2.F 09	JLM	922	2.F 03	JLM	1005	2.E 16	JLM	1073	2.E 16	JLM	1131	3.C 06	JLM	1215	3.H 09
JLM	763	3.D 13	JLM	826	3.L 04	JLM	893	2.F 09	JLM	923	2.F 03	JLM	1005	2.E 17	JLM	1074	2.E 17	JLM	1131	3.C 07	JLM	1216	3.H 09
JLM	764 20	1.F 05	JLM	827	3.L 04	JLM	893	2.F 10	JLM	924	2.F 15	JLM	1005	2.E 18	JLM	1074	2.E 18	JLM	1132	3.D 16	JLM	1217	3.H 09
JLM	764 20	1.F 06	JLM	828	3.L 05	JLM	894	2.F 09	JLM	925	2.F 15	JLM	1005	2.F 02	JLM	1075	2.E 17	JLM	1133	3.D 16	JLM	1218	3.H 09
JLM	764 S	1.F 05	JLM	835	1.H 02	JLM	894	2.F 10	JLM	926	2.F 15	JLM	1005	2.F 04	JLM	1075	2.E 18	JLM	1135	4.I 09	JLM	1219	3.H 09
JLM	764 S	1.F 06	JLM	835	1.H 04	JLM	895	2.F 09	JLM	927	2.F 15	JLM	1006	2.F 15	JLM	1076	2.E 16	JLM	1137	4.H 14	JLM	1220	3.H 07
JLM	770	3.C 06	JLM	836	1.H 02	JLM	895	2.F 10	JLM	928	2.F 15	JLM	1011	3.K 17	JLM	1076	2.E 18	JLM	1137	4.H 17	JLM	1221	3.H 07
JLM	770	3.C 07	JLM	838	1.I 18	JLM	896	2.F 09	JLM	929	2.F 15	JLM	1012	3.K 17	JLM	1077	2.E 18	JLM	1138	4.H 05	JLM	1223	3.L 11
JLM	771	3.C 06	JLM	839	1.I 18	JLM	896	2.F 10	JLM	930	2.F 15	JLM	1013	3.L 03	JLM	1078	2.E 07	JLM	1139	4.I 09	JLM	1223	2.E 14
JLM	771	3.C 07	JLM	840	1.I 18	JLM	897	2.F 07	JLM	931	2.F 15	JLM	1015	3.K 04	JLM	1079	2.E 07	JLM	1141	4.H 14	JLM	1223	3.H 11
JLM	782	2.N 02	JLM	841	1.I 18	JLM	897	2.F 08	JLM	932	2.F 15	JLM	1016	3.K 04	JLM	1080	2.E 07	JLM	1141	4.H 17	JLM	1223	3.H 12
JLM	783	2.N 02	JLM	842	1.I 18	JLM	897	2.F 09	JLM	933	2.F 15	JLM	1017	3.K 05	JLM	1082	2.E 07	JLM	1142	4.H 08	JLM	1224	3.H 11
JLM	784	2.N 02	JLM	843	1.I 18	JLM	897	2.F 10	JLM	934	2.F 15	JLM	1018	3.K 05	JLM	1083	2.E 07	JLM	1143	4.I 09	JLM	1224	3.H 12
JLM	785	2.N 02	JLM	844	3.K 02	JLM	898	2.F 07	JLM	936	2.F 15	JLM	1021	2.M 13	JLM	1084	2.E 07	JLM	1144	4.I 09	JLM	1225	3.H 11
JLM	786	2.N 04	JLM	845	3.K 02	JLM	899	2.F 09	JLM	937	2.F 15	JLM	1022	2.E 16	JLM	1085	2.E 07	JLM	1145	4.H 14	JLM	1225	3.H 12
JLM	786	2.N 02	JLM	846	3.L 06	JLM	899	2.F 10	JLM	938	2.F 15	JLM	1023	2.E 16	JLM	1086	2.F 15	JLM	1145	4.H 17	JLM	1227	5.F 10
JLM	787	2.N 04	JLM	848	3.K 12	JLM	900	2.F 09	JLM	939	2.F 15	JLM	1023	2.E 17	JLM	1087	2.E 17	JLM	1147	4.H 02	JLM	1231	3.D 16
JLM	787	2.N 02	JLM	860	3.H 07	JLM	900	2.F 10	JLM	940	2.F 15	JLM	1023	2.F 02	JLM	1087	2.E 18	JLM	1148	1.N 03	JLM	1232	3.D 16
JLM	788	2.N 02	JLM	863	2.E 05	JLM	901	2.F 09	JLM	941	2.F 15	JLM	1024	2.E 16	JLM	1088	2.E 18	JLM	1149	4.N 16	JLM	1233	3.D 16
JLM	789	2.N 02	JLM	863	2.E 06	JLM	901	2.F 10	JLM	942	2.F 15	JLM	1025	2.E 16	JLM	1089	2.E 18	JLM	1150	4.N 16	JLM	1234	3.D 16
JLM	790	2.N 02	JLM	864	2.E 05	JLM	902	2.F 09	JLM	943	2.F 15	JLM	1025	2.E 17	JLM	1091	2.E 18	JLM	1160	3.J 04	JLM	1235	3.D 16
JLM	791	2.N 04	JLM	864	2.E 06	JLM	902	2.F 10	JLM	944	2.E 16	JLM	1026	2.E 16	JLM	1093	2.E 18	JLM	1164	3.D 16	JLM	1236	3.D 16
JLM	792	2.N 04	JLM	866	2.F 11	JLM	902	2.F 15	JLM	944	2.E 17	JLM	1026	2.E 17	JLM	1094	2.I 02	JLM	1174	3.C 11	JLM	1237	3.D 16
JLM	793	2.N 04	JLM	866	2.F 12	JLM	903	2.F 07	JLM	944	2.F 15	JLM	1027	2.E 16	JLM	1095	2.I 03	JLM	1175	3.C 11	JLM	1238	3.D 16
JLM	794	2.N 04	JLM	867	2.F 11	JLM	903	2.F 08	JLM	945	2.F 09	JLM	1028	2.E 17	JLM	1096	2.I 02	JLM	1176	3.C 11	JLM	1240	3.E 08
JLM	795	2.N 04	JLM	869	2.F 11	JLM	904	2.F 07	JLM	991	2.F 05	JLM	1029	2.E 16	JLM	1096	2.I 03	JLM	1177	3.C 11	JLM	1241	3.E 08
JLM	796	2.N 04	JLM	869	2.F 12	JLM	904	2.F 08	JLM	992	2.E 18	JLM	1029	2.E 17	JLM	1097	2.I 04	JLM	1178	3.C 11	JLM	1242	3.E 08
JLM	797	2.N 04	JLM	870	2.F 11	JLM	905	2.E 04	JLM	992	2.F 03	JLM	1030	2.E 16	JLM	1098	2.I 02	JLM	1180	2.F 16	JLM	1242	3.E 04
JLM	798	2.N 04	JLM	871	2.F 11	JLM	907	2.F 07	JLM	992	2.F 04	JLM	1030	2.E 17	JLM	1098	2.I 03	JLM	1180	2.F 17	JLM	1243	3.E 04
JLM	799	2.N 04	JLM	872	2.F 11	JLM	907	2.F 08	JLM	992	2.F 05	JLM	1031	2.E 16	JLM	1099	2.I 04	JLM	1181	2.F 16	JLM	1244	3.C 08
JLM	800	2.N 04	JLM	873	2.F 09	JLM	908	2.F 07	JLM	993	2.F 05	JLM	1032	2.E 16	JLM	1100	2.I 04	JLM	1181	2.F 17	JLM	1244	4.H 08
JLM	801	2.N 04	JLM	874	2.F 09	JLM	908	2.F 08	JLM	994	2.F 09	JLM	1033	2.E 16	JLM	1101	2.I 04	JLM	1182	2.F 16	JLM	1245	4.H 02
JLM	802	2.N 04	JLM	874	2.F 10	JLM	909	2.F 07	JLM	994	2.F 10	JLM	1035	2.E 18	JLM	1102	2.I 04	JLM	1185	2.F 11	JLM	1247	5.F 10
JLM	803	2.N 04	JLM	875	2.F 05	JLM	909	2.F 08	JLM	995	2.F 07	JLM	1035	2.F 02	JLM	1103	2.I 02	JLM	1185	2.F 12	JLM	1248	3.D 12
JLM	804	2.M 13	JLM	876	2.F 05	JLM	909	2.F 09	JLM	995	2.F 09	JLM	1036	2.E 17	JLM	1103	2.I 03	JLM	1199	3.H 10	JLM	1249	3.J 04
JLM	805	2.M 13	JLM	877	2.F 06	JLM	909	2.F 10	JLM	995	2.F 10	JLM	1036	2.E 18	JLM	1106	2.I 04	JLM	1200	3.H 10	JLM	1250	3.I 12
JLM	806	2.M 13	JLM	877	2.F 05	JLM	910	2.F 07	JLM	996	2.F 09	JLM	1036	2.F 02	JLM	1107	2.I 02	JLM	1202	3.H 10	JLM	1253	3.L 09
JLM	807	2.M 13	JLM	878	2.F 03	JLM	911	2.F 07	JLM	996	2.F 10	JLM	1051	2.F 07	JLM	1107	2.I 03	JLM	1203	3.H 11	JLM	1253	3.L 07
JLM	808	2.M 13	JLM	878	2.F 04	JLM	912	2.F 07	JLM	997	2.F 03	JLM	1051	2.F 08	JLM	1108	2.I 02	JLM	1204	3.H 11	JLM	1253	3.L 10
JLM	809 LZ	4.F 06	JLM	878	2.F 05	JLM	913	2.F 07	JLM	997	2.F 05	JLM	1052	2.F 11	JLM	1108	2.I 03	JLM	1204	3.H 12	JLM	1255	3.C 11
JLM	810 LZ	4.F 06	JLM	879	2.F 06	JLM	914	2.F 07	JLM	999	2.E 18	JLM	1052	2.F 12	JLM	1109	2.I 02	JLM	1205	3.H 11	JLM	1256	3.C 10

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

H06
Fiche 5

NUMERIC INDEX "JLM 1256" TO "JLM 2056"

JLM	1256	3.C 11	JLM	1346	2.H 11	JLM	1477	2.N 07	JLM	1582	4.M 03	JLM	1704	2.M 18	JLM	1796	4.M 11	JLM	1898	3.H 10	JLM	1953	3.M 02
JLM	1257	3.C 11	JLM	1356	4.J 08	JLM	1478	4.J 08	JLM	1582	4.L 17	JLM	1704	3.F 14	JLM	1797	4.M 09	JLM	1899	3.H 11	JLM	1955	3.C 06
JLM	1258	3.C 11	JLM	1356 LDY	4.K 02	JLM	1479	4.K 02	JLM	1585	1.M 08	JLM	1705 E	1.G 02	JLM	1797	4.M 11	JLM	1906	4.K 05	JLM	1955	3.C 07
JLM	1259	3.C 11	JLM	1356 LDY	4.J 08	JLM	1482	3.E 08	JLM	1586	1.M 08	JLM	1705 N	1.G 02	JLM	1798	4.M 09	JLM	1906	4.K 08	JLM	1956	2.H 12
JLM	1260	3.C 10	JLM	1356 NDD	4.K 02	JLM	1483	4.K 02	JLM	1586	4.M 04	JLM	1707	2.J 02	JLM	1798	4.M 11	JLM	1906	3.K 17	JLM	1956	2.H 14
JLM	1260	3.C 11	JLM	1356 NDD	4.J 08	JLM	1484	4.K 02	JLM	1586	4.L 17	JLM	1708	2.J 10	JLM	1800	3.F 18	JLM	1907	2.N 07	JLM	1957	2.F 13
JLM	1261	3.C 11	JLM	1357	3.D 16	JLM	1485	4.K 02	JLM	1605	5.C 08	JLM	1708	2.J 12	JLM	1806	3.C 02	JLM	1908	2.N 07	JLM	1958	2.M 18
JLM	1263	2.H 08	JLM	1358	3.D 16	JLM	1486	5.C 12	JLM	1606	5.C 08	JLM	1709	3.H 11	JLM	1807	3.C 02	JLM	1919 38	2.H 05	JLM	1958	3.F 04
JLM	1263	2.H 11	JLM	1371 28	2.H 11	JLM	1494	3.L 09	JLM	1609	3.I 08	JLM	1722	3.M 05	JLM	1810	1.N 04	JLM	1919 38	2.H 09	JLM	1969	3.K 14
JLM	1268	4.K 03	JLM	1371 28E	2.H 11	JLM	1494	3.L 07	JLM	1611	3.F 13	JLM	1723	3.E 02	JLM	1817 20	1.F 05	JLM	1919 38E	2.H 09	JLM	1969	3.K 16
JLM	1269	4.K 03	JLM	1371 35	2.H 11	JLM	1494	3.L 10	JLM	1612	3.F 13	JLM	1727	3.M 02	JLM	1817 20	1.F 07	JLM	1920 37	2.H 06	JLM	1970	4.H 05
JLM	1270	4.K 03	JLM	1371 35E	2.H 11	JLM	1499	1.N 11	JLM	1613	3.F 13	JLM	1729	4.D 18	JLM	1817 20	1.F 08	JLM	1920 37	2.H 09	JLM	1972	4.H 05
JLM	1276	3.E 08	JLM	1371 37	2.H 11	JLM	1525	3.K 15	JLM	1617	3.D 12	JLM	1730	3.H 09	JLM	1817 20	1.F 08	JLM	1920 37E	2.H 09	JLM	1973	4.H 06
JLM	1276	3.E 02	JLM	1371 37E	2.H 11	JLM	1526	3.K 15	JLM	1622 AEE	4.F 06	JLM	1732 37	2.H 06	JLM	1817 S	1.F 05	JLM	1921 49	2.H 06	JLM	1975	4.H 06
JLM	1277	3.E 08	JLM	1371 49	2.H 11	JLM	1529	3.K 14	JLM	1622 LEG	4.F 06	JLM	1733 49	2.H 06	JLM	1817 S	1.F 07	JLM	1921 49	2.H 09	JLM	1980	2.F 11
JLM	1277	3.E 02	JLM	1378	3.K 17	JLM	1530	3.K 14	JLM	1623 AEE	4.F 06	JLM	1735 37	2.H 07	JLM	1817 S	1.F 08	JLM	1921 49E	2.H 09	JLM	1981	2.E 07
JLM	1279	1.E 12	JLM	1379	3.K 17	JLM	1533	4.K 07	JLM	1623 LEG	4.F 06	JLM	1736 49	2.H 08	JLM	1817 S	1.F 08	JLM	1922 38	2.H 07	JLM	1982	3.I 11
JLM	1280	2.N 02	JLM	1382	4.N 16	JLM	1542	2.G 12	JLM	1624	4.F 05	JLM	1741	1.K 02	JLM	1818 20	1.F 11	JLM	1922 38	2.H 10	JLM	1983	3.I 11
JLM	1281	2.N 02	JLM	1383	4.N 16	JLM	1542	2.G 18	JLM	1625	4.F 05	JLM	1744 38	2.H 05	JLM	1818 S	1.F 11	JLM	1922 38E	2.H 10	JLM	1985	2.J 18
JLM	1282	2.N 04	JLM	1388	2.G 10	JLM	1542	2.G 15	JLM	1626 AEE	4.F 06	JLM	1745 38	2.H 07	JLM	1819	3.K 11	JLM	1923 37	2.H 07	JLM	1989	2.G 13
JLM	1282	2.N 02	JLM	1390	2.I 02	JLM	1542	2.G 16	JLM	1626 LEG	4.F 06	JLM	1746	5.F 10	JLM	1820	3.K 11	JLM	1923 37	2.H 10	JLM	1990	3.H 14
JLM	1285	3.H 11	JLM	1390	2.I 03	JLM	1542	2.G 11	JLM	1627 AEE	4.F 06	JLM	1747	5.F 10	JLM	1821	3.K 11	JLM	1923 37E	2.H 10	JLM	1991	3.H 12
JLM	1288	3.H 11	JLM	1391	2.I 02	JLM	1543	2.G 12	JLM	1627 LEG	4.F 06	JLM	1748	5.F 10	JLM	1822	3.K 11	JLM	1924 49	2.H 08	JLM	1992	3.H 12
JLM	1292 28	2.H 11	JLM	1391	2.I 03	JLM	1543	2.G 13	JLM	1628	4.F 05	JLM	1749	3.H 10	JLM	1823	4.F 04	JLM	1924 49	2.H 10	JLM	1993	3.H 12
JLM	1292 28E	2.H 11	JLM	1392	5.C 08	JLM	1543	2.G 11	JLM	1629	4.F 05	JLM	1750	3.H 11	JLM	1825	1.G 08	JLM	1924 49E	2.H 10	JLM	1994	3.H 14
JLM	1292 35	2.H 11	JLM	1393	5.C 08	JLM	1544	2.G 12	JLM	1630	4.F 06	JLM	1751	3.H 11	JLM	1826	2.N 03	JLM	1928	3.H 03	JLM	1995	3.H 14
JLM	1292 35E	2.H 11	JLM	1394	5.C 08	JLM	1544	2.G 11	JLM	1631	4.F 06	JLM	1752	3.H 11	JLM	1827	2.N 03	JLM	1928	3.H 05	JLM	1996	3.H 13
JLM	1292 49	2.H 11	JLM	1395	5.C 08	JLM	1545	2.G 12	JLM	1632 AEE	4.F 06	JLM	1753	5.C 08	JLM	1828	2.N 03	JLM	1929	3.H 03	JLM	1996	3.H 14
JLM	1292 49E	2.H 11	JLM	1396	5.C 08	JLM	1545	2.G 11	JLM	1632 LEG	4.F 06	JLM	1754	5.C 08	JLM	1829	2.N 03	JLM	1929	3.H 05	JLM	1997	3.H 14
JLM	1293	1.J 18	JLM	1397	5.C 08	JLM	1556	2.M 13	JLM	1633 AEE	4.F 06	JLM	1755	5.C 08	JLM	1830	2.N 05	JLM	1930	3.H 33	JLM	2000	3.H 10
JLM	1294	2.F 11	JLM	1398	5.C 08	JLM	1557	2.I 17	JLM	1633 LEG	4.F 06	JLM	1756	5.C 08	JLM	1831	2.N 06	JLM	1930	3.H 04	JLM	2005	5.E 13
JLM	1295	2.F 11	JLM	1399	5.C 08	JLM	1558	2.I 17	JLM	1640	2.H 12	JLM	1757	5.C 08	JLM	1832	2.N 06	JLM	1931	3.H 03	JLM	2006 E	1.E 02
JLM	1296	2.F 08	JLM	1400	5.C 08	JLM	1562	2.K 02	JLM	1640	2.H 14	JLM	1758	5.C 08	JLM	1833	2.N 06	JLM	1932	3.H 03	JLM	2006 N	1.E 02
JLM	1297	2.F 11	JLM	1401	5.C 08	JLM	1563	2.K 02	JLM	1641	2.H 12	JLM	1759	1.H 02	JLM	1836	3.D 11	JLM	1932	3.H 05	JLM	2006 SE	1.E 02
JLM	1300	3.I 08	JLM	1407	3.D 13	JLM	1566 E	1.E 03	JLM	1643 AEE	4.J 16	JLM	1759	1.H 04	JLM	1837	3.C 03	JLM	1933	3.H 03	JLM	2012	3.K 09
JLM	1301	3.I 08	JLM	1410	3.K 17	JLM	1566 N	1.E 03	JLM	1643 LDY	4.J 16	JLM	1761	3.E 04	JLM	1848	2.E 10	JLM	1934	3.H 03	JLM	2013	3.K 09
JLM	1302	3.I 08	JLM	1415	2.M 18	JLM	1566 SE	1.E 03	JLM	1643 LEG	4.J 16	JLM	1762	3.E 04	JLM	1849	2.E 10	JLM	1935	3.H 03	JLM	2014	3.K 09
JLM	1303	3.D 16	JLM	1416	2.M 18	JLM	1567 N	1.E 03	JLM	1656	2.M 18	JLM	1764 LEG	4.F 06	JLM	1853	1.H 09	JLM	1936	3.H 03	JLM	2015	3.K 09
JLM	1305	2.N 02	JLM	1425	5.C 12	JLM	1567 SE	1.E 03	JLM	1656	3.F 14	JLM	1765 LEG	4.F 06	JLM	1854	1.M 05	JLM	1937	3.H 03	JLM	2016	3.K 09
JLM	1312	3.I 07	JLM	1428	3.C 09	JLM	1568 N	1.E 02	JLM	1657	2.M 18	JLM	1766	5.C 18	JLM	1857	5.E 13	JLM	1937	3.H 05	JLM	2017	3.K 09
JLM	1313	3.H 08	JLM	1428	3.C 10	JLM	1568 SE	1.E 02	JLM	1657	3.F 14	JLM	1775 28	2.H 05	JLM	1858	4.M 03	JLM	1939	3.H 03	JLM	2018	3.K 09
JLM	1314	2.K 03	JLM	1428	3.C 11	JLM	1569 E	1.E 02	JLM	1658	3.F 14	JLM	1775 28E	2.H 05	JLM	1868	1.I 10	JLM	1939	3.H 04	JLM	2019	3.K 09
JLM	1315	2.K 03	JLM	1429	4.M 08	JLM	1569 N	1.E 02	JLM	1659	2.M 18	JLM	1778 28	2.H 08	JLM	1882	2.M 12	JLM	1940	3.H 03	JLM	2020	3.K 09
JLM	1324	3.K 08	JLM	1430	4.M 08	JLM	1571	3.H 02	JLM	1659	3.F 04	JLM	1778 28E	2.H 08	JLM	1883	2.M 12	JLM	1940	3.H 04	JLM	2021	3.K 09
JLM	1325	3.K 08	JLM	1433	1.N 03	JLM	1571 E	3.H 02	JLM	1660	4.M 04	JLM	1787	4.C 05	JLM	1884	2.N 07	JLM	1941	3.H 03	JLM	2022	5.C 18
JLM	1326	3.K 08	JLM	1450	2.N 04	JLM	1572	3.H 02	JLM	1660	3.K 13	JLM	1787	4.C 11	JLM	1885	2.N 07	JLM	1941	3.H 04	JLM	2023	5.C 18
JLM	1327	4.K 07	JLM	1451	3.F 12	JLM	1573	3.H 02	JLM	1668	3.H 02	JLM	1790 20	1.F 11	JLM	1889	2.M 12	JLM	1946	2.K 03	JLM	2024	5.C 18
JLM	1328	3.C 11	JLM	1452	3.F 12	JLM	1574 28	2.H 05	JLM	1669	3.F 12	JLM	1790 S	1.F 11	JLM	1890	2.M 12	JLM	1947	3.D 10	JLM	2025	5.C 18
JLM	1331	2.I 07	JLM	1453	3.F 12	JLM	1576	1.I 05	JLM	1671	4.M 03	JLM	1792 N	1.E 03	JLM	1891	2.M 12	JLM	1947	3.D 12	JLM	2026	5.E 03
JLM	1332	2.E 16	JLM	1454	3.F 12	JLM	1577	4.M 08	JLM	1672	2.E 02	JLM	1792 SE	1.E 03	JLM	1892	2.N 07	JLM	1948	4.N 13	JLM	2043	4.N 13
JLM	1333	2.F 03	JLM	1456	3.H 09	JLM	1578	4.M 08	JLM	1680 49	2.H 08	JLM	1794	1.F 12	JLM	1893	2.E 18	JLM	1948	4.N 04	JLM	2044	4.N 13
JLM	1334	2.E 16	JLM	1457	3.H 09	JLM	1579	4.M 08	JLM	1700	2.H 12	JLM	1795	4.M 09	JLM	1894	2.E 18	JLM	1949	4.N 13	JLM	2045	3.H 12
JLM	1337	3.K 17	JLM	1464	2.N 07	JLM	1580	4.M 08	JLM	1700	2.H 14	JLM	1795	4.M 11	JLM	1895	2.E 18	JLM	1950	4.N 13	JLM	2054	4.N 13
JLM	1340	1.N 11	JLM	1469	2.M 12	JLM	1581	4.M 03	JLM	1701	3.I 12	JLM	1798	4.M 09	JLM	1896	3.H 10	JLM	1950	4.N 04	JLM	2055	4.N 13
JLM	1346	2.H 08	JLM	1477	2.M 12	JLM	1581	4.L 17	JLM	1702	4.N 16	JLM	1798	4.M 10	JLM	1897	3.H 10	JLM	1952	3.H 12	JLM	2056	4.N 13

JLM	2057	2.K 04	JLM	2169	3.K 03	JLM	2249	2.N 06	JLM	9555	3.I 09	JLM	9686	3.M 03	JLM	9886	5.F 10	JLM	10429	2.F 06	JLM	10551	4.N 12
JLM	2057	2.K 05	JLM	2173	2.F 10	JLM	2249	2.N 03	JLM	9571	2.J 17	JLM	9688	1.I 09	JLM	9891	5.E 06	JLM	10430	2.E 17	JLM	10552	4.N 12
JLM	2058	2.K 04	JLM	2175	3.H 09	JLM	2250	2.N 05	JLM	9571	2.J 15	JLM	9688	3.I 08	JLM	9892	5.E 06	JLM	10431	2.E 17	JLM	10553	4.N 12
JLM	2060	2.K 04	JLM	2176	3.H 03	JLM	2252	3.I 08	JLM	9574	3.I 07	JLM	9688	3.I 10	JLM	9894	5.E 06	JLM	10432	2.E 17	JLM	10554	3.H 14
JLM	2061	2.K 04	JLM	2177	3.H 09	JLM	2260	3.H 09	JLM	9574	4.D 17	JLM	9704	5.F 10	JLM	9895	4.K 05	JLM	10432	2.F 02	JLM	10562	3.D 11
JLM	2066	3.I 11	JLM	2178	3.H 03	JLM	2261	3.E 04	JLM	9574	3.I 08	JLM	9705	5.F 10	JLM	9895	4.K 06	JLM	10437	3.D 11	JLM	10582 FDL	4.L 06
JLM	2067	3.H 12	JLM	2179	3.H 03	JLM	2270	2.F 10	JLM	9577	1.J 03	JLM	9706	5.F 10	JLM	9895	3.K 17	JLM	10439	2.F 04	JLM	10582 FDL	4.L 09
JLM	2074	4.N 04	JLM	2180	5.C 18	JLM	2272	2.F 12	JLM	9577	4.K 07	JLM	9706 1	5.F 10	JLM	9896	3.J 04	JLM	10441	2.F 14	JLM	10582 JDL	4.L 06
JLM	2087	3.L 12	JLM	2181	5.C 18	JLM	2273	2.F 12	JLM	9577	4.K 10	JLM	9709	5.F 10	JLM	9901	5.F 10	JLM	10442	2.F 14	JLM	10582 JDL	4.L 09
JLM	2090	5.E 10	JLM	2182	5.C 18	JLM	2274	2.F 12	JLM	9577	2.E 09	JLM	9710	5.F 10	JLM	9902	5.F 10	JLM	10444	2.F 14	JLM	10582 MDL	4.L 06
JLM	2091	3.L 12	JLM	2183	5.C 18	JLM	2275	2.F 12	JLM	9577	2.K 07	JLM	9734	5.F 10	JLM	9903	5.F 10	JLM	10448	2.F 14	JLM	10582 MDL	4.L 09
JLM	2091	5.E 11	JLM	2184	5.C 18	JLM	2276	2.F 10	JLM	9587	5.E 14	JLM	9742	5.E 09	JLM	9924	5.E 10	JLM	10453	3.I 05	JLM	10585	3.K 12
JLM	2098	3.F 18	JLM	2185	5.C 18	JLM	2277	2.F 10	JLM	9587	3.K 14	JLM	9743	5.E 09	JLM	9992	3.I 05	JLM	10455	3.I 05	JLM	10588	2.J 14
JLM	2100	1.H 02	JLM	2186	5.C 18	JLM	2278	2.F 12	JLM	9587	3.K 16	JLM	9744	5.E 09	JLM	9997	4.L 13	JLM	10456	3.K 06	JLM	10589	3.H 12
JLM	2101	1.H 03	JLM	2187	5.C 18	JLM	2279	2.F 12	JLM	9587	3.K 11	JLM	9746	5.E 09	JLM	9998	4.L 13	JLM	10457	3.K 06	JLM	10592	5.E 03
JLM	2121	3.C 05	JLM	2191	2.N 03	JLM	2280	2.F 12	JLM	9588	3.K 17	JLM	9748	5.E 09	JLM	10150	5.F 10	JLM	10458	3.K 06	JLM	10601	2.N 05
JLM	2121	3.D 13	JLM	2192	2.N 06	JLM	2285	2.F 13	JLM	9589	5.E 14	JLM	9750	5.E 02	JLM	10150	3.E 04	JLM	10459	3.K 06	JLM	10630	3.E 06
JLM	2125	3.H 10	JLM	2192	2.N 03	JLM	2286	2.F 13	JLM	9589	3.L 05	JLM	9751	5.E 02	JLM	10151	5.F 10	JLM	10460	3.I 06	JLM	10645	2.I 17
JLM	2126	3.H 12	JLM	2193	2.N 06	JLM	2287	2.E 16	JLM	9589	3.K 12	JLM	9755	5.F 09	JLM	10152	5.F 10	JLM	10461	3.I 06	JLM	10657	2.K 04
JLM	2127	2.E 10	JLM	2193	2.N 03	JLM	2288	2.F 07	JLM	9589	3.K 10	JLM	9822	5.F 10	JLM	10152	3.E 04	JLM	10465	4.I 06	JLM	10658	2.K 04
JLM	2128	2.E 10	JLM	2194	2.N 06	JLM	2301	3.J 06	JLM	9590	5.E 14	JLM	9829	5.F 09	JLM	10165	2.K 06	JLM	10466	4.I 09	JLM	10671	5.E 03
JLM	2129	3.C 11	JLM	2194	2.N 03	JLM	2302	2.G 13	JLM	9590	3.L 02	JLM	9830	5.F 09	JLM	10165	2.K 06	JLM	10466	4.I 09	JLM	10684 "F"	4.G 04
JLM	2131	3.C 10	JLM	2196	2.N 06	JLM	2305	2.F 10	JLM	9590	3.L 03	JLM	9843	5.E 02	JLM	10226	5.F 10	JLM	10468	1.J 15	JLM	10684 AFR	4.G 04
JLM	2131	3.C 11	JLM	2196	2.N 03	JLM	2306	2.F 09	JLM	9590	3.L 04	JLM	9844	5.E 05	JLM	10227	5.F 10	JLM	10469	4.H 05	JLM	10684 NDR	4.G 09
JLM	2132	3.C 10	JLM	2200	2.N 06	JLM	2306	2.F 10	JLM	9591	3.L 02	JLM	9845	5.E 05	JLM	10228	5.F 10	JLM	10470	4.H 06	JLM	10685 "F"	4.G 04
JLM	2132	3.C 11	JLM	2201	2.N 05	JLM	2307	2.F 10	JLM	9591	3.L 06	JLM	9847	5.E 06	JLM	10275	5.F 10	JLM	10471	4.H 06	JLM	10685 AFR	4.G 04
JLM	2133	3.C 10	JLM	2202	2.N 05	JLM	2308	2.F 10	JLM	9594	5.E 14	JLM	9849	5.E 07	JLM	10276	5.F 10	JLM	10472	4.H 05	JLM	10685 NDR	4.G 09
JLM	2133	3.C 11	JLM	2203	2.N 06	JLM	2309	2.F 10	JLM	9594	3.K 11	JLM	9850	5.E 10	JLM	10283	5.F 09	JLM	10473	2.E 06	JLM	10715	2.F 13
JLM	2134	3.C 10	JLM	2204	2.N 06	JLM	9001 C	5.E 17	JLM	9600	3.L 04	JLM	9851	5.E 10	JLM	10370	5.E 10	JLM	10474	2.E 06	JLM	10716	2.F 14
JLM	2134	3.C 11	JLM	2205	2.N 05	JLM	9004 C	5.E 17	JLM	9600	3.K 13	JLM	9852	3.L 12	JLM	10372	5.E 10	JLM	10482	5.E 17	JLM	10717	2.F 14
JLM	2135	3.C 10	JLM	2206	2.N 05	JLM	9009 C	5.E 17	JLM	9601	3.L 03	JLM	9852	5.E 10	JLM	10396	2.F 16	JLM	10483	5.E 17	JLM	10723	2.F 09
JLM	2135	3.C 11	JLM	2207	2.N 05	JLM	9055	5.E 17	JLM	9626	2.G 07	JLM	9852	5.E 11	JLM	10397	2.E 17	JLM	10485	5.E 17	JLM	10723	2.F 10
JLM	2136	3.C 10	JLM	2208	2.N 05	JLM	9056	5.E 17	JLM	9626	2.G 06	JLM	9853	5.E 09	JLM	10399	2.E 10	JLM	10500	1.K 06	JLM	10746	4.F 06
JLM	2136	3.C 11	JLM	2209	2.N 06	JLM	9057	5.E 17	JLM	9636	1.N 12	JLM	9854	5.E 03	JLM	10401	2.E 17	JLM	10507	5.E 09	JLM	10747	3.I 06
JLM	2137	3.C 10	JLM	2211	3.C 04	JLM	9058	5.E 17	JLM	9654	3.I 07	JLM	9855	5.E 03	JLM	10402	2.E 17	JLM	10509 AEE	4.F 06	JLM	10763	4.M 06
JLM	2137	3.C 11	JLM	2211	3.D 11	JLM	9059	5.E 17	JLM	9679	2.M 14	JLM	9856	5.E 03	JLM	10403	2.E 17	JLM	10509 LEG	4.F 06	JLM	10772	4.N 17
JLM	2138	3.C 10	JLM	2212	3.D 11	JLM	9060	5.E 17	JLM	9679	2.M 16	JLM	9861	5.E 06	JLM	10403	2.F 02	JLM	10511 AEE	4.F 06	JLM	10773	4.N 17
JLM	2138	3.C 11	JLM	2221 N	1.E 03	JLM	9061	5.E 17	JLM	9685	3.D 06	JLM	9862	5.E 05	JLM	10404	2.E 17	JLM	10511 LEG	4.F 06	JLM	10774	5.E 17
JLM	2139	3.C 10	JLM	2221 SE	1.E 03	JLM	9062	5.E 17	JLM	9685	1.J 06	JLM	9863	5.E 05	JLM	10404	2.F 02	JLM	10512	3.E 04	JLM	10775	5.E 17
JLM	2139	3.C 11	JLM	2222	1.F 12	JLM	9063	5.E 17	JLM	9685	3.D 02	JLM	9867	5.F 09	JLM	10409	2.F 14	JLM	10513	3.E 04	JLM	10776	5.E 17
JLM	2140	3.C 10	JLM	2223 20	1.F 11	JLM	9064	5.E 17	JLM	9685	3.D 03	JLM	9868	5.F 09	JLM	10411	2.E 04	JLM	10518	3.E 02	JLM	10777	5.E 17
JLM	2140	3.C 11	JLM	2223 S	1.F 11	JLM	9065	5.E 17	JLM	9685	3.D 04	JLM	9869	5.F 09	JLM	10412	2.E 04	JLM	10533	3.H 05	JLM	10778	3.I 04
JLM	2141	3.C 10	JLM	2229	3.H 09	JLM	9066	5.E 17	JLM	9685	3.D 05	JLM	9871	5.F 09	JLM	10413	2.F 08	JLM	10534	3.H 04	JLM	10779	2.K 02
JLM	2141	3.C 11	JLM	2234	2.I 09	JLM	9067	5.E 17	JLM	9685	3.C 13	JLM	9872	5.F 09	JLM	10417	2.F 08	JLM	10535	3.H 04	JLM	10780 37	2.H 03
JLM	2142	3.C 10	JLM	2235	4.M 09	JLM	9068	5.E 17	JLM	9685	3.C 18	JLM	9874	5.F 10	JLM	10418	2.F 08	JLM	10536	3.H 05	JLM	10780 37	2.H 06
JLM	2142	3.C 11	JLM	2235	4.M 10	JLM	9069	5.E 17	JLM	9685	3.I 09	JLM	9875	5.F 09	JLM	10419	2.F 08	JLM	10537	3.H 05	JLM	10780 37	2.H 09
JLM	2143	2.E 10	JLM	2235	4.M 11	JLM	9070	5.E 17	JLM	9685	3.I 10	JLM	9876	5.F 09	JLM	10420	2.F 04	JLM	10538	3.H 05	JLM	10780 37E	2.H 03
JLM	2144	2.E 10	JLM	2236	3.I 06	JLM	9071	5.E 17	JLM	9687	3.D 07	JLM	9877	5.F 09	JLM	10421	2.F 04	JLM	10539	3.H 05	JLM	10780 37E	2.H 09
JLM	2145	3.I 11	JLM	2237	2.E 17	JLM	9072	5.E 17	JLM	9688	1.G 15	JLM	9878	5.F 09	JLM	10421	2.F 05	JLM	10540	3.H 05	JLM	10780 38	2.H 03
JLM	2146	3.K 18	JLM	2237	2.F 02	JLM	9076	5.E 17	JLM	9688	1.H 07	JLM	9879	5.F 09	JLM	10421	2.F 08	JLM	10541	3.H 05	JLM	10780 38	2.H 05
JLM	2147	3.K 18	JLM	2237	2.F 04	JLM	9077	5.E 17	JLM	9688	1.H 09	JLM	9880	5.F 09	JLM	10422	2.F 04	JLM	10545	2.F 06	JLM	10780 38	2.H 09
JLM	2148	4.N 12	JLM	2242	4.K 03	JLM	9078	5.E 17	JLM	9688	1.I 13	JLM	9882	5.F 10	JLM	10423	2.F 04	JLM	10545	2.F 05	JLM	10780 38E	2.H 03
JLM	2161	3.D 13	JLM	2243	4.K 03	JLM	9079	5.E 17	JLM	9688	1.I 14	JLM	9883	5.E 07	JLM	10424	2.F 15	JLM	10546	2.K 02	JLM	10780 38E	2.H 09
JLM	2162	2.J 18	JLM	2244	4.K 03	JLM	9080	5.E 17	JLM	9688	1.J 12	JLM	9884	5.E 07	JLM	10425	2.F 15	JLM	10547	2.K 02	JLM	10780 49	2.H 03
JLM	2162	2.I 05	JLM	2248	2.N 05	JLM	9081	5.E 17	JLM	9688	4.I 07	JLM	9885	5.F 09	JLM	10428	2.F 15	JLM	10550	4.N 12	JLM	10780 49	2.H 06

JLM	10780 49	2.H 08	JLM	10998	3.J 08	JLM	11464 LEH	5.E 18	JLM	11878 E	2.H 04	JLM	20704	2.C 08	JZN	100010	2.C 02	LMA 6060AA	4.E 03	MMA3891BA E	2.I 03
JLM	10780 49E	2.H 03	JLM	11004	2.N 06	JLM	11464 LEK	5.E 18	JLM	11878 E	2.H 08	JLM	20729	5.E 02	JZN	100010	2.C 05	LMB 4511AA	3.K 09	MMA3891BA N	2.I 03
JLM	10780 49E	2.H 08	JLM	11005	3.E 06	JLM	11464 LEP	5.E 18	JLM	11878 E	2.H 10	JLM	20791	1.E 16	JZN	100010	2.C 03	LMB 5000AA CEM	3.K 13	MMA7410AA	3.D 07
JLM	10781 37	2.H 03	JLM	11008	4.N 12	JLM	11464 MDF	5.E 18	JLM	11880	2.H 03	JLM	20791	1.E 17	JZN	100010	2.C 07	LMB 7000BA	3.E 05	MMB2360AA	2.J 13
JLM	10781 37E	2.H 03	JLM	11009	4.N 12	JLM	11464 MDJ	5.E 18	JLM	11880	2.H 05	JLM	21053	2.J 09	JZN	100010	2.C 08	LMB 7004AB	3.E 06	MMB2850AA	2.J 16
JLM	10781 38	2.H 04	JLM	11010	4.N 12	JLM	11464 MDK	5.E 18	JLM	11880	2.H 09	JLM	21053	2.J 12	JZN	100010	2.C 11	LMB 7005AB	3.E 06	MMB2860AA	2.J 16
JLM	10781 38	2.H 07	JLM	11011	4.N 12	JLM	11464 NJD	5.E 18	JLM	11880 E	2.H 03	JLM	21158	2.I 18	JZN	100010	2.C 06	LMD 3345AA	1.L 03	MMB2861AA	2.J 16
JLM	10781 38	2.H 10	JLM	11026	5.C 18	JLM	11464 PDH	5.E 18	JLM	11880 E	2.H 05	JLM	21223	5.F 09	JZN	100024	2.C 02	LMD 5640AB	1.E 16	MMB3985BA	2.I 05
JLM	10781 38E	2.H 04	JLM	11027	5.C 18	JLM	11464 PDP	5.E 18	JLM	11880 E	2.H 09	JLM	21228	5.F 09	JZN	100024	2.C 05	LMD 5640AB	1.E 17	MMB3985BA	2.I 06
JLM	10781 38E	2.H 10	JLM	11028	5.C 18	JLM	11464 SDE	5.E 18	JLM	11881	2.H 03	JLM	21228	5.F 10	JZN	100024	2.C 03	LMD 7004AA	3.E 06	MMB4400AA	1.N 05
JLM	10781 49	2.H 04	JLM	11029	5.C 18	JLM	11472	3.L 09	JLM	11881	2.H 06	JLM	21228	3.E 04	JZN	100024	2.C 07	LNA 1250BA	3.I 05	MMB4440AA	1.N 04
JLM	10781 49	2.H 08	JLM	11039	5.E 10	JLM	11472	3.L 07	JLM	11881	2.H 09	JLM	21230	5.F 09	JZN	100024	2.C 08	LNA 1250BA 1	3.I 05	MMB4440AA	1.N 05
JLM	10781 49	2.H 10	JLM	11098	1.H 03	JLM	11472	3.L 10	JLM	11881 E	2.H 03	JLM	21258	1.M 10	JZN	100024	2.C 11	LNA 1250BB	3.I 05	MMB4830AA	2.E 12
JLM	10781 49E	2.H 04	JLM	11122	5.E 13	JLM	11479	3.H 12	JLM	11881 E	2.H 09	JLS	10825 E	2.I 04	JZN	100024	2.C 08	LNA 1250BB 1	3.I 05	MMB4830BA	2.E 12
JLM	10781 49E	2.H 10	JLM	11209	3.C 04	JLM	11490	1.K 03	JLM	11882	2.H 03	JLS	10825E P	2.I 04	JZN	100025	2.C 02	LNA 5180AA	5.E 14	MMB6115AA	2.K 17
JLM	10782	2.H 12	JLM	11243	1.F 16	JLM	11518	5.F 10	JLM	11882	2.H 06	JMM	100505	5.F 06	JZN	100025	2.C 05	LNA 5180AA	3.L 02	MMB6134AA	2.K 08
JLM	10782	2.H 14	JLM	11245	1.E 03	JLM	11518	3.E 04	JLM	11882	2.H 09	JMM	101205	5.F 06	JZN	100025	2.C 03	LNA 5180AA	3.L 03	MMB6134AA	2.K 09
JLM	10786	4.N 13	JLM	11246	1.E 03	JLM	11526	2.H 12	JLM	11882 E	2.H 03	JMM	110505	5.F 06	JZN	100025	2.C 07	LNA 5180AA	3.L 04	MMB6134AA	2.K 11
JLM	10787	4.N 13	JLM	11246 SE	1.E 03	JLM	11526	2.H 14	JLM	11882 E	2.H 09	JMM	111205	5.F 06	JZN	100025	2.C 08	LNB 3740AA	3.F 04	MMB6134AA	2.K 14
JLM	10788	4.N 04	JLM	11250	2.E 06	JLM	11527	2.H 14	JLM	11900	2.N 05	JMM	120505	5.F 06	JZN	100025	2.C 11	LNC 1250AA	3.I 05	MMB6134AA	2.K 15
JLM	10790	4.N 13	JLM	11251	2.F 10	JLM	11556	3.D 11	JLM	11901	2.N 05	JMM	121205	5.F 06	JZN	100025	2.C 09	LNC 1250AA 1	3.I 05	MMB6134AA	2.K 16
JLM	10791	4.N 13	JLM	11251	2.E 08	JLM	11558 AEE	4.J 16	JLM	12042	1.F 12	JMM	130505	5.F 06	JZN	100025	2.C 06	LST 8724AA	3.F 18	MMB6134AA	2.L 02
JLM	10814	5.F 08	JLM	11252	2.E 08	JLM	11568 LDY	4.J 16	JLM	12043	1.F 12	JMM	131205	5.F 06	JZN	100035	2.J 09	LST 8724AA	1.J 10	MMB6134BA 10	2.K 18
JLM	10820	2.F 06	JLM	11254	2.N 06	JLM	11568 LEG	4.J 16	JLM	12123	2.N 03	JMM	140505	5.F 06	JZN	100035	2.J 11	LST 8724AA	3.H 08	MMB6134BA 11	2.K 18
JLM	10821	2.F 06	JLM	11255	2.N 06	JLM	11574	1.H 02	JLM	12164	2.I 17	JMM	141205	5.F 06	JZN	100049	2.I 02	LST 8725AA	1.J 10	MMB6134BA 12	2.K 18
JLM	10822	2.F 06	JLM	11259	5.F 10	JLM	11574	1.H 05	JLM	12165	2.I 17	JMM	150505	5.F 06	JZN	100049	2.I 03	LST 8725AA	3.H 08	MMB6134BA 2	2.K 18
JLM	10823	2.F 06	JLM	11259	3.E 04	JLM	11605	3.D 07	JLM	12185	1.K 03	JMM	151205	5.F 06	JZN	100062	2.J 04	LST 8727AA	1.J 10	MMB6134BA 3	2.K 18
JLM	10824	2.F 06	JLM	11275	3.H 04	JLM	11610	3.D 07	JLM	12241	2.I 17	JRC	1492 J	3.E 08	JZN	100062	2.J 05	LST 8727AA	1.J 15	MMB6134BA 4	2.K 18
JLM	10825	2.F 06	JLM	11332	3.E 05	JLM	11626	2.H 12	JLM	12263	2.G 06	JS	728	3.K 17	JZP	100006	2.J 15	LST 8728AA	1.J 10	MMB6134BA 5	2.K 18
JLM	10838	2.I 04	JLM	11343	3.C 05	JLM	11626	2.H 14	JLM	12304	2.N 03	JSE	10516B M	1.E 05	JZP	100036	1.M 02	LST 8729AA	1.J 10	MMB6134BA 6	2.K 18
JLM	10839	2.I 04	JLM	11343	3.D 13	JLM	11659	2.K 02	JLM	12338	2.N 05	JSS	110301 PJ	2.N 06	JZP	100036	1.M 03	LST 8730AA	1.J 10	MMB6134BA 7	2.K 18
JLM	10840	2.I 02	JLM	11348	5.C 08	JLM	11676	4.I 04	JLM	12339	2.N 05	JXD	608048	4.L 18	JZP	100036	2.G 05	LST 8731AA	1.J 09	MMB6134BA 8	2.K 18
JLM	10841	2.I 03	JLM	11349	5.C 08	JLM	11685	2.N 02	JLM	12343	2.E 10	JXH	10410B	4.K 09	JZP	101025	2.J 15	LST 8731AA	1.J 10	MMB6134BA 9	2.K 18
JLM	10842	5.E 02	JLM	11381	5.E 08	JLM	11686	2.N 04	JLM	12422	2.N 06	JXR	10616F	4.K 07	JZP	100011	4.K 08	LXF 4160CA	3.J 06	MMB6140AA	2.L 02
JLM	10856	2.F 13	JLM	11464 AGA	5.E 18	JLM	11690	5.E 02	JLM	12423	2.N 06	JXR	10616F	4.K 10	JZS	100001	4.L 15	LXF 4161AA	3.J 06	MMB6192AA	2.L 03
JLM	10856	2.F 14	JLM	11464 CEH	5.E 18	JLM	11691	5.E 03	JLM	12424	2.N 05	JXR	10616F	4.K 12	JZS	100016	3.I 03	MHC3397AA 3	2.J 10	MMB6280AA	2.K 18
JLM	10861	2.F 15	JLM	11464 CEK	5.E 18	JLM	11695	2.J 04	JLM	12429	2.N 04	JZB	100010	2.J 02	JZS	100063	3.E 05	MHC3397AA 3	2.J 12	MMB6281AA	5.E 06
JLM	10862	2.F 04	JLM	11464 CFA	5.E 18	JLM	11703	4.K 04	JLM	12457	2.E 10	JZB	100010	2.N 02	JZW	100012	2.J 07	MHC3397AA 4	2.J 10	MMB6831AA	3.C 06
JLM	10863	4.H 02	JLM	11464 CFF	5.E 18	JLM	11716	2.N 03	JLM	20054	3.L 09	JZB	100010	2.N 03	KRC	1152	4.K 07	MHC3397AA 4	2.J 12	MMB6891AA	4.G 05
JLM	10866	3.K 10	JLM	11464 CFH	5.E 18	JLM	11717	2.N 03	JLM	20054	3.L 07	JZB	100042	1.G 09	KRC	1154	3.D 07	MHC3397AA 5	2.J 10	MMB6905AA	4.G 05
JLM	10867	3.K 10	JLM	11464 GDF	5.E 18	JLM	11858	2.J 04	JLM	20054	3.L 10	JZB	100042	1.G 11	KRC	1156	3.D 14	MHC3397AA 5	2.J 12	MMB6905BA	4.G 05
JLM	10868	3.K 10	JLM	11464 HEN	5.E 18	JLM	11858	2.J 05	JLM	20122	3.E 02	JZB	100047	2.J 16	KRC	1156 J	4.L 14	MHC3397AA 6	2.J 10	MMB7511AA	1.E 04
JLM	10869	3.K 10	JLM	11464 HES	5.E 18	JLM	11860	2.J 04	JLM	20123	3.E 07	JZB	100057	2.J 07	KRC	1158	3.D 14	MHC3397AA 6	2.J 12	MMB7558AA	1.E 05
JLM	10871	2.E 16	JLM	11464 HET	5.E 18	JLM	11860	2.J 06	JLM	20197	2.F 13	JZB	100060	2.N 04	KRC	1160	1.F 04	MHG7566AA	1.E 05	MMB7568AA	1.E 06
JLM	10872	3.K 04	JLM	11464 HEV	5.E 18	JLM	11876 E	2.H 04	JLM	20202	4.N 10	JZB	100060	2.J 09	KRS	113130	4.J 04	MHG7566AA	1.E 07	MMB7568AA	1.E 07
JLM	10873	3.K 04	JLM	11464 HFB	5.E 18	JLM	11876 E	2.H 10	JLM	20219	2.E 08	JZC	100005 J	1.E 17	KSR	605002	1.L 16	MJA 2800AA	2.J 13	MMD2140AB	2.I 18
JLM	10874	3.K 05	JLM	11464 HFD	5.E 18	JLM	11877	2.H 03	JLM	20339	3.K 16	JZH	100005	5.C 17	KSR	605002	2.I 05	MJA 5813BA	2.M 05	MMD2140BB	2.I 18
JLM	10875	3.K 05	JLM	11464 HFE	5.E 18	JLM	11877	2.H 07	JLM	20340	3.K 16	JZH	100005	4.L 13	KSR	605002	2.I 06	MJA 5813BA	2.M 04	MMD2144AA	2.I 18
JLM	10876	2.F 15	JLM	11464 JEX	5.E 18	JLM	11877	2.H 10	JLM	20341	2.N 03	JZH	100005	4.M 02	KSR	605002	3.D 14	MM 104201 J	4.K 02	MMD2260AA	2.I 15
JLM	10894	3.L 12	JLM	11464 JFE	5.E 18	JLM	11877 E	2.H 03	JLM	20426	3.L 09	JZH	100005	4.G 05	KTP	100002	4.G 06	MMA3890AA E	2.I 02	MMD2260AA	2.I 16
JLM	10894	5.E 11	JLM	11464 JFG	5.E 18	JLM	11877 E	2.H 07	JLM	20426	3.L 07	JZH	100005	4.H 06	KTP	100002	4.G 12	MMA3890AA N	2.I 02	MMD2742AA	2.N 05
JLM	10895	5.E 10	JLM	11464 JFJ	5.E 18	JLM	11877 E	2.H 10	JLM	20426	3.L 10	JZH	100005	4.K 04	KZP	100001	2.I 06	MMA3890BA E	2.I 02	MMD2742AA	2.M 16
JLM	10992	3.H 12	JLM	11464 JFN	5.E 18	JLM	11878	2.H 04	JLM	20429	3.E 06	JZH	100006	5.C 17	LHD	3345AA	1.L 03	MMA3890BA N	2.I 02	MMD2743AA	2.N 05
JLM	10993	3.K 17	JLM	11464 LDP	5.E 18	JLM	11878	2.H 08	JLM	20452	4.M 04	JZH	100006	4.G 05	LJA	4162AA	3.J 08	MMA3891AA E	2.I 03	MMD2743AA	2.M 16
JLM	10997	3.J 08	JLM	11464 LED	5.E 18	JLM	11878	2.H 10	JLM	20452	4.L 17	JZH	100006	4.G 06	LMA	2400AA	1.I 17	MMA3891AA N	2.I 03	MMD2950AA	2.J 16

MMD2951AA 2.J 16
MMD3470AA 2.J 14
MMD3569AA 2.J 14
MMD3569AA 2.J 14
MMD3570AA 2.J 14
MMD4830BA 2.E 12
MMD5151AA 2.M 14
MMD5151AA 2.M 16
MMD6192AA 2.L 05
MMD6110AA 2.I 07
MNA2247AA 2.J 07
MNA2247AB 2.J 07
MNA2247AC 2.J 07
MNA2370AA 2.J 07
MNA2590BB 2.J 13
MNA2590BD 2.J 13
MNA2600AA 2.J 13
MNA2742AA 2.N 05
MNA2742AA 2.M 16
MNA2743AA 2.N 05
MNA2743AA 2.M 16
MNA2880AB 2.J 16
MNA2880AA 2.J 16
MNA2881AA 2.J 16
MNA2885AA 2.J 16
MNA2885BA 2.J 16
MNA3337AA 2.J 11
MNA3711AA 2.J 17
MNA3750BA 2.J 17
MNA4440AA 1.N 04
MNA4440AA 1.N 05
MNA4500BA 1.N 11
MNA4708AA 1.L 12
MNA4715AB 1.L 12
MNA4915AA 2.E 14
MNA4915AB 2.E 14
MNA4919AA 2.E 14
MNA4919AB 2.E 14
MNA4920AA 2.E 14
MNA4920AB 2.E 14
MNA5380BA 1.L 12
MNA5385AA 1.L 12
MNA5399AA 1.L 12
MNA5680AA 2.M 03
MNA6249GA 2.K 10
MNA6249GA 2.K 12
MNA6249GA 2.K 14
MNA6249GA 2.K 16
MNA6249GA 2.K 17
MNA6249GA 2.L 02
MNA6249GA 5.E 08
MNA6385AA 5.E 12
MNA7829AD 5.F .0
MNB2590AA 2.J 13
MNB2840AA 2.J 17
MMC2850CA 2.J 16
MMC3280AA 2.J 09
MMC3280AA 2.J 12
NAB 2533AA 1.F 13
NAB 2533BA 1.F 13
NAB 2535AA 1.F 13
NAB 2535BA 1.F 13
NBA 3072AA 1.L 10
NBA 5800EA 2.G 15
NBB 1715AA 1.H 02
NBB 1715AA 1.H 08
NBB 1716AA 1.H 02
NBB 1716AA 1.H 08
NBB 1760AA 1.E 12
NBB 1953AA 1.G 11
NBB 1953AA 1.G 04
NBB 2021AA 1.G 12
NBB 2549AA 1.G 11
NBB 3500AA 1.L 08
NBB 5800AC 2.G 13
NBC 1701AA 1.E 14
NBC 1988AA 1.G 10
NBC 2031AA 1.G 12
NBC 2100BA 1.G 07
NBC 2100BA 1.G 08
NBC 2215AA 1.N 06
NBC 2520AA 1.F 18
NBC 2520AA 1.G 03
NBC 2520AB 1.F 18
NBC 2520AB 1.G 03
NBC 2520AB 1.H 04
NBC 2543AA 1.G 03
NH 104041 J 1.L 10
NH 104041 J 2.M 08
NH 104041 J 2.M 11
NH 104041 J 4.K 02
NH 104041 J 4.I 07
NH 104041 J 4.J 16
NH 104041 J 2.G 09
NH 105041 4.I 07
NH 105041 J 1.K 10
NH 105041 J 4.K 18
NH 105041 J 3.J 04
NH 105041 J 3.L 12
NH 105041 J 4.D 13
NH 105041 J 5.E 10
NH 105041 J 3.I 08
NH 105041 J 1.K 10
NH 105041 J 4.K 18
NH 105041 J 3.J 04
NH 105041 J 4.D 13
NH 105041 J 5.E 10
NH 105041 J 3.I 08
NH 106041 J 1.L 02
NH 106041 J 1.L 08
NH 106041 J 1.L 09
NH 106041 J 1.M 02
NH 106041 J 3.D 07
NH 106041 J 4.N 02
NH 106041 J 3.J 05
NH 106041 J 2.E 12
NH 106041 J 1.M 03
NH 106041 J 1.M 16
NH 106041 J 2.M 13
NH 106041 J 1.G 15
NH 106041 J 1.H 08
NH 106041 J 1.H 10
NH 106041 J 1.N 06
NH 106041 J 2.G 07
NH 106041 J 2.G 08
NH 106041 J 2.G 05
NH 106041 J 2.G 06
NH 106041 J 3.I 09
NH 110041 J 3.D 06
NH 110041 J 3.C 12
NH 110041 J 3.E 08
NH 110041 J 3.D 02
NH 110041 J 3.D 03
NH 110041 J 3.D 04
NH 110041 J 3.D 05
NH 110041 J 3.C 14
NH 110041 J 3.C 16
NH 110041 J 3.C 17
NH 110041 J 3.C 18
NH 110110 J 3.I 06
NH 112041 J 2.F 16
NH 208041 2.E 12
NH 208041 2.E 02
NH 208041 2.E 03
NH 606041 J 3.D 06
NH 606041 J 3.D 02
NH 606041 J 3.D 03
NH 606041 J 3.D 04
NH 606041 J 3.D 05
NH 606041 J 3.C 13
NH 606041 J 3.C 18
NH 606041 J 3.I 09
NH 606041 J 3.I 10
NIA 5942AA 1.M 06
NIA 5942AC 1.M 06
NJA (6804BA 2.C 14
NJA (6804BA 2.C 16
NJA (6804BA 2.C 15
NJA (6804BA 2.C 17
NJA (6804BA 2.C 18
NJA (6804BA 2.C 12
NK 106061 J 4.L 13
NL (606041 J 2.I 15
NL (606041 J 2.I 16
NL (606041 J 2.J 04
NL 606041 J 2.J 06
NMB 5800AA 2.G 13
NMB 5800BA 2.G 13
NMB 5800CA 2.G 18
NMB 5800CA 2.G 16
NMB 5908CF 1 1.M 12
NMB 5908DG 1 1.M 12
NMB 5942AA 1.M 06
NMB 5942AB 1.M 06
NMB 6741AA 2.C 14
NMB 6741AA 2.C 16
NMB 6741AA 2.C 15
NMB 6741AA 2.C 17
NMB 6741AA 2.C 18
NMB 6741AA 2.C 12
NMB 6741AA 2.C 16
NMB 6741AA 2.C 14
NMB 6741AA 2.C 15
NMB 6741AA 2.C 17
NMB 6741AA 2.C 18
NMB 6741AA 2.C 12
NMC 5908AA 4.J 03
NMD 6091AB 1.L 16
NMD 6091AC 1.L 16
NMD 6741AA 2.C 14
NMD 6741AA 2.C 16
NMD 6741AA 2.C 15
NMD 6741AA 2.C 17
NMD 6741AA 2.C 18
NMD 6741AA 2.C 12
NNA 1426AA 1.H 14
NNA 1426AA 1.H 15
NNA 5800DA 2.G 18
NNA 5800DA 2.G 16
NNA 5800EA 2.G 13
NNA 5800EC 2.G 13
NNA 5800JA 2.G 18
NNA 5800JA 2.G 16
NNA 5800JB 2.G 18
NNA 5800JB 2.G 16
NNA 5800JC 2.G 18
NNA 5800JC 2.G 16
NNA 5800JD 2.G 18
NNA 5800JD 2.G 16
NT 212041 J 2.G 05
NT 212041 J 2.G 06
NT 610041 J 2.J 02
NV 105041 J 1.M 16
NV 105041 J 2.C 03
NV 105041 J 2.C 09
NV 106041 J 2.C 02
NV 106041 J 2.C 05
NV 106041 J 2.C 04
NV 106041 J 2.C 10
NV 112051 J 2.G 12
NV 112051 J 2.G 18
NV 112051 J 2.H 02
NV 112051 J 2.G 16
NV 112051 J 2.G 17
NV 112051 J 2.G 13
NV 112051 J 2.G 14
NV 604041 J 2.C 02
NV 604041 J 2.C 05
NV 604041 J 2.C 04
NV 604041 J 2.C 08
NV 604041 J 2.C 13
NV 604041 J 2.C 16
NV 604041 J 2.C 15
NV 604041 J 2.C 17
NV 604041 J 2.C 11
NV 604041 J 2.C 10
NV 604041 J 2.C 08
NV 604041 J 2.C 12
NV 604042 J 2.C 07
NV 607041 2.G 10
NV 607041 J 2.H 12
NV 607041 J 2.H 14
NY 104041 J 2.M 09
NY 104041 J 1.I 17
NY 105041 J 1.L 17
NY 105041 J 1.M 04
NY 105041 J 1.J 16
NY 105041 J 3.J 05
NY 105041 J 2.J 18
NY 105041 J 2.K 08
NY 105041 J 2.I 08
NY 105041 J 2.M 07
NY 105041 J 1.J 18
NY 105041 J 2.E 15
NY 105041 J 2.E 12
NY 106041 J 2.K 08
NY 106041 J 1.M 05
NY 106041 J 1.F 04
NY 106041 J 1.M 06
NY 106041 J 2.M 08
NY 106041 J 2.M 09
NY 106041 J 1.J 08
NY 106041 J 2.C 14
NY 106041 J 2.C 16
NY 106041 J 2.C 15
NY 106041 J 2.C 17
NY 106041 J 2.D 02
NY 106041 J 2.C 12
NY 106041 J 2.I 10
NY 106041 J 2.C 02
NY 106041 J 2.C 05
NY 106041 J 2.C 04
NY 106041 J 2.C 10
NY 106041 J 1.F 04
NY 106041 J 2.M 15
NY 106041 J 2.M 16
NY 106041 J 2.G 04
NY 106041 J 1.M 09
NY 106041 J 2.I 15
NY 106041 J 2.G 14
NY 106041 J 2.I 16
NY 108041 J 2.C 02
NY 108041 J 2.C 05
NY 108041 J 2.C 04
NY 108041 J 2.C 08
NY 108041 J 2.C 13
NY 108041 J 2.C 16
NY 108041 J 2.C 15
NY 108041 J 2.C 17
NY 108041 J 2.C 11
NY 108041 J 2.C 10
NY 108041 J 2.C 12
NY 108041 J 2.G 10
NY 108041 J 2.G 07
NY 108041 J 2.G 08
NY 108041 J 2.G 03
NY 108041 J 2.K 02
NY 108041 J 1.F 04
NY 108041 J 2.M 15
NY 108041 J 2.M 16
NY 108041 J 2.G 04
NY 108041 J 1.M 09
NY 108041 J 2.I 15
NY 108041 J 2.I 16
NY 108051 J 2.M 10
NY 110041 2.M 11
NY 110041 2.J 14
NY 110041 3.C 15
NY 110041 3.C 17
NY 110041 J 3.D 06
NY 110041 J 3.C 12
NY 110041 J 2.M 08
NY 110041 J 2.M 09
NY 110041 J 3.D 02
NY 110041 J 3.D 03
NY 110041 J 3.D 04
NY 110041 J 3.D 05
NY 110041 J 3.C 14
NY 110041 J 3.C 16
NY 110041 J 3.C 15
NY 110041 J 3.C 17
NY 112041 J 1.E 08
NY 112041 J 2.J 08
NY 112041 J 2.J 13
NY 112041 J 2.J 16
NY 112041 J 2.J 17
NY 112041 J 1.E 08
NY 112041 J 2.J 03
NY 112041 J 2.J 05
NY 112051 J 2.J 16
NY 114041 J 2.J 10
NY 114041 J 2.J 12
NY 116041 J 2.I 11
NY 116041 J 2.J 17
NY 116041 J 2.J 18
NY 116041 J 2.J 15
NY 210041 J 2.J 13
NY 210041 J 2.H 03
NY 210041 J 2.H 04
NY 210041 J 2.H 05
NY 210041 J 2.H 08
NY 210041 J 2.H 07
NY 210041 J 2.H 08
NY 210041 J 2.H 09
NY 210041 J 2.H 10
NY 210041 J 2.H 18
NY 607041 J 2.I 18
NY 607041 J 2.I 15
NY 607041 J 2.I 16
NY 607041 J 2.J 04
NY 607041 J 2.J 06
NY 608041 J 2.J 08
NZ 612041 2.J 07
NZ 612041 J 2.J 07
PA 108121 J 1.F 05
PA 108121 J 1.F 07
PA 108121 J 1.F 08
PA 108121 J 1.F 06
PA 108501 1.L 12
PC 105291 J 1.L 11
PC 108201 J 2.M 14
PC 108201 J 2.M 16
PC 108291 J 2.M 14
PC 108291 J 2.M 16
PS 103101 J 1.L 11
PS 104121 J 2.M 14
PS 104121 J 2.M 16
PS 105121 2.E 14
PS 108320 J 2.J 02
PS 108320 J 2.I 15
PS 108320 J 2.I 16
PS 108320 J 2.J 04
PS 108320 J 2.J 08
RA 606125 J 4.N 09
RA 606176 J 4.J 05
RA 606186 J 4.J 05
RFN 216 3.K 18
RH 612176 4.L 17
RH 612176 4.F 04
RTC 1009 2.H 12
RTC 1009 2.H 14
RTC 1009 A 2.H 12
RTC 1009 A 2.H 14
RTC 1324 3.I 07
RTC 1335 J 2.G 12
RTC 1335 J 2.G 18
RTC 1335 J 2.G 15
RTC 1335 J 2.G 16
RTC 1335 J 2.G 11
RTC 1336 J 2.G 12
RTC 1336 J 2.G 18
RTC 1336 J 2.G 15
RTC 1336 J 2.G 16
RTC 1336 J 2.G 11
RTC 1337 J 2.G 12
RTC 1337 J 2.G 18
RTC 1337 J 2.G 15
RTC 1337 J 2.G 16
RTC 1337 J 2.G 11
RTC 1479 5.F 09
RTC 1479 5.F 10
RTC 2868 4.M 04
RTC 2854 20 1.F 10
RTC 2854 20 1.F 12
RTC 2854 S 1.F 10
RTC 2854 S 1.F 12
RTC 2996 1.F 12
RTC 2996 E 1.F 12
RU 608253 J 4.L 05
RU 612123 J 4.H 10
RU 612503 2.J 10
RU 612503 2.J 12
RY 612285 J 3.D 10
SB 104124 J 3.H 15
SB 108101 PJ 2.J 02
SC 105081 J 3.I 07
SC 105251 J 4.J 11
SE 103084 J 3.F 18
SE 103084 J 3.H 08
SE 103101 J 4.H 06
SE 104081 J 3.I 07
SE 104081 J 1.J 03
SE 104081 J 3.I 11
SE 104081 J 3.I 12
SE 104081 J 3.L 03
SE 104101 J 2.E 15
SE 104121 J 2.M 17
SE 104121 J 4.K 02
SE 104121 J 3.L 03
SE 104143 J 4.H 05
SE 104161 J 1.I 17
SE 105081 J 1.J 15
SE 105101 J 4.F 04
SE 105101 J 1.I 10
SE 105104 J 4.D 02
SE 105104 J 4.D 03
SE 105104 J 4.C 07
SE 105104 J 4.C 13
SE 105104 J 1.J 14
SE 105121 J 1.J 16
SE 105121 J 2.C 03
SE 105121 J 4.H 08
SE 105121 M 1.E 05
SE 105161 1.N 03
SE 105161 J 1.J 14
SE 105161 J 1.J 16
SE 105161 J 3.H 02
SE 105161 J 4.I 08
SE 105161 J 4.F 03
SE 105161 J 3.D 12
SE 105161 J 1.I 11
SE 105165 J 4.L 13
SE 105165 J 4.K 04
SE 105201 J 1.N 03
SE 105203 J 3.L 05
SE 106101 J 4.C 08
SE 106101 J 4.C 12
SE 106121 J 4.D 02
SE 106121 J 4.C 07
SE 106121 J 4.C 13

XJ6 (2.9, 3.2, 3.6, 4.0) From (V)500001 Up to (V)667828

H10
Fiche 5

NUMERIC INDEX "SE 106161J" TO "WJ 106001J"

SE	106161 J	1.N 07	SH	106141 J	2.D 02	SH	605061 MJ	2.H 02	TE	108051 J	1.G 08	WA	105001 J	2.M 11	WA	108041 J	1.F 04	WA	112081 J	2.J 17	WC	702101 J	4.C 07
SE	106161 J	4.L 13	SH	106141 J	3.L 12	SH	605061 MJ	2.G 15	TE	108051 J	2.G 07	WA	105001 J	1.K 10	WA	108041 J	1.I 11	WA	112081 J	2.F 16	WC	702101 J	4.C 13
SE	106801 J	1.F 16	SH	106141 J	5.E 10	SH	605061 MJ	2.G 11	TE	108051 J	2.G 08	WA	105001 J	1.J 03	WA	108041 J	1.L 11	WA	112081 J	2.G 12	WD	108041 J	4.N 17
SE	106801 J	1.G 02	SH	106161 J	4.N 03	SH	606091 J	1.J 06	TE	108051 J	1.G 05	WA	105001 J	1.J 09	WA	108041 J	1.L 12	WA	112081 J	2.H 02	WD	108041 J	4.I 08
SE	604041	4.N 03	SH	106161 J	5.C 13	SH	606146 J	3.D 14	TE	108061 J	1.H 08	WA	105001 J	1.J 14	WA	108041 J	2.G 05	WA	116101 J	2.J 17	WD	108051 J	1.J 12
SF	103084	4.N 03	SH	106161 J	4.K 02	SH	607061 J	4.F 04	TE	108061 J	1.H 09	WA	105001 J	1.J 16	WA	108041 J	2.G 08	WA	116101 J	2.J 15	WD	108051 J	2.C 02
SF	104101 J	4.N 15	SH	106161 J	2.E 12	SL	104121 J	3.H 15	TE	108061 J	1.H 10	WA	105001 J	2.C 03	WA	108044 J	4.G 12	WA	120000 J	2.H 12	WD	108051 J	2.C 05
SF	104101 J	4.N 17	SH	106161 J	3.E 04	SL	104121 J	2.E 15	TE	108101 J	1.K 08	WA	105001 J	2.C 14	WA	108044 J	4.G 13	WA	120000 J	2.H 14	WD	108051 J	2.C 09
SF	104101 J	4.H 15	SH	106161 J	3.H 06	SL	104161 J	2.E 14	TE	108151 J	1.G 15	WA	105001 J	2.C 16	WA	108051	1.M 08	WA	600071 J	4.F 04	WD	108051 J	4.I 06
SF	105201 J	4.I 02	SH	106181 J	2.K 02	SL	104161 J	2.E 15	TE	108151 J	1.H 07	WA	105001 J	2.C 09	WA	108051	2.M 08	WA	600071 J	2.I 15	WD	116101 J	2.I 11
SF	105253 J	4.J 09	SH	108201 J	3.E 04	SM	104101 J	2.I 11	TE	108171 J	1.G 15	WA	105001 J	2.D 02	WA	108051	2.M 09	WA	600071 J	2.I 16	WE	04001	3.H 14
SF	105253 J	4.I 02	SH	108251 J	1.N 02	SM	104101 J	2.I 13	TE	112071 J	2.F 16	WA	105001 J	4.K 18	WA	108051	2.M 10	WA	600071 J	2.J 04	WE	104001 J	2.M 17
SF	605047 J	2.N 04	SH	108121 J	3.I 03	SM	104101 J	2.I 14	UCN	113 L	4.L 03	WA	105001 J	3.L 12	WA	108051	1.G 15	WA	600071 J	2.J 06	WE	104001 J	1.J 03
SF	605047 J	2.N 05	SH	108141	2.C 07	SM	104101 J	2.I 12	UFN	119 L	1.L 04	WA	105001 J	4.D 13	WA	108051	1.H 11	WB	108041 J	4.F 04	WE	104001 J	4.K 02
SF	605047 J	2.N 02	SH	108141 J	1.H 11	SM	104121 J	3.H 15	UFN	119 L	1.L 05	WA	105001 J	2.G 09	WA	108051	1.H 12	WB	108051 J	1.N 15	WE	104001 J	3.L 03
SF	605047 J	2.N 03	SH	108141 J	1.H 12	SM	104121 J	2.E 15	UFN	119 L	1.L 06	WA	105001 J	4.D 17	WA	108051	2.C 03	WB	108051 J	1.N 17	WE	104001 J	3.H 13
SH	04081	3.H 14	SH	106161 J	1.M 06	SN	104161 J	1.L 04	UFN	119 L	1.L 07	WA	105001 J	5.E 06	WA	108051	2.I 04	WB	108051 J	1.N 16	WE	105001 J	4.K 02
SH	104081 J	3.H 13	SH	106161 J	5.C 04	SN	104161 J	1.L 05	UFN	119 L	1.L 10	WA	105001 J	5.E 10	WA	108051	2.G 08	WB	110061 J	3.C 13	WE	105001 J	3.J 04
SH	104101 J	2.G 09	SH	106161 J	2.J 07	SN	104161 J	1.L 06	UKC	854 J	2.G 03	WA	105001 J	1.I 09	WA	108051	2.G 12	WB	110061 J	3.C 18	WE	105001 J	4.H 08
SH	104121 J	1.J 13	SH	106161 J	2.J 08	SN	104161 J	1.L 07	UKC	854 J	2.G 04	WA	105001 J	1.L 11	WA	108051	2.H 02	WB	112081 J	2.J 08	WE	105001 J	4.D 13
SH	104201 J	4.D 16	SH	106161 J	2.L 03	SN	105101 J	3.I 12	UKC	1090	2.G 04	WA	108001 J	2.K 02	WA	108051	2.G 15	WB	112081 J	2.J 06	WE	105001 J	1.I 09
SH	105081 J	1.L 06	SH	106161 J	3.E 05	SN	105121 J	3.I 11	UKC	1090 J	2.G 03	WA	108041 J	1.L 09	WA	108051	1.K 08	WB	114001 J	1.M 13	WE	108001 J	3.J 04
SH	105101 J	2.M 08	SH	106161 J	2.M 15	SN	106251 J	1.G 15	UKC	1090 J	2.G 04	WA	108041 J	1.L 15	WA	108051	2.G 11	WB	114001 J	1.M 14	WE	108001 J	3.E 04
SH	105101 J	2.M 11	SH	106161 J	2.M 16	SR	106121 J	4.N 02	UKC	6683	1.M 06	WA	108041 J	1.L 16	WA	108051	1.M 09	WB	114001 J	1.M 15	WE	108001 J	2.M 08
SH	105101 J	1.J 17	SH	106161 J	1.M 09	SR	106161 J	5.D 02	UKC	6683 J	5.F 07	WA	108041 J	1.M 02	WA	108051	2.I 15	WC	104001 J	4.L 15	WE	108001 J	3.L 09
SH	105101 J	2.G 09	SH	106161 J	2.I 08	SR	106201 J	4.I 06	UKC	6683 J	3.E 08	WA	108041 J	4.N 15	WA	108051	2.I 16	WC	105001 J	4.N 03	WE	108001 J	3.M 03
SH	105101 J	4.D 17	SH	106161 J	2.I 09	SR	106201 J	4.I 08	UKC	6683 J	1.M 10	WA	108041 J	4.N 03	WA	108051	2.I 08	WC	105001 J	2.C 10	WE	110001 J	3.I 06
SH	105121	4.K 06	SH	106201 J	5.D 02	SS	104081 J	4.K 02	UKC	6684 J	5.F 07	WA	108041 J	5.D 02	WA	108051	2.I 09	WC	105001 J	2.D 02	WE	702101 J	1.I 13
SH	105121 J	1.L 17	SH	106201 J	1.E 05	SS	106121 J	1.G 06	UKC	8154 J	2.F 18	WA	108041 J	5.C 13	WA	108051	3.I 09	WC	105001 J	4.G 05	WE	702101 J	1.I 17
SH	105121 J	1.M 04	SH	106201 J	1.E 04	SS	106121 J	1.G 07	UKC	8154 J	2.G 02	WA	108041 J	2.M 05	WA	108051	3.I 10	WC	105001 J	4.H 06	WF	104001 J	4.K 02
SH	105121 J	1.K 10	SH	106201 J	1.E 06	SS	106121 J	1.G 08	ULC	3117 J	1.L 04	WA	108041 J	1.N 07	WA	108051 J	2.M 08	WC	105001 J	2.E 15	WF	105001 J	1.M 08
SH	105121 J	2.C 09	SH	106201 J	2.K 02	SS	106121 J	1.G 05	WA	104001 J	1.L 04	WA	108041 J	1.I 12	WA	108051 J	2.M 09	WC	105001 J	5.E 06	WF	105001 J	1.K 10
SH	105121 J	4.K 08	SH	106201 J	1.E 08	SS	106121 J	2.N 08	WA	104001 J	1.L 06	WA	108041 J	1.K 07	WA	108051 J	2.M 10	WC	105045 J	5.E 08	WF	105001 J	3.L 12
SH	105121 J	2.E 15	SH	106201 J	2.I 08	SS	106121 J	2.N 09	WA	104001 J	2.M 07	WA	108041 J	1.J 18	WA	108051 J	2.I 04	WC	108001 J	3.D 07	WF	105001 J	5.E 10
SH	105121 J	4.K 11	SH	106201 PJ	2.I 15	SS	108400 J	1.G 15	WA	104001 J	2.M 08	WA	108041 J	2.C 02	WA	108051 J	2.G 08	WC	108041	3.L 12	WF	105001 J	1.I 10
SH	105121 J	4.K 13	SH	106201 PJ	2.I 16	SS	110161 PJ	2.N 04	WA	104001 J	2.M 09	WA	108041 J	2.C 05	WA	108051 J	2.I 15	WC	108041 J	1.L 08	WF	108001 J	5.C 13
SH	105141 J	1.I 09	SH	106250 J	2.K 02	SS	110251 PJ	2.N 04	WA	104001 J	2.M 11	WA	108041 J	2.C 04	WA	108051 J	2.I 16	WC	108041 J	1.L 09	WF	108001 J	3.J 05
SH	105161 J	3.J 05	SH	106254 J	4.I 12	SS	110251 PJ	2.N 06	WA	104001 J	1.I 17	WA	108041 J	2.C 07	WA	108054 J	4.I 12	WC	108041 J	2.M 07	WF	108001 J	1.I 02
SH	105201 J	1.I 09	SH	108351 J	1.E 06	SX	110251 J	2.J 08	WA	104001 J	1.J 14	WA	108041 J	2.C 06	WA	110061 J	3.D 06	WC	108041 J	1.I 05	WF	108001 J	1.N 06
SH	106101 J	4.F 04	SH	108351 J	1.E 08	TBA		3.I 09	WA	104001 J	4.K 09	WA	108041 J	2.C 13	WA	110061 J	3.C 12	WC	108041 J	3.L 12	WF	108001 J	3.E 05
SH	106105 J	5.C 04	SH	108451 J	1.M 06	TD	108041 J	2.G 05	WA	104001 J	4.K 02	WA	108041 J	2.C 16	WA	110061 J	2.N 06	WC	108041 J	1.N 09	WF	110001 J	2.M 02
SH	106105 J	5.E 06	SH	108451 J	1.M 09	TD	108041 J	2.G 06	WA	104001 J	3.H 15	WA	108041 J	2.C 15	WA	110061 J	2.M 08	WC	108041 J	5.E 10	WF	110001 J	2.M 03
SH	106121 J	1.E 12	SH	110201 MJ	2.J 13	TE	108031 J	1.N 15	WA	104001 J	2.G 09	WA	108041 J	2.C 17	WA	110061 J	3.D 02	WC	108041 J	1.I 02	WF	110001 J	2.M 06
SH	106121 J	1.I 12	SH	110251 J	2.J 08	TE	108031 J	1.N 17	WA	104001 J	2.E 14	WA	108041 J	2.C 11	WA	110061 J	3.D 03	WC	108051 J	5.D 02	WF	110001 J	2.M 05
SH	106121 J	2.C 02	SH	110301 J	3.D 02	TE	108031 J	1.N 16	WA	104001 J	2.E 15	WA	108041 J	2.C 10	WA	110061 J	3.D 04	WC	108051 J	4.K 02	WF	110001 J	2.J 15
SH	106121 J	2.C 03	SH	110301 J	3.D 04	TE	108041 J	2.M 08	WA	104001 J	4.M 09	WA	108041 J	2.C 06	WA	110061 J	3.D 05	WC	108051 J	2.J 08	WF	110001 J	2.M 04
SH	106121 J	2.C 07	SH	112251	2.J 08	TE	108041 J	1.E 16	WA	104001 J	4.M 10	WA	108041 J	2.C 18	WA	110061 J	3.C 14	WC	108051 J	2.G 12	WF	110004 J	4.I 12
SH	106121 J	2.C 11	SH	112301 J	2.J 08	TE	108041 J	1.E 17	WA	104001 J	4.M 11	WA	108041 J	2.C 12	WA	110061 J	3.C 16	WC	108051 J	2.H 02	WF	110004 J	4.I 13
SH	106121 J	2.C 09	SH	112301 M	2.J 13	TE	108051 J	2.M 08	WA	104001 J	1.J 13	WA	108041 J	4.G 12	WA	110061 J	3.C 15	WC	108051 J	2.G 15	WF	112001 J	2.G 05
SH	106121 J	3.J 04	SH	212201 MJ	2.J 13	TE	108051 J	2.M 09	WA	104005 J	4.L 13	WA	108041 J	4.D 13	WA	110061 J	3.C 17	WC	108051 J	2.G 11	WF	112001 J	2.G 06
SH	106121 J	4.I 06	SH	212201 MJ	2.J 17	TE	108051 J	2.M 10	WA	104005 J	4.K 04	WA	108041 J	2.E 15	WA	112001 J	1.E 08	WC	110061 J	3.I 10	WF	600041 J	4.N 03
SH	106121 J	3.L 12	SH	212401 MJ	2.J 13	TE	108051 J	1.G 15	WA	104008 J	4.H 05	WA	108041 J	4.D 15	WA	112001 J	1.E 08	WC	702101 J	4.G 18	WF	600050 J	2.G 05
SH	106121 J	5.E 06	SH	505051 J	1.N 06	TE	108051 J	1.H 11	WA	105001 J	1.L 08	WA	108041 J	5.E 06	WA	112041 J	1.E 08	WC	702101 J	4.H 15	WF	600050 J	2.G 06
SH	106121 J	1.I 11	SH	506051 J	1.E 10	TE	108051 J	1.G 06	WA	105001 J	1.L 10	WA	108041 J	1.M 05	WA	112041 J	1.E 08	WC	702101 J	4.H 18	WF	704084	4.L 03
SH	106141 J	2.C 17	SH	605061 MJ	2.G 12	TE	108051 J	1.G 07	WA	105001 J	2.M 08	WA	108041 J	1.M 03	WA	112081 J	2.J 13	WC	702101 J	4.J 15	WJ	105001 J	1.M 08

WJ 105001 J 1.M 06
WJ 105001 J 1.L 17
WJ 105001 J 1.M 04
WJ 105001 J 3.J 05
WJ 105001 J 4.H 10

WJ 105001 J 4.H 11
WJ 105001 J 4.I 07
WJ 105001 J 4.F 03
WJ 105001 J 2.J 18
WJ 105001 J 2.I 06

WJ 105001 J 4.D 11
WJ 105001 J 1.N 03
WJ 105001 J 1.J 13
WJ 105004 J 4.J 06
WJ 106001 J 1.L 02

WJ 106001 J 5.D 02
WJ 106001 J 5.C 13
WJ 106001 J 5.C 04
WJ 106001 J 2.M 07
WJ 106001 J 1.N 06

WJ 106001 J 2.C 17
WJ 106001 J 2.D 02
WJ 106001 J 2.D 03
WJ 106001 J 4.L 13
WJ 106001 J 4.H 06

WJ 106001 J 3.E 04
WJ 106001 J 2.K 02
WJ 106001 J 2.I 05
WJ 106001 J 1.F 04
WJ 106041 J 1.L 06

WJ 106001 J 2.M 06
WJ 106001 J 2.M 09
WJ 106001 J 2.M 11
WJ 106001 J 1.E 05
WJ 106001 J 4.K 07

WJ 106001 J 2.G 03
WJ 106001 J 2.G 04
WJ 110001 J 3.D 02
WJ 110001 J 3.D 04
WJ 116001 J 2.J 15

WJ 600041 J 5.C 13
WJ 600041 J 1.N 02
WJ 600041 J 2.D 03
WK 608213 J 4.G 04
WK 610214 J 4.I 15

WL 104001 J 1.L 10
WL 104001 J 3.I 07
WL 105001 J 3.I 07
WL 105001 J 1.J 17
WL 105001 J 3.L 12

WL 105001 J 5.E 10
WL 105001 J 3.I 08
WL 106001 ..... 2.E 12
WL 106001 J 1.L 02
WL 106001 J 3.D 07

WL 106001 J 1.N 02
WL 106001 J 1.N 06
WL 106001 J 4.F 04
WL 106001 J 2.E 12
WL 106001 J 3.H 06

WL 106001 J 3.I 07
WL 106001 J 5.C 04
WL 106001 J 2.M 13
WL 106001 J 1.E 06
WL 106001 J 2.J 07

WL 106001 J 2.J 06
WL 106001 J 2.G 07
WL 106001 J 2.G 06
WL 106001 J 2.H 04
WL 106001 J 2.H 06

WL 106001 J 2.H 11
WL 106001 J 2.G 12
WL 106001 J 2.H 02
WL 106001 J 2.G 15
WL 106001 J 4.D 17

WL 106001 J 4.D 18
WL 106001 J 1.E 06
WL 106001 J 3.H 06
WL 106001 J 2.M 15
WL 106001 J 2.M 16

WL 106001 J 2.G 11
WL 106001 J 2.I 06
WL 106001 J 2.I 09
WL 106001 J 3.I 06
WL 106001 J 3.I 09

WL 106001 J 3.I 10
WL 110001 J 1.H 12
WL 110001 J 2.J 06
WL 600051 J 1.M 16
WL 600071 J 4.F 04

WM 106001 J 5.E 06
WM 106005 J 5.E 06
WM 600061 J 3.D 06
WM 600061 J 1.J 06
WM 600061 J 3.D 02

WM 600061 J 3.D 03
WM 600061 J 3.D 04
WM 600061 J 3.D 05
WM 600061 J 3.I 09
WM 600061 J 3.I 10

WW 106001 J 2.M 09
WW 106001 J 2.M 10
WW 106001 J 2.M 13
WW 106001 J 2.E 14
XR8 2604 ..... 5.E 02

XR8 6354 ..... 2.K 10
XR8 6354 ..... 2.K 13
XR8 6354 ..... 2.K 16
XR8 6354 ..... 2.K 17
XR8 6359 ..... 2.K 10

XR8 6359 ..... 2.K 13
XR8 6359 ..... 2.K 16
XR8 6359 ..... 2.K 17
XR8 6363 ..... 2.K 10
XR8 6363 ..... 2.K 13

XR8 6363 ..... 2.K 16
XR8 6363 ..... 2.K 17